



Sun StorageTek™ 5320 NAS Appliance and Gateway System Getting Started Guide

Installing and Configuring the System

Sun Microsystems, Inc.
www.sun.com

Part No. 819-6387-10
May 2006, Revision A

Submit comments about this document at: <http://www.sun.com/hwdocs/feedback>

Copyright 2006 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

Sun Microsystems, Inc. has intellectual property rights relating to technology that is described in this document. In particular, and without limitation, these intellectual property rights may include one or more of the U.S. patents listed at <http://www.sun.com/patents> and one or more additional patents or pending patent applications in the U.S. and in other countries.

This document and the product to which it pertains are distributed under licenses restricting their use, copying, distribution, and decompilation. No part of the product or of this document may be reproduced in any form by any means without prior written authorization of Sun and its licensors, if any.

Third-party software, including font technology, is copyrighted and licensed from Sun suppliers.

Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and in other countries, exclusively licensed through X/Open Company, Ltd.

Sun, Sun Microsystems, the Sun logo, Java, AnswerBook2, docs.sun.com, Sun StorageTek, and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and in other countries.

All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and in other countries. Products bearing SPARC trademarks are based upon an architecture developed by Sun Microsystems, Inc.

The OPEN LOOK and Sun™ Graphical User Interface was developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a non-exclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

U.S. Government Rights—Commercial use. Government users are subject to the Sun Microsystems, Inc. standard license agreement and applicable provisions of the FAR and its supplements.

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

Copyright 2006 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, Californie 95054, États-Unis. Tous droits réservés.

Sun Microsystems, Inc. possède les droits de propriété intellectuelle relatifs à la technologie décrite dans ce document. En particulier, et sans limitation, ces droits de propriété intellectuelle peuvent inclure un ou plusieurs des brevets américains listés sur le site <http://www.sun.com/patents>, un ou les plusieurs brevets supplémentaires ainsi que les demandes de brevet en attente aux États-Unis et dans d'autres pays.

Ce document et le produit auquel il se rapporte sont protégés par un copyright et distribués sous licences, celles-ci en restreignent l'utilisation, la copie, la distribution, et la décompilation. Aucune partie de ce produit ou document ne peut être reproduite sous aucune forme, par quelque moyen que ce soit, sans l'autorisation préalable et écrite de Sun et de ses bailleurs de licence, s'il y en a.

Tout logiciel tiers, sa technologie relative aux polices de caractères, comprise, est protégé par un copyright et licencié par des fournisseurs de Sun.

Des parties de ce produit peuvent dériver des systèmes Berkeley BSD licenciés par l'Université de Californie. UNIX est une marque déposée aux États-Unis et dans d'autres pays, licenciée exclusivement par X/Open Company, Ltd.

Sun, Sun Microsystems, le logo Sun, Java, AnswerBook2, docs.sun.com, Sun StorageTek, et Solaris sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc. aux États-Unis et dans d'autres pays.

Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux États-Unis et dans d'autres pays. Les produits portant les marques SPARC sont basés sur une architecture développée par Sun Microsystems, Inc.

L'interface utilisateur graphique OPEN LOOK et Sun™ a été développée par Sun Microsystems, Inc. pour ses utilisateurs et licenciés. Sun reconnaît les efforts de pionniers de Xerox dans la recherche et le développement du concept des interfaces utilisateur visuelles ou graphiques pour l'industrie informatique. Sun détient une licence non exclusive de Xerox sur l'interface utilisateur graphique Xerox, cette licence couvrant également les licenciés de Sun implémentant les interfaces utilisateur graphiques OPEN LOOK et se conforment en outre aux licences écrites de Sun.

LA DOCUMENTATION EST FOURNIE "EN L'ÉTAT" ET TOUTES AUTRES CONDITIONS, DÉCLARATIONS ET GARANTIES EXPRESSES OU TACITES SONT FORMELLEMENT EXCLUES DANS LA LIMITE DE LA LOI APPLICABLE, Y COMPRIS NOTAMMENT TOUTE GARANTIE IMPLICITE RELATIVE À LA QUALITÉ MARCHANDE, À L'APTITUDE À UNE UTILISATION PARTICULIÈRE OU À L'ABSENCE DE CONTREFAÇON.



Contents

Preface xvii

1. System Overview 1

System Features 1

Supported File Access Protocols 2

Network Security and Protocol Integration 2

Supported Clients 2

Network Connection 2

Automatic IP Address Assignment 3

RAID Controllers (Non-Gateway Systems) 3

SAN Storage (Gateway Systems) 3

Data Management 3

Setup and Configuration 3

Client Data Backup 4

Hardware Overview 4

Sun StorageTek 5320 NAS Appliance Server 4

Sun StorageTek 5320 NAS Cluster Appliance 5

Sun StorageTek 5320 NAS Gateway System 6

Sun StorageTek 5320 NAS Gateway Cluster System 6

Server Options for All Configurations 6

Back-End Storage	7
SAN Storage	8
Software Overview	9
Web Administrator	9
Command-Line Interface	10
Licensed Options	10

2. Installing Servers and Back-End Storage 11

Standard Cabinets, Racks, and Rail Kits	12
---	----

Rack Requirements	12
-------------------	----

Slide Rail Kit for Sun StorageTek 5320 NAS Appliance	13
--	----

Preparing for the Installation	13
--------------------------------	----

Before You Begin	13
------------------	----

Grounding Procedure	14
---------------------	----

▼ To Avoid Damage to Internal Components	14
--	----

▼ To Ground the Rack Installation	15
-----------------------------------	----

Main AC Power Disconnect	15
--------------------------	----

▼ To Prepare the Server Rackmount Kit	15
---------------------------------------	----

▼ To Prepare the Server	16
-------------------------	----

▼ To Prepare the CAM100 3RU Rackmount Kit	16
---	----

▼ To Prepare the Controller and Expansion Enclosures	17
--	----

▼ To Prepare the Cabinet	18
--------------------------	----

Installing in the Cabinet	18
---------------------------	----

▼ To Install the System With a Single Controller Enclosure	20
--	----

▼ To Install the System With Two Controller Enclosures	20
--	----

Attaching the CAM100 3RU Rails to a Cabinet	21
---	----

▼ To Attach the Rails to the Sun Rack 900/1000 Cabinet	22
--	----

Installing an Enclosure in a Cabinet	28
--------------------------------------	----

▼ To Install an Enclosure in a Cabinet	28
--	----

Installing a Server in a Cabinet 33

- ▼ To Install the Slide Rail Assemblies 34
- ▼ To Install the Cable Management Kit 41
- ▼ To Verify the Operation of the Slide Rails and the CMA 45

Connecting the Power Cables 48

Setting the Tray ID 49

Back-End Storage Cabling 51

3. Connecting the Sun StorageTek 5320 NAS Appliance 53

Before You Begin 54

Connecting the Sun StorageTek 5320 NAS Appliance to Back-End Storage 54

Connecting the Sun StorageTek 5320 NAS Appliance to Controller Enclosures 54

- ▼ To Connect One Controller Enclosure 55
- ▼ To Connect Two Controller Enclosures 57

Connecting Controller Enclosures to Expansion Enclosures 59

- ▼ To Cable a Controller Enclosure to One Expansion Enclosure 60
- ▼ To Cable a Controller Enclosure to Two Expansion Enclosures 61
- ▼ To Cable a Controller Enclosure to Three Expansion Enclosures 62
- ▼ To Cable a Controller Enclosure to Seven Expansion Enclosures 64

Connecting to the Network 65

- ▼ To Connect to Copper Fast Ethernet or Gigabit Ethernet Networks 65
- ▼ To Connect to Optional Optical Gigabit Ethernet Networks 66

Powering On the Sun StorageTek 5320 NAS Appliance, Controller Enclosures, and Expansion Enclosures 67

- ▼ To Power On the Sun StorageTek 5320 NAS Appliance System 68

Initial Sun StorageTek 5320 NAS Appliance Configuration 69

IP Address Configuration 70

- Automatic (DHCP) IP Address Configuration 70
- ▼ To Configure the IP Address Manually 70

Accessing the Web Administrator	71
▼ To Connect to the Web Administrator	71
4. Installing the Sun StorageTek 5320 NAS Cluster Appliance	75
Before You Begin	76
Connecting the Sun StorageTek 5320 NAS Cluster Appliance to Back-End Storage	76
Connecting the Sun StorageTek 5320 NAS Cluster Appliance to Controller Enclosures	76
▼ To Connect One Controller Enclosure	77
▼ To Connect Two Controller Enclosures	78
Connecting the Controller Enclosures to Expansion Enclosures	81
▼ To Cable a Controller Enclosure to One Expansion Enclosure	82
▼ To Cable a Controller Enclosure to Two Expansion Enclosures	83
▼ To Cable a Controller Enclosure to Three Expansion Enclosures	84
▼ To Cable a Controller Enclosure to Seven Expansion Enclosures	86
Connecting the Server Health-Monitoring and Network Cables	88
▼ To Connect the Health-Monitoring Cable	88
▼ To Connect to Optical Gigabit Ethernet Networks	88
▼ To Connect to Copper Fast Ethernet or Gigabit Ethernet Networks	89
Powering On the Sun StorageTek 5320 NAS Cluster Appliance, Controller Enclosures, and Expansion Enclosures	90
▼ To Power On the Sun StorageTek 5320 NAS Cluster Appliance System	91
Initial Sun StorageTek 5320 NAS Cluster Appliance Configuration	93
▼ To Set IP Addresses	93
▼ To Configure the System	94
▼ To Assign LUN Ownership	96
▼ To Assign LUN Paths	97
▼ To Configure the Partner	97

5. Installing the Sun StorageTek 5320 NAS Gateway System 99

Before You Begin 100

Installation and Configuration Task Overview 100

Storage Concepts 101

Connecting the Sun StorageTek 5320 NAS Gateway System to the Sun StorEdge 6130 Array 102

Connecting Directly to the Sun StorEdge 6130 Array 102

- ▼ To Connect a Single-Server Direct Attach to Sun StorEdge 6130 Array 102
- ▼ To Connect a Dual-Server Direct Attach to Sun StorEdge 6130 Array 104

Using Fabric Switches to Connect to the Sun StorEdge 6130 Array 106

- ▼ To Connect a Single-Server Fabric Attach to Sun StorEdge 6130 Array 106
- ▼ To Share All Sun StorEdge 6130 Array LUNs Between All Port Pairs 108
- ▼ To Connect a Dual-Server High-Availability Fabric Attach to Sun StorEdge 6130 Array 109

Connecting the Sun StorageTek 5320 NAS Gateway System to the Sun StorageTek FlexLine 200 and 300 Series 114

Connecting Directly to the FlexLine 200 and 300 Series 114

- ▼ To Connect a Single-Server Direct Attach to Sun StorageTek FlexLine 200 and 300 Series 114
- ▼ To Connect a Dual-Server Direct Attach to Sun StorageTek FlexLine 200 and 300 Series 116

Using Fabric Switches to Connect to the Sun StorageTek FlexLine 200 and 300 Series 117

- ▼ To Connect a Single-Server Fabric Attach to Sun StorageTek FlexLine 200 and 300 Series 118
- ▼ To Share All Sun StorageTek FlexLine LUNs Between All Port Pairs 120
- ▼ To Connect a Dual-Server High-Availability Fabric Attach to Sun StorageTek FlexLine 200 and 300 Series 122

Connecting the Sun StorageTek 5320 NAS Gateway System to the Sun StorEdge 6920 System 127

Connecting Directly to the Sun StorEdge 6920 System 127

- ▼ To Connect a Single-Server Direct Attach to Sun StorEdge 6920 System 127
- ▼ To Connect a Dual-Server Direct Attach to Sun StorEdge 6920 System 129

Using Fabric Switches to Connect to the Sun StorEdge 6920 System 132

- ▼ To Connect a Single-Server Fabric Attach to Sun StorEdge 6920 System 132
- ▼ To Share All Sun StorEdge 6920 System LUNs Between All Port Pairs 134
- ▼ To Connect Dual-Server High-Availability Fabric Attach to the Sun StorageTek 6920 System 136

Connecting the Sun StorageTek 5320 NAS Gateway System or NAS Gateway Cluster System to the Sun StorEdge 99xx System 143

Connecting Directly to the Sun StorEdge 99xx System 143

- ▼ To Connect a Single-Server Direct Attach to Sun StorEdge 99xx System 143
- ▼ To Connect a Dual-Server Direct Attach to Sun StorEdge 99xx System 145

Using Fabric Switches to Connect to the Sun StorEdge 99xx System 148

- ▼ To Connect a Single-Server Fabric Attach to Sun StorEdge 99xx System 148
- ▼ To Share All Sun StorEdge 99xx System LUNs Between All Port Pairs 150
- ▼ To Connect an Independent Dual-Server Fabric Attach to Sun StorEdge 99xx System 152
- ▼ To Connect a Dual-Server High-Availability Fabric Attach to Sun StorEdge 99xx System 153

Connecting to the Network 159

Connecting Single Servers 159

- ▼ To Connect to a 100BASE-T Fast Ethernet Network or to a 1000BASE-T Gigabit Network 159

- ▼ To Connect to an Optical Gigabit Ethernet Network 160
- Connecting Dual-Server HA Servers 160
 - ▼ To Connect the Health-Monitoring Cable 161
 - ▼ To Connect to a Fast Ethernet or Gigabit Ethernet Network 161
 - ▼ To Connect to an Optical Gigabit Ethernet Network 161
- Powering On the Sun StorageTek 5320 NAS Gateway System 161
- Initial Sun StorageTek 5320 NAS Gateway System Single-Server Configuration 163
 - ▼ To Set the IP Address 163
- Configuring the Single-Server System 164
 - ▼ To Set Up Basic Configuration 164
 - ▼ To Activate the Sun StorageTek NAS Gateway License 165
 - ▼ To Configure Storage on the Sun StorageTek 5320 NAS Gateway System Single Server 167
- Initial Sun StorageTek 5320 NAS Gateway Cluster System Configuration 167
 - ▼ To Set IP Addresses 168
- Basic Dual-Server System Configuration 169
 - ▼ To Set Up Basic Configuration 169
 - ▼ To Activate the Sun StorageTek NAS Gateway License 170
 - ▼ To Set Up Server H2 171
 - ▼ To Configure SAN Storage on the Sun StorageTek 5320 NAS Gateway Cluster System 171
 - ▼ To Configure Storage on the Sun StorageTek 5320 NAS Gateway Cluster System 172
 - ▼ To Configure Failover 172
 - ▼ To Assign LUNs to Server H2 173
 - ▼ To Configure LUN Paths 174
- SAN Storage Configuration 175
 - Sun StorEdge 6130 Array 175
 - ▼ To Upgrade the Sun StorEdge 6130 Array Management Software 176

- ▼ To Upgrade the Sun StorEdge 6130 Array Firmware 176
- Verifying the Array 177
 - ▼ To Automatically Verify the Array 177
 - ▼ To Manually Register the Array 177
 - ▼ To Configure Storage on the Sun StorEdge 6130 Array 178
- ▼ To Configure Storage on the Sun StorEdge 6920 System 178
- ▼ To Configure Storage on the Sun StorEdge 99xx System 179

A. Hardware Technical Specifications 181

B. Third-Party Licence Agreements 183

Glossary 199

Index 203

Figures

FIGURE 1-1	Sun StorageTek 5320 NAS Appliance Front View	4
FIGURE 1-2	Sun StorageTek 5320 NAS Appliance Back Panel With Single HBA Card	5
FIGURE 1-3	Sun StorageTek 5320 NAS Appliance Back Panel With Two HBA Cards	6
FIGURE 1-4	Sun StorEdge 5300 RAID EU Controller Enclosure Front, With Fibre Channel Disk Drives	7
FIGURE 1-5	Sun StorEdge 5300 RAID EU Controller Enclosure Back Panel	7
FIGURE 1-6	Sun StorEdge 5300 EU F Expansion Enclosure Front, With Fibre Channel Disk Drives	8
FIGURE 1-7	Sun StorEdge 5300 EU F Expansion Enclosure Back Panel	8
FIGURE 2-1	Rackmounting Order	19
FIGURE 2-2	Loosening the Rail Screws to Adjust the Rail Length	22
FIGURE 2-3	Positioning the Rack Alignment Template	23
FIGURE 2-4	Securing the Left Rail to the Front of the Cabinet	24
FIGURE 2-5	Adjusting the Length of the Left Rail at the Back of the Cabinet	25
FIGURE 2-6	Securing the Right Rail to the Back of the Cabinet	26
FIGURE 2-7	Tightening the Adjusting Screws	27
FIGURE 2-8	Removing the End Caps on the Enclosure	28
FIGURE 2-9	Positioning the Enclosure in the Cabinet	29
FIGURE 2-10	Sliding the Enclosure Into the Cabinet	30
FIGURE 2-11	Securing the Enclosure to the Front of a Sun StorEdge Expansion Cabinet	31
FIGURE 2-12	Securing the Enclosure to the Front of a Sun Rack 900/1000 Cabinet	32
FIGURE 2-13	Securing the Enclosure to the Back of the Cabinet	33

FIGURE 2-14	Unlocking the Slide Rail Assembly	34
FIGURE 2-15	Location of the Mounting Bracket Release Button	35
FIGURE 2-16	Unlocking the Slide Rail Middle Section	36
FIGURE 2-17	Attaching a Mounting Bracket to the Chassis	37
FIGURE 2-18	Mounting a Slide Rail	38
FIGURE 2-19	Using the Slide Rail Spacing Tool to Adjust the Distance Between the Slide Rails	39
FIGURE 2-20	Mounting the Chassis on the Slide Rails	41
FIGURE 2-21	Inserting the CMA Rail Extension Into the Back of the Left Slide Rail	42
FIGURE 2-22	Mounting the Inner CMA Connector	43
FIGURE 2-23	Attaching the Outer CMA Connector	44
FIGURE 2-24	Mounting the Left Side of the Slide Rail	45
FIGURE 2-25	Unlocking the Slide Rail Assembly	46
FIGURE 2-26	Unlocking the Slide Rail Lever Stops	47
FIGURE 2-27	Slide Rail Release Button	48
FIGURE 2-28	Tray ID Switch	50
FIGURE 3-1	Sun StorageTek 5320 NAS Appliance HBA Cards and Controller Enclosure Ports	55
FIGURE 3-2	Connecting the Sun StorageTek 5320 NAS Appliance to the Controller Enclosure	56
FIGURE 3-3	Connecting Two HBA Cards to the Controller Enclosure	57
FIGURE 3-4	Connecting the Sun StorageTek 5320 NAS Appliance to Two Controller Enclosures	58
FIGURE 3-5	Controller Enclosure and Expansion Enclosure Ports	59
FIGURE 3-6	Controller Enclosure and One Expansion Enclosure Cable Interconnection	60
FIGURE 3-7	Controller Enclosure and Two Expansion Enclosures Cable Interconnection	61
FIGURE 3-8	Controller Enclosure and Three Expansion Enclosures Cable Interconnection	62
FIGURE 3-9	Controller Enclosure and Seven Expansion Enclosures Cable Interconnection	64
FIGURE 3-10	Connecting to a Fast Ethernet or Gigabit Ethernet Network	66
FIGURE 3-11	Connecting to an Optical Gigabit Network	66
FIGURE 3-12	Power Button and Front Panel Detail	69
FIGURE 4-1	Sun StorageTek 5320 NAS Cluster Appliance HBA Cards and Controller Enclosure Ports	77
FIGURE 4-2	Connecting Pairs of HBA Cards to One Controller Enclosure	78

FIGURE 4-3	Connecting the Sun StorageTek 5320 NAS Cluster Appliance to Two Controller Enclosures	80
FIGURE 4-4	Controller Enclosure and Expansion Enclosure Ports	81
FIGURE 4-5	Controller Enclosure and One Expansion Enclosure Cable Interconnection	83
FIGURE 4-6	Controller Enclosure and Two Expansion Enclosures Cable Interconnection	84
FIGURE 4-7	Controller Enclosure and Three Expansion Enclosures Cable Interconnection	85
FIGURE 4-8	Controller Enclosure and Seven Expansion Enclosures Cable Interconnection	86
FIGURE 4-9	Connecting to an Optical Gigabit Ethernet Network	88
FIGURE 4-10	Power Button and Front Panel Detail	92
FIGURE 5-1	Connecting Two HBA Ports to the Sun StorEdge 6130 Array	103
FIGURE 5-2	Connecting All HBA Ports to the Sun StorEdge 6130 Array	104
FIGURE 5-3	Connecting Two HBA Ports per HA Server to the Sun StorEdge 6130 Array	105
FIGURE 5-4	Connecting Two HBA Ports Using Fabric Switches to the Sun StorEdge 6130 Array	107
FIGURE 5-5	Connecting All HBA Ports Through Fabric Switches to the Sun StorEdge 6130 Array	108
FIGURE 5-6	Connecting All HBA Ports Through Two Fabric Switches to the Sun StorEdge 6130 Array	109
FIGURE 5-7	Connecting Two HBA Ports per HA Server Through Fabric Switches to the Sun StorEdge 6130 Array	111
FIGURE 5-8	Connecting Two HBA Ports per HA Server Through Fabric Switches to the Sun StorEdge 6130 Array With Additional Switch Connections	112
FIGURE 5-9	Connecting All HBA Ports per HA Server Through Two Fabric Switch Zones to the Sun StorEdge 6130 Array	113
FIGURE 5-10	Connecting Two HBA Ports to the Sun StorageTek FlexLine Array	115
FIGURE 5-11	Connecting Two HBA Ports to the Sun StorageTek FlexLine Array	116
FIGURE 5-12	Connecting Two HBA Ports per HA Server to the Sun StorageTek FlexLine Array	117
FIGURE 5-13	Connecting Two HBA Ports Using Fabric Switches to the Sun StorageTek FlexLine Array	119
FIGURE 5-14	Connecting All HBA Ports Through Fabric Switches to the Sun StorageTek FlexLine Array	120
FIGURE 5-15	Connecting All HBA Ports Through Two Fabric Switches to the Sun StorageTek FlexLine Array	122
FIGURE 5-16	Connecting Two HBA Ports per HA Server Through Fabric Switches to the Sun StorageTek FlexLine Array	124

- [FIGURE 5-17](#) Connecting Two HBA Ports per HA Server Through Fabric Switches to the Sun StorageTek FlexLine With Additional Switch Connections 125
- [FIGURE 5-18](#) Connecting All HBA Ports per HA Server Through Two Fabric Switch Zones to the Sun StorageTek FlexLine Array 126
- [FIGURE 5-19](#) Connecting Two HBA Ports to the Sun StorEdge 6920 System 128
- [FIGURE 5-20](#) Connecting All HBA Ports to the Sun StorEdge 6920 System 129
- [FIGURE 5-21](#) Connecting Two HBA Ports per HA Server to the Sun StorEdge 6920 System 130
- [FIGURE 5-22](#) Connecting All HBA Ports per HA Server to the Sun StorEdge 6920 System 131
- [FIGURE 5-23](#) Connecting Two HBA Ports Using Fabric Switches to the Sun StorEdge 6920 System 133
- [FIGURE 5-24](#) Connecting All HBA Ports Through Fabric Switches to the Sun StorEdge 6920 System 134
- [FIGURE 5-25](#) Connecting All HBA Ports Through Two Fabric Switches to the Sun StorEdge 6920 System 136
- [FIGURE 5-26](#) Connecting Two HBA Ports per HA Server Through Fabric Switches to the Sun StorEdge 6920 System 138
- [FIGURE 5-27](#) Connecting Two HBA Ports per HA Server Through Fabric Switches to the Sun StorEdge 6920 System With Additional Switch Connections 140
- [FIGURE 5-28](#) Connecting All HBA Ports per HA Server Through Two Fabric Switch Zones to the Sun StorEdge 6920 System 142
- [FIGURE 5-29](#) Connecting Two HBA Ports to the Sun StorEdge 99xx System 144
- [FIGURE 5-30](#) Connecting All HBA Ports to the Sun StorEdge 99xx System 145
- [FIGURE 5-31](#) Connecting Two HBA Ports per HA Server to the Sun StorEdge 99xx System 146
- [FIGURE 5-32](#) Connecting All HBA Ports per HA Server to the Sun StorEdge 99xx System 147
- [FIGURE 5-33](#) Connecting Two HBA Ports Through Fabric Switches to the Sun StorEdge 99xx System 149
- [FIGURE 5-34](#) Connecting All HBA Ports Through Fabric Switches to the Sun StorEdge 99xx System 150
- [FIGURE 5-35](#) Connecting All HBA Ports Through Two Fabric Switches to the Sun StorEdge 99xx System 151
- [FIGURE 5-36](#) Connecting Two HBA Ports per Independent Server Through Fabric Switches to the Sun StorEdge 99xx System 153
- [FIGURE 5-37](#) Connecting Two HBA Ports per HA Server Through Fabric Switches to the Sun StorEdge 99xx System 155
- [FIGURE 5-38](#) Connecting Two HBA Ports per HA Server Through Fabric Switches to the Sun StorEdge 99xx System With Additional Switch Connections 156
- [FIGURE 5-39](#) Connecting All HBA Ports per HA Server Through Two Fabric Switches to the Sun StorEdge 99xx System 158

FIGURE 5-40	Connecting to a Fast Ethernet or a Gigabit Ethernet Network	159
FIGURE 5-41	Connecting to an Optical Gigabit Ethernet Network	160
FIGURE 5-42	Dual Server HA NIC Ports	161
FIGURE 5-43	Power Button and Front Panel Detail	162

Preface

The *Sun StorageTek 5320 NAS Appliance and Gateway System Getting Started Guide* is a combined installation, configuration, and getting started guide for the Sun StorageTek™ 5320 NAS Appliance, the Sun StorageTek 5320 NAS Cluster Appliance, the Sun StorageTek 5320 NAS Gateway System, and the Sun StorageTek 5320 NAS Gateway Cluster System. This guide describes how to install rackmounting rails, servers, and back-end storage; how to connect servers and storage; and how to configure the system.

Before You Read This Document

Before you begin to install the system, you must have already prepared the site as described in these books:

- *Sun StorageTek 5320 NAS Appliance Regulatory and Safety Compliance Manual*
- *Sun StorEdge 5300 RAID Expansion Unit and Sun StorEdge 5300 Expansion Unit Safety and Compliance Guide* (if using back-end storage arrays)
- *Sun Rack Installation Guide*

How This Document Is Organized

This guide contains instructions for installing and configuring all variations of the Sun StorageTek 5320 NAS Appliance, the Sun StorageTek 5320 NAS Cluster Appliance, the Sun StorageTek 5320 NAS Gateway System, and the Sun StorageTek 5320 NAS Gateway Cluster System. You need to read only the chapters pertinent to your installation.

[Chapter 1](#) provides an overview of system features.

[Chapter 2](#) describes rai mounting, and is applicable to server and back-end storage installation.

[Chapter 3](#) describes how to set up the Sun StorageTek 5320 NAS Appliance with back-end storage (Sun StorageTek 5300 RAID Controller Enclosure and optional Sun StorEdge 5300 Expansion Enclosures) and applies only to that setup.

[Chapter 4](#) describes how to set up the Sun StorageTek 5320 NAS Cluster Appliance with back-end storage (Sun StorageTek 5300 RAID Controller Enclosure and optional Sun StorEdge 5300 Expansion Enclosures) and applies only to that setup.

[Chapter 5](#) describes how to set up the Sun StorageTek 5320 NAS Gateway System or the Sun StorageTek 5320 NAS Gateway Cluster System with SAN storage and applies only to those setups.

[Appendix A](#) is a brief technical specification of the Sun StorageTek 5320 NAS Appliance system hardware.

Glossary is a list of words and phrases and their definitions.

Index is an alphabetical list of topics.

Typographic Conventions

Typeface*	Meaning	Examples
AaBbCc123	The names of commands, files, and directories; on-screen computer output	Edit your <code>.login</code> file. Use <code>ls -a</code> to list all files. % You have mail.
AaBbCc123	What you type, when contrasted with on-screen computer output	% su Password:
<i>AaBbCc123</i>	Book titles, new words or terms, words to be emphasized. Replace command-line variables with real names or values.	Read Chapter 6 in the <i>User's Guide</i> . These are called <i>class</i> options. You <i>must</i> be superuser to do this. To delete a file, type <code>rm filename</code> .

* The settings on your browser might differ from these settings.

Related Documentation

The documents listed as online are available at
http://www.sun.com/hwdocs/Network_Storage_Solutions/nas.

Application	Title	Part Number	Format	Location
Installation	<i>Sun StorageTek 5000 Family NAS Software Release Notes</i>	819-6402- <i>nn</i>	PDF	Online
NAS Appliance installation (non-Gateway)	<i>Sun StorageTek 5320 NAS Appliance Setup</i>	819-6229- <i>nn</i>	Printed PDF	Shipping kit Online
Gateway	<i>Sun StorageTek 5320 NAS Gateway System Setup</i>	819-4286- <i>nn</i>	Printed PDF	Shipping kit Online
GUI usage	<i>Sun StorageTek 5320 NAS Appliance and Gateway System Administration Guide</i>	819-6388- <i>nn</i>	PDF	Online
Safety	<i>Sun StorageTek 5320 NAS Server Regulatory and Safety Compliance Manual</i>	819-4281- <i>nn</i>	PDF	Online
Safety	<i>Sun StorageTek 5320 NAS Array Regulatory and Safety Compliance Manual</i>	819-0882- <i>nn</i>	PDF	Online

Documentation, Support, and Training

Sun Function	URL
Documentation	http://www.sun.com/documentation/
Support	http://www.sun.com/support/
Training	http://www.sun.com/training/

Third-Party Web Sites

Sun is not responsible for the availability of third-party web sites mentioned in this document. Sun does not endorse and is not responsible or liable for any content, advertising, products, or other materials that are available on or through such sites or resources. Sun will not be responsible or liable for any actual or alleged damage or loss caused by or in connection with the use of or reliance on any such content, goods, or services that are available on or through such sites or resources.

Sun Welcomes Your Comments

Sun is interested in improving its documentation and welcomes your comments and suggestions. You can submit your comments by going to:

<http://www.sun.com/hwdocs/feedback>

Please include the title and part number of your document with your feedback:

Sun StorageTek 5320 NAS Appliance and Gateway System Getting Started Guide, part number 819-6387-10

System Overview

This chapter describes the components and terminology of the Sun StorageTek 5320 NAS Appliance, the Sun StorageTek 5320 NAS Cluster Appliance, the Sun StorageTek 5320 NAS Gateway System, and the Sun StorageTek 5320 NAS Gateway Cluster System. It includes the following sections:

- [“System Features” on page 1](#)
- [“Hardware Overview” on page 4](#)
- [“Software Overview” on page 9](#)

System Features

The Sun StorageTek 5320 NAS Appliance is the Sun Microsystems modular, scalable, network-attached storage (NAS) solution and is available in several configurations:

- Sun StorageTek 5320 NAS Appliance single server, with controller enclosure and optional expansion enclosures available for back-end storage
- Sun StorageTek 5320 NAS Cluster Appliance with two NAS servers for high availability and failover protection, with controller enclosure and optional expansion enclosures available for back-end storage
- Sun StorageTek 5320 NAS Gateway System single server that shares storage with other servers in a storage area network (SAN)
- Sun StorageTek 5320 NAS Gateway Cluster System with two servers in a cluster configuration (for high availability and failover protection) that share storage with other servers in a SAN

Note – For the most current support information, contact your Sun sales representative.

Supported File Access Protocols

- Microsoft networks (CIFS/SMB)
- UNIX® (NFS V2 and V3)
- File Transfer Protocol (FTP)

Network Security and Protocol Integration

- Network Logon (Netlogon) client
- Windows Domain support
- Multiple Master Domain (MMD) support
- CIFS Security Descriptors (SD) on files and directories
- Discretionary Access Control Lists (DACL) on files and directories
- NIS
- NIS+
- Unicode
- Windows Active Directory Service (ADS) support
- Windows Dynamic DNS support
- Windows-compatible Kerberos (v5) security
- Windows-compatible Lightweight Directory Access Protocol (LDAP)
- LDAP authentication for NFS
- Network Time Protocol (NTP)
- syslogd Remote Logging
- Simple Network Management Protocol (SNMP)

Supported Clients

A client is any computer on the network that requests file services from the Sun StorageTek 5320 NAS Appliance. In general, if a client implementation follows the NFS version 2 or 3 protocol or the CIFS specifications, it is supported with the Sun StorageTek 5320 NAS Appliance, the Sun StorageTek 5320 NAS Cluster Appliance, the Sun StorageTek 5320 NAS Gateway System, and the Sun StorageTek 5320 NAS Gateway Cluster System.

Network Connection

- Autosensing 10/100/1000BASE-TX RJ-45 network connectors
- Optional dual port optical Gigabit Ethernet network interface cards (NICs)
- Optional dual port copper 10/100/1000 Gigabit Ethernet NIC cards

Automatic IP Address Assignment

- Supports Dynamic Host Configuration Protocol (DHCP) and Address Resolution Protocol (ARP) for automatic assignment of IP address

RAID Controllers (Non-Gateway Systems)

- Controller enclosure containing two controllers configured for Fibre Channel (FC) or for Serial ATA (SATA) disk drives

SAN Storage (Gateway Systems)

- Direct attachment or fabric connection to the Sun StorEdge 6130 array, Sun StorageTek FlexLine 280 and 380 systems, Sun StorEdge 6920 system, or Sun StorEdge 9970/9980/9985/9990 systems

Note – Refer to the Sun StorageTek 5320 NAS Gateway System web page for the most current SAN storage information.

Data Management

- Sun StorageTek File Checkpoint facility enables users to recover accidentally damaged or deleted data with a simple file copy operation
- Directory tree quotas
- User and group quotas

Setup and Configuration

- Web-based user interface for system configuration and administration
- Command-line interface (refer to the *Sun StorageTek 5320 NAS Appliance and Gateway System Administration Guide*)

Client Data Backup

- Network Data Management Protocol (NDMP), V2 minimum
- Enterprise Backup Software, version 7.2 minimum
- Veritas NetBackup 5.x minimum
- Compatible with BakBone NetVault 7 minimum, supported by BakBone

Note – Refer to the Sun StorageTek 5320 NAS Appliance product web page for the most current backup information.

Hardware Overview

The following system configurations are available:

- Sun StorageTek 5320 NAS Appliance with back-end storage
- Sun StorageTek 5320 NAS Cluster Appliance with back-end storage
- Sun StorageTek 5320 NAS Gateway System (single server) with SAN storage
- Sun StorageTek 5320 NAS Gateway Cluster System high-availability dual server in a cluster configuration with SAN storage

The sections that follow describe each of the system components.

Sun StorageTek 5320 NAS Appliance Server

The Sun StorageTek 5320 NAS Appliance server is the basic server unit for all system configurations. [FIGURE 1-1](#) shows the front of the server.

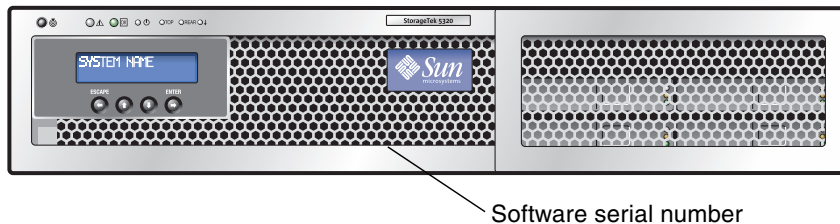


FIGURE 1-1 Sun StorageTek 5320 NAS Appliance Front View

Note – The software serial number, located on a printed label at the front of the server, identifies a matched pair (“-H1” or “-H2”) of Sun StorageTek 5320 NAS single head and cluster appliance servers.

In the Sun StorageTek 5320 NAS Appliance configuration, the server can contain one or two dual port FC host bus adapter (HBA) cards in PCI slot 1 (standard) and PCI slot 0 and other options (see [“Server Options for All Configurations”](#) on page 6). [FIGURE 1-2](#) shows the back of the server.

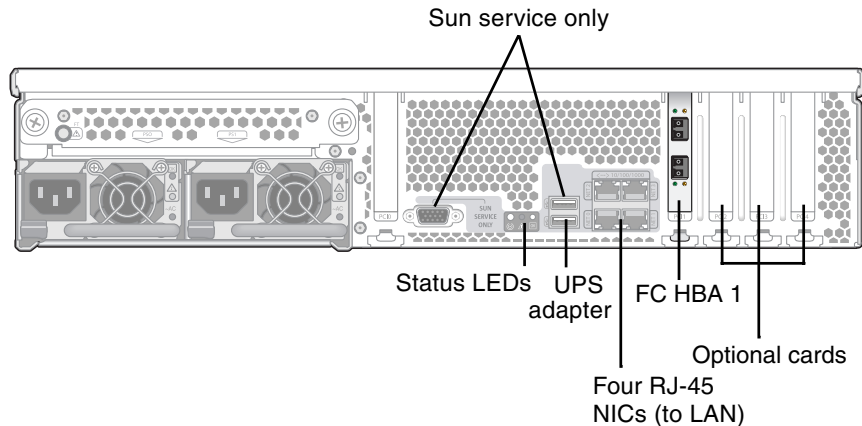


FIGURE 1-2 Sun StorageTek 5320 NAS Appliance Back Panel With Single HBA Card

Sun StorageTek 5320 NAS Cluster Appliance

In the Sun StorageTek 5320 NAS Cluster Appliance configuration, two high-availability (HA) servers are sold as a matched pair and are identified as server “-H1” and server “-H2” in their software serial numbers. Each server contains two dual port FC HBA cards and can contain other optional cards (see [“Server Options for All Configurations”](#) on page 6). [FIGURE 1-3](#) shows the back of the server with two HBA cards.

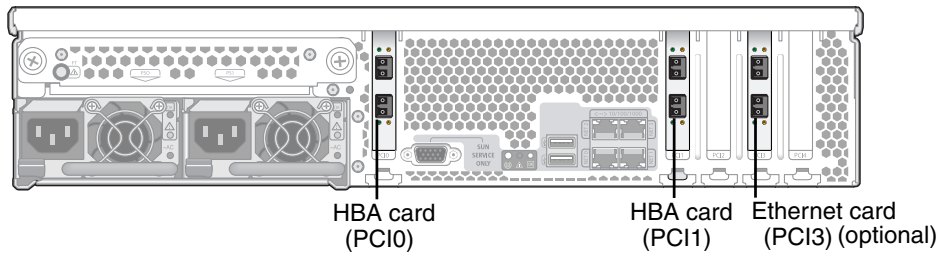


FIGURE 1-3 Sun StorageTek 5320 NAS Appliance Back Panel With Two HBA Cards

Sun StorageTek 5320 NAS Gateway System

In the Sun StorageTek 5320 NAS Gateway System single-server configuration, the server contains two dual port HBA cards and can contain other optional cards (see [“Server Options for All Configurations” on page 6](#)).

Sun StorageTek 5320 NAS Gateway Cluster System

In the Sun StorageTek 5320 NAS Gateway Cluster System configuration, the servers are sold as a matched pair and are identified as server “-H1” and server “-H2.” Each server contains two dual port FC HBA cards and can contain other optional cards (see [“Server Options for All Configurations” on page 6](#)).

Server Options for All Configurations

Other options for all server configurations include the following:

- Up to two optional dual port copper 10/100/1000 Gigabit Ethernet cards (PCI slots 3 and 4)
- Up to two optional dual port optical Gigabit Ethernet cards (PCI slots 3 and 4)
- A SCSI HBA card for tape backup (PCI slot 2)

Back-End Storage

The Sun StorEdge 5300 RAID EU Controller Enclosure provides direct-attached back-end storage for the Sun StorageTek 5320 NAS Appliance or Sun StorageTek 5320 NAS Cluster Appliance. Systems can be set up with one or two controller enclosures using all Fibre Channel disk drives or all SATA disk drives in one enclosure.



FIGURE 1-4 Sun StorEdge 5300 RAID EU Controller Enclosure Front, With Fibre Channel Disk Drives

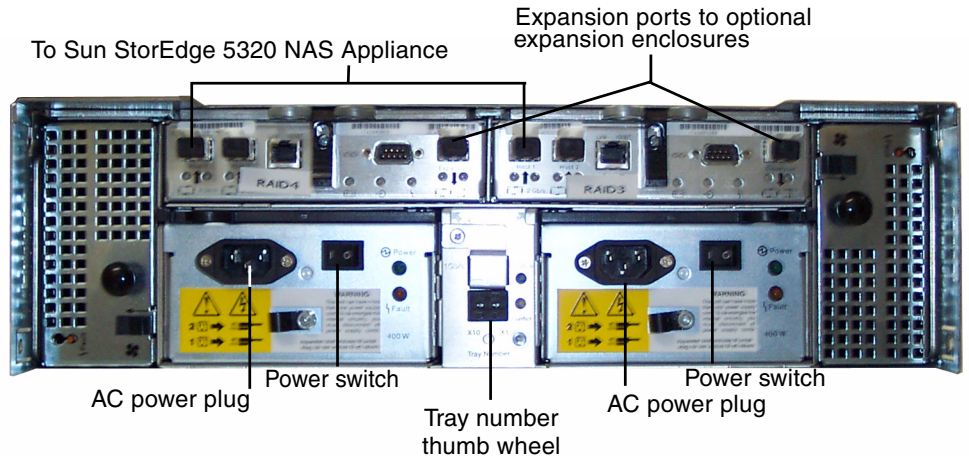


FIGURE 1-5 Sun StorEdge 5300 RAID EU Controller Enclosure Back Panel

There are two kinds of Sun StorEdge 5300 EU Expansion Enclosures that can be used with the controller enclosures: Sun StorEdge 5300 EU F (Fibre Channel disk drives only) and Sun StorEdge 5300 EU S (SATA disk drives only).



FIGURE 1-6 Sun StorEdge 5300 EU F Expansion Enclosure Front, With Fibre Channel Disk Drives

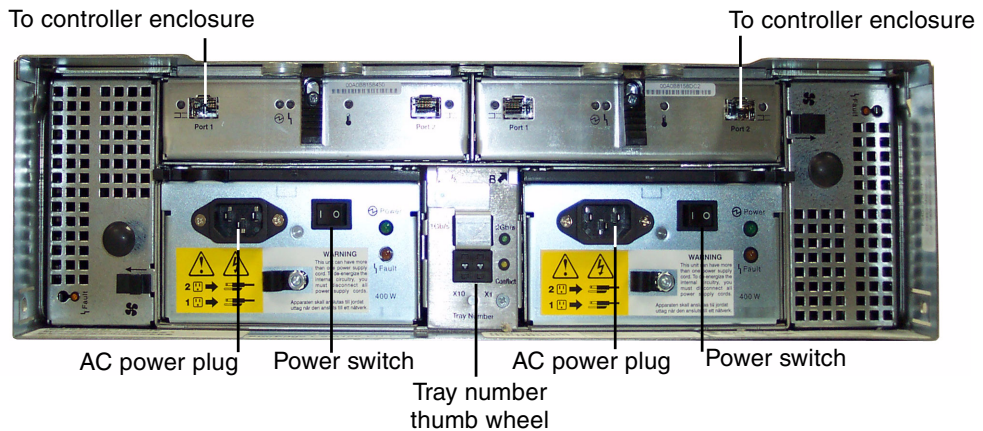


FIGURE 1-7 Sun StorEdge 5300 EU F Expansion Enclosure Back Panel

SAN Storage

The Sun StorageTek 5320 NAS Gateway System can connect directly or through fabric switches to the following types of SAN storage:

- Sun StorEdge 6130 array
- Sun StorEdge Flexline 280 and 380 storage systems
- Sun StorEdge 6920 system
- Sun StorEdge 9970/9980/9985/9990 systems

Note – Refer to the Sun StorageTek 5320 NAS Gateway System web page for the most current SAN storage information.

Software Overview

There are three major software components to consider:

- [Web Administrator](#)
- [Command-Line Interface](#)
- [Licensed Options](#)

The software is described in detail in the *Sun StorageTek 5320 NAS Appliance and Gateway System Administration Guide*.

Web Administrator

The Sun StorageTek 5320 NAS Appliance ships with the Web Administrator software installed. Other than a standard web browser, you do not need to install any software to manage your system.

The Web Administrator graphical user interface (GUI) is easy to use and lets you configure system parameters through a series of menus and screen panels. These settings are discussed in the *Sun StorageTek 5320 NAS Appliance and Gateway System Administration Guide*.

To access the Web Administrator management interface, you must be running Windows 98/NT/2000/XP/2003, Sun Solaris™ Operating System (Solaris OS) 5.7 (minimum version), or Red Hat Linux software.

Windows users require one of these browsers:

- Internet Explorer 5.5 (minimum version) on systems using Windows 98/NT/2000/XP/2003
- Netscape™ software 4.77 (minimum version) on systems using Windows 98/NT/2000/XP/2003 and Solaris OS. *Netscape 6.0 and 6.01 are not supported.*

Solaris OS and Red Hat Linux users require one of the following browsers:

- Netscape™ software 4.77 (minimum version) on systems using Windows 98/NT/2000/XP/2003 and Solaris OS. *Netscape 6.0 and 6.01 are not supported.*
- Mozilla™ browser.

- Java™ platform-enabled browser with Java Plug-in 1.4 (minimum version).

Note – To download the latest Java Plug-in, go to <http://java.com>.

Command-Line Interface

An alternative to the Web Administrator is the command-line interface (CLI). You can use a number of protocols such as Telnet, SSH, or RLogin to connect to the CLI as long as the application you use has an ANSI-compatible terminal emulator. The CLI is described in Appendix A in the *Sun StorageTek 5320 NAS Appliance and Gateway System Administration Guide*.

Licensed Options

There are several licensed options you can purchase for the system. The following options are available:

- Sun StorageTek File Replicator, which enables you to duplicate data from one volume onto a mirrored volume on a different Sun StorageTek 5320 NAS Appliance, Sun StorageTek 5320 NAS Cluster Appliance, Sun StorageTek 5320 NAS Gateway System, or Sun StorageTek 5320 NAS Gateway Cluster System
- Sun StorageTek Compliance Archiving Software, which allows you to enable volumes to follow advisory or mandatory enforcement of compliance archiving guidelines for data retention and protection

Note – Only advisory enforcement compliance archiving is supported on the Sun StorageTek 5320 NAS Gateway System.

- Sun StorageTek NAS Gateway System, which enables you to use your system as a gateway connection to SAN storage

The options and how to activate them are described in Chapter 9 in the *Sun StorageTek 5320 NAS Appliance and Gateway System Administration Guide*.

Installing Servers and Back-End Storage

Use the procedures in this chapter to install Sun StorageTek 5320 NAS Appliance servers and back-end storage.

Note – This chapter generically describes how to install a server, which applies to the Sun StorageTek 5320 NAS Appliance, the Sun StorageTek 5320 NAS Cluster Appliance, the Sun StorageTek 5320 NAS Gateway System, and the Sun StorageTek 5320 NAS Gateway Cluster System. Back-end storage installation is for each Sun StorageTek 5320 RAID Controller Unit and each Sun StorEdge 5300 Expansion Enclosure (EU) as used with the Sun StorageTek 5320 NAS Appliance and Sun StorageTek 5320 NAS Cluster Appliance.

This chapter describes the process of installing Sun StorageTek 5320 NAS Appliance servers, controller enclosures, and expansion enclosures. It contains the following sections:

- [“Standard Cabinets, Racks, and Rail Kits” on page 12](#)
- [“Preparing for the Installation” on page 13](#)
- [“Installing in the Cabinet” on page 18](#)
- [“Attaching the CAM100 3RU Rails to a Cabinet” on page 21](#)
- [“Installing an Enclosure in a Cabinet” on page 28](#)
- [“Connecting the Power Cables” on page 48](#)
- [“Setting the Tray ID” on page 49](#)
- [“Back-End Storage Cabling” on page 51](#)

The installation procedures in this chapter require the following items:

- No. 2 Phillips screwdriver
- No. 3 Phillips screwdriver
- Antistatic protection



Caution – Electrostatic discharge can damage sensitive components. Touching the array or its components without using a proper ground might damage the equipment. To avoid damage, use proper antistatic protection before handling any components.

Standard Cabinets, Racks, and Rail Kits

Although the system is installed in a single cabinet or rack, the server and the back-end storage units require different rail kits.

Rack Requirements

Rack requirements to support installation are:

- Rack horizontal opening and unit vertical pitch conforming to ANSI/EIA 310-D-1992 or IEC 60927
- Four-post structure (mounting at both front and back)
- Distance between front and back mounting planes between 610 mm and 915 mm (24 to 36 inches)
- Clearance depth (to front cabinet door) in front of front rackmounting plane at least 25.4 mm (1 inch)
- Clearance depth (to back cabinet door) behind front rackmounting plane at least 800 mm (31.5 inches), or 700 mm (27.5 inches) without cable management arm
- Clearance width (between structural supports, cable troughs, and the like) between front and back mounting planes at least 456 mm (18 inches)

Note – Not all third-party racks meet these parameters and are compatible with these slide rail kits. Also, some third-party rack vendors do not support a completely filled rack with this type of server, due to the amount of power required.

Server rack density varies widely based on systems installed, power distribution installation (in-cabinet, external), power source (single-phase, three-phase), and whether redundant power is required.

For power specifications, refer to [Appendix A](#).

Slide Rail Kit for Sun StorageTek 5320 NAS Appliance

Field installation of the Sun StorageTek 5320 NAS Appliance in the Sun Fire™ Hardware Expansion Cabinet and third-party ANSI/EIA 310-D-1992 or IEC 60927 compliant cabinets is supported with the slide rail kit (370-7669-02) and cable management arm (370-7668-02).

The slide rail kit is a 4-point mounted slide rail kit and is designed to enable the Sun StorageTek 5320 NAS Appliance to be racked in the Sun™ Rack 900, the Sun Rack 1000, and third-party ANSI/EIA 310-D-1992 or IEC 60927 compliant racks. No other kits are available to allow 2-point, front-mount, or mid-mount configuration.

The slide kit includes hardware that enables mounting to any of the following types of rack rails:

- 6 mm threaded holes
- No. 10-32 threaded holes
- No. 10 clearance holes
- Square unthreaded holes per EIA and IEC standards listed above

Preparing for the Installation

Use the following procedures to prepare for installation:

- [“Before You Begin” on page 13](#)
- [“Grounding Procedure” on page 14](#)
- [“To Prepare the Server Rackmount Kit” on page 15](#)
- [“To Prepare the Server” on page 16](#)
- [“To Prepare the CAM100 3RU Rackmount Kit” on page 16](#)
- [“To Prepare the Controller and Expansion Enclosures” on page 17](#)
- [“To Prepare the Cabinet” on page 18](#)

Before You Begin

Before you begin rackmounting, do the following:

- Check that the maximum ambient operating temperature in the rack does not exceed 95° F (35° C).

- Pick a location that allows unrestricted air flow for the cooling fans.
- Make sure that mounting the units into the rack will not tip over the rack, even when the units are fully extended from the rack.
- Install the components so that the rack is stable. Begin loading from the bottom of the rack to the top.



Caution – Uneven loading of the rack can cause dangerous instability.

- Make sure the rack cabinet has two power sources connected to two separate power circuits.
- Make sure the power outlets are close enough to the units for the power cords to reach the cabinet properly and supply power to the units.
- Make sure the power cables are properly grounded.

Grounding Procedure

You must maintain reliable grounding of this equipment. Review specifications in Appendix A to determine the appropriate AC branch circuit size for the quantity of units in your configuration and your operating voltage. Always follow your local electrical codes for loading circuits.



Caution – The Sun StorageTek 5320 NAS Appliance, controller enclosure, and expansion enclosures contain several components sensitive to static-electrical discharge. Surges of static electricity (caused by shuffling your feet across a floor and touching a metallic surface, for example) can cause damage to electrical components. For this reason, it is important that proper packaging and grounding techniques be observed. Follow the procedures below.

- Transport products in static-safe containers.
- Cover workstations with approved static-dissipating material.
- Wear a wrist strap, and always be properly grounded when touching static-sensitive equipment or parts.
- Use only properly grounded tools and equipment.
- Avoid touching pins, leads, or circuitry.

▼ To Avoid Damage to Internal Components

1. For each controller enclosure and expansion enclosure, make sure that the power switch is turned off and that both power cables are plugged in.

2. **Wear a wrist strap, and always be properly grounded when touching static-sensitive equipment or parts.**

If a wrist strap is not available, touch any unpainted metal surface on the back panel of any unit to dissipate static electricity. Repeat this procedure several times during installation.

3. **Avoid touching exposed circuitry, and handle components by their edges only.**



Caution – Do not power on any units until after you have connected the Sun StorageTek 5320 NAS Appliance to the network.

▼ To Ground the Rack Installation

1. **Include a third-wire safety ground conductor with the rack installation to avoid the potential for an electrical shock hazard.**
2. **Use a minimum 14 AWG connected to the earth ground stud on the back of the server.**
3. **Connect the safety ground conductor to the chassis stud with a two-hole crimp terminal with a maximum width of 0.25 inch.**
4. **Install the nuts on the chassis with a 10 in/lb torque.**

The safe ground conductor provides proper grounding only for the Sun StorageTek 5320 NAS Appliance. You must provide additional proper grounding for the rack and other devices installed in it.

Review specifications in Appendix A to determine isolation and continuous power requirements.

Main AC Power Disconnect

You are responsible for installing an AC power disconnect for the entire rack unit. This power source disconnect must be readily accessible, and it must be labeled as controlling power to the entire rack unit, not only to the servers.

▼ To Prepare the Server Rackmount Kit

- **Ensure that you have all of the parts in the rackmount kit before you begin the installation of the server:**
 - Slide rail assemblies

- Package of mounting screws and nuts in assorted sizes to fit various types of racks and cabinets
- Cable management arm with six preinstalled cable clips
- Manufacturer's instruction sheet for the cable management arm

The rackmount kit contains two slide rail assemblies. A slide rail assembly can be installed on either the right or left side of the rack.

A slide rail assembly consists of two parts: a slide rail and a removable mounting bracket. The slide rail attaches to the rack posts. The mounting bracket attaches to the server chassis.

▼ To Prepare the Server

1. **Unpack the unit.**
2. **Check the contents of the box for the following items:**
 - Sun StorageTek 5320 NAS Appliance or Sun StorageTek 5320 NAS Cluster Appliance or Sun StorageTek 5320 NAS Gateway System (single server or dual server)
 - Ship kit for the server
3. **Be sure you have the power cords (two per server), which were shipped separately.**

▼ To Prepare the CAM100 3RU Rackmount Kit

Note – For NAS head installation, refer to the Sun LX50/Sun Fire V60x/Sun Fire V65x rail-mounting kit rail kit instructions.

Unpack the rackmount kit and check the contents. The CAM100 3RU rail kit contains the following items:

- Left front (P/N 341-04443-01) and back (P/N 341-0444) rails
- Right front (P/N 341-04445-01) and back (P/N 341-0446) rails

- Mounting hardware as listed below:

Quantity	Type	Used With
8	8-32 (small) panhead screw	All Sun cabinets
8	10-32 (medium) panhead screw	Sun StorEdge Expansion cabinet
12	Metric M6 (large) panhead screw	Sun Rack 900/1000 cabinet

Note – The kit may have extra screws.

The rails can be adjusted to fit the cabinets.

▼ To Prepare the Controller and Expansion Enclosures



Caution – Two people are needed to lift and move the controller enclosure and expansion enclosures. Use care to avoid injury. An enclosure can weigh up to 95 pounds (43 kg). Do not lift the front of the enclosure; this can cause damage to the drives.

1. **Unpack the enclosure.**
2. **Check the contents of the box for the following items:**
 - Sun StorEdge 5300 enclosure (controller or expansion)
 - Ship kit for the controller enclosure
 - Two 5-meter optical Fibre Channel (FC) cables for connecting the RAID controller enclosure to your Sun StorageTek 5320 NAS Appliance
 - Two 6-meter RJ45 -RJ45 Ethernet cables
 - Sun StorEdge 6130 Array Rack Alignment Template
 - Documentation URL brochure
 - Ship kit for the expansion enclosure
 - Two 2-meter copper FC cables
 - Documentation URL brochure

▼ To Prepare the Cabinet

Select the cabinet in which you will be installing the Sun StorageTek 5320 NAS Appliance. Be sure the cabinet is installed as described in the installation instructions provided with it.

1. **Stabilize the cabinet as described in the cabinet documentation.**
2. **If the cabinet has casters, make sure the casters are locked to prevent the cabinet from rolling.**
3. **Remove or open the top front panel.**
4. **Remove or open the vented back panel.**

Note – Sun Microsystems makes no warranties or guarantees as to fit, form, or function of the Sun StorageTek 5320 NAS Appliance system installed in third-party racks or cabinets. It is the customer's responsibility to ensure that the rack or cabinet can house the Sun StorageTek 5320 NAS Appliance system in all conditions that might exist. All racks and cabinets must comply with local building and construction codes.

Installing in the Cabinet

You must plan your installation carefully.

The controller and expansion enclosures must be installed in the cabinet as follows, always starting from the bottom up. Starting at the bottom distributes the weight correctly in the cabinet.

Note – If you are installing a mixture of FC and SATA expansion enclosures, be sure to install the SATA expansion enclosures first, followed by the FC expansion enclosures. Installing in this order enables you to install either a SATA or FC expansion enclosure without requiring an outage.

FIGURE 2-1 shows the cabinet with a single controller enclosure, single expansion unit, room for additional storage, and single server installed at the top.

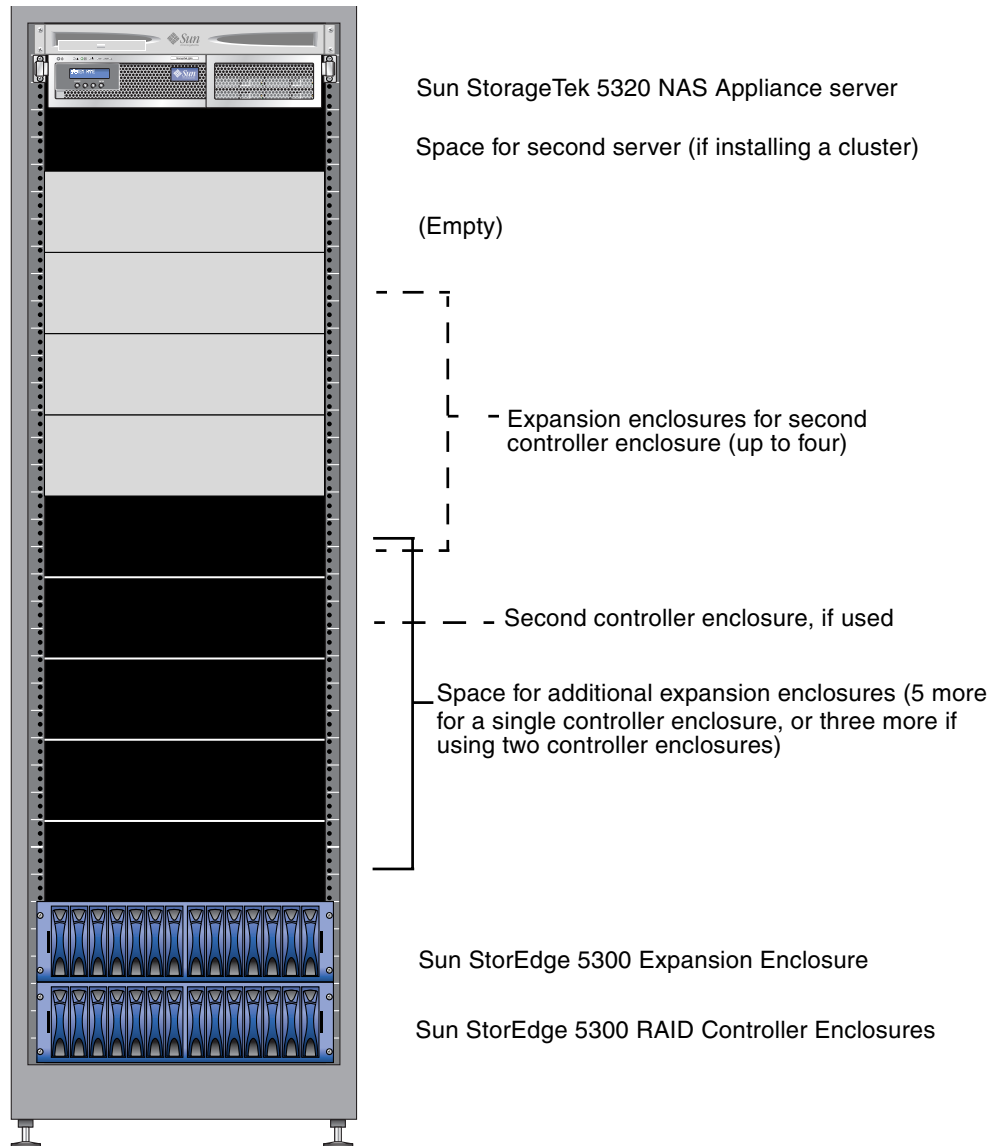


FIGURE 2-1 Rackmounting Order

▼ To Install the System With a Single Controller Enclosure

1. **Mount the controller enclosure in the bottom of the cabinet.**
2. **Mount any expansion enclosures (maximum six) from the bottom up.**

The first expansion enclosure above the controller enclosure is EU 1, then EU 2, and so on.
3. **Mount the Sun StorageTek 5320 NAS Appliance in the top of the cabinet.**

If you are installing a cluster, install the servers as follows:

 - a. **Sun StorageTek 5320 NAS Appliance server H1 (software serial number ending “-H1”) at the top.**

The software serial number is located at the front of the server, below the LCD display. It is also printed on the Customer Information Sheet (CIS).
 - b. **Sun StorageTek 5320 NAS Appliance server H2 (software serial number ending “-H2”) below server H1.**

▼ To Install the System With Two Controller Enclosures

1. **Mount the controller enclosure in the bottom of the cabinet.**
2. **Mount any expansion enclosures (maximum four) from the bottom up, and be sure to leave space for the maximum four EUs if you do not install them at this time.**

The first expansion enclosure above the controller enclosure is EU 1, then EU 2, and so on.
3. **Mount the second controller enclosure.**
4. **Mount any expansion enclosures (maximum four) for the second controller enclosure, and be sure to leave space for the maximum four expansion enclosures if you do not install them at this time.**
5. **Mount the Sun StorageTek 5320 NAS Appliance in the top of the cabinet.**

If you are installing a cluster, install the servers as follows:

 - a. **Sun StorageTek 5320 NAS Appliance server H1 (software serial number ending “-H1”) at the top.**

The software serial number is located at the front of the server, below the LCD display. It is also printed on the Customer Information Sheet (CIS).

- b. Sun StorageTek 5320 NAS Appliance server H2 (software serial number ending “-H2”) below server H1.

Attaching the CAM100 3RU Rails to a Cabinet

The CAM100 3RU rails must be used to install the enclosures.

Note – For NAS head installation, refer to the Sun LX50/SunFire V60x/SunFire V65x rail-mounting kit instructions.

Use the following procedure to attach the rails to a Sun Rack 900 or Sun Rack 1000 cabinet. Because this rail kit can be adapted for several cabinets, closely follow the procedures; they may require actions that you have not previously taken.

Note – In this section, you will loosely hang the rails from screws you attach to the side walls *before* connecting the rails to the front and back.

▼ To Attach the Rails to the Sun Rack 900/1000 Cabinet

1. Using the No. 2 Phillips screwdriver, loosen the side-rail screws and adjust each rail to its maximum length (FIGURE 2-2).

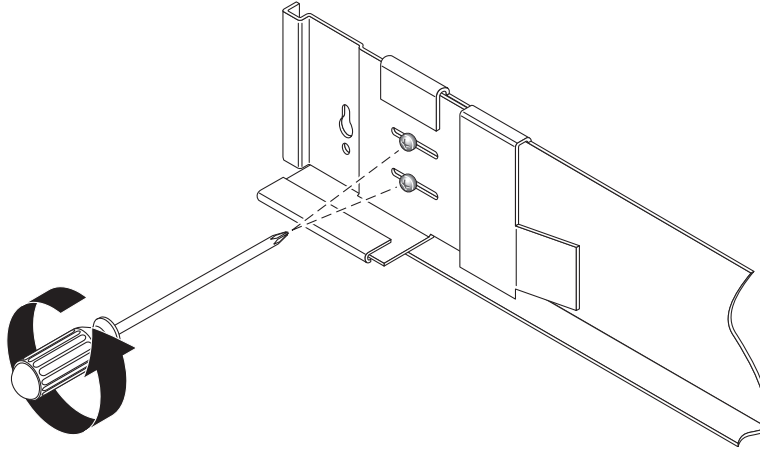


FIGURE 2-2 Loosening the Rail Screws to Adjust the Rail Length

2. Locate the proper mounting holes by placing the rack alignment template for the Sun Rack 900/1000 cabinet over the front left cabinet rail (FIGURE 2-3).

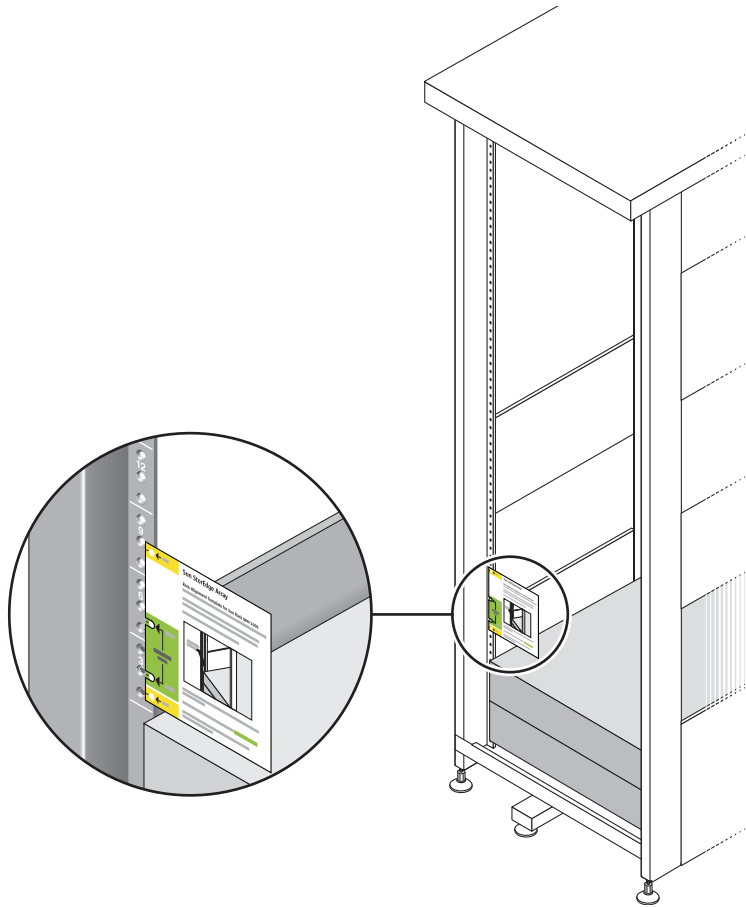


FIGURE 2-3 Positioning the Rack Alignment Template

3. Slide the template up and down until all four holes line up with the cabinet rail holes.
4. Note the screw hole numbers of the two mounting holes.

You will use the same screw hole numbers for the rest of this installation.

- Using the No. 2 Phillips screwdriver, insert and tighten two 8-32 screws to secure the left rail to the front of the cabinet (FIGURE 2-4). Repeat for the right rail.

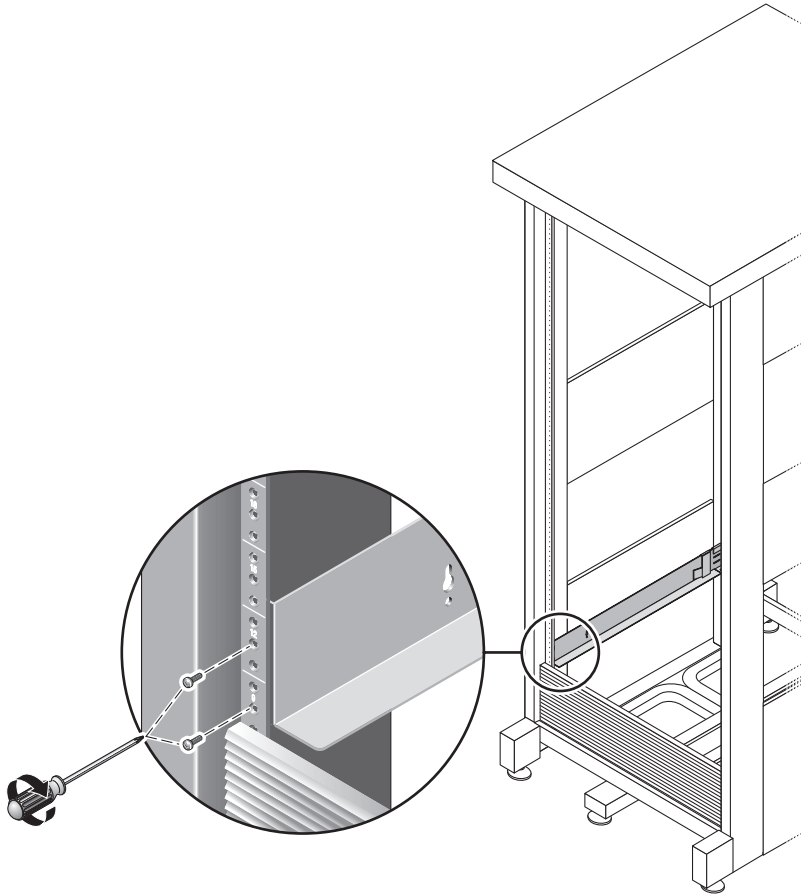


FIGURE 2-4 Securing the Left Rail to the Front of the Cabinet

6. At the back of the cabinet, adjust the length of each rail as needed to fit the cabinet, and position the rail flange over the vertical rail (FIGURE 2-5).

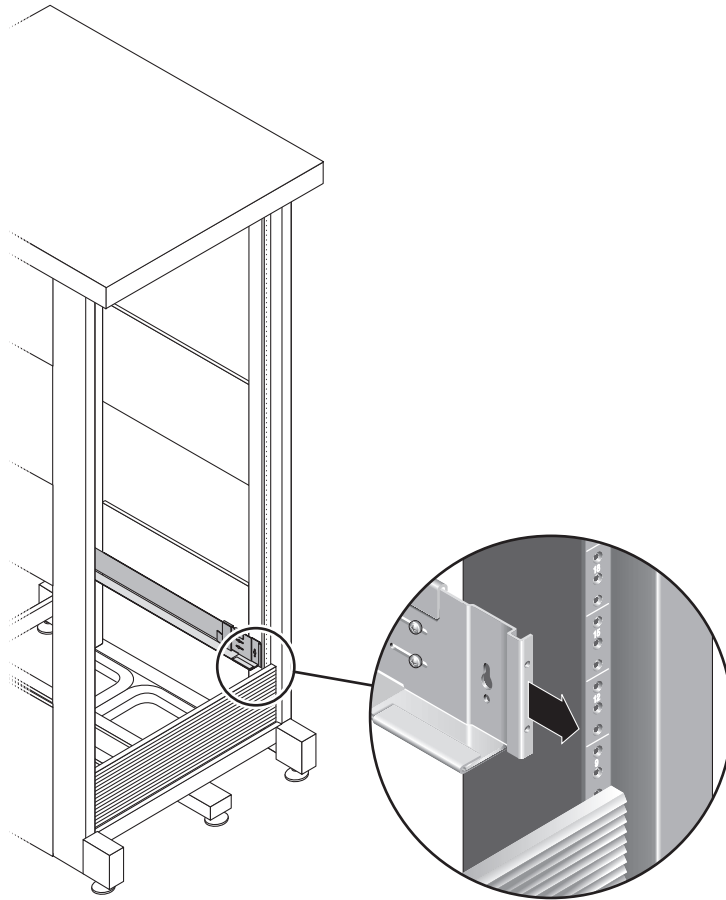


FIGURE 2-5 Adjusting the Length of the Left Rail at the Back of the Cabinet

7. Using the No. 3 Phillips screwdriver, insert and tighten the M6 screws on each side at the back of the rail (FIGURE 2-6).

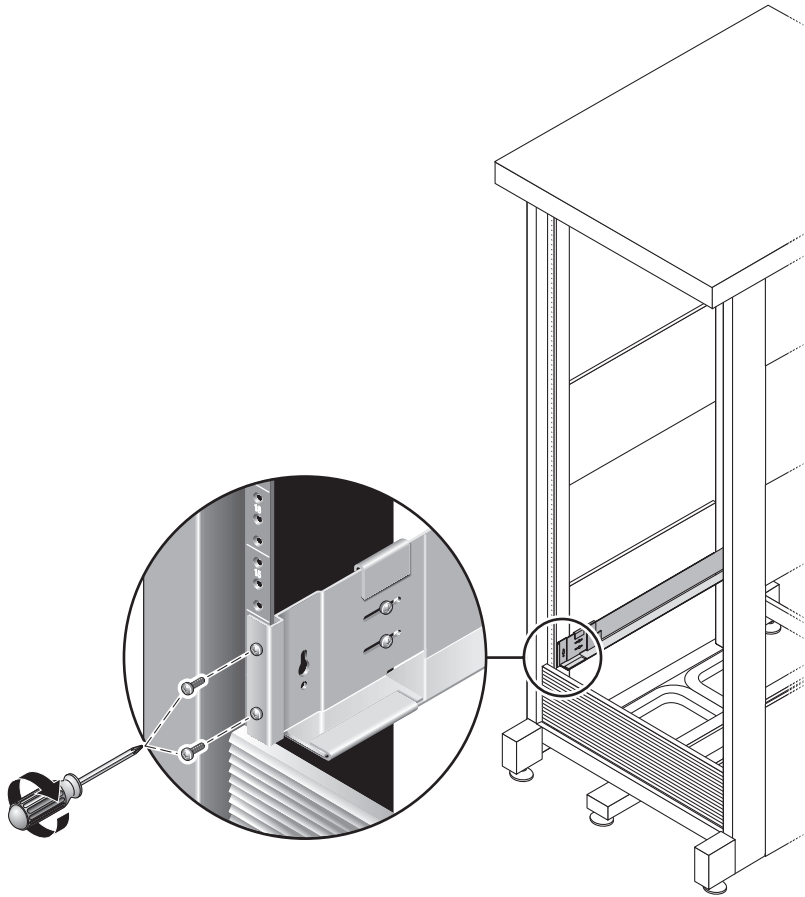


FIGURE 2-6 Securing the Right Rail to the Back of the Cabinet

- Using the No. 2 Phillips screwdriver, tighten the four adjusting screws (two on each side) toward the back of each rail (FIGURE 2-7).

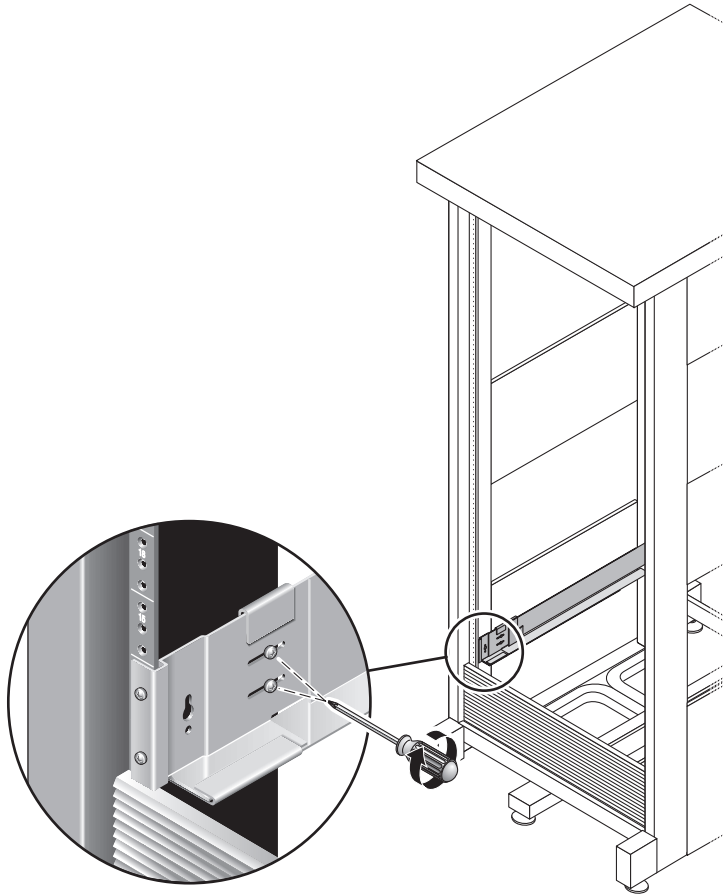


FIGURE 2-7 Tightening the Adjusting Screws

Installing an Enclosure in a Cabinet

If you are installing expansion enclosures, install the first one in the first empty slot at the bottom of the cabinet, and continue installing any additional expansion enclosures from the bottom up, followed by the controller enclosure. For information about order of enclosure installation, refer to [“Installing in the Cabinet” on page 18](#).

After installing each enclosure, you must connect its power cables and set the tray ID as described in [“Setting the Tray ID” on page 49](#).

▼ To Install an Enclosure in a Cabinet

1. Unsnap and remove the left and right end caps on the enclosure to permit access to the screw mounting holes ([FIGURE 2-8](#)).

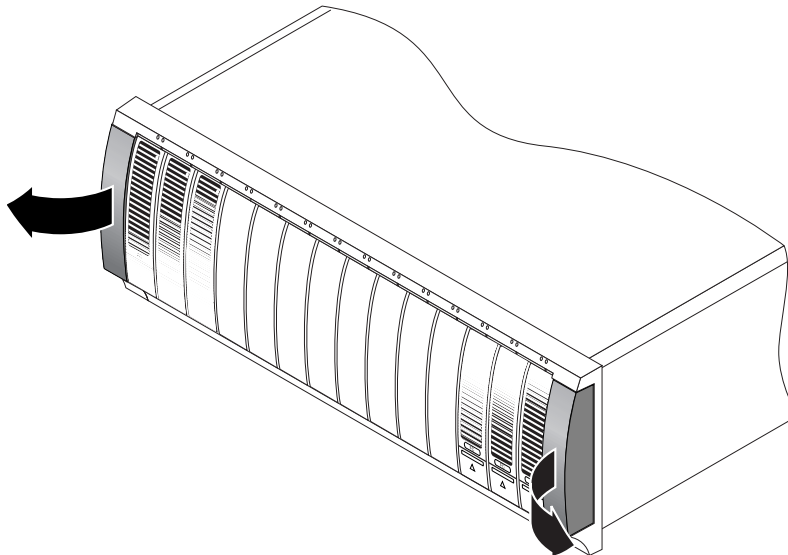


FIGURE 2-8 Removing the End Caps on the Enclosure

2. Using two people, one at each side of the enclosure, carefully lift and rest the enclosure on the bottom ledge of the left and right rails (FIGURE 2-9).



Caution – Use care to avoid injury. An enclosure can weigh up to 95 pounds (45 kg).

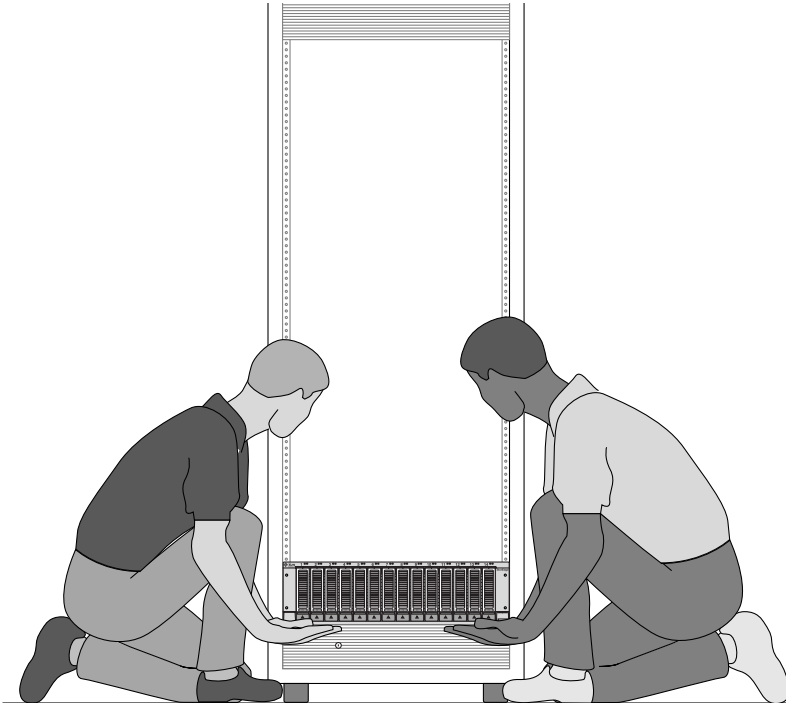


FIGURE 2-9 Positioning the Enclosure in the Cabinet

3. Carefully slide the enclosure into the cabinet until the front flanges of the enclosure touch the vertical face of the cabinet ([FIGURE 2-10](#)).

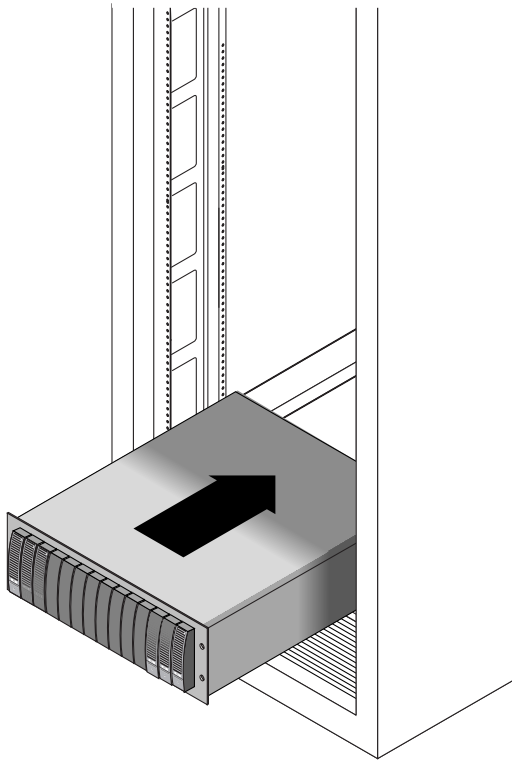


FIGURE 2-10 Sliding the Enclosure Into the Cabinet

4. Depending on the type of cabinet you have, do one of the following:

- For a Sun StorEdge Expansion cabinet, use the No. 2 Phillips screwdriver to insert and tighten four 10-32 screws (two per side) to secure the enclosure to the front of the cabinet (FIGURE 2-11).

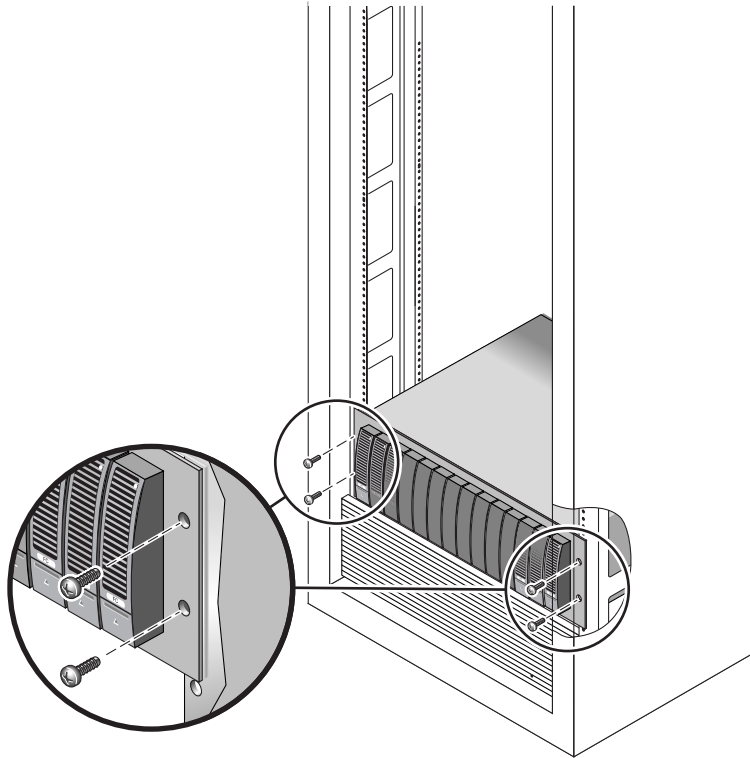


FIGURE 2-11 Securing the Enclosure to the Front of a Sun StorEdge Expansion Cabinet

- For a Sun Rack 900/1000 cabinet, use the No. 3 Phillips screwdriver to install and tighten four M6 screws (two per side) to secure the enclosure to the front of the cabinet ([FIGURE 2-12](#)).

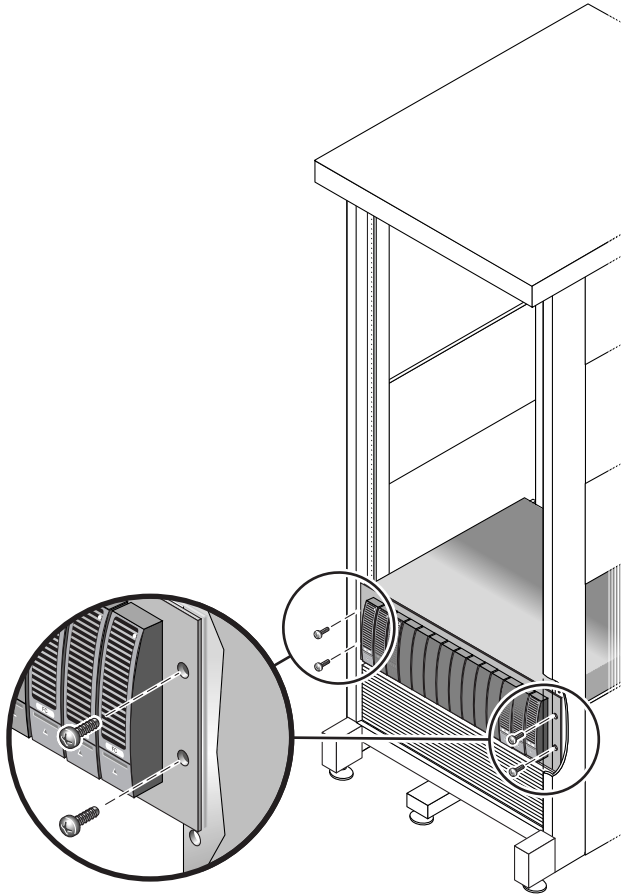


FIGURE 2-12 Securing the Enclosure to the Front of a Sun Rack 900/1000 Cabinet

- 5. Replace the left and right end caps to hide the front mounting screws.**
The end caps snap onto the front bezel of the tray.

6. At the back of the enclosure, install and tighten two 8-32 screws (one per side) to secure the back of the enclosure to the cabinet (FIGURE 2-13).

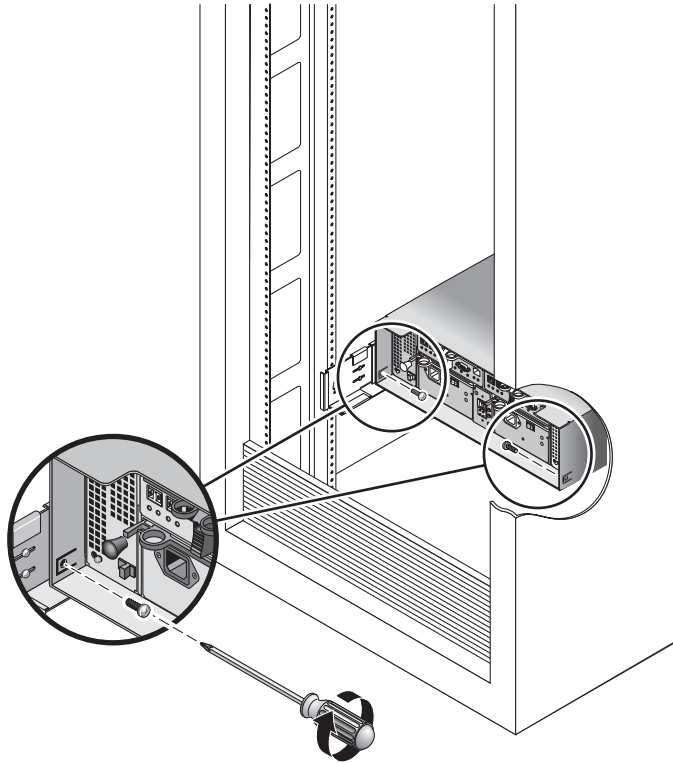


FIGURE 2-13 Securing the Enclosure to the Back of the Cabinet

Installing a Server in a Cabinet

Installing a server involves three steps:

1. Installing the slide rails (refer to [“To Install the Slide Rail Assemblies”](#) on page 34)
2. Installing the cable management kit (refer to [“To Install the Cable Management Kit”](#) on page 41)
3. Verifying the operation of the slide rails and cable management (refer to [“To Verify the Operation of the Slide Rails and the CMA”](#) on page 45)

▼ To Install the Slide Rail Assemblies

1. Pull both mounting brackets completely out of their respective slide rails:
 - a. Simultaneously press and hold the upper and lower lock buttons of the slide rail lock (FIGURE 2-14).

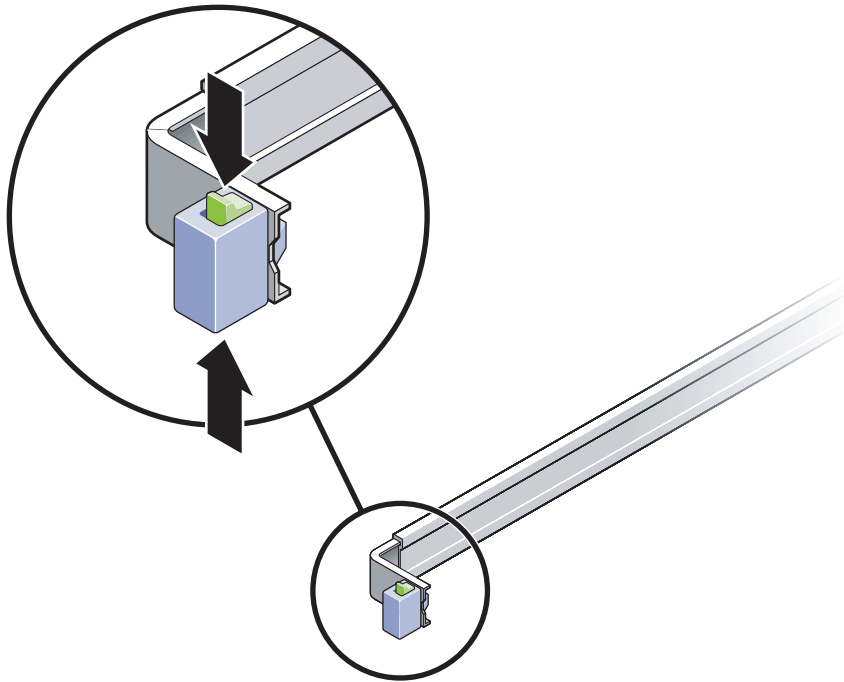


FIGURE 2-14 Unlocking the Slide Rail Assembly

- b. Pull the mounting bracket out until it locks in the extended position.

- c. Slide the mounting bracket release button in the direction shown in [FIGURE 2-15](#), and then slide the mounting bracket out of the slide rail.

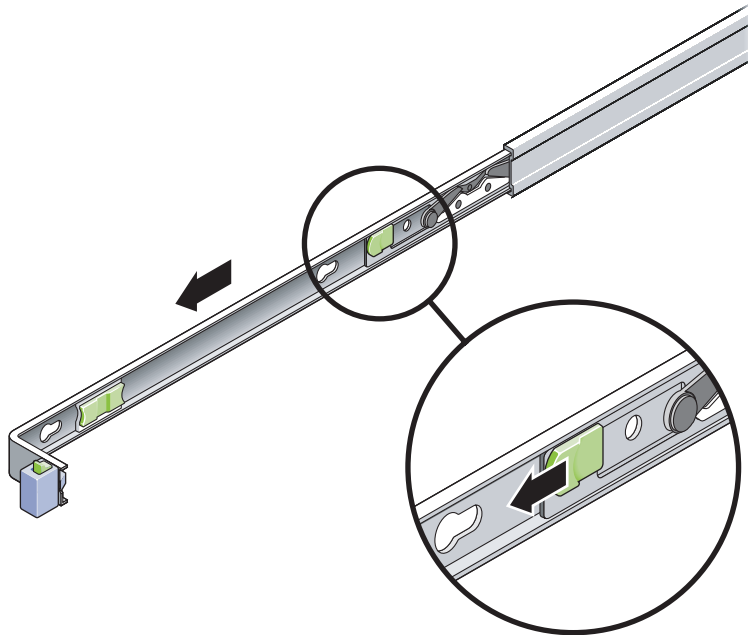


FIGURE 2-15 Location of the Mounting Bracket Release Button

- d. Press the metal lever (labeled Push) on the middle section (FIGURE 2-16) of the sliding rail, and then push the middle section back into the rack.

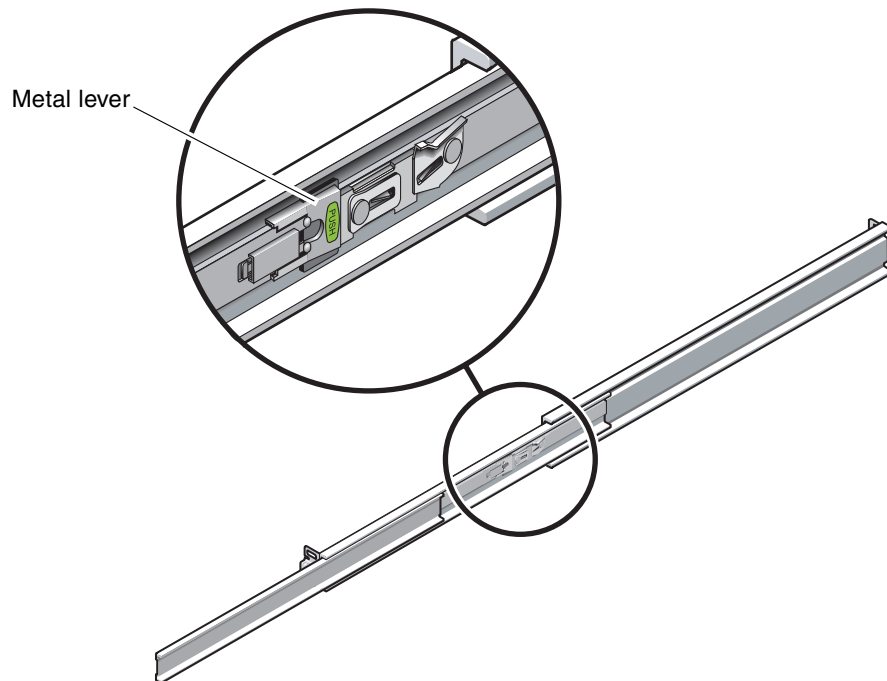


FIGURE 2-16 Unlocking the Slide Rail Middle Section

2. Attach a mounting bracket to the right side of the server chassis.

- a. Position the mounting bracket against the server chassis (FIGURE 2-17) so that the slide rail lock is at the front and the three keyed openings on the mounting bracket are aligned with the three locating pins on the side of the chassis.

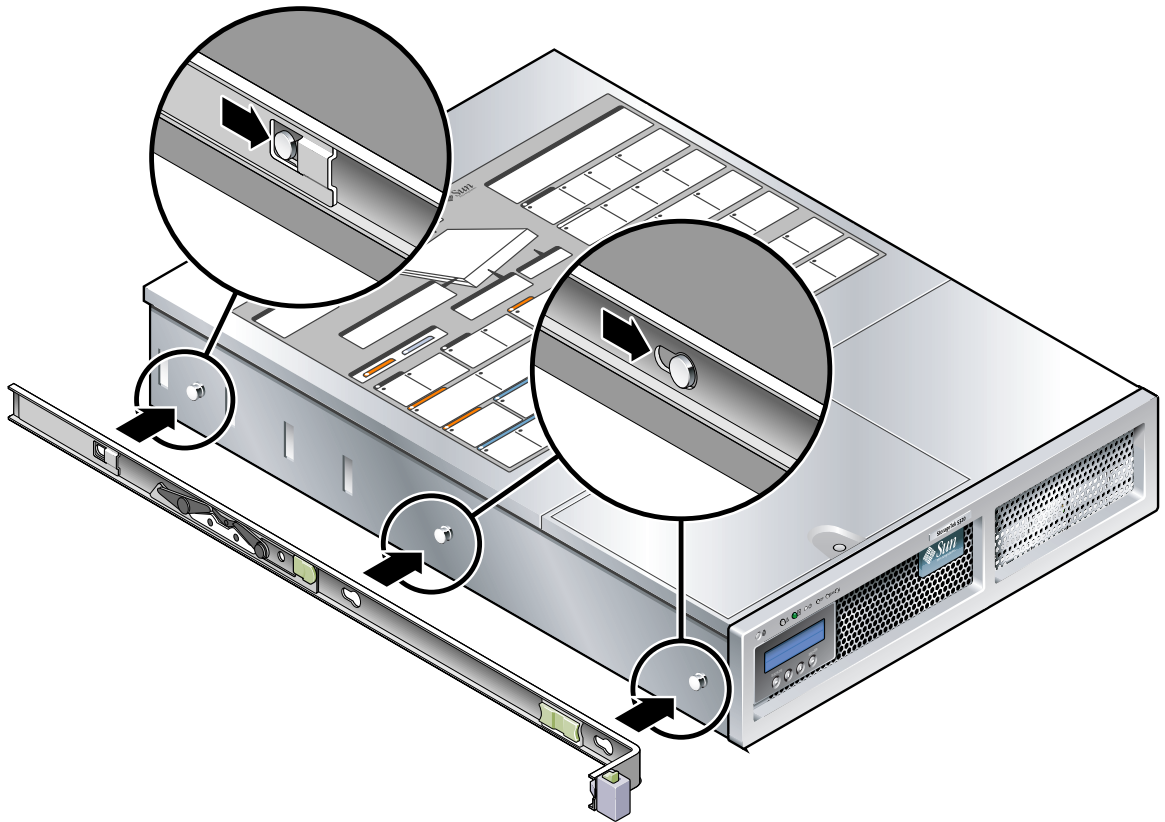


FIGURE 2-17 Attaching a Mounting Bracket to the Chassis

- b. With the heads of the three locating pins protruding through the three keyed openings in the mounting bracket, pull the mounting bracket toward the front of the chassis until the bracket locks into place with an audible click.
 - c. Verify that all three locating pins are trapped in the keyed openings and that the back locating pin has engaged the mounting bracket lock, as shown in the right side of FIGURE 2-17.
3. Attach the second mounting bracket to the left side of the server chassis.
 4. Determine which rack hole numbers to use when attaching the slide rails to the rack posts.

The server is two rack units tall (2U). The slide rails will occupy the lower half of the 2U space.

5. Determine which screws you will use to mount the slide rails.

If your rack has threaded mounting holes in the rack posts, determine whether the threads are metric or standard. Select the appropriate screws from the package included in the mounting kit.

If your rack does not have threaded mounting holes, the mounting screws are secured with a caged nut.

6. Attach a slide rail to the right front rack post.

- a. Loosely attach the front of a slide rail to the right front rack post (FIGURE 2-18) using two screws.**

Note – Do not tighten the screws yet.

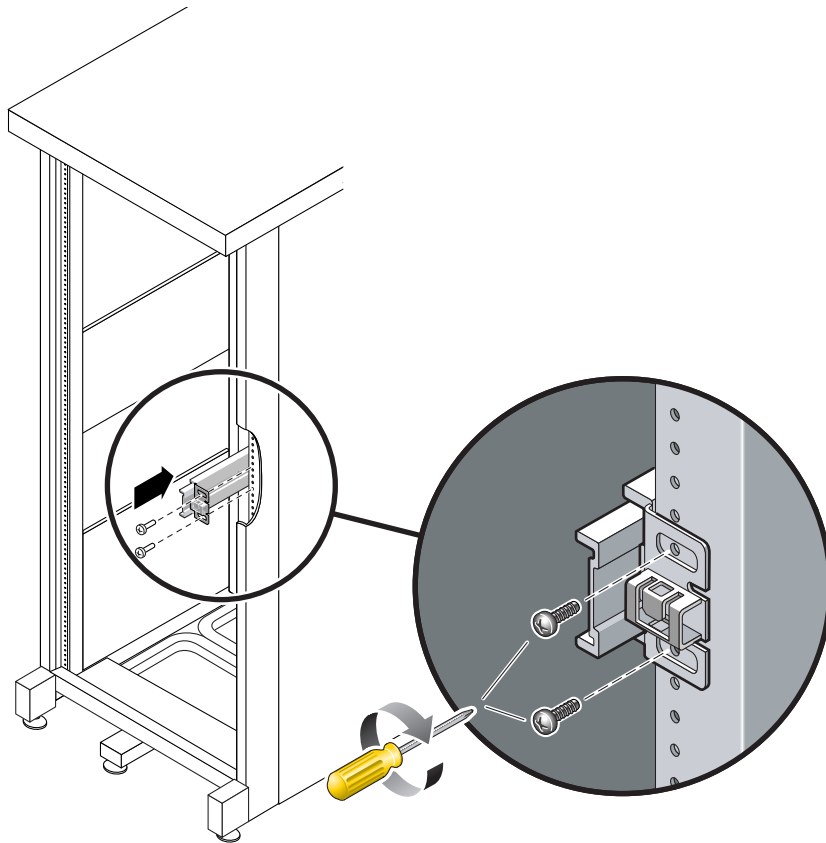


FIGURE 2-18 Mounting a Slide Rail

- b. Adjust the length of the slide rail by sliding the back mounting flange to reach the outside edge of the back rack post.
 - c. Loosely attach the back of the slide rail to the back rack post with two screws.
7. Attach the second slide rail to the left rack posts in a similar manner. Again, do not tighten the screws.
8. Use the slide rail spacing tool to adjust the distance between the slide rails:
 - a. At the front of the rack, plug the left side of the tool into slots at the end of the left rail (FIGURE 2-19).

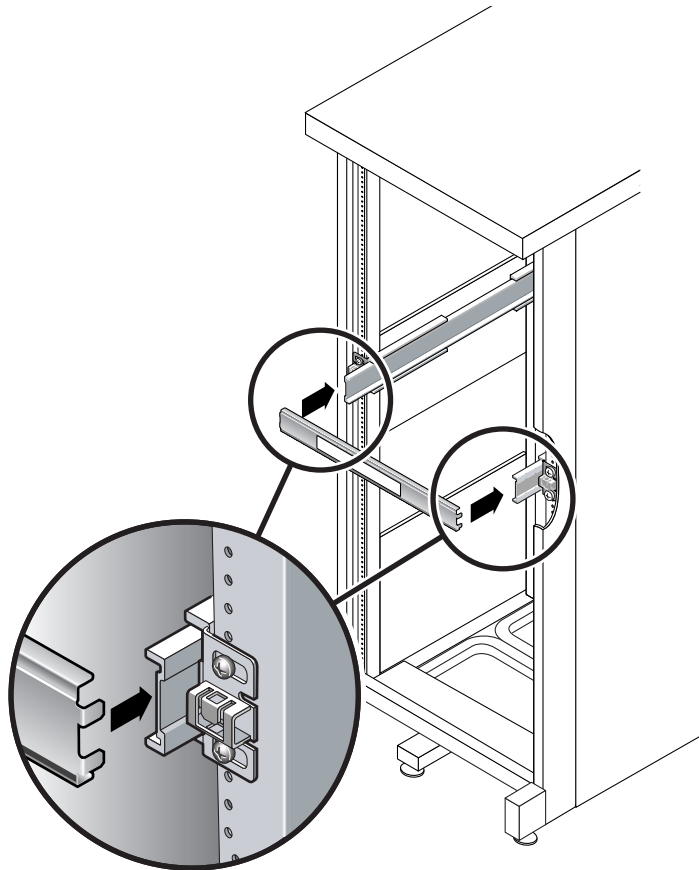


FIGURE 2-19 Using the Slide Rail Spacing Tool to Adjust the Distance Between the Slide Rails

- b. Insert the right side of the tool into the front end of the right rail, while sliding the end of the rail to the right or left as needed to allow the ends of the tool to enter the ends of both rails.

The distance between the rails is now equal to the width of the server with mounting brackets.

- c. Tighten the screws to lock the ends of the rails in place.
 - d. At the back of the rack, repeat [Step a](#) through [Step c](#) for the back ends of the rails.
9. Deploy the anti-tilt bar, if the chassis or rack is so equipped.



Caution – The weight of the server on extended slide rails can be enough to overturn a cabinet.

10. Insert the ends of the mounting brackets into the sliding rails ([FIGURE 2-20](#)).



Caution – The server weighs approximately 52 pounds (24 kg). Two people are required to lift and mount the system into a rack enclosure when using the procedures in this chapter.

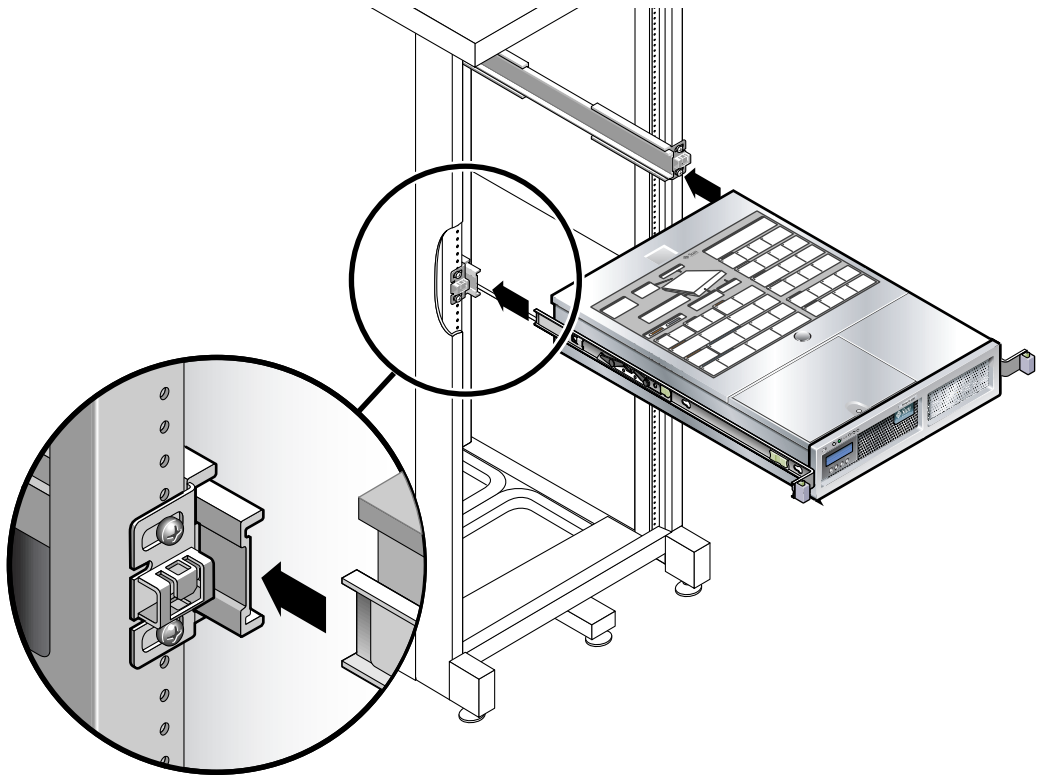


FIGURE 2-20 Mounting the Chassis on the Slide Rails

11. Simultaneously release the rail locks on each side of the sliding rails, and guide the chassis into the rack.



Caution – Verify that the server is securely mounted in the rack, and that the slide rails are locked to the mounting brackets, before continuing.

▼ To Install the Cable Management Kit

The cable management assembly (CMA) clips into the ends of the left and right sliding rail assemblies. No screws are necessary for mounting the CMA.



Caution – Support the CMA during this installation. Do not allow the assembly to hang by its own weight until it is secured by all three attachment points.

1. At the back of the rack, plug the CMA rail extension into the end of the left sliding rail assembly (FIGURE 2-21).

The tab at the front of the rail extension clicks into place.

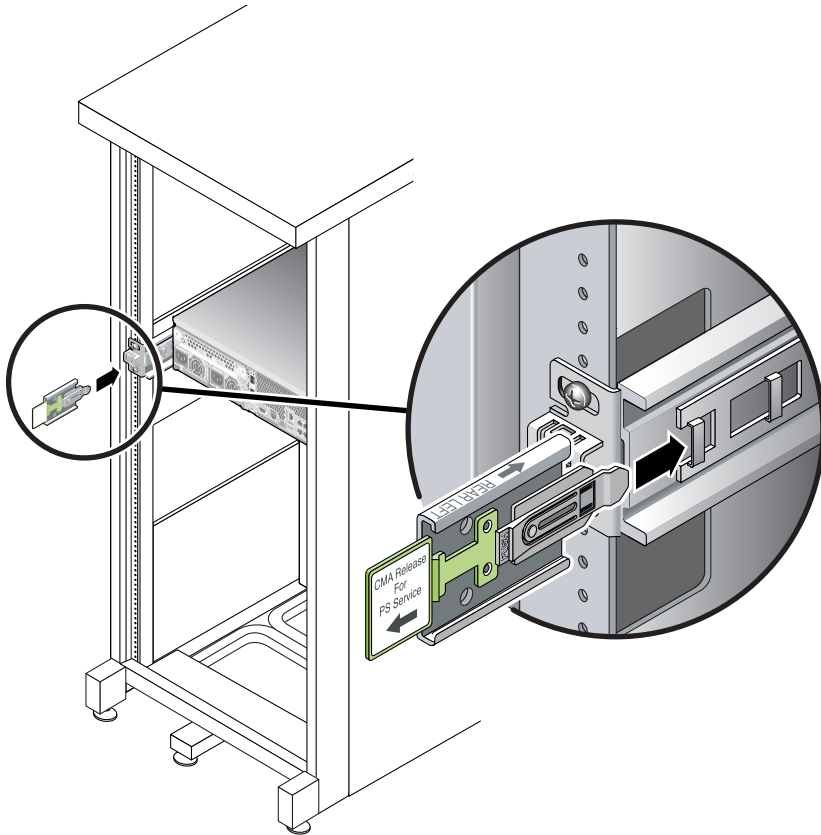


FIGURE 2-21 Inserting the CMA Rail Extension Into the Back of the Left Slide Rail

The right sides of the two CMA arms have hinged extensions. On the manufacturer's instruction sheet, the smaller extension is called the CMA Connector for Inner Member. It attaches to the right mounting bracket. The larger extension is called the CMA Connector for Outer Member, and attaches to the right sliding rail.

2. Insert the smaller extension into the clip located at the end of the mounting bracket (FIGURE 2-22).

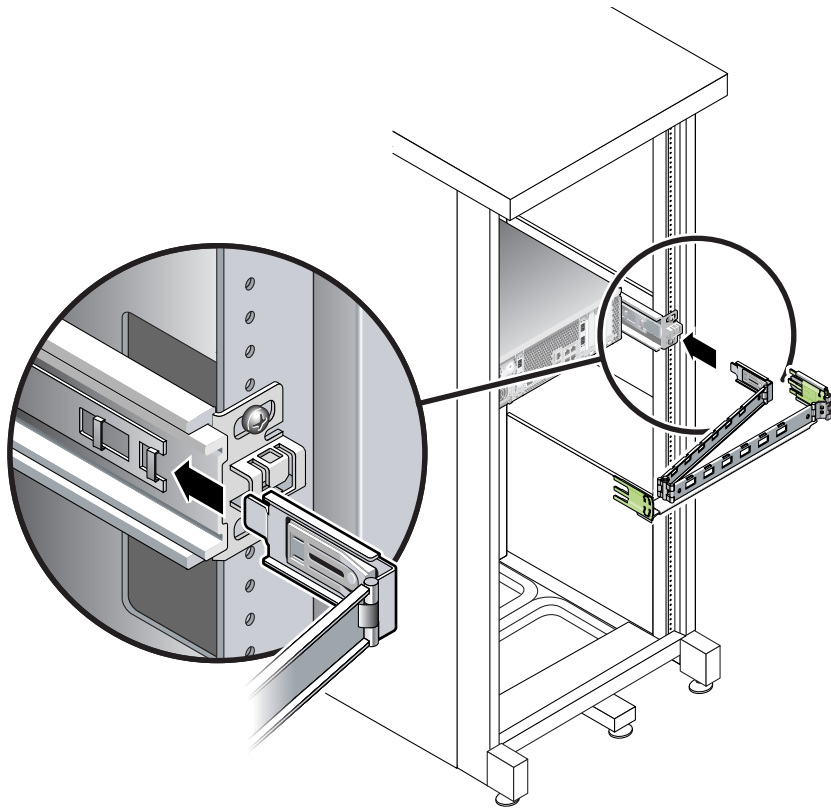


FIGURE 2-22 Mounting the Inner CMA Connector

3. Insert the larger extension into the end of the right sliding rail (FIGURE 2-23).

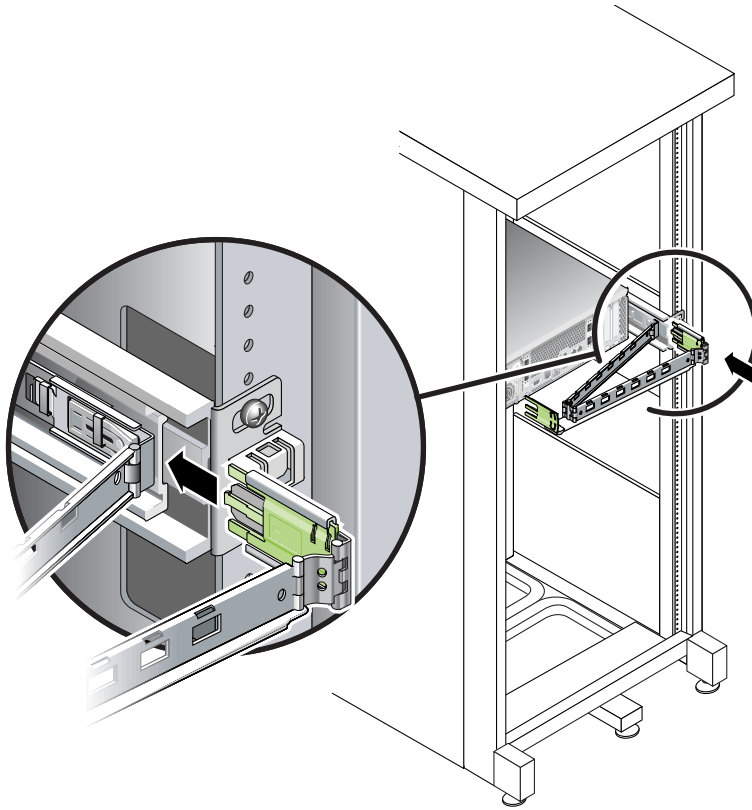


FIGURE 2-23 Attaching the Outer CMA Connector

4. Insert the hinged plastic connector at the left side of the CMA fully into the CMA rail extension (FIGURE 2-24).

The plastic tab on the CMA rail extension locks the hinged plastic connector in place.

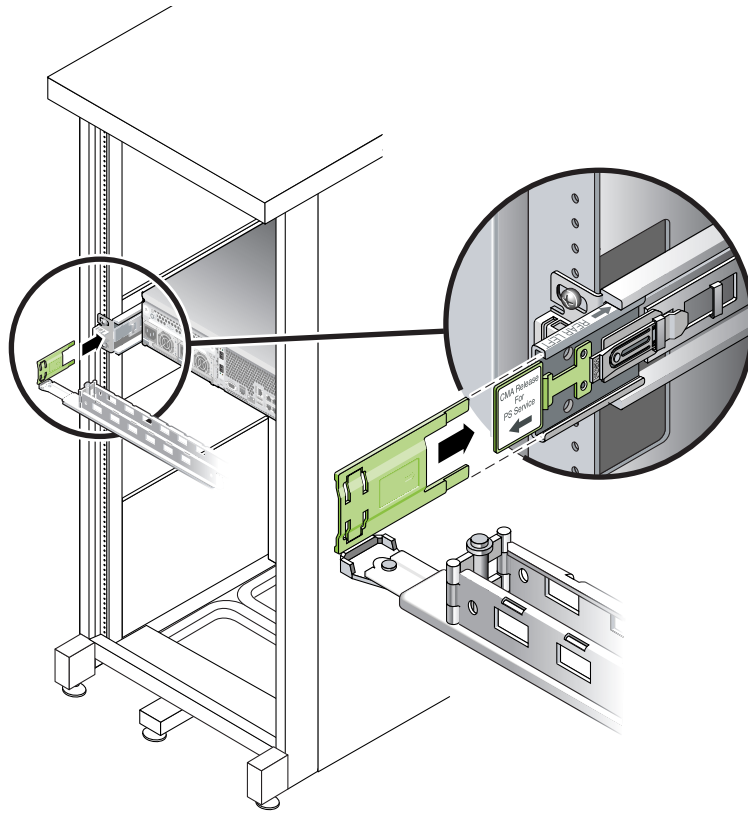


FIGURE 2-24 Mounting the Left Side of the Slide Rail

▼ To Verify the Operation of the Slide Rails and the CMA

Tip – Two people are needed for this procedure: one to move the server in and out of the rack and one to observe the cables and CMA.

1. For a cabinet or a free-standing rack, deploy the anti-tilt bar.
2. Unlock the slide lock buttons (FIGURE 2-25) at the right and left sides of the server chassis, and slowly pull the server out of the rack until the slide rails reach their stops.

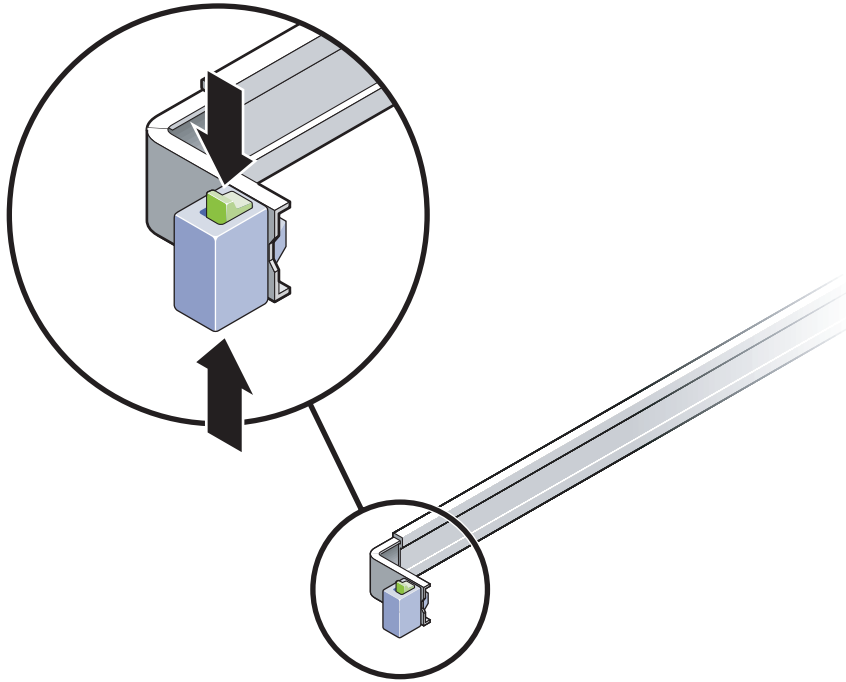


FIGURE 2-25 Unlocking the Slide Rail Assembly

- 3. Inspect the attached cables for any binding or kinks.**
- 4. Verify that the CMA extends fully and does not bind in the slide rails.**

5. When the server is fully extended out, release the slide rail lever stops (FIGURE 2-26).

Push both levers simultaneously and slide the server back into the rack.

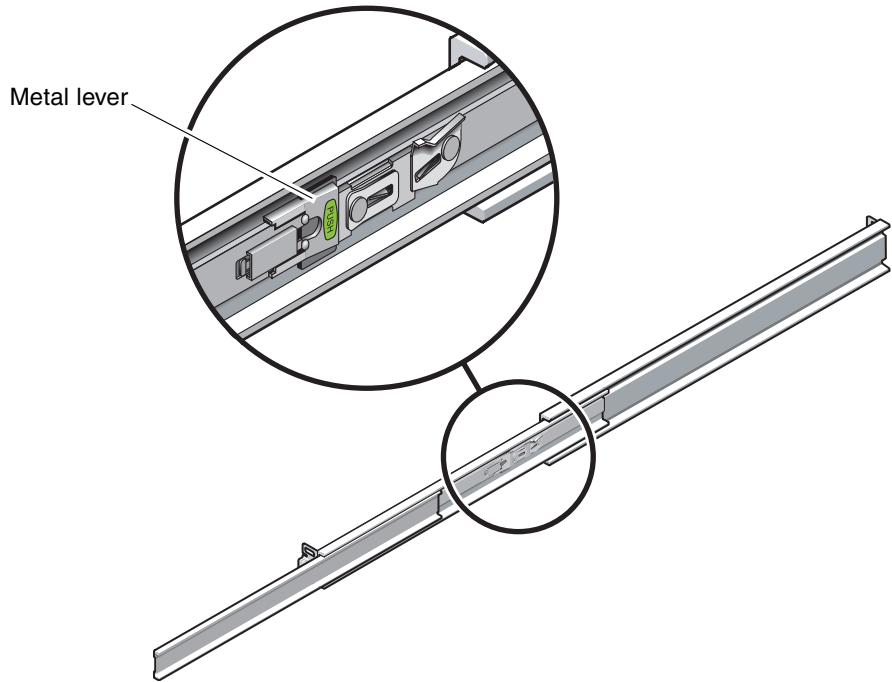


FIGURE 2-26 Unlocking the Slide Rail Lever Stops

6. Simultaneously unlock both slide rail release buttons (FIGURE 2-27), and push the server completely into the rack.

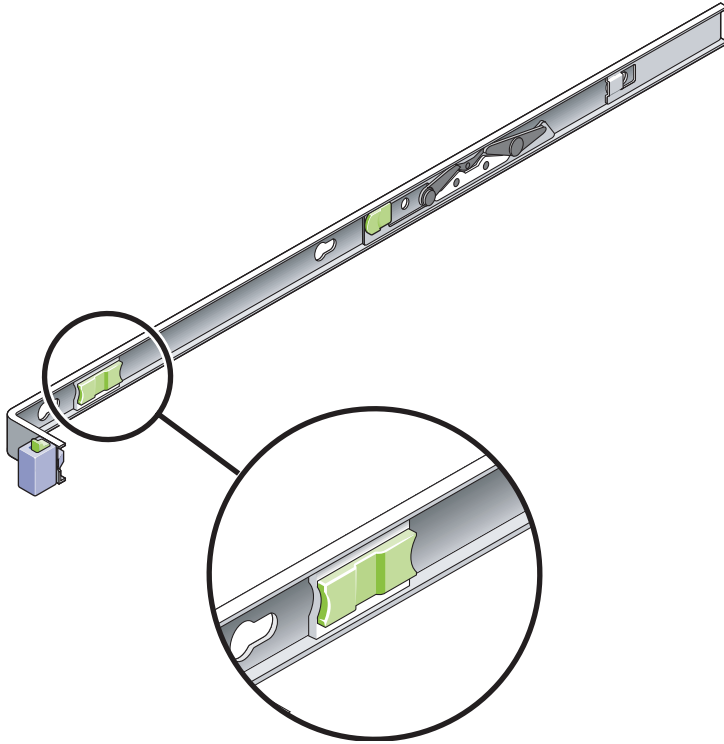


FIGURE 2-27 Slide Rail Release Button

The server should stop after approximately 15 inches (40 cm) of travel.

7. Verify that the cables and the CMA retracted without binding.
8. Adjust the cable hangers and CMA as required.

Connecting the Power Cables

1. Verify that both power switches are off for each controller enclosure and expansion enclosure in the cabinet.
2. Connect each power supply in each unit to a separate power source in the cabinet.



Caution – The cabinet must have two power sources connected to two separate power circuits.

3. **Connect each power supply in the Sun StorageTek 5320 NAS Appliance to a separate power source in the cabinet.**

After connecting the server power cords to the power source, the Power/OK LED flashes indicating standby power mode.

4. **Connect the primary power cables from the cabinet to the external power source.**

Note – Do not power on the units until you complete the installation procedures for your system. The power-on sequence is described in detail in [“Powering On the Sun StorageTek 5320 NAS Appliance, Controller Enclosures, and Expansion Enclosures” on page 67.](#)

Setting the Tray ID

You set the tray ID using the Tray ID switch at the back of the expansion enclosures and controller enclosures. You must set the tray ID of each enclosure to a unique number from 00 to 77.

1. Locate the Tray ID switch at the back of the controller enclosure, between the two power supplies (FIGURE 2-28).

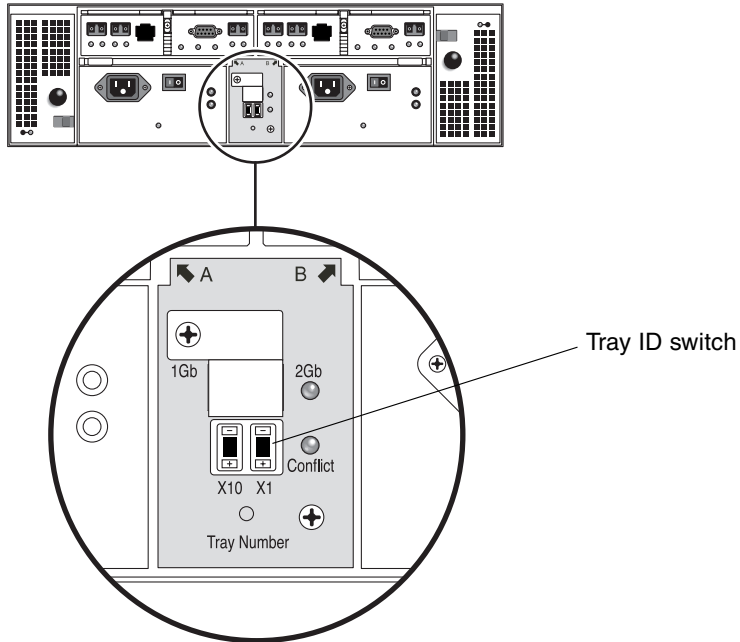


FIGURE 2-28 Tray ID Switch

2. Use a pen tip to press the plus and minus buttons on the X10 and X1 switch to the appropriate setting.

The X10 switch at the left sets the tens place of the tray ID, and the X1 switch sets the ones place. For example, to set the tray ID to 11, set the X10 switch to 1 and the X1 switch to 1.

By convention, tray ID 00 refers to the controller enclosure. The first expansion enclosure located above the controller enclosure is tray ID 01. The second expansion enclosure is tray ID 02. The tray ID increments by 01 for each expansion enclosure installed in the cabinet.

Back-End Storage Cabling

When you have finished installing all units and servers and connected their power cables, you are ready to connect the servers to the controller units and the controller units to the (optional) expansion units as described in subsequent chapters.

Use the chapter appropriate to the system that you are setting up.

To connect:	Refer to:
Single-server Sun StorageTek 5320 NAS Appliance to back-end storage	Chapter 3
Dual-server Sun StorageTek 5320 NAS Cluster Appliance to back-end storage	Chapter 4
Sun StorageTek 5320 NAS Gateway System to SAN storage	Chapter 5

Connecting the Sun StorageTek 5320 NAS Appliance

This chapter provides comprehensive instructions for connecting the Sun StorageTek 5320 NAS Appliance, the Sun StorEdge 5300 RAID Controller Enclosures, and the optional Sun StorEdge 5300 Expansion Enclosures. It also provides initial configuration instructions for the system.

Note – This chapter contains single-server Sun StorageTek 5320 NAS Appliance connection and configuration instructions only. If you are connecting a different system, refer to the appropriate chapter.

This chapter contains the following sections:

- [“Before You Begin” on page 54](#)
- [“Connecting the Sun StorageTek 5320 NAS Appliance to Back-End Storage” on page 54](#)
- [“Connecting to the Network” on page 65](#)
- [“Powering On the Sun StorageTek 5320 NAS Appliance, Controller Enclosures, and Expansion Enclosures” on page 67](#)
- [“Initial Sun StorageTek 5320 NAS Appliance Configuration” on page 69](#)

Note – The Sun StorageTek 5320 NAS Appliance ships with the operating system installed.

Before You Begin

Before connecting the system, you must install the units in the rack. Refer to [“Installing Servers and Back-End Storage” on page 11](#) for rackmount instructions.

Connecting the Sun StorageTek 5320 NAS Appliance to Back-End Storage

This section describes how to cable the Sun StorageTek 5320 NAS Appliance to backend storage, for several different configurations.

This section includes the following tasks:

- [“Connecting the Sun StorageTek 5320 NAS Appliance to Controller Enclosures” on page 54](#)
- [“Connecting Controller Enclosures to Expansion Enclosures” on page 59](#)

Connecting the Sun StorageTek 5320 NAS Appliance to Controller Enclosures

The Sun StorageTek 5320 NAS Appliance connects to each controller enclosure with a pair of optical fiber cables. Optical SFP transceivers have been installed in the controller host channel ports to interface with the optical fiber cable’s LC connectors. Refer to [FIGURE 3-1](#) for port locations.

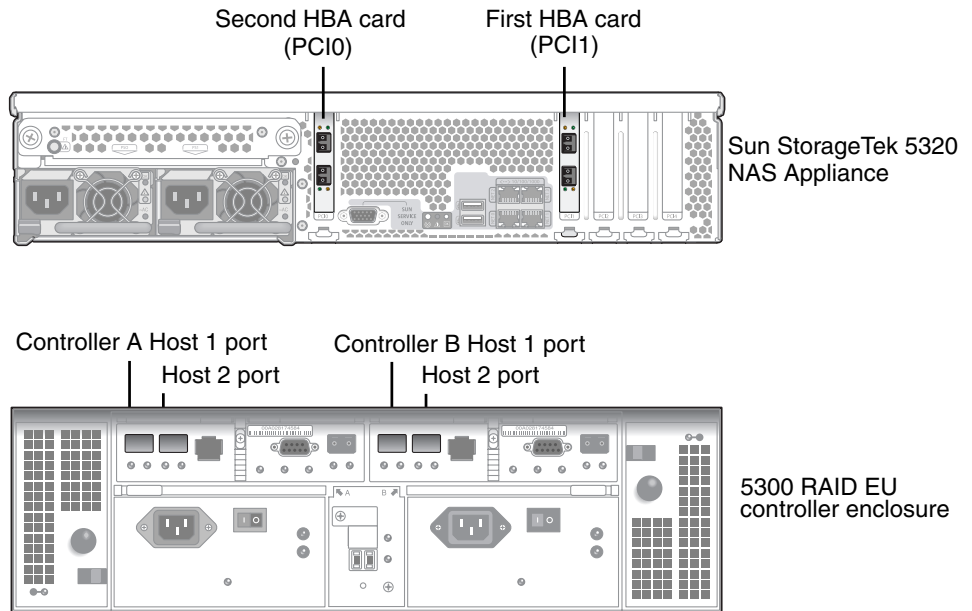


FIGURE 3-1 Sun StorageTek 5320 NAS Appliance HBA Cards and Controller Enclosure Ports

Note – HBA cards are inserted only in the far left on the low-profile riser assembly of the Sun StorageTek 5320 NAS Appliance.

This section contains details on the following:

- [“To Connect One Controller Enclosure” on page 55](#)
- [“To Connect Two Controller Enclosures” on page 57](#)

▼ To Connect One Controller Enclosure

Use the instructions in this section if you are connecting one controller enclosure to the Sun StorageTek 5320 NAS Appliance.

For a Sun StorageTek 5320 NAS Appliance with one dual port HBA card ([FIGURE 3-2](#)):

1. **Connect the HBA port 2 on the Sun StorageTek 5320 NAS Appliance to the Controller A host 1 port.**
2. **Connect the HBA port 1 on the Sun StorageTek 5320 NAS Appliance to the Controller B host 1 port.**

Note – The host 2 port on the controller A and controller B remain empty.

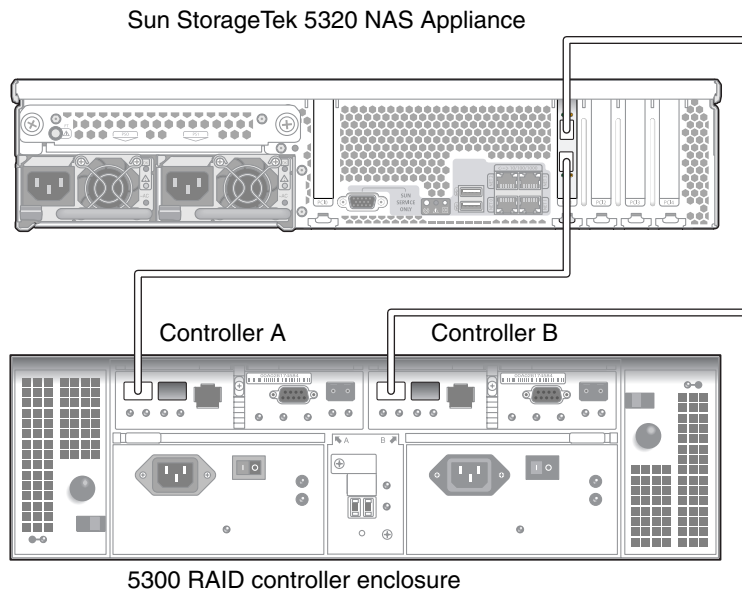


FIGURE 3-2 Connecting the Sun StorageTek 5320 NAS Appliance to the Controller Enclosure

For a Sun StorageTek 5320 NAS Appliance with two dual port HBA cards ([FIGURE 3-3](#)):

1. Connect the HBA port 1 of the first HBA card to the Controller A host 1 port.

2. Connect the HBA port 1 of the second HBA card to the Controller B host 1 port.

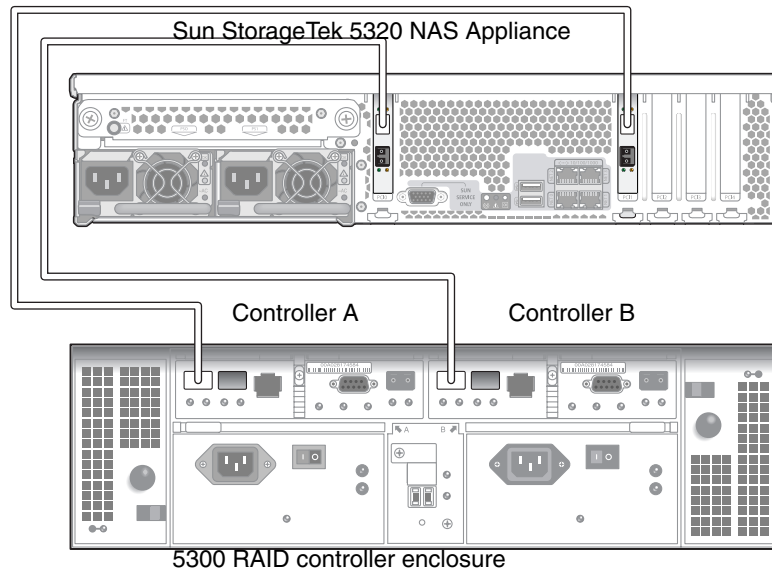


FIGURE 3-3 Connecting Two HBA Cards to the Controller Enclosure

Note – The host 2 port on the controller A and controller B remain empty.

▼ To Connect Two Controller Enclosures

Use the instructions in this section and refer to [FIGURE 3-4](#) if you are connecting two controller enclosures to the Sun StorageTek 5320 NAS Appliance.

Note – The Sun StorageTek 5320 NAS Appliance must have two HBA cards to connect to two controller enclosures.



Caution – One array can contain Fibre Channel disk drives in the controller enclosure and expansion enclosures, and the other array can contain SATA disk drives in the expansion enclosures only. However, you cannot mix EU F (Fibre Channel) and EU S (SATA) expansion enclosures attached to a controller enclosure.

1. Connect the HBA port 1 of the first HBA card to the Controller A host 1 port on the second controller enclosure.

2. Connect the HBA port 1 of the second HBA card to the Controller B host 1 port on the second controller enclosure.
3. Connect the HBA port 2 of the first HBA card to the Controller A host 1 port on the first controller enclosure.
4. Connect the HBA port 2 of the second HBA card to the Controller B host 1 port on the first controller enclosure.

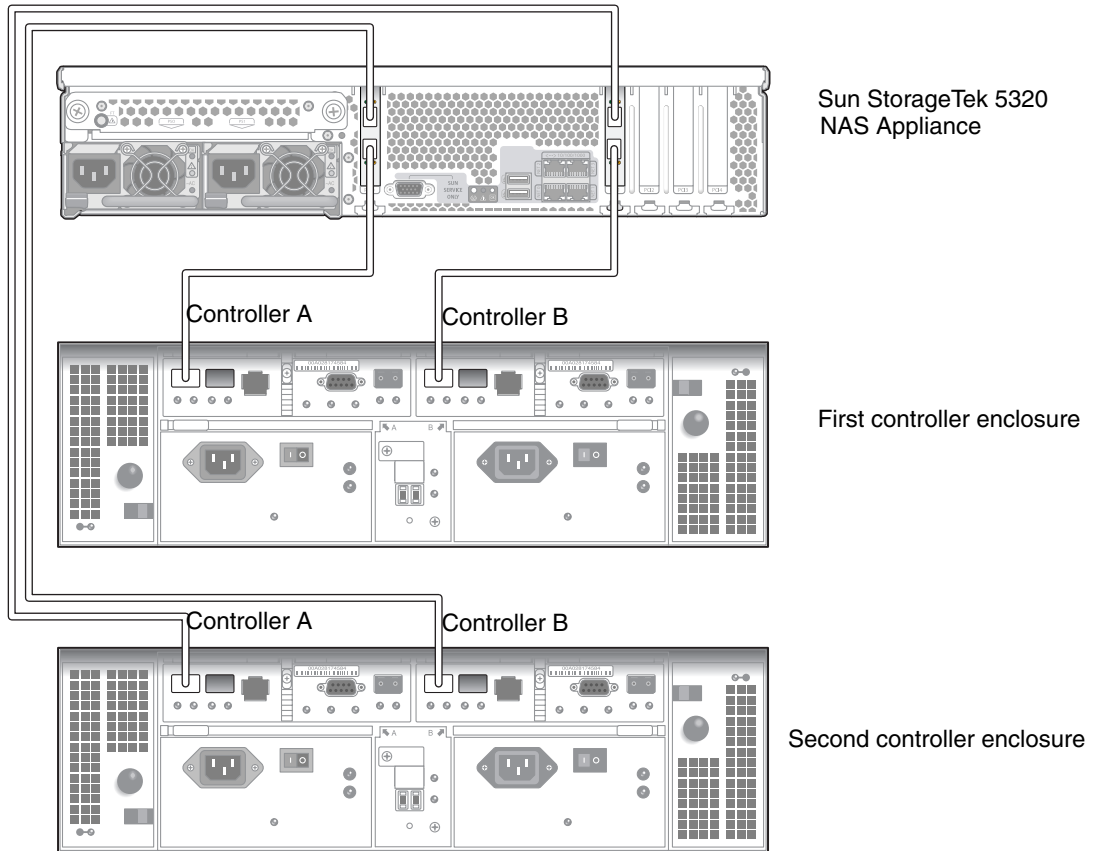


FIGURE 3-4 Connecting the Sun StorageTek 5320 NAS Appliance to Two Controller Enclosures

Connecting Controller Enclosures to Expansion Enclosures

A controller enclosure uses Controller A and Controller B expansion ports to connect to FC-AL ports at the back of an expansion enclosure (FIGURE 3-5).

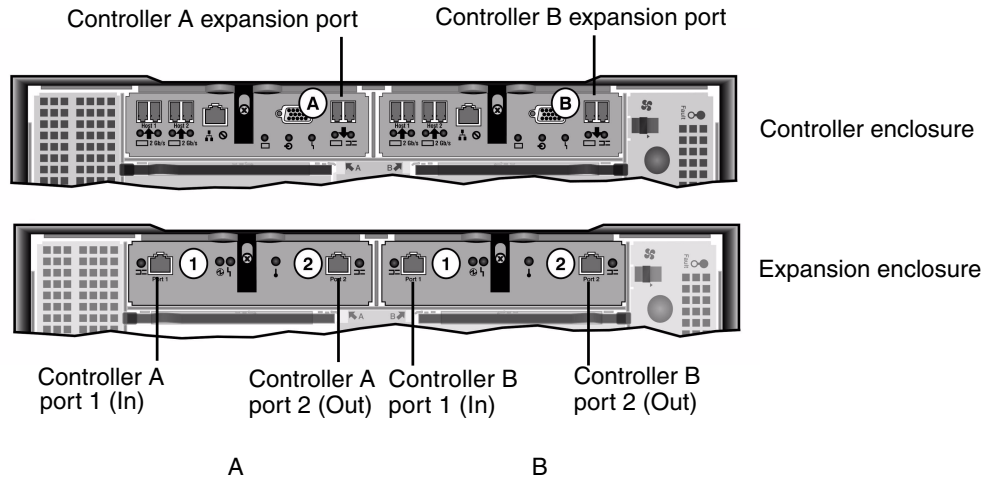


FIGURE 3-5 Controller Enclosure and Expansion Enclosure Ports

The controller enclosures and the expansion enclosures connect with a pair of Active Copper cables. These copper cables have transceiver electronics built into their connector ends. They plug directly into the SFP ports of the controllers and expansion enclosures.

Note – This section contains instructions for connecting controller enclosures and expansion enclosures. These instructions apply to one controller enclosure or to two controller enclosures. If you are using two controller enclosures, follow the same instructions to connect expansion enclosures to *each* controller enclosure.



Caution – One array can contain Fibre Channel disk drives in the controller enclosure and expansion enclosures, and the other array can contain SATA disk drives in the expansion enclosures only. However, you cannot mix EU F (Fibre Channel) and EU S (SATA) expansion enclosures attached to a controller enclosure.

Note – A maximum of seven EU F or eight EU S expansion enclosures can be attached to a controller enclosure.

The cabling differs depending on the number of expansion enclosures you are connecting:

- For one expansion enclosure, refer to [“To Cable a Controller Enclosure to One Expansion Enclosure”](#) on page 60.
- For two expansion enclosures, refer to [“To Cable a Controller Enclosure to Two Expansion Enclosures”](#) on page 61.
- For three expansion enclosures, refer to [“To Cable a Controller Enclosure to Three Expansion Enclosures”](#) on page 62.
- For four to seven expansion enclosures, refer to [“To Cable a Controller Enclosure to Seven Expansion Enclosures”](#) on page 64.

▼ To Cable a Controller Enclosure to One Expansion Enclosure

To connect a controller enclosure and one expansion enclosure, two 2-meter Active Copper cables are required. Refer to [FIGURE 3-6](#).

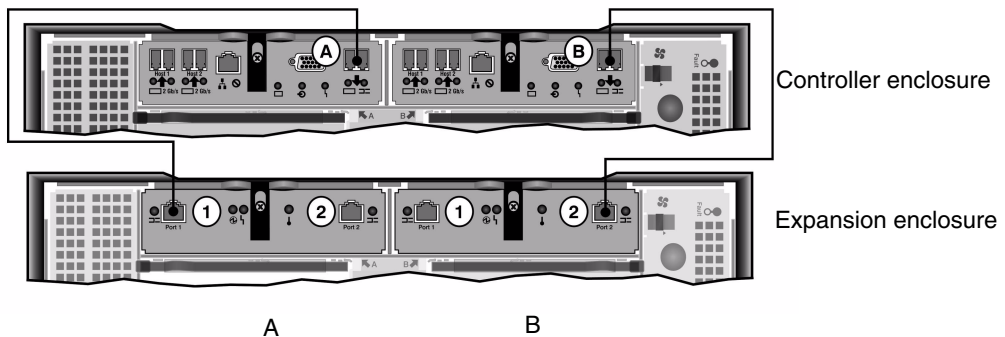


FIGURE 3-6 Controller Enclosure and One Expansion Enclosure Cable Interconnection

1. Connect one Active Copper cable between the A side expansion port of the controller enclosure and the A side port 1 of the expansion enclosure.
2. Connect one Active Copper cable between the B side expansion port of the controller enclosure and the B side port 2 of the expansion enclosure.

Note – The A side port 2 and B side port 1 of the expansion enclosure remain empty.

▼ To Cable a Controller Enclosure to Two Expansion Enclosures

To connect a controller enclosure and two expansion enclosures, four 2-meter Active Copper cables are required. Refer to [FIGURE 3-7](#).

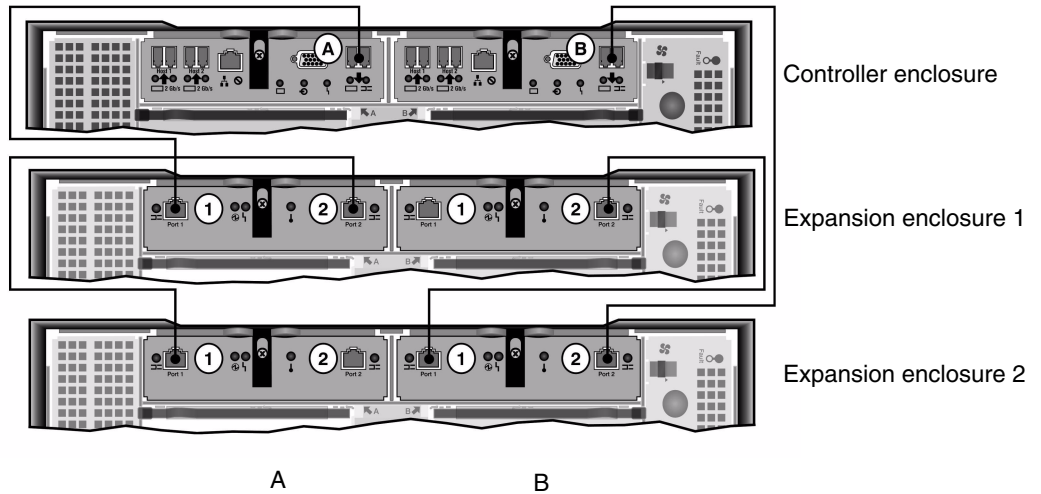


FIGURE 3-7 Controller Enclosure and Two Expansion Enclosures Cable Interconnection



Caution – Do not mix EU F (Fibre Channel) and EU S (SATA) expansion enclosures attached to a controller enclosure.

1. Connect one Active Copper cable between the A side expansion port of the controller enclosure and the A side port 1 of expansion enclosure 1.
2. Connect one Active Copper cable between the A side port 2 of expansion enclosure 1 and the A side port 1 of expansion enclosure 2.
3. Connect one Active Copper cable between the B side expansion port of the controller enclosure and the B side port 2 of expansion enclosure 2.
4. Connect one Active Copper cable between the B side port 1 of expansion enclosure 2 and the B side port 2 of expansion enclosure 1.

Note – The A side port 2 of expansion enclosure 2 and the B side port 1 of expansion enclosure 1 remain empty.

▼ To Cable a Controller Enclosure to Three Expansion Enclosures

To connect a controller enclosure and three expansion enclosures, six 2-meter Active Copper cables are required. Refer to [FIGURE 3-8](#).

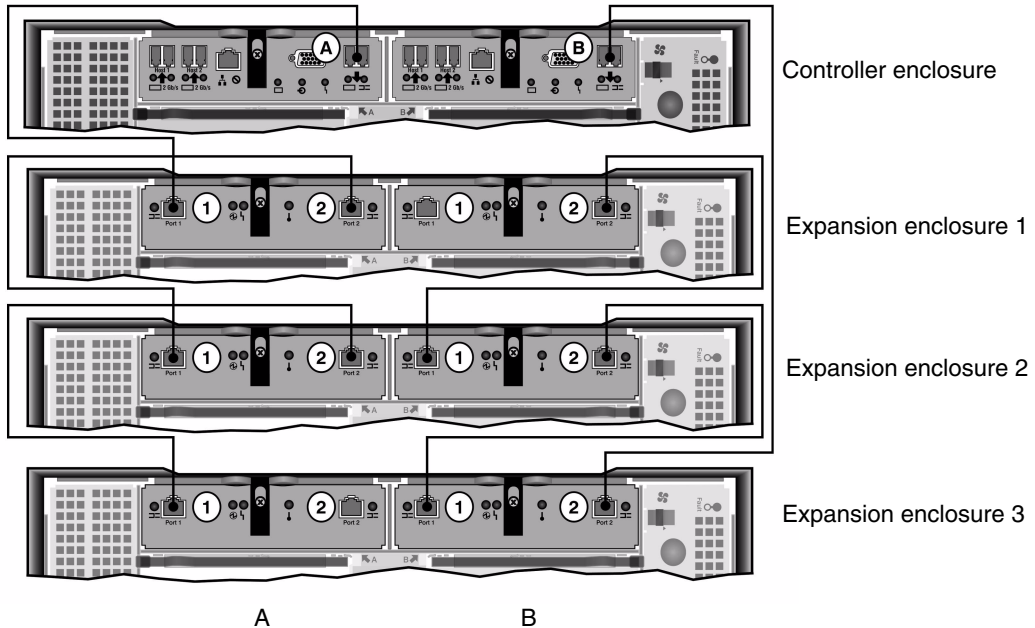


FIGURE 3-8 Controller Enclosure and Three Expansion Enclosures Cable Interconnection



Caution – Do not mix EU F (Fibre Channel) and EU S (SATA) expansion enclosures attached to a controller enclosure.

1. Connect one Active Copper cable between the A side expansion port of the controller enclosure and the A side port 1 of expansion enclosure 1.
2. Connect one Active Copper cable between the A side port 2 of expansion enclosure 1 and the A side port 1 of expansion enclosure 2.
3. Connect one Active Copper cable between the A side port 2 of expansion enclosure 2 and the A side port 1 of expansion enclosure 3.
4. Connect one Active Copper cable between the B side expansion port of the controller enclosure and B side port 2 of expansion enclosure 3.

5. Connect one Active Copper cable between the B side port 1 of expansion enclosure 3 and the B side port 2 of expansion enclosure 2.
6. Connect one Active Copper cable between the B side port 1 of expansion enclosure 2 and the B side port 2 of expansion enclosure 1.

Note – The A side port 2 of expansion enclosure 3 and the B side port 1 of expansion enclosure 1 remain empty.

▼ To Cable a Controller Enclosure to Seven Expansion Enclosures

To connect a controller enclosure and seven expansion enclosures, fourteen 2-meter Active Copper cables are required. Refer to [FIGURE 3-9](#).

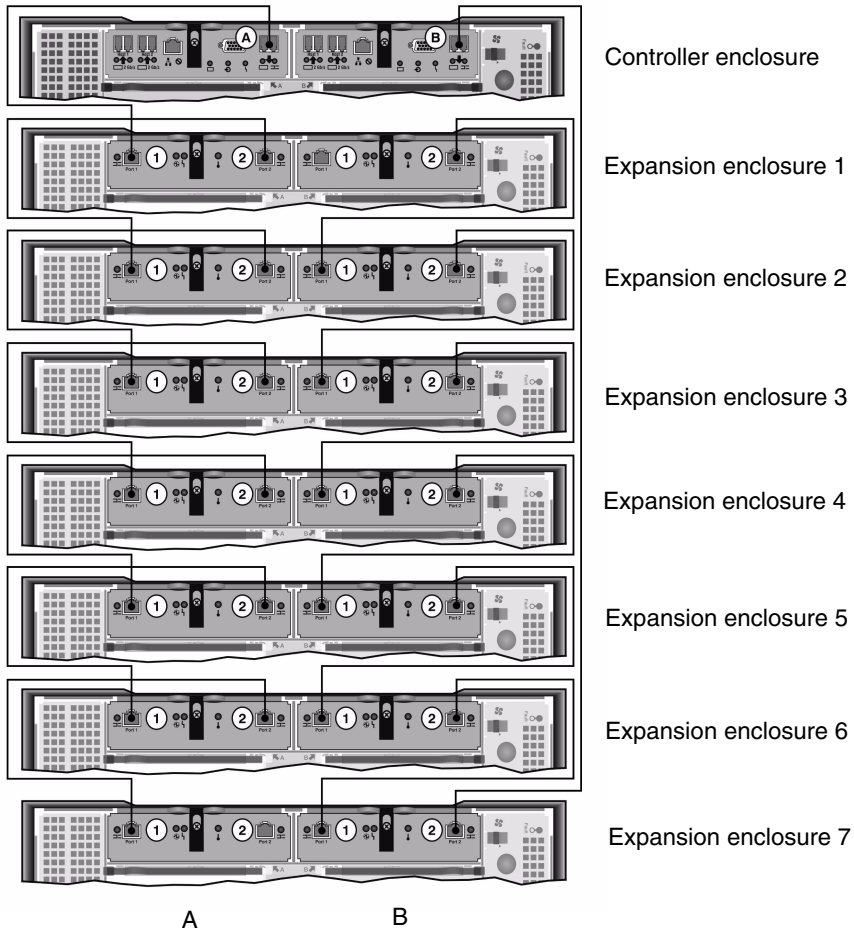


FIGURE 3-9 Controller Enclosure and Seven Expansion Enclosures Cable Interconnection



Caution – Do not mix EU F (Fibre Channel) and EU S (SATA) expansion enclosures attached to a controller enclosure.

1. Connect one Active Copper cable between the A side expansion port of the controller enclosure and the A side port 1 of expansion enclosure 1.

2. Connect one Active Copper cable between the A side port 2 of expansion enclosure 1 and the A side port 1 of expansion enclosure 2.
3. Continue to connect one Active Copper cable between the A side port 2 of each expansion enclosure and the A side port 1 of the expansion enclosure directly below it, until the A sides of all expansion enclosures are interconnected with Active Copper cables.
4. Connect one Active Copper cable between the B side expansion port of the controller enclosure and the B side port 2 of expansion enclosure 7.
5. Connect one Active Copper cable between the B side port 1 of expansion enclosure 7 and the B side port 2 of expansion enclosure 6.
6. Continue to connect one Active Copper cable between the B side port 1 of each expansion enclosure and the B side port 2 of the expansion enclosure directly above it, until the B sides of all expansion enclosures are interconnected with Active Copper cables.

Note – The A side port 2 of expansion enclosure 7 and the B side port 1 of expansion enclosure 1 remain empty.

Connecting to the Network

Use the following procedures to connect the Sun StorageTek 5320 NAS Appliance to the network. The available network connectors depend on your system configuration: Fast Ethernet or optical Gigabit Ethernet. Each configuration is described in the following sections.

▼ To Connect to Copper Fast Ethernet or Gigabit Ethernet Networks

Refer to [FIGURE 3-10](#) for NIC port locations.

1. To connect the Sun StorageTek 5320 NAS Appliance to a 100BASE-T Fast Ethernet network or to a 1000BASE-T Gigabit Ethernet network, connect an RJ-45 unshielded twisted-pair cable from your local area network (LAN) to port NET0 on the back of the Sun StorageTek 5320 NAS Appliance.

2. For additional LAN connections, continue to connect in order: NET1, NET2, and NET3.

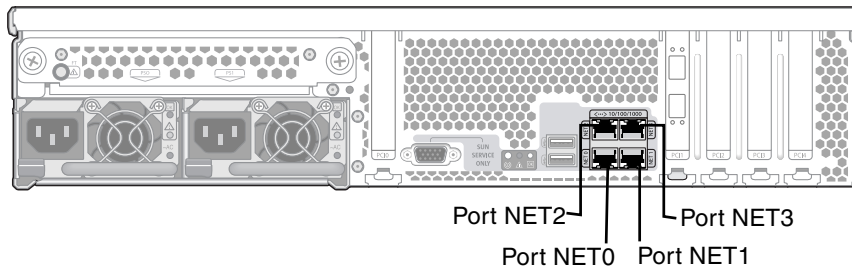


FIGURE 3-10 Connecting to a Fast Ethernet or Gigabit Ethernet Network

▼ To Connect to Optional Optical Gigabit Ethernet Networks

Refer to [FIGURE 3-11](#) for NIC and optical Gigabit Ethernet port locations.

To connect the Sun StorageTek 5320 NAS Appliance to an optical Gigabit Ethernet network, you must have the optional add-in optical Gigabit Ethernet connections.

- **Connect an FC cable from the network to the top (LINK A) and connect another FC cable from the network to the bottom (LINK B) optical Gigabit Ethernet connector on the back of the Sun StorageTek 5320 NAS Appliance.**

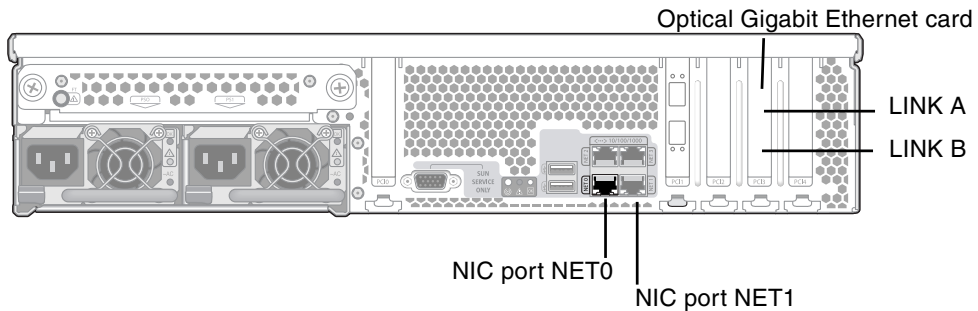


FIGURE 3-11 Connecting to an Optical Gigabit Network

Note – Later, when you configure the system (see [“Initial Sun StorageTek 5320 NAS Appliance Configuration” on page 69](#)), the LINK A port displays as “Port emf3” and the LINK B port displays as “Port emf4.” The NET0 port displays as “Port emc1” and the NET1 port displays as “Port emc2.”

Powering On the Sun StorageTek 5320 NAS Appliance, Controller Enclosures, and Expansion Enclosures



Caution – Always power on the units in the following order:

1. Sun StorEdge 5300 Expansion Enclosures
 2. Sun StorEdge 5300 RAID Controller Enclosures
 3. Sun StorageTek 5320 NAS Appliance
 4. The redundant power supplies and separate power cords provide fault tolerance if properly connected.
-

Note – If you are using a UPS, connect all units to the UPS.



Caution – The expansion enclosures and controller enclosures must always be powered on and properly connected to each other and the main appliance before the Sun StorageTek 5320 NAS Appliance is powered on. The expansion enclosures must be powered on *first*, before the controller enclosures and Sun StorageTek 5320 NAS Appliance. If these instructions are not followed, the system could start slowly.

Note – To achieve fault tolerance, units with two power supplies should receive power from two different AC circuits.



Caution – When you power off the controller enclosures and expansion enclosures, wait five seconds before you power them back on. If you power the units off and on too quickly, unexpected results can occur.

▼ To Power On the Sun StorageTek 5320 NAS Appliance System

1. Verify that all cables between the Sun StorageTek 5320 NAS Appliance, controller enclosures, and expansion enclosures are properly secured according to the instructions in [“Connecting the Sun StorageTek 5320 NAS Appliance to Controller Enclosures”](#) on page 54 and [“Connecting Controller Enclosures to Expansion Enclosures”](#) on page 59.
2. Power on each expansion enclosure by setting the two power supply switches to the On position.
3. Check that all LEDs on the expansion enclosure front panels turn solid green to indicate good operation.
4. Power on each controller enclosure by setting the two power supply switches to the On position.
5. Check that all LEDs on the controller enclosure front panels turn solid green to indicate good operation.
6. Verify that the Sun StorageTek 5320 NAS Appliance is connected to the network.

7. Using a pen tip or similar implement, press the recessed Power button (FIGURE 3-12).

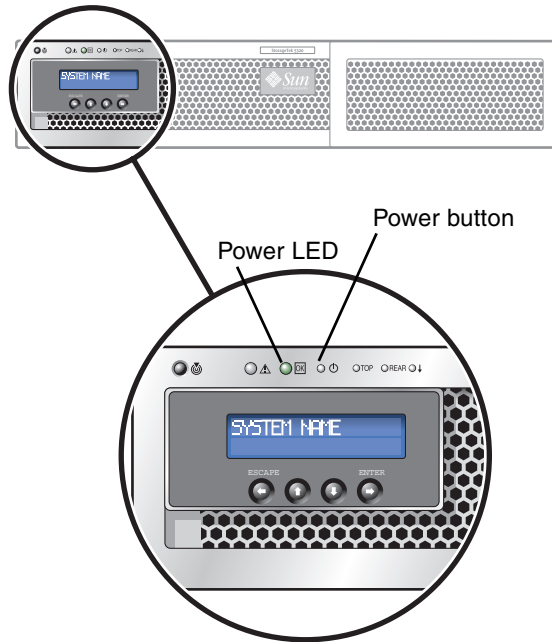


FIGURE 3-12 Power Button and Front Panel Detail

Initial Sun StorageTek 5320 NAS Appliance Configuration

Note – These instructions apply to the Sun StorageTek 5320 NAS Appliance only. For cluster configuration instructions, refer to [Chapter 4](#). For NAS Gateway System or NAS Gateway Cluster System configuration instructions, refer to [Chapter 5](#).

To complete the initial Sun StorageTek 5320 NAS Appliance configuration, you must do the following:

- Provide an IP address
- Access the wizard through the Web Administrator
- Follow the instructions provided by the wizard

IP Address Configuration

To configure the Sun StorageTek 5320 NAS Appliance, you must have an IP address for the system. You can assign an IP address in one of two ways:

- Automatic IP address assignment through a Dynamic Host Configuration Protocol (DHCP) server
- Manual IP address assignment through the Liquid Crystal Display (LCD) panel on the Sun StorageTek 5320 NAS Appliance

Automatic (DHCP) IP Address Configuration

To dynamically acquire an IP address through a DHCP server, you must either have an existing DHCP server on the network or have a DHCP relay agent on the network with an accessible DHCP server on another network. If a DHCP server is not available, you must input the IP address through the LCD panel on the front panel of the Sun StorageTek 5320 NAS Appliance.

Note – If your system uses DHCP to assign Domain Name System (DNS) and Windows Internet Naming Service (WINS) as well as IP and gateway addresses, the corresponding fields in the wizard and Web Administrator screens are dynamically configured. Verify the information when it is presented by the wizard during system configuration.

If your system supports DHCP, the DHCP server automatically assigns an IP address when the Sun StorageTek 5320 NAS Appliance boots for the first time.

Note – To avoid waiting for DHCP discovery, during the boot sequence when the LCD panel displays “DHCP Discovery NIC X”, you can press any key on the LCD panel and confirm the “Abort DHCP?” message by pressing the ENTER button on the panel. Then you can manually set the static IP address using the following instructions.

▼ To Configure the IP Address Manually

If a DHCP server is not available, you must configure the IP address using the LCD panel.

1. **Turn on the Sun StorageTek 5320 NAS Appliance and wait for the boot sequence to complete. The LCD panel displays the following:**

A: Set Static IP

B: Retry DHCP

Note – To avoid waiting for DHCP discovery, during the boot sequence when the LCD panel displays “DHCP Discovery NIC X”, you can press any key on the LCD panel and confirm the “Abort DHCP?” message by pressing the ENTER button on the panel.

2. Press the ENTER button once, and then select A. Network Config.
3. Select A to set Gateway, if needed.
4. Select B to set the port-emc1 that corresponds to NIC port NET0.
5. Enter the following values in the order listed:
 - IP address
 - Subnet mask
 - Broadcast address

To enter data, use the up and down arrow buttons to change digits and press the ENTER button to confirm each digit. The cursor moves to the next digit. Once the last digit is set, press the ENTER button again to proceed to the next network setting. After the broadcast address is set, press the ENTER button to return to the Network Config menu.

Accessing the Web Administrator

Note – Before you can access Web Administrator, you must have connected the Sun StorageTek 5320 NAS Appliance to your network, provided an IP address, and prepared a client browser on the same network as the Sun StorageTek 5320 NAS Appliance.

▼ To Connect to the Web Administrator

When you connect to the Web Administrator for the first time, the Configuration Wizard launches automatically.

1. From a client on the same network, open a web browser and type the IP address of the Sun StorageTek 5320 NAS Appliance in the address or location field, for example:

http://123.111.78.99

Press Enter.

Note – If you are using a proxy server and have trouble connecting, try enabling the browser option to bypass the proxy server for local addresses. See your browser’s online help or documentation for more information.

The Web Administrator GUI for the Sun StorageTek 5320 NAS Appliance appears in your browser with a login screen.

Note – After you reach the login screen, you might want to bookmark it or add it to your Favorites list so that you do not have to remember the IP address in the future.

2. On the Web Admin login screen, click Apply.

The password can be set later. Refer to the *Sun StorageTek 5320 NAS Appliance and Gateway System Administration Guide*.

3. On the System Operations, Set Time and Date panel, select the date, the time, and the time zone, and click Apply. Then click Yes to confirm.

This sets the secure clock to the same time and date. Make sure you set the time and date accurately as you can set the secure clock only once.

4. Accept the license agreement to start the Configuration wizard.

If you decline, Web Administrator returns you to the main login screen.

5. Follow the on-screen prompts, entering information as requested.

For more detailed descriptions of the wizard screens, refer to the *Sun StorageTek 5320 NAS Appliance and Gateway System Administration Guide*.

6. If your system uses DHCP to assign DNS, WINS, or IP and gateway addresses, these fields are automatically configured. When you reach these screens in the wizard, verify the information, and then continue with the wizard.

Note – When adding your DNS server, click Add to ensure the DNS server has been added.

7. On the Confirmation screen, review the configuration information you have added.

Note – Be sure the configuration information is accurate before continuing.

8. Click Finish on the wizard Confirmation screen.

The system configures the settings and indicates that in the Save Configuration screen.

9. Click Close on the Save Configuration screen.

10. Use Web Admin to configure file systems.

Refer to the *Sun StorageTek 5320 NAS Appliance and Gateway System Administration Guide* for information on creating file systems.

Note – The boot sequence log is located in the bootlog, under `/cvol/log`. The log that the Web Admin GUI displays is a running log that can overflow. If you want to save the entire log, you can set up a local log. See the *Sun StorageTek 5320 NAS Appliance and Gateway Administration Guide* for information about initial setup tasks, including setting up a local log.

Installing the Sun StorageTek 5320 NAS Cluster Appliance

This chapter provides comprehensive instructions for connecting the Sun StorageTek 5320 NAS Cluster Appliance, the Sun StorEdge 5300 RAID Controller Enclosures (CUs), and the optional Sun StorEdge 5300 Expansion Enclosures (EUs). It also provides initial configuration instructions for the system.

Note – The Sun StorageTek 5320 NAS Cluster Appliance ships with the operating system installed.

Note – This chapter contains Sun StorageTek 5320 NAS Cluster Appliance connection and configuration instructions only. If you are connecting a different system, refer to the appropriate chapter.

This chapter contains the following sections:

- [“Before You Begin” on page 76](#)
- [“Connecting the Sun StorageTek 5320 NAS Cluster Appliance to Back-End Storage” on page 76](#)
- [“Connecting the Server Health-Monitoring and Network Cables” on page 88](#)
- [“Powering On the Sun StorageTek 5320 NAS Cluster Appliance, Controller Enclosures, and Expansion Enclosures” on page 90](#)
- [“Initial Sun StorageTek 5320 NAS Cluster Appliance Configuration” on page 93](#)

Before You Begin

Before connecting the system, you must install the units in the rack. Refer to [“Installing Servers and Back-End Storage” on page 11](#) for rackmount instructions.

Connecting the Sun StorageTek 5320 NAS Cluster Appliance to Back-End Storage

This section describes how to cable the Sun StorageTek 5320 NAS Cluster Appliance to the controller enclosures and the controller enclosure to the optional expansion enclosures for several different configurations.

This section includes the following tasks:

- [“Connecting the Sun StorageTek 5320 NAS Cluster Appliance to Controller Enclosures” on page 76](#)
- [“Connecting the Controller Enclosures to Expansion Enclosures” on page 81](#)

Connecting the Sun StorageTek 5320 NAS Cluster Appliance to Controller Enclosures

The Sun StorageTek 5320 NAS Cluster Appliance and the controller enclosures (CUs) each connect with a pair of optical fiber cables. Optical SFP transceivers have been installed in the controller enclosures' host ports to interface with the optical fiber cable's LC connectors. Refer to [FIGURE 4-1](#) for port locations.

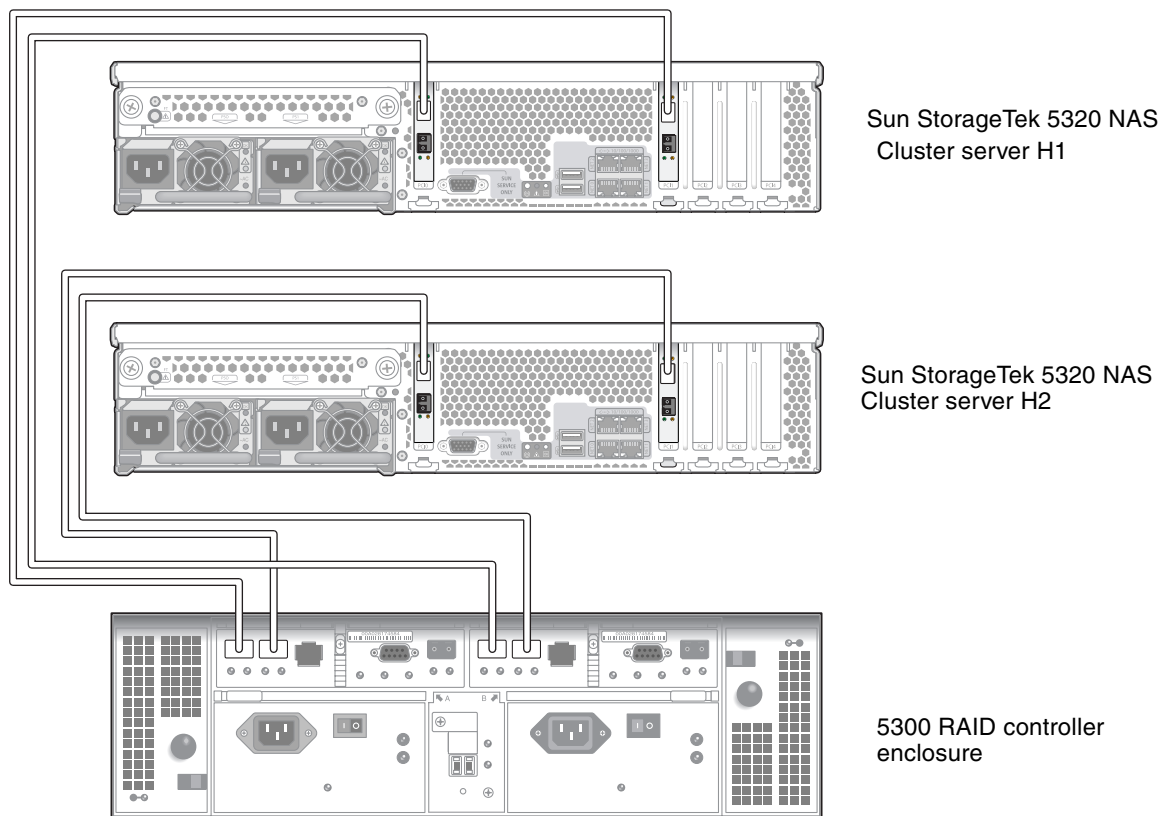


FIGURE 4-1 Sun StorageTek 5320 NAS Cluster Appliance HBA Cards and Controller Enclosure Ports

Note – HBA cards are inserted only in the far left on the low-profile riser assembly of the Sun StorageTek 5320 NAS Cluster Appliance.

This section contains details on the following:

- [“To Connect One Controller Enclosure” on page 77](#)
- [“To Connect Two Controller Enclosures” on page 78](#)

▼ To Connect One Controller Enclosure

Use the instructions in this section if you are connecting one controller enclosure to the Sun StorageTek 5320 NAS Cluster Appliance.

1. Connect the HBA port 1 of the first HBA card on the Sun StorageTek 5320 NAS Cluster Appliance server H1 to the Controller A host 1 port.
2. Connect the HBA port 1 of the second HBA card on the Sun StorageTek 5320 NAS Cluster Appliance server H1 to the Controller B host 1 port.
3. Connect the HBA port 1 of the first HBA card on the Sun StorageTek 5320 NAS Cluster Appliance server H2 to the Controller A host 2 port.
4. Connect the HBA port 1 of the second HBA card on the Sun StorageTek 5320 NAS Cluster Appliance server H2 to the Controller B host 2 port.

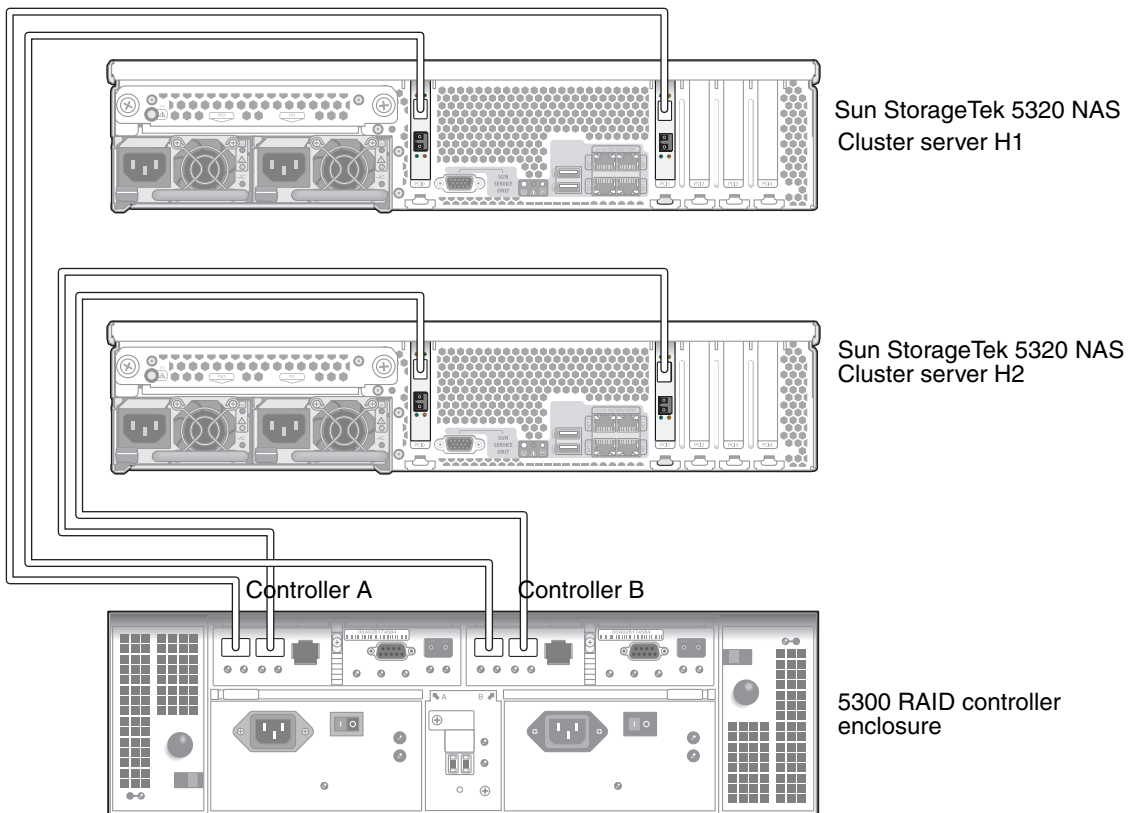


FIGURE 4-2 Connecting Pairs of HBA Cards to One Controller Enclosure

▼ To Connect Two Controller Enclosures

Use the instructions in this section and refer to [FIGURE 4-3](#) and [FIGURE 4-4](#) if you are connecting two controller enclosures to the Sun StorageTek 5320 NAS Cluster Appliance.



Caution – One array can contain Fibre Channel disk drives in the controller enclosure and expansion enclosures and the other array can contain SATA disk drives in the expansion enclosures only. However, you cannot mix EU F (Fibre Channel) and EU S (SATA) expansion enclosures attached to a controller enclosure.

1. Connect the HBA port 2 of the first HBA card on the Sun StorageTek 5320 NAS Cluster Appliance server H1 to the Controller A host 1 port on the first controller enclosure.
2. Connect the HBA port 1 of the first HBA card on the Sun StorageTek 5320 NAS Cluster Appliance server H1 to the Controller B host 1 port on the second controller enclosure.
3. Connect the HBA port 2 of the second HBA card on the Sun StorageTek 5320 NAS Cluster Appliance server H1 to the Controller B host 1 port on the first controller enclosure.

4. Connect the HBA port 1 of the second HBA card on the Sun StorageTek 5320 NAS Cluster Appliance server H1 to the Controller A host 1 port on the second controller enclosure.

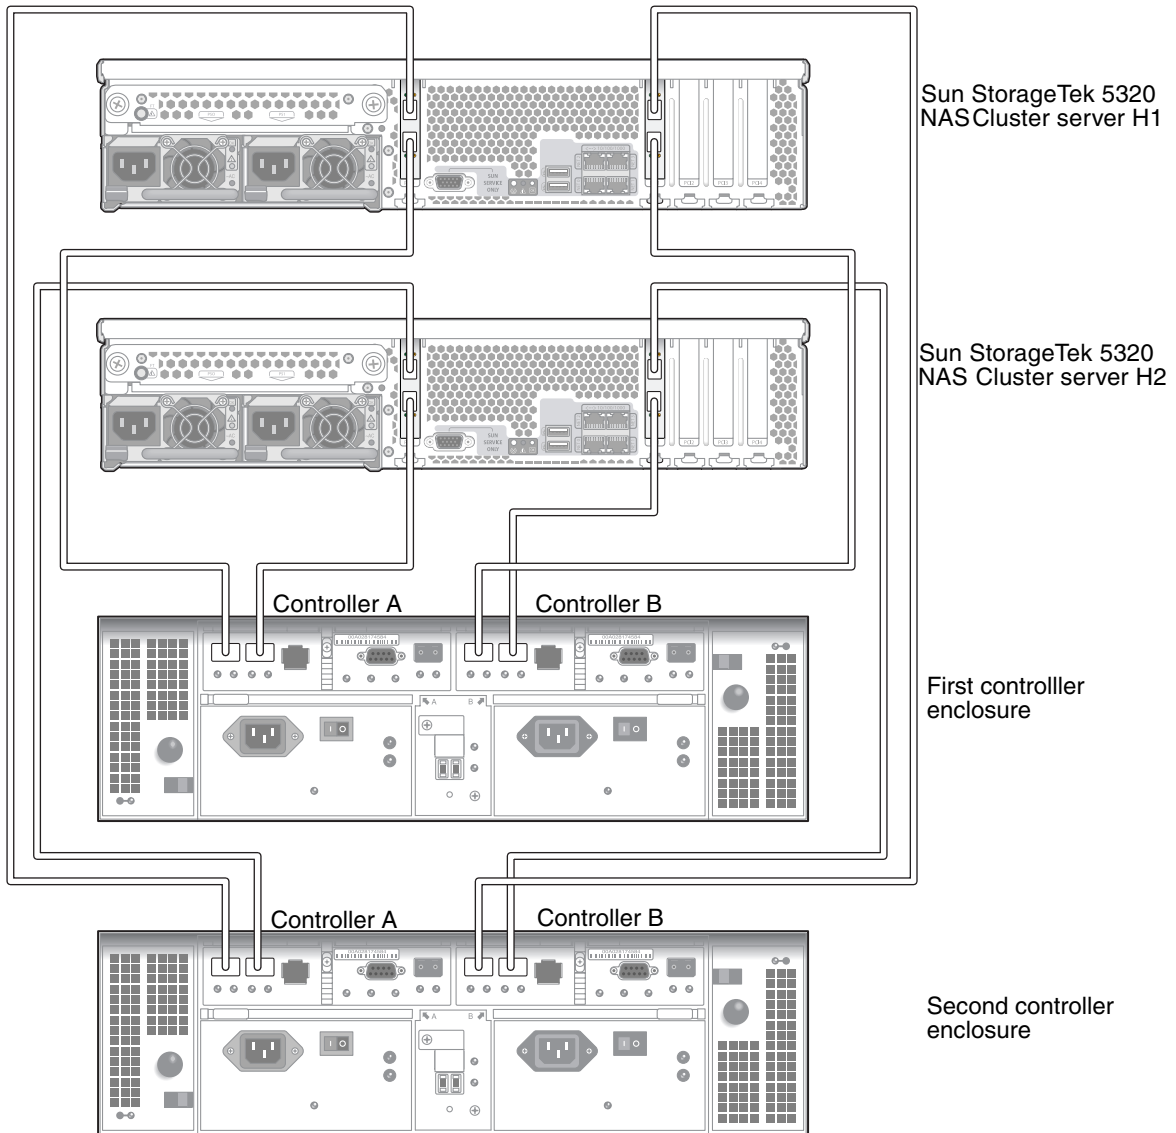


FIGURE 4-3 Connecting the Sun StorageTek 5320 NAS Cluster Appliance to Two Controller Enclosures

5. Connect the HBA port 2 of the first HBA card on the Sun StorageTek 5320 NAS Cluster Appliance server H2 to the Controller A host 2 port on the first controller enclosure.
6. Connect the HBA port 1 of the first HBA card on the Sun StorageTek 5320 NAS Cluster Appliance server H2 to the Controller B host 2 port on the second controller enclosure.
7. Connect the HBA port 2 of the second HBA card on the Sun StorageTek 5320 NAS Cluster Appliance server H2 to the Controller B host 2 port on the first controller enclosure.
8. Connect the HBA port 1 of the second HBA card on the Sun StorageTek 5320 NAS Cluster Appliance server H2 to the Controller A host 2 port on the second controller enclosure.

Connecting the Controller Enclosures to Expansion Enclosures

Each controller enclosure uses Controller A and Controller B expansion ports to connect to FC-AL ports at the back of an expansion enclosure (FIGURE 4-4).

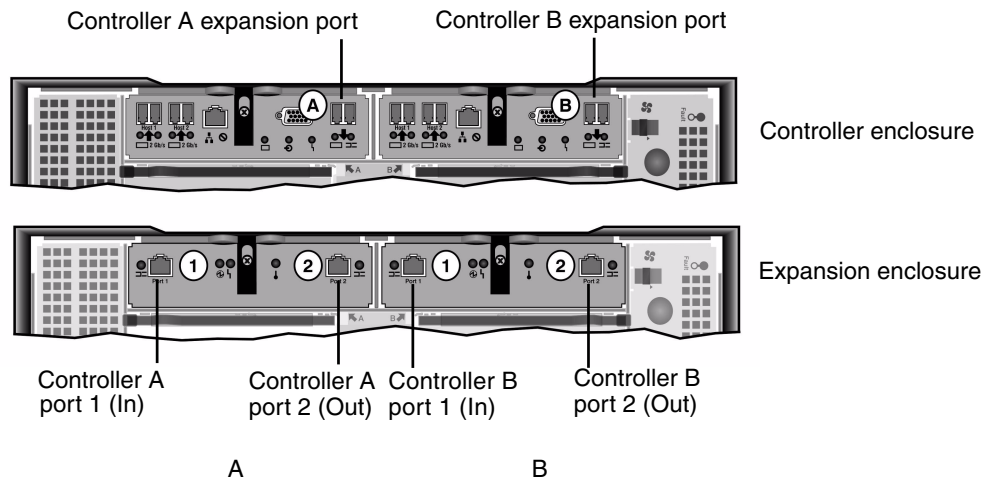


FIGURE 4-4 Controller Enclosure and Expansion Enclosure Ports

The controller enclosures and the expansion enclosures connect with a pair of Active Copper cables. These copper cables have transceiver electronics built into their connector ends. They plug directly into the SFP ports of the controllers and expansion enclosures.

Note – This section contains instructions for connecting controller enclosures and expansion enclosures. These instructions apply to one controller enclosure or to two controller enclosures. If you are using two controller enclosures, follow the same instructions to connect expansion enclosures to *each* controller enclosure.



Caution – One array can contain Fibre Channel disk drives in the controller enclosure and expansion enclosures and the other array can contain SATA disk drives in the expansion enclosures only. However, you cannot mix EU F (Fibre Channel) and EU S (SATA) expansion enclosures attached to a controller enclosure.

Note – A maximum of seven EU F or eight EU S expansion enclosures can be attached to a controller enclosure.

The cabling differs depending on the number of expansion enclosures you are connecting:

- For one expansion enclosure, refer to [“To Cable a Controller Enclosure to One Expansion Enclosure” on page 82](#).
- For two expansion enclosures, refer to [“To Cable a Controller Enclosure to Two Expansion Enclosures” on page 83](#).
- For three expansion enclosures, refer to [“To Cable a Controller Enclosure to Three Expansion Enclosures” on page 84](#).
- For four to seven expansion enclosures, refer to [“To Cable a Controller Enclosure to Seven Expansion Enclosures” on page 86](#).

▼ To Cable a Controller Enclosure to One Expansion Enclosure

To connect a controller enclosure and one expansion enclosure, two 2-meter Active Copper cables are required. Refer to [FIGURE 4-5](#).

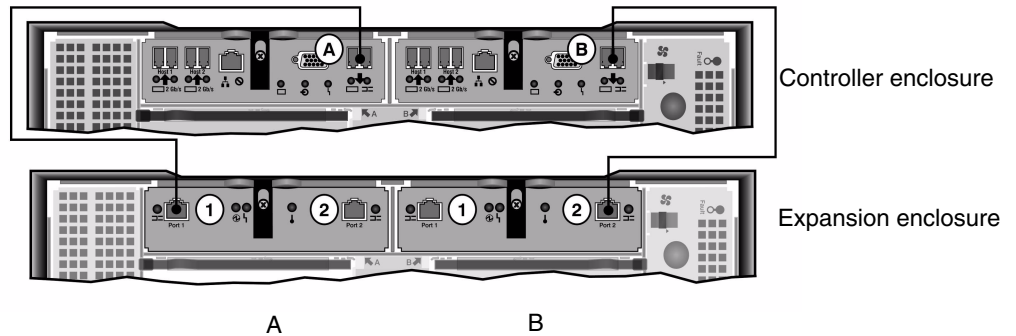


FIGURE 4-5 Controller Enclosure and One Expansion Enclosure Cable Interconnection

1. Connect one Active Copper cable between the A side expansion port of the controller enclosure and the A side port 1 of the expansion enclosure.
2. Connect one Active Copper cable between the B side expansion port of the controller enclosure and the B side port 2 of the expansion enclosure.

Note – The A side port 2 and B side port 1 of the expansion enclosure remain empty.

▼ To Cable a Controller Enclosure to Two Expansion Enclosures

To connect a controller enclosure and two expansion enclosures, four 2-meter Active Copper cables are required. Refer to [FIGURE 4-6](#).

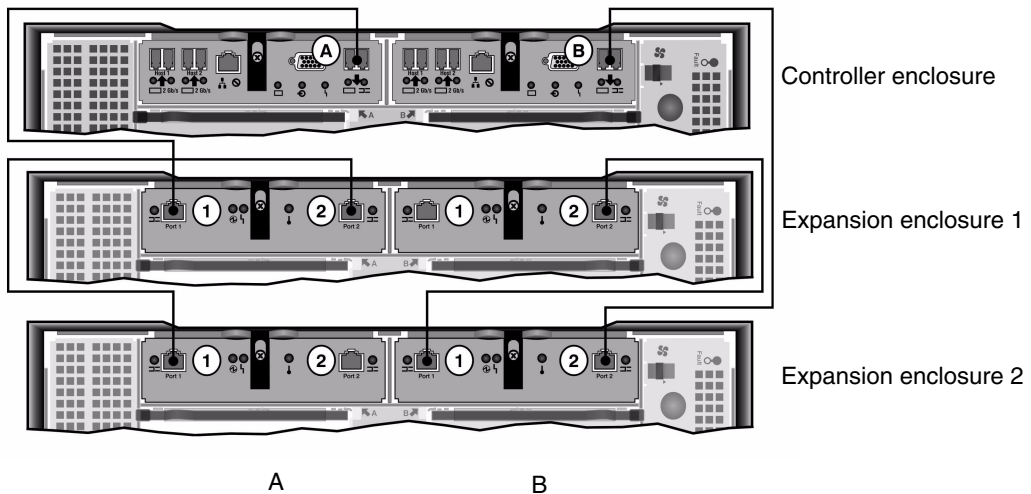


FIGURE 4-6 Controller Enclosure and Two Expansion Enclosures Cable Interconnection



Caution – Do not mix EU F (Fibre Channel) and EU S (SATA) expansion enclosures attached to a controller enclosure.

1. Connect one Active Copper cable between the A side expansion port of the controller enclosure and the A side port 1 of expansion enclosure 1.
2. Connect one Active Copper cable between the A side port 2 of expansion enclosure 1 and the A side port 1 of expansion enclosure 2.
3. Connect one Active Copper cable between the B side expansion port of the controller enclosure and the B side port 2 of expansion enclosure 2.
4. Connect one Active Copper cable between the B side port 1 of expansion enclosure 2 and the B side port 2 of expansion enclosure 1.

Note – The A side port 2 of expansion enclosure 2 and the B side port 1 of expansion enclosure 1 remain empty.

▼ To Cable a Controller Enclosure to Three Expansion Enclosures

To connect a controller enclosure and three expansion enclosures, six 2-meter Active Copper cables are required. Refer to [FIGURE 4-7](#).

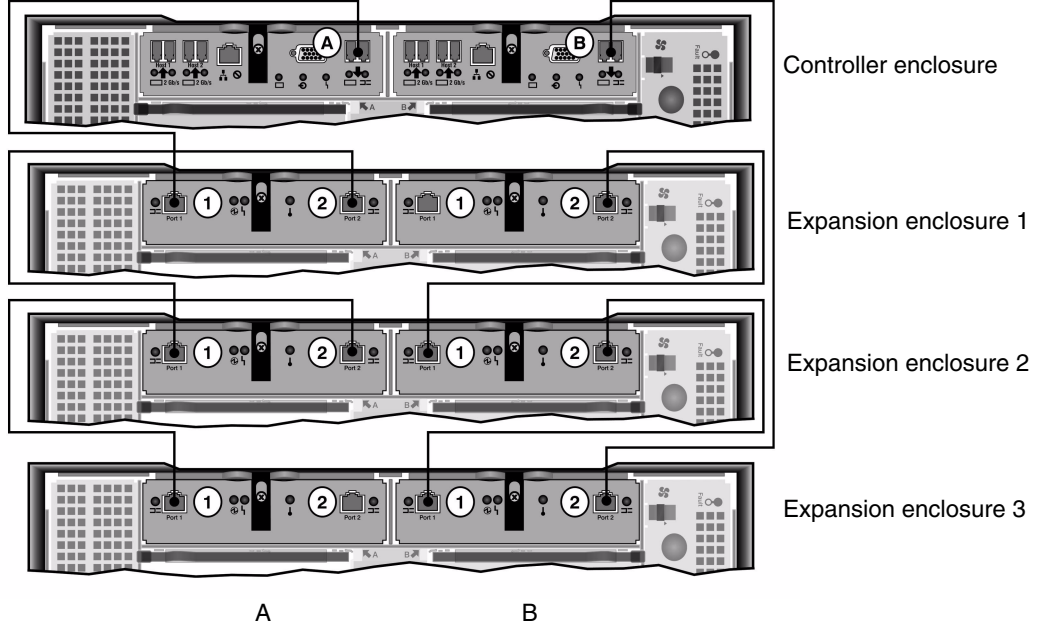


FIGURE 4-7 Controller Enclosure and Three Expansion Enclosures Cable Interconnection



Caution – Do not mix EU F (Fibre Channel) and EU S (SATA) expansion enclosures attached to a controller enclosure.

1. Connect one Active Copper cable between the A side expansion port of the controller enclosure and the A side port 1 of expansion enclosure 1.
2. Connect one Active Copper cable between the A side port 2 of expansion enclosure 1 and the A side port 1 of expansion enclosure 2.
3. Connect one Active Copper cable between the A side port 2 of expansion enclosure 2 and the A side port 1 of expansion enclosure 3.
4. Connect one Active Copper cable between the B side expansion port of the controller enclosure and B side port 2 of expansion enclosure 3.
5. Connect one Active Copper cable between the B side port 1 of expansion enclosure 3 and the B side port 2 of expansion enclosure 2.
6. Connect one Active Copper cable between the B side port 1 of expansion enclosure 2 and the B side port 2 of expansion enclosure 1.

Note – The A side port 2 of expansion enclosure 3 and the B side port 1 of expansion enclosure 1 remain empty.

▼ **To Cable a Controller Enclosure to Seven Expansion Enclosures**

To connect a controller enclosure and seven expansion enclosures, fourteen 2-meter Active Copper cables are required. Refer to [FIGURE 4-8](#).

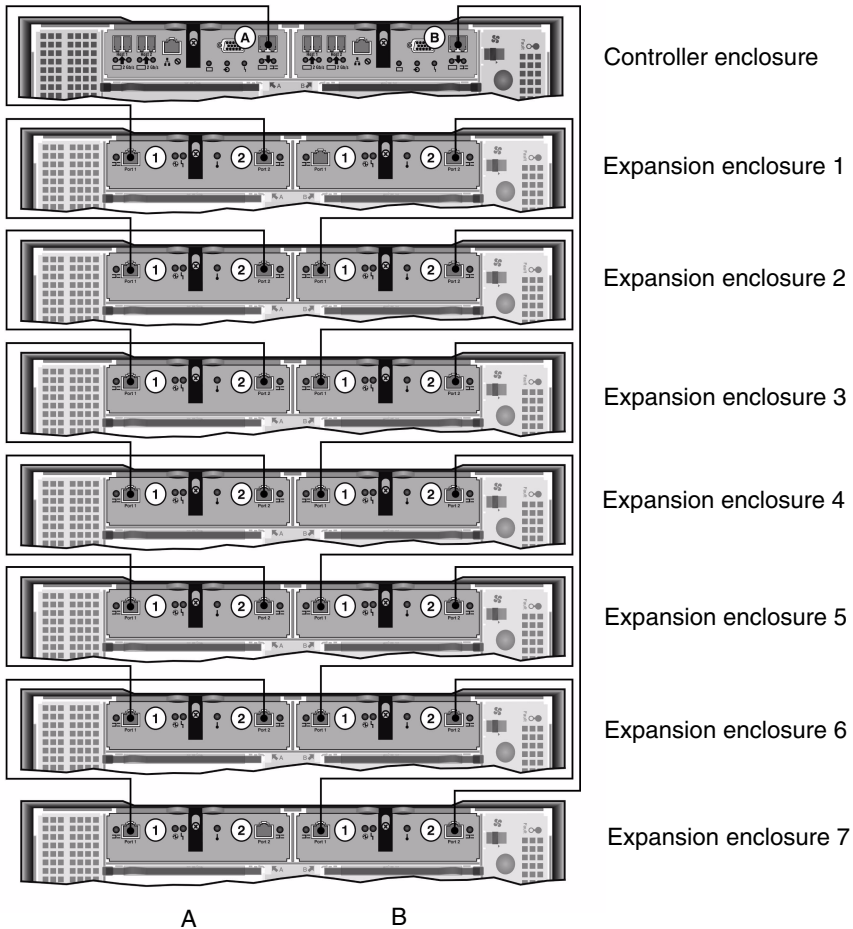


FIGURE 4-8 Controller Enclosure and Seven Expansion Enclosures Cable Interconnection



Caution – Do not mix EU F (Fibre Channel) and EU S (SATA) expansion enclosures attached to a controller enclosure.

1. Connect one Active Copper cable between the A side expansion port of the controller enclosure and the A side port 1 of expansion enclosure 1.
2. Connect one Active Copper cable between the A side port 2 of expansion enclosure 1 and the A side port 1 of expansion enclosure 2.
3. Continue to connect one Active Copper cable between the A side port 2 of each expansion enclosure and the A side port 1 of the expansion enclosure directly below it, until the A sides of all expansion enclosures are interconnected with Active Copper cables.
4. Connect one Active Copper cable between the B side expansion port of the controller enclosure and the B side port 2 of expansion enclosure 7.
5. Connect one Active Copper cable between the B side port 1 of expansion enclosure 7 and the B side port 2 of expansion enclosure 6.
6. Continue to connect one Active Copper cable between the B side port 1 of each expansion enclosure and the B side port 2 of the expansion enclosure directly above it, until the B sides of all expansion enclosures are interconnected with Active Copper cables.

Note – The A side port 2 of expansion enclosure 7 and the B side port 1 of expansion enclosure 1 remain empty.

Connecting the Server Health-Monitoring and Network Cables

Each server in a Sun StorageTek 5320 NAS Cluster Appliance uses a dedicated Ethernet connection to communicate with its partner and perform periodic “health checks.” The port used for the health check connection is referred to as the *heartbeat port*. The NET0 Gigabit Ethernet port is used for the heartbeat.

The Sun StorageTek 5320 NAS Cluster Appliance is commonly configured with two Gigabit Ethernet cards (FIGURE 4-9).

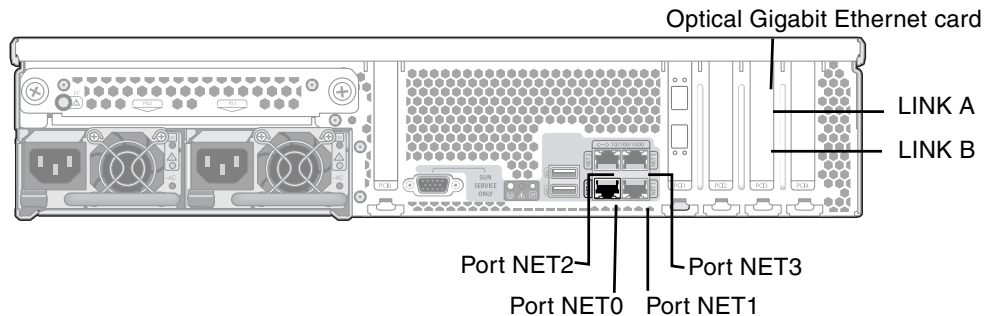


FIGURE 4-9 Connecting to an Optical Gigabit Ethernet Network

▼ To Connect the Health-Monitoring Cable

- Use a Cat5 Ethernet cable to connect the two servers’ NET0 heartbeat ports.

▼ To Connect to Optical Gigabit Ethernet Networks

You must have a second optical Gigabit Ethernet card installed.

- Connect an FC cable from the network to the top (LINK A) and connect another FC cable from the network to the bottom (LINK B) optical Gigabit Ethernet connector on the back of each of the Sun StorageTek 5320 NAS Cluster Appliance servers.

Later, when you configure the system (see [“Initial Sun StorageTek 5320 NAS Cluster Appliance Configuration”](#) on page 93), the ports will be identified on the LCD as shown in [TABLE 4-1](#).

TABLE 4-1 Port Identification

Port	Display Identification
H2 LINK A	Port emf5
H2 LINK B	Port emf6
NET0	Port emc1
NET1	Port emc2
NET2	Port emc3
NET3	Port emc4

▼ To Connect to Copper Fast Ethernet or Gigabit Ethernet Networks

If your system is configured for Fast Ethernet or Gigabit Ethernet networking, refer to [FIGURE 4-9](#) for NIC port locations.

- **To connect the Sun StorageTek 5320 NAS Cluster Appliance to a Fast Ethernet or Gigabit Ethernet network, connect an RJ-45 unshielded twisted-pair cable from your local area network (LAN) to the NET1 port on the back of each of the Sun StorageTek 5320 NAS Cluster Appliance servers. For additional LAN connections, continue to connect in order: NET2 and NET3.**

Powering On the Sun StorageTek 5320 NAS Cluster Appliance, Controller Enclosures, and Expansion Enclosures



Caution – Always power on the units in the following order:

1. Sun StorEdge 5300 Expansion Enclosures
 2. Sun StorEdge 5300 RAID Controller Enclosures
 3. Sun StorageTek 5320 NAS Cluster Appliance server H1 (Server H2 will power up during the configuration process.)
-

Note – If you are using a UPS, connect all units to the UPS.

Power on the expansion enclosures first, followed by controller enclosures, and then the Sun StorageTek 5320 NAS Cluster Appliance. The redundant power supplies and separate power cords provide fault tolerance if properly connected.



Caution – The expansion enclosures and controller enclosures must always be powered on and properly connected to each other and the Sun StorageTek 5320 NAS Cluster Appliance before the Sun StorageTek 5320 NAS Cluster Appliance. The expansion enclosures must be powered on *first*, before the controller enclosures and Sun StorageTek 5320 NAS Cluster Appliance. If these instructions are not followed, the system could start slowly.

Note – To achieve fault tolerance, units with two power supplies should receive power from two different AC circuits.



Caution – When you power off the controller enclosures and expansion enclosures, wait five seconds before you power them back on. If you power the units off and on too quickly, unexpected results can occur.

▼ To Power On the Sun StorageTek 5320 NAS Cluster Appliance System

1. Verify that all cables between the Sun StorageTek 5320 NAS Cluster Appliance, controller enclosures, and expansion enclosures are properly secured according to the instructions in [“Connecting the Sun StorageTek 5320 NAS Cluster Appliance to Controller Enclosures”](#) on page 76 and [“Connecting the Controller Enclosures to Expansion Enclosures”](#) on page 81.
2. Verify that the Cat5 Ethernet cable is connected between the heartbeat ports according to the instructions in [“Connecting the Server Health-Monitoring and Network Cables”](#) on page 88.
3. Power on each expansion enclosure by setting the two power supply switches to the On position.
4. Check that all LEDs on the expansion enclosure front panels turn solid green to indicate good operation.

Note – If the expansion enclosure contains SATA disk drives, only the Power LED turns solid green. The drive LEDs turn solid green only after the controller enclosure is powered on.

5. Power on each controller enclosure by setting the two power supply switches to the On position.
6. Check that all LEDs on the controller enclosure front panels turn solid green to indicate good operation.
7. Verify that the Sun StorageTek 5320 NAS Cluster Appliance is connected to the network.

Note – Power up and configure one server at a time.

8. Power on the server H1 (software serial number ending in “-H1”) by using a pen tip or similar implement to press the recessed Power button (FIGURE 4-10).

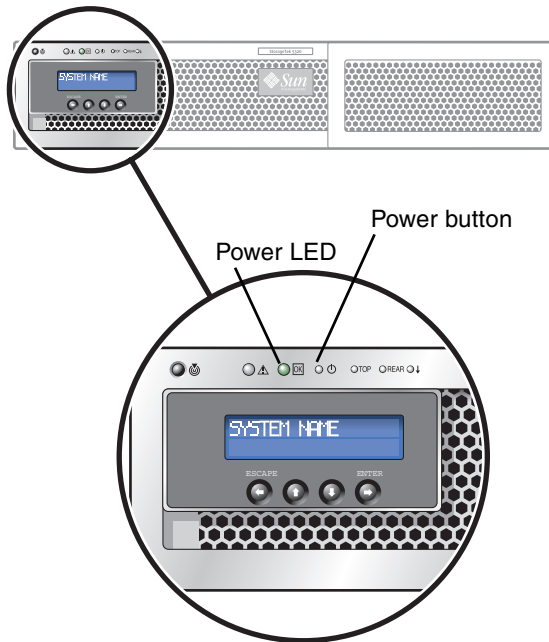


FIGURE 4-10 Power Button and Front Panel Detail



Caution – Do not power up server H2 until directed in the instructions that follow.

9. Verify server H1 has completed booting up: the LCD should display “QUIET.”
10. To complete the power-on sequence, continue with the next section, [“Initial Sun StorageTek 5320 NAS Cluster Appliance Configuration”](#) on page 93.

Initial Sun StorageTek 5320 NAS Cluster Appliance Configuration

Note – These instructions apply to the Sun StorageTek 5320 NAS Cluster Appliance only. For Sun StorageTek 5320 NAS Appliance configuration instructions, refer to [Chapter 3](#). For Sun StorageTek 5320 NAS Gateway System and NAS Gateway Cluster System configuration instructions, refer to [Chapter 5](#).

To complete the initial Sun StorageTek 5320 NAS Cluster Appliance configuration, you must specify the following:

- IP addresses
- Basic configuration information
- Failover configuration information
- LUN ownership
- LUN paths

▼ To Set IP Addresses

You assign a static IP address using the server H1's LCD panel:

1. **Select Menu.**
2. **Select A. Network Config.**
3. **Select A. Set Gateway and enter the gateway address.**
4. **Select C. Set Port-emc2 and enter the IP address, subnet mask, and broadcast address as prompted.**

This IP address information is assigned to the first regular (non-heartbeat) LAN port, emc2, on your system.



Caution – Do not change the private IP address on the network port that is used for the HB Port (heartbeat port).

5. **Select Escape twice to return to the main menu.**

Note – If you would like to verify your settings on the LCD panel, HB Port shows a private IP address, and Port emc2 (the first regular LAN port) shows the information you just entered.

You can edit the port information and assign addresses to other ports in the same way.

6. **From server H1's LCD menu, select C. Take All LUNs and press the ENTER button.**
7. **When prompted to "take all LUNs," press the up arrow button to select "Yes," and press the ENTER or right arrow button to start taking LUNs.**
The LCD displays "Taking LUNs" followed by a message "Took *n* LUNs." After a few seconds, the display returns to the Network Config menu.
8. **Select Escape to return to the main menu.**
Server H1 is now in the ALONE state.
9. **Power on the server H2 (software serial number ending in "-H2") by pressing the recessed Power button.**
10. **Wait until server H2's LCD display status is QUIET.**
11. **Use the instructions in [Step 1](#) through [Step 5](#) to assign server H2's IP address and gateway address.**

▼ To Configure the System

To configure the system using the Web Admin application, follow these instructions:

1. **From a client on the same network, open a Java platform-enabled web browser with Java Plug-in and enter the IP address for server H1.**
2. **Accept the "Applet Security Certificate" and wait until the Web Admin applet is loaded on this system.**
3. **On the Web Admin login screen, click Apply.**
The password can be set later. Refer to the *Sun StorageTek 5320 NAS Appliance and Gateway System Administration Guide*.
4. **On the Set Time and Date panel, select the date, the time, and the time zone, and click Apply. Then click Yes to confirm.**
This sets the secure clock to the same time and date. Make sure you set the time and date accurately as you can set the secure clock only once.

5. Read the license agreement in the Configuration wizard dialog box, and click **Accept**.
6. Click **Next** in the Welcome dialog box, and proceed with the following steps:
 - a. From the Select Environment screen, configure Windows, UNIX, or both environments, and click **Next** to continue.
 - b. From the Set Server Name screen, type the server name and populate the other fields accordingly, and then click **Next**.
 - c. From the Enable Failover screen, select **Automatic Failover** and **Enable Link Failover**.

A default value of 60 seconds is assigned in both the Down Timeout and Restore Timeout fields.
 - d. Type the **Partner Configuration Name** and the **Gateway IP address** for server H2 (Partner Name factory default is "head2"), and click **Apply**.

The information you enter here is used to start server H2. The Partner Name is the host name you want to assign to server H2. Any network information server H2 obtained manually through the LCD panel is displayed here and can be corrected, if necessary.

The field for Private IP should already be populated and should not be changed.
 - e. Click **Next**.
 - f. On the **Configure Network Adapters** screen, verify that the information is correct.

You can configure additional network interfaces at this time. However, if you change the configuration of the port to which the browser is attached, the browser session is disconnected.
 - g. Click **Next** to continue.
 - h. On the **Set Gateway Address** screen, verify that the address is correct, and, if not, enter the gateway address. Click **Next** to continue.
7. For all the other wizard configuration steps, refer to the *Sun StorageTek 5320 NAS Appliance and Gateway System Administration Guide* for more information.

Note – When adding your DNS server, click **Add** to ensure the DNS server has been added.

8. On the **Confirmation** screen, review the configuration information you have added.

Note – Be sure the configuration information is accurate before continuing.

9. Click Finish on the wizard Confirmation screen.

The system configures the settings and indicates that in the Save Configuration screen. It also displays a message that both servers must reboot for the failover changes to be applied.

10. Click Close on the Save Configuration screen.

▼ To Assign LUN Ownership

To finish the configuration process, you must assign LUN ownership for both servers.

1. Launch a new browser window and type server H1's IP address.

2. On the Web Admin login screen, click Apply. A password is not required.

The password can be set later. Refer to the *Sun StorageTek 5320 NAS Appliance and Gateway System Administration Guide*.

3. From the navigation panel, select High Availability > Recover.

Check the status of the recover process in the logging window (bottom pane).

4. In the Restore RAID Configuration window, assign some of the LUNs to server H2.

Note – You must assign at least one LUN to each server. In most situations, you will want approximately equal amounts of storage assigned to each server in the cluster.

5. Click Apply.

Note – The appropriate LUN assignments are saved in the (New) Restore RAID Configuration window.

6. Click Recover, and the LUNs are distributed between both the servers.

At this point, both servers change to the NORMAL state.

Note – Verify that both servers are in the NORMAL state on the LCD Panel display or on the Web Admin main page, where the Head Status and Partner Status should display NORMAL.

▼ To Assign LUN Paths

You should assign LUN paths on each server to balance multipath access from each server to each storage controller. You can automatically assign LUN paths using the CLI Auto-assign LUN paths option on the LUN Paths screen, or you can use the Web Admin, as follows:

1. In the Web Admin navigation panel, select **High Availability > Set LUN Path**.
2. Select a LUN and click **Edit**.
3. Select the desired controller from the **Primary Path drop-down menu**.

Evenly divide the assignment of LUNs to the two available paths. For example, the first and third LUN to 1/0 and the second and fourth LUN to 1/1.

4. Click **Apply**.

Refer to the *Sun StorageTek 5320 NAS Appliance and Gateway System Administration Guide* for additional information about LUNs and other detailed software setup and use.

▼ To Configure the Partner

For server H2, repeat all steps in [“To Configure the System” on page 94](#) with the following exceptions:

- In [Step 6 d. in “To Configure the System” on page 94](#), enter the information for the partner H1 server.
- As you complete the configuration process, there is no message to reboot the servers, since you do not need to reboot the servers

Installing the Sun StorageTek 5320 NAS Gateway System

This chapter provides comprehensive instructions for connecting a Sun StorageTek 5320 NAS Gateway System or Sun StorageTek 5320 NAS Gateway Cluster System to SAN storage. It also provides initial configuration instructions for the system.

Note – If you are installing a different system, refer to the appropriate chapter.

The Sun StorageTek 5320 NAS Gateway System Sun StorageTek 5320 NAS Gateway Cluster System can be directly attached or attached through fabric switches to a Sun StorEdge 6130 array, a Sun StorEdge 6920 system, or a Sun StorEdge 9970/9980/9985/9990 system (shortened to “Sun StorEdge 99xx system”) in this chapter).

Note – Refer to the Sun StorageTek 5320 NAS Gateway System web page for the most current SAN storage information.

This chapter contains the following sections:

- [“Before You Begin” on page 100](#)
- [“Installation and Configuration Task Overview” on page 100](#)
- [“Connecting the Sun StorageTek 5320 NAS Gateway System to the Sun StorEdge 6130 Array” on page 102](#)
- [“Connecting the Sun StorageTek 5320 NAS Gateway System to the Sun StorageTek FlexLine 200 and 300 Series” on page 114](#)
- [“Connecting the Sun StorageTek 5320 NAS Gateway System to the Sun StorEdge 6920 System” on page 127](#)
- [“Connecting the Sun StorageTek 5320 NAS Gateway System or NAS Gateway Cluster System to the Sun StorEdge 99xx System” on page 143](#)
- [“Connecting to the Network” on page 159](#)

- [“Powering On the Sun StorageTek 5320 NAS Gateway System” on page 161](#)
- [“Initial Sun StorageTek 5320 NAS Gateway System Single-Server Configuration” on page 163](#)
- [“Initial Sun StorageTek 5320 NAS Gateway Cluster System Configuration” on page 167](#)
- [“SAN Storage Configuration” on page 175](#)

Note – The Sun StorageTek 5320 NAS Gateway System and Sun StorageTek 5320 NAS Gateway Cluster System ship with the operating system installed.

Before You Begin

Before connecting the system, do the following:

- If desired, install the Sun StorageTek 5320 NAS Gateway System or Sun StorageTek 5320 NAS Gateway Cluster System and switch or switches, if used, in a cabinet. Follow the installation instructions in Chapter 2 for [“Installing a Server in a Cabinet” on page 33](#).
- Set up the SAN storage devices, referring, if necessary, to your SAN storage documentation.

You will configure storage after the Sun StorageTek 5320 NAS Gateway System is installed and set up.

Installation and Configuration Task Overview

To set up the Sun StorageTek 5320 NAS Gateway System, you perform the following tasks:

1. Connect to SAN storage.

Refer to the instructions for your SAN storage:

- [“Connecting the Sun StorageTek 5320 NAS Gateway System to the Sun StorEdge 6130 Array” on page 102](#)
- [“Connecting the Sun StorageTek 5320 NAS Gateway System to the Sun StorageTek FlexLine 200 and 300 Series” on page 114](#)

- [“Connecting the Sun StorageTek 5320 NAS Gateway System to the Sun StorEdge 6920 System” on page 127](#)
 - [“Connecting the Sun StorageTek 5320 NAS Gateway System or NAS Gateway Cluster System to the Sun StorEdge 99xx System” on page 143](#)
2. Connect to the network.
Refer to [“Connecting to the Network” on page 159](#).
 3. Power on the system.
Refer to [“Powering On the Sun StorageTek 5320 NAS Gateway System” on page 161](#).
 4. Configure the system by doing the following:
 - a. Set up IP addresses.
 - b. Configure the basic system.
 - c. Activate the license.
 - d. Configure SAN storage.
 - e. Configure Sun StorageTek 5320 NAS Gateway System storage.
 - f. For cluster configuration only, configure failover.
 - g. Set LUN paths.

For the single-server configuration, refer to [“Initial Sun StorageTek 5320 NAS Gateway System Single-Server Configuration” on page 163](#).

For the cluster configuration, refer to [“Initial Sun StorageTek 5320 NAS Gateway Cluster System Configuration” on page 167](#).

Storage Concepts

Each Sun StorageTek 5320 NAS Gateway System server contains two dual port HBA cards. Using pairs of optical fiber cables, you can connect to storage directly or by using Fibre Channel switches.

When the Sun StorageTek 5320 NAS Gateway System is connected directly to storage without using a Fibre Channel switch, it is referred to as a “direct attach.” Storage is configured using LUN masking.

Most Sun StorageTek 5320 NAS Gateway Systems are connected to SAN storage using a Fibre Channel switch, which is referred to as a “fabric attach.” Because a switch can be a single point of failure, multiple switches can be used. Multiple switches can be configured with LUN masking to allocate storage to specific servers.

To ensure redundancy, you should connect to SAN storage port pairs.

Connecting the Sun StorageTek 5320 NAS Gateway System to the Sun StorEdge 6130 Array

This section describes how to cable the Sun StorageTek 5320 NAS Gateway System directly or through fabric switches to the Sun StorEdge 6130 array:

- [“Connecting Directly to the Sun StorEdge 6130 Array” on page 102](#)
- [“Using Fabric Switches to Connect to the Sun StorEdge 6130 Array” on page 106](#)

After connecting the systems, proceed to [“Connecting to the Network” on page 159](#).

Connecting Directly to the Sun StorEdge 6130 Array

The following direct attach configurations are described in this section:

- [“To Connect a Single-Server Direct Attach to Sun StorEdge 6130 Array” on page 102](#)
- [“To Connect a Dual-Server Direct Attach to Sun StorEdge 6130 Array” on page 104](#)

Note – Do not power on the server until instructed in [“Powering On the Sun StorageTek 5320 NAS Gateway System” on page 161](#).

▼ To Connect a Single-Server Direct Attach to Sun StorEdge 6130 Array

You can connect to SAN storage with one pair of optical fiber cables.

1. **Connect the HBA Port 1 of the first HBA card (PCI1) to the Controller A host 1 port on the Sun StorEdge 6130 array.**

2. Connect the HBA Port 1 of the second HBA card (PCI0) to the Controller B host 1 port on the Sun StorEdge 6130 array.

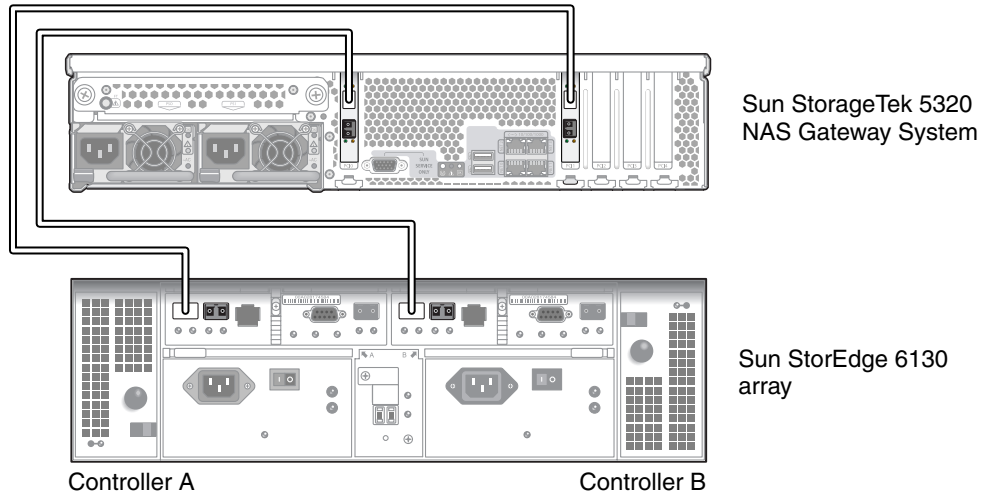


FIGURE 5-1 Connecting Two HBA Ports to the Sun StorEdge 6130 Array

3. (Optional) For additional redundancy, attach the additional HBA ports.
 - a. Connect the HBA Port 2 of the first HBA card to the Controller B host 2 port on the Sun StorEdge 6130 array.

- b. Connect the HBA Port 2 of the second HBA card to the Controller A host 2 port on the Sun StorEdge 6130 array.

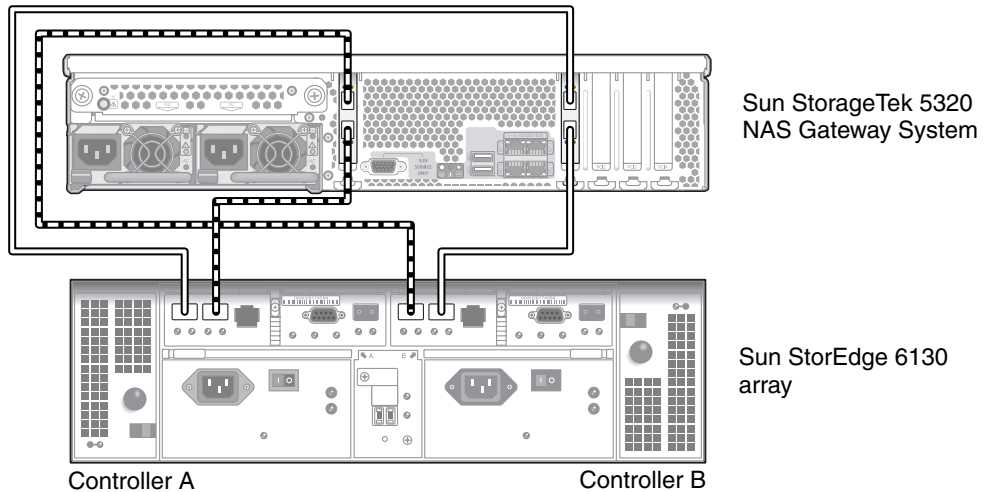


FIGURE 5-2 Connecting All HBA Ports to the Sun StorEdge 6130 Array

▼ To Connect a Dual-Server Direct Attach to Sun StorEdge 6130 Array

You can connect a dual-server high-availability (HA) Sun StorageTek 5320 NAS Gateway Cluster System to SAN storage with two optical fiber cables from each server.

1. Connect the HBA Port 1 of the first HBA card (PCI1) on server H1 to the Controller A host 1 port on the Sun StorEdge 6130 array.
2. Connect the HBA Port 1 of the second HBA card (PCI0) on server H1 to the Controller B host 1 port on the Sun StorEdge 6130 array.
3. Connect the HBA Port 1 of the first HBA card on server H2 to the Controller A host 2 port on the Sun StorEdge 6130 array.

4. Connect the HBA Port 1 of the second HBA card on server H2 to the Controller B host 2 port on the Sun StorEdge 6130 array.

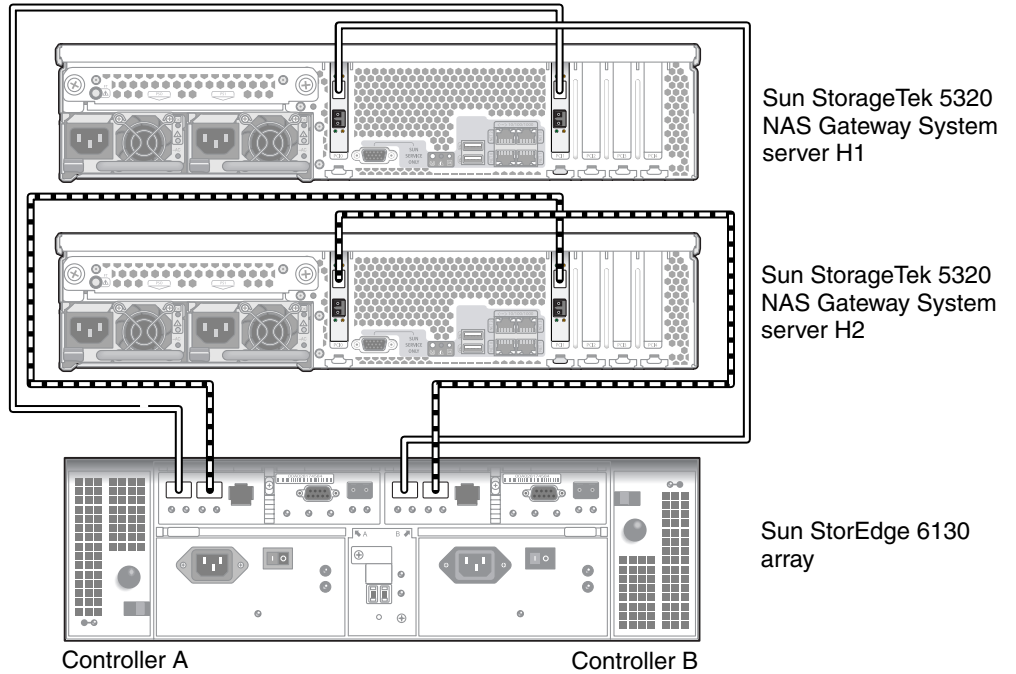


FIGURE 5-3 Connecting Two HBA Ports per HA Server to the Sun StorEdge 6130 Array

Using Fabric Switches to Connect to the Sun StorEdge 6130 Array

The following fabric attach configurations are described in this section:

- [“To Connect a Single-Server Fabric Attach to Sun StorEdge 6130 Array” on page 106](#)
- [“To Share All Sun StorEdge 6130 Array LUNs Between All Port Pairs” on page 108](#)
- [“To Connect a Dual-Server High-Availability Fabric Attach to Sun StorEdge 6130 Array” on page 109](#)

Note – Do not power on the server until instructed in [“Powering On the Sun StorageTek 5320 NAS Gateway System” on page 161](#).

▼ To Connect a Single-Server Fabric Attach to Sun StorEdge 6130 Array

You can connect to SAN storage with one or two pairs of optical fiber cables. Using two pairs to connect all HBA ports and using two switches ensures redundancy and improves processing speed.

1. **Connect the HBA Port 1 of the first HBA card (PCI1) to the first available port of the first fabric switch.**
2. **Connect the HBA Port 1 of the second HBA card (PCI0) to the first available port of the second fabric switch.**
3. **Connect an available port on the first switch to the Controller A host 1 port on the Sun StorEdge 6130 array.**

4. Connect an available port on the second switch to the Controller B host 1 port on the Sun StorEdge 6130 array.

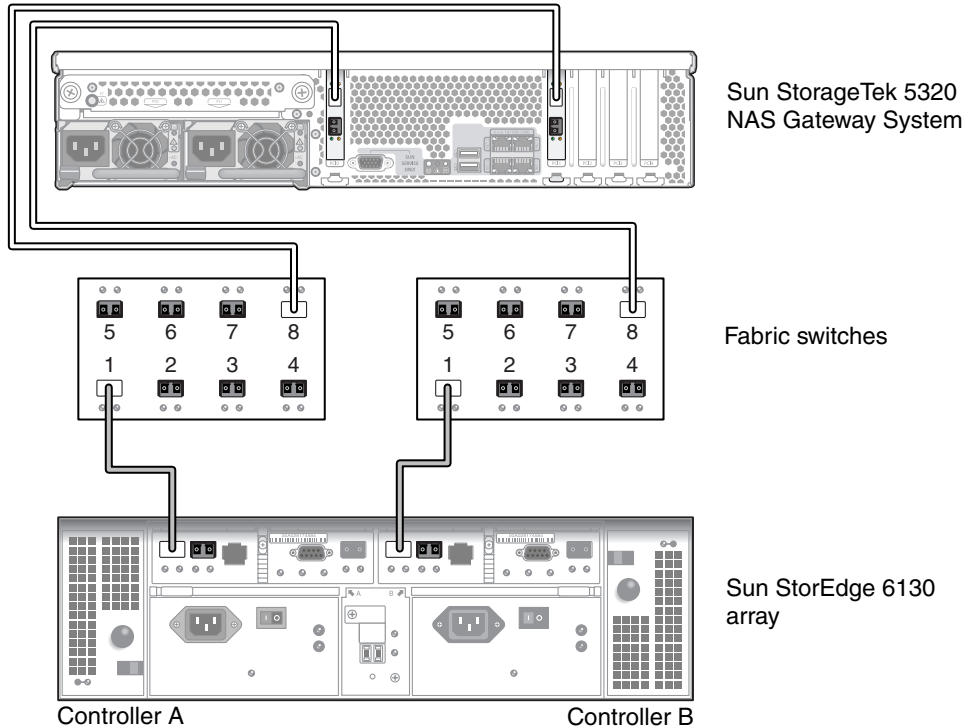


FIGURE 5-4 Connecting Two HBA Ports Using Fabric Switches to the Sun StorEdge 6130 Array

5. (Optional) For additional redundancy, attach the additional HBA ports:
 - a. Connect the HBA Port 2 of the first HBA card to the next available port of the second fabric switch.

- b. Connect the HBA Port 2 of the second HBA card to the next available port of the first fabric switch.

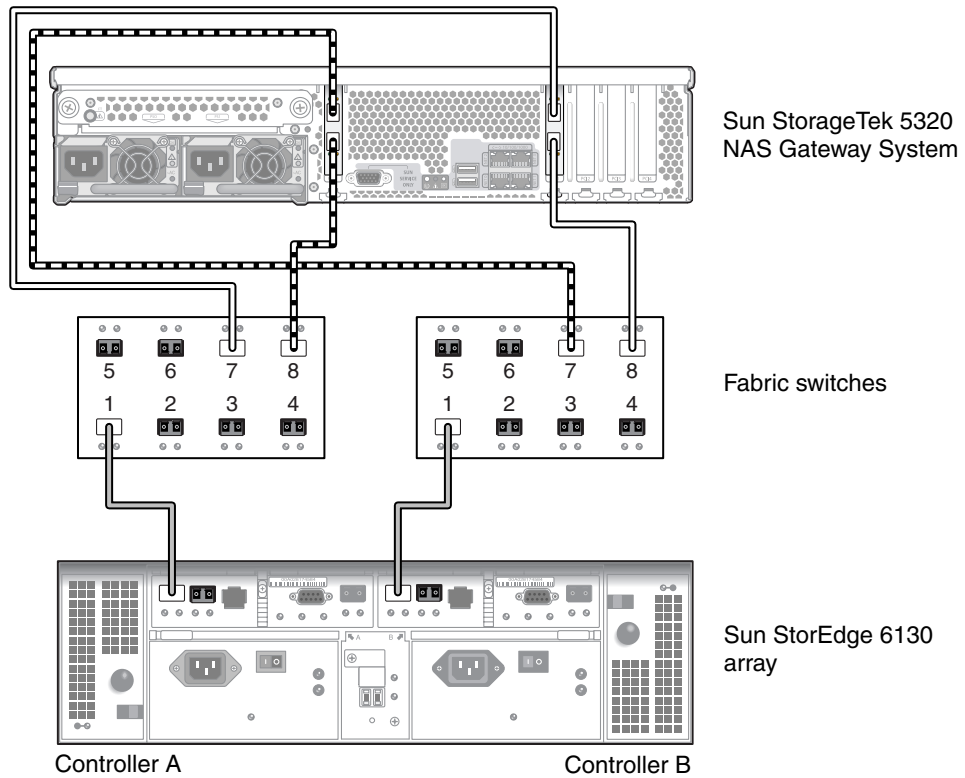


FIGURE 5-5 Connecting All HBA Ports Through Fabric Switches to the Sun StorEdge 6130 Array

▼ To Share All Sun StorEdge 6130 Array LUNs Between All Port Pairs

To enable all LUNs to be shared between all port pairs, attach the four HBA ports to two switches and use four cables to attach the switches to the Sun StorEdge 6130 array:

1. Connect the HBA Port 1 of the first HBA card (PCI1) to the first available port of the first fabric switch.
2. Connect the HBA Port 1 of the second HBA card (PCI0) to the first available port of the second fabric switch.
3. Connect the HBA Port 2 of the first HBA card to the next available port of the second fabric switch.

4. Connect the HBA Port 2 of the second HBA card to the next available port of the first fabric switch.
5. Connect an available port on the first switch to the Controller A host 1 port on the Sun StorEdge 6130 array.
6. Connect an available port on the second switch to the Controller B host 1 port on the Sun StorEdge 6130 array.

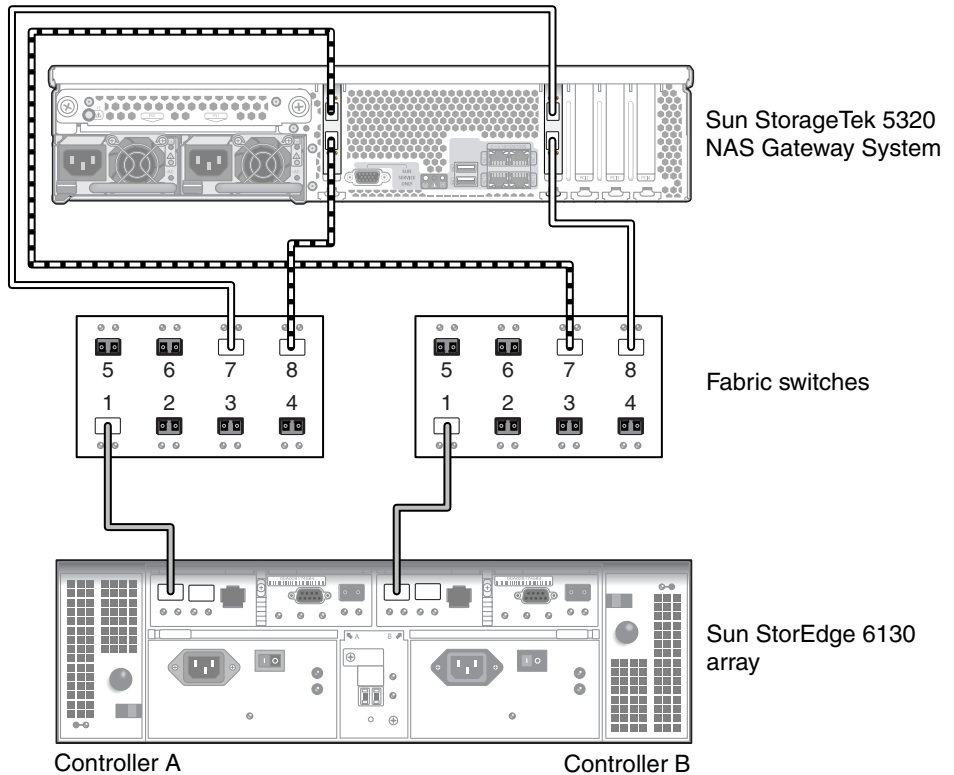


FIGURE 5-6 Connecting All HBA Ports Through Two Fabric Switches to the Sun StorEdge 6130 Array

▼ To Connect a Dual-Server High-Availability Fabric Attach to Sun StorEdge 6130 Array

You can connect a dual-server high-availability Sun StorageTek 5320 NAS Gateway Cluster System to SAN storage with two or four pairs of optical fiber cables, with or without additional switch connections. Using four pairs to connect all HBA ports ensures redundancy and improves processing speed.

1. Connect the HBA Port 1 of the first HBA card (PCI1) in the server H1 to the first available port of the first fabric switch.
2. Connect the HBA Port 1 of the second HBA card (PCI0) in the server H1 to the first available port of the second fabric switch.
3. Connect the HBA Port 1 of the first HBA card in the server H2 to the next available port of the first fabric switch.
4. Connect the HBA Port 1 of the second HBA card in the server H2 to the next available port of the second fabric switch.
5. Connect an available port on the first switch to the Controller A host 1 port on the Sun StorEdge 6130 array.

6. Connect an available port on the second switch to the Controller B host 1 port on the Sun StorEdge 6130 array.

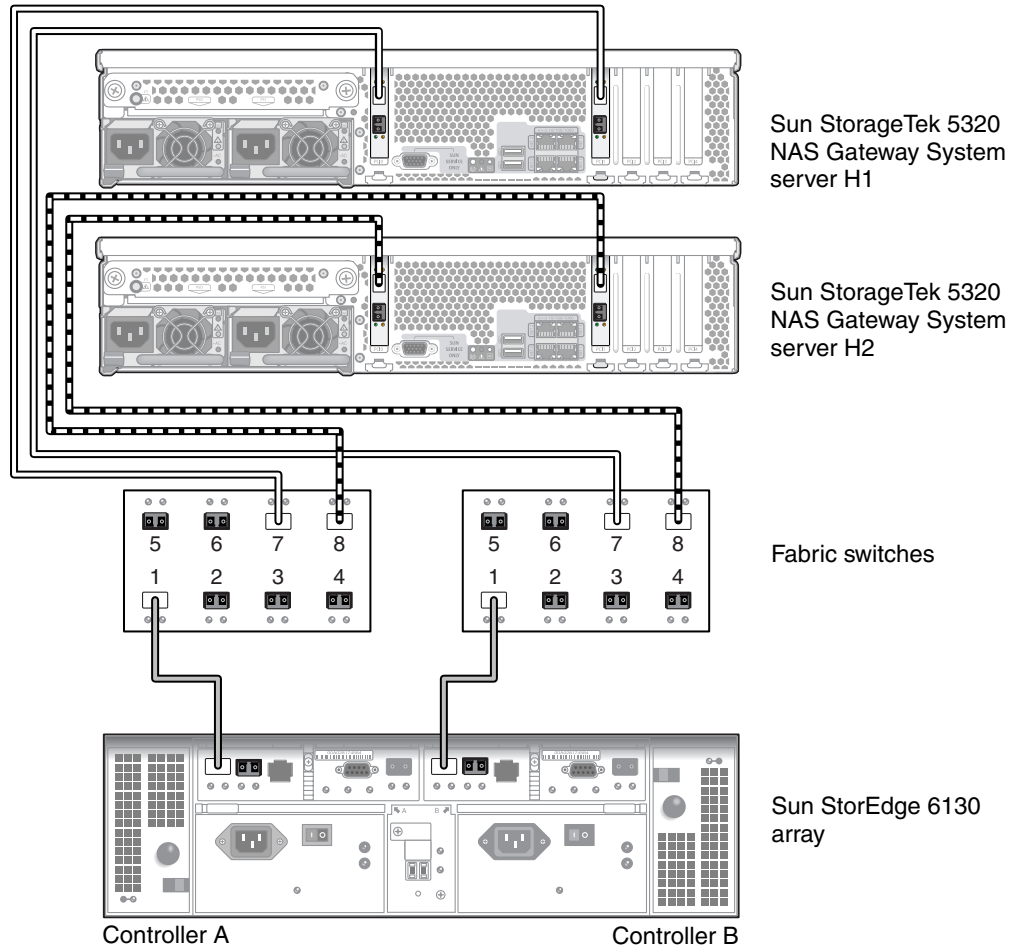


FIGURE 5-7 Connecting Two HBA Ports per HA Server Through Fabric Switches to the Sun StorEdge 6130 Array

7. (Optional) For additional redundancy, attach additional cables from the two switches:
 - a. Connect the next available port on the first switch to the Controller B host 2 port on the Sun StorEdge 6130 array.

- b. Connect the next available port on the second switch to the Controller A host 2 port on the Sun StorEdge 6130 array.

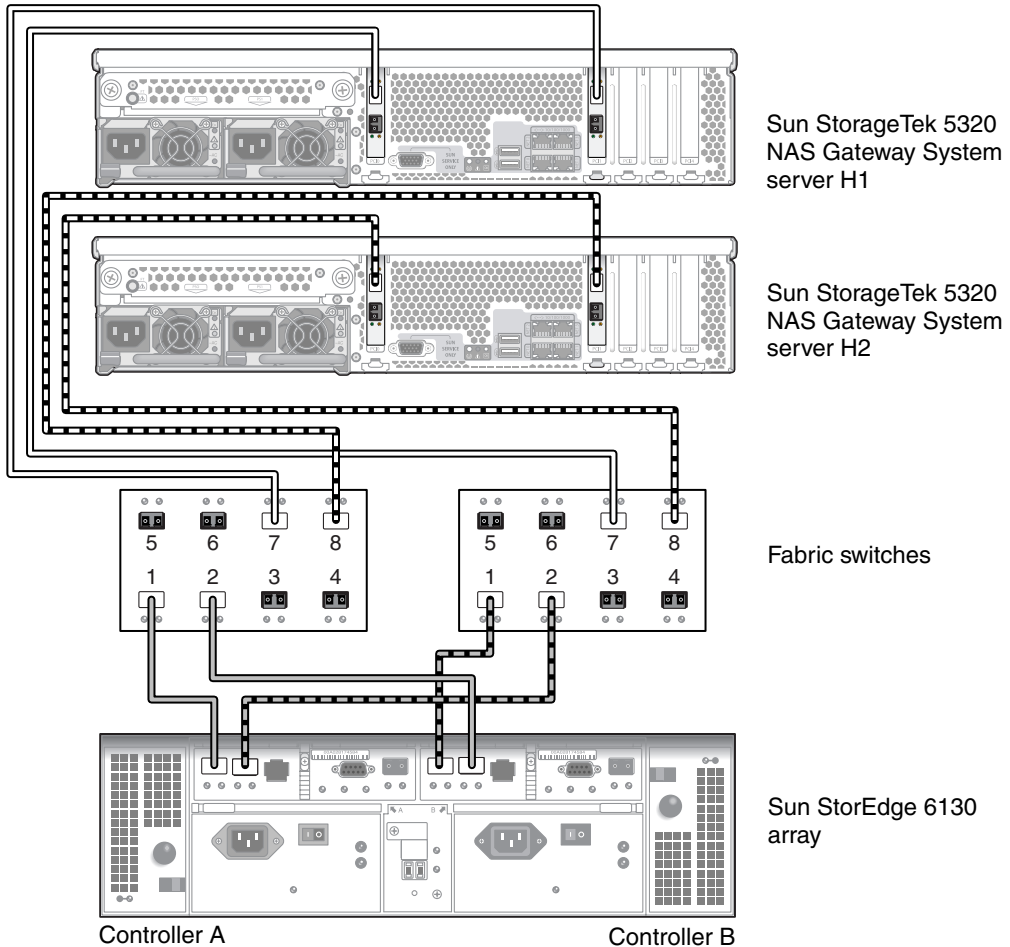


FIGURE 5-8 Connecting Two HBA Ports per HA Server Through Fabric Switches to the Sun StorEdge 6130 Array With Additional Switch Connections

8. (Optional) Use the other HBA ports:

- a. Connect the HBA Port 2 of the first HBA card on server H1 to the next available port of the second fabric switch.
- b. Connect the HBA Port 2 of the second HBA card on server H1 to the next available port of the first fabric switch.
- c. Connect the HBA Port 2 of the first HBA card on server H2 to the next available port of the second fabric switch.

- d. Connect the HBA Port 2 of the second HBA card on server H2 to the next available port of the first fabric switch.

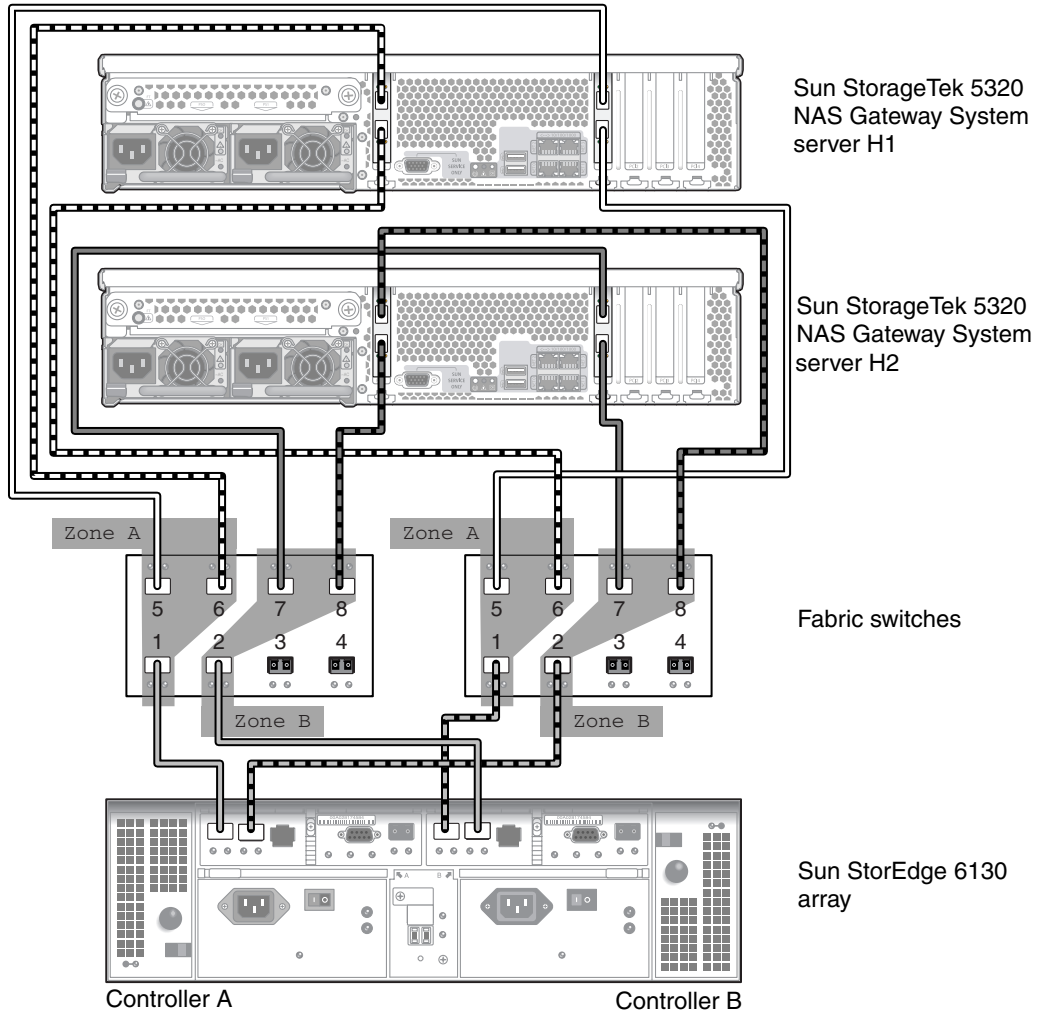


FIGURE 5-9 Connecting All HBA Ports per HA Server Through Two Fabric Switch Zones to the Sun StorEdge 6130 Array

Connecting the Sun StorageTek 5320 NAS Gateway System to the Sun StorageTek FlexLine 200 and 300 Series

This section describes how to cable the Sun StorageTek 5320 NAS Gateway System directly or through fabric switches to the Sun StorageTek FlexLine 200 and 300 series systems:

- [“Connecting Directly to the FlexLine 200 and 300 Series” on page 114](#)
- [“Using Fabric Switches to Connect to the Sun StorageTek FlexLine 200 and 300 Series” on page 117](#)

After connecting the systems, proceed to [“Connecting to the Network” on page 159](#).

Note – All figures in this section show the FlexLine 380 system. Cabling for the FlexLine 240 and FlexLine 280 is similar to the 380.

Connecting Directly to the FlexLine 200 and 300 Series

You can direct connect a single server or a dual server to the Sun StorageTek FlexLine series array.

▼ To Connect a Single-Server Direct Attach to Sun StorageTek FlexLine 200 and 300 Series

You can connect to SAN storage with one or two pairs of optical fiber cables. Using two pairs to connect all HBA ports ensures redundancy and improves processing speed.

1. **Connect the HBA Port 1 of the first HBA card (PCI1) to the first available port on the Sun StorageTek FlexLine 200 and 300 series.**

2. Connect the HBA Port 1 of the second HBA card (PCI0) to the next available port on the Sun StorageTek FlexLine 380 system.

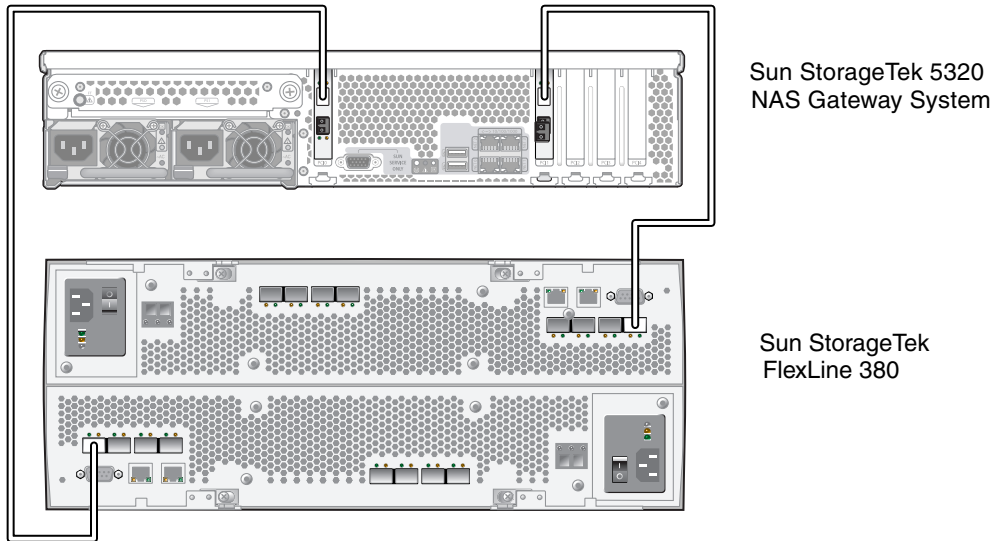


FIGURE 5-10 Connecting Two HBA Ports to the Sun StorageTek FlexLine Array

3. For redundancy and increased processing speed, you can also attach the additional HBA ports:

Note – Do not map a LUN to more than two ports on the Gateway system.

- a. Connect the HBA Port 2 of the first HBA card to the next available port on the Sun StorageTek FlexLine 200 and 300 series.

- b. Connect the HBA Port 2 of the second HBA card to the next available port on the Sun StorageTek FlexLine 200 and 300 series.

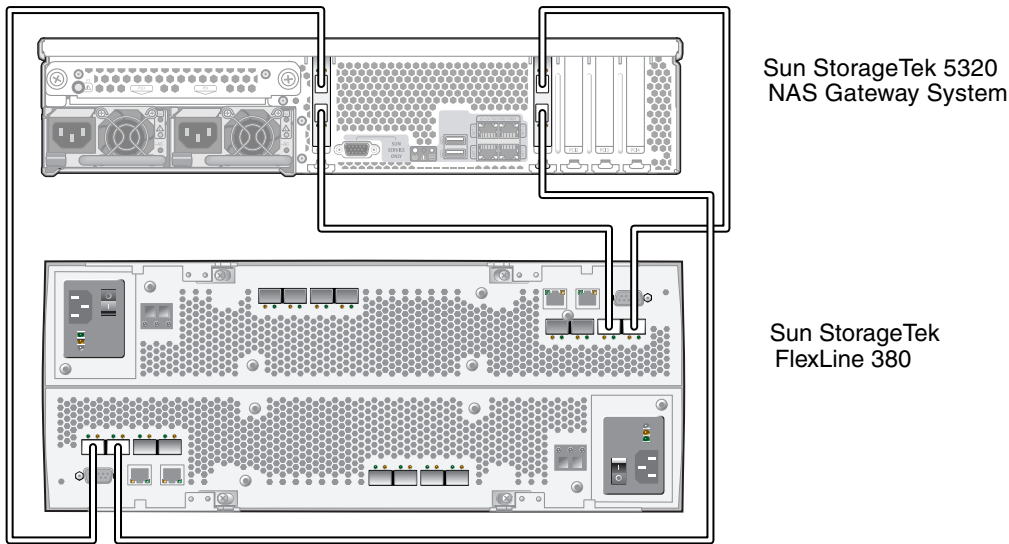


FIGURE 5-11 Connecting Two HBA Ports to the Sun StorageTek FlexLine Array

▼ To Connect a Dual-Server Direct Attach to Sun StorageTek FlexLine 200 and 300 Series

You can connect a dual-server high-availability (HA) Sun StorageTek 5320 NAS Gateway Cluster System to SAN storage with two or four pairs of optical fiber cables. Using four pairs to connect all HBA ports simulates a dual array, ensures redundancy, and improves processing speed.

1. Connect the HBA Port 1 of the first HBA card (PCI1) on server H1 to the first available port on the Sun StorageTek FlexLine 200 and 300 series.
2. Connect the HBA Port 1 of the second HBA card (PCI0) on server H1 to the next available port on the Sun StorageTek FlexLine 200 and 300 series.
3. Connect the HBA Port 1 of the first HBA card on server H2 to the next available port on the Sun StorageTek FlexLine 200 and 300 series.

4. Connect the HBA Port 1 of the second HBA card on server H2 to the next available port on the Sun StorageTek FlexLine 200 and 300 series.

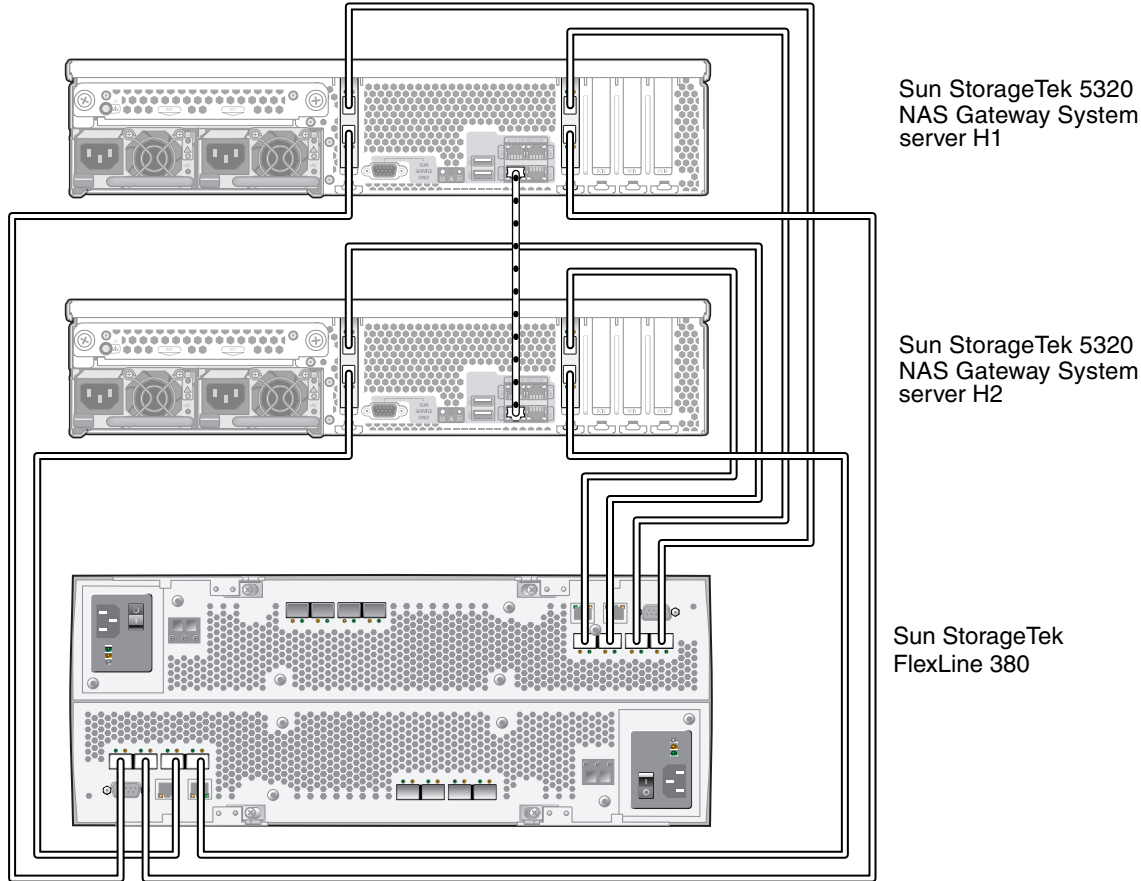


FIGURE 5-12 Connecting Two HBA Ports per HA Server to the Sun StorageTek FlexLine Array

Using Fabric Switches to Connect to the Sun StorageTek FlexLine 200 and 300 Series

The following fabric attach configurations are described in this section:

- [“To Connect a Single-Server Fabric Attach to Sun StorageTek FlexLine 200 and 300 Series” on page 118](#)
- [“To Share All Sun StorageTek FlexLine LUNs Between All Port Pairs” on page 120](#)
- [“To Connect a Dual-Server High-Availability Fabric Attach to Sun StorageTek FlexLine 200 and 300 Series” on page 122](#)

Note – Do not power on the server until instructed in [“Powering On the Sun StorageTek 5320 NAS Gateway System”](#) on page 161.

▼ To Connect a Single-Server Fabric Attach to Sun StorageTek FlexLine 200 and 300 Series

You can connect to SAN storage with one or two pairs of optical fiber cables. Using two pairs to connect all HBA ports and using two switches ensures redundancy and improves processing speed.

1. **Connect the HBA Port 1 of the first HBA card (PCI1) to the first available port of the first fabric switch.**
2. **Connect the HBA Port 1 of the second HBA card (PCI0) to the first available port of the second fabric switch.**
3. **Connect an available port on the first switch to the Controller A host 1 port on the Sun StorageTek FlexLine 200 and 300 series.**

4. Connect an available port on the second switch to the Controller B host 1 port on the Sun StorageTek FlexLine 200 and 300 series.

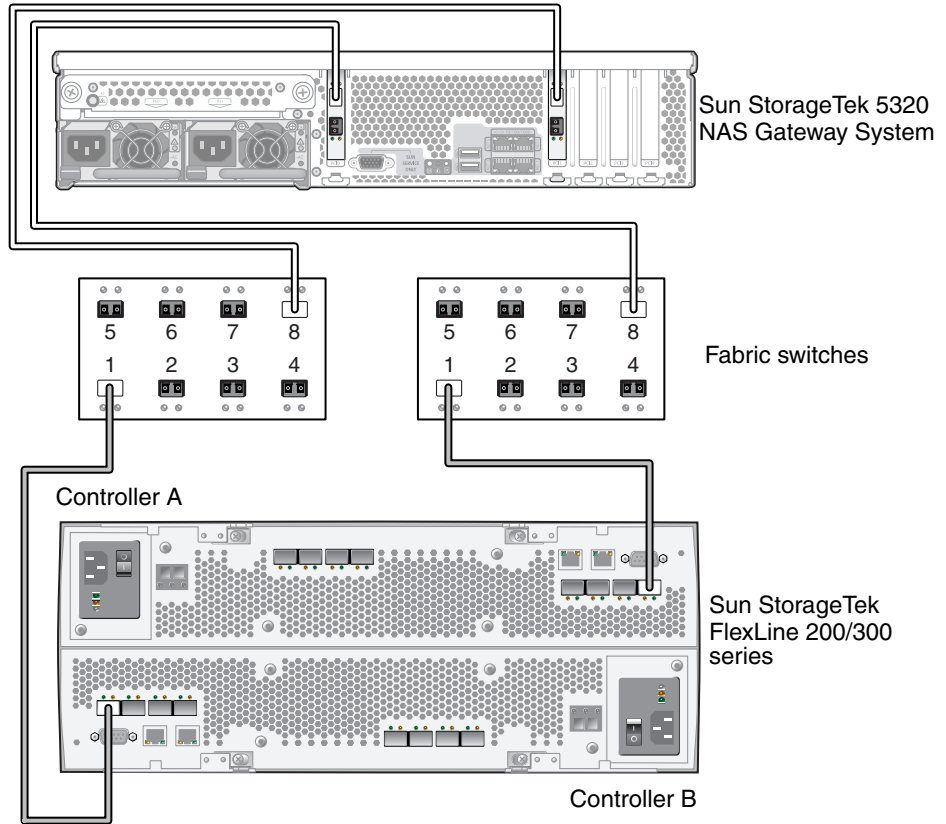


FIGURE 5-13 Connecting Two HBA Ports Using Fabric Switches to the Sun StorageTek FlexLine Array

5. For additional redundancy, you can also attach the additional HBA ports:
 - a. Connect the HBA Port 2 of the first HBA card to the next available port of the second fabric switch.

- b. Connect the HBA Port 2 of the second HBA card to the next available port of the first fabric switch.

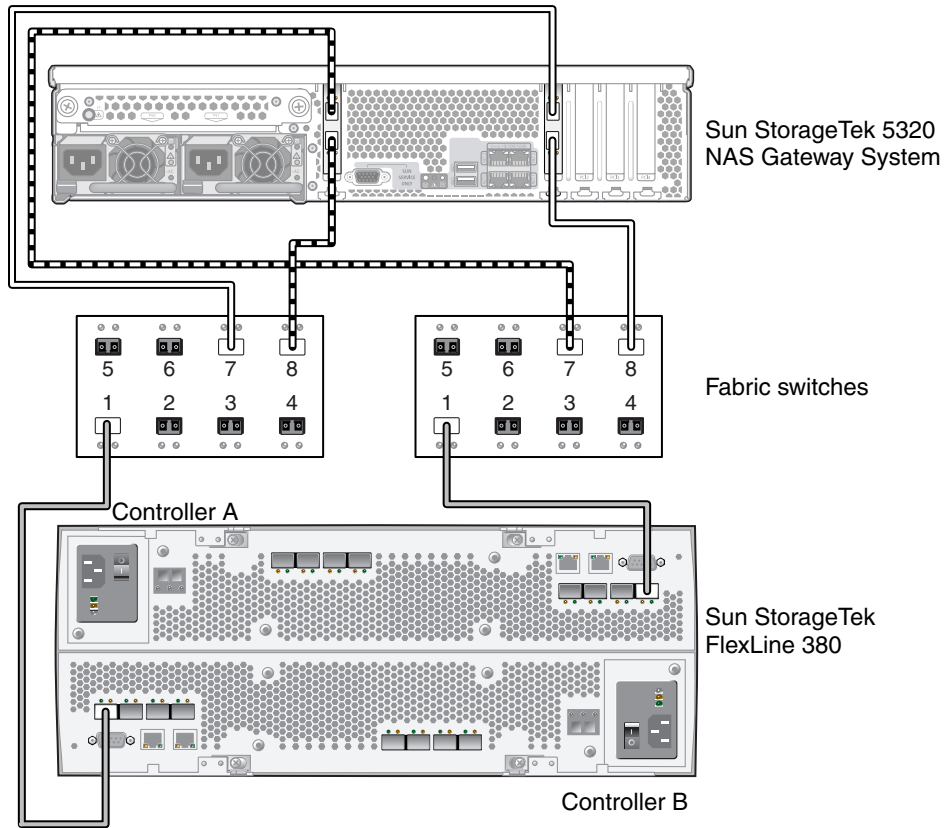


FIGURE 5-14 Connecting All HBA Ports Through Fabric Switches to the Sun StorageTek FlexLine Array

▼ To Share All Sun StorageTek FlexLine LUNs Between All Port Pairs

To enable all LUNs to be shared between all port pairs, attach the four HBA ports to two switches and use four cables to attach the switches to the Sun StorageTek FlexLine 200 and 300 series:

1. Connect the HBA Port 1 of the first HBA card (PCI1) to the first available port of the first fabric switch.
2. Connect the HBA Port 1 of the second HBA card (PCI0) to the first available port of the second fabric switch.

3. **Connect the HBA Port 2 of the first HBA card to the next available port of the second fabric switch.**
4. **Connect the HBA Port 2 of the second HBA card to the next available port of the first fabric switch.**
5. **Connect an available port on the first switch to the Controller A host 1 port on the Sun StorageTek FlexLine 200 and 300 series.**
6. **Connect an available port on the second switch to the Controller B host 1 port on the Sun StorageTek FlexLine 200 and 300 series.**
7. **Connect the next available port on the first switch to the Controller A host 2 port on the Sun StorageTek FlexLine 200 and 300 series.**

8. Connect the next available port on the second switch to the Controller B host 2 port on the Sun StorageTek FlexLine 200 and 300 series.

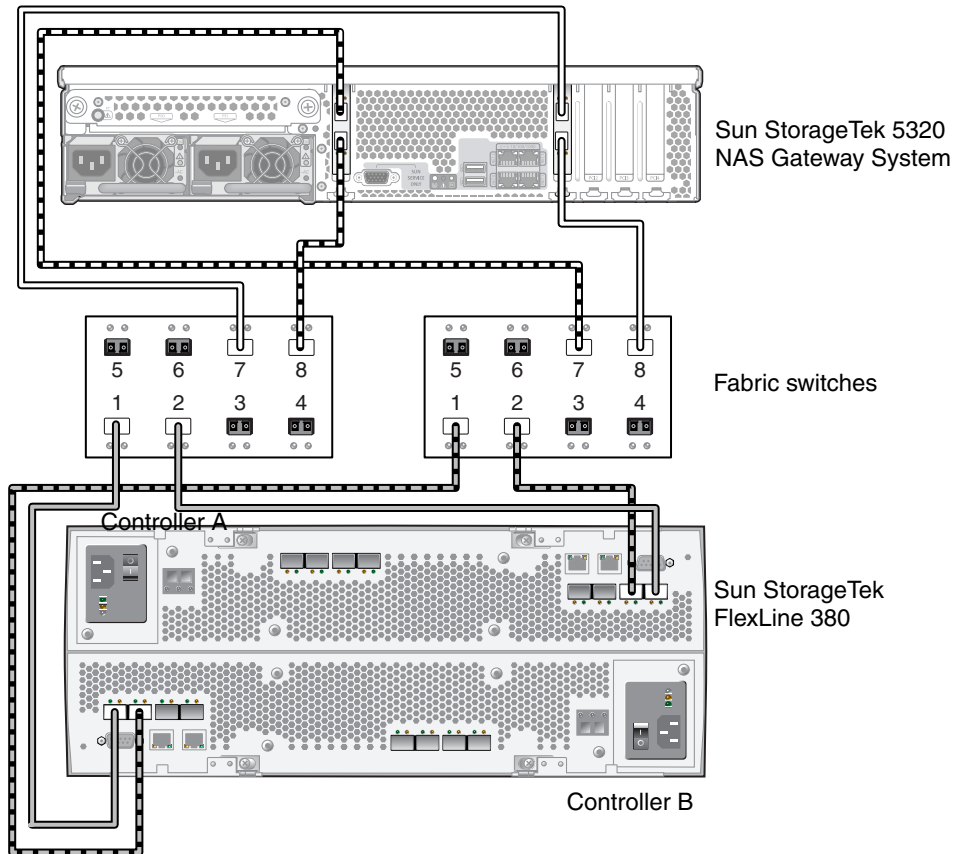


FIGURE 5-15 Connecting All HBA Ports Through Two Fabric Switches to the Sun StorageTek FlexLine Array

▼ To Connect a Dual-Server High-Availability Fabric Attach to Sun StorageTek FlexLine 200 and 300 Series

You can connect a dual-server high-availability Sun StorageTek 5320 NAS Gateway Cluster System to SAN storage with two or four pairs of optical fiber cables, with or without additional switch connections. Using four pairs to connect all HBA ports ensures redundancy and improves processing speed.

1. Connect the HBA Port 1 of the first HBA card (PCI1) in the server H1 to the first available port of the first fabric switch.

2. **Connect the HBA Port 1 of the second HBA card (PCI0) in the server H1 to the first available port of the second fabric switch.**
3. **Connect the HBA Port 1 of the first HBA card in the server H2 to the next available port of the first fabric switch.**
4. **Connect the HBA Port 1 of the second HBA card in the server H2 to the next available port of the second fabric switch.**
5. **Connect an available port on the first switch to the Controller A host 1 port on the Sun StorageTek FlexLine 200 and 300 series.**

6. Connect an available port on the second switch to the Controller B host 1 port on the Sun StorageTek FlexLine 200 and 300 series.

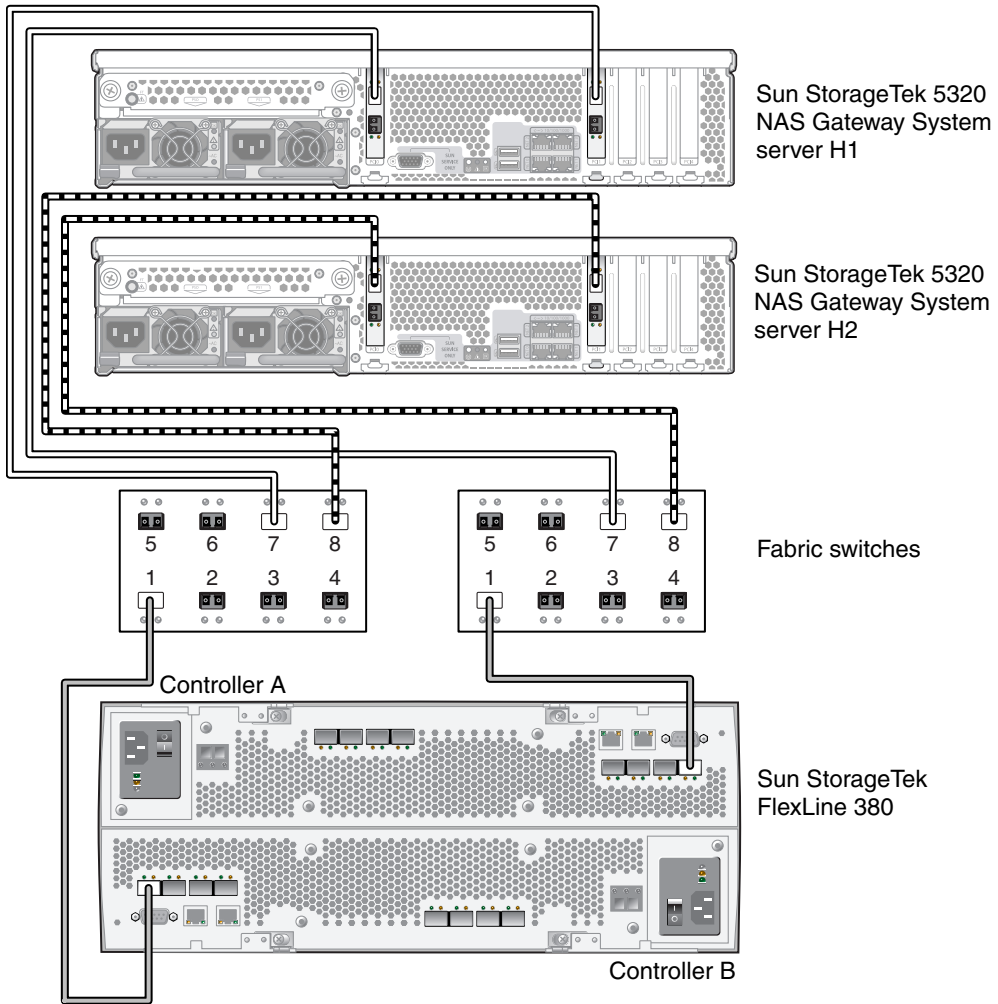


FIGURE 5-16 Connecting Two HBA Ports per HA Server Through Fabric Switches to the Sun StorageTek FlexLine Array

7. (Optional) For additional redundancy, attach additional cables from the two switches:
 - a. Connect the next available port on the first switch to the Controller B host 2 port on the Sun StorageTek FlexLine 200 and 300 series.

- b. Connect the next available port on the second switch to the Controller A host 2 port on the Sun StorageTek FlexLine 200 and 300 series.

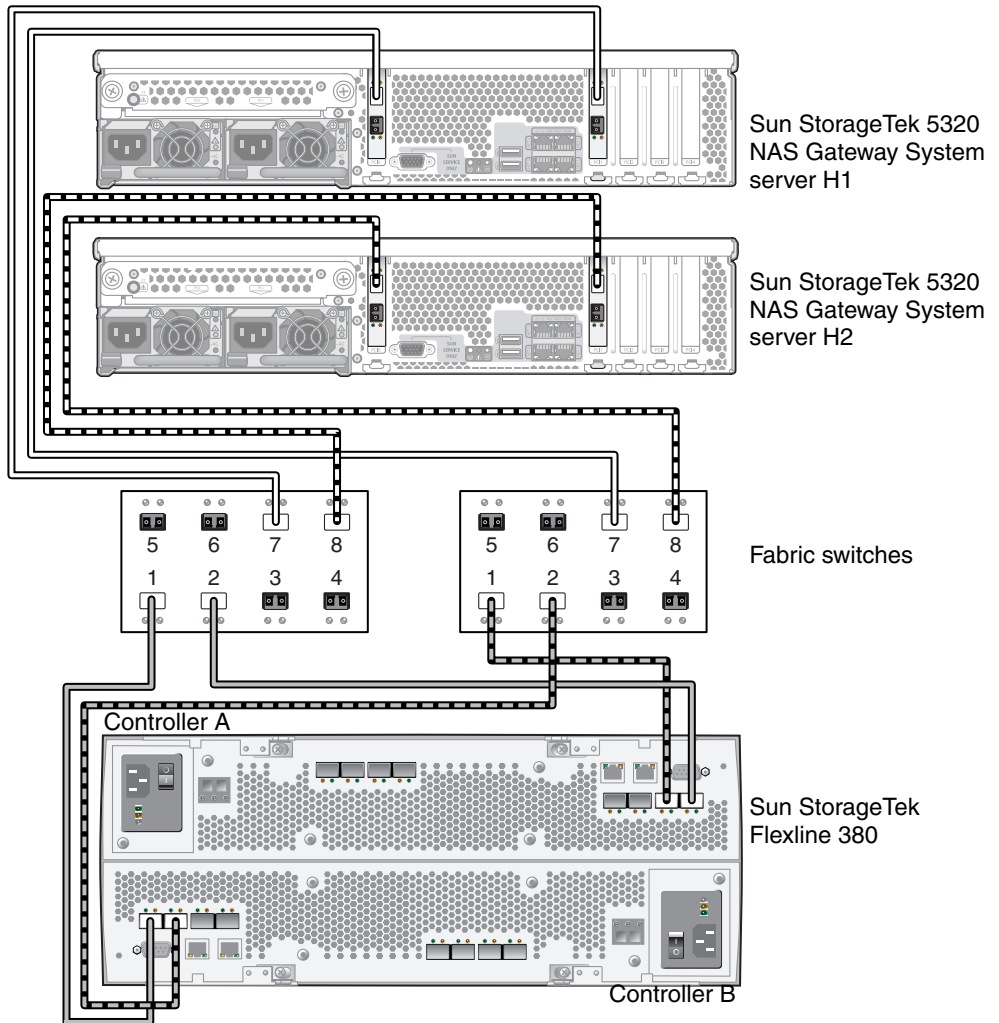


FIGURE 5-17 Connecting Two HBA Ports per HA Server Through Fabric Switches to the Sun StorageTek FlexLine With Additional Switch Connections

8. (Optional) Use the other HBA ports:
 - a. Connect the HBA Port 2 of the first HBA card on server H1 to the next available port of the second fabric switch.
 - b. Connect the HBA Port 2 of the second HBA card on server H1 to the next available port of the first fabric switch.

- c. Connect the HBA Port 2 of the first HBA card on server H2 to the next available port of the second fabric switch.
- d. Connect the HBA Port 2 of the second HBA card on server H2 to the next available port of the first fabric switch.

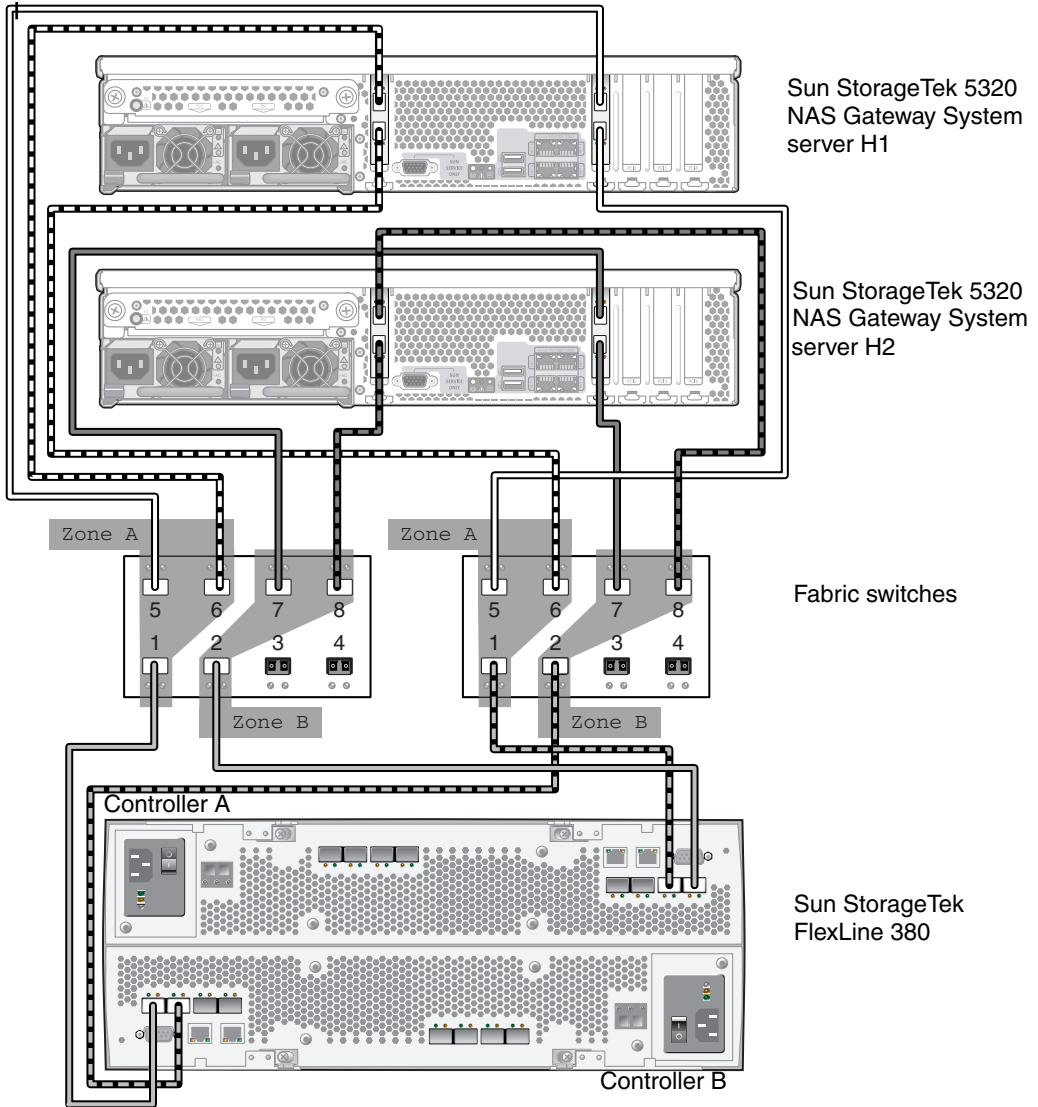


FIGURE 5-18 Connecting All HBA Ports per HA Server Through Two Fabric Switch Zones to the Sun StorageTek FlexLine Array

Connecting the Sun StorageTek 5320 NAS Gateway System to the Sun StorEdge 6920 System

This section describes how to cable the Sun StorageTek 5320 NAS Gateway System directly or through fabric switches to the Sun StorEdge 6920 system:

- [“Connecting Directly to the Sun StorEdge 6920 System” on page 127](#)
- [“Using Fabric Switches to Connect to the Sun StorEdge 6920 System” on page 132](#)

After connecting the systems, proceed to [“Connecting to the Network” on page 159](#).

Connecting Directly to the Sun StorEdge 6920 System

The following direct attach configurations are described in this section:

- [“To Connect a Single-Server Direct Attach to Sun StorEdge 6920 System” on page 127](#)
- [“To Connect a Dual-Server Direct Attach to Sun StorEdge 6920 System” on page 129](#)

Note – Do not power on the server until instructed in [“Powering On the Sun StorageTek 5320 NAS Gateway System” on page 161](#).

▼ To Connect a Single-Server Direct Attach to Sun StorEdge 6920 System

You can connect to SAN storage with one or two pairs of optical fiber cables. Using two pairs to connect all HBA ports ensures redundancy and improves processing speed.

1. **Connect the HBA Port 1 of the first HBA card (PCI1) to the first available port on the Sun StorEdge 6920 system.**

2. Connect the HBA Port 1 of the second HBA card (PCI0) to the next available port on the Sun StorEdge 6920 system.

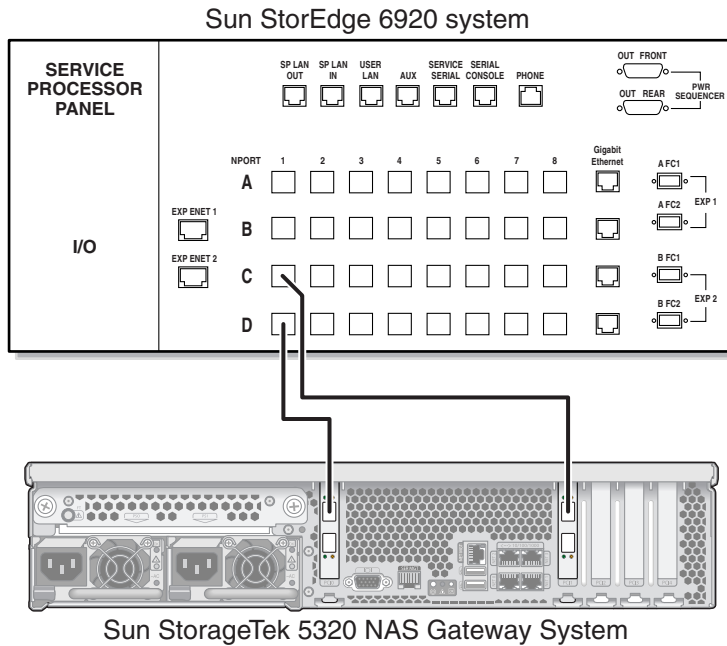


FIGURE 5-19 Connecting Two HBA Ports to the Sun StorEdge 6920 System

3. For redundancy and increased processing speed, attach the additional HBA ports:

Note – Do not map a LUN to more than two ports on the Gateway system.

- a. Connect the HBA Port 2 of the first HBA card to the next available port on the Sun StorEdge 6920 system.

- b. Connect the HBA Port 2 of the second HBA card to the next available port on the Sun StorEdge 6920 system.

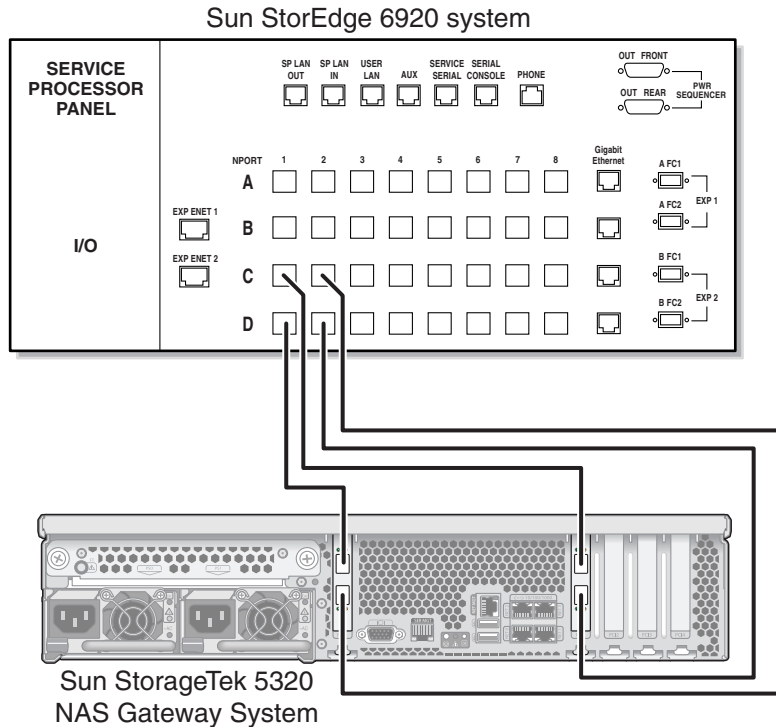


FIGURE 5-20 Connecting All HBA Ports to the Sun StorEdge 6920 System

▼ To Connect a Dual-Server Direct Attach to Sun StorEdge 6920 System

You can connect a dual-server high-availability (HA) Sun StorageTek 5320 NAS Gateway Cluster System to SAN storage with two or four pairs of optical fiber cables. Using four pairs to connect all HBA ports simulates a dual array, ensures redundancy, and improves processing speed.

1. Connect the HBA Port 1 of the first HBA card (PCI1) on server H1 to the first available port on the Sun StorEdge 6920 system.
2. Connect the HBA Port 1 of the second HBA card (PCI0) on server H1 to the next available port on the Sun StorEdge 6920 system.
3. Connect the HBA Port 1 of the first HBA card on server H2 to the next available port on the Sun StorEdge 6920 system.

4. Connect the HBA Port 1 of the second HBA card on server H2 to the next available port on the Sun StorEdge 6920 system.

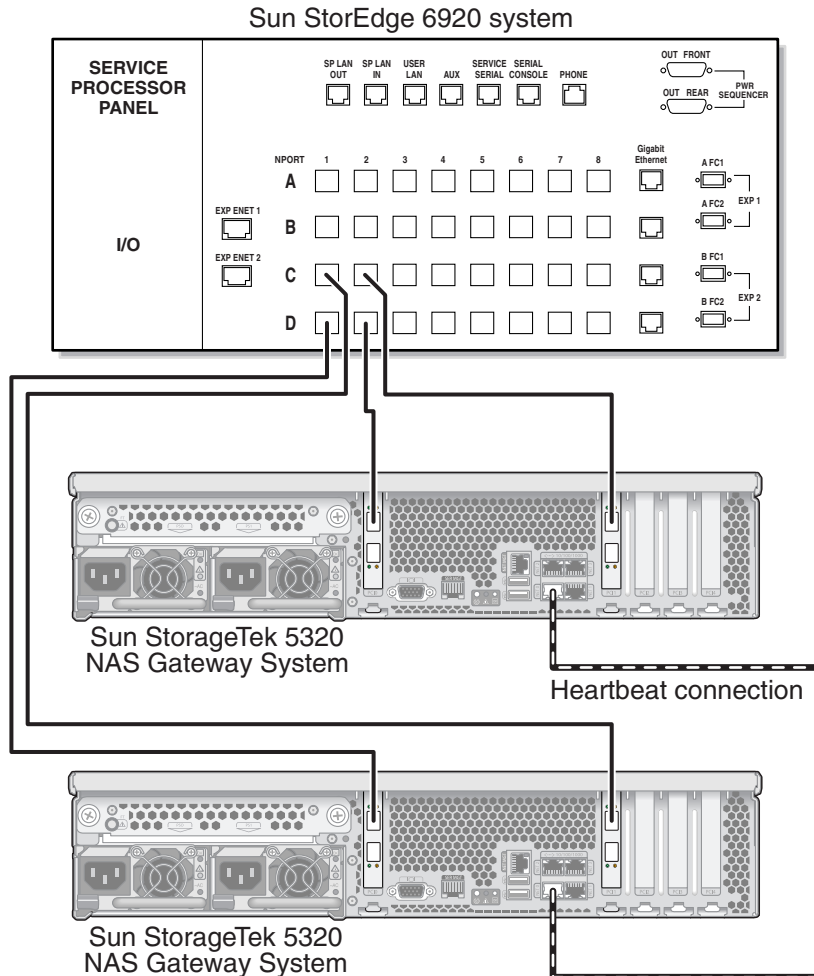


FIGURE 5-21 Connecting Two HBA Ports per HA Server to the Sun StorEdge 6920 System

5. (Optional) To simulate a dual array, you can also attach the additional HBA ports:
 - a. Connect the HBA Port 2 of the first HBA card on server H1 to the first available port on the Sun StorEdge 6920 system.
 - b. Connect the HBA Port 2 of the second HBA card on server H1 to the next available port on the Sun StorEdge 6920 system.

- c. Connect the HBA Port 2 of the first HBA card on server H2 to the next available port on the Sun StorEdge 6920 system.
- d. Connect the HBA Port 2 of the second HBA card on server H2 to the next available port on the Sun StorEdge 6920 system.

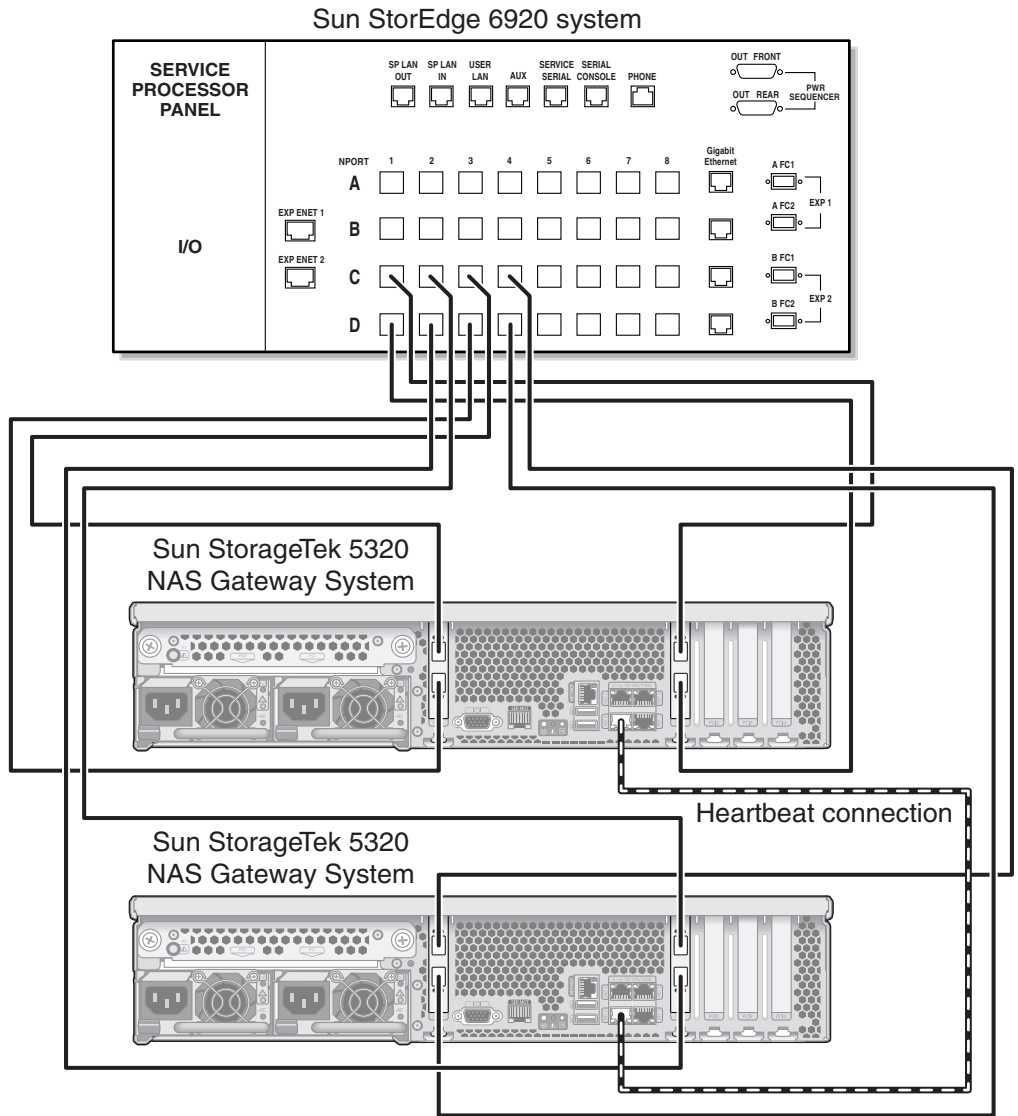


FIGURE 5-22 Connecting All HBA Ports per HA Server to the Sun StorEdge 6920 System

Using Fabric Switches to Connect to the Sun StorEdge 6920 System

The following fabric attach configurations are described in this section:

- [“To Connect a Single-Server Fabric Attach to Sun StorEdge 6920 System” on page 132](#)
- [“To Share All Sun StorEdge 6920 System LUNs Between All Port Pairs” on page 134](#)
- [“To Connect Dual-Server High-Availability Fabric Attach to the Sun StorageTek 6920 System” on page 136](#)

Note – Do not power on the server until instructed in [“Powering On the Sun StorageTek 5320 NAS Gateway System” on page 161](#).

▼ To Connect a Single-Server Fabric Attach to Sun StorEdge 6920 System

You can connect to SAN storage with one or two pairs of optical fiber cables. Using two pairs to connect all HBA ports and using two switches ensures redundancy and improves processing speed.

1. **Connect the HBA Port 1 of the first HBA card (PCI1) to the first available port of the first fabric switch.**
2. **Connect the HBA Port 1 of the second HBA card (PCI0) to the first available port of the second fabric switch.**
3. **Connect an available port on the first switch to the first available port on the Sun StorEdge 6920 system.**

4. Connect an available port on the second switch to the next available port on the Sun StorEdge 6920 system.

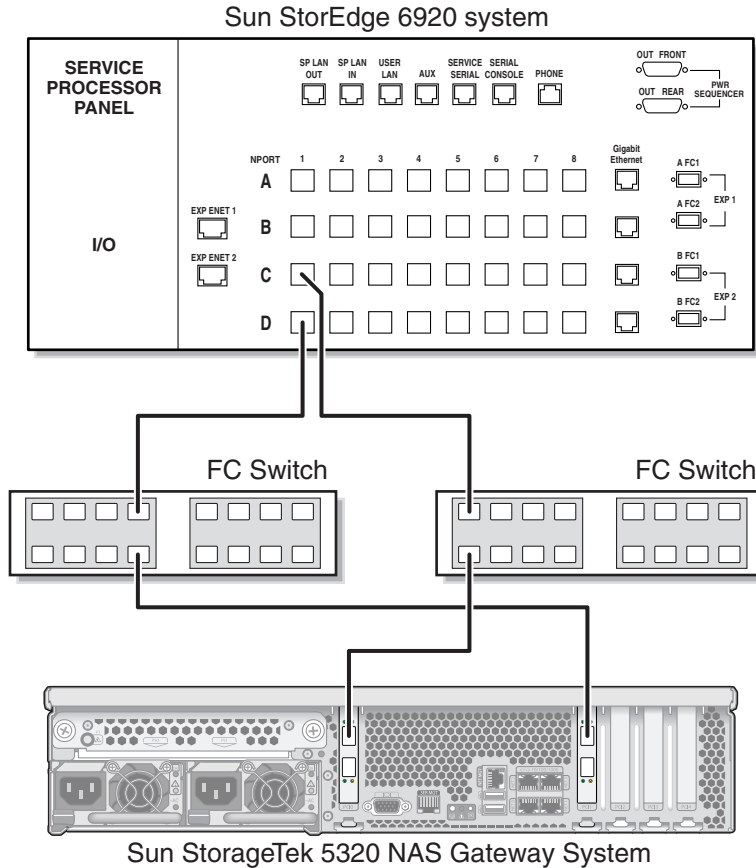


FIGURE 5-23 Connecting Two HBA Ports Using Fabric Switches to the Sun StorEdge 6920 System

5. For redundancy and increased processing speed, attach the additional HBA ports:

Note – Do not map a LUN to more than two ports on the Gateway system.

- a. Connect the HBA Port 2 of the first HBA card to the next available port of the second fabric switch.

- b. Connect the HBA Port 2 of the second HBA card to the next available port of the first fabric switch.

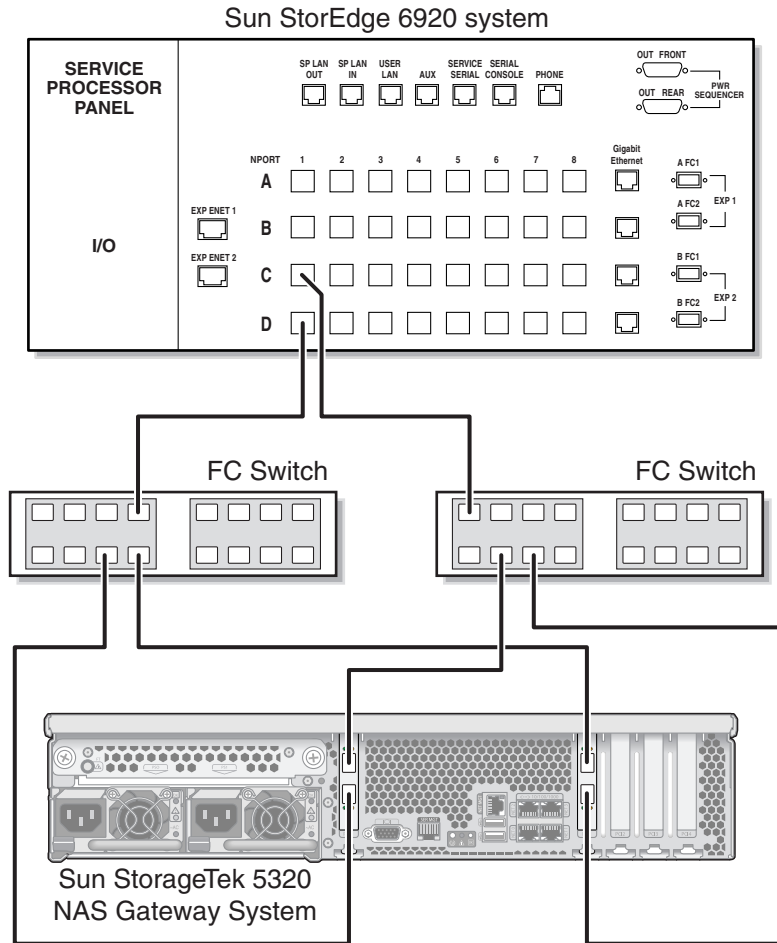


FIGURE 5-24 Connecting All HBA Ports Through Fabric Switches to the Sun StorEdge 6920 System

▼ **To Share All Sun StorEdge 6920 System LUNs Between All Port Pairs**

To enable all LUNs to be shared between all port pairs, attach the four HBA ports to two switches and use four cables to attach the switches to the Sun StorEdge 6920 system:

Note – Do not map a LUN to more than two ports on the Gateway system.

1. Connect the HBA Port 1 of the first HBA card (PCI1) to the first available port of the first fabric switch.
2. Connect the HBA Port 1 of the second HBA card (PCI0) to the first available port of the second fabric switch.
3. Connect the HBA Port 2 of the first HBA card to the next available port of the second fabric switch.
4. Connect the HBA Port 2 of the second HBA card to the next available port of the first fabric switch.
5. Connect an available port on the first switch to the first available port on the Sun StorEdge 6920 system.
6. Connect an available port on the second switch to the next available port on the Sun StorEdge 6920 system.
7. Connect the next available port on the first switch to the next available port on the Sun StorEdge 6920 system.

8. Connect the next available port on the second switch to the next available port on the Sun StorageTek 6920 system.

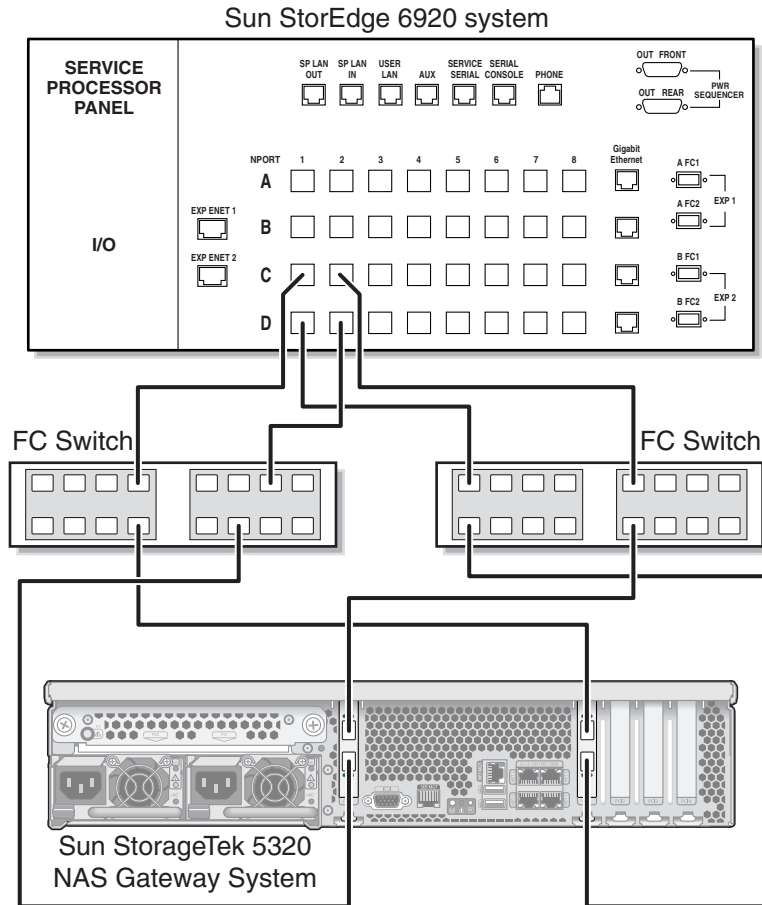


FIGURE 5-25 Connecting All HBA Ports Through Two Fabric Switches to the Sun StorEdge 6920 System

▼ To Connect Dual-Server High-Availability Fabric Attach to the Sun StorageTek 6920 System

You can connect a dual-server high-availability Sun StorageTek 5320 NAS Gateway Cluster System to SAN storage with two or four pairs of optical fiber cables, with or without additional switch connections. Using four pairs to connect all HBA ports ensures redundancy and improves processing speed.

1. Connect the HBA Port 1 of the first HBA card (PCI1) in the server H1 to the first available port of the first fabric switch.

2. **Connect the HBA Port 1 of the second HBA card (PCI0) in the server H1 to the first available port of the second fabric switch.**
3. **Connect the HBA Port 1 of the first HBA card in the server H2 to the next available port of the first fabric switch.**
4. **Connect the HBA Port 1 of the second HBA card in the server H2 to the next available port of the second fabric switch.**
5. **Connect an available port on the first switch to the first available port on the Sun StorEdge 6920 system.**

6. Connect an available port on the second switch to the next available port on the Sun StorEdge 6920 system.

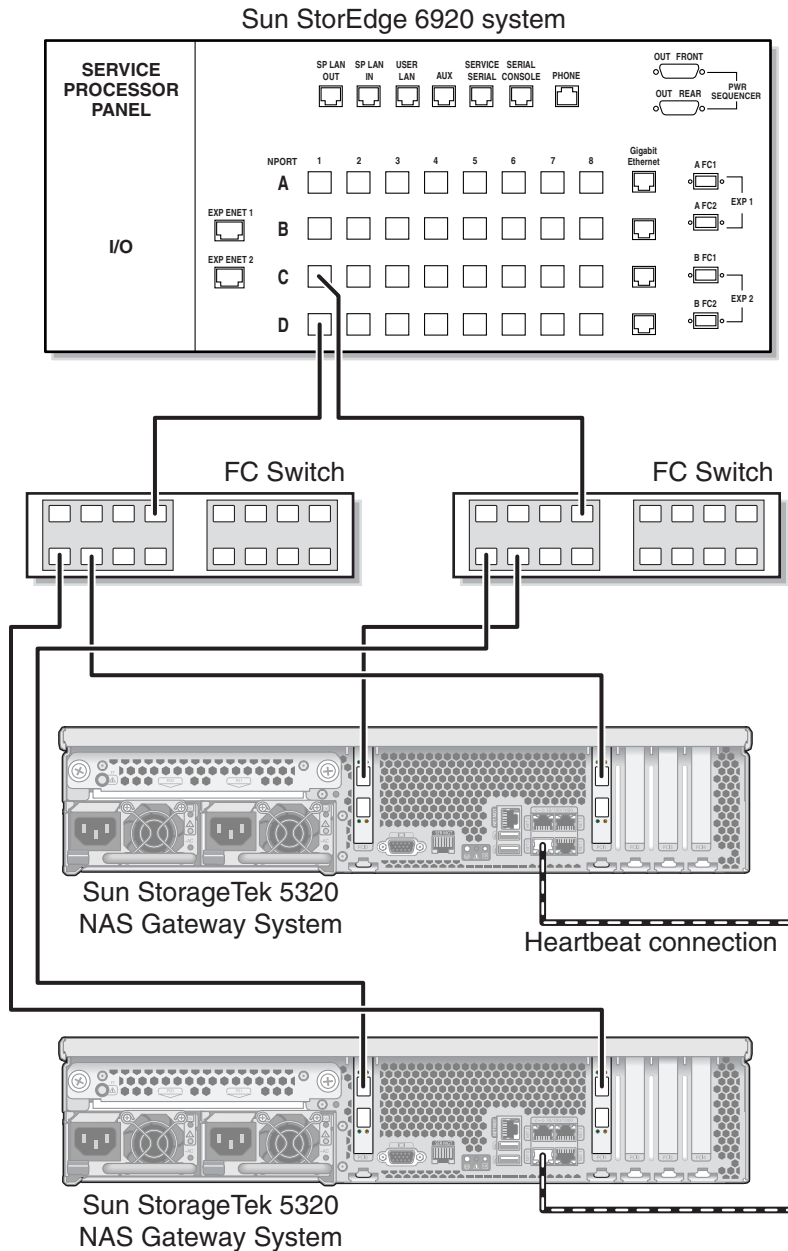


FIGURE 5-26 Connecting Two HBA Ports per HA Server Through Fabric Switches to the Sun StorEdge 6920 System

7. (Optional) To enable all LUNs to be shared between all port pairs, attach additional cables from the two switches:
 - a. Connect the next available port on the first switch to the next available port on the Sun StorEdge 6920 system.

- b. Connect the next available port on the second switch to the next available port on the Sun StorEdge 6920 system.

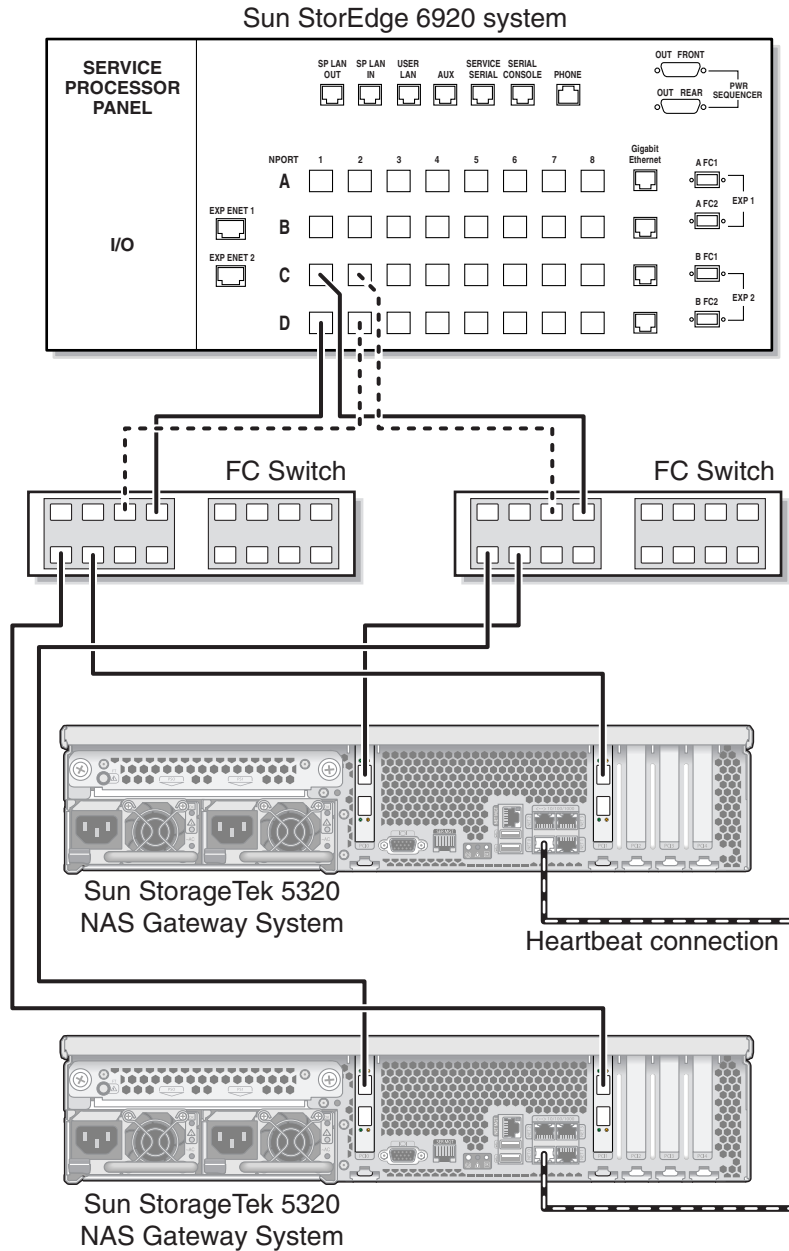


FIGURE 5-27 Connecting Two HBA Ports per HA Server Through Fabric Switches to the Sun StorEdge 6920 System With Additional Switch Connections

8. (Optional) For maximum redundancy, use all four HBA ports on each server and attach additional cables from the two switches:
 - a. Connect the HBA Port 2 of the first HBA card on server H1 to the next available port of the first fabric switch.
 - b. Connect the HBA Port 2 of the second HBA card on server H1 to the next available port of the second fabric switch.
 - c. Connect the HBA Port 2 of the first HBA card on server H2 to the next available port of the first fabric switch.
 - d. Connect the HBA Port 2 of the second HBA card on server H2 to the next available port of the second fabric switch.
 - e. Connect an available port on the first switch to the next available port on the Sun StorEdge 6920 system.
 - f. Connect an available port on the second switch to the next available port on the Sun StorEdge 6920 system.
 - g. Connect the next available port on the first switch to the next available port on the Sun StorEdge 6920 system.

- h. Connect the next available port on the second switch to the next available port on the Sun StorEdge 6920 system.

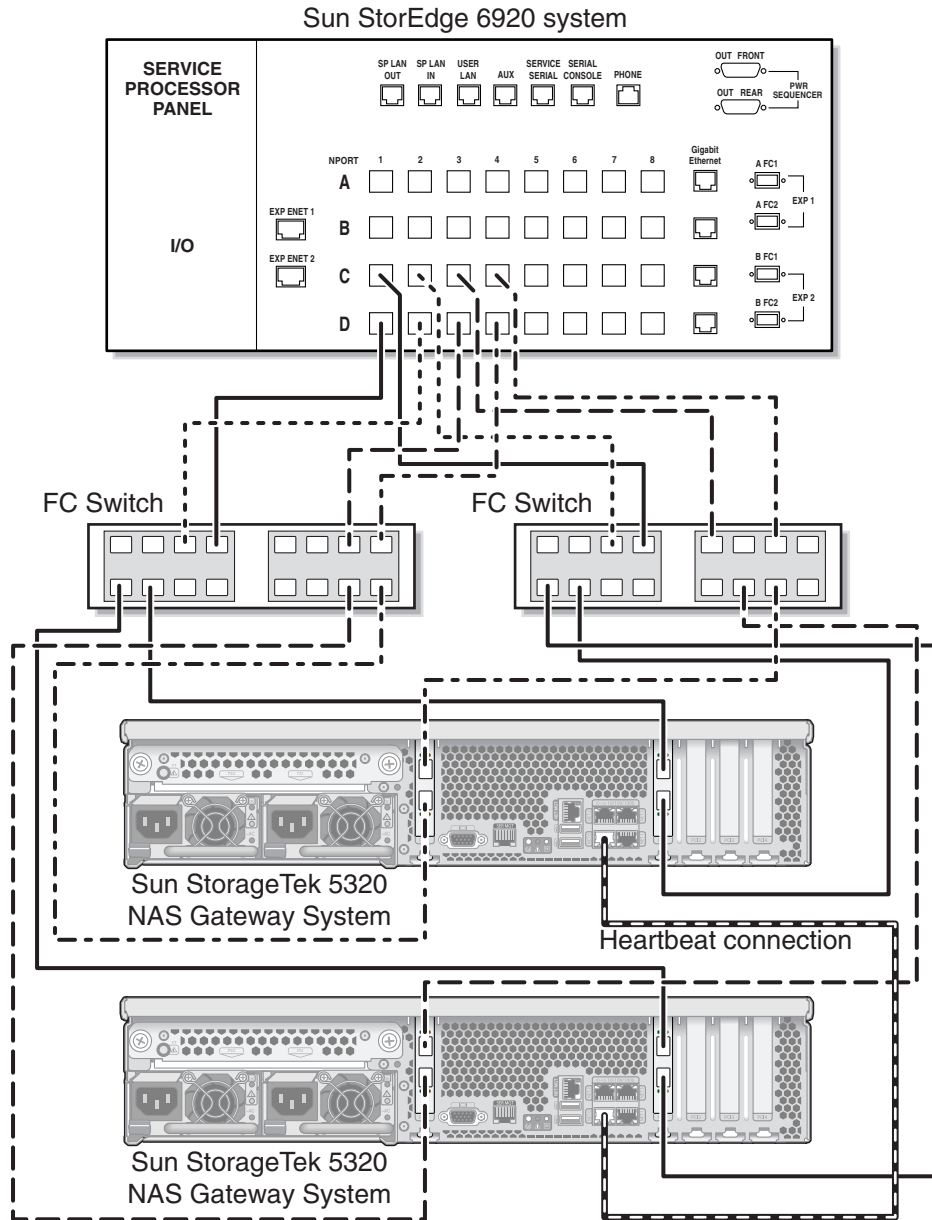


FIGURE 5-28 Connecting All HBA Ports per HA Server Through Two Fabric Switch Zones to the Sun StorEdge 6920 System

Connecting the Sun StorageTek 5320 NAS Gateway System or NAS Gateway Cluster System to the Sun StorEdge 99xx System

This section describes how to cable the Sun StorageTek 5320 NAS Gateway System or NAS Gateway Cluster System directly or through fabric switches to the Sun StorEdge 99xx system:

- [“Connecting Directly to the Sun StorEdge 99xx System” on page 143](#)
- [“Using Fabric Switches to Connect to the Sun StorEdge 99xx System” on page 148](#)

After connecting the systems, proceed to [“Connecting to the Network” on page 159](#).

Connecting Directly to the Sun StorEdge 99xx System

The following direct attach configurations are described in this section:

- [“To Connect a Single-Server Direct Attach to Sun StorEdge 99xx System” on page 143](#)
- [“To Connect a Dual-Server Direct Attach to Sun StorEdge 99xx System” on page 145](#)

Note – Do not power on the server until instructed in [“Powering On the Sun StorageTek 5320 NAS Gateway System” on page 161](#).

▼ To Connect a Single-Server Direct Attach to Sun StorEdge 99xx System

You can connect to SAN storage with one or two pairs of optical fiber cables. Using two pairs to connect all HBA ports ensures redundancy and improves processing speed.

1. **Connect the HBA Port 1 of the first HBA card (PCI1) to the first available port on the Sun StorEdge 99xx system.**

2. Connect the HBA Port 1 of the second HBA card (PCI0) to the next available port on the Sun StorEdge 99xx system.

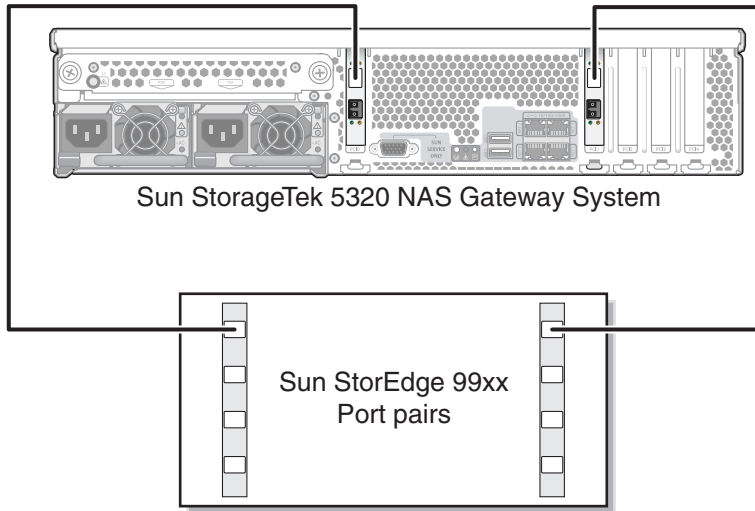


FIGURE 5-29 Connecting Two HBA Ports to the Sun StorEdge 99xx System

3. (Optional) For redundancy and increased processing speed, you can also attach the additional HBA ports:

Note – Do not map a LUN to more than two ports on the Gateway system.

- a. Connect the HBA Port 2 of the first HBA card to the next available port on the Sun StorEdge 99xx system.

- b. Connect the HBA Port 2 of the second HBA card to the next available port on the Sun StorEdge 99xx system.

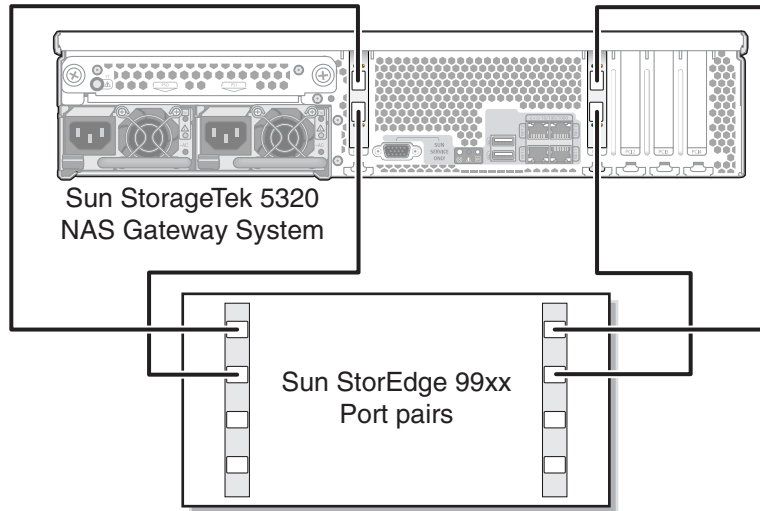


FIGURE 5-30 Connecting All HBA Ports to the Sun StorEdge 99xx System

▼ To Connect a Dual-Server Direct Attach to Sun StorEdge 99xx System

You can connect a dual-server high-availability (HA) Sun StorageTek 5320 NAS Gateway Cluster System to SAN storage with two or four pairs of optical fiber cables. Using four pairs to connect all HBA ports simulates a dual array, ensures redundancy, and improves processing speed.

1. Connect the HBA Port 1 of the first HBA card (PCI1) on server H1 to the first available port on the Sun StorEdge 99xx system.
2. Connect the HBA Port 1 of the second HBA card (PCI0) on server H1 to the next available port on the Sun StorEdge 99xx system.
3. Connect the HBA Port 1 of the first HBA card on server H2 to the next available port on the Sun StorEdge 99xx system.

4. Connect the HBA Port 1 of the second HBA card on server H2 to the next available port on the Sun StorEdge 99xx system.

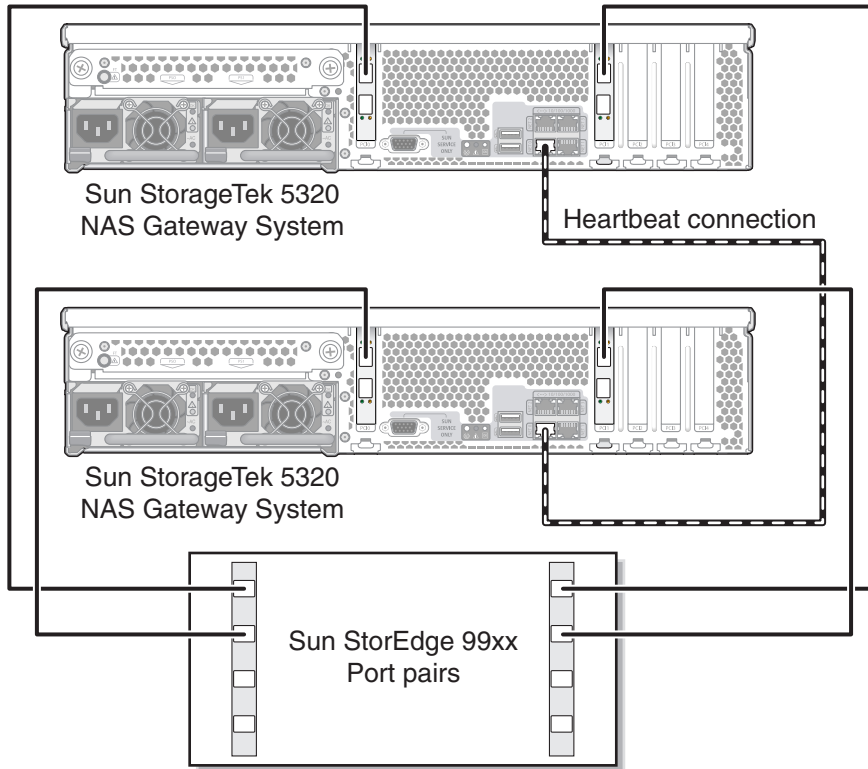


FIGURE 5-31 Connecting Two HBA Ports per HA Server to the Sun StorEdge 99xx System

5. (Optional) To simulate a dual array, you can also attach the additional HBA ports:
 - a. Connect the HBA Port 2 of the first HBA card on server H1 to the first available port on the Sun StorEdge 99xx system.
 - b. Connect the HBA Port 2 of the second HBA card on server H1 to the next available port on the Sun StorEdge 99xx system.
 - c. Connect the HBA Port 2 of the first HBA card on server H2 to the next available port on the Sun StorEdge 99xx system.

- d. Connect the HBA Port 2 of the second HBA card on server H2 to the next available port on the Sun StorEdge 99xx system.

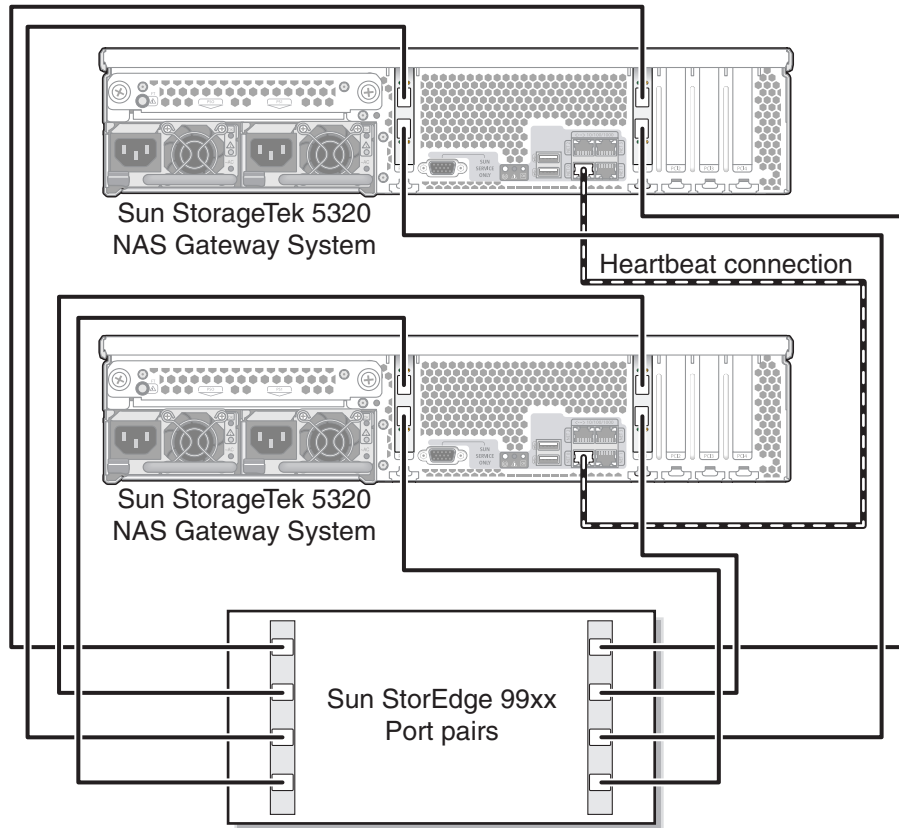


FIGURE 5-32 Connecting All HBA Ports per HA Server to the Sun StorEdge 99xx System

Using Fabric Switches to Connect to the Sun StorEdge 99xx System

The following fabric attach configurations are described in this section:

- [“To Connect a Single-Server Fabric Attach to Sun StorEdge 99xx System” on page 148](#)
- [“To Share All Sun StorEdge 99xx System LUNs Between All Port Pairs” on page 150](#)
- [“To Connect an Independent Dual-Server Fabric Attach to Sun StorEdge 99xx System” on page 152](#)
- [“To Connect a Dual-Server High-Availability Fabric Attach to Sun StorEdge 99xx System” on page 153](#)

Note – Do not power on the server until instructed in [“Powering On the Sun StorageTek 5320 NAS Gateway System” on page 161](#).

▼ To Connect a Single-Server Fabric Attach to Sun StorEdge 99xx System

You can connect to SAN storage with one or two pairs of optical fiber cables. Using two pairs to connect all HBA ports and using two switches ensures redundancy and improves processing speed.

1. **Connect the HBA Port 1 of the first HBA card (PCI1) to the first available port of the first fabric switch.**
2. **Connect the HBA Port 1 of the second HBA card (PCI0) to the first available port of the second fabric switch.**
3. **Connect an available port on the first switch to the first available port on the Sun StorEdge 99xx system.**

4. Connect an available port on the second switch to the next available port on the Sun StorEdge 99xx system.

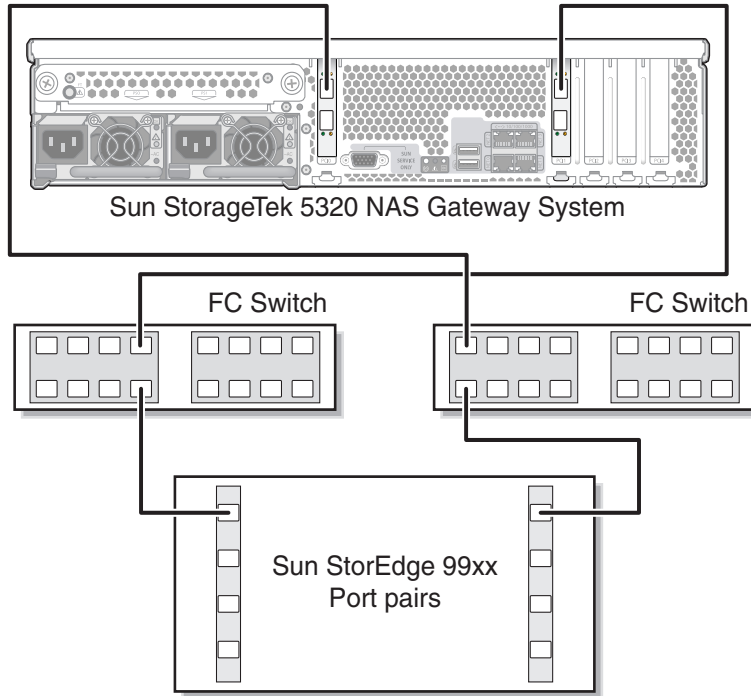


FIGURE 5-33 Connecting Two HBA Ports Through Fabric Switches to the Sun StorEdge 99xx System

5. (Optional) For redundancy and increased processing speed, attach the additional HBA ports:

Note – Do not map a LUN to more than two ports on the Gateway system.

- a. Connect the HBA Port 2 of the first HBA card to the next available port of the second fabric switch.

- b. Connect the HBA Port 2 of the second HBA card to the next available port of the first fabric switch.

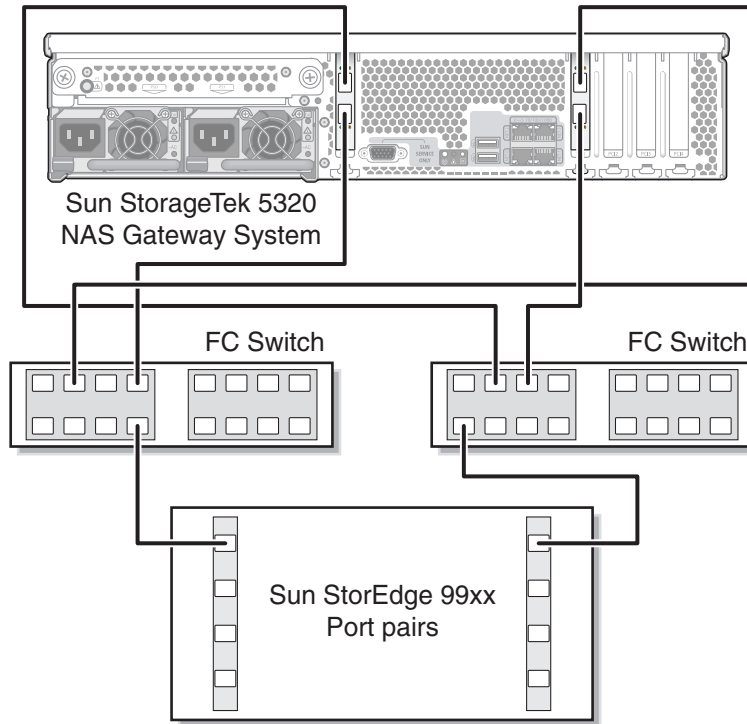


FIGURE 5-34 Connecting All HBA Ports Through Fabric Switches to the Sun StorEdge 99xx System

▼ **To Share All Sun StorEdge 99xx System LUNs Between All Port Pairs**

To enable all LUNs to be shared between all port pairs, attach the four HBA ports to two switches and use four cables to attach the switches:

Note – Do not map a LUN to more than two ports on the Gateway system.

1. Connect the HBA Port 1 of the first HBA card (PCI1) to the first available port of the first fabric switch.
2. Connect the HBA Port 1 of the second HBA card (PCI0) to the first available port of the second fabric switch.

3. Connect the HBA Port 2 of the first HBA card to the next available port of the first fabric switch.
4. Connect the HBA Port 2 of the second HBA card to the next available port of the second fabric switch.
5. Connect an available port on the first switch to the first available port on the Sun StorEdge 99xx system.
6. Connect an available port on the second switch to the next available port on the Sun StorEdge 99xx system.
7. Connect the next available port on the first switch to the next available port on the Sun StorEdge 99xx system.
8. Connect the next available port on the second switch to the next available port on the Sun StorEdge 99xx system.

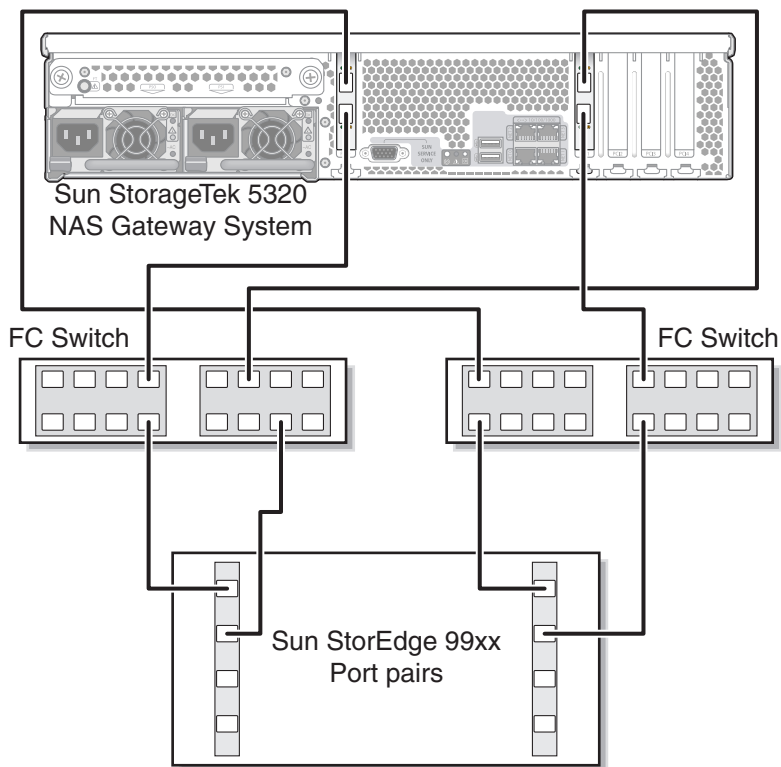


FIGURE 5-35 Connecting All HBA Ports Through Two Fabric Switches to the Sun StorEdge 99xx System

▼ To Connect an Independent Dual-Server Fabric Attach to Sun StorEdge 99xx System

You can connect two independent (not high-availability) Sun StorageTek 5320 NAS Gateway System servers.

1. **Connect the HBA Port 1 of the first HBA card (PCI1) in the first server to the first available port of the first fabric switch.**
2. **Connect the HBA Port 1 of the second HBA card (PCI0) in the first server to the first available port of the second fabric switch.**
3. **Connect the HBA Port 1 of the first HBA card in the second server to the next available port of the first fabric switch.**
4. **Connect the HBA Port 1 of the second HBA card in the second server to the next available port of the second fabric switch.**
5. **Connect an available port on the first switch to the first available port on the Sun StorEdge 99xx system.**

6. Connect an available port on the second switch to the next available port on the Sun StorEdge 99xx system.

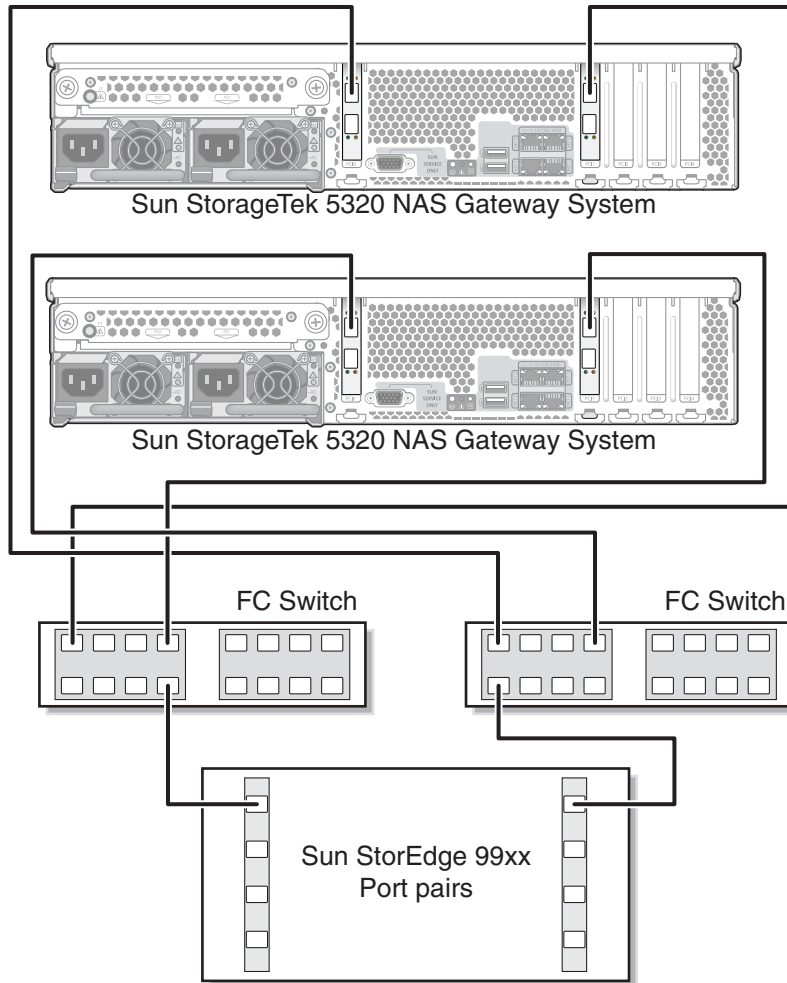


FIGURE 5-36 Connecting Two HBA Ports per Independent Server Through Fabric Switches to the Sun StorEdge 99xx System

▼ To Connect a Dual-Server High-Availability Fabric Attach to Sun StorEdge 99xx System

You can connect a dual-server high-availability Sun StorageTek 5320 NAS Gateway Cluster System to SAN storage with two or four pairs of optical fiber cables, with or without additional switch connections. Using four pairs to connect all HBA ports ensures redundancy and improves processing speed.

1. Connect the HBA Port 1 of the first HBA card (PCI1) in the server H1 to the first available port of the first fabric switch.
2. Connect the HBA Port 1 of the second HBA card (PCI0) in the server H1 to the first available port of the second fabric switch.
3. Connect the HBA Port 1 of the first HBA card in the server H2 to the next available port of the first fabric switch.
4. Connect the HBA Port 1 of the second HBA card in the server H2 to the next available port of the second fabric switch.
5. Connect an available port on the first switch to the first available port on the Sun StorEdge 99xx system.

6. Connect an available port on the second switch to the next available port on the Sun StorEdge 99xx system.

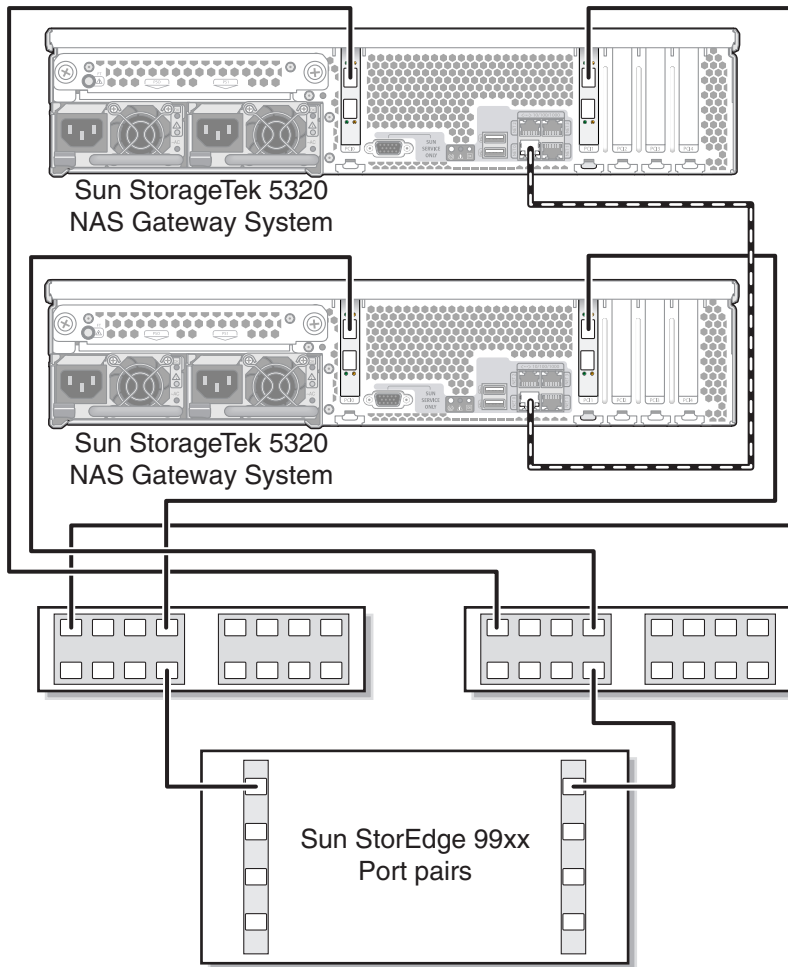


FIGURE 5-37 Connecting Two HBA Ports per HA Server Through Fabric Switches to the Sun StorEdge 99xx System

7. (Optional) To enable all LUNs to be shared between all port pairs, attach additional cables from the two switches:
 - a. Connect the next available port on the first switch to the next available port on the Sun StorEdge 99xx system.

- b. Connect the next available port on the second switch to the next available port on the Sun StorEdge 99xx system.

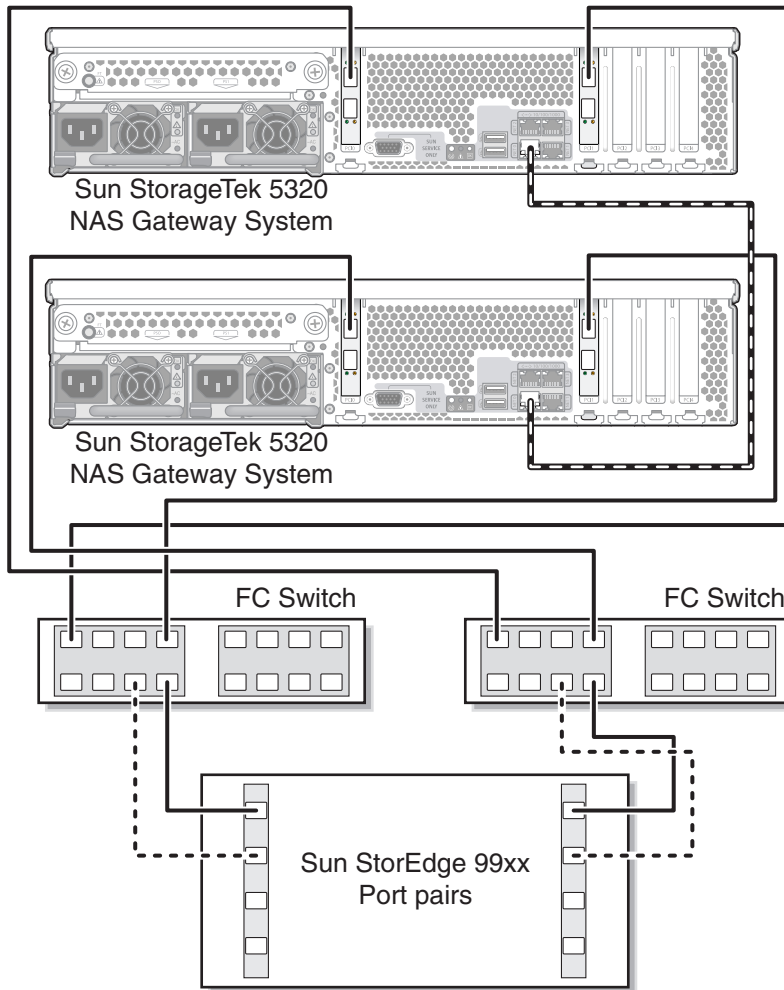


FIGURE 5-38 Connecting Two HBA Ports per HA Server Through Fabric Switches to the Sun StorEdge 99xx System With Additional Switch Connections

8. (Optional) For maximum redundancy, use all four HBA ports on each server and attach additional cables from the two switches:
 - a. Connect the HBA Port 2 of the first HBA card on server H1 to the first available port of the second fabric switch.
 - b. Connect the HBA Port 2 of the second HBA card on server H1 to the first available port of the first fabric switch.

- c. Connect the HBA Port 2 of the first HBA card on server H2 to the next available port of the second fabric switch.
- d. Connect the HBA Port 2 of the second HBA card on server H2 to the next available port of the first fabric switch.
- e. Connect an available port on the first switch to the next available port on the Sun StorEdge 99xx system.
- f. Connect an available port on the second switch to the next available port on the Sun StorEdge 99xx system.
- g. Connect the next available port on the first switch to the next available port on the Sun StorEdge 99xx system.

9. Connect the next available port on the second switch to the next available port on the Sun StorEdge 99xx system.

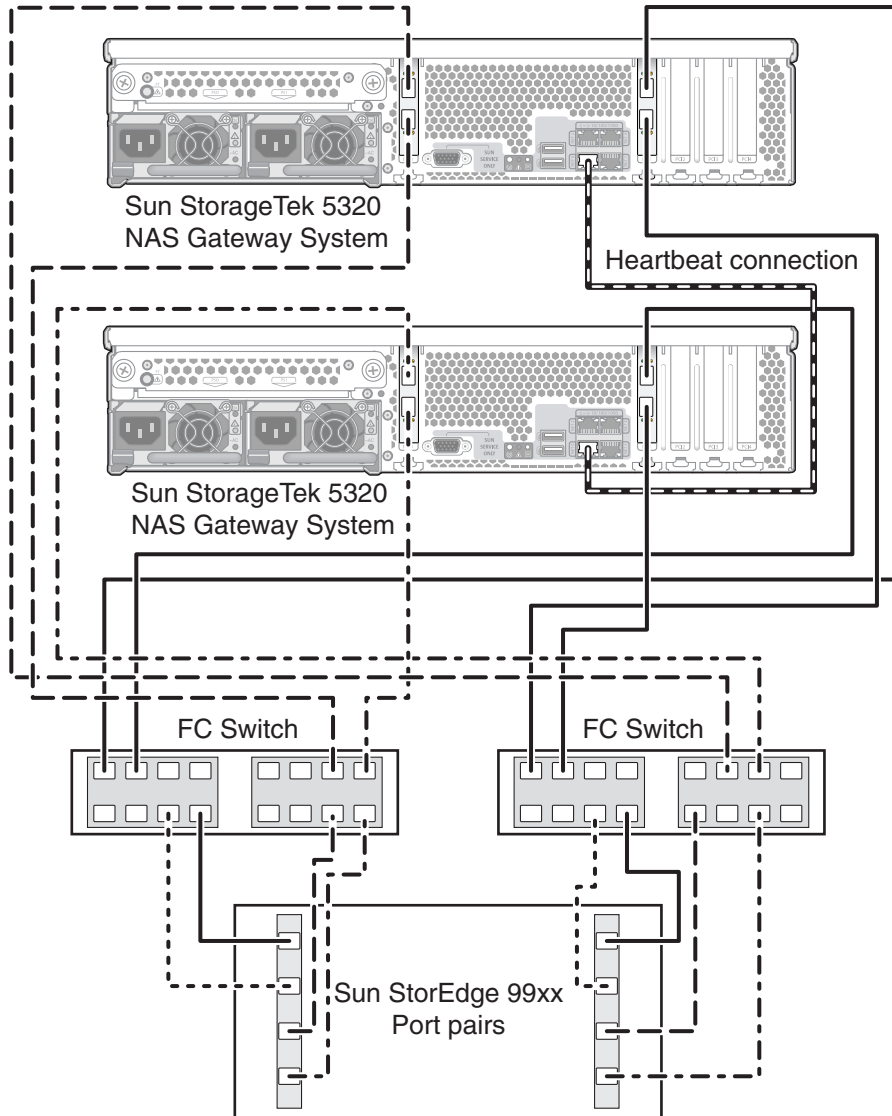


FIGURE 5-39 Connecting All HBA Ports per HA Server Through Two Fabric Switches to the Sun StorEdge 99xx System

Connecting to the Network

The Sun StorageTek 5320 NAS Gateway System network connections depend on your system configuration. Each configuration is described in this section.

Connecting Single Servers

The available network connectors depend on your system configuration: Fast Ethernet or optical Gigabit Ethernet (optional card installation required).

- ▼ To Connect to a 100BASE-T Fast Ethernet Network or to a 1000BASE-T Gigabit Network
 - Connect an RJ-45 unshielded twisted-pair cable from your local area network (LAN) to the port NET0 or the port NET1 on the back of the Sun StorageTek 5320 NAS Gateway System.

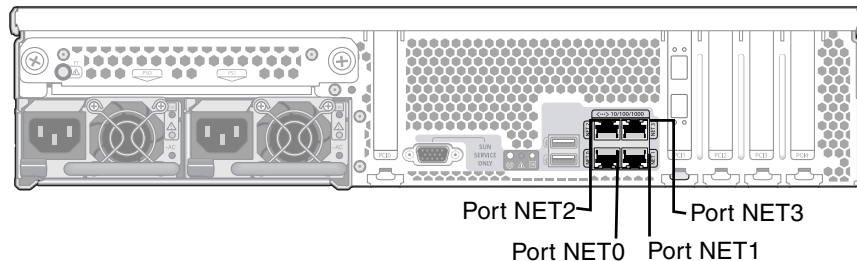


FIGURE 5-40 Connecting to a Fast Ethernet or a Gigabit Ethernet Network

Note – Later, when you configure the system (see [“Initial Sun StorageTek 5320 NAS Gateway System Single-Server Configuration”](#) on page 163), the NET0 port displays as “Port emc1” and the NET1 port displays as “Port emc2.”

▼ To Connect to an Optical Gigabit Ethernet Network

- Connect an optical network cable to the top (LINK A) optical gigabit Ethernet connector and another optical network cable to the bottom (LINK B) optical Gigabit Ethernet connector on the back of the Sun StorageTek 5320 NAS Gateway System.

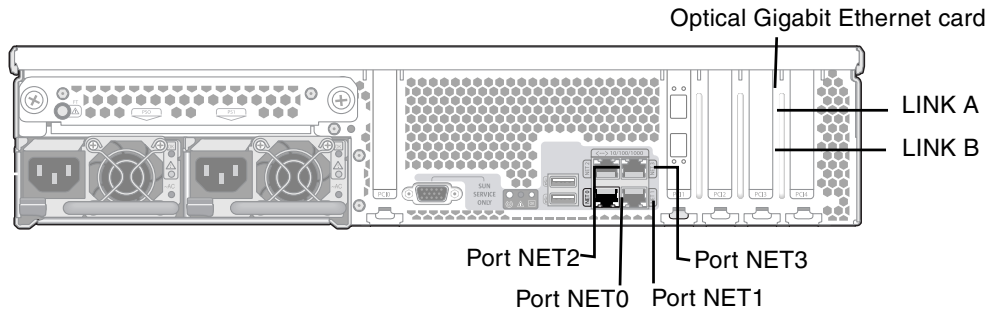


FIGURE 5-41 Connecting to an Optical Gigabit Ethernet Network

Note – Later, when you configure the system (see [“Initial Sun StorageTek 5320 NAS Gateway System Single-Server Configuration”](#) on page 163), the LINK A port displays as “Port emf3” and the LINK B port displays as “Port emf4.”

Connecting Dual-Server HA Servers

Each server in a dual-server Sun StorageTek 5320 NAS Gateway Cluster System uses a dedicated Ethernet connection to communicate with its partner and perform periodic “health checks.” The port used for the health check connection is referred to as the *heartbeat port*. The NET0 Gigabit Ethernet port is used for the heartbeat.

The dual-server Sun StorageTek 5320 NAS Gateway Cluster System is commonly configured with four on-board copper gigabit ports and two dual-port Gigabit Ethernet cards (FIGURE 5-42).

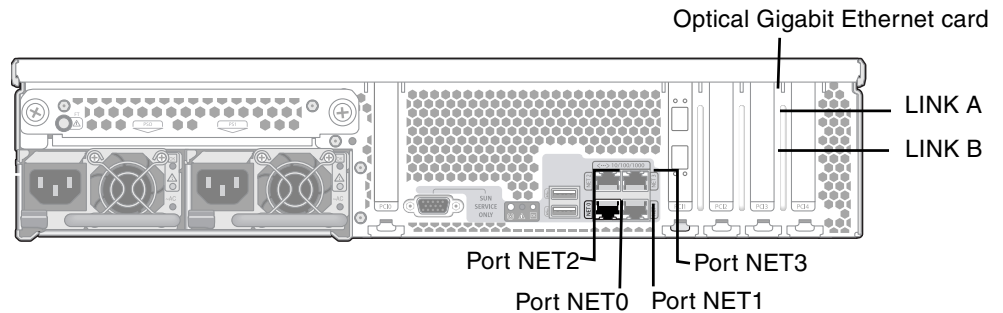


FIGURE 5-42 Dual Server HA NIC Ports

▼ To Connect the Health-Monitoring Cable

- Use an RJ-45 unshielded twisted-pair cable to connect the two servers' NET0 heartbeat ports.

▼ To Connect to a Fast Ethernet or Gigabit Ethernet Network

- Connect a Cat5 (for a 100BASE-T network) or Cat5e (for a 1000BASE-T network) Ethernet cable from your LAN to the NIC NET1, NET2, or NET3 port on the back of each of the servers (see FIGURE 5-42 for NIC port locations).

▼ To Connect to an Optical Gigabit Ethernet Network

- Connect an optical network cable from the network to the top (LINK A) and connect another optical network cable from the network to the bottom (LINK B) optical Gigabit Ethernet connector on the back of each of the servers (see FIGURE 5-42 for NIC and optical Gigabit Ethernet port locations).

Powering On the Sun StorageTek 5320 NAS Gateway System

Before you proceed with initializing the system, you should power on the Sun StorageTek 5320 NAS Gateway System or NAS Gateway Cluster System.

1. Verify that all cables between the Sun StorageTek 5320 NAS Gateway System and SAN storage have been connected.

Refer to [“Connecting the Sun StorageTek 5320 NAS Gateway System to the Sun StorEdge 6130 Array”](#) on page 102, [“Connecting the Sun StorageTek 5320 NAS Gateway System to the Sun StorEdge 6920 System”](#) on page 127, or [“Connecting the Sun StorageTek 5320 NAS Gateway System or NAS Gateway Cluster System to the Sun StorEdge 99xx System”](#) on page 143.

2. Verify that the Sun StorageTek 5320 NAS Gateway System is connected to the network.

Refer to [“Connecting to the Network”](#) on page 159.

3. For the Sun StorageTek 5320 NAS Gateway Cluster System dual-server configuration, verify that the health-monitoring cable is connected.

Refer to [“To Connect the Health-Monitoring Cable”](#) on page 161.

4. Using a pen tip or similar implement, press the recessed Power button (FIGURE 5-43).

For the Sun StorageTek 5320 NAS Gateway Cluster System dual-server configuration, power on both servers.

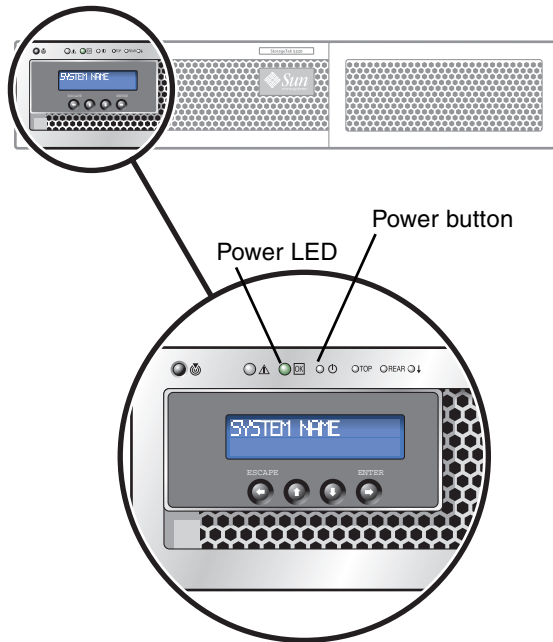


FIGURE 5-43 Power Button and Front Panel Detail

5. **Wait for the system to boot up and display the menu on the LCD panel.**

The NIC, System Status, and System ID LEDs should be green. On the back of the server, the link lights for the HBA ports should be green.

6. **Proceed to the appropriate initial configuration instructions.**

For the Sun StorageTek 5320 NAS Gateway System single-server configuration, refer to [“Initial Sun StorageTek 5320 NAS Gateway System Single-Server Configuration” on page 163.](#)

For the Sun StorageTek 5320 NAS Gateway Cluster System configuration, refer to [“Initial Sun StorageTek 5320 NAS Gateway Cluster System Configuration” on page 167.](#)

Initial Sun StorageTek 5320 NAS Gateway System Single-Server Configuration

Note – These instructions apply to the Sun StorageTek 5320 NAS Gateway System single server only. For Sun StorageTek 5320 NAS Gateway Cluster System configuration instructions, refer to [“Initial Sun StorageTek 5320 NAS Gateway Cluster System Configuration” on page 167.](#) For Sun StorageTek 5320 NAS Appliance configuration instructions, refer to [Chapter 3.](#)

To complete the initial Sun StorageTek 5320 NAS Gateway System configuration, you must specify the following:

- IP address
- Basic configuration information
- Storage and LUN configuration

▼ To Set the IP Address

If your network supports DHCP, an IP address is automatically assigned to your LAN port.

If DHCP is not available or you want to assign a static IP address, use the server’s LCD panel:

1. **Select Menu.**

2. **Select A. Network Config.**

3. **Select A. Set Gateway and enter the gateway address.**

To enter data, use the up and down arrow buttons to select digits, dots, or spaces. Then use the ENTER or right arrow button to accept each character.

4. **Select C. Set Port-emx1 or C. Set Port-emx2 (depending on which port is the first regular LAN port) and enter the IP address, subnet mask, and broadcast address as prompted.**

This IP address information is assigned to the first regular LAN port on your system.

5. **Select Escape twice to return to the main menu.**

Configuring the Single-Server System

To configure the system, you must set up basic system configuration and activate the license for the server.

Note – You must perform both tasks before proceeding to [“SAN Storage Configuration” on page 175.](#)

▼ To Set Up Basic Configuration

1. **From a client on the same network, open a Java platform-enabled web browser with Java Plug-in and enter the IP address for the server.**

2. **Accept the “Applet Security Certificate” and wait until the Web Admin applet is loaded on this system.**

3. **On the Web Admin login screen, click Apply.**

The password can be set later. Refer to the *Sun StorageTek 5320 NAS Appliance and Gateway System Administration Guide*.

4. **On the Set Time and Date panel, select the date, the time, and the time zone, and click Apply. Then click Yes to confirm.**

This sets the secure clock to the same time and date. Make sure you set the time and date accurately as you can set the secure clock only once.

5. **Read the license agreement in the Configuration wizard dialog box, and click Accept to proceed with the following wizard steps:**

a. **Click Next in the Welcome dialog box.**

- b. From the **Select Environment** screen, configure **Windows**, **UNIX**, or both environments, and click **Next** to continue.
- c. From the **Set Server Name** screen, type the server name and populate the other fields accordingly, and then click **Next**.
- d. On the **Configure Network Adapters** screen, verify that the information is correct, and click **Next** to continue.
You can configure additional network interfaces at this time. However, if you change the configuration of the port to which the browser is attached, the browser session is disconnected.
- e. On the **Set Gateway Address** screen, verify that the address is correct, and, if not, type the gateway address. Click **Next** to continue.
- f. For all the other wizard configuration steps, refer to the *Sun StorageTek 5320 NAS Appliance and Gateway System Administration Guide* for more information.

Note – When adding your DNS server, click **Add** to ensure that the DNS server has been added.

- g. In the **Confirmation** screen, review the configuration information you have added.

Note – Be sure the configuration information is accurate before continuing.

- h. Click **Finish** on the wizard **Confirmation** screen.

The system configures the settings and indicates that in the **Save Configuration** screen. It also displays a message that both servers must reboot for the failover changes to be applied.

- i. Click **Close** on the **Save Configuration** screen.

▼ To Activate the Sun StorageTek NAS Gateway License

1. In the navigation panel, select **System Operations > Activate Options**.
2. Click the **Temporary Licenses** button.
3. Select **Sun StorageTek NAS Gateway**, and click **Apply**.
The **State** displays “valid” and the **Status** displays “active.”
4. Log out of **Web Admin**, and close all browser instances.

Note – You must close *all* browser windows you have open. If you don't, the license feature will not set up properly.

5. Restart the Web Admin using [Step 1](#) through [Step 3](#) in ["To Set Up Basic Configuration"](#) on page 164.
6. When you have logged in to Web Admin, on the main System Status window, check the Features Enabled to be sure that **"Sun StorageTek NAS Gateway"** appears.
7. In the navigation panel, select RAID > View HBA Information to view the port World Wide Names (WWNs) of the HBA ports.

Each HBA port is delineated by a tab at the top of the window. HBA port numbering refers to the physical HBA ports from right to left and bottom to top, as shown in [TABLE 5-1](#).

TABLE 5-1 HBA Port Numbering

HBA Port Number	HBA Port Physical Location	HBA Port Name
1	Port 1 PCI1	isp1
2	Port 2 PCI1	isp2
3	Port 1 PCI0	isp3
4	Port 2 PCI0	isp4

For each HBA port, the port WWN is listed in the upper portion of the window. The port WWNs are used to map the LUNs on the SAN storage device or to zone these ports on the fabric switch.

8. Write down the port WWNs of all the HBA ports.
WWNs consist of 16 characters that start after the "x" and do not include the "."
9. Log out of Web Admin and close the browser.
10. Configure SAN storage using the appropriate instructions:
 - ["Sun StorEdge 6130 Array"](#) on page 175
 - ["To Configure Storage on the Sun StorEdge 6920 System"](#) on page 178
 - ["To Configure Storage on the Sun StorEdge 99xx System"](#) on page 179
11. Configure storage on the Sun StorageTek 5320 NAS Gateway System using the instructions in the next section.

▼ To Configure Storage on the Sun StorageTek 5320 NAS Gateway System Single Server

1. **Reboot the Sun StorageTek 5320 NAS Gateway System server so that it can detect the storage.**

You can reboot using Web Admin or the LCD panel.

To use Web Admin to reboot:

- a. **In the navigation panel, select System Operations > Shut Down the Server.**
- b. **Select Reboot This Head, and click Apply.**

To use the LCD panel to reboot:

- a. **On the server's LCD panel, select B. Shutdown Server from the menu.**
 - b. **Select B. Reboot. The LCD displays "Are you sure? No." Press the up arrow button to change to "Yes." Then press the ENTER or the right arrow button to reboot.**
2. **After the server has rebooted, use Web Admin to configure file volumes.**

Refer to the *Sun StorageTek 5320 NAS Appliance and Gateway System Administration Guide*.

Initial Sun StorageTek 5320 NAS Gateway Cluster System Configuration

Note – These instructions apply to the Sun StorageTek 5320 NAS Gateway Cluster System configuration only. For Sun StorageTek 5320 NAS Gateway System configuration instructions, refer to [“Initial Sun StorageTek 5320 NAS Gateway System Single-Server Configuration” on page 163](#). For Sun StorageTek 5320 NAS Cluster Appliance configuration instructions, refer to [Chapter 4](#).

To complete the initial Sun StorageTek 5320 NAS Gateway Cluster System configuration, you must specify the following:

- IP addresses
- Basic system configuration
- Storage and LUN configuration
- Failover configuration
- LUN paths

▼ To Set IP Addresses

If your network supports DHCP, an IP address is automatically assigned to your LAN ports.

Note – You can bypass DHCP discovery if you have a fixed IP address. However, there is a possibility that aborting the DHCP process will cause the server to reboot. To bypass DHCP discovery, during the boot sequence when the LCD panel displays “DHCP Discovery NIC X,” you can press any key on the LCD panel and confirm the “Abort DHCP?” message by pressing the right arrow button on the panel. Then you can manually set the static IP address using the following instructions.

If DHCP is not available or you want to assign a static IP address, use server H1’s LCD panel:

1. **Select Menu.**
2. **Select A. Network Config.**
3. **Select A. Set Gateway and enter the gateway address.**

To enter data, use the up and down arrows to select digits, dots, or spaces. Then use the ENTER or right arrow button to accept each character.
4. **Select C. Set Port-emc2 (or emc3 or emc4) and enter the IP address, subnet mask, and broadcast address as prompted.**

This IP address information is assigned to the first regular (non-heartbeat) LAN port on your system.
5. **Select Escape twice to return to the main menu.**



Caution – Do not change the private IP address on the network port that is used for the HB port (heartbeat port), emc1.

Note – If you would like to verify your settings on the LCD panel, HB Port shows a private IP address, and Port emc2 or Port emc3 or Port emc4 shows the information you just entered.

You can edit the port information and assign addresses to other ports in the same way.

Basic Dual-Server System Configuration

To configure the system, you must set up basic system configuration and activate the license for server H1, and then repeat the steps for server H2.

Note – You must perform all basic system configuration tasks on both servers before proceeding to [“To Configure LUN Paths” on page 174](#).

▼ To Set Up Basic Configuration

1. **From a client on the same network, open a Java platform-enabled web browser with Java Plug-in and type the IP address for server H1.**
2. **Accept the “Applet Security Certificate” and wait until the Web Admin applet is loaded on this system.**
3. **On the Web Admin login screen, click Apply.**

The password can be set later. Refer to the *Sun StorageTek 5320 NAS Appliance and Gateway System Administration Guide*.
4. **On the Set Time and Date panel, select the date, the time, and the time zone, and click Apply. Then click Yes to confirm.**

This sets the secure clock to the same time and date. Make sure you set the time and date accurately as you can set the secure clock only once.
5. **Read the license agreement in the Configuration wizard dialog box, and click Accept to proceed with the following wizard steps:**
 - a. **Click Next in the Welcome dialog box.**
 - b. **From the Select Environment screen, configure Windows, UNIX, or both environments. Click Next to continue.**

You can add additional configuration information later.
 - c. **From the Set Server Name screen, type the server name and populate the other fields accordingly, and then click Next.**
 - d. **On the Enable Failover screen, skip the screen by clicking Next.**



Caution – Do not enable failover at this time. Storage must be configured before failover can be enabled.

In the partner configuration part of the screen, the system initially sets default server names head1 and head2. You can change these defaults later when you configure failover (see [“To Configure Failover” on page 172](#)).

- e. **On the Configure Network Adapters screen, verify that the information is correct, and click Next to continue.**

You can configure additional network interfaces at this time. However, if you change the configuration of the port to which the browser is attached, the browser session is disconnected.

- f. **On the Set Gateway Address screen, verify that the address is correct, and, if not, enter the gateway address. Click Next to continue.**
- g. **For all the other wizard configuration steps, refer to the *Sun StorageTek 5320 NAS Appliance and Gateway System Administration Guide* for more information.**

Note – When adding your DNS server, click Add to ensure the DNS server has been added.

- h. **In the Confirmation screen, review the configuration information you have added.**

Note – Be sure the configuration information is accurate before continuing.

- i. **Click Finish on the wizard Confirmation screen.**

The system configures the settings and indicates that in the Save Configuration screen.

- j. **Click Close on the Save Configuration screen.**

▼ To Activate the Sun StorageTek NAS Gateway License

1. **In the navigation panel, select System Operations > Activate Options.**
2. **Click the Temporary Licenses button.**
3. **Select Sun StorageTek NAS Gateway, and click Apply.**
The State displays “valid” and the Status displays “active.”
4. **Log out of Web Admin, and close all browser instances.**

Note – You must close *all* browser windows you have open. If you don't, the license feature will not set up properly.

5. **Restart Web Admin using [Step 1](#) through [Step 3](#) in “Basic Dual-Server System Configuration” on page 169.**

6. When you have logged in to Web Admin, on the main System Status window, check the Features Enabled to be sure that “Sun StorageTek NAS Gateway” appears.
7. In the navigation panel, select RAID > View HBA Information to view the port World Wide Names (WWNs) of the HBA ports.

The port WWNs are used to map the LUNs on the SAN storage device or to zone these ports on the fabric switch.

Each HBA port is delineated by a tab at the top of the window. HBA port numbering refers to the physical HBA ports from right to left and bottom to top. Refer to [TABLE 5-1, “HBA Port Numbering” on page 166](#).

For each HBA port, the port WWN is listed in the upper portion of the window. The port WWNs are used to map the LUNs on the SAN storage device or to zone these ports on the fabric switch.
8. Write down the port WWNs of all the HBA ports.

WWNs consist of 16 characters that start after the “x” and do not include the “.”
9. Log out of Web Admin and close the browser.

▼ To Set Up Server H2

1. Assign server H2’s IP address and gateway address using the instructions in [“To Set IP Addresses” on page 168](#).
2. Set up server H2’s basic configuration using the instructions in [“To Set Up Basic Configuration” on page 169](#).
3. Activate server H2’s license using the instructions [“To Activate the Sun StorageTek NAS Gateway License” on page 170](#).

▼ To Configure SAN Storage on the Sun StorageTek 5320 NAS Gateway Cluster System

1. Configure SAN storage using the appropriate instructions:
 - [“Sun StorEdge 6130 Array” on page 175](#)
 - [“To Configure Storage on the Sun StorEdge 6920 System” on page 178](#)
 - [“To Configure Storage on the Sun StorEdge 99xx System” on page 179](#)
2. Configure storage on the Sun StorageTek 5320 NAS Gateway Cluster System, using the instructions in the next section.

▼ To Configure Storage on the Sun StorageTek 5320 NAS Gateway Cluster System

1. Reboot server H1 using Web Admin or the LCD panel:

- Using Web Admin, in the navigation panel, select System Operations > Shut Down the Server. Then select Reboot Both Heads, and click Apply.
- Using the LCD panel, select B. Shutdown Server from the menu. Then select B. Reboot. The LCD displays “Are you sure? No.” Press the up arrow button to change to “Yes.” Then press the ENTER or right arrow button to reboot.

2. Power off server H2 using Web Admin or the LCD panel:

- Using Web Admin, in the navigation panel, select System Operations > Shut Down the Server. Then select Halt Both Heads, and click Apply.
- Using the LCD panel, select B. Shutdown Server from the menu. Then select A. Power Off. The LCD displays “Are you sure? No.” Press the up arrow button to change to “Yes.” Then press the ENTER or right arrow button to shut down.

3. When server H1 has restarted and the LCD panel displays QUIET, press the ENTER or right arrow button. Then press the down arrow button until the flashing cursor is on C. Take All LUNs.

4. Press the ENTER or right arrow button to select C. Take All LUNs.

5. When prompted to “Take All LUNs? No,” press the up arrow button to select “Yes,” and press the ENTER or right arrow button to start taking LUNs.

The LCD displays “Taking LUNs” followed by a message “Took *n* LUNs.” After a few seconds, the display returns to the Network Config menu.

Note – If server H2 is still powered on when you select C. Take All LUNs, you are prompted to shut down the partner (server H2). After you power off server H2, the display on server H1 changes to “Taking All LUNs.”

6. Select Escape to return to the main menu.

Server H1 is now in the ALONE state.

▼ To Configure Failover

1. Launch a new browser window and enter server H1's IP address.

2. If necessary, accept the “Applet Security Certificate” and wait until the Web Admin applet is loaded.

3. On the Web Admin login screen, click Apply.

4. In the navigation panel, select High Availability > Recover.

5. In the **Current RAID Configuration** and **Restore RAID Configuration** panels, confirm that all the LUNs are listed in the **Head 1** columns.

There is nothing listed under any **Head 2** column.

6. In the navigation panel, select **High Availability > Enable Failover**.

7. Select **Automatic Failover** and **Enable Link Failover**.

A default value of 60 seconds is assigned in both the **Down Timeout** and **Restore Timeout** fields.

8. Type the **Partner Configuration Name** and the **Gateway IP address** for server H2 (**Partner Name** factory default is "head2"), using the **Tab** key to move between fields.

The information you enter here is used to start server H2 through the heartbeat connection. The **Partner Name** is the host name that you assigned to server H2. Any network information server H2 obtained through DHCP or manually through the LCD panel is displayed here and can be corrected, if necessary.

The field for **Private IP** for the heartbeat connection should already be populated (IP 10.10.10.2 private network) and should not be changed.

9. Click **Apply**.

10. A message appears stating that the system will be rebooted for changes to take effect. Confirm that you want to reboot both servers.

Server H1 reboots automatically, and you need to manually restart server H2.

11. If server H2 is powered off, power it on. Otherwise, reboot server H2 in one of these ways:

- Using **Web Admin** for server H2, select **System Operations > Shut Down the Server**.
- Use the **LCD panel** on server H2.

12. When the servers have restarted, log in to the **Web Admin** on server H1.

13. In the main **Server Status** window, check that the **Head Status** is **ALONE** and the **Partner Status** is **QUIET**.

▼ To Assign LUNs to Server H2

1. Using **Web Admin** on server H1, in the navigation panel, select **High Availability > Recover**.

2. In the **Restore RAID Configuration** window, assign some of the LUNs to server H2.

Note – You must assign at least one LUN to each server. In most situations, you will want approximately equal amounts of storage assigned to each server in the cluster.

3. Click Apply.

Note – Verify that the Current RAID Configuration window shows the LUN assignments.

4. Click Recover, and the LUNs are distributed between both the servers.

At this point, both servers change to the NORMAL state.

Note – Verify that both servers are in the NORMAL state on the LCD display or on the Web Admin main Server Status window, where the Head and Partner Status should display NORMAL.

5. Follow these steps first on server H1 and then on server H2:

- a. Using Web Admin on server H1, in the navigation panel, select **Network Configuration > Configure TCP/IP > Configure Network Adapters**.
- b. Check that the emc or emf NIC port being used displays the partner IP alias address.

▼ To Configure LUN Paths

You should assign LUN paths on each server to balance multipath access from each server to storage.

Follow these steps first on server H1 and then on server H2:

1. In the Web Admin navigation panel, select High Availability > Set LUN Path.

2. Select a LUN and click Edit.

3. Select the desired storage from the Primary Path drop-down menu.

Evenly divide the assignment of LUNs to the two available paths. For example, the first and third LUN to 1/0 and the second and fourth LUN to 1/1.

4. Click Apply.

Refer to the *Sun StorageTek 5320 NAS Appliance and Gateway System Administration Guide* for additional information about LUNs and other detailed software setup and use.

SAN Storage Configuration

To configure storage for the Sun StorageTek 5320 NAS Gateway System, you must first configure the SAN storage system and then finish configuration on the Sun StorageTek 5320 NAS Gateway System.

Note – You must perform all the storage and LUN configuration tasks to complete the initial configuration.

If you are using fabric switches, use the switch user interface (UI) to include all WWNs of the SAN storage and of the HBAs on the Sun StorageTek 5320 NAS Gateway System.

Sun StorEdge 6130 Array

To use the Sun StorEdge 6130 array for Sun StorageTek 5320 NAS Gateway System storage, there are certain requirements.

The Sun StorEdge 6130 array requires the software and firmware shown in [TABLE 5-2](#) to interoperate with the Gateway System.

TABLE 5-2 Required Sun StorEdge 6130 Array Software and Firmware

Software	Version (minimum)	Patch ID
Sun StorEdge 6130 array management software	1.3	118164-06
Controller CRM-F firmware	06.12.09.10	117856-18
Array firmware installer		118185-14

If the Sun StorEdge 6130 array is currently at version 1.2, upgrade the management software to version 1.3 before installing the patches.

If the Sun StorEdge 6130 array is currently at version 1.3, install the patches as described in [“To Upgrade the Sun StorEdge 6130 Array Firmware” on page 176](#).

▼ To Upgrade the Sun StorEdge 6130 Array Management Software

1. From the Sun StorEdge 6130 array management interface, log in to the Sun Storage Automated Diagnostic Environment and clear all existing alarms.
2. Log in to the management host as `root`.
3. Download the latest Sun StorEdge 6130 host software package v1.3 for Solaris OS from <http://sunsolve.sun.com> to any working directory on the management host.
4. Unzip the distribution file and untar the file.
5. Enter the following command:

```
./upgrade -n
```

The `-n` option specifies a non-interactive upgrade. After asking whether you want to upgrade software or firmware, the script completes the upgrade without pausing for questions.

When the installation is complete, a confirmation is displayed followed by the date and time that the upgrade finished.

You can now install the patches as described in the next section.

▼ To Upgrade the Sun StorEdge 6130 Array Firmware

1. Download the required patches (see [TABLE 5-2](#)) from <http://sunsolve.sun.com/>.
2. Stop all I/O to the disk drives.
3. Log in to the management host as `root`.
4. Change to the directory to which you downloaded the software.
5. Install each patch by following the instructions in the patch `README` file.
6. Verify that the latest patches are installed:
 - a. Open a supported browser.
 - b. Enter the IP address of the management host using this format:

```
https://host_IP:6789
```
 - c. Log in to the management software.
 - d. Click **Sun StorEdge 6130 Configuration Service**.

The Array Summary page is displayed.

- e. Verify that the Firmware Version column displays 06.12.09.10 (or greater).

Verifying the Array

To verify that the array is seen by the Sun StorEdge 6130 host software, use automatic discovery or manual registration.

▼ To Automatically Verify the Array

If the array is on the same subnet as the management host, you can automatically verify the array.

1. **Open a supported browser.**
2. **Type the IP address of the management host using this format:**
`https://host-IP:6789`
3. **Log in to the management software.**
4. **Click Sun StorEdge 6130 Configuration Service.**
The Array Summary page is displayed.
5. **On the Array Summary page, click Auto Discover to display arrays that are on the same subnet as the management host.**

Note – It takes approximately 2 minutes for the software to discover each array.

6. **Verify that the array is listed on the Array Summary page.**

▼ To Manually Register the Array

If the array is not on the same subnet as the management host, you must manually register the array.

1. **Open a supported browser.**
2. **Type the IP address of the management host using this format:**
`https://host-IP:6789`
3. **Log in to the management software.**
4. **Click Sun StorEdge 6130 Configuration Service.**
The Array Summary page is displayed.

5. On the Array Summary page, click Register Array.
The Array Registration page is displayed.
6. Enter the IP address of the controller and click OK.
7. Verify that the array is listed on the Array Summary page.

▼ To Configure Storage on the Sun StorEdge 6130 Array

1. Using the Sun StorEdge 6130 Configuration Service, create a new initiator.
2. Create a new volume and map it to the Sun StorageTek 5320 NAS Gateway System.
3. Complete configuration on the Sun StorageTek 5320 NAS Gateway System.

For the single-server system, refer to [“To Configure Storage on the Sun StorageTek 5320 NAS Gateway System Single Server”](#) on page 167.

For the dual-server HA system, refer to [“Configure SAN storage using the appropriate instructions:”](#) on page 171.

▼ To Configure Storage on the Sun StorEdge 6920 System

1. Using the Sun StorEdge 6920 Configuration Service, select the NAS storage profile `nfs_stripe` for RAID 5 or `nfs_mirror` for RAID 1/0.
2. Create a storage pool to be used by the Sun StorageTek 5320 NAS Gateway System.
3. Create volumes in the storage pool.
4. Map the initiators associated with the Sun StorageTek 5320 NAS Gateway System HBA WWNs to the Sun StorEdge 6920 storage volumes.
5. Complete configuration on the Sun StorageTek 5320 NAS Gateway System.

For the single server system, refer to [“To Configure Storage on the Sun StorageTek 5320 NAS Gateway System Single Server”](#) on page 167.

For the dual-server HA system, refer to [“Configure SAN storage using the appropriate instructions:”](#) on page 171.

▼ To Configure Storage on the Sun StorEdge 99xx System

1. Using the Sun StorEdge 99xx system user interface (UI), set fabric to ON.
2. If you are directly attaching to storage (not using a fabric switch), choose FC-AL connection.
3. If you are using a fabric switch, choose point-to-point connection.
4. Select a 00 host group node type.
5. Enable LUN Manager.
6. Build Array Groups.
7. Complete configuration on the Sun StorageTek 5320 NAS Gateway System.

For the single-server system, refer to [“To Configure Storage on the Sun StorageTek 5320 NAS Gateway System Single Server”](#) on page 167.

For the dual-server HA system, refer to [“To Set Up Server H2”](#) on page 171.

Hardware Technical Specifications

This appendix contains information about the environmental and physical characteristics as well as the power requirements of the Sun StorageTek 5320 NAS Appliance, the Sun StorEdge 5300 RAID Controller Enclosure (CU), and the Sun StorEdge 5300 Expansion Enclosure (EU).

TABLE A-1 Power Requirements

Specification	Unit (if variable)	Value
Voltage		90-264VAC
Frequency		47-63 Hz
AC current input (typical)	Appliance	5.7A (115V~), or 2.9A (230V~)
	CU and EU	6.3A (115V~), or 3.1A (230V~)
Power consumption	Appliance	658VA (from AC source) 395W (from power supply), typical
	Power availability	550W maximum (from power supply)
	CU and EU	723VA, 434W (typical unit) 21W (133-GB drives)
	Power availability	600W (typical unit)
Power cord		SJT or SVT 18 SWG min, 3 conductor, with 250V, 10A plug and socket
Head dissipation	Appliance	1348 BTU/hr (typical)
	CU and EU	1481 BTU/hr (typical)
	Hard drive (133 GB)	72 BTU/hr (typical)

TABLE A-2 Physical Characteristics

Unit	Specification	Value
Appliance	Dimension (HxWxD)	8.76 cm x 44.5 cm x 64.0 cm (3.45 in x 17.52 in x 25.2 in)
	Weight	23.7 kg (52.1 lb)
	Rack height	2U
CU and EU	Dimension (HxWxD)	13.2 cm x 48.2 cm x 56.4 cm (5.2 in x 19 in x 22.2 in)
	Weight	44.5 kg (98 lb)
	Rack height	3U

TABLE A-3 Environmental Specifications

Specification	Unit	Appliance	CU and EU
Temperature	Operating	+10°C to +35°C (+50°F to +95°F)	+10°C to +40°C (+50°F to +104°F)
	Non-operating/ storage	-40°C to +65°C (-40°F to +149°F)	-10°C to +50°C (+14°F to +122°F)
Humidity	Operating	10% to 90%, non-condensing	20% to 80%, non-condensing
	Non-operating/ storage	10% to 93%, non-condensing	10% to 90%, non-condensing

Third-Party Licence Agreements

1 The software provided as part of the Sun StorEdge 5210, 5310, 5310C NAS Appliance or Sun StorEdge 5310 NAS Gateway system may contain code provided by the following organizations or individuals under the described licenses.

2 The University of California Berkley Software Distribution License
Copyright (c) 1991 The Regents of the University of California.
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met: 1.Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. 2.Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. 3.All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the University of California, Berkeley and its contributors. 4.Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission. THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

3 NetBSD License

Copyright (c) 1998 The NetBSD Foundation, Inc.

All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Lennart Augustsson (lennart@augustsson.net) at Carlstedt Research & Technology.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met: 1.Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. 2.Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. 3.All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the NetBSD Foundation, Inc. and its contributors. 4.Neither the name of The NetBSD Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission. THIS SOFTWARE IS PROVIDED BY THE NETBSD FOUNDATION, INC. AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

4 The Massachusetts Institute of Technology License

Copyright 1990 by the Massachusetts Institute of Technology.

All Rights Reserved.

Export of this software from the United States of America may require a specific license from the United States Government. It is the responsibility of any person or organization contemplating export to obtain such a license before exporting. WITHIN THAT CONSTRAINT, permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of M.I.T. not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission. Furthermore if you modify this software you must label your software as modified software and not distribute it in such a fashion that it might be confused with the original M.I.T. software. M.I.T. makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

5 The OpenVision Technologies Inc License
Copyright 1993 by OpenVision Technologies, Inc.

Permission to use, copy, modify, distribute, and sell this software and its documentation for any purpose is hereby granted without fee, provided that the above copyright notice appears in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of OpenVision not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission. OpenVision makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

OPENVISION DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS, IN NO EVENT SHALL OPENVISION BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

6 The University of Michigan License
Copyright (c) 1990 Regents of the University of Michigan.
All rights reserved.

Redistribution and use in source and binary forms are permitted provided that this notice is preserved and that due credit is given to the University of Michigan at Ann Arbor. The name of the University may not be used to endorse or promote products derived from this software without specific prior written permission. This software is provided "as is" without express or implied warranty.

7 The Internet Software Consortium License
Copyright (c) 1997 The Internet Software Consortium.
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met: 1.Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. 2.Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. 3.Neither the name of The Internet Software Consortium nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission. THIS SOFTWARE IS PROVIDED BY THE INTERNET SOFTWARE CONSORTIUM AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE INTERNET SOFTWARE

CONSORTIUM OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

8 Carnegie Mellon University License

The Carnegie Mellon University license appears in an SNMP header file.

Copyright 1988, 1989 by Carnegie Mellon University

All Rights Reserved

Permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of CMU not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission. CMU DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS, IN NO EVENT SHALL CMU BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

9 Troll FTP License

Copyright 1995-2000 Trolltech AS. Copyright 2001 Arnt Gulbrandsen.

Use, modification and distribution is allowed without limitation, warranty, or liability of any kind.

10 RSA Data Security, Inc. Message Digest License

Copyright (C) 1991-2, RSA Data Security, Inc. Created 1991.

All rights reserved.

License to copy and use this software is granted provided that it is identified as the "RSA Data Security, Inc. MD4 Message-Digest Algorithm" in all material mentioning or referencing this software or this function. License is also granted to make and use derivative works provided that such works are identified as "derived from the RSA Data Security, Inc. MD4 Message-Digest Algorithm" in all material mentioning or referencing the derived work. RSA Data Security, Inc. makes no representations concerning either the merchantability of this software or the suitability of this software for any particular purpose. It is provided "as is" without express or implied warranty of any kind. These notices must be retained in any copies of any part of this documentation and/or software.

11 MD5 License "THE BEER-WARE LICENSE" (Revision 42):

<phk@login.dknet.dk> wrote this file. As long as you retain this notice you can do whatever you want with this stuff. If we meet some day, and you think this stuff is worth it, you can buy me a beer in return. Poul-Henning Kamp

12 NIS License

Copyright (c) 1996, 1997 Bill Paul <wpaul@ctr.columbia.edu>.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met: 1.Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. 2.Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. 3.All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by Bill Paul. 4.Neither the name of the author nor the names of any co-contributors may be used to endorse or promote products derived from this software without specific prior written permission. THIS SOFTWARE IS PROVIDED BY Bill Paul AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL Bill Paul OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

13 The Network Time Protocol Version 4 Distribution Copyright Notice

The following copyright notice applies to all files collectively called the Network Time Protocol Version 4 Distribution. Unless specifically declared otherwise in an individual file, this notice applies as if the text was explicitly included in the file.

*

* Copyright (c) David L. Mills 1992-2001

*

* Permission to use, copy, modify, and distribute this software and
* its documentation for any purpose and without fee is hereby
* granted, provided that the above copyright notice appears in all
* copies and that both the copyright notice and this permission
* notice appear in supporting documentation, and that the name
* University of Delaware not be used in advertising or publicity
* pertaining to distribution of the software without specific,
* written prior permission. The University of Delaware makes no
* representations about the suitability this software for any
* purpose. It is provided "as is" without express or implied
* warranty.

*

14 OpenLDAP Public License Version 2.7, 7 September 2001

Redistribution and use of this software and associated documentation ("Software"), with or without modification, are permitted provided that the following conditions are met: 4.Redistributions of source code must retain copyright statements and notices, 5.Redistributions in binary form must reproduce applicable copyright statements and notices, this list of conditions, and the following disclaimer in the documentation and/or other materials provided with the distribution, and 6.Redistributions must contain a verbatim copy of this document. The OpenLDAP Foundation may revise this license from time to time. Each revision is distinguished by a version number. You may use this Software under terms of this license revision or under the terms of any subsequent revision of the license. THIS SOFTWARE IS PROVIDED BY THE OPENLDAP FOUNDATION AND ITS CONTRIBUTORS "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OPENLDAP FOUNDATION, ITS CONTRIBUTORS, OR THE AUTHOR(S) OR OWNER(S) OF THE SOFTWARE BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE. The names of the authors and copyright holders must not be used in advertising or otherwise to promote the sale, use or other dealing in this Software without specific, written prior permission. Title to copyright in this Software shall at all times remain with copyright holders. OpenLDAP is a registered trademark of the OpenLDAP Foundation. Copyright 1999-2001 The OpenLDAP Foundation, Redwood City, California, USA. All Rights Reserved. Permission to copy and distribute verbatim copies of this document is granted.

15 OpenSSH License

The licenses which components of this software fall under are as follows. First, we will summarize and say that all components are under a BSD license, or a license more free than that. OpenSSH contains no GPL code. 1) Copyright (c) 1995 Tatu Ylonen <yl@cs.hut.fi>, Espoo, Finland All rights reserved As far as I am concerned, the code I have written for this software can be used freely for any purpose. Any derived versions of this software must be clearly marked as such, and if the derived work is incompatible with the protocol description in the RFC file, it must be called by a name other than "ssh" or "Secure Shell". However, I am not implying to give any licenses to any patents or copyrights held by third parties, and the software includes parts that are not under my direct control. As far as I know, all included source code is used in accordance with the relevant license agreements and can be used freely for any purpose (the GNU license being the most restrictive); see below for details. [However, none of that term is relevant at this point in time. All of these restrictively licensed software components which he talks about have been removed from OpenSSH, i.e.

- RSA is no longer included, found in the OpenSSL library
- IDEA is no longer included, its use is deprecated
- DES is now external, in the OpenSSL library
- GMP is no longer used, and instead we call BN code from OpenSSL
- Zlib is now external, in a library
- The make-ssh-known-hosts script is no longer included
- TSS has been removed
- MD5 is now external, in the OpenSSL library
- RC4 support has been replaced with ARC4 support from OpenSSL
- Blowfish is now external, in the OpenSSL library

[The license continues] Note that any information and cryptographic algorithms used in this software are publicly available on the Internet and at any major bookstore, scientific library, and patent office worldwide. More information can be found e.g. at "<http://www.cs.hut.fi/crypto>". The legal status of this program is some combination of all these permissions and restrictions. Use only at your own responsibility. You will be responsible for any legal consequences yourself; I am not making any claims whether possessing or using this is legal or not in your country, and I am not taking any responsibility on your behalf.

NO WARRANTY

BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

2)The 32-bit CRC implementation in `crc32.c` is due to Gary S. Brown. Comments in the file indicate it may be used for any purpose without restrictions: COPYRIGHT (C) 1986 Gary S. Brown. You may use this program, or code or tables extracted from it, as desired without restriction. 3)The 32-bit CRC compensation attack detector in `deattack.c` was contributed by CORE SDI S.A. under a BSD-style license. See <http://www.core-sdi.com/english/ssh/> for details. Cryptographic attack detector for `ssh` - source code Copyright (c) 1998 CORE SDI S.A., Buenos Aires, Argentina. All rights reserved. Redistribution and use in source and binary forms, with or without modification, are permitted provided that this copyright notice is retained. THIS SOFTWARE IS PROVIDED "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES ARE DISCLAIMED. IN NO EVENT SHALL CORE SDI S.A. BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OR MISUSE OF THIS SOFTWARE. Ariel Futoransky futo@core-sdi.com <<http://www.core-sdi.com>> 4) Remaining components of the software are provided under a standard 2-term BSD license with the following names as copyright holders: Markus Friedl Theo de Raadt Niels Provos Dug Song Aaron Campbell Doug Rabson Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met: 1.Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. 2.Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. THIS SOFTWARE IS PROVIDED BY THE

AUTHOR “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

16 OpenSSL License LICENSE ISSUES

The OpenSSL toolkit stays under a dual license, i.e. both the conditions of the OpenSSL License and the original SSLeay license apply to the toolkit. See below for the actual license texts. Actually both licenses are BSD-style Open Source licenses. In case of any license issues related to OpenSSL please contact openssl-core@openssl.org. Copyright (c) 1998-2002 The OpenSSL Project. All rights reserved. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met: 1.Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. 2.Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. 3.All advertising materials mentioning features or use of this software must display the following acknowledgment: “This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)” 4.The names “OpenSSL Toolkit” and “OpenSSL Project” must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact openssl-core@openssl.org. 5.Products derived from this software may not be called “OpenSSL” nor may “OpenSSL” appear in their names without prior written permission of the OpenSSL Project. 6.Redistributions of any form whatsoever must retain the following acknowledgment: “This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)” THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT “AS IS” AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF

THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.
This product includes cryptographic software written by Eric Young
(eay@cryptsoft.com). This product includes software written by Tim Hudson
(tjh@cryptsoft.com).

Original SSLeay License
Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com)
All rights reserved.

This package is an SSL implementation written by Eric Young (eay@cryptsoft.com).

The implementation was written so as to conform with Netscapes SSL. This library is free for commercial and non-commercial use as long as the following conditions are aheared to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com). Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed. If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used. This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met: 1.Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer. 2.Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. 3.All advertising materials mentioning features or use of this software must display the following acknowledgement: "This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)" The word 'cryptographic' can be left out if the routines from the library being used are not cryptographic related :-). 4.If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement: "This product includes software written by Tim Hudson (tjh@cryptsoft.com)" THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. The license and distribution terms for any publically available

version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution license [including the GNU Public License.]

17 TZFILE Header File Declaration

This file is in the public domain, so clarified as of June 5, 1996 by Arthur David Olson (arthur_david_olson@nih.gov).

18 ZLIB Copyright Notice

(C) 1995-2002 Jean-loup Gailly and Mark Adler

This software is provided 'as-is', without any express or implied warranty. In no event will the authors be held liable for any damages arising from the use of this software. Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the following restrictions: 1.The origin of this software must not be misrepresented; you must not claim that you wrote the original software. If you use this software in a product, an acknowledgment in the product documentation would be appreciated but is not required. 2.Altered source versions must be plainly marked as such, and must not be misrepresented as being the original software. 3.This notice may not be removed or altered from any source distribution.

Jean-loup Gailly Mark Adler
jloup@gzip.org madler@alumni.caltech.edu

19 Sun RPC License

Sun RPC is a product of Sun Microsystems, Inc. and is provided for unrestricted use provided that this legend is included on all tape media and as a part of the software program in whole or part. Users may copy or modify Sun RPC without charge, but are not authorized to license or distribute it to anyone else except as part of a product or program developed by the user. SUN RPC IS PROVIDED AS IS WITH NO WARRANTIES OF ANY KIND INCLUDING THE WARRANTIES OF DESIGN, MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, OR ARISING FROM A COURSE OF DEALING, USAGE OR TRADE PRACTICE. Sun RPC is provided with no support and without any obligation on the part of Sun Microsystems, Inc. to assist in its use, correction, modification or enhancement. SUN MICROSYSTEMS, INC. SHALL HAVE NO LIABILITY WITH RESPECT TO THE INFRINGEMENT OF COPYRIGHTS, TRADE SECRETS OR ANY PATENTS BY SUN RPC OR ANY PART THEREOF. In no event will Sun Microsystems, Inc. be liable for any lost revenue or profits or other special, indirect and consequential damages, even if Sun has been advised of the possibility of such damages. Sun Microsystems, Inc. 2550 Garcia Avenue Mountain View, California 94043 Copyright (c) 1988 by Sun Microsystems, Inc.

20 Adaptec AIC SCSI Driver License

Copyright (c) 1994-2002 Justin T. Gibbs.

Copyright (c) 2000-2002 Adaptec Inc.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are

permitted provided that the following conditions are met: 1.Redistributions of source code must retain the above copyright notice, this list of conditions, and the following disclaimer, without modification. 2.Redistributions in binary form must reproduce at minimum a disclaimer substantially similar to the “NO WARRANTY” disclaimer below (“Disclaimer”) and any redistribution must be conditioned upon including a substantially similar Disclaimer requirement for further binary redistribution. 3.Neither the names of the above-listed copyright holders nor the names of any contributors may be used to endorse or promote products derived from this software without specific prior written permission. Alternatively, this software may be distributed under the terms of the GNU General Public License (“GPL”) version 2 as published by the Free Software Foundation. NO WARRANTY THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

21 QLogic 2300 License

Copyright (c) 1997, 1998, 1999, 2000, 2001 by Matthew Jacob

Feral Software

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met: 1.Redistributions of source code must retain the above copyright notice immediately at the beginning of the file, without modification, this list of conditions, and the following disclaimer. 2.The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission. THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Inspiration and ideas about this driver are from Erik Moe's Linux driver (qlogicisp.c) and Dave Miller's SBus version of same (qlogicisp.c). Some ideas dredged from the Solaris driver.

22 QLogic SCSI License

Copyright (c) 1997, 1998 by Matthew Jacob

NASA/Ames Research Center All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met: 1.Redistributions of source code must retain the above copyright notice immediately at the beginning of the file, without modification, this list of conditions, and the following disclaimer. 2.Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. 3.The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Inspiration and ideas about this driver are from Erik Moe's Linux driver (qlogicisp.c) and Dave Miller's SBus version of same (qlogicisp.c). Some ideas dredged from the Solaris driver.

23 QLogic ISP 2300 Initiator/Target Firmware Copyright Notice

ISP2300 Initiator/Target Firmware
with Fabric (Public Loop), Point-point, and
expanded LUN addressing for FCTAPE

NOTICE

COPYRIGHT 2001 QLOGIC CORPORATION
ALL RIGHTS RESERVED

This computer program is CONFIDENTIAL and contains TRADE SECRETS of QLOGIC CORPORATION. The receipt or possession of this program does not convey any rights to reproduce or disclose its contents, or to manufacture, use, or sell anything that it may describe, in whole or in part, without the specific written consent of QLOGIC CORPORATION.

Any reproduction of this program without the express written consent of QLOGIC CORPORATION is a violation of the copyright laws and may subject you to civil liability and criminal prosecution.

Firmware Version 3.01.20 (15:30 Dec 19, 2002)

24 Intel Corporation EM Gigabit NIC Driver License

Copyright (c) 1999-2001 Intel Corporation

All rights reserved.

Redistribution and use in source and binary forms of the Software, with or without modification, are permitted provided that the following conditions are met:

1.Redistributions of source code of the Software may retain the above copyright notice, this list of conditions and the following disclaimer. 2.Redistributions in binary form of the Software may reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. 3.Neither the name of the Intel Corporation nor the names of its contributors shall be used to endorse or promote products derived from this Software without specific prior written permission. THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE INTEL OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

25 NIC Bonding Pseudo Device Driver

The bonding pseudo device driver contains various copyright statements:

1. Copyright 1999, Thomas Davis, tadavis@lbl.gov. Licensed under the GPL. Based on dummy.c, and eql.c devices. 2. Portions are (c) Copyright 1995 Simon "Guru Aleph-Null" Janes NCM: Network and Communications Management, Inc. BUT, I'm the one who modified it for ethernet, so: (c) Copyright 1999, Thomas Davis, tadavis@lbl.gov This software may be used and distributed according to the terms of the GNU Public License, incorporated herein by reference. 3. Author: Donald Becker becker@cesdis.gsfc.nasa.gov Copyright 1994-1996 Donald Becker This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation. The author may be reached as becker@CESDIS.gsfc.nasa.gov, or C/O Center of Excellence in Space Data and Information Sciences Code 930.5, Goddard Space Flight Center, Greenbelt MD 20771.

Documentation and source code may be found at
<http://sourceforge.net/projects/bonding/>

26 Open source http client library

COPYRIGHT AND PERMISSION NOTICE

Copyright (c) 1996 - 2005, Daniel Stenberg, <daniel@haxx.se>.

All rights reserved.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization of the copyright holder.

27 Open source XML parsing library

Copyright (c) 1998, 1999, 2000 Thai Open Source Software Center Ltd

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT.

IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Glossary

- AC** (alternating current) (n.) Power supplied to the computer through an electrical outlet.
- active cluster** (n.) A pair of identical high-availability servers that offer NAS services to client communities. In the event of a failure, the surviving server takes on the services and client community of its failed peer.
- array** (n.) The storage system that attaches to the Sun StorageTek 5320 NAS Appliance or the Sun StorageTek 5320 NAS Cluster Appliance. The array consists of one or two Sun StorEdge 5300 RAID Controller Enclosures (CUs) that, optionally, can be connected to up to six Sun StorEdge 5300 Expansion Enclosures (EUs). An array can contain a mixture of EUs containing all Fibre Channel or all SATA disk drives.
- AWG** (American wire gauge) (n.) A unit for measuring the thickness of wire.
- cluster** (n.) A pair of identical servers providing redundant high-availability NAS services with failover protection.
- configuration** (1) (n.) The manner in which the software and hardware of an information processing system are organized and interconnected. (2) (n.) The physical and logical arrangement of programs and devices that make up a data processing system. (3) (n.) The devices and programs that make up a system, subsystem, or network.
- CU** (controller unit) (n.) The Sun StorEdge 5300 RAID Controller Enclosure, which contains two controllers.
- DC** (direct current) (n.) Power typically supplied through a DC adapter or battery.
- driver** (n.) A software program that enables a computer to communicate with a peripheral device. Examples include a SCSI driver, a CD-ROM driver, and printer drivers.
- dual head** (adj.) A reference to a pair of clustered servers. Servers can be referred to as "heads."

EU	(expansion unit) (n.) The Sun StorEdge 5300 Expansion Enclosure, which contains hard drives in RAID-5 groups. An expansion unit can contain all Fibre Channel hard drives or all SATA hard drives.
failure	(n.) A detectable physical change in hardware or software that disrupts normal (proper) operation. A failure is repaired by the replacement of a physical component or software.
Fast Ethernet (single and multiport)	(n.) A high-speed version of Ethernet transmitting data at 100 Mbps. Fast Ethernet networks use the same media access control method that 10BASE-T Ethernet networks use but achieve 10 times the data transmission speed.
flash memory	(n.) A special type of read-only memory (ROM) that enables users to upgrade the information contained in the memory chips.
gateway	(1) (n.) A way of accessing a network. (2) (n.) A configuration that enables a NAS server to share storage over a network.
GB	(gigabyte) (n.) A unit of information equal to 1024 megabytes.
Gigabit Ethernet	(n.) An Ethernet technology that enables data transfer rates of up to 1 Gbps using optical fiber cable or unshielded twisted-pair cable.
hot-swap	(v.) To replace a failed component without interruption of system service.
interface cable	(n.) A cable designed to connect a computer to a peripheral device, or a peripheral device to another peripheral device, allowing each device to communicate with the other.
KB	(kilobyte) (n.) A unit of information equal to 1024 bytes.
LCD	(liquid crystal display) (n.) A low-power display technology that uses rod-shaped crystal molecules that change their orientation when an electrical current flows through them.
LED	(light-emitting diode) (n.) A semiconductor device that converts electrical energy into light.
MB	(megabyte) (n.) A unit of information equivalent to 1,048,576 bytes or 1024 kilobytes. Most uses of “megabyte,” however, refer to exactly 1 million bytes.
MHz	(megahertz) (n.) A measure of frequency equivalent to 1 million cycles per second.
motherboard	(n.) A large circuit board that contains the computer’s central processing unit (CPU), microprocessor support chips, random-access memory (RAM), and expansion slots.
MTBF	(Mean Time Between Failures) (n.) The estimated time a device operates before a failure occurs.

- NAS** (network-attached storage) (n.) A storage appliance that connects directly to the network. NAS does not usually perform network directory services or function as an application server; instead, it augments storage capacities. Quick and easy to set up, NAS appliances also typically provide cross-platform file sharing.
- NIC** (network interface card) (n.) An adapter that lets you connect a network cable to a microcomputer. The card includes encoding and decoding circuitry and a receptacle for a network cable connection.
- parity** (adj.) Refers to data created by combining the bits in the information to be stored and creating a small amount of data from which the rest of the information can be extracted.
- RAID** (Redundant Array of Independent Disks) (n.) A group of hard disks under the control of array management software that work together to improve performance and decrease the odds of losing data to mechanical or electronic failure by using techniques such as data striping.
- RAID-5** (n.) The most commonly used RAID implementation. RAID-5 uses striping and parity information.
- RAM** (random access memory) (n.) Semiconductor-based memory that can be read and written by the microprocessor or other hardware devices. Generally understood to refer to volatile memory, which can be written as well as read.
- SAN** (storage area network) (n.) A network that includes various storage devices shared by multiple servers.
- SCSI** (Small Computer Systems Interface) (n.) A standard interface for PCs that enables you to connect up to 15 peripheral devices, such as CD-ROM drives.
- SCSI bus** (n.) A pathway between SCSI hardware devices.
- SCSI host adapter** (n.) A printed circuit board (also called an interface card) that enables the computer to use a peripheral device for which it does not already have the necessary connections or circuit boards.
- SCSI ID** (n.) Priority number (address) of a SCSI device in a SCSI device chain. Only one device at a time can transmit through a SCSI connection (port), and priority is given to the device with the highest priority address. SCSI IDs range from 0 to 15, and each SCSI device must be given a unique and unused SCSI ID.
- single head** (adj.) A reference to a single server or “head.”
- SMB** (server message block) (n.) A Microsoft-compatible network protocol for exchanging files. SMB is typically used by Windows for Workgroups, OS/2 Warp Connect, and DEC Pathworks.

striping (n.) A RAID-based method for data storage in which data is divided into "stripes." One stripe is written to the first drive, the next to the second drive, and so on. The primary advantage of striping is the ability for all drives in the array to process reads and writes simultaneously.

termination (n.) The electrical connection at each end of the SCSI bus, composed of a set of resistors on internal SCSI devices or an active or passive SCSI terminator block on external SCSI devices.

Index

A

appliance, *See* Sun StorageTek 5320 NAS Appliance

arrays

 Sun StorageTek FlexLine 200 and 300 Series

 array, 114 to 126

 Sun StorEdge 6130 array, 102 to 113, 175 to 178

 Sun StorEdge 6920 system, 127 to 142

 Sun StorEdge 99xx system, 143 to 158

attaching rails to a cabinet

 Sun Rack 900/1000, 21

 Sun StorEdge Expansion/Sun Fire, 21

B

back-end storage

 cabling

 appliances, 54 to 65

 cluster appliances, 76 to 87

 overview, 8

boot sequence log, 73

C

cabinets, 12

 order of installation, 18 to 21

 preparation, 18

 server installation, 33 to 48

cable management assembly, installation, 41 to 48

cabling

 back-end storage to appliances, 54 to 65

 back-end storage to cluster appliances, 76 to 87

 CUs to appliances, 54 to 58

 CUs to cluster appliances, 76 to 87

 SAN storage to gateway systems, 99 to 161

 Sun StorEdge 6130 array, 102 to 113

 Sun StorEdge 6920 system, 127 to 142

 Sun StorEdge 99xx system, 143 to 158

CLI, 10

clients, 2

cluster appliance, *See* Sun StorageTek 5320 NAS

 Cluster Appliance

cluster configuration, serial number, 20

cluster configuration, serial numbers, 5

cluster gateway system, *See* Sun StorageTek 5320

 NAS Cluster Gateway System

CMA (cable management assembly), installation, 41

 to 48

command-line interface, 10

configuration

 appliance systems, 69 to 73

 cluster appliances, 93 to 97

 cluster gateway systems, 167 to 175

 gateway systems, 163 to 167

 LUNs

 cluster appliances, 96 to 97

 cluster gateway systems, 172 to 175

 options, 6

 SAN storage, 175 to 179

 storage

 gateway systems, 167

connections

 back-end storage to appliances, 54 to 65

 back-end storage to cluster appliances, 76 to 87

 CUs to appliances, 54 to 58

 CUs to cluster appliances, 76 to 87

 health-monitoring cable

- cluster appliances, 88
- cluster gateway systems, 160 to 161
- network, 2
 - appliances, 65 to 67
 - cluster appliances, 88 to 89
 - gateway systems, 159 to 161
- power, 15
- SAN storage to gateway systems, 99 to 161
- Sun StorEdge 6130 array, 102 to 113
- Sun StorEdge 6920 system, 127 to 142
- Sun StorEdge 99xx system, 143 to 158

CUs (controller enclosures)

- cabling
 - appliances, 54 to 58
 - cluster appliances, 76 to 87
- configuration, 69 to 73, 93 to 97
- installation order, 18 to 21
- powering on, 67 to 69, 90 to 92

D

- direct attach connections, 101

E

- electrical grounding, 14 to 15
- EUs (expansion enclosures)
 - configuration, 69 to 73, 93 to 97
 - installation order, 18 to 21
 - powering on, 67 to 69, 90 to 92

F

- fabric attach connections, 101
- Fast Ethernet
 - appliances, 65
 - cluster appliances, 89
 - cluster gateway systems, 161
 - gateway systems, 159

G

- gateway system, *See* Sun StorageTek 5320 NAS Gateway System
- Gigabit Ethernet
 - appliances, 65
 - cluster appliances, 89
 - cluster gateway systems, 161
 - gateway systems, 159
 - optical
 - appliances, 66

- cluster appliances, 88
- cluster gateway systems, 161
- gateway systems, 160

grounding

- rack installation, 15
- requirements, 14 to 15

H

- hardware overview, 4 to 9
- health-monitoring cable
 - cluster appliances, 88
 - cluster gateway systems, 160 to 161
- heartbeat, 88
- heartbeat, *See* health-monitoring cable

I

- installation
 - cabinets, 12
 - CMA, 41 to 48
 - grounding, 15
 - in cabinets, 18 to 48
 - mounting brackets, 34 to 41
 - order, 18 to 21
 - power cables, 48 to 49
 - preparation, 13 to 18
 - racks, 12
 - rail kits, 12 to 13
 - servers, 33 to 48
 - preparation, 15
 - slide rail assemblies, 34 to 41
 - verification, 45 to 48

- IP address configuration
 - appliances, 70
 - cluster appliances, 93 to 94
 - cluster gateway systems, 168
 - gateway systems, 163

L

- licensed options, 10
- local log, setting up, 73
- LUNs
 - cluster appliance configuration, 96 to 97
 - cluster gateway system configuration, 172 to 175

M

- mains AC power disconnect, 15
- mounting brackets, installation, 34 to 41

N

- network connections, 2
 - appliances, 65 to 67
 - cluster appliances, 88 to 89
 - gateway systems, 159 to 161

O

- optical Gigabit Ethernet
 - appliances, 66
 - cluster appliances, 88
 - cluster gateway systems, 161
 - gateway systems, 160
- options
 - licensed, 10
 - server, 6
- overview
 - appliances, 4 to 5
 - back-end storage, 8
 - cluster appliances, 5
 - gateway systems, 6
 - hardware, 4 to 9
 - servers, 4 to 6
 - software, 9 to 10
 - system, 1 to 10

P

- power
 - connections, 15
 - disconnecting, 15
 - on appliance systems, 67 to 69
 - on cluster appliances, 90 to 92
 - on gateway systems, 161 to 163
- power cables
 - connecting, 48 to 49
- preparation for installation
 - cabinets, 18
- preparing the tray for installation, 17
- protocols, 2

R

- rack installation
 - cabinets, 18 to 48
 - grounding, 15
 - preparation, 13 to 18
 - requirements, 12
- rackmount kit preparation, 16
 - applicable Sun cabinets, 17

- rackmount kits
 - preparation, 15
- racks, 12
- rail installation
 - servers, 33 to 48
- rail kits, 12 to 13
- rails
 - attaching to a cabinet, 21
 - Sun Rack 900/1000, 22
- requirements
 - grounding, 14 to 15
 - rack, 12
 - software, 9

S

- SAN storage, 8, 99
 - cabling
 - gateway systems, 99 to 161
 - configuration, 175 to 179
 - direct attach, 101
 - fabric attach, 101
 - Sun StorEdge 6130 array, 102 to 113
 - Sun StorEdge 6920 system, 127 to 142
 - Sun StorEdge 99xx system, 143 to 158
- security, 2
- serial number, software, 5, 20
- servers
 - heartbeat, *See* health-monitoring cable
 - installation, 33 to 48
 - order, 18 to 21
 - preparation, 15
 - options, 6
 - overview, 4 to 6
- setting the tray ID in tray installation, 49
- slide rail assemblies
 - installation, 34 to 41
 - verification, 45 to 48
- software
 - configuration
 - appliance systems, 69 to 73
 - cluster appliances, 93 to 97
 - cluster gateway systems, 167 to 175
 - gateway systems, 163 to 167
 - overview, 9 to 10
 - requirements, 9
 - supported, 9
 - Web Administrator

- appliance configuration, 71 to 73
 - cluster appliance configuration, 94 to 96
 - cluster gateway system configuration, 169 to 171
 - gateway system configuration, 164 to 166
- software serial number, 5, 20
- Sun StorageTek 5320 NAS Appliance
 - configuration, 69 to 73
 - Fast Ethernet, 65
 - Gigabit Ethernet, 65
 - optical, 66
 - network connections, 65 to 67
 - overview, 4 to 5
 - powering on, 67 to 69
- Sun StorageTek 5320 NAS Cluster Appliance
 - configuration, 93 to 97
 - LUNs, 96 to 97
 - Web Admin, 94 to 96
 - Fast Ethernet, 89
 - Gigabit Ethernet, 89
 - optical, 88
 - health-monitoring cable, 88
 - IP address configuration, 93 to 94
 - network connections, 88 to 89
 - overview, 5
 - powering on, 90 to 92
- Sun StorageTek 5320 NAS Cluster Gateway System
 - configuration, 167 to 175
 - LUNs, 172 to 175
 - Web Admin, 169 to 171
 - Fast Ethernet, 161
 - Gigabit Ethernet
 - optical, 161
 - health-monitoring cable, 160 to 161
 - IP address configuration, 168
 - See also* Sun StorageTek 5320 NAS Gateway System
- Sun StorageTek 5320 NAS Gateway System
 - cabling to SAN storage, 99 to 161
 - configuration, 163 to 167
 - storage, 167
 - Fast Ethernet, 159
 - Gigabit Ethernet
 - optical, 160
 - network connections, 159 to 161
 - overview, 6
 - powering on, 161 to 163
 - Sun StorageTek FlexLine 200 and 300 Series, 114

- to 126
 - Sun StorEdge 6130 array, 102 to 113
 - Sun StorEdge 6920 system, 127 to 142
 - Sun StorEdge 99xx system, 143 to 158
- Sun StorageTek Compliance Archiving Software, 10
- Sun StorageTek File Replicator, 10
- Sun StorageTek FlexLine 200 and 300 Series, 114 to 126
- Sun StorEdge 6130 array, 102 to 113
 - storage configuration, 178
- Sun StorEdge 6920 system, 127 to 142
 - storage configuration, 178
- Sun StorEdge 99xx system, 143 to 158
- supported clients, 2
- system
 - overview, 1 to 10
 - software requirements, 9

T

- tray installation
 - preparing the rackmount kit for, 16
 - applicable Sun cabinets, 17

W

- Web Administrator, 9
 - appliance configuration, 71 to 73
 - cluster appliance configuration, 94 to 96
 - cluster gateway system configuration, 169 to 171
 - gateway system configuration, 164 to 166