

Corporate Headquarters 5200 Paramount Parkway Morrisville, NC 27560 USA Phone +1.888.628.5521

+1.919.468.5500 Fax: +1.919.380.3862 E-mail: info@tekelec.com

Copyright TEKELEC 2009. All Rights Reserved

Global Product Solutions

Software Upgrade Procedure

EAGLE 5 ISS Release 39.2 & 40.x

CAUTION: Use only the Upgrade procedure included in the Upgrade Kit.

Before upgrading any system, please access Tekelec's Customer Support site and review any Technical Service Bulletins (TSBs) that relate to this upgrade.

Refer to 6.4Appendix G for instructions on accessing this site.

Contact the Tekelec Customer Care Center and inform them of your upgrade plans prior to beginning this or any upgrade procedure.

Phone: 1-888-FOR-TKLC (1-888-367-8552) or 919-460-2150 (international)

FAX: 919-460-2126

EMAIL: support@tekelec.com

CHANGE HISTORY

Date	ENG Version#	ECN Revision #	Author Description		Approved* (Yes/No)
7/25/08	1.0		Robert Kress	Initial document created for Release 39.2	No
9/9/2008	1.1		Robert Kress	Changes per peer review	No
9/30/2008	1.2		Robert Kress	Changes per peer review	Yes
10/15/08	1.3	A	Sutcliffe	Updated instructions on how to access the Customer Support site. Prepared for publication.	Yes
12/15/08	1.4		Robert Kress	Modify document name to include Eagle Release 40.0	No
12/19/08	1.5		Robert Kress	Changes per peer review	Yes
12/23/08	1.6	В	Sutcliffe	Prepared for publication	Yes
3/16/09	1.7		Aricent-Manish Anand	PR 138574: Modified for Fast Copy.	No
3/23/09	1.8		Aricent-Manish Anand	Updates after review.	No
3/24/2009	1.9		Robert Kress	Update media references for E5-OAM.	No
3/29/2009	1.10		Aricent-Manish Anand	Updates after review.	No
4/06/09	1.11		Aricent-Manish Anand Changes per formal review		Yes
4/07/09	1.13		Aricent-Manish Anand Syncing up with Documentum Version.		Yes
4/07/09	1.14	С	Terri Boykin	Prepared for publication	Yes
9/15/09	1.15		Robert Kress PR 157613: fix system time following upgrade		No
9/30/09	1.16		Robert Kress	Changes per review	Yes
10/1/09	1.17		Robert Kress	Modify rtrv-log pass\fail criteria	Yes
10/5/09	1.18		Terri Boykin	Prepared for publication	No
10/1/09	1.19		Robert Kress Small change to rtrv-log pass\fail		No
10/5/09	1.20		Terri Boykin	Some changes for publication	No
10/6/09	1.21		Robert Kress	Modify how to deal with PR 157613	No
10/7/09	1.22	D	Terri Boykin	Prepared for Publication	Yes

^{*}Through Formal Peer Review

TABLE OF CONTENTS

1.	INTRODUCTION	6
	1.1 Purpose and Scope	6
	1.2 References	
	1.2.1 Tekelec External	
	1.2.2 Tekelec Internal	
	1.3 Software Release Numbering	
	1.4 Database Version Number	
	1.5 Acronyms	
	1.6 Terminology	
	1.7 Recommendations	9
2.	GENERAL DESCRIPTION	10
3.	UPGRADE OVERVIEW	12
-	3.1 Required Materials	
	3.2 Pre-Upgrade Overview	
	3.3 Upgrade Execution Overview	
	3.4 Post Upgrade Overview	
	3.5 Backout Procedure Overview	
,	UPGRADE PREPARATION	45
4.	4.1 Hardware Upgrade Preparation	
	4.2 Software Upgrade Preparation	
	4.2 Software Opgrade Preparation	10
5.	SOFTWARE UPGRADE PROCEDURE	
	5.1 Software Upgrade Execution – Session 1	
	5.2 OAM Conversion	
	5.3 Completion of Session 1	
	5.4 Upgrade Session 2	44
6.	RECOVERY PROCEDURES	57
	6.1 Backout Setup Procedures	57
	6.2 Recovery Procedure A	57
	6.3 Recovery Procedure B	62
	6.4 Recovery Procedure C	74
ΑF	PPENDIX A. UPGRADING BOOT-PROM GPL ON NON-IN-SERVICE AND	
	IPROVISIONED NETWORK CARDS	86
ΑF	PPENDIX B. TARGET RELEASE SOFTWARE DOWNLOAD	88
ΑF	PPENDIX C. ENTERING UPGRADE SOFTWARE ACCESS KEY	93
ΑF	PPENDIX D. SUPPLEMENTAL INFORMATION FOR PROCEDURE 8, STEP 2	94
ΑF	PPENDIX E. SWOPS SIGN OFF	97
Λ E	DENDIY E CUSTOMED SIGN OFF	00

APPENDIX G. ACCESSING TEKELEC'S CUSTOMER SUPPORT SITE	99
List of Figures	
Figure 1. Upgrade Process	10
List of Tables	
Table 1. Acronyms	7
Table 2. Terminology	8
Table 3: Upgrade Tasks to be completed	10
Table 4. Phases of Upgrade Execution	11
Table 5. Pre-Upgrade Overview	12
Table 6. Upgrade Execution Overview	13
Table 7. Post Upgrade Overview	13
Table 8. Backout Procedure Overview	14
Table 9. Equipment Inventory before Upgrade if media software delivery	15
Table 10. Equipment Inventory before Upgrade if server software delivery	15
Table 11. Spare Equipment after Upgrade if target release on removable cartridge	15
Table 12. Spare Equipment after Upgrade if target release downloaded via FTP	16
Table 13. Pre-Upgrade Requirements	18
Table 14: DDL-Hunt-related UAM ranges.	21
Table 15: Retrieve Log Termination Pass/Fail Criteria:	22
Table 16. Act Upgrade Command Actions	33
Table 17. Upgrade Session 2 Requirements	44
Table 18. MTT errors generated when measurement collection is in progress.	46
Table 19. Recovery from DDL Hunt by UAM.	96
List of Procedures	
Procedure 1. Verifying Pre-Upgrade Requirements and Capturing Upgrade Data	18
Procedure 2: Backing Up the Database	22
Procedure 3: Updating the Source-Release Spare TDM	24
Procedure 4: Verifying All Databases	26
Procedure 5: Inserting Target-Release Upgrade System Cartridge	27
Procedure 6: Initializing MASPs to Run on Target-Release GPLs	28
Procedure 7: Verifying all Databases	32
Procedure 8: STP Conversion	33
Procedure 9: Force Download of TDMs	37
Procedure 10: Completing Upgrade/Return to Full-Function Mode	39
Procedure 11: Backing up Converted Database	
Procedure 12. Verifying Upgrade Session 2 Requirements	44
Procedure 13: Upgrading Removable Cartridges	45
Procedure 14: Backing Up Fixed Disk	48

EAGLE 5 ISS Release 39.2 & 40.x

Software Upgrade Procedure

1. INTRODUCTION

1.1 Purpose and Scope

This document describes methods utilized and procedures executed to perform a software upgrade on an in-service EAGLE®-based STP to EAGLE® Software Release 39.2 as well as any future releases. The audience for this document includes Tekelec customers as well as these EAGLE® GPS groups: Software Development, Product Verification, Technical Communications, and Customer Service including Upgrade Center and New Product Engineering. This document provides step-by-step instructions to execute any upgrade to Release 39.2 or any future Release.

See appropriate upgrade kit instructions/references for the software upgrade of peripheral equipment.

1.2 References

1.2.1 Tekelec External

- [1] EAGLE5 ISS 31.6 and above Health Check Procedure, 909-0656-001, latest revision, Tekelec
- [2] EAGLE 5 ISS 39.2 Maintenance Manual, 910-5503-001, latest revision, Tekelec
- [3] EAGLE 5 ISS 39.2 Database Administration System Management, 910-5501-001, latest revision, Tekelec

1.2.2 Tekelec Internal

The following are references internal to Tekelec. They are provided here to capture the source material used to create this document. Internal references are only available to Tekelec personnel.

- [4] EAGLE Hardware Field Baseline, 820-2410-01, Tekelec.
- [5] TEKELEC Acronym Guide, MS005077.doc, current revision
- [6] Tekelec Eagle Eng Release Mapping web page, http://devtools.nc.tekelec.com/cgi-bin/eng_eag.cgi, Tekelec, Published
- [7] Tekelec CSR-PR Reports By Build, http://devtools.nc.tekelec.com/cgi-bin/release_desc.cgi
- [8] EAGLE 39.2 Product Functional Specification, PF005436, latest version Tekelec.
- [9] EAGLE 40.0 Product Functional Specification PF005417, latest version Tekelec.
- [10] Tekelec Tekpedia web page,

http://nsdsolaris2.nc.tekelec.com/tekpedia/index.php/Methods_to_correct_distributed_network_database_(DDB)_i nconsistencies, Tekelec, Published.

1.3 Software Release Numbering

To determine the correct GPL version numbers for the EAGLE® applications, refer to the appropriate internal release-mapping web tool or to the *Release Notice* located on the Customer Support web site. Accessing Tekelec's Customer Support Site describes how to access the Customer Support web site. For FOA releases or Engineering prototype releases, refer to internal references [6] in section 1.2.2.

Note: verifying the correct GPL versions, ensures that the system is being upgraded to the correct target software release.

1.4 Database Version Number

To determine the correct database version numbers for the EAGLE® release, refer to the appropriate internal release-mapping web tool or to the *Release Notice* located on the Customer Support web site. 6.4Appendix G describes how to access the Customer Support web site. For FOA releases or Engineering prototype releases, refer to internal references [6] in section 1.2.2.

1.5 Acronyms

Table 1. Acronyms

AWA	Alternate Work Area						
DDB	Dynamic Database						
DDL	Dynamic Data Load						
EOAM	Enhanced OAM						
FAK	Feature Access Key						
FOA	First Office Application						
GA	General Availability						
GLS	Generic Loading Service						
GPL	Generic Program Load						
GPSM	General Purpose Service Module						
IMT	Interprocessor Message Transport						
IS-NR	In Service - Normal						
IS-ANR	In Service - Abnormal						
KSR	Keyboard Send & Receive						
LA	Limited Availability						
LIM	Link Interface Module						
LNP	Local Number Portability						
LSMS	Local Service Management System						
MAS	Maintenance and Administration Subsystem						
MCPM	Measurement Collection and Polling Module						
MDAL	Maintenance Disk and Alarm Card						
MO	Magneto Optical (removable disk cartridge)						
MOP	Method Of Procedure						
MPS	Multi Purpose Server						
MSD	Media Software Delivery						
OAM	Operations Administration and Maintenance						
OAP	Operations, Administration and Maintenance Applications Processor						
OOS-MT	Out Of Service - Maintenance						
SAK	Software Access Key						
SEAS	Signaling Engineering and Administration System						
SSD	Server Software Delivery						
STP	Signal Transfer Point						
TDM	Terminal Disk Module						
TPS	Transactions Per Second (feature)						
TSM	Translation Services Module						
UHC	Upgrade Health Check						

1.6 Terminology

Table 2. Terminology

Backout (abort)	The process to take a system back to a Source Release prior to completion of
Dackout (abort)	upgrade to Target release. Includes preservation of databases and system
	configuration.
Fixed disk based upgrade	An upgrade that uses the inactive partitions of the fixed disks as the workspaces to
rixed disk based upgrade	covert the data. With 9Gb and bigger hard drives, this is the expected method.
Incremental upgrade	EAGLE: Upgrade to a maintenance release (external customers) or upgrade to a
incrementar upgraue	new build (Tekelec labs), i.e., 37.5.0 to 37.5.4.
	Note: there will be no database table changes in this type of upgrade
Intra-release upgrade	Any upgrade within a release; this includes incremental as well as full function
	upgrades where only the minor database version changes.
	Note: Intra-release upgrades are not covered by this document.
Non-preserving upgrade	"Upgrade" that does not adhere to the standard goals of software upgrade
1 8 18	methodology. The outcome of the execution is that the system is running on the
	Target Release; however, the Source Release database is not preserved.
Rollback	The process to take a recently upgraded system from the Target Release back to
	the Source Release including preservation of the source-release databases and
	system configuration. The rollback would occur during the soak period prior to
	any new provisioning if an issue occurs, which facilitates a need to return to the
	source release.
	Note: Rollback occurring after new provisioning is outside the scope of this
	document and requires a MOP.
Source release	The software release from which the EAGLE® is upgraded. In this document,
	examples of source releases are EAGLE® 37.x and 38.x. Refer to the Upgrade
	section of Reference [8] for valid source releases supported by this document
Target release	The software release to which the EAGLE® is upgraded. In this document, the
	target release is release 39.2 or any future release.

1.7 Recommendations

- 1. It is recommended that command input and command-line/scroll-area output be captured during the execution of this upgrade. The preferred method is the use of two serial terminals; one used to enter commands and to echo to the second, which is set to capture all output except for traffic-related unsolicited messages. These terminals should be of the KSR type. Another acceptable method is the use of one serial terminal, which has a terminal-emulation application that supports input/output capture. This terminal should be set to the KSR type. The least preferred method is for the user terminal to echo to a configured printer. It is unacceptable to use a telnet terminal since it does not support the echo capability. Serial terminals are designated ports 1-16and telnet terminal are designed ports 17 and above.
- 2. It is recommended that measurement collection be retrieved prior to upgrade execution because, depending on source release, the data collected may not be persistent across the upgrade. Inhibiting measurements does NOT stop collection that is already in progress. OAM based measurements are inhibited on the next cycle. It is recommended that time should be given to allow the current cycle to complete. Those procedures that inhibit measurements manually contain steps to ensure that current collection is complete.
- 3. It is recommended that the OAP terminals be turned down for non MPS LNP systems and others with high OAP traffic. If OAP terminals are not inhibited, any database updates successfully entered during the period between the last database backup and Upgrade Phase 0 are lost if it becomes necessary to fall back to the source release using the spare TDM.
- 4. It is recommended that the Measurements Platform NOT be shut down and the Measurement Collection and Polling Module (MCPM) cards NOT be inhibited.
- It is recommended to issue the command in **Procedure 8, Step 1** with the **thres** parameter equal to 75. The threshold parameter is specified at 75 to ensure that 75% of links remain in service during the network conversion of the upgrade execution. This value allows for an expedited network upgrade while minimizing any risk to service interruption. The following command is issued in **Procedure 8**, **Step 1**:

ACT-UPGRADE: ACTION=CONVERTSTP: THRES=75

Based on a system's configuration and customer objectives, the threshold value selected may be different. Please contact Tekelec Technical Services to determine the recommended value.

- 6. Although an IP telnet terminal may be configured, the terminal is not recommended for us in the upgrade process because it does not support echo and capture mode. Any application connected via a Telnet session through an IPSM card, should be shutdown. The application's shutdown procedure needs to be provided by the application's manufacturer.
- The following commands obtain the current system status. It is recommended that the following commands be run in order to obtain the current system status in the following situations: 1) prior to executing the upgrade, 2) the upgrade terminates prior to successful completion and 3) before re-starting the upgrade. The commands should be issued in addition to the diagnosis of the any terminating condition. This status is not complete and inclusive, additional commands, which are deemed relevant, can be run at this time.

REPT-STAT-SYS REPT-STAT-GPL:DISPLAY=ALL REPT-STAT-CARD **REPT-STAT-SLK** REPT-STAT-TRBL

ACT-UPGRADE: ACTION=DBSTATUS

2. GENERAL DESCRIPTION

This document defines the step-by-step actions performed to execute a software upgrade of an in-service EAGLE® STP from the source release to the target release.

Figure 1 shows the general steps for all processes of performing a software upgrade, from hardware inventory to final upgrade health check.

Contact Tekelec Customer Care Center at 1-888-FOR-TKLC (1-888-367-8552); or 1-919-460-2150 (international) for time estimates for each portion of the upgrade process.

Figure 1. Upgrade Process

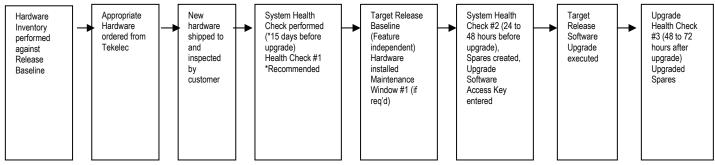


Table 3 contains a checklist of the steps required to successfully complete the upgrade process.

Table 3: Upgrade Tasks to be completed

Upgrade Process Task	Date completed
Hardware Inventory	
Hardware Ordered	
New Hardware received	
System Health Check #1 performed	
System Health Check #1 output verified	
Target Release Baseline Hardware installed	
New Software Release downloaded if capability available	
System Health Check #2 performed	
Enter Upgrade Software Access Key	
System Health Check #2 verified	
Software Upgrade Session 1 completed	
Health Check #3 performed	
Software Upgrade Session 2 completed	

During the software upgrade execution, phase flags are displayed in the output messages to indicate upgrade progress. The output messages shown in this document are for example purposes only and do not display upgrade phase values unless a specific request to verify the phase is given, i.e., Procedure 6, step 9. The goal in doing this is to make this document describe the generic upgrade procedure.

Table 4 shows the phase flags displayed during the upgrade process. These flags are used to indicate the progress made by the upgrade function. The internal upgrade processing, which is initiated by the activate-upgrade command, controls these flags.

Table 4. Phases of Upgrade Execution

Release Displayed	Phase Indicator ¹	Conversion	Software Running	Database Configuration
Source			Source	Source
Source	Phase 0	Database	Target	Source
Target	Phase 2	Database	Target	Target
Target	Phase 3	Network	Target	Target
Target			Target	Target

_

 $^{^{\}rm 1}$ Over the evolution of the upgrade process, Phase 1 is considered an error state.

3. UPGRADE OVERVIEW

This section provides a brief overview of the recommended method for upgrading the source release software that is installed and running on an EAGLE® STP to the Target Release software. The basic upgrade process and approximate time required is outlined in Table 5, Table 6 and Table 7 with the backout procedure shown in Table 8.

It is assumed that upgrade of peripheral(s) is coordinated with and executed in parallel with the EAGLE upgrade to ensure that all work is performed within the maintenance window. Note that several variables affect the upgrade times shown in the tables – the timing values shown are estimates only.

The EAGLE has no restriction that would prevent the upgrading of any peripheral in parallel with it.

3.1 Required Materials

- Upgrade Software Access Key..
- One (1) source release system removable cartridge.
- A valid EAGLE login ID and password with all user privileges enabled.
- One (1) spare TDM at the source release: required in the event of recovery.
- Capability to capture data via a printer, PC, or modem to allow remote access for Tekelec Technical Assistance Center personnel.
- List of GPLs from section 1.3 to keep on hand for reference throughout the upgrade.

If performing the upgrade with target release software delivered on a removable cartridge (media software delivery MSD):

• Two (2) target-release system removable cartridges at database level 1.

If downloading the target release software from an FTP server (server software delivery SSD):

- E5-IPSM provisioned and in the IS-NR state.
- FTP server application provisioned

3.2 Pre-Upgrade Overview

The pre-upgrade procedures shown in Table 5 may be executed outside of the maintenance window if desired.

Table 5. Pre-Upgrade Overview

Phase	(Ho	d Time urs: utes)	Downtime (Hours: Minutes)		Activity	Impact
Х	This Step	Cum.	This Cum. Step		Software Upgrade Execution	
NA	00:02	00:02	NA	NA	Verify Pre-Upgrade Requirements and Capturing Upgrade Data	None
NA	00:02	00:04			Retrieve System's Node-Level Processing Option Indicators	
NA	00:49	00:53	NA	NA	Backing Up the Database	None
NA	00:30	01:23	NA	NA	Updating the Source-Release Spare TDM	None
NA	00:03	01:26	NA	NA	Verifying All Databases	None
NA	00:01	01:27	NA	NA	Inserting Target-Release Upgrade System Cartridge	None

3.3 Upgrade Execution Overview

The procedures shown in Table 6 are executed in the maintenance window.

Table 6. Upgrade Execution Overview

Phase	Elapsed Time (Hours: Minutes)		(Hours: (Hours:		Activity	Impact
х	This Step	Cum.	This Step	Cum.	Software Upgrade Execution	
NA	00:03	00:03	NA	NA	Retrieve measurements data reports	None
0	00:03	00:06	NA	NA	Initializing MASPs to Run on Target-Release GPLs	Provisioning/maintenance prohibited.
0	00:01	00:07	NA	NA	Verifying all Databases	None
$0-2^2$	01:30	01:37	NA	NA	OAM Conversion	None
33			NA	NA	Network Conversion	None

3.4 Post Upgrade Overview

The procedures shown in Table 7 are executed in the maintenance window.

Table 7. Post Upgrade Overview

Phase	Elapsed Time (Hours: Minutes)		(Hours: (Hours:		Activity	Impact
X	This Step	Cum.	This Cum. Step			
3	00:05	00:05	NA	NA	Force the Download of the TDMs	None
3	00:02	00:07	NA	NA	Completing Upgrade/Return to Full-Function Mode	None
NA	00:15	00:22	NA	NA	Backing up Converted Database	None
NA	00:04	00:26	NA	NA	Upgrading Removable Cartridges	None
NA	00:07	00:33	NA	NA	Backing Up Fixed Disk	None
NA	00:07	01:36	NA	NA	Upgrading Spare Fixed Disks	None
NA	00:05	01:41	NA	NA	Verifying All Databases	None

Time shown is average time for database conversion

3 See EAGLE System Health Check Appendix-A Reference [1] to calculate time estimate for Network Conversion phase

3.5 Backout Procedure Overview

The procedures shown in Table 8 are executed in the maintenance window.

Table 8. Backout Procedure Overview

Phase	Elapsed Time (Hours or Minutes)		(Hours or (Minutes)		Activity	Impact
x	This Step	Cum.	This Step	Cum.	Backout Setup Procedures	
NA	00:01	00:01	NA	NA	Load and Run Source OAM	None
NA	00:35	00:36	NA	NA	Full Fallback using Or Full Fallback using Fixed Disk as OAM conversion workspace – Case 1 Or Full Fallback using Fixed Disk as OAM conversion workspace – Case 2 Or Full Fallback using Fixed Disk as OAM conversion workspace – Case 3	None
34			NA	NA	Network Conversion	None

⁴ See EAGLE System Health Check Appendix-A Reference [1] to calculate time estimate for Network Conversion phase

4. UPGRADE PREPARATION

- Perform hardware inventory to identify any hardware not supported by the target release baseline.
- Bring all non-supported hardware up to baseline (to be coordinated with TAC personnel).
- Perform pre-upgrade system health checks to establish that the system is fit to upgrade.
- Download target release software if desired and capability available.
- Enter upgrade Software Access Key (SAK).

4.1 Hardware Upgrade Preparation

Before the upgrade execution, the customer site should have three source-release TDMs (fixed disks) and at least one source release removable cartridge (two if target release downloaded to the EAGLE). Two target-release system removable cartridges or the target release downloaded to the EAGLE. Before the target release installation, the spare equipment inventory should be as shown in Table 9 and Table 10.

Table 9. Equipment Inventory before Upgrade if media software delivery

Equipment	In-service	Spare	Upgrade	Totals:
Source-release TDM	2	1	0	3
Source-release cartridge	1	0	0	1
Target-release TDM	0	0	0	0
Target-release cartridge	0	0	2	2

Table 10. Equipment Inventory before Upgrade if server software delivery

Equipment	In-service	Spare	Upgrade	Totals:
Source-release TDM	2	1	0	3
Source-release cartridge	2	0	0	2
Target-release TDM	0	0	0	0
Target-release cartridge	0	0	0	0

During the procedure, both the active and standby in-service source-release TDMs are converted to the target release and the spare is reserved in case a fallback to the source release is required. Upon completion of the procedure, the spare equipment should be as shown in Table 11 and Table 12. Note, the spare TDM and source-release cartridges are upgraded to the target release in the second session. This allows a soak period for the target release and the possibility to fallback to the source release.

Table 11. Spare Equipment after Upgrade if target release on removable cartridge

Equipment	In-service	Spare	Upgrade	Totals:
Source-release TDM	0	0	1	1
Source-release cartridge	0	0	1	1
Target-release TDM	2	0	0	2
Target-release cartridge	1	1	0	2

Table 12. Spare Equipment after Upgrade if target release downloaded via FTP

Equipment	In-service	Spare	Upgrade	Totals:
Source-release TDM	0	0	1	1
Source-release cartridge	0	0	1	1
Target-release TDM	2	0	0	2
Target-release cartridge	1	0	0	1

4.2 Software Upgrade Preparation

Starting with release 39.2 it is necessary for the customer to obtain a Software Access Key (SAK) from TEKELEC to perform the upgrade, also the EAGLE now has the capability to download the target software release via FTP. In order to utilized this software download capability the EAGLE must be running (source upgrade release) release 39.2 or above and an E5-IPSM installed in the system.

Although this document has been created to ensure simple, concise instructions, it is important that the person executing the procedures is familiar with the document and has a clear understanding of each operation being performed.

5. SOFTWARE UPGRADE PROCEDURE

Call the Tekelec Customer Care Center at 1-888-FOR-TKLC (1-888-367-8552); or 1-919-460-2150 (international) prior to executing this upgrade to ensure that the proper media are available for use.

Before upgrade, users must perform the EAGLE system health check [1]. This check ensures that the system to be upgraded is in an upgrade-ready state. Performing the system health check determines which alarms are present in the system and if upgrade can proceed with alarms.

**** WARNING ****

If there are cards in the system, which are not in IS-NR state, these cards should be brought to the IS-NR before the upgrade process is started. If it is not possible to bring the cards IS-NR contact Tekelec Customer Care Center. If any card cannot be brought in-service or out-of-service, isolated, the card should be inhibited in Phase 2 (procedure 8). If any GLS card is in OOS-MT or IS-ANR state, none of the SCCP or LIM cards will load. If any LIM card is in OOS-MT state, this will prohibit the GX25 and STPLAN cards from loading. The sequence of upgrade is such that cards providing support services to other cards will be upgraded first.

**** WARNING *****

Do not start the upgrade process without the required spare equipment; without spare equipment, recovery procedures cannot be executed!

Please read the following notes on upgrade procedures:

- 1. Procedure completion times shown here are estimates. Times may vary due to differences in database size, user experience, and user preparation.
- 2. Command steps that require user entry are indicated with white-on-black step numbers.
- 3. The shaded area within response steps must be verified in order to successfully complete that step.
- 4. Where possible, EXACT command response outputs are shown. EXCEPTIONS are as follows:
 - Banner information is displayed in a format form only.
 - System-specific configuration information such as card location, terminal port # assignments, and system features.
 - ANY information marked with "XXXX" or "YYYY." Where appropriate, instructions are provided to determine what output should be expected in place of "XXXX or YYYY"
- 5. After completing each step and at each point where data is recorded from the screen, a check box should be provided.
- 6. Captured data is required for future support reference if Tekelec Customer Care Center is not present during the upgrade.

5.1 Software Upgrade Execution - Session 1

Procedure 1. Verifying Pre-Upgrade Requirements and Capturing Upgrade Data

S	This proce	This procedure verifies that all pre-upgrade requirements have been met.			
T E	Check off $()$ each step as it is completed. Boxes have been provided for this purpose under each step number.				
P #	Should THIS PROCEDURE FAIL, Contact TEKELEC Customer Care Center AND ASK FOR UPGRADE ASSISTANCE.				
	Complete pre-upgrade tasks	All tasks in Table 13 must be completed before continuing.			

Table 13. Pre-Upgrade Requirements

√	Tasks to be completed prior to upgrade execution				
	Perform hardware inventory.				
	Verify that all target-release baseline hardware has been installed. And any obsolete hardware has been replaced.				
	Verify that a full complement of EAGLE® spares is available, including a source-release TDM.				
	Note: This TDM's database should have been repaired in Upgrade Health Check [1].				
	Verify that you have at least one source-release system removable cartridge with an up-to-date database. Note: This cartridge's database should have been backed up in Upgrade Health Check [1].				
	Verify that you have two target-release system cartridges provided by Tekelec for upgrade or target-release has been downloaded to the EAGLE.				
	Verify that you have a copy of the Target Release's System Release Notes (see section 1.3.)				
	Verify that an EAGLE system health check has been performed and the output capture file has been validated by Tekelec Customer Care Center.				
	Perform upgrade time calculations to ensure that the upgrade can be completed within the window.				
	Collect all measurement reports.				
	Verify that all required documentation is included in the upgrade kit. [See section 4.2]				

Procedure 1. Verifying Pre-Upgrade Requirements and Capturing Upgrade Data

2	Issue the command to	rtrv-trm
	display terminal status.	
3	Response to retrieve terminal command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y rtrv-trm Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y
	Record the terminals in the TRM column that have TYPE of PRINTER ⁵ . Also record any terminals being used to enter commands (the user terminal) ⁶ Or terminals used by external applications that issue commands to the Eagle. In this example, terminal 12 is a printer, terminal 10 is the user terminal, and terminal 2 is KSR.	TRM TYPE COMM FC TMOUT MXINV DURAL 1 OAP 19200 -7-E-1 SW 30 5 00:01:00 2 KSR 9600 -7-E-1 SW 30 5 00:01:00 3 NONE 9600 -7-E-1 SW 30 5 00:01:00 4 NONE 9600 -7-E-1 SW 30 5 00:01:00 5 NONE 9600 -7-E-1 SW 30 5 00:01:00 6 NONE 9600 -7-E-1 SW 30 5 00:01:00 7 NONE 9600 -7-E-1 SW 30 5 00:01:00 8 NONE 9600 -7-E-1 SW 30 5 00:01:00 9 OAP 19200 -7-E-1 SW 30 5 00:01:00 10 KSR 9600 -7-E-1 SW 30 5 00:01:00 11 NONE 9600 -7-E-1 SW 30 5 00:01:00 12 PRINTER 9600 -7-E-1 SW 30 5 00:01:00 13 VT320 9600 -7-E-1 SW 30 5 00:01:00 14 NONE 9600 -7-E-1 SW 30 5 00:01:00 15 NONE 9600 -7-E-1 SW 30 5 00:01:00 16 NONE 9600 -7-E-1 SW 30 5 00:01:00 17 NONE 9600 -7-E-1 SW 30 5 00:01:00 18 NONE 9600 -7-E-1 SW 30 5 00:01:00 19 OAP 1900 -7-E-1 SW 30 5 00:01:00
	Capture6	TRM TRAF LINK SA SYS PU DB 1 YES YES YES YES YES YES 2 NO NO NO NO NO NO 3 NO NO NO NO NO NO 4 NO NO NO NO NO NO
	USER ⁷	5 NO NO NO NO NO NO 6 NO NO NO NO NO NO 7 NO NO NO NO NO NO
	Ext. Application:	8 NO NO NO NO NO NO 9 YES YES YES YES YES 10 YES YES YES YES YES YES 11 NO NO NO NO NO
	See recommendation #1 & #6 in section 1.7	12 YES YES YES YES YES YES 13 YES YES YES YES YES YES 14 NO NO NO NO NO NO
	If not echoing to the printer or KSR, go to step 8.	15 NO NO NO NO NO NO NO 16 NO NO NO NO NO NO NO NO ;
	Record the initial output group configuration for the user's and capture	USER
	terminals. Also, record the user's TMOUT value.	CAP
4	Echo command input to capture terminal.	act-echo:trm=P (Where the value for P is one of the printer/KSR terminal port numbers recorded in Step 3)
	If the capture terminal is the user terminal go to step 8.	
5	Response to activate command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y act-echo:trm=P Command entered at terminal #10. ;
6	If capture terminal's output groups are not all set to YES, issue the change terminal command.	chg-trm:trm=P:all=yes8 (P is the terminal port that is specified in step 4)

⁵ Record terminal that has type of KSR in addition to printers that are configured. Terminal being used to capture cannot be a Telnet terminal, see recommendation #6 in section 1.7.

⁶ The user terminal cannot be a Telnet terminal, see recommendation #6 in section 1.7.

⁷ If an external application is connected via a Telnet terminal on an IPSM card, see recommendation #6 in section 1.7.

Procedure 1. Verifying Pre-Upgrade Requirements and Capturing Upgrade Data

7	Response to change terminal command is	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y chg-trm:trm=P:all=yes Command entered at terminal #10.
ш	displayed.	;
8	If the output group and timeout on the user terminal are not set correctly, issue the command to change terminal timeout and display groups.	chg-trm:trm=USER:sa=yes:sys=yes:db=yes:tmout=0 (Where the value of <i>USER</i> is the user terminal number shown in Step3)
9	Response to change terminal command is displayed.	<pre>tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y chg-trm:trm=USER:sa=yes:sys=yes:db=yes:tmout=0 Command entered at terminal #10. ;</pre>
10	Issue the command to display the system features	rtrv-feat
	Response to retrieve features command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y EAGLE FEATURE LIST GTT = on GWS = off X25G = off LAN = off CRMD = off SEAS = off LFS = off MTPRS = off DSTN4000 = off WNP = off CNCF = off TLNP = off SCCPCNV = off TCAPCNV = off X252000 = off ;
12	Issue the command to display the feature key controlled features.	rtrv-ctrl-feat
13	Response to retrieve command is displayed. Record the TPS shown in the response. TPS	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y rtrv-ctrl-feat Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y The following features have been permanently enabled: Feature Name Partnum Status Quantity TPS XXXXXXXXXXX on 100
14	Issue the command to display the system serial number.	rtrv-serial-num

⁸ If the system displays continuous UAMs and the source of the UAMs are known issues, turn off the associated output groups to limit the information sent to printer\KSR terminal port.

Procedure 1. Verifying Pre-Upgrade Requirements and Capturing Upgrade Data

15	Response to retrieve command is displayed. Record the system serial number as shown: SN: Verify the serial number is locked. Record serial number in Appendix F.	rtrv-serial-num Command entered at terminal #4. ; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y System serial number = nt00002658 System serial number is locked.
16	Issue the command to retrieve records from the event log.	rtrv-log:dir=bkwd:edate=YYMMDD:etime=HHMM:snum=XXXX:enum=YYYY:num=NNN (Where YYMMDD is today's date and HHMM is one hour ago.) (Where XXXX, YYYY, and NNN are the values listed in Table 14.)
17	Response to retrieve command is displayed. Determine if the report termination reason meets the pass/fail criteria in Table 15.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.X.x-YY.y.y Card 1113; SYS REL= 35.1.0-56.31.0; STP CLLI= tklc1190601; Timezone= EST ****06-09-19 10:49:46**** 1426.0311 DPC 012-095-015 DPC is allowed ****06-09-19 10:49:45**** 1424.0314 DPC 012-095-015 Route is allowed ****06-09-19 10:46:33**** 0667.0312 * DPC 012-095-015 DPC is restricted ****06-09-19 10:32:19**** 0665.0312 * DPC 012-095-015 DPC is restricted ****06-09-19 10:32:19**** 3100.0311 DPC 012-079-001 DPC is allowed ****06-09-19 10:32:18**** 3098.0314 DPC 012-079-001 Route is allowed ****06-09-19 10:30:41**** 2828.0312 * DPC 012-079-001 DPC is restricted ****06-09-19 10:30:41**** 2827.0316 DPC 012-079-001 Route is prohibited ****06-09-19 10:30:41**** 2825.0312 * DPC 012-079-001 Route is prohibited ****06-09-19 10:30:41**** 2825.0312 * DPC 012-086-004 DPC is restricted UAM Report terminated - max. or num= count reached END OF LOG REPORT.
18	Repeat steps 16-17 for all sets of UAMs listed in Table 14.	

Table 14: DDL-Hunt-related UAM ranges.

SNUM	ENUM	NUM	UAM Text*
Start UAM	End UAM	Maximum Events	
200	200	15	RCVRY-LFK: link available
236	236	15	REPT-LFK: not aligned
264	275	50	REPT-LINK-CGST:congestion level X to Y RCVRY-LINK-CGST:congestion has cleared REPT-LINK-CGST:discard level X to Y RVCRY-LINK-CGST:discard has cleared
311	313	50	DPC is prohibited DPC is restricted DPC is allowed
314	316	50	Route is prohibited Route is restricted Route is allowed

^{* -} For the description of these UAMs, see External Reference [2]

Table 15: Retrieve Log Termination Pass/Fail Criteria:

Termination Reason	Pass/Fail	
- no records found within specified range	Pass	
- X records displayed (where X is less then	Pass	
NUM.)		
- max. or num= count reached	Further Analysis Required	See Appendix D,
		Section B.3

Procedure 2: Backing Up the Database

S		p the database to the fixed disk and the removable cartridge. This procedure is required to this upgrade process and match the distributed network database.			
Ē					
P	Check off (√) each step as it is completed. Boxes have been provided for this purpose under each step number.				
#	SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR UPGRADE ASSISTANCE.				
1	Issue the command to display database status.	rept-stat-db			
	Response from the command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y rept-stat-db Command entered at terminal #10. ;			
	Look in the columns labeled 'C' and 'LEVEL' output by this command.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y DATABASE STATUS: >> OK <<			
	Verify entries in column 'C' show 'Y' which indicates coherence.	FD BKUP Y XXX YY-MM-DD hh:mm:ss TTTT Y XXX YY-MM-DD hh:mm:ss TTTT FD CRNT Y XXX MDAL 1117			
	Verify both 'FD CRNT' Levels are equal.	RD BKUP Y::;			
3	Issue the command to back up the database.	chg-db:action=backup			
4	Response to backup command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y chg-db:action=backup Command entered at terminal #10.			
	Command execution time: approximately 4 – 20 minutes, longer for large databases.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 5042.1114 CARD 1115 Database BACKUP started Report Date:YY-MM-DD Time:hh:mm:ss ;			
		tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y BACKUP (FIXED): MASP B - Backup starts on active MASP. ;			
		tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y BACKUP (FIXED): MASP B - Backup on active MASP to fixed disk complete. :			
		tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y BACKUP (FIXED): MASP B - Backup starts on standby MASP. ;			
		tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 5045.1116 CARD 1115 Database action ended - OK Report Date:YY-MM-DD Time:hh:mm:ss;			
		tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y BACKUP (FIXED): MASP B - Backup on standby MASP to fixed disk complete. ;			

Procedure 2: Backing Up the Database

5 6 7	Visually inspect the removable cartridge to verify that it is labeled with the source release. Insert the source-release cartridge into the MDAL. Issue the command to back up the database to removable cartridge.	Wait for the cartridge to spin up. <pre>chg-db:action=backup:dest=remove</pre>
8	Response to backup command is displayed. Note that this command requires about 4 - 20 minutes, longer for large databases.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y chg-db:action=backup:dest=remove Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y BACKUP (REMOVABLE): MASP A - Backup starts on active MASP; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y BACKUP (REMOVABLE): MASP A - Backup to removable cartridge complete;
9	Issue the command to copy the GPLs to removable cartridge.	copy-gpl
10	Response to copy command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y copy-gpl Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y COPY GPL: MASP A - COPY STARTS ON ACTIVE MASP COPY GPL: MASP A - COPY TO REMOVABLE CARTRIDGE COMPLETE ;
11	Eject the Source-Release removable cartridge.	The cartridge should be stored in a safe location.

Procedure 3: Updating the Source-Release Spare TDM

S	This procedure backs u	the database to the spare TDM to ensure that a valid recovery spare is available.				
T E	Check off $(\sqrt{)}$ each step as it	completed. Boxes have been provided for this purpose under each step number.				
P #	SHOULD THIS PROCEDU	E FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR UPGRADE ASSISTANCE.				
1	Issue the report card status command.	rept-stat-card:appl=oam				
	Response to the card status command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST 1113 XXX-XXX-XXX GPSM EOAM IS-NR Active 1115 XXX-XXX-XXX GPSM EOAM IS-NR Standby				
	Record the card locations of both sets of GPSMs and TDMs as well as the part number of the TDMs:	Command Completed.				
	Act GPSM					
	Active TDM					
	p/n					
	Stby GPSM					
	Standby TDM					
	p/n					
	For this sample output, 1113/1114 are active and 1115/1116 are standby.					
3	Place spare TDM in system. 9	Unseat the standby GPSM card determined in step 2.				
		Remove the standby TDM card determined in step 2.				
	Record the part number for the spare TDM:	Insert the spare TDM card.				
	p/n	Re-seat the standby GPSM card. Note: UAMs are generated during this step. An audible alarm is generated. Wait for the standby GPSM/spare TDM to come up in standby mode and system returns to duplex mode.	ode.			
4	Issue the report status command for the standby GPSM.	rept-stat-card:loc=xxxx:mode=full (Where xxxx is the STBY GPSM slot from step 2 above)				
5	Verify that the backup goes to IS-NR	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y rept-stat-card:loc=xxxx Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST XXXX XXX-XXX-XXX GPSM EOAM IS-NR Standby DB-DIFF ALARM STATUS = NO Alarms. BPDCM GPL version = XXX-XXX-XXX IMT BUS A = Conn IMT BUS B = Conn Command Completed. ;	=			

⁹ The spare TDM should be the one verified by upgrade Health Check #2, see section 1.2.1 ref [1].

Procedure 3: Updating the Source-Release Spare TDM

6	Issue the command to retrieve GPL versions.	rtrv-gpl				
Ш						
\bigcap^{7}	Response from the retrieve command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y GPL Auditing ON				
ם	Verify correct source release levels. If any of the standby TDM gpls show an ALM indication it is possible that the TDM has not gone through session 2 of the previous upgrade. Stop the procedure and contact Tekelec Customer Care Center.	APPL CARD RELEASE APPROVED TRIAL REMOVE TRIAL SCANNEL TRIAL STPLAN 1116 XXX-XXX-XXX XXX-XXXX XXX-XXX XXX-XXXX XXX-XXXXX XXX-XXXX XXX	.			
8	Issue the command to repair the standby TDM's	chg-db:action=repair				
	database.	NOTE: The system will need approximately 2 minutes after step 5 to acquire duplex mode. As a result, the system will reject the chg-db command until it is back in duplex mode.				
9	Response to the repair command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y chg-db:action=repair Command entered at terminal #10.				
	Command execution time: between 20 and 41 minutes	; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y REPAIR: MASP A - Repair starts on standby MASP.				
	Wait for the 'repair complete' message to display and the MASP returns to in-service.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y REPAIR: MASP A - Repair from fixed disk complete.				
10	Place original standby TDM back in system.	Unseat the standby GPSM card determined in step 2.				
		Remove the standby TDM card determined in step 2.				
		Insert the original standby TDM card.				
		Re-seat the standby GPSM card. Note: UAMs are generated during this step. An audible alarm is generated. Wait for the standby GPSM/TDM to come up in standby mode and system returns to duplex mode.				

Procedure 4: Verifying All Databases

S T E P #	This procedure verifies that all databases are coherent and at the same level, which includes current and backup partitions on both fixed disks. Check off () each step as it is completed. Boxes have been provided for this purpose under each step number. SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR UPGRADE ASSISTANCE.						
	Issue the command to display database information.	rept-stat-db:display=all					
	Response to the command is displayed. Look in the columns labeled 'C,' 'T', and 'LEVEL' output by this command.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y DATABASE STATUS: >> OK <<					
	Verify entries in column 'C' show 'Y', which indicates coherence.	CARD/APPL LOC C T LEVEL TIME LAST UPDATE EXCEPTION					
	Verify entries in column 'T' show 'N' (except the MDAL), which indicates that the database is not in transition.	SS7ANSI 1101 Y N XXX 06-04-19 12:13:02 - SS7ANSI 1103 Y N XXX 06-04-19 12:13:02 - GLS 1104 Y N XXX 06-04-19 12:13:02 - SS7ANSI 1106 Y N XXX 06-04-19 12:13:02 - VSCCP 1107 Y N XXX 06-04-19 12:13:02 - VSCCP 1111 Y N XXX 06-04-19 12:13:02 - TDM-CRNT 1114 Y - YYY 06-04-19 12:13:02 - TDM-BKUP 1114 Y - YYY 06-04-19 16:11:18 DIFF LEVEL					
	Verify all entries in the database LEVEL column are the same.	TDM-CRNT 1116 Y N XXX 06-04-19 12:13:02 - TDM-BKUP 1116 Y - YYY 06-04-18 16:11:18 DIFF LEVEL MDAL 1117 Y					
	LEVEL is a value, which varies depending on the system.	EPAP A (ACTV) C BIRTHDATE LEVEL EXCEPTION					
	If the STDBY databases are not coherent or at the correct level, repeat Procedure 3, step 8.	RTDB-EAGLE 06-02-06 22:13:06 418231879 - EPAP B (STDBY) C BIRTHDATE LEVEL EXCEPTION					
	Verify that the MPS databases are coherent.	PDB 03-09-04 15:09:38 418231879 - RTDB 03-09-04 15:09:38 418231879 - RTDB-EAGLE 06-02-06 22:13:06 418231879 -					
	databases are concreme.	EAGLE RTDB REPORT CARD/APPL LOC C BIRTHDATE LEVEL EXCEPTION IN-SRVC					
		VSCCP 1107 Y 06-02-06 22:13:06 418231879 - 0d 4h 33m VSCCP 1111 Y 06-02-06 22:13:06 418231879 - 0d 4h 33m ;					

Procedure 5: Inserting Target-Release Upgrade System Cartridge

S	This procedure ensures	that the target-release removable cartridge is inserted into the MDAL.			
E	Check off $(\sqrt{)}$ each step as it	completed. Boxes have been provided for this purpose under each step number.			
P #	SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR UPGRADE ASSISTANCE.				
	If SSD delivery method used for the target release skip to step 6.	The label on the removable cartridge should have the target release printed on it.			
	Visually inspect the target- release removable cartridge.				
2	Insert the cartridge into the MDAL.	Allow for the cartridge to spin up.			
3	Issue the command to retrieve GPL versions.	rtrv-gpl			
4	Response from the retrieve command is displayed. (If no data is displayed, allow more time for step 2, then repeat step 3.) Verify that the GPL versions that are displayed in the "REMOVE TRIAL" are correct; see Section 1.3.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y GPL Auditing ON APPL CARD RELEASE APPROVED TRIAL REMOVE TRIAL EOAM 1114 xxx-xxx-xxx xxx-xxx xxx-xxxx xxx-xxxx xxx-xxx-xxx xxx-xxxx xxx-xxx-xxx SS7ANSI 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx SCCP 1116 xxx-xxx-xxx xxx-xxxx xxx-xxx-xxx xxx-xxx-xxx SCCP 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx GLS 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx GLS 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx CDU 1114 xxx-xx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx CCS7ITU 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx SS7Gx25 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx SS7FANSI 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx CDU 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx CCS7ITU 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx SS7Gx25 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx STPLAN 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx			
5	If GPLs are not correct, do the following until successful:	 Eject the cartridge and repeat Steps 1-4. Eject the first target-release cartridge and repeat Steps 1-4 with the second target-release cartridge. Contact Tekelec Customer Care Center. 			
6	Establish system status	See recommendation # 7 in Section 1.7			

S T	This procedure loads the target-release GPL to both GPSMs. This procedure requires that both GPSMs be rebooted (one at a time) and verified as running the target-release GPLs. Also, verify that the Upgrade Software								
E	Access Key has been entered.								
P									
#	Check off $(\sqrt{)}$ each step as it is completed. Boxes have been provided for this purpose under each step number.								
	SHOULD THIS PROCEDUL ASSISTANCE.	RE FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR UPGRADE							
1	Issue the initialize card	init-card:loc=XXXX (target release on the MO cartridge)							
	command for the standby GPSM.	or init-card:loc=XXXX:ptrngrp=inactive (target release downloaded)							
		(Where <i>XXXX</i> is the location of the standby GPSM slot recorded in Procedure 3, Step 2)							
	Response to initialize command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y init-card:loc=XXXX Command entered at terminal #10.							
		; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y * 0261.0013 * CARD XXXX EOAM Card is isolated from the system ASSY SN: XXXXXXXXX							
		; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 5038.0014 CARD XXXX EOAM Card is present ASSY SN: xxxxxxxxx							
3	After the standby GPSM is available, issue the card status command to verify the standby GPSM.	rept-stat-gpl:gpl=eoam							
4	Response from the status command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y rept-stat-gpl:gpl=eoam Command entered at terminal #10.							
	Verify that the GPL versions that are displayed in the "RUNNING" column are correct; see Section 1.3.	; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y GPL Auditing ON							
		APPL CARD RUNNING APPROVED TRIAL EOAM 1113 YYY-YYY-YYY YYY-YYY 10 EOAM 1115 XXX-XXX-XXX ALM YYY-YYY-YYY Command Completed.							
	Record the system date, time and time zone in the response header:	;							
	Time:								
	Date:								
	Timezone:								
	Record the local time:								
	Pre-upgrade Local Time:								

¹⁰ Dashes are displayed until GPL auditing has initialized after the activity has been switched, which may take up to two minutes.

-	If the GDI a are not correct	If the standard and the MO contribute
5	If the GPLs are not correct, do the following until successful:	 If target release on the MO cartridge: Eject cartridge, re-insert cartridge, and repeat Steps 1-4. Eject first target-release cartridge, insert the second target-release cartridge, and repeat Steps 1-4. Contact Tekelec Customer Care Center.
		If the target release downloaded to the EAGLE:
		1. Repeat Step 1-4.
		Contact Tekelec Customer Care Center.
6	Issue the initialize card command for the <i>active</i>	init-card:loc=XXXX (target release on the MO cartridge)
	GPSM.	or init-card:loc=XXXX:prtngrp=inactive (target release downloaded)
		(Where XXXX is the location of the active GPSM slot recorded in Procedure 3, Step 2)
7	Response to the initialize command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y init-card:loc=xxxx Command entered at terminal #10. ;
		tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y * 0261.0013 * CARD XXXX EOAM Card is isolated from the system ASSY SN: xxxxxxxxx
		; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 5038.0014 CARD XXXX EOAM Card is present ASSY SN: xxxxxxxxxx;
8	Issue the command to log back in to the system.	login:uid=XXXXXX (Where XXXXXX is a valid login ID)
9	Response to login command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Upg Phase 0 User logged in on terminal 10. ;
<u> </u>	Ignore any login failure message.	? Login failures since last successful LOGIN Last successful LOGIN was on port ? on ??-??-?? @ ??:??:??
Г	Verify the Upgrade Phase in Banner ¹¹ .	
	If the system time, date or time zone has changed 12, record the current values.	
	Time:	
	Date:	
	Timezone:	
I		

Phase number is not displayed at this point for incremental upgrades and certain upgrades between point releases. See section 1.6 for a definition of incremental upgrade and section 1.4 for a definition of database versioning. Database versioning between releases is determined in Procedure 7, step 2.

². System date, time and time zone may change due to PR 157613, time needs to be reset at the conclusion of the upgrade.

10	Echo command input to capture terminal.	act-echo:trm=P (Where P is the terminal port number specified in Procedure 1, Step 3)
	If the capture terminal is the user terminal go to step 12.	
11	Response to print capture command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Upg Phase x Scroll Area Output will be echoed to Port P.;
12	Issue the command to display the status of the EOAM GPL	rept-stat-gpl:gpl=eoam
13	Response from the retrieve command is displayed.	<pre>tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Upg Phase x rept-stat-gpl:gpl=eoam Command entered at terminal #10. ;</pre>
	Verify that the GPL versions that are displayed	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y GPL Auditing ON
	in the "RUNNING" column are correct; see section 1.3.	APPL CARD RUNNING APPROVED TRIAL EOAM 1113 XXX-XXX-XXX ALM YYY-YYY-YYY XXX-XXX-XXX * EOAM 1115 XXX-XXX-XXX ALM YYY-YYY-YYY XXX-XXX-XXX * Command Completed. ;
	If GPLs are not correct, do the following until successful:	 If target release on the MO cartridge: Eject cartridge, re-insert cartridge, and repeat Steps 6-13. Eject first target-release cartridge, insert the second target-release cartridge, and repeat Steps 6-13. Contact Tekelec Customer Care Center. If the target release downloaded to the EAGLE: Repeat Step 6-13. Contact Tekelec Customer Care Center.
15	Issue the command to display the version of the BPDCM GPL running on card 1113.	rept-stat-card:loc=1113:mode=full
16	Response from the retrieve command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Upg Phase x rept-stat-card:loc=1113:mode=full Command entered at terminal #10.
	Record version of BPDCM or BPDCM2 running on cards 1113. BPDCM:	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 1113 XXX-XXX-XXX GPSM EOAM IS-NR Standby ALARM STATUS = NO Alarms. BPDCM GPL version = YYY-YYY-YYY IMT BUS A = Conn IMT BUS B = Conn CLOCK A = Active CLOCK I = Idle CLOCK I = Idle MBD BIP STATUS = Valid MOTHER BOARD ID = GPSM2 DBD STATUS = Valid DBD TYPE = MEM DBD MEMORY SIZE = 1024M HW VERIFICATION CODE = TROUBLE TEXT VER. = Command Completed.
17	Validate the Software Access Key with the upgrade target release.	act-upgrade:action=chkrel:src=zzzz (Where zzzz is the disk that contains the upgrade target release src=remove if target release on MO in MDAL or src=fixed if target release downloaded to the EAGLE)

18	Response from the validation.	;	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Upg Phase x act-upgrade:action=chkrel:src=zzzz Command entered at terminal #10.
	Verify that the Upgrade target release is correct and that the Software Access Key is valid. If either the upgrade target release is incorrect or the Software Access Key is invalid stop the upgrade and contact Tekelec Customer Care Center.	;	Upgrade target: EAGLE XX.x.x-YY.y.y Software Access Key valid for target release Command Complete: Upgrade action completed successfully

5.2OAM Conversion

Procedure 7: Verifying all Databases

S T	This procedure verifies that all of the fixed disk's database partitions have not been converted and are still coherent and at the same level.							
E	concrent and at the sair							
P #	Check off $(\sqrt{)}$ each step as it	ep as it is completed. Boxes have been provided for this purpose under each step number.						
π	SHOULD THIS PROCEDU	HOULD THIS PROCEDURE FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR <u>UPGRADE ASSISTANCE</u> .						
1	Issue the command to display database status during upgrades.	act-upgrade:action=dbstatus						
2	Response to the command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Upg Phase 0 DATABASE STATUS: >> OK << TDM 1114 (ACTV) TDM 1116 (STDBY)						
	Look in the columns labeled 'C', 'T', and 'LEVEL' output by this command.	C LEVEL TIME LAST BACKUP C LEVEL TIME LAST BACKUP FD BKUP Y XXX YY-MM-DD hh:mm:ss TTTT Y XXX YY-MM-DD hh:mm:ss TTTT FD CRNT Y XXX MDAL 1117						
	Verify entries in column 'C' show 'Y', which indicates coherence.	RD BKUP Y 1 CARD/APPL LOC C T LEVEL TIME LAST UPDATE VERSION STATUS						
	Verify column 'T' shows 'N' for both CRNT databases, which indicates	CARD/APPL						
	that those databases are not in transition If MSD software delivery method used, verify the MDAL database level is	INACTIVE PARTITION GROUP CARD/APPL LOC C T LEVEL TIME LAST UPDATE VERSION STATUS TDM-CRNT 1114 Y - ZZZ YY-MM-DD hh:mm:SS ZZZ-ZZZ-ZZZ NORMAL TDM-BKUP 1114 Y - ZZZ YY-MM-DD hh:mm:SS ZZZ-ZZZ-ZZZ NORMAL TDM-CRNT 1116 Y - ZZZ YY-MM-DD hh:mm:SS ZZZ-ZZZ-ZZZ NORMAL TDM-BKUP 1116 Y - ZZZ YY-MM-DD hh:mm:SS ZZZ-ZZZ-ZZZ NORMAL						
	"1." Verify all entries in the database 'Level' column marked as 'XXX' are the same. LEVEL varies depending on the system.	;						
	Verify that the version numbers displayed are correct; ¹³							
	If target release was downloaded, verify all entries in the database 'Level' column marked as 'ZZZ' are '1'.							
	If SSD software delivery method used, verify the version of the inactive partition is that of the upgrade target release, the database level is "1" and the coherency is "Y".							

32 of 100

¹³ See section 1.4 to verify the database versions. If the database versions are the same for the TDMs as well as the MDAL, the phase indicator is not displayed until after Procedure 8, step 1.

Procedure 8: STP Conversion

This begins the actual STP conversion process. This procedure begins during Upgrade Phase 0 and ends as part of Upgrade Phase 3. See recommendation #5 in section 1.7 before executing this procedure.

Upgrade Phase 3. See recommendation #5 in section 1.7 before executing this procedure E

P Check off $(\sqrt{})$ each step as it is completed. Boxes have been provided for this purpose under each step number.

If the upgrade execute terminates before successfully completing, see recommendation #7 in Section 1.7

SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR UPGRADE ASSISTANCE.

Issue the command to begin database conversion.

Note that the duration of this command is dependent on the size of the database and the size of the network configuration.¹⁴

Table 16. Act Upgrade Command Actions lists the actions completed by the command, based on which workspace was selected by the upgrade process.

Appendix D contains messages illustrative of the output of upgrade during this series of operations.

act-upgrade:action=convertstp:thres=75 (target
release on MO)

(If another thres value is to be used see recommendation #5 in section 1.7)

Or

act-upgrade:action=convertstp:src=fixed:thres=75
(target release was downloaded)

Table 16. Act Upgrade Command Actions

	Fixed workspace
A	OAM based measurements are inhibited.
В	N/A
C	The standby disk is formatted based on the target release configuration table.
D	The target release GPLs are copied onto the standby TDM.
E	The existing database is converted onto the standby disk, upgrading the existing EAGLE source-release tables to target-release tables.
F	The standby GPSM boots automatically.
G	The active GPSM then boots allowing the standby to resume the active role. ¹⁵
Н	The standby disk is formatted based on the target release configuration table.
I	The existing database is converted onto the standby disk, upgrading the existing EAGLE source-release tables to target-release tables.
J	The target release GPLs are copied onto the standby TDM.
K	The standby GPSM boots automatically.
L	Initialization of Network cards.

Typical full conversion time may range from 30 to 60 minutes. Time for incremental upgrades is reduced since only items D, J & L are performed.

¹⁵ Proceed to step 3 to log back into the system and restart output capture.

Procedure 8: STP Conversion

2	Command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST Rel XX.x.x-XX.x.x Upg Phase 0 act-upgrade:action=convertstp:thres= <i>XX</i> Command entered at terminal #10.
	Note the banners transitions from Phase 0 to Phase 3. For incremental upgrade, see footnote 16	NOTICE: One of the following messages will be output at the start of the upgrade process to indicate which workspace (fixed or removable) has been selected by the system for OAM conversion:
	Completion notice of successful upgrade. If upgrade does not complete successfully, see recommendation # 7 in section 1.7	tekelecstp YY-MM-DD hh:mm:ss EST Rel XX.x.x-XX.x.x Upg Phase 0 Using inactive standby partitions for OAM conversion (disk=dddd); (Where dddd defines conversion workspace) NOTICE: See Appendix D (D.1) for samples of output messages.
		tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase 3 Command Complete: Upgrade action completed successfully; NOTE: If upgrade terminates abnormally in phase 3 due to cards being in IS-ANR DDL Hunt, contact Tekelec Customer Care Center for assistance in executing Appendix B (B.3).
3	After item G in step 1, issue the command to log back in to the system.	Login:uid=XXXXXX (Where XXXXXX is a valid login ID)
4	Response to login command is displayed. Ignore any login failure message.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase x User logged in on terminal 10. ; ? Login failures since last successful LOGIN Last successful LOGIN was on port ? on ??-??-?? @ ??:??:??
5	Issue the command to reactivate printer capture of upgrade process.	act-echo:trm=P (Where P is the terminal port number specified in Procedure 1, Step 3)
6	Response to print capture command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase x Scroll Area Output will be echoed to Port P. ;

34 of 100

¹⁶ Software troubles from the DMS_LOCK.C module may be generated, for incremental upgrade only, while GPLs are being copied. These troubles are not expected but, if they occur in this circumstance, they are not service affecting.

Procedure 8: STP Conversion

7	Issue the command to display database status during	act-upgrade:action=dbstatus
	upgrades.	
8	Response from the command is displayed. Look in the columns labeled 'C', 'LEVEL' and 'VERSION STATUS' output by this command.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase x DATABASE STATUS: >> OK <<
	Verify entries in column 'C' show 'Y' which indicates coherence.	CARD/APPL LOC C T LEVEL TIME LAST UPDATE VERSION STATUS TDM-CRNT 1114 Y N XXX YY-MM-DD hh:mm:ss XXX-XXX-XXX NORMAL TDM-BKUP 1114 Y - XXX YY-MM-DD hh:mm:ss XXX-XXX-XXX NORMAL TDM-CRNT 1116 Y N XXX YY-MM-DD hh:mm:ss XXX-XXX-XXX NORMAL TDM-BKUP 1116 Y - XXX YY-MM-DD hh:mm:ss XXX-XXX-XXX NORMAL
	Verify both 'FD CRNT' Levels are equal.	MDAL 1117 Y - 1 YY-MM-DD hh:mm:ss xxx-xxx NORMAL INACTIVE PARTITION GROUP CARD/APPL LOC C T LEVEL TIME LAST UPDATE VERSION STATUS
	Verify 'VERSION STATUS' shows NORMAL in the active partition group. NOTE: this will not occur until step 2 above is completed.	TDM-CRNT 1114 Y - ZZZ YY-MM-DD hh:mm:SS ZZZ-ZZZ-ZZZ UPG 3 TDM-BKUP 1114 Y - ZZZ YY-MM-DD hh:mm:SS ZZZ-ZZZ-ZZZ UPG 3 TDM-CRNT 1116 Y - ZZZ YY-MM-DD hh:mm:SS ZZZ-ZZZ-ZZZ UPG 3 TDM-BKUP 1116 Y - ZZZ YY-MM-DD hh:mm:SS ZZZ-ZZZ-ZZZ UPG 3 ;
9	Issue the report card status command to verify network cards.	rept-stat-card
10	Response to the card status command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase x CARD VERSION TYPE APPL PST SST AST 1101 XXX-XXX-XXX TSM SCCP IS-NR Active 1102 XXX-XXX-XXX TSM SCCP IS-NR Active 1103 XXX-XXX-XXX TSM GLS IS-NR Active 1104 XXX-XXX-XXX TSM GLS IS-NR Active
	Verify that the cards are IS- NR, OOS-MT Isolated or OOS-MT-DSBLD. Verify that the GPL versions	1105 XXX-XXX-XXX LIMDSO SS7GX25 IS-NR Active 1111 XXX-XXX-XXX ACMENET STPLAN OOS-MT Isolated 1113 XXX-XXX-XXX GPSM EOAM IS-NR Active 1114 TDM IS-NR Active 1115 XXX-XXX-XXX GPSM EOAM IS-NR Standby
	that are displayed in the "VERSION" column are correct; see Section 1.3.	1116 TDM IS-NR Active 1117 MDAL IS-NR Active 1201 XXX-XXX-XXX LIMDSO SS7ANSI IS-NR Active 1202 XXX-XXX-XXX LIMDSO SS7ANSI IS-NR Active 1203 XXX-XXX-XXX LIMDSO SS7ANSI IS-NR Active 1204 XXX-XXX-XXX LIMDSO SS7ANSI IS-NR Active 1205 XXX-XXX-XXX DCM SS7IPGW IS-NR Active 1207 XXX-XXX-XXX DCM IPGWI IS-NR Active 1211 XXX-XXX-XXX LIMDSO CCS7ITU IS-NR Active 1215 XXX-XXX-XXX DSM VSCCP IS-NR Active 1217 XXX-XXX-XXX DSM VSCCP IS-NR Active 1217 XXX-XXX-XXX LIMDSO CCS7ITU IS-NR Active 1217 XXX-XXX-XXX DSM VSCCP IS-NR Active 1217 XXX-XXX-XXX LIMATM ATMANSI IS-NR Active 3101 XXX-XXX-XXX LIMATM ATMANSI IS-NR Active 3102 XXX-XXX-XXX LIMATM ATMANSI IS-NR Active Command Completed.

Procedure 8: STP Conversion

11	Issue the command to display								
11	GPL status.	rtrv-gpl							
	GPL status.								
12	Response to GPL status	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y							
12		GPL Auditing ON							
ш	command is displayed.	GFE Additing ON							
ı		APPL	CARD	RELEASE	APPROVED	TRIAL	REMOVE TRIAL		
		EOAM	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX		
		EOAM	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX			
		SS7ANSI	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX		
		SS7ANSI	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX			
	Verify that the GPL versions	SCCP	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX		
	that are displayed in the	SCCP	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX			
	1 2	GLS	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX		
	"RELEASE" column are	GLS	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX			
	correct; see Section 1.3.	CDU	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX		
		CDU	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX			
		CCS7ITU	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX		
		CCS7ITU	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX			
		SS7GX25	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX		
		SS7GX25	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX			
		STPLAN	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX		
		STPLAN	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX			
		IMT	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX		
		IMT	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX			
		ATMANSI	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX		
		ATMANSI	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX			
		BPHCAP	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX		
		BPHCAP	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX			
		BPDCM	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX		
		BPDCM	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX			
		EMDC	1114 1116	XXX-XXX-XXX XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX		
		EMDC			XXX-XXX-XXX	XXX-XXX-XXX			
		EBDABLM EBDABLM	1114 1116	XXX-XXX-XXX XXX-XXX-XXX	XXX-XXX-XXX XXX-XXX-XXX	XXX-XXX-XXX XXX-XXX-XXX	XXX-XXX-XXX		
		EBDADCM	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX		
		EBDADCM	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX			
		VXWSLAN	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX		
		VXWSLAN	1116	XXX XXX XXX XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX			
		IPLIM	1114	XXX XXX XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX		
		IPLIM	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX			
		IPLIMI	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX		
		IPLIMI	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX			
		SS7IPGW	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX		
		SS7IPGW	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX			
		VSCCP	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX		
		VSCCP	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX			
		VXUTIL	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX		
		VXUTIL	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX			
l									
		;							

5.3 Completion of Session 1

Procedure 9: Force Download of TDMs

S T E P #	This procedure reseats the TDMs. Only execute this procedure if the GPSMs in slots 1113 and 1115 were flashed in Procedure 8, step 2. Check off (√) each step as it is completed. Boxes have been provided for this purpose under each step number. SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR UPGRADE ASSISTANCE.	
1	Eject the removable cartridge.	
	Compare TDM part numbers recorded in procedure 3, steps 2 & 3 with 870-0774-15. If recorded part numbers are greater then or equal to 870-0774-15 go to the next procedure, else continue to step 3.	If the system is running TDM-GTI (p/n 870-0774-15 or higher) this procedure is not applicable.
3	Issue the command to display version of BPDCM GPL running on CARD 1113.	rept-stat-card:loc=1113:mode=full
4	Response from the retrieve command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Upg Phase x rept-stat-card:loc=1113:mode=full Command entered at terminal #10.
	If slot 1113 is alarmed then stop upgrade and contact Tekelec Customer Care Center. Compare version of BPDCM running on 1113 with version recorded in Procedure 6 Step 16, if version numbers match then go to the next procedure, else continue next step.	<pre>tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 1113</pre>
5	Issue command to inhibit standby MASP	inh-card: loc=XXXX (Where XXXX is the location of the Standby GPSM)
6	Response to inhibit card command is displayed	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase x ** 5045.0514 ** CARD XXXX EOAM Standby MASP is inhibited ;

Procedure 9: Force Download of TDMs

7	Unplugged and re-insert the standby MASP.	Unseat the standby GPSM
	the standby WASI.	Unseat the card in the standby TDM slot.
		Re-seat the card in the TDM slot.
		Re-seat the standby GPSM. Note: UAMs are generated during this step. An audible alarm is generated. Wait for the standby GPSM / TDM to come up in standby mode.
8	Issue the command to allow the standby OAM.	alw-card:loc=XXXX (Where XXXX is the location of the Standby GPSM)
9	Response to allow card command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase x Card has been allowed. ;
	If this is the second time performing this step, go to next procedure. Otherwise continue.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase x Command Completed. ;
		tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase x 5046.0515 CARD XXXX EOAM Standby MASP is allowed;
10	Issue the command to initialize the active OAM.	init-card:loc=YYYY (Where YYYY is the location of the ACTIVE GPSM)
11	Response to initialize card command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase x ** 5001.0008 ** CARD YYYY EOAM Active MASP has become isolated ;
		tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5003.0009 CARD XXXX EOAM
12	Issue the command to log back in to the system.	login:uid=XXXXXX (Where XXXXXX is a valid login ID)
13	Response to login command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y User logged in on terminal 10. ;
14	Issue the command to reactivate printer capture.	act-echo:trm=P (Where P is the terminal port number specified in Procedure 1, Step 4)
15	Response to printer capture command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y act-echo:trm=P Command entered at terminal #10. :
16	Repeat steps 5 through 9.	Perform Step 5 through Step 9 on TDM of the other MASP.

Procedure 10: Completing Upgrade/Return to Full-Function Mode

S T	This procedure completes the upgrade and returns the system to full-function mode. Verification of the GPL distribution is also performed. If Procedure 9 has been executed, go to step 7.		
E P	Check off ($$) each step as it is completed. Boxes have been provided for this purpose under each step number.		
#	SHOULD THIS PROCEDU.	RE FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR UPGRADE ASSISTANCE.	
1	Issue the command to initialize both MASPs.	init-card:appl=oam	
2	Response to the init command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upgrade Phase x init-card:appl=oam Command entered at terminal #10. ;	
	Verify the banner display full-function mode after the MASPs boot.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 0002.0009 CARD 1113 EOAM MASP became active	
3	Issue the command to log back in to the system.	login:uid=XXXXXX (Where XXXXXXX is a valid login ID)	
4	Response to login command is displayed	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y User logged in on terminal 10. ;	
5	Issue the command to reactivate printer capture.	act-echo:trm=P (Where P is the terminal port number specified in Procedure 1, Step 4)	
6	Response to printer capture command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y act-echo:trm=X Command entered at terminal #10. ;	
7	Issue the command to display card status.	rept-stat-gpl:display=all	
8	Response to GPL status command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y GPL Auditing ON GPL CARD RUNNING APPROVED TRIAL	
	Verify that no "ALM" indicator is displayed.	EOAM 1113 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX * BPDCM XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX * BPDCM XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX SS7ANSI 1201 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX IMT XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX	
	Record the current local time and calculate the duration of the upgrade (subtract the local time recorded in procedure 6, step 4 from the present local time: Post-upgrade Local Time:	SS7ANSI 1202 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-X	
	Upgrade duration: ———	VSCCP 1107	

Procedure 10: Completing Upgrade/Return to Full-Function Mode

9	Reset the system time zone if necessary. If either the system time or time zone recorded in procedure 6, step 9 is different from the values recorded in procedure 6, step 4 perform this step.	set-time:time=HHMM:tz=zzzz (where HHMM is hour and minute recorded in procedure 6, step 4 plus the upgrade duration time recorded in the previous step) (where zzzz is the time zone recorded in procedure 6, step 4)
10	Response to set-time command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y set-time:time=HHMM:tz=zzzz Command entered at terminal #10. ;
11	Reset the system date if necessary. If system date is not the same as that recorded in Procedure 6 step 4 change it now.	<pre>set-date:date=yymmdd (where yymmdd is the value recorded in Procedure 6 step 4, account for date change if execution spans a time rollover)</pre>
12	Response to set-date command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y set-date:date=yymmdd Command entered at terminal #10. ;
13	Establish system status	See recommendation # 7 in Section 1.7

Procedure 11: Backing up Converted Database

S T		ss up the converted Target-Release database to the fixed disk and to either the removable FTP server if provisioned. Verification of the converted database is also done.
E P	Check off ($\sqrt{}$) each step as it is completed. Boxes have been provided for this purpose under each step number.	
#	SHOULD THIS PROCE	DURE FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR UPGRADE ASSISTANCE.
	If the MSD delivery method used, insert the target-release removable cartridge. Otherwise go to step 13.	Wait for the cartridge to spin up.
2	Issue the command to report database status.	rept-stat-db
3	Response to database status command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-db Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y
	Check entries in 'C' should be coherent, which is indicated by a 'Y'.	DATABASE STATUS: >> OK << TDM 1114 (STDBY) C LEVEL TIME LAST BACKUP FD BKUP Y XXX Y XXX FD CRNT Y XXX MDAL 1117 TDM 1116 (ACTV) C LEVEL TIME LAST BACKUP T XXX Y XXX - Y XXX MDAL 1117
	If all entries in column 'LEVEL' are the same value, go to Step 13.	RD BKUP Y 117;
4	Issue the database command to backup the fixed disks; this will put a time stamp in the database.	chg-db:action=backup
5	Response and progress of back up command are displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5028.1114
	Command execution time: approximately 4 – 20 minutes, longer for large databases.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y BACKUP (FIXED): MASP A - Backup starts on active MASP. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y BACKUP (FIXED): MASP A - Backup on active MASP to fixed disk complete. ;
		tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y BACKUP (FIXED): MASP A - Backup starts on standby MASP. ;
		tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5031.1116
		tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y BACKUP (FIXED): MASP A - Backup on standby MASP to fixed disk complete ;

_

¹⁷ In the non-typical scenario, if the removable was used for AWA, DB level on removable should be equal to the TDMs' versions. The AWA version was recorded in procedure 9, step 2.

Procedure 11: Backing up Converted Database

6	Issue the command to report database status.	rept-stat-db
	Response to database status command is displayed. Check: entries in 'C' should be coherent, which is indicated by a 'Y'. Verify both 'FD CRNT' and 'FD	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-db Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y DATABASE STATUS: >> OK <<
	BKUP' Levels are equal.	RD BKUP Y 1;
8	If the upgrade target release received on MO cartridge, issue the database command to back up to the removable cartridge. Else go to step 14.	chg-db:action=backup:dest=remove
9	Response to backup command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5035.1114
	Command Execution Time: Approximately 4 – 20 minutes, longer for large databases.	<pre>tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y BACKUP (REMOVABLE): MASP B - Backup to removable server complete. ;</pre>
10	Issue the command to report database status.	rept-stat-db
11	Response to database status command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-db Command entered at terminal #10. ;
	Verify all entries in 'C' should be coherent, which is indicated by a 'Y'. Verify all entries in column 'LEVEL' are the same value.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y DATABASE STATUS: >> OK <<
	Eject the removable cartridge from the MDAL.	The cartridge should be stored in a safe location.

Procedure 11: Backing up Converted Database

13	If the system setup for remote backups, issue the database command to backup to remote FTP server.	chg-db:action=backup:dest=server
14 	Response to backup command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5035.1114
	Command Execution Time: Approximately 4 – 20 minutes, longer for large databases.	tekelecstp YY-MM-DD HH.HMH.SS EST PPP XX.X.X-YY.y.y tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.X.X-YY.y.y BACKUP (SERVER): MASP B - Backup to server complete. ;
	If backup fails, contact Tekelec Customer Care Center.	

→ This concludes SESSION ONE ←

5.4 Upgrade Session 2

Procedure 12. Verifying Upgrade Session 2 Requirements

S T E	This procedure verifies that all upgrade session 2 requirements have been met. This procedure assumes an acceptable amount of soak time has occurred since the end of session #1. The expected norm for soak time is 48 hours.		
P #	Check off (√) each step as it is completed. Boxes have been provided for this purpose under each step number. SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR UPGRADE ASSISTANCE.		
1	Complete ore-upgrade session 2 tasks in Table 17 must be completed before continuing.		

Table 17. Upgrade Session 2 Requirements

√	Tasks to be completed prior to upgrade session 2 execution
	Verify that an EAGLE system health check 3 has been performed.

Procedure 13: Upgrading Removable Cartridges

S This procedure describes how to update source-release removable cartridges to the target release. S recommendation #2 in section 1.7.		
P	Check off ($\sqrt{}$) each step as	it is completed. Boxes have been provided for this purpose under each step number.
#	SHOULD THIS PROCEDU ASSISTANCE.	IRE FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR UPGRADE
1	Esha sammand innut to	
1	Echo command input to capture terminal.	act-echo:trm=P (Where the value for P is one of the printer/KSR terminal port numbers recorded in Procedure 1, Step 3)
	See recommendation #1 & #6 in section 1.7	
2	Response to activate command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y act-echo:trm=P Command entered at terminal #XX. ;
3	If capture terminal's output groups are not all set to YES, issue the change terminal command.	<pre>chg-trm:trm=P:all=yes (P is the terminal port that is specified in step 1)</pre>
4	Response to change terminal command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y chg-trm:trm=P:all=yes Command entered at terminal #XX. ;
5	If the measurements platform is enabled go to step 9. Else, issue the command to retrieve measurement status.	rtrv-meas-sched
6	Response to retrieve command is displayed. Record if collection is on or off:	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y COLLECT = off SYSTOT-STP = (off) SYSTOT-TT = (off) SYSTOT-STPLAN = (off) COMP-LNKSET = (off) COMP-LINK = (off)
	Record if system configuration requires measurements to be on or off:	MTCD-STP = (on) MTCD-LINK = (on) MTCD-STPLAN = (on) MTCD-LNKSET = (on) ;
	If COLLECT=ON, continue to next step. Otherwise, go to Step 9.	
7	Issue the command to turn off measurement collection.	chg-meas:collect=off
8	Response to the change command is displayed.	tekelecstp YY-MM-DD hh:mm:ss zzzz PPP XX.x.x-YY.y.y chg-meas:collect=off Command entered at terminal #XX.
	If no source cartridges need upgrading, go to next procedure.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CHG-MEAS: MASP A - COMPLTD ;

Procedure 13: Upgrading Removable Cartridges

9	Issue measurement report command	rept-meas:type=systot:enttype=stp
	Response to the command is displayed. If command fails,	E2278 Cmd Rej: 30-minute measurement collection in progress tekelecstp YY-MM-DD hh:mm:ss zzzz PPP XX.x.x-YY.y.y rept-meas:type=systot:enttype=stp Command entered at terminal #XX. ;
Ľ	reattempt in five minutes until it completes, See Table 18.	
11	If LNP feature on, issue measurement report command	rept-meas:type=mtcd:enttype=lnp
12	Response to the command is displayed. If command fails,	E2277 Cmd Rej: Daily measurement collection in progress tekelecstp YY-MM-DD hh:mm:ss zzzz PPP XX.x.x-YY.y.y rept-meas:type=mtcd:enttype=lnp Command entered at terminal #XX.
	reattempt in five minutes until it completes, See Table 18.	;
13	Issue measurement report command	rept-meas:type=mtcdth:enttype=stp
14	Response to the command is displayed.	E2276 Cmd Rej: Day-to-hour measurement collection in progress tekelecstp YY-MM-DD hh:mm:ss zzzz PPP XX.x.x-YY.y.y rept-meas:type= mtcdth:enttype=stp Command entered at terminal #XX.
	If command fails, reattempt in five minutes until it completes, See Table 18.	;
15	Insert the source removable cartridge to be upgraded into the MDAL.	Wait for the cartridge to spin up.
16	Issue the command to format the cartridge.	format-disk:type=system:force=yes
17	Response to format command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y format-disk:type=system:force=yes Command entered at terminal #10. ;
	If the format should fail, first repeat Step 16, then contact Tekelec Customer Care Center.	<pre>tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Format-disk of system removable cartridge started. Extended processing required, please wait. ;</pre>
	Customer Care Center,	<pre>tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Format-disk of system removable cartridge completed. ;</pre>

Table 18. MTT errors generated when measurement collection is in progress.

Response ID Code:	Command Reject Text for MTT error:
E2276	Day-to-hour measurement collection in progress
E2277	Daily measurement collection in progress
E2278	30-minute measurement collection in progress
E2279	5-minute measurement collection in progress
E2290	Hourly measurement collection in progress
E3688	15-minute measurement collection in progress

Procedure 13: Upgrading Removable Cartridges

18	Issue the command to copy the GPLs to the cartridge.	copy-gpl
19	Response to copy command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y copy-gpl Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y COPY-GPL: MASP A - COPY STARTS ON ACTIVE MASP ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y COPY-GPL: MASP A - COPY COMPLETED ON ACTIVE MASP ;
20	Issue the command to backup the target-release database to the cartridge.	chg-db:action=backup:dest=remove
21	Response to backup command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5035.1114
22	Eject the removable cartridge from the MDAL and store it in a safe place.	
23	If upgrading more cartridges, repeat step 15-22.	

Procedure 14: Backing Up Fixed Disk

S T E P #	This procedure backs up the converted target-release database to the fixed disk. This is done to ensure a recent database backup has been performed. Verification of the converted database is also done. Check off (√) each step as it is completed. Boxes have been provided for this purpose under each step number. SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR UPGRADE ASSISTANCE.	
	Issue the command to backup the database to the fixed disks.	chg-db:action=backup
	Response and progress of the back up command are displayed.	tekeTecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5028.1114
	Command Execution Time: Approximately 4 – 20 minutes, longer for large databases.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y BACKUP (FIXED): MASP A - Backup starts on active MASP. tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y BACKUP (FIXED): MASP A - Backup on active MASP to fixed disk complete. tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y BACKUP (FIXED): MASP A - Backup starts on standby MASP. tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5031.1116
\Box	See Recommendation #3 in section 1.7.	Continue with Upgrade Session 2, Procedure 15: Upgrading Spare Fixed Disks

Procedure 15: Upgrading Spare Fixed Disks

S T E P	Check off ($$) each step as it	es how to upgrade your spare TDMs to the target release. t is completed. Boxes have been provided for this purpose under each step number. RE FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR UPGRADE ASSISTANCE.
1	Issue the command to display card status.	rept-stat-card:appl=oam
2	Response to the card status command is displayed. Determine MASP activity. Record the card locations of both sets of GPSMs and TDMs: Act GPSM Active TDM Standby TDM For this sample output, 1113/1114 are active and 1115/1116 are standby.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST 1113 XXX-XXX-XXX GPSM EOAM IS-NR Active 1115 XXX-XXX-XXX GPSM EOAM IS-NR Standby Command Completed. ;
3	Insert target-release cartridge into the MDAL and wait for the cartridge to "spin up."	
4	Place spare TDM in system.	Unseat the card in the standby GPSM slot determined in step 2. Remove the standby TDM card determined in step 2. Insert the spare TDM card. Re-seat the card in the GPSM slot. Note: UAMs are generated during this step. An audible alarm is generated. Wait for the standby GPSM/spare TDM to come up in standby mode. rept-stat-card:appl=eoam
	display GPSM status.	1 ept-3tat-tal 4.app1—e0a
	Response to the card status command is displayed. Verify the GPSM cards are running the same version of the EOAM gpl.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y CARD VERSION TYPE GPL PST SST AST 1113 XXX-XXX-XXX GPSM EOAM IS-NR Active 1115 XXX-XXX-XXX GPSM EOAM IS-NR Standby Command Completed.

Procedure 15: Upgrading Spare Fixed Disks

7	Issue the command to display security log status.	rept-stat-seculog
8	Response to the command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-seculog Command entered at terminal #10.
	If the ENTRIES column displays any value other than 0 for the Standby ROLE, proceed to the next step. Otherwise, go ahead	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y SINCE LAST UPLOAD OLDEST NEWEST LAST LOC ROLE ENTRIES %FULL OFLO FAIL RECORD RECORD UPLOAD 1114 Active 19 1 No No 99-01-01 99-01-01 00-00-00 13:43:37 14:08:12 00:00:00
	to step 16.	1116 Standby 0 0 No No 99-01-01 99-01-01 99-01-01 13:39:39 13:43:10 14:07:59
9	Issue the command to copy the security log from the standby disk.	copy-seculog:slog=stb:dfile=upgXX.spr
10	Response to copy seculog command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Security log on TDM 111X copied to file upg25.spare on TDM 111Y;
	If this command fails, proceed to next step. Otherwise, go to step 16.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 0468.0177 SECULOG 111X Security log exception cleared ;
11	Issue the command to display the FTA directory.	disp-fta-dir
12	Response to display directory command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y File Transfer Area Directory of fixed disk 111Y FILENAME LENGTH LAST MODIFIED LBA YYMMDDs.log 2560256 99-01-03 10:18:44 388769
	If there are any files that need to be saved, they need to be removed via a file transfer. If this is necessary, contact TEKELEC Customer Care Center for further information.	YYMMDDa.log m60_lnp.csv 3 File(s) 21093376 bytes free ;
13	Issue the command to delete ALL files in the transfer area.	dlt-fta:all=yes
14	Response to the delete command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y dlt-fta:all=yes Command entered at terminal #10. ;
15	Repeat Steps 9 – 10 if those steps previously failed.	

Procedure 15: Upgrading Spare Fixed Disks

16	Issue the command to copy to the standby disk.	copy-disk:dloc=XXXX:force=yes:format=yes (Where XXXX is the location of the STANDBY TDM recorded in Step 2)
17	Response to the copy-disk command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Copy-disk (fixed): from active (YYYY) to standby (XXXX) started. Extended processing required, please wait.
	Command Execution Time: Between 35 and 120 minutes	; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Copy-disk (fixed): from active (XXXX) to standby (XXXX) complete. Measurements may be allowed now if desired.
	Note: user terminal port may be automatically logged out.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 0485.0014 CARD 1115 EOAM Card is present;
	Wait for the card reload to complete.	
18	If the disk copy fails, do the following:	 Repeat Steps 16-17. If second attempt fails, contact Tekelec Customer Care Center.

Procedure 16: Upgrading Spare MUX cards

S	This procedure describe	es how to upgrade your spare HMUX cards.
T E Check off (√) each step as it is completed. Boxes have been provided for this purpose under each step number. SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR UPGRADE ASSISTANCE.		t is completed. Boxes have been provided for this purpose under each step number.
		RE FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR <u>UPGRADE</u>
	Spare HMUX cards need to be downloaded with latest flash gpl. Due to changes incorporated in the new flash gpl if an HMUX card running a down level flash version is inserted into the system the card will steam errors to the screen.	
1	Issue the command to display imt bus status.	rept-stat-mux
2	Response to the MUX status command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-mux Command entered at terminal #10. ;
	Record the types of MUX cards present: HMUX: YES/NO	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD TYPE PST SST AST 1109 HMUX IS-NR Active 1110 HMUX IS-NR Active 1209 HMUX IS-NR Active 1210 HMUX IS-NR Active 1210 HMUX IS-NR Active
	HIPR: YES/NO	1310 HIPR IS-NR Active Command Completed. ;
3	Issue the command to display imt bus status.	rept-stat-imt
4	Response to the card status command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-imt Command entered at terminal #10. ;
	Verify that both imt buses are IS-NR.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y IMT PST SST AST A IS-NR Active ALARM STATUS = No Alarms.
	If either bus is not IS-NR Exit from procedure and call TAC	IMT PST SST AST B IS-NR Active ALARM STATUS = No Alarms. Command Completed. ;
5	Issue the command to inhibit IMT bus-A.	inh-imt:bus=a
6	Response to the command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Inhibit IMT Bus A command issued ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y
7	Swap spare MUX cards with those on the IMT A- bus. (i.e. location 1109, 1209)	8687.0098 IMT BUS A IMT inhibited; Note: swap cards of like types (using the output from step 2, a HMUX can be placed in 1109 or 1209, while a HIPR can be placed in 1309.)

Procedure 16: Upgrading Spare MUX cards

8	Issue the command to allow IMT bus-A.	alw-imt:bus=a
9	Response to the command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Allow IMT Bus A command issued ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 8712.0097 IMT BUS A IMT allowed ;
10	Issue the card status command to identify the HMUX cards in the system.	rept-stat-gpl:gpl=XXXX (Where XXXX = is bphmux for HMUX cards or hipr for HIPR cards.)
11	Response to the command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y GPL Auditing ON
	Record the CARD locations for all MUX cards in the system not running the APPROVED version of the GPL.	APPL CARD RUNNING APPROVED TRIAL BPHMUX XX09 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX10 XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX09 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX10 XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX09 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX10 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX10 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX10 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX Command Completed.
12	Enter the command to initialize the FLASH on the next MUX card on the A-bus.	init-flash:loc=xx09:code=appr (Where XX = is a shelf number.)
13	Response to the flash initialization is shown.	<pre>tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y init-flash:loc=XX09:code=appr Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Download for card XX09 Started. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Download for card XX09 Completed. ;</pre>
14	Repeat steps 12-13 for each card recorded in step 11.	
15	Enter the command to initialize the current bus.	init-mux:bus=a
16	Response to the initialization command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5080.0014 CARD XX09 BPHMUX Card is present ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5081.0014 CARD YY09 BPHMUX Card is present ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y * 5082.0004 * GPL SYSTEM BPHMUX Card is running non-activated GPL
17	Issue the command to activate the flash on the first MUX card flashed in step 12.	act-flash: $loc=XX09$ (Where $XX = is a shelf number.$)
18	Response to the activate command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Activation for card 1209 Started. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Activation for card 1209 Completed. :
19 	Repeat steps 17-18 for each MUX card recorded in step 11.	

Procedure 16: Upgrading Spare MUX cards

20	Issue the command to display the MUX card GPL status. Verify that all MUX cards	rept-stat-gpl:gpl==XXXX (Where XXXX = is bphmux for HMUX cards or hipr for HIPR cards.) tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y
	are running the approved GPL.	GPL Auditing ON APPL CARD RUNNING APPROVED TRIAL BPHMUX XX09 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX10 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX10 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX09 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX10 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX10 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX Command Completed. **X*X-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX
22	Repeat steps 10-21 for MUX cards of the other type.	
23	Repeat steps 3-22 until all spare MUX cards have been flashed.	

Procedure 17: Verifying All Databases

S	This procedure verifies	the databases on the fixed disk and the removable cartridge.	
E	Check off $()$ each step	as it is completed. Boxes have been provided for this purpose under each step number.	
P #	Should THIS PROCEDURE	FAIL, Contact TEKELEC Customer Care Center for assistance AND ASK FOR UPGRADE ASSISTANCE	<u>c</u> .
1	Issue the command to display database information.	rept-stat-db:display=all	
2	Response to the command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y DATABASE STATUS: >> OK <<	
	Look in the columns labeled 'C,' 'T', and 'LEVEL' output by this command.	FD BKUP Y YYY YY-MM-DD hh:mm:ss TTTT Y YYY YY-MM-DD hh:mm:ss TTT FD CRNT Y XXX MDAL 1117	 iT
	Verify entries in column 'C' show 'Y', which	RD BKUP Y YYY-MM-DD hh:mm:ss TTTT CARD/APPL LOC C T LEVEL TIME LAST UPDATE EXCEPTION	
	Verify entries in column 'T' show 'N' (except the MDAL), which indicates that the database is not in transition.	SS7ANSI 1101 Y N XXX 06-04-19 12:13:02 - SS7ANSI 1103 Y N XXX 06-04-19 12:13:02 - GLS 1104 Y N XXX 06-04-19 12:13:02 - SS7ANSI 1105 Y N XXX 06-04-19 12:13:02 - SS7ANSI 1106 Y N XXX 06-04-19 12:13:02 - VSCCP 1107 Y N XXX 06-04-19 12:13:02 - VSCCP 1111 Y N XXX 06-04-19 12:13:02 - TDM-CRNT 1114 Y N XXX 06-04-19 12:13:02 - TDM-BKUP 1114 Y - YYY 06-04-18 16:11:18 DIFF LEVEL TDM-CRNT 1116 Y N XXX 06-04-19 12:13:02 - TDM-CRNT 1116 Y N XXX 06-04-19	
	Verify all entries in the database LEVEL column are the same. LEVEL is a value, which	TDM-BKUP 1114 Y - YYY 06-04-18 16:11:18 DIFF LEVEL TDM-CRNT 1116 Y XXX 06-04-19 12:13:02 - TDM-BKUP 1116 Y - YYY 06-04-18 16:11:18 DIFF LEVEL MDAL 1117 Y - YYY 06-04-18 16:11:18 DIFF LEVEL EPAP A (ACTV) C BIRTHDATE LEVEL EXCEPTION	
	varies depending on the system. If the STDBY databases	PDB 03-09-04 15:09:38 418231879 - RTDB Y 03-09-04 15:09:38 418231879 - RTDB-EAGLE 06-02-06 22:13:06 418231879 -	
╚	are not coherent or at the correct level, repeat Procedure 3, step 8.	EPAP B (STDBY) C BIRTHDATE LEVEL EXCEPTION	
	Verify that the MPS	PDB 03-09-04 15:09:38 418231879 - RTDB 03-09-04 15:09:38 418231879 - RTDB-EAGLE 06-02-06 22:13:06 418231879 -	
	databases are coherent.	EAGLE RTDB REPORT CARD/APPL LOC C BIRTHDATE LEVEL EXCEPTION IN-SRVC	_
		VSCCP 1107 Y 06-02-06 22:13:06 418231879 - 0d 4h 33 vSCCP 1111 Y 06-02-06 22:13:06 418231879 - 0d 4h 33 .	
3	When the command completes, remove the system cartridge from the MDAL.	The cartridge should be stored in a safe location.	

Procedure 18: Session 2 Completion

S	This procedure resumes measurement collection.	
E P	Check off $()$ each st	ep as it is completed. Boxes have been provided for this purpose under each step number.
#	SHOULD THIS PROCED	DURE FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR <u>UPGRADE ASSISTANCE</u> .
	If the measurements platform is enabled then go to step 3. Else, if Procedure 13 Steps 3 & 4 were executed, issue the command to turn the measurements collection on.	chg-meas:collect=on
	Response to change measurement command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y chg-meas:collect=on Command entered at terminal #10. ;
		<pre>tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CHG-MEAS: MASP A - COMPLTD :</pre>
3	Issue status command for troubles.	rept-stat-trbl
4	Response to command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y SEQN UAM AL DEVICE ELEMENT TROUBLE TEXT 0329.0048 * TERMINAL 15 Terminal failed 0330.0048 * TERMINAL 16 Terminal failed
	If UAM 0002 is present where <i>XXXX</i> is a bootprom GPL (i.e. BPHCAP or BPDCM), record it below:	0006.0002 * GPL SYSTEM XXXX Card is not running approved GPL 0331.0176 * SECULOG 1116 Stdby security log-upload required 0332.0308 *C SYSTEM Node isolated due to SLK failures Command Completed. ;
	If any GPL is recorded above report the GPL(s) to Tekelec Customer Care Center.	

→ This concludes SESSION TWO ←

6. RECOVERY PROCEDURES

Upgrade procedure recovery issues should be directed to the Tekelec Customer Care Center. Before executing any of these procedures, contact the Tekelec Customer Care Center at 1-888-FOR-TKLC (1-888-367-8552); or 1-919-460-2150 (international). In the event that other platforms are being upgraded in parallel, a determination whether recovery action is required on those platforms is required. Persons performing the upgrade should be familiar with these upgrade documents.

6.1 Backout Setup Procedures

Execute this section only if there is a problem and it is desired to revert back to the pre-upgrade version of the software.

Warning

Do not attempt to perform these backout procedures without first contacting the Tekelec Customer Care Center at 1-888-FOR-TKLC (1-888-367-8552); or 1-919-460-2150 (international)

6.2 Recovery Procedure A

S T E P #	Perform this Recovery Procedure if upgrading with removable cartridge and a failure occurs in Procedure 6 through Procedure 8, Step 1. This procedure ensures that the source EOAM GPL is loaded from the fixed disk by removing the target-release media from the MDAL and rebooting the GPSMs. Note: This procedure also needs to be executed in order to copy the IMT, BPDCM, and BPDCM2 GPLs from the source after performing procedures 20, 22, or 23 when upgrading with the fixed workspace. Check off (1) each step as it is completed. Boxes have been provided for this purpose under each step number. SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR UPGRADE ASSISTANCE. When directed to by Tekelec Customer Care Center, execute this procedure:	
		een Procedure 6 and Procedure 8, Step 1, Table 16, Item B. on of Procedure 21, 22, and 23 (but not 24).
	If MSD software delivery method used and target release media not yet removed, remove it now. Insert source release media.	Wait for the cartridge to spin up
3	Issue the command to retrieve IMT application data.	rtrv-gpl:gpl=imt
4	Response to rtrv-gpl command is displayed. Record the "REMOVE TRIAL" version:	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y GPL Auditing ON GPL CARD RELEASE APPROVED TRIAL REMOVE TRIAL IMT 1114 126-010-000 126-010-000 126-010-000 IMT 1116 126-010-000 126-010-000 126-010-000 xxx-xxx-xxx
5	Issue the command to change the gpl.	chg-gpl:gpl=imt:ver=xxx-xxx-xxx (Where xxx-xxx-xxx is the GPL version recorded in the previous step)

6	Response to chg-gpl command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y chg-gpl:gpl=imt:ver=xxx-xxx Command entered at terminal #10. ;
		tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y IMT upload to 1116 completed IMT upload to 1114 completed System Release ID table uploaded to 1116 completed System Release ID table uploaded to 1114 completed ;
7	Issue the activate GPL command.	<pre>act-gpl:gpl=imt:ver=xxx-xxx-xxx (Where xxx-xxx-xxx is the GPL version used in step 5.)</pre>
8	Response to act-gpl command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y act-gpl:gpl=imt:ver=xxx-xxx-xxx Command entered at terminal #10. ;
		<pre>tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y IMT activate on 1116 completed IMT activate on 1114 completed ;</pre>
9	Issue the command to change the gpl.	chg-gpl:gpl=imt:ver=xxx-xxx-xxx (Where xxx-xxx-xxx is the GPL version used in step 5.)
10	Response to chg-gpl command is displayed.	<pre>tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y chg-gpl:gpl=imt:ver=xxx-xxx-xxx Command entered at terminal #10. ;</pre>
		tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y IMT upload to 1116 completed IMT upload to 1114 completed System Release ID table upload to 1116 completed System Release ID table upload to 1114 completed
11	Issue the command to retrieve BPDCM application data.	rtrv-gpl:gpl=bpdcm
12	Response to rtrv-gpl command is displayed. Record the "REMOVE TRIAL" version:	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rtrv-gpl:gpl=bpdcm Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y
		GPL Auditing ON GPL CARD RELEASE APPROVED TRIAL BPDCM 1114 xxx-xxx-xxx 126-010-000 ALM 126-010-000 BPDCM 1116 xxx-xxx-xxx 126-010-000 ALM 126-010-000 xxx-xxx-xxx
13	Issue the command to change the gpl.	chg-gpl:gpl=bpdcm:ver=xxx-xxx-xxx (where xxx-xxx-xxx is the GPL version recorded in the previous step)
14	Response to chg-gpl command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y chg-gpl:gpl=bpdcm:ver=xxx-xxx-xxx Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y BPDCM upload to 1116 completed BPDCM upload to 1114 completed System Release ID table upload to 1116 completed System Release ID table upload to 1114 completed ;
15	Issue the command to activate the gpl Note: The BPDCM version shown here is only for example purposes.	act-gpl:gpl=bpdcm:ver=xxx-xxx-xxx (where xxx-xxx-xxx is the GPL version used in step 13.)

16	Response to act-gpl	tekelecstp_YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y
	command is displayed.	act-gpl:gpl=bpdcm:ver=xxx-xxx
		Command entered at terminal #10.
		;
		tokalassta VV MM DD bhimmiss FST DDD VV V V VV V
		tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y BPDCM activate on 1116 completed
		BPDCM activate on 1116 completed BPDCM activate on 1114 completed
		. BPDCM activate on 1114 completed
	·	<u> </u>
17	Issue the command to	chg-gpl:gpl=bpdcm:ver=xxx-xxx-xxx
	change the gpl	(Where xxx-xxx is the GPL version used in step 13.)
		, , ,
		tale 1 and 1
18	Response to chg-gpl	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y
	command is displayed.	<pre>chg-gpl:gpl=bpdcm:ver=xxx-xxx Command entered at terminal #10.</pre>
		;
		tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y
		BPDCM upload to 1116 completed
		BPDCM upload to 1110 completed
		System Release ID table upload to 1116 completed
		System Release ID table upload to 1114 completed
		:
19	If source release is 38.0,	rtrv-gpl:gpl=bpdcm2
1)	issue the command to	rtrv-gp1:gp1=bpacm2
	retrieve BPDCM2	
	application data.18	
20	Response to rtrv-gpl	
	command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y
Ш		GPL Auditing ON
	Record the "REMOVE	CDI CARD DELEACE ADDROVED TOTAL DEMOVE TOTAL
	TRIAL" version:	GPL CARD RELEASE APPROVED TRIAL REMOVE TRIAL BPDCM2 1114 XXX-XXX-XXX VVV-VVV-VVV ALM VVV-VVV-VVV
		1111
		BPDCM2 1116 XXX-XXX-XXX yyy-yyy-yyy ALM yyy-yyy-yyy XXX-XXX-XXX
21	Issue the command to	cha anliani hadami wan yay yay
21	change the gpl.	chg-gpl:gpl=bpdcm2:ver=xxx-xxx
	change the gpi.	(Where xxx-xxx-xxx is the GPL version recorded in the previous step)
22	Response to chg-gpl	
	command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y
ш	command is displayed.	BPDCM2 upload to 1116 completed
		BPDCM2 upload to 1114 completed
		System Release ID table upload to 1116 completed
		System Release ID table upload to 1114 completed
		;
23	If source release is 40.1.	rtrv-gpl:gpl=blmcap
	issue the command to	
	retrieve BLMCAP	
	application data. 19	
24	Response to rtrv-gpl	takalaceth VV-MM-DD bhimmics EST DDD VV V V VV V
	command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y GPL Auditing ON
		GL Additing ON
	Record the "REMOVE	GPL CARD RELEASE APPROVED TRIAL REMOVE TRIAL
	TRIAL" version:	BLMCAP 1114 xxx-xxx yyy-yyy ALM yyy-yyyy-yyy
		BLMCAP 1116 XXX-XXX yyy-yyy-yyy ALM yyy-yyy-yyy XXX-XXX-XXX
		:
25	Issue the command to	cha anl anl-hlman iven-yvy-yvy-yvy
23		chg-gpl:gpl=blmcap:ver=xxx-xxx
	change the gpl.	(Where xxx-xxx is the GPL version recorded in the previous step)

¹⁸ If unsure whether to execute this step, issue the command and if MTT "E2238 Cmd Rej: The GPL type entered is not currently supported" is displayed, skip to Step 23.

¹⁹ If unsure whether to execute this step, issue the command and if MTT "E2238 Cmd Rej: The GPL type entered is not

currently supported" is displayed, skip to Step 27.

26	Response to chg-gpl command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y BLMCAP upload to 1116 completed BLMCAP upload to 1114 completed System Release ID table upload to 1116 completed System Release ID table upload to 1114 completed ;
27	Issue the report card status command.	rept-stat-card:appl=oam
28	Response to the card status command is displayed. Record which GPSM is Active and Standby. Record the card locations of the GPSMs: Act GPSM Stby GPSM20 Issue the command to inhibit	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST 1113 XXX-XXX-XXX GPSM EOAM IS-NR Active 1115 XXX-XXX-XXX GPSM EOAM IS-NR Standby Command Completed. ;
29	standby GPSM.	inh-card: loc=XXXX Where XXXX is the location for the Standby GPSM.
30	Response to the command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Card has been inhibited. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. :
31	Issue the command to initialize the flash memory.	init-flash:code=appr:loc=xxxx Where XXXX is the location for the Standby GPSM.
32	Response to the init flash command is displayed. Wait for the downloading to	NOTE: This command causes the card to boot. tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Download for card XXXX Started. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y
22	complete.	FLASH Memory Download for card XXXX Completed.
33	Issue the command to activate the flash memory.	act-flash:loc=XXXX Where XXXX is the location for the Standby GPSM.
34	Response to the command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Activation for card XXXX Started. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Activation for card XXXX Completed. ;
35	Unplug and re-insert the standby MASP.	Unseat the standby GPSM recorded in step 28. Unseat the card in the standby TDM slot. Re-seat the card in the TDM slot. Re-seat the standby GPSM. Note: UAMs are generated during this step. An audible alarm is generated,

The Standby GPSM may report IS-ANR (and the Standby TDM may report 00S-MT|Isolated.) If so, check LEDs on the card. If LEDs are green, it is OK to proceed. This condition will clear after step 37.

36	Issue the command to allow card.	alw-card:loc=XXXX
	caru.	Where XXXX is the location for the Standby GPSM.
37	Response to the command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Card has been allowed. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. ;
38	Issue the report card status command.	rept-stat-card:appl=oam
39	Response to the card status command is displayed. ²¹	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST 1113 XXX-XXX-XXX GPSM EOAM IS-NR Active 1115 XXX-XXX-XXX GPSM EOAM IS-NR Standby Command Completed. ;
40	Repeat step 38 until the standby location is IS-NR	
41	Force a switchover by issuing initialize-card command.	init-card:loc=YYYY Where YYYY is the active GPSM location recorded in step 28.
42	Repeat steps 23 through 40 for the new standby – card location YYYY as reported in step 20. Then proceed with step 43.	
43	Issue the command to initialize both GPSM cards.	init-card:appl=oam
44	Response to initialize command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y init-card:appl=oam Command entered at terminal #10. ;
	Ensure that the release shown in the banner is the source release after the MASP becomes active again.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y * 0261.0013 * CARD 111X EOAM Card is isolated from the system
45	If this completes the recovery, verify the system with the EAGLE health check [1]. Otherwise continue with Recovery Procedure C ²²	

²¹ The Standby GPSM may report IS-ANR. If so, check LEDs on the card. If LEDs are green, it is OK to proceed. This condition will clear after step 37.

²² Command REPT-STAT-GPL:DISPLAY=ALL can be used to verify this step.

6.3 Recovery Procedure B

S T E	Perform the recovery procedure if directed to do so by TEKELEC CUSTOMER CARE CENTER when failure occurs in Procedure 8, Step 1, Item C through Procedure 11. This procedure is a full fallback to the source-release on the spare TDM.		
P #	Check off $(\sqrt{)}$ each step as it is completed. Boxes have been provided for this purpose under each step number.		
	SHOULD THIS PROCEDUR	E FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR <u>UPGRADE ASSISTANCE</u> .	
		kelec Customer Care Center, execute this procedure: een Procedure 9, Step 1, Table 16, Item C and Procedure 11 [end of session 1].	
	If upgrade using the fixed disk method, go to Procedure 21.	Only perform this procedure if directed by Tekelec Customer Care Center.	
2	Issue the report card status command.	rept-stat-card:appl=oam	
3	Response to the card status command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST 1113 XXX-XXX-XXX GPSM EOAM IS-NR Active	
	Determine MASP activity. Record which GPSM is Active and Standby.	1115 XXX-XXX GPSM EOAM IS-NR Standby;	
	Record the card locations of both sets of GPSMs and TDMs:		
	Act GPSM		
	Active TDM		
	Stby GPSM		
	Standby TDM		
	For this sample output, 1113/1114 are active and 1115/1116 are standby.		
4	Remove the target-release media from the system if MSD.		
5	Place spare TDM in system.	Unseat the card in the standby GPSM slot determined in step 2.	
╵		Remove the standby TDM card determined in step 2.	
		Insert the spare TDM card.	
		Re-seat the card in the GPSM slot.	
		Note: UAMs are generated during this step. An audible alarm is generated. Wait for the standby GPSM/spare TDM to come up in standby mode.	
6	Insert the source-release media into the system.	Wait for the cartridge to spin up	
7	After the standby GPSM is available, issue the command to initialize the active GPSM.	init-card:loc=XXXX (Where XXXX is the location of the ACTIVE GPSM slot)	

9	Response to command is displayed. Issue the command to log in to the system. Response to login command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y init-card:loc=XXXX Command entered at terminal #10. ; tekelecstp 99-01-02 08:28:34 EST Rel XX.x.x-XX.x.x * 0261.0013 * CARD XXXX EOAM Card is isolated from the system ASSY SN: xxxxxxxxx ; 5038.0014 CARD XXXX EOAM Card is present ASSY SN: xxxxxxxxx ; login:uid=XXXXXX (Where XXXXXXX is a valid login ID) tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y User logged in on terminal X
11	Make spare TDM active OAM.	Unseat the card in the standby GPSM slot (upgraded TDM) Init-card:loc=XXXX (Where XXXX is the location of the ACTIVE GPSM slot) Wait for the active OAM to return to service and enter simplex mode.
13	Issue the retrieve GPL command to verify source-release GPLs. Response to the retrieve command is displayed. Verify that the GPL versions in REMOVE TRIAL column and RELEASE column match those in Section 1.3 for "Source- Release GPLs." Example here has location 1114 as the Active GPSM slot.	Ttrv-gpl
14	Issue the command to retrieve measurement setup.	rtrv-meas-sched

15	Response to retrieve command is displayed. Record if collection is on or off: ——————————————————————————————————	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y COLLECT = off SYSTOT-STP = (off) SYSTOT-TT = (off) SYSTOT-THAN = (off) COMP-LNKSET = (off) COMP-LINK = (off) MTCD-STP = (on) MTCD-LINK = (on) MTCD-STPLAN = (on) MTCD-STPLAN = (on) MTCD-LNKSET = (on) TCD-LNKSET = (on) TCD-LNKSET = (on) TCD-LNKSET = (on) TCD-LNKSET = (on)
	off measurement collection. 23	
17 —	Response to the change command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y chg-meas:collect=off Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y CHG-MEAS: MASP A - COMPLTD ;
18	Re-seat the card in the standby GPSM slot.	Allow the card time to initialize.
19	Issue the command to display security log status.	rept-stat-seculog
	Response to the command is displayed. If the ENTRIES column displays any value other than 0 for the Standby ROLE, proceed to the next step. Otherwise, go to step 28	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y rept-stat-seculog Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y SINCE LAST UPLOAD OLDEST NEWEST LAST LOC ROLE ENTRIES %FULL OFLO FAIL RECORD RECORD UPLOAD 1114 Active 19 1 No No 99-01-01 99-01-01 00-00-00 13:43:37 14:08:12 00:00:00 1116 Standby 0 0 No No 99-01-01 99-01-01 99-01-01 13:39:39 13:43:10 14:07:59
21	Issue the command to copy the security log from the standby disk.	copy-seculog:slog=stb:dfile=upg.procC
22	Response to the copy security log command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Security log on TDM 111X copied to file upg28.procC on TDM 111Y ;
	If this command fails, proceed to next step. Otherwise, go to Step 28.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 0468.0177 SECULOG 111X Security log exception cleared ;
23	Issue the command to display the FTA directory.	disp-fta-dir
	Response to the command is displayed. If there are any files that need to be saved, they need to be removed via a file transfer. If this is necessary, contact Tekelec Customer Care Center for further information.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y File Transfer Area Directory of fixed disk 1114 FILENAME YYMMDDS.log 2560256 99-01-03 10:18:44 388769 YYMMDDa.log 2560256 99-01-03 10:19:20 393770 0 99-01-03 13:10:38 398771 3 File(s) 21093376 bytes free ;

²³ If executed, this step causes the database level to increment.

25	Y 4h	17. 6. 77
25	Issue the command to delete ALL files in the transfer area.	dlt-fta:all=yes
26	Response to the delete command is displayed.	<pre>tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y dlt-fta:all=yes:loc=XXXX Command entered at terminal #10. ;</pre>
27	Repeat Steps 19-20	
28	Issue the command to copy to the standby disk.	copy-disk:dloc=XXXX:force=yes:format=yes (Where XXXX is the location of the STANDBY TDM recorded in Step 2)
29	Response to the copy-disk command is displayed. Note: This command may require between 35 and 120 minutes to produce a response. As a result, the user terminal port may automatically log out. Wait for the card reload to	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Copy-disk (fixed): from active (YYYY) to standby (XXXX) started. Extended processing required, please wait. ; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Copy-disk (fixed): from active (XXXX) to standby (XXXX) complete. Measurements may be allowed now if desired. ; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 0485.0014 CARD 1115 EOAM Card is present ;
	complete. If this is the second time performing this step, go to Step 34. Otherwise continue.	
30	Issue the command to display card status.	rept-stat-card
31	Response to the card status command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y rept-stat-card Command entered at terminal #10. ;
	Verify that the GPL versions that are displayed in the "VERSION" column are correct; see Section 1.3.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL EST SST AST 1101 XXX-XXX-XXX TSM SCCP IS-NR Active 1102 XXX-XXX-XXX TSM SCCP IS-NR Active 1103 XXX-XXX-XXX TSM GLS IS-NR Active 1104 XXX-XXX-XXX TSM GLS IS-NR Active 1105 XXX-XXX-XXX LIMDSO SS7GX25 IS-NR Active
	Note: the network card applications that are not running the source-release GPL versions need to be initialized using Recovery Procedure C.	1111 XXX-XXX-XXX ACMENET STPLAN IS-NR Active 1113 XXX-XXX-XXX GPSM EOAM IS-NR Active 1114 TDM IS-NR Active 1115 XXX-XXX-XXX GPSM EOAM IS-NR Standby 1116
	Record the Standby GPSM and TDM: GPSM TDM:	1204 XXX-XXX LIMDSO SS7ANSI IS-NR ACTIVE 1211 XXX-XXX-XXX LIMDSO CCS7ITU IS-NR ACTIVE 1218 XXX-XXX-XXX TSM GLS IS-NR ACTIVE Command Completed.
32	Replace the standby TDM with the TDM removed in Step 5.	Unseat the card in the standby GPSM slot. Remove the standby TDM card.
		Insert the spare TDM card.
		Re-seat the card in the GPSM slot. Note: UAMs are generated during this step. An audible alarm is generated. Wait for the standby GPSM/spare TDM to come up in standby mode.

33	Repeat steps 18 - 29.	After completing Step 29 the second time, continue to Step 34.
34	If steps 16 & 17 were executed, issue the command to turn the measurements collection on.	chg-meas:collect=on
35	Response to change measurement command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y chg-meas:collect=on Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y CHG-MEAS: MASP A - COMPLTD ;
36	Execute Procedure 19.	
37	If this completes the recovery, verify the system with the EAGLE health check [1]. Otherwise continue with Recovery Procedure C	If failure occurred prior to entering Phase 3, recovery is complete.

Procedure 21: Full Fallback using Fixed Disk as OAM conversion workspace – Case 1

S T E P #	Perform the recovery procedure if directed to do so by TEKELEC CUSTOMER CARE CENTER when failure occurs in Procedure 6 through Procedure 8, Step 1. Note, this procedure is done in lieu of Procedure 19 for the case where a removable disk was NOT used as the workspace for the OAM conversion. Check off (1) each step as it is completed. Boxes have been provided for this purpose under each step number. SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR UPGRADE ASSISTANCE. When directed to by Tekelec Customer Care Center, execute this procedure: If failure occurred between Procedure 6 and Procedure 8, Step 1, Table 16, Item E.	
	Only perform this procedure if directed by Tekelec Customer Care Center.	
2	If present, remove the target- release media from the system.	
3	Issue the command to initialize both GPSM cards.	init-card:appl=oam
4	Response to initialize command is displayed. Ensure that the release shown in the banner is the source release after the MASP becomes active again.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y init-card:appl=oam Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 0261.0013 * CARD 111X EOAM Card is isolated from the system ASSY SN: xxxxxxxxx; ; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 5001.0009 CARD 111X EOAM MASP became active ; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 5038.0014 CARD XXXX EOAM Card is present ASSY SN: xxxxxxxxxx; ;
5	Execute Procedure 19.	Proceed to Procedure 19 to complete the recovery.

Procedure 22: Full Fallback using Fixed Disk as OAM conversion workspace – Case 2

S T E P #	Perform the recovery procedure if directed to do so by TEKELEC CUSTOMER CARE CENTER when failure occurs in Procedure 8, Step 1, Item F through Item I. This procedure makes the partition with the source GPLs active on the Standby TDM. Check off (1) each step as it is completed. Boxes have been provided for this purpose under each step number. SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR UPGRADE ASSISTANCE. When directed to by Tekelec Customer Care Center, execute this procedure: If failure occurred between Procedure 8, Step 1, Table 16, Item F and Procedure 8, Step 1, Table 16, Item I.	
1	Eject target release media from system if MSD software delivery method used.	
2	Issue the command to display database status during upgrades.	act-upgrade:action=dbstatus
3	Response to the command is displayed. Look at the status field and determine the loc of the TDM marked "UPG 2".	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Upg Phase X DATABASE STATUS: >> 0K << TDM 1114 (ACTV)
5	If the TDM marked in "UPG 2" is the active MASP issue the command to initialize the active location. Else go to step 8. Response to initialize command is displayed.	<pre>init-card:loc=XXXX (Where XXXX is location of active GPSM) tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y * 0261.0013 * CARD XXXX EOAM</pre>
6	Issue the command to log back in to the system.	login:uid=XXXXXX (Where XXXXXXX is a valid login ID)

Procedure 22: Full Fallback using Fixed Disk as OAM conversion workspace – Case 2

7	Response to login command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Upg Phase 0 User logged in on terminal 10.
	Ignore any login failure message.	? Login failures since last successful LOGIN Last successful LOGIN was on port ? on ??-??-?? @ ??:???
8	Issue the command to display active/inactive disk partitions.	send-msg:ds=1:da=h'5d:f=h'47:loc=YYYY (Where YYYY is location of active GPSM)
9	Response to command. Note: Look for the command response on a terminal with all output display groups set to yes (printer/ksr terminal port specified in, Procedure 1, Step 6)	<pre>tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upgrade Phase x System Buffer sent has following attributes : Msg Length = H'0010 Dest Card = H'00fb Orig Subsys = H'0001</pre>
10	Issue the command to swap active/inactive disk partitions.	<pre>inactive_partitions[] = 0 1 ; send-msg:ds=1:da=h'5d:f=h'48:loc=YYYY (Where YYYY is location of active GPSM)</pre>
11	Response to command. Note: Look for the command response on a terminal with all output display groups set to yes (printer/ksr terminal port specified in Procedure 1, Step 6)	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y System Buffer sent has following attributes: Msg Length = H'0010 Dest Card = H'00fb Orig Subsys = H'0001 Orig Appl ID = H'0030 Func ID = H'0048 Violation Ind = H'0000 User Message sent to location YYYY. The last a section of the process o
	Compare the values for the active_partitions and inactive_partitions with those in step 9 . For the STANDBY OAM, the values for the active_partitions shown should equal those for the inactive_partitions shown in step 9 , and vice-versa. For the ACTIVE OAM, both sets of values should be identical.	<pre>tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Partition switch PASSED ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y ACTIVE OAM Partition Grp Info: num_group = 2 num_partitions_per_group = 2 active_partitions[] = 0</pre>

Procedure 22: Full Fallback using Fixed Disk as OAM conversion workspace – Case 2

12	Issue the command to init standby location.	<pre>init-card:loc=XXXX (Where XXXX is location of standby GPSM)</pre>
13	Response to initialize command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y * 0261.0013 * CARD XXXX EOAM
14	Execute Procedure 19.	Proceed to Procedure 19 to complete the recovery.

Procedure 23: Full Fallback using Fixed Disk as OAM conversion workspace – Case 3

S T E P #	Perform the recovery procedure if directed to do so by TEKELEC CUSTOMER CARE CENTER when failure occurs at Procedure 8, Step 1 or after. This procedure makes the partition with the source GPLs active on both TDMs. Check off ($$) each step as it is completed. Boxes have been provided for this purpose under each step number. SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR UPGRADE ASSISTANCE.		
	When directed to by Tekelec Customer Care Center, execute this procedure: If failure occurred between Procedure 8, Step 1, Table 16, Item J and Procedure 11 [End of Session 1].		
	*** ATTENTION *** If this is an incremental upgrade (i.e. the SOURCE release equals the TARGET release, go to Procedure 4, Step 1. Is a level-1 cartridge available for the SOURCE release? YES NO If yes, go to Procedure 4. If no, contact Tekelec. ************************************	Complete all steps from Procedure 4 to the end of Session 1 (Procedure 11). Note: When executing Procedure 4 through Procedure 11 in the recovery scenario, the terminology of source and target are reversed. Target release becomes the software load that is being recovered to (35.0.0) and the source release becomes the software load that was upgraded to (35.0.1).	
2	Remove the target-release media from the system if MSD software delivery method used.		
3	Issue the command to display active/inactive disk partitions.	send-msg:ds=1:da=h'5d:f=h'47:loc=XXXX (Where XXXX is location of active GPSM)	

Procedure 23: Full Fallback using Fixed Disk as OAM conversion workspace – Case 3

4	Response to command. Note: Look for the command response on a terminal with all output display groups set to yes (printer\ksr terminal port specified in Procedure 1, Step 6)	<pre>tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upgrade Phase x System Buffer sent has following attributes : Msg Length = H'0010 Dest Card = H'00fb Orig Subsys = H'0001</pre>
5	Issue the command to swap active/inactive disk partitions.	num_partitions_per_group = 2 active_partitions[] = 2
6	Response to command. Note: Look for the command response on a terminal with all output display groups set to yes (printer\ksr terminal port specified in Procedure 1, Step 6)	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y System Buffer sent has following attributes: Msg Length = H'0010 Dest Card = H'00fb Orig Subsys = H'0001 Dest Subsys = H'0001 Orig Appl ID = H'0030 Func ID = H'0048 Violation Ind = H'0000 User Message sent to location XXXX.
	Compare the values for the active_partitions and inactive_partitions with those in step 3 . For the STANDBY OAM, the values for the active_partitions shown should equal those for the inactive_partitions shown in step 3 , and vice-versa. For the ACTIVE OAM, both sets	<pre>tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Partition switch PASSED ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y ACTIVE OAM Partition Grp Info: num_group = 2 num_partitions_per_group = 2 active_partitions[] = 2</pre>
7	of values should be identical. Issue the command to init standby location.	<pre>num_partitions_per_group = 2 active_partitions[] = 0</pre>
8	Response to initialize command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y init-card:loc=YYYY Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y * 0261.0013 * CARD YYYY EOAM Card is isolated from the system ASSY SN: xxxxxxxxx ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5038.0014 CARD YYYY EOAM Card is present ASSY SN: xxxxxxxxx

Procedure 23: Full Fallback using Fixed Disk as OAM conversion workspace – Case 3

9	Issue the command to init	init-card:loc= <i>XXXX</i>
	active location.	(Where XXXX is location of active GPSM)
		(1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.
10	Response to initialize command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y * 0261.0013 * CARD XXXX EOAM Card is isolated from the system
		tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5038.0014
11	Issue the command to display active/inactive disk partitions.	send-msg:ds=1:da=h'5d:f=h'47:loc= <i>YYYY</i> (Where <i>YYYY</i> is location of active GPSM)
12	Response to command. Note: Look for the command response on a terminal with all output display groups set to yes (printer\ksr terminal port specified in Procedure 1, Step 6)	Command Accepted - Processing tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upgrade Phase x System Buffer sent has following attributes: Msg Length = H'0010 Dest Card = H'00fb Orig Subsys = H'0001 Orig Appl ID = H'0030 Func ID = H'0047 Violation Ind = H'0000 User Message sent to location YYYY.
		<pre>tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upgrade Phase x ACTIVE OAM Partition Grp Info: num_group = 2 num_partitions_per_group = 2 active_partitions[] = 0</pre>
		;
13	Issue the command to swap active/inactive disk partitions.	send-msg:ds=1:da=h'5d:f=h'48:loc= <i>YYYY</i> (Where <i>YYYY</i> is location of active GPSM)
14	Response to command. Note: Look for the command response on a terminal with all output display groups set to yes (printer\ksr terminal port specified in Procedure 1, Step 6)	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y System Buffer sent has following attributes: Msg Length = H'0010 Dest Card = H'00fb Orig Subsys = H'0001 Orig Appl ID = H'0030 Func ID = H'0048 Violation Ind = H'0000 User Message sent to location YYYY. The standard Market Standard M
	Compare the values for the active_partitions and inactive_partitions with those in step 12 . For the STANDBY OAM, the values for the active_partitions shown should equal those for the inactive_partitions shown in step 12 , and vice-versa. For the ACTIVE OAM, both sets of values should be identical.	<pre>tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Partition switch PASSED ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y ACTIVE OAM Partition Grp Info: num_group = 2 num_partitions_per_group = 2 active_partitions[] = 0</pre>
15	Issue the command to initialize the MASPs.	init-card:appl=oam

Procedure 23: Full Fallback using Fixed Disk as OAM conversion workspace – Case 3

16	Response to initialize command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y init-card:appl=oam Command entered at terminal #10.
17	Execute Procedure 19.	Proceed to Procedure 19 to complete the recovery.

6.4 Recovery Procedure C

Procedure 24: Fall Back Procedure for Network Cards

S T E P	This procedure captures the card and link status data required when performing a manual fallback of the network cards back to the source-release GPLs.	
1	Issue the command to report card status.	rept-stat-card
	Response to the card status command is displayed. Record all network card applications present for future reference within the procedure.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL EST SST AST 1101 XXX-XXX-XXX TSM SCCP IS-NR Active 1103 XXX-XXX-XXX TSM GLS IS-NR Fault 1105 XXX-XXX-XXX LIMDSO S57GX25 IS-NR Active 1109 XXX-XXX-XXX HMUX BPHMUX IS-NR Active 1110 XXX-XXX-XXX HMUX BPHMUX IS-NR Active 1111 XXX-XXX-XXX GPSM FOAM IS-NR Active 1113 XXX-XXX-XXX GPSM FOAM IS-NR Active 1114 TDM IS-NR Active 1115 XXX-XXX-XXX GPSM FOAM IS-NR Active 1116 TDM IS-NR Active 1201 XXX-XXX-XXX LIMDSO S57ANSI IS-NR Active 1202 XXX-XXX-XXX LIMDSO S57ANSI IS-NR Active 1209 XXX-XXX-XXX HMUX BPHMUX IS-NR Active 1210 XXX-XXX-XXX LIMDSO CC57ITU IS-NR Active 1211 XXX-XXX-XXX IMDSO CC57ITU IS-NR Active 1218 XXX-XXX-XXX TSM GLS IS-NR Active 1211 XXX-XXX-XXX TSM GLS IS-NR Active
3	Issue the card status command.	rept-stat-card:appl=mcp
4	Response to the card status command is displayed. If any MCPM cards are displayed, continue to next step. Otherwise, go to Step 8.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE GPL PST SST AST 1108 128-020-051 EDSM MCP IS-NR Active 5313 128-020-051 EDSM MCP IS-NR Active Command Completed. ;
6	Issue the send message command. Repeat for each MCPM card. Response to the send message command is displayed.	send-msg:ds=8:da=h'17:f=22:loc=XXXX (Where XXXX is location of the MCPM cards display in previous step.) NOTE: This command causes the MCP card to boot with an OBIT indicating a "USER INITIATED COLD RESTART". All Measurements data not sent to an FTP server is lost. Waiting for the next scheduled Measurement FTP transfer and use of the rept-ftp-meas command to save desired measurements can minimize these losses before proceeding with this step. tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.X.X-YY.y.y System Buffer sent has following attributes: Msg Length = H'0010 Dest Card = H'0017 Orig Subsys = H'0001 Dest Subsys = H'0001 Orig Appl ID = H'004d Dest Appl ID = H'001d Func ID = H'0016 Bus/Ret/Sut = H'0002 Violation Ind = H'0000 User Message sent to location XXXX. Command Completed.

Procedure 24: Fall Back Procedure for Network Cards

7	Issue the upgrade activation command.	act-upgrade:action=convertstp:thres=XX (Where XX is was the value used in procedure 8 step 1.)
8	Response to the upgrade command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase 3 Hardware Validation Test Started [ASM Obsolescence Test for all applications.] [DSM Obsolescence Test for MCP application.]
	Completion notice of successful upgrade. If upgrade does not complete successfully, see recommendation # 7 in section 1.7.	Hardware Validation Test Completed Successfully. tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase 3 Starting network conversion tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase 3 Upgrading MUX card 1109 Output continues until the following is displayed: tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase 3 Command Complete : Upgrade action completed successfully ;
9	Go to Procedure 8, Step 7.	Complete all steps from Procedure 8, Step 7 to the end of Session 1 (Procedure 11 Step 5).

Procedure 25: Restoring Prom-Based Service Cards

S T E P #	This procedure updates	s Service Cards that are prom-based. This group includes GLS and SCCP cards. s each card with the source release GPLs. are to be repeated for EACH service card group in the system.
1	Issue the command to display the GPL status.	rept-stat-gpl:gpl=YYYY (Where YYYY is one of the service card types listed above.)
	Response to the command is displayed. Record the CARD locations for all cards that have alarms:	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-gpl:gpl=YYYY Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y GPL Auditing ON APPL CARD RUNNING APPROVED TRIAL YYYYY 1101 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX YYYYY 1103 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX Command Completed. ;
3	Issue the command to initialize the service cards.	init-card:appl=YYYY:serial=yes (Where YYYY is one of the service card types listed above.)
4	Command response.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y initializing 1 of 3 YYYY cards [1201] tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y ** 0092.0013 ** CARD 1201 YYYY

Procedure 25: Restoring Prom-Based Service Cards

5	Repeat steps 1-4 for each of the application types in this group.		
6	Issue the command to display card status.	rept-stat-card	
	Response to the card status command is displayed. Verify all Prom-Based service cards are in IS-NR state and running the Source-Release service GPLs; see Section 1.3.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL EST SST 1101 XXX-XXX-XXX TSM SCCP IS-NR Activ 1102 XXX-XXX-XXX TSM SCCP IS-NR Activ 1103 XXX-XXX-XXX TSM GLS IS-NR Activ 1104 XXX-XXX-XXX TSM EBDABLM IS-NR Activ 1105 XXX-XXX-XXX LIMDSO SS7GX25 IS-NR Activ 1111 XXX-XXX-XXX ACMENET STPLAN IS-NR Activ 1111 XXX-XXX-XXX GPSM EOAM IS-NR Activ 1114 TDM IS-NR Activ 1115 XXX-XXX-XXX GPSM EOAM IS-NR Activ 1116 TDM IS-NR Activ 1117	e e e e e e e e e e e
		Command Completed.	

Procedure 26: Restoring Flash-Based Service Cards

S T E P #	SCCPHC, IPSHC and This procedure updates	Service Cards that are flash based. This group includes IPS, MCP, EROUTE, VSCCP, ERTHC cards. Seach card with the source release GPLs. 4 are to be repeated for EACH card in the system.
1	Issue the command to display the GPL status.	rept-stat-gpl:gpl=YYYY (Where YYYY is one of the Flash-Based service card types listed above.)
2	Response to the command is displayed. Record the CARD locations for all cards that have alarms:	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-gpl:gpl=YYYY command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y GPL Auditing ON APPL CARD RUNNING APPROVED TRIAL YYYYY 1101 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXXX YYYYY 1103 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXXX Command Completed. ;
3	Issue the command to inhibit the card if the card is provisioned.	inh-card:loc=XXXX (Where XXXX is the card location of the cards determined in Step 2)
4	Response to the inhibit command is displayed. Wait for the "Command completed" response before proceeding.	<pre>tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y</pre>
5	Issue the command to initialize the flash memory.	flash-card:code=appr:force=yes:loc=XXXX NOTE: this command causes the card to boot.

Procedure 26: Restoring Flash-Based Service Cards

6 	Response to the flash card command is displayed. Wait for command complete to indicate that the card is finished loading	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y flash-card:code=appr:force=yes:loc=XXXX Command entered at terminal #10.; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed.
	before proceeding.	;
7	Issue the command to allow the card ²⁴ if the card is provisioned.	alw-card:loc=XXXX (Where XXXX is the card location of the cards determined in Step2) NOTE: if card is VSCCP, use alw-card:loc=xxxx:data=persist
		NOTE: If card is MCP, it may boot with an Obit for Module EMM_MCP.C Class 0001. This is expected behavior and is not service affecting.
8	Response to the allow command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y alw-card:loc=1201 Command entered at terminal #10.
	Wait for the card to finish loading before proceeding (approximately 30 seconds).	<pre>tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Card has been allowed. tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. ;</pre>
9	Repeat Steps 3 – 8 for each card in the current group that has an alarm.	
10	Repeat steps 1-9 for each group of cards (VSCCP, ISP, MCP, EROUTE, SCCPHC, IPSHC and ERTHC)	
11	Issue the command to display the card status.	rept-stat-card
12	Response to the command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-card Command entered at terminal #10.
	Verify that all Flash-Based Service cards are IS-NR and are running the Source-Release GPL versions, as per your reference list of GPLs For any such card that is not IS-NR or running the	; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL EST SST AST 1101 XXX-XXX-XXX TSM VSCCP IS-NR Active 1102 XXX-XXX-XXX TSM VSCCP IS-NR Active 1103 XXX-XXX-XXX TSM EMDC IS-NR Active 1104 XXX-XXX-XXX TSM EBDADCM IS-NR Active 1105 XXX-XXX-XXX LIMDSO SS7GX25 IS-NR Active 1111 XXX-XXX-XXX ACMENET STPLAN IS-NR Active 1113 XXX-XXX-XXX GPSM EOAM IS-NR Active 1114 TDM IS-NR Active 1115 XXX-XXX-XXX GFSM EOAM IS-NR Active
]	correct GPL, repeat Steps 3-4.	1115

²⁴ Specifying the DATA=PERSIST parameter for VSCCP allows for warm restart if possible.

Procedure 27: Restoring Prom-Based Link Cards

S T E P	This procedure updates the Prom-based Link cards with the source release GPLs. Cards in this group include SS7ANSI, CCS7ITU, SS7GX25, and STPLAN cards. This procedure updates each card with the source release GPLs.	
#	Note: Steps 3 through	16 are to be repeated for EACH low speed link card in the system.
1	Issue the command to display the GPL status.	rept-stat-gpl:gpl=YYYY (Where YYYYY is one of the PROM-based link card types listed above.)
2	Response to the command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-gpl:gpl=YYYY Command entered at terminal #10.
	Record the CARD locations for all cards which have alarms:	GPL Auditing ON APPL CARD RUNNING APPROVED TRIAL XXXXXXX 1201 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX XXXXXXX 1202 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX XXXXXXX 1203 XXX-XXX-XXX XXX-XXX-XXX XXXXXXX 1204 XXX-XXX-XXX XXX-XXX-XXX Command Completed. ;
3	Issue command to display provisioned links. Response displayed.	rept-stat-card:loc=xxxx (Where XXXX is a card in alarm from Step 2.) tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-card:loc=xxxx
0	Note whether links A and B are IS-NR for the current card.	command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST XXXX XXX-XXXXXX XXXXXX XXXXXX IS-NR Active XXXXX ALARM STATUS = ** 0228 REPT-E1F:FAC-E1 Port 1 LOS failure IMT VERSION = XXX-XXX-XXX PROM VERSION = XXX-XXX-XXX IMT BUS A = Conn IMT BUS B = Conn SLK A PST = IS-NR LS=XXXX CLLI= SLK B PST = OOS-MT LS=XXXX CLLI= Command Completed.
5	Issue the command to cancel the port A link to the low speed link card if the link is IS-NR.	canc-slk:loc=XXXX:port=a (Where XXXX is the card location of a Low Speed Link card determined in, Step 2) NOTE: Use canc-dlk:loc=XXXX for STPLAN cards
6	Response to cancel link command is displayed. Wait for the "Command completed" response before proceeding.	<pre>tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y canc-slk:loc=XXXX:port=a Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Deactivate Link message sent to card ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. ;</pre>

Procedure 27: Restoring Prom-Based Link Cards

7	For cards with signaling links, repeat steps 5-6 for port B of the same card if it is IS-NR.	(Port B status was noted in Step4 above.)
8	Issue the command to inhibit the card.	inh-card:loc=XXXX (Where XXXX is the card location of the cards determined in Step 2)
9	Response to the inhibit command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y inh-card:loc=XXXX Command entered at terminal #10. ;
	Wait for the "Command completed" response before proceeding.	<pre>tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y</pre>
10	T 4	Command Completed.
10	Issue the command to allow the card.	alw-card: loc=XXXX (Where XXXX is the card location of the cards determined in Step2)
11	Response to the allow command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y alw-card:loc=1201 Command entered at terminal #10.
	Wait for the card to finish loading before proceeding (approximately 30 seconds).	<pre>tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Card has been allowed. tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y</pre>
12	Issue the command to	Command Completed. ; act-slk:loc=XXXX:port=a
	activate the card's link if it was IS-NR in Step 4.	(Where XXXX is the card location of the cards determined in Step2) NOTE: Use act-dlk:loc=XXXX for STPLAN cards.
13	Response to the activate- link command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y act-slk:loc=XXXX:port=a Command entered at terminal #10. ;
	Wait for the "Command completed" response before proceeding.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Activate Link message sent to card tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed.
14	Repeat Step 12 – 13 for port B of the same card if it was IS-NR in Step 4.	
15	Issue command to display provisioned links.	rept-stat-card:loc=XXXX
16	Response displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-card:loc=XXXX Command entered at terminal #10. ;
	Verify that the links that were IS-NR in Step 4 are IS-NR now.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST XXXX XXX-XXX-XXX XXXXXX IS-NR Active XXXXX ALARM STATUS = ** 0228 REPT-E1F:FAC-E1 Port 1 LOS failure IMT VERSION = XXX-XXX-XXX PROM VERSION = XXX-XXX-XXX IMT BUS A = Conn IMT BUS B = Conn SLK A PST = IS-NR LS=XXXX CLLI= SLK B PST = 00S-MT LS=XXXX CLLI= Command Completed.

Procedure 27: Restoring Prom-Based Link Cards

17 18 19	Repeat Steps 3 - 16 for each card in the group from Step 2 that has an alarm. Repeat Steps 1-17 for each Prom-Based Link card group (SS7ANSI, CCS7ITU, SS7GX25, STPLAN.) Issue the command to	rent_stat_card
	display the GPL status.	rept-stat-card
	Response to the command is displayed. Verify that all Prom-Based Link cards are IS-NR and are running the Source-Release GPL versions, as per your reference list of GPLs For any card that is not IS-NR or running the correct GPL, repeat Steps 3-16.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-card Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL EST SST AST 1101 XXX-XXX-XXX TSM SCCP IS-NR Active 1102 XXX-XXX-XXX TSM SCCP IS-NR Active 1104 XXX-XXX-XXX TSM GLS IS-NR Active 1105 XXX-XXX-XXX TSM GLS IS-NR Active 1105 XXX-XXX-XXX TSM GLS IS-NR Active 1111 XXX-XXX-XXX LIMDSO SS7GX25 IS-NR Active 1111 XXX-XXX-XXX ACMENET STPLAN IS-NR Active 1111 XXX-XXX-XXX GPSM EOAM IS-NR Active 11114 TDM IS-NR Active 1115 XXX-XXX-XXX GPSM EOAM IS-NR Active 1116 TDM IS-NR Active 1117 MDAL IS-NR Active 1201 XXX-XXX-XXX LIMDSO SS7ANSI IS-NR Active 1202 XXX-XXX-XXX LIMDSO SS7ANSI IS-NR Active 1203 XXX-XXX-XXX LIMDSO SS7GX25 IS-NR Active 1204 XXX-XXX-XXX LIMDSO STPLAN IS-NR Active 1205 XXX-XXX-XXX LIMDSO STPLAN IS-NR Active 1206 XXX-XXX-XXX LIMDSO STPLAN IS-NR Active 1207 XXX-XXX-XXX LIMDSO STPLAN IS-NR Active

Procedure 28: Restoring Flash-Based Link Cards

S T E P #	Link cards include ATMANSI, IPLIM, IPLIMI, SS7IPGW, SS7ML (MPL/MIM/MPLT), IPGWI, ATMITU, VXWSLAN, SS7HC, SS7EPM, IPLHC, IPGHC, ATMHC and SLANHC cards. This procedure updates each card with the source release GPLs. Note: Steps 3 through 20 are to be repeated for EACH Link card in the system.	
1	Issue the command to display the GPL status.	rept-stat-gpl:gpl=YYYY (Where YYYY is one of the Flash-Based Link card types listed above.)
	Response to the command is displayed. Record the CARD locations for all cards which have alarms:	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-gpl:gpl=YYYY command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y GPL Auditing ON APPL CARD RUNNING APPROVED TRIAL XXXXXXX 1201 XXX-XXX-XXX ALM XXX-XXX-XXX XXXXXXX 1202 XXX-XXX-XXX ALM XXX-XXX-XXX XXXXXXX 1205 XXX-XXX-XXX ALM XXX-XXX-XXX XXXXXXX 1205 XXX-XXX-XXX ALM XXX-XXX-XXX XXXXXXX 1207 XXX-XXX-XXX ALM XXX-XXX-XXX XXXXXXX 1209 XXX-XXX-XXX XXX-XXX-XXX XXXXXXX 1211 XXX-XXX-XXX XXX-XXX-XXX XXXXXXX 1211 XXX-XXX-XXX XXX-XXX-XXX
3	Issue command to display provisioned links.	command Completed. rept-stat-card:loc=xxxx (Where XXXXY is a card in alarm from Step 2.)
4	Response displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-card:loc=XXXX Command entered at terminal #10. ;
	Note which links are IS-NR for this card.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST XXXX XXX-XXXX XXXXXXX XXXXXX IS-NR Active ALARM STATUS = * 0021 Clock A for card failed, Clock B normal XXXXXX GPL version = XXX-XXX-XXX IMT BUS A = Conn IMT BUS B = Conn SLK A PST = IS-NR LS=XXXX CLLI= SLK B PST = IS-NR LS=XXXX CLLI= SLK B1 PST = IS-NR LS=XXXX CLLI= SLK B1 PST = IS-NR LS=XXXX CLLI= SLK B2 PST = IS-NR LS=XXXX CLLI= SLK B2 PST = IS-NR LS=XXXX CLLI= SLK B3 PST = IS-NR LS=XXXX CLLI= Command Completed.
5	Issue the command to initialize the flash memory.	flash-card: code=appr: force=yes:loc=xxxx NOTE: this command causes the card to boot.

Procedure 28: Restoring Flash-Based Link Cards

Response to the flash card command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y flash-card:code=appr:force=yes:loc=XXXX Command entered at terminal #10. ;
Wait for command complete to indicate that the card is finished loading before proceeding.	<pre>tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. ;</pre>
Issue command to display provisioned links.	rept-stat-card:loc=XXXX
Response displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-card:loc=XXXX Command entered at terminal #10. ;
Verify that the links that were IS-NR in Step 4 are IS-NR now.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST XXXX XXX-XXX-XXXX XXXXXX XXXXXX IS-NR Active XXXXX ALARM STATUS = ** 0228 REPT-E1F:FAC-E1 Port 1 LOS failure IMT VERSION = XXX-XXX-XXX PROM VERSION = XXX-XXX-XXX IMT BUS A = Conn IMT BUS B = Conn SLK A PST = IS-NR LS=XXXX CLLI= SLK B PST = 00S-MT LS=XXXX CLLI= Command Completed.
Repeat Steps 3 - 8 for each card in the group from Step 2 that has an alarm.	,
Repeat Steps 1-9 for each Flash-Based Link card group (ATMANSI, IPLIM, IPLIMI, SS7IPGW, SS7ML (MPL\MIM\MPLT), IPGWI, VXWSLAN, SS7HC, SS7EPM, IPLHC, IPGHC, ATMHC and SLANHC.)	
Issue the command to display the GPL status.	rept-stat-card
Response to the command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-card Command entered at terminal #10.
Verify that all Flash-Based Link cards are IS-NR and are running the Source- Release GPL versions, as per your reference list of GPLs For any card that is not IS- NR or running the correct GPL, repeat Steps 3-20.	tekelecstp YY-MM-DD
	command is displayed. Wait for command complete to indicate that the card is finished loading before proceeding. Issue command to display provisioned links. Response displayed. Verify that the links that were IS-NR in Step 4 are IS-NR now. Repeat Steps 3 - 8 for each card in the group from Step 2 that has an alarm. Repeat Steps 1-9 for each Flash-Based Link card group (ATMANSI, IPLIM, IPLIMI, SS7IPGW, SS7ML (MPL\MIM\MPLT), IPGWI, VXWSLAN, SS7HC, SS7EPM, IPLHC, IPGHC, ATMHC and SLANHC.) Issue the command to display the GPL status. Response to the command is displayed. Verify that all Flash-Based Link cards are IS-NR and are running the Source-Release GPL versions, as per your reference list of GPLs For any card that is not IS-NR or running the correct

Procedure 29: Restoring Mux Cards

S T E P		each card with the source release GPLs. Mux cards include HMUX and HIPR cards, and HIPR GPLs respectively.				
1	Issue the card status command to identify the MUX cards in the system.	rept-stat-gpl:gpl=YYYY (Where YYYYY is one of the Flash-Based Mux card types listed above.)				
2	Response to the command is displayed. Record the CARD locations for all Mux cards in the system:	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-gpl:gpl=YYYY Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y GPL Auditing ON APPL CARD RUNNING APPROVED TRIAL YYYY XX09 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX YYYY XX10 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX YYYY XX10 XXX-XXX-XXX XXX-XXX-XXX XYYYY XX10 XXX-XXX-XXX XXX-XXX-XXX YYYY XX10 XXX-XXX-XXX XXX-XXX-XXX YYYY XX10 XXX-XXX-XXX XXX-XXX-XXX XXY-XXX-XXX YYYY XX10 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXX-XXX XXX-XXX-XXX XXX-XXX XXX-XXX XXX-XXX XXX-XXX XXX-XXX XXX-XXX XXX-XXX-XXX XXX-XXX XXX				
3	Enter the command to initialize the FLASH on the next Mux card on the current bus.	init-flash:loc=XXZZ:code=appr (Where XX = is a shelf number and, ZZ depends on which bus is being flashed. 09 is bus a; 10 is bus b.)				
4	Response to the flash initialization is shown.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y init-flash:loc=XX09:code=appr Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Download for card XX09 Started. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Download for card XX09 Completed.				
5	Repeat steps 1-4 for each Mux card type on the current bus. (BPHMUX an HIPR)	NOTE: Steps 1-4 must be performed for all Mux card types on one bus before performing these steps for any Mux card types on the other bus.				
6	Enter the command to initialize the current bus.	init-mux:bus= x^{25} (Where $x = a$ or b, depending on current bus: xx09 is bus a; xx10 is bus b.)				
7	Response to the initialization command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y init-mux:bus=a Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5080.0014 CARD XX09 YYYY Card is present ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5081.0014 CARD YY09 YYYY Card is present ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5082.0004 * GPL SYSTEM YYYY Card is running non-activated GPL				

²⁵ Warning: Do not use the FORCE= parameter. Use of this parameter may result in network outage. Analysis of the alternate bus is required.

Procedure 29: Restoring Mux Cards

8	Issue the command to activate the flash on the next Mux card on the current bus. Response to the activate	act-flash:loc=XXZZ (Where XX = is a shelf number and, ZZ depends on which bus is being flashed. 09 is bus a; 10 is bus b.) tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y			
	command is displayed.	act-flash:loc=XX09 Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Activation for card 1209 Started. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Activation for card 1209 Completed. :			
10	Repeat steps 8-9 for each Mux card on the current bus (a or b.)				
11	Repeat steps 3-10 for the second bus (a or b.)				
12	Issue the command to display the Mux card GPL status.	rept-stat-gpl:gpl=YYYY (Where YYYY is one of the Flash-Based Mux card types listed above.)			
13	Verify that all MUX card types are running the approved GPL.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-gpl:gpl=YYYY Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y GPL Auditing ON APPL CARD RUNNING APPROVED TRIAL YYYY XX09 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX YYYY XX10 XXX-XXX-XXX XXX-XXX-XXX YYYY XX09 XXX-XXX-XXX XXX-XXX-XXX YYYY XX10 XXX-XXX-XXX XX-XXX-XXX YYYY XX10 XXX-XXX-XXX XXX-XXX-XXX YYYY XX09 XXX-XXX-XXX XXX-XXX-XXX YYYY XX10 XXX-XXX-XXX XXX-XXX-XXX Command Completed. ;			

APPENDIX A. UPGRADING BOOT-PROM GPL ON NON-IN-SERVICE AND UNPROVISIONED NETWORK CARDS.

Procedure 30: Flashing Inactive Cards

S T E P #	This procedure determines any BPHCAP, BPHCAPT, BPDCM, BPMPL, BPMPLT, or IMTPCI cards that are inhibited, and updates each card with its target release GPLs.			
	Issue the command to display the GPL status.	rept-stat-gpl:gpl=XXXX (Where XXXX is the GPL listed in the header of the procedure,)		
2	Response to the command is displayed. Record any card which	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-gpl:gpl=xxxx Command entered at terminal #10. ;		
	shows an alarm:	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y GPL Auditing ON APPL CARD RUNNING APPROVED TRIAL XXXXXX 1101 xxx-xxx-xxx xxx-xxx xxx-xxx		
		XXXXXX 1103 xxx-xxx-xxx xxx-xxx xxx-xxx xxx-xxx XXXXXXX 1111 xxx-xxx-xxx ALM xxx-xxx-xxx xxx-xxx xxx-xxx xxx-xxx ;;		
3	Issue the status command for specific card	rept-stat-card:loc=XXXX (Where XXXX is the card location recorded in the previous step.)		
4	Response to the command is displayed. If the PST for the card is OOS-MT-DSBLD or the command is rejected with MTT error E2144 ²⁶ , go to step 7.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST 1111 DSM VSCCP OOS-MT-DSBLD Manual ALARM STATUS = NO Alarms. BPDCM GPL version = 002-115-000 IMT BUS A = IMT BUS B = SCCP % OCCUP = 0% Command Completed.		
5	Issue the command to inhibit card.	inh-card:loc= <i>XXXX</i>		
6	Response to the command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Card has been inhibited. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. ;		
7	Issue the command to flash all GPLs on the card.	flash-card:code=appr:loc=XXXX NOTE: this command causes the card to boot.		
8	Response to the flash command is displayed. Wait for the card to finish loading before proceeding.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y flash-card:code=appr:loc=XXXX Command entered at terminal #10. ;		
		tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. ;		

²⁶ E2144 Cmd Rej: Location invalid for hardware configuration

Procedure 30: Flashing Inactive Cards

9	If steps 5 & 6 were executed, issue the command to allow card.	alw-card:loc= <i>XXXX</i>
10	Response to the command is displayed.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Card has been allowed. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. :
11	Repeat Steps 3 – 10 for all cards recorded in step 2.	
	Repeat Steps 1 – 11 for each group of Flash-Based cards (BPHCAP, BPHCAPT, BPDCM, BPMPL, BPMPLT, and IMTPCI)	

APPENDIX B. TARGET RELEASE SOFTWARE DOWNLOAD

The following procedure is a reference for the commands that will download an Eagle software release to the inactive partition group of the TDM. This procedure assumes that Tekelec has completed the rollout of the Server Software Delivery (SSD) solution for the Eagle product.

The following items are required before the release can be downloaded to the Eagle:

- System is running release 39.2 or later
- E5-IPSM card provisioned and IS-NR
- DIST application FTP server provisioned
- DIST application FTP server downloaded with target release software

Procedure 31: Download Target Release to Inactive Partition

S T E P	This procedure downloads the target release to inactive partition of the TDMs. The system must currently be running Eagle release 39.2 or higher. Check off ($$) each step as it is completed. Boxes have been provided for this purpose under each step number. SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR UPGRADE ASSISTANCE.			
1	Issue the command to display the status of the IPSM cards. rept-stat-card:appl=ips			
	Response from the command is displayed. Verify there is an IPSM card running the IPSHC gpl and that the card is IS-NR. If no such card present in the system this procedure can not be executed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y CARD VERSION TYPE GPL PST SST AST 1101 XXX-XXX-XXX IPSM IPSHC IS-NR Active;		
3	Issue the command to display database status of both TDM partitions.	act-upgrade:action=dbstatus		

Procedure 31: Download Target Release to Inactive Partition

		-
4	Response to the command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y DATABASE STATUS: >> OK << TDM 1114 (ACTV) TDM 1116 (STDBY) C LEVEL TIME LAST BACKUP C LEVEL TIME LAST BACKUP
	Record the card locations of the GPSMs:	FD BKUP Y XXX YY-MM-DD hh:mm:ss TTTT Y XXX YY-MM-DD hh:mm:ss TTTT FD CRNT Y XXX
	Act GPSM	MDAL 1117
	Stby GPSM	RD BKUP Y 1 CARD/APPL LOC C T LEVEL TIME LAST UPDATE VERSION STATUS
	Verify if either of the inactive partitions has not been formatted. Mark below. Example shows that inactive partition of	TDM-CRNT 1114 Y N XXX
	1116 not formatted.	CARD/APPL LOC C T LEVEL TIME LAST UPDATE VERSION STATUS
	If a database LEVEL, VERSION or STATUS is displayed the inactive partition has been formatted.	TDM-CRNT 1114 Y - ZZZ YY-MM-DD hh:mm:SS ZZZ-ZZZ-ZZZ NORMAL TDM-BKUP 1114 Y - ZZZ YY-MM-DD hh:mm:SS ZZZ-ZZZ-ZZZ NORMAL TDM-CRNT 1116
	Disk formatted.	
	1114	
	1116	
5	If the either of the inactive partitions has not been formatted continue, else go to Step 22.	
6	Issue the command to retrieve measurement setup.	rtrv-meas-sched
7	Response to retrieve command is displayed. Record if collection is on or off: If COLLECT=ON, continue to next step. Otherwise, go to Step 10.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y COLLECT
8	Issue the command to turn off measurement collection. ²⁷	chg-meas:collect=off
9	Response to the change command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y CHG-MEAS: MASP A - COMPLTD ;
10	If the inactive partition of the standby GPSM has not been formatted continue, else go to Step 15.	

²⁷ If executed, this step causes the database level to increment.

Procedure 31: Download Target Release to Inactive Partition

11	Issue the command to	format-disk:prtngrp=inactive:type=fixed:force=yes:low=no			
	format the inactive partition of the standby GPSM.				
12	Response from the format disk command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Format-disk of system fixed disk started. Extended processing required, please wait.			
		tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Format-disk of system fixed disk complete. ;			
13	Issue the command to display database status of both TDM partitions.	act-upgrade:action=dbstatus			
14	Response to the command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y DATABASE STATUS: >> OK <<			
	Verify the inactive partition of the standby has been formatted. And the active partition is valid.	FD BKUP Y XXX YY-MM-DD hh:mm:ss TTTT Y XXX YY-MM-DD hh:mm:ss TTTT FD CRNT Y XXX MDAL 1117 RD BKUP Y 1			
	If a database LEVEL, VERSION or STATUS is displayed the inactive partition has been formatted.	CARD/APPL LOC C T LEVEL TIME LAST UPDATE VERSION STATUS TDM-CRNT 1114 Y N XXX YY-MM-DD Nh:mm:ss XXX-XXX-XXX NORMAL TDM-BKUP 1116 Y N XXX YY-MM-DD Nh:mm:ss XXX-XXX-XXX NORMAL TDM-BKUP 1116 Y XXX YY-MM-DD Nh:mm:ss XXX-XXX-XXX NORMAL MDAL 1117 Y 1 YY-MM-DD YY-MY-YYY-YYY NORMAL			
	If the database LEVEL of the active partition of the active and standby are not the same stop the procedure and contact Tekelec Customer Care Center.	INACTIVE PARTITION GROUP CARD/APPL			
15	If the inactive partition of the active GPSM has not been formatted continue, else go to Step 22.				
16	Issue the command to boot the Active GPSM recorded in Step 4.	init-card:loc=XXXX (Where the XXXX is the location of the active GPSM record in a previous)			
17	Response to init card command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y * 0261.0013 * CARD 111X EOAM Card is isolated from the system			
		tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 5001.0009 CARD 111X EOAM MASP became active; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 5038.0014 CARD XXXX EOAM Card is present ASSY SN: xxxxxxxxx; ;			
18	Issue the command to log back in to the system.	login:uid=XXXXXX (Where XXXXXX is a valid login ID)			
19	Response to login command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y User logged in on terminal 10. ;			
	Ignore any login failure message.	? Login failures since last successful LOGIN Last successful LOGIN was on port ? on ??-??-?? @ ??:??:??			

Procedure 31: Download Target Release to Inactive Partition

20	Issue the command to format the inactive partition of the standby GPSM.	format-disk:prtngrp=inactive:type=fixed:force=yes:low=no			
21	Response from the format disk command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Format-disk of system fixed disk started. Extended processing required, please wait. tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Format-disk of system fixed disk complete. ;			
22	Issue the command to display database status of both TDM partitions.	act-upgrade:action=dbstatus			
23	Response to the command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y DATABASE STATUS: >> OK <<			
	Verify both of the inactive partitions have been formatted.	FD BKUP Y XXX YY-MM-DD hh:mm:ss TTTT Y XXX YY-MM-DD hh:mm:ss TTTT FD CRNT Y XXX MDAL 1117			
	If a database LEVEL, VERSION or STATUS is displayed the inactive partition has been formatted.	CARD/APPL			
24	Issue command to retrieve the FTP servers provisioned on the system.	rtrv-ftp-serv			
25	Response to the command is displayed. Verify that a software distribution, DIST, application server has been provisioned. If the DIST has not been provisioned see section 1.2.1 reference [3] for instructions on how to provision it.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y APP IPADDR LOGIN PRIO PATH			
26	Issue command to retrieve the EAGLE target release software.	act-upgrade:action=getrel:release="xxx-xxxx-401_REVxx.tar.gz" (Where the xxx-xxxx-401_REVxx.tar.gz is the name of the tar file that contains the upgrade target release software, the file name is delivered with the software access key)			

Procedure 31: Download Target Release to Inactive Partition

	Response to the command is displayed. Command execution time: approximately 20 – 30 minutes.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Eagle Release successfully downloaded ; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Command Complete : Upgrade action completed successfully ;
29	If step 8 was executed, issue the command to turn the measurements collection on. Otherwise go to the end of the procedure. Response to the change command is displayed.	<pre>tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y CHG-MEAS: MASP A - COMPLTD ;</pre>

APPENDIX C. ENTERING UPGRADE SOFTWARE ACCESS KEY

Procedure 32: Validate Upgrade Software Access Key

S T E P	This procedure will validate the Upgrade Software Access Key against the upgrade target release. Check off (1) each step as it is completed. Boxes have been provided for this purpose under each step number. SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC CUSTOMER CARE CENTER AND ASK FOR UPGRADE ASSISTANCE.				
1	The system must be	If media software delivery (MSD): Insert Media in MDAL			
	running the EOAM gpl from release 39.2 or greater.	If server software delivery (MSD): no media in MDAL			
2	Issue the command to validate the Upgrade Software Access Key. ²⁸	chg-upgrade-config:sak=XXXXXXXXXXXXXXX:src=zzzz (Where XXXXXXXXXXXXX is the Software Access Key and zzzz is the disk that contains the upgrade target release src=remove if MSD or src=fixed if SSD)			
3	Response to command is displayed.	tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y chg-upgrade-config:key=XXXXXXXXXXXXxxc=zzzzz Command entered at terminal #6. ;			
	Verify the correct Upgrade target release is output.	<pre>tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Upgrade target: EAGLE XX.x.x-YY.y.y ; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y</pre>			
		Command Completed.			

²⁸ If SAK unavailable, contact Tekelec Customer Care Center.

APPENDIX D. SUPPLEMENTAL INFORMATION FOR PROCEDURE 8, STEP 2

D.1 Samples of message from convertstp action for act-upgrade command

The following are illustrative of the messages displayed on the user terminal during the semantic check of the upgrade command in Procedure 8, step 2. Headers have been removed for brevity.

```
IMT Bus Check Started

IMT Bus Check Completed Successfully.
;
Hardware Validation Test Started

Hardware Validation Test Completed Successfully.
;
IP Route Conflict Validation Report
No conflicts with Eagle PVN and FCN found
End IP Route Conflict Validation Report.
;
Using inactive standby partitions for OAM conversion (disk=xxxxx)
```

The following are illustrative of the messages to be seen on the console during Procedure 8, step 2 of the upgrade procedure if the **fixed disk** is used for OAM conversion workspace. Headers and messages not directly output by upgrade have been omitted.

```
Using inactive standby partitions for OAM conversion (dest=fixed)
ACT-UPGRADE: MASP A - IMT GPL processing.
ACT-UPGRADE: MASP A - GPL uploaded.
ACT-UPGRADE: MASP A - BPDCM GPL processing.
ACT-UPGRADE: MASP A - GPL uploaded.
Starting to format the Standby TDM...
Format-disk of standby fixed disk complete.
Starting to copy GPLs to Standby TDM from removable...
NOTICE: Converting XXXX.TBL
Starting to copy system tables to Standby TDM from Active TDM...
Converting Standby OAM System partition.
Preserving the source-release DB version.
Conversion of Standby TDM has completed
Marking Standby TDM Upgrade Phase = 2...
Swapping Active and Inactive partition on Standby...
Standby MASP has not finished initializing - please wait...
Starting to backup Standby TDM...
ACT-UPGRADE: MASP B - Active MASP will reboot and be converted for upgrade.
Starting to format the Standby TDM...
Format disk in progress
Format-disk of standby fixed disk complete.
Starting to copy GPLs to Standby TDM from removable...
```

```
NOTICE: Converting XXXX.TBL
Starting to copy system tables to Standby TDM from Active TDM...
Converting Standby OAM System partition.
Preserving the source-release DB version.
Conversion of Standby TDM has completed
Marking Standby TDM Upgrade Phase = 2...
Swapping Active and Inactive partition on Standby...
Standby MASP has not finished initializing - please wait...
Starting to backup Standby TDM...
ACT-UPGRADE: OAM upgrade complete
ACT-UPGRADE: prepare to initialize network cards
Starting network conversion...
Upgrading n of m <APPL> cards [XXXX]
Command in Progress: Network conversion in progress
ACT-UPGRADE: Network conversion complete
ACT-UPGRADE: Network upgrade complete
Command Complete: Upgrade action completed successfully
INFO: Provisioning subsystem is in duplex mode.
```

D.2 Samples of message from convertstp action for act-upgrade command (PR 112604)

The following are illustrative of the messages that may be seen on the console during Procedure 8, step 2 of the upgrade procedure if the cards exhibit the behavior of PR 112604 (no CSR #). It may be observed during the upgrade to Eagle release 35.1 until the new gpl versions are downloaded to the card. The upgrade continues unless the card is to remain inhibited. If the upgrade terminates verify if the card needs to be inhibited per the warning in section 5 and reissue the upgrade command.

```
Network Conversion: Inhibiting card 1201.
Network Conversion: Inhibiting card 1203.

;

Network Conversion: Inhibiting card 1201 (Retry).
Network Conversion: Inhibiting card 1203 (Retry).

;

Card Error: Card 1201 was not inhibited.
Card Error: Card 1203 was not inhibited.
;

Recovery Required: Manually inhibit card 1201
```

D.3 Determination and Recovery of DDL Hunt during Upgrade

NOTE: The following section should be completed with the assistance of Tekelec Customer Care Center.

After loading its GPL and database tables, the last step required by an MTP card is to crossload its dynamic database (DDB) from adjacent cards. The DDB contains the status of all routes, linksets, and links provisioned in the system. The Dynamic Data Load (DDL) is the process where a loading MTP card obtains the current view of the network via downloading it from an already IS-NR network card. In order for a network card to download a proper view of the network status, the network must remain quiescent during the download. If an update to the DDB occurs, then the download aborts and restarts. Depending on the size of the network, it may take as long as 4 seconds to complete this process. Please note that the network must remain stable (no changes) during this phase for the download to complete successfully.

The card reports its PST as IS-ANR and its SST as DDL Hunt:

```
Card Failure: Card 1101 did not return to IS-NR.
Status of card 1101: PST: IS-ANR SST: DDL Hunt AST: ----
Please note this appendix addresses DDL during Upgrade. Refer to external reference [2] in section 1.2.1 for recovery in full function mode.
```

A system is considered unstable when provisioned and configured devices are cycling from an alarmed state to a clear state. Bouncing links, link congestion and discard, and DPC|Route transition have the most impact on the DDL Hunt state. Table 19 lists these conditions by UAM number and describes the recovery steps.

The guideline to determine if DDL Hunt is possible when a card boots and tries to reload is based on the number of DDB events, which causes network management messages to be generated. An event is one cycle of alarming and clearing:

```
1237.0236 ** SLK 1201,A1 tklclset REPT-LKF: not aligned 1240.0200 SLK 1201,A1 RCVRY-LKF: link available
```

1 event consists of 2 transactions, which generates 2 network management messages. 8 events in 1 minute causes 16 messages which averages to a stability period of less then 4 seconds. This can range from 8 events per 1 device to 1 event per 8 devices.

Table 19. Recovery from DDL Hunt by UAM.

UAM	Device	Condition	Recovery	
0236 0200	SLK	Bouncing Link	A) Issue DDB checksum SEND-MSG per internal Ref. [10]	
		_	B) Issue CANC-SLK to deactivate the affected link	
0264 - 0269	SLK	Link Congestion	A) Issue DDB checksum SEND-MSG per internal Ref. [10]	
		_	B) Investigate the far-end and fix the far-end	
			C) Issue CANC-SLK to deactivate the affected link	
0270 - 0275	SLK	Link Discard	A) Issue DDB checksum SEND-MSG per internal Ref. [10]	
			B) Investigate the far-end and fix the far-end	
			C) Issue CANC-SLK to deactivate the affected link	
0311 - 0313	Route	DPC Transition	A) Issue DDB checksum SEND-MSG per internal Ref. [10	
			B) Investigate the far-end and fix the far-end	
			C) Issue CANC-SLK to deactivate the affected link	
0314 - 0316	Route	Route Transition	A) Issue DDB checksum SEND-MSG per internal Ref. [10]	
			B) Investigate the far-end and fix the far-end	
			C) Issue CANC-SLK to deactivate the affected link	

Note: If the front-end switches activity, device may return to previous state.

APPENDIX E. SWOPS SIGN OFF

Date	Test Case	Description of Failures and/or Issues. Any CSR's / RMA's issued during Acceptance. Discrepancy	Resolution and SWOPS Engineer Responsible	Resolution Date:

APPENDIX F. CUSTOMER SIGN OFF

Sign-Off Record

*** Please review this entire document. ***

This is to certify that all steps required for the upgrade successfully completed without failure.

Sign your name, showing approval of this procedure, and fax this page and the discrepancy list to Tekelec, FAX # 919-460-3669.

Customer: Company Name:	Date:
Site Location:	
Serial Number:	
Customer:(Print)	Phone:
Start Date:	Completion Date:
	signed. Any deviations from this procedure must be approved by both y of this page should be given to the customer for their records. The copy of this completion for future reference.
Tekelec Signature:	Date:
Customer Signature:	Date:

APPENDIX G. ACCESSING TEKELEC'S CUSTOMER SUPPORT SITE

Access to Tekelec's Customer Support site is restricted to current Tekelec customers only. This section describes how to log into Tekelec's Customer Support site and locate a document. Viewing the document requires Adobe Acrobat Reader, which can be downloaded at www.adobe.com.

1. Log into Tekelec's **new** Customer Support site at <u>support.tekelec.com</u>.

Note: If you have not registered yet for this new site, click the **Register Here** link. Have your customer number available. The response time to registration requests is 24 to 48 hours.

- 2. Click the Product Support tab.
- 3. Use the Search field to locate quickly a document by its part number, release number, document name, or document type. The Search field accepts both full and partial entries.
- 4. Click a subject folder to browse through a list of related files.
- 5. To download a file to your location, right-click the file name and select Save Target As.

This Page Intentionally Left Blank