

Tekelec EAGLE[®] 5 Integrated Signaling System

Release 40.1

Database Administration Manual - Gateway Screening

910-5548-001 Revision A

April 2009



**Copyright 2009 Tekelec
All Rights Reserved
Printed in USA**

Notice

Information in this documentation is subject to change without notice. Unauthorized use, copying, or translation of this documentation can result in civil or criminal penalties.

Any export of Tekelec products is subject to the export controls of the United States and the other countries where Tekelec has operations.

No part of this documentation may be reproduced, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying or recording, for any purpose without the express written permission of an authorized representative of Tekelec.

Other product names used herein are for identification purposes only, and may be trademarks of their respective companies.

RoHS 5/6 - As of July 1, 2006, all products that comprise new installations shipped to European Union member countries will comply with the EU Directive 2002/95/EC "RoHS" (Restriction of Hazardous Substances). The exemption for lead-based solder described in the Annex will be exercised. RoHS 5/6 compliant components will have unique part numbers as reflected in the associated hardware and installation manuals.

WEEE - All products shipped to European Union member countries comply with the EU Directive 2002/96/EC, Waste Electronic and Electrical Equipment. All components that are WEEE compliant will be appropriately marked. For more information regarding Tekelec's WEEE program, contact your sales representative.

Trademarks

The Tekelec logo, EAGLE, G-Flex, G-Port, IP7, IP7 Edge, and IP7 Secure Gateway are registered trademarks of Tekelec. TekServer, A-Port, EAGLE 5 ISS, and V-Flex are trademarks of Tekelec. All other trademarks are the property of their respective owners.

Patents

This product is covered by one or more of the following U.S. and foreign patents:

U.S. Patent Numbers:

5,732,213; 5,953,404; 6,115,746; 6,167,129; 6,324,183; 6,327,350; 6,456,845; 6,606,379; 6,639,981; 6,647,113; 6,662,017; 6,735,441; 6,745,041; 6,765,990; 6,795,546; 6,819,932; 6,836,477; 6,839,423; 6,885,872; 6,901,262; 6,914,973; 6,940,866; 6,944,184; 6,954,526; 6,954,794; 6,959,076; 6,965,592; 6,967,956; 6,968,048; 6,970,542; 6,987,781; 6,987,849; 6,990,089; 6,990,347; 6,993,038; 7,002,988; 7,020,707; 7,031,340; 7,035,239; 7,035,387; 7,043,000; 7,043,001; 7,043,002; 7,046,667; 7,050,456; 7,050,562; 7,054,422; 7,068,773; 7,072,678; 7,075,331; 7,079,524; 7,088,728; 7,092,505; 7,108,468; 7,110,780; 7,113,581; 7,113,781; 7,117,411; 7,123,710; 7,127,057; 7,133,420; 7,136,477; 7,139,388; 7,145,875; 7,146,181; 7,155,206; 7,155,243; 7,155,505; 7,155,512; 7,181,194; 7,190,702; 7,190,772; 7,190,959; 7,197,036; 7,206,394; 7,215,748; 7,219,264; 7,222,192; 7,227,927; 7,231,024; 7,242,695; 7,254,391; 7,260,086; 7,260,207; 7,283,969; 7,286,516; 7,286,647; 7,286,839; 7,295,579; 7,299,050; 7,301,910; 7,304,957; 7,318,091; 7,319,857; 7,327,670

Foreign Patent Numbers:

EP1062792; EP1308054; EP1247378; EP1303994; EP1252788; EP1161819; EP1177660; EP1169829; EP1135905; EP1364520; EP1192758; EP1240772; EP1173969; CA2352246

Ordering Information

Your Tekelec Sales Representative can provide you with information about how to order additional discs.

Table of Contents

Chapter 1: Introduction.....	1
Overview.....	2
Scope and Audience.....	2
Manual Organization.....	2
Documentation Admonishments.....	3
Customer Care Center.....	4
Emergency Response.....	6
Related Publications.....	7
Documentation Availability, Packaging, and Updates.....	7
Maintenance and Administration Subsystem.....	7
EAGLE 5 ISS Database Partitions.....	9
Locate Product Documentation on the Customer Support Site.....	12
Chapter 2: Gateway Screening (GWS) Overview.....	15
Introduction.....	16
TUP Message Screening.....	18
Gateway Screening States.....	19
Linkset Parameters.....	19
Gateway Screening Attributes.....	20
Use of the Character “ c ” for the NI, NC, NCM, ZONE, AREA, ID, NPC, MSA, SSA, and SP Parameters.....	23
Specifying a Range of Values for Gateway Screening Parameters.....	24
Use of the Asterisk “ * ” for the ZONE, AREA, ID, MSA, SSA, and SP Parameters.....	26
User Interface Requirements.....	28
Command Summary.....	29
Enter Commands.....	29
Change Commands.....	30
Delete Commands.....	30
Retrieve Commands.....	30
14-Bit ITU National Point Code Formats.....	34
Converting Single Number 14-Bit ITU National Point Codes.....	34
Converting Multiple Part 14-Bit ITU National Point Codes.....	35
Gateway Screening Using Duplicate ITU National Point Codes.....	36
Gateway Screening Configuration.....	37

Gateway Screening Configuration Examples.....	42
Adding an GLS Card.....	52
Removing a GLS Card.....	60
Configuring Gateway Screening Stop Action Sets.....	63
Configuring TLNP Gateway Screening Stop Action Sets.....	75
Removing Gateway Screening Stop Action Sets.....	88
Setting the Threshold for Reporting Gateway Screening Activity.....	91
Setting the Maximum Number of Gateway Screening Rejected Messages.....	95

Chapter 3: Allowed Affected Point Code (AFTPC) Screen

Configuration.....	97
Introduction.....	98
Gateway Screening Actions.....	98
Allowed AFTPC Screening Actions.....	99
Adding an Allowed Affected Point Code Screen.....	102
Removing an Allowed Affected Point Code Screen.....	110
Changing an Allowed Affected Point Code Screen.....	114

Chapter 4: Allowed Called Party (CDPA) Screen

Configuration.....	123
Introduction.....	124
Gateway Screening Actions.....	124
Allowed CDPA Screening Actions.....	125
Adding an Allowed Called Party Address Screen.....	128
Removing an Allowed Called Party Address Screen.....	139
Changing an Allowed Called Party Address Screen.....	143

Chapter 5: Allowed Translation Type (TT) Screen

Configuration.....	155
Introduction.....	156
Gateway Screening Actions.....	156
Allowed TT Screening Actions.....	157
Adding an Allowed Translation Type Screen.....	161
Removing an Allowed Translation Type Screen.....	167
Changing an Allowed Translation Type Screen.....	169

Chapter 6: Allowed Calling Party (CGPA) Screen

Configuration.....	177
---------------------------	------------

Introduction.....	178
Gateway Screening Actions.....	178
Allowed CGPA Screening Actions.....	179
Adding an Allowed Calling Party Address Screen.....	184
Removing an Allowed Calling Party Address Screen	194
Changing an Allowed Calling Party Address Screen.....	198

Chapter 7: Allowed Affected Destination Field (DESTFLD) Screen Configuration.....211

Introduction.....	212
Gateway Screening Actions.....	212
Allowed Affected Destination Screening Actions.....	213
Adding an Allowed Affected Destination Field Screen.....	216
Removing an Allowed Affected Destination Field Screen.....	224
Changing an Allowed Affected Destination Field Screen.....	227

Chapter 8: Blocked Destination Point Code (BLKDPC) Screen Configuration.....237

Introduction.....	238
Gateway Screening Actions.....	238
Blocked DPC Screening Actions.....	239
Adding a Blocked DPC Screen.....	242
Removing a Blocked DPC Screen.....	254
Changing a Blocked DPC Screen.....	258

Chapter 9: Allowed Destination Point Code (DPC) Screen Configuration.....271

Introduction.....	272
Gateway Screening Actions.....	272
Allowed DPC Screening Actions.....	273
Adding an Allowed DPC Screen.....	276
Removing an Allowed DPC Screen.....	289
Changing an Allowed DPC Screen.....	292

Chapter 10: Allowed Signaling Information Octet (SIO) Screen Configuration.....305

Introduction.....	306
Gateway Screening Actions.....	306

Allowed SIO Screening Actions.....	307
Adding an Allowed SIO Screen.....	311
Removing an Allowed SIO Screen.....	320
Changing an Allowed SIO Screen.....	323

Chapter 11: Blocked Originating Point Code (BLKOPC)

Screen Configuration.....331

Introduction.....	332
Gateway Screening Actions.....	332
Blocked OPC Screening Actions.....	333
Adding a Blocked OPC Screen.....	336
Removing a Blocked OPC Screen.....	349
Changing a Blocked OPC Screen.....	353

Chapter 12: Allowed Originating Point Code (OPC)

Screen Configuration.....365

Introduction.....	366
Gateway Screening Actions.....	366
Allowed OPC Screening Actions.....	367
Adding an Allowed OPC Screen.....	370
Removing an Allowed OPC Screen.....	383
Changing an Allowed OPC Screen.....	386

Chapter 13: Screen Set Configuration.....399

Introduction.....	400
Automatic Destination Field Screening.....	400
Adding a Screen Set.....	400
Removing a Screen Set.....	407
Changing a Screen Set.....	409

Chapter 14: Calling Name Conversion Facility (CNCF)

Configuration.....417

Introduction.....	418
Configuring the EAGLE 5 ISS for the CNCF Feature.....	420

Chapter 15: Allowed ISUP Message Type Screen

Configuration.....435

Introduction.....	436
Gateway Screening Actions.....	436
TUP Message Screening.....	436
Allowed ISUP Message Type Screening Actions.....	437
Adding an Allowed ISUP Message Type Screen.....	441
Removing an Allowed ISUP Message Type Screen.....	447
Changing an Allowed ISUP Message Type Screen.....	450
Glossary.....	455

List of Figures

Figure 1: EAGLE 5 ISS Database Partitions (Legacy Control Cards).....	9
Figure 2: EAGLE 5 ISS Database Partitions (E5-Based Control Cards).....	10
Figure 3: Sample Network Showing Gateway Screening Using Duplicate ITU National Point Codes.....	36
Figure 4: The Gateway Screening Process.....	40
Figure 5: Gateway Screening Configuration - Example 1.....	42
Figure 6: Gateway Screening Configuration - Example 2.....	44
Figure 7: Gateway Screening Configuration - Example 3.....	46
Figure 8: Gateway Screening Configuration - Example 4.....	47
Figure 9: Gateway Screening Configuration - Example 5.....	48
Figure 10: Gateway Screening Configuration - Example 6.....	50
Figure 11: Gateway Screening Configuration - Example 7.....	51
Figure 12: Adding an GLS Card to the Database.....	56
Figure 13: Removing a GLS Card.....	62
Figure 14: Configuring Gateway Screening Stop Action Sets.....	70
Figure 15: Configuring TLNP Gateway Screening Stop Action Sets.....	82
Figure 16: Removing Gateway Screening Stop Action Sets.....	90
Figure 17: Setting the Threshold for Reporting Gateway Screening Activity.....	93
Figure 18: Setting the Maximum Number of Gateway Screening Rejected Messages.....	96
Figure 19: Allowed AFTPC Screening Actions.....	99
Figure 20: Allowed Affected Point Code Screening Function.....	101
Figure 21: Adding an Allowed Affected Point Code Screen	108
Figure 22: Removing an Allowed Affected Point Code Screen.....	112
Figure 23: Changing an Allowed Affected Point Code Screen.....	119
Figure 24: Allowed CDPA Screening Actions.....	125
Figure 25: Allowed Called Party Address Screening Function.....	127
Figure 26: Adding an Allowed Called Party Address Screen.....	135
Figure 27: Removing an Allowed Called Party Address Screen	141
Figure 28: Changing an Allowed Called Party Address Screen.....	149
Figure 29: Allowed TT Screening Actions.....	157
Figure 30: Allowed Translation Type Screening Function.....	159
Figure 31: Adding an Allowed Translation Type Screen	164
Figure 32: Removing an Allowed Translation Type Screen	169
Figure 33: Changing an Allowed Translation Type Screen	172
Figure 34: Allowed CGPA Screening Actions.....	179
Figure 35: Allowed Calling Party Address Screening Function.....	182

Figure 36: Adding an Allowed Calling Party Address Screen.....	190
Figure 37: Removing an Allowed Calling Party Address Screen	196
Figure 38: Changing an Allowed Calling Party Address Screen.....	204
Figure 39: Allowed Affected Destination Screening Actions.....	213
Figure 40: Allowed Affected Destination Field Screening Function.....	215
Figure 41: Adding an Allowed Affected Destination Field Screen	221
Figure 42: Removing an Allowed Affected Destination Field Screen.....	226
Figure 43: Changing an Allowed Affected Destination Field Screen.....	232
Figure 44: Blocked DPC Screening Actions.....	239
Figure 45: Blocked DPC Screening Functions.....	241
Figure 46: Adding a Blocked DPC Screen.....	249
Figure 47: Removing a Blocked DPC Screen.....	257
Figure 48: Changing a Blocked DPC Screen.....	264
Figure 49: Allowed DPC Screening Actions.....	273
Figure 50: Allowed DPC Screening Functions.....	275
Figure 51: Adding an Allowed DPC Screen.....	284
Figure 52: Removing an Allowed DPC Screen	291
Figure 53: Changing an Allowed DPC Screen	299
Figure 54: Allowed SIO Screening Actions.....	307
Figure 55: Allowed SIO Screening Function.....	310
Figure 56: Adding an Allowed SIO Screen.....	317
Figure 57: Removing an Allowed SIO Screen	322
Figure 58: Changing an Allowed SIO Screen	328
Figure 59: Blocked OPC Screening Actions.....	333
Figure 60: Blocked OPC Screening Functions.....	335
Figure 61: Adding a Blocked OPC Screen.....	344
Figure 62: Removing a Blocked OPC Screen.....	352
Figure 63: Changing a Blocked OPC Screen.....	358
Figure 64: Allowed OPC Screening Actions.....	367
Figure 65: Allowed OPC Screening Functions.....	369
Figure 66: Adding an Allowed OPC Screen.....	378
Figure 67: Removing an Allowed OPC Screen.....	385
Figure 68: Changing an Allowed OPC Screen	392
Figure 69: Adding a Screen Set.....	405
Figure 70: Removing a Screen Set.....	408
Figure 71: Changing a Screen Set.....	412
Figure 72: PIP/GN Parameter Conversion.....	418
Figure 73: CNCF Gateway Screening Configuration - Example 1.....	420
Figure 74: CNCF Gateway Screening Configuration - Example 2.....	421
Figure 75: CNCF Gateway Screening Configuration - Example 3.....	422
Figure 76: CNCF Gateway Screening Configuration - Example 4.....	423

Figure 77: Calling Name Conversion Facility Configuration	431
Figure 78: Allowed ISUP Message Type Screening Actions	437
Figure 79: Allowed ISUP Message Type Screening Function.....	440
Figure 80: Adding an Allowed ISUP Message Type Screen	445
Figure 81: Removing an Allowed ISUP Message Type Screen.....	449
Figure 82: Changing an Allowed ISUP Message Type Screen.....	453

List of Tables

Table 1: Admonishments.....	3
Table 2: Valid Value Combinations for ANSI Point Code Parameters	24
Table 3: Valid Value Combinations for H0 and H1 Parameters.....	25
Table 4: Valid Parameter Combinations for ANSI Point Code Parameters.....	26
Table 5: Valid Value Combinations for ITU-I Point Code Parameters	27
Table 6: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters	27
Table 7: Valid Parameter Combinations for ITU-I Point Code Parameters.....	27
Table 8: Valid Parameter Combinations for 24-bit ITU-N Point Code Parameters.....	28
Table 9: Gateway Screening Process and Provisioning Order.....	39
Table 10: GLS Card Types.....	53
Table 11: Gateway Screening Stop Action Definitions If the CNCF Feature Is Off.....	65
Table 12: Gateway Screening Stop Action Set Parameter Combinations.....	65
Table 13: Sample TLNP Gateway Screening Stop Action Set Configuration.....	77
Table 14: Example Gateway Screening Allowed AFTPC Configuration Table.....	103
Table 15: Valid Value Combinations for ANSI Point Code Parameters.....	103
Table 16: Valid Value Combinations for ITU-I Point Code Parameters.....	104
Table 17: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters.....	104
Table 18: Valid Value Combinations for ANSI Point Code Parameters.....	114
Table 19: Valid Value Combinations for ITU-I Point Code Parameters	115
Table 20: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters	115
Table 21: Example Gateway Screening Allowed CDPA Configuration Table.....	129
Table 22: Valid Value Combinations for ANSI Point Code Parameters.....	130
Table 23: Valid Value Combinations for ITU-I Point Code Parameters.....	130
Table 24: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters.....	130
Table 25: CDPA Parameter Combinations.....	134
Table 26: Valid Value Combinations for ANSI Point Code Parameters	144
Table 27: Valid Value Combinations for ITU-I Point Code Parameters	145
Table 28: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters	145
Table 29: CDPA Parameter Combinations.....	148
Table 30: Example Gateway Screening Allowed TT Configuration Table.....	161
Table 31: Valid Parameter Combinations for the Allowed CGPA Screening Function.....	179
Table 32: Example Gateway Screening Allowed CGPA Configuration Table.....	184
Table 33: Valid Value Combinations for ANSI Point Code Parameters.....	185
Table 34: Valid Value Combinations for ITU-I Point Code Parameters.....	185
Table 35: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters.....	186
Table 36: Valid Value Combinations for ANSI Point Code Parameters.....	199

Table 37: Valid Value Combinations for ITU-I Point Code Parameters.....	200
Table 38: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters.....	200
Table 39: CGPA Parameter Combinations.....	203
Table 40: Example Gateway Screening Allowed DESTFLD Configuration Table.....	217
Table 41: Valid Value Combinations for ANSI Point Code Parameters.....	217
Table 42: Valid Value Combinations for ITU-I Point Code Parameters.....	218
Table 43: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters.....	218
Table 44: Valid Value Combinations for ANSI Point Code Parameters.....	228
Table 45: Valid Value Combinations for ITU-I Point Code Parameters	229
Table 46: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters	229
Table 47: Example Gateway Screening Blocked DPC Configuration Table.....	243
Table 48: Valid Value Combinations for ANSI Point Code Parameters.....	244
Table 49: Valid Value Combinations for ITU-I Point Code Parameters.....	244
Table 50: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters.....	245
Table 51: Valid Value Combinations for ANSI Point Code Parameters.....	260
Table 52: Valid Value Combinations for ITU-I Point Code Parameters.....	260
Table 53: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters.....	261
Table 54: Example Gateway Screening Allowed DPC Configuration Table.....	277
Table 55: Valid Value Combinations for ANSI Point Code Parameters.....	278
Table 56: Valid Value Combinations for ITU-I Point Code Parameters.....	278
Table 57: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters.....	279
Table 58: Valid Value Combinations for ANSI Point Code Parameters.....	294
Table 59: Valid Value Combinations for ITU-I Point Code Parameters	294
Table 60: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters	294
Table 61: Valid Parameter Combinations for the Allowed SIO Screening Function.....	307
Table 62: Example Gateway Screening Allowed SIO Configuration Table.....	312
Table 63: Valid Value Combinations for H0 and H1 Parameters.....	313
Table 64: Valid Value Combinations for H0 and H1 Parameters.....	325
Table 65: Example Gateway Screening Blocked OPC Configuration Table.....	337
Table 66: Valid Value Combinations for ANSI Point Code Parameters.....	338
Table 67: Valid Value Combinations for ITU-I Point Code Parameters	339
Table 68: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters	339
Table 69: Valid Value Combinations for ANSI Point Code Parameters.....	354
Table 70: Valid Value Combinations for ITU-I Point Code Parameters.....	355
Table 71: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters.....	355
Table 72: Example Gateway Screening Allowed OPC Configuration Table.....	371
Table 73: Valid Value Combinations for ANSI Point Code Parameters.....	372
Table 74: Valid Value Combinations for ITU-I Point Code Parameters.....	373
Table 75: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters.....	373
Table 76: Valid Value Combinations for ANSI Point Code Parameters.....	387
Table 77: Valid Value Combinations for ITU-I Point Code Parameters.....	387

Table 78: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters.....	388
Table 79: Example Gateway Screening Screen Set Configuration Table.....	401
Table 80: ISUP IAM Message Conversion Examples.....	419
Table 81: Example Gateway Screening Allowed DPC Configuration Table for the CNCF Feature.....	426
Table 82: Example Gateway Screening Allowed SIO Configuration Table for the CNCF Feature.....	427
Table 83: Example Gateway Screening Allowed OPC Configuration Table for the CNCF Feature.....	428
Table 84: Example Gateway Screening Screen Set Configuration Table for the CNCF Feature.....	429
Table 85: Linkset Configuration Table for the CNCF Feature.....	430
Table 86: Example Gateway Screening Allowed ISUP Configuration Table.....	442

Chapter 1

Introduction

Topics:

- [Overview Page 2](#)
- [Scope and Audience Page 2](#)
- [Manual Organization Page 2](#)
- [Documentation Admonishments Page 3](#)
- [Customer Care Center Page 4](#)
- [Emergency Response Page 6](#)
- [Related Publications Page 7](#)
- [Documentation Availability, Packaging, and Updates Page 7](#)
- [Maintenance and Administration Subsystem Page 7](#)
- [EAGLE 5 ISS Database Partitions Page 9](#)
- [Locate Product Documentation on the Customer Support Site Page 12](#)

Chapter 1, Introduction, contains general information about the gateway screening feature, the database, and the organization of this manual.

Overview

The *Database Administration Manual – Gateway Screening* describes the procedures used to configure the EAGLE 5 ISS and its database to implement the Gateway Screening Feature.

The Gateway Screening (GWS) feature examines a Message Signaling Unit (MSU) attempting to enter the EAGLE 5 ISS against predefined criteria in the EAGLE 5 ISS database to determine whether the MSU should be allowed to enter. The screening functions are defined by using screening tables or screen sets containing a set of rules. Each screen set is uniquely identified by a screen set name. Each rule in the screen set is identified by a screening reference name. Each screening reference belongs to a specific category, which indicates the criteria used to either accept or reject an incoming MSU. Gateway screening tables provide screening of MTP messages on Link Interface Modules (LIMs) and SCCP messages on the service modules.

Note: Before enabling any the Gateway Screening feature, make sure you have purchased this feature to be turned on. If you are not sure whether you have purchased this feature to be turned on, contact your Tekelec Sales Representative or Account Representative.

Note: Database administration privileges are password restricted. Only those persons with access to the command class “Database Administration” can execute the administrative functions. Refer to the *Commands Manual* for more information on command classes and commands allowed by those classes.

It is possible for two or more users to make changes to the same database element at any time during their database administration sessions. It is strongly recommended that only one user at a time make any changes to the database.

Scope and Audience

This manual is intended for database administration personnel or translations personnel responsible for configuring the EAGLE 5 ISS and its database to implement the Gateway Screening feature.

Manual Organization

Throughout this document, the terms database and system software are used. Database refers to all data that can be administered by the user, including shelves, cards, links, routes, global title translation tables, and gateway screening tables. System software refers to data that cannot be administered by the user, including generic program loads (GPLs).

This document is organized into the following sections.

Introduction on page 1 contains general information about the gateway screening feature, the database, and the organization of this manual.

Gateway Screening (GWS) Overview on page 15 contains an overview of the Gateway screening feature and the procedures for provisioning the GLS card, gateway screening stop action sets, the

threshold for gateway screening activity, and the maximum number of gateway screening rejected messages.

Allowed Affected Point Code (AFTPC) Screen Configuration on page 97 contains the procedures necessary to configure allowed affected point code screens.

Allowed Called Party (CDPA) Screen Configuration on page 123 contains the procedures necessary to configure allowed called party address screens.

Allowed Translation Type (TT) Screen Configuration on page 155 contains the procedures necessary to configure allowed translation type screens.

Allowed Calling Party (CGPA) Screen Configuration on page 177 contains the procedures necessary to configure allowed calling party address screens.

Allowed Affected Destination Field (DESTFLD) Screen Configuration on page 211 contains the procedures necessary to configure allowed affected destination field screens.

Blocked Destination Point Code (BLKDPC) Screen Configuration on page 237 contains the procedures necessary to configure blocked destination point code screens.

Allowed Destination Point Code (DPC) Screen Configuration on page 271 contains the procedures necessary to configure allowed destination point code screens.

Allowed Signaling Information Octet (SIO) Screen Configuration on page 305 contains the procedures necessary to configure allowed signaling information octet screens.

Blocked Originating Point Code (BLKOPC) Screen Configuration on page 331 contains the procedures necessary to configure blocked originating point code screens.

Allowed Originating Point Code (OPC) Screen Configuration on page 365 contains the procedures necessary to configure allowed originating point code screens.

Screen Set Configuration on page 399 contains the procedures necessary to configure screen sets.


Calling Name Conversion Facility (CNCF) Configuration on page 417 contains a description of the Calling Name Conversion Facility feature the procedure necessary to configure this feature.



Allowed ISUP Message Type Screen Configuration on page 435 contains the procedures necessary to configure allowed ISUP message type screens.

Documentation Admonishments

Admonishments are icons and text throughout this manual that alert the reader to assure personal safety, to minimize possible service interruptions, and to warn of the potential for equipment damage.

Table 1: Admonishments

	<p>DANGER: (This icon and text indicate the possibility of <i>personal injury</i>.)</p>
---	--

	<p>WARNING: (This icon and text indicate the possibility of <i>equipment damage</i>.)</p>
	<p>CAUTION: (This icon and text indicate the possibility of <i>service interruption</i>.)</p>

Customer Care Center

The Tekelec Customer Care Center is your initial point of contact for all product support needs. A representative takes your call or email, creates a Customer Service Request (CSR) and directs your requests to the Tekelec Technical Assistance Center (TAC). Each CSR includes an individual tracking number. Together with TAC Engineers, the representative will help you resolve your request.

The Customer Care Center is available 24 hours a day, 7 days a week, 365 days a year, and is linked to TAC Engineers around the globe.

Tekelec TAC Engineers are available to provide solutions to your technical questions and issues 7 days a week, 24 hours a day. After a CSR is issued, the TAC Engineer determines the classification of the trouble. If a critical problem exists, emergency procedures are initiated. If the problem is not critical, normal support procedures apply. A primary Technical Engineer is assigned to work on the CSR and provide a solution to the problem. The CSR is closed when the problem is resolved.

Tekelec Technical Assistance Centers are located around the globe in the following locations:

Tekelec - Global

Email (All Regions): support@tekelec.com

- **USA and Canada**

Phone:

1-888-FOR-TKLC or 1-888-367-8552 (toll-free, within continental USA and Canada)

1-919-460-2150 (outside continental USA and Canada)

TAC Regional Support Office Hours:

8:00 a.m. through 5:00 p.m. (GMT minus 5 hours), Monday through Friday, excluding holidays

- **Central and Latin America (CALA)**

Phone:

USA access code +1-800-658-5454, then 1-888-FOR-TKLC or 1-888-367-8552 (toll-free)

TAC Regional Support Office Hours (except Brazil):

10:00 a.m. through 7:00 p.m. (GMT minus 6 hours), Monday through Friday, excluding holidays

- **Argentina**

Phone:

0-800-555-5246 (toll-free)

- **Brazil**

Phone:

0-800-891-4341 (toll-free)

TAC Regional Support Office Hours:

8:30 a.m. through 6:30 p.m. (GMT minus 3 hours), Monday through Friday, excluding holidays

- **Chile**

Phone:

1230-020-555-5468

- **Columbia**

Phone:

01-800-912-0537

- **Dominican Republic**

Phone:

1-888-367-8552

- **Mexico**

Phone:

001-888-367-8552

- **Peru**

Phone:

0800-53-087

- **Puerto Rico**

Phone:

1-888-367-8552 (1-888-FOR-TKLC)

- **Venezuela**

Phone:

0800-176-6497

- **Europe, Middle East, and Africa**

- **Signaling**

Phone:

+44 1784 467 804 (within UK)

TAC Regional Support Office Hours:

8:00 a.m. through 7:00 p.m. (GMT), Monday through Friday, excluding holidays

- **Software Solutions**

Phone:

+33 3 89 33 54 00

TAC Regional Support Office Hours:

8:00 a.m. through 7:00 p.m. (GMT), Monday through Friday, excluding holidays

- **Asia**

- **India**

Phone:

+91 124 436 8552 or +91 124 436 8553

TAC Regional Support Office Hours:

10:00 a.m. through 7:00 p.m. (GMT plus 5 1/2 hours), Monday through Saturday, excluding holidays

- **Singapore**

Phone:

+65 6796 2288

TAC Regional Support Office Hours:

9:00 a.m. through 6:00 p.m. (GMT plus 8 hours), Monday through Friday, excluding holidays

Emergency Response

In the event of a critical service situation, emergency response is offered by the Tekelec Customer Care Center 24 hours a day, 7 days a week. The emergency response provides immediate coverage, automatic escalation, and other features to ensure that the critical situation is resolved as rapidly as possible.

A critical situation is defined as a problem with an EAGLE 5 ISS that severely affects service, traffic, or maintenance capabilities, and requires immediate corrective action. Critical problems affect service and/or system operation resulting in:

- A total system failure that results in loss of all transaction processing capability
- Significant reduction in system capacity or traffic handling capability
- Loss of the system's ability to perform automatic system reconfiguration
- Inability to restart a processor or the system
- Corruption of system databases that requires service affecting corrective actions
- Loss of access for maintenance or recovery operations
- Loss of the system ability to provide any required critical or major trouble notification

Any other problem severely affecting service, capacity/traffic, billing, and maintenance capabilities may be defined as critical by prior discussion and agreement with the Tekelec Customer Care Center.

Related Publications

For information about additional publications that are related to this document, refer to the *Related Publications* document. The *Related Publications* document is published as a part of the *Release Documentation* and is also published as a separate document on the Tekelec Customer Support Site.

Documentation Availability, Packaging, and Updates

Tekelec provides documentation with each system and in accordance with contractual agreements. For General Availability (GA) releases, Tekelec publishes a complete EAGLE 5 ISS documentation set. For Limited Availability (LA) releases, Tekelec may publish a documentation subset tailored to specific feature content or hardware requirements. Documentation Bulletins announce a new or updated release.

The Tekelec EAGLE 5 ISS documentation set is released on an optical disc. This format allows for easy searches through all parts of the documentation set.

The electronic file of each manual is also available from the Tekelec Customer Support site (support.tekelec.com). This site allows for 24-hour access to the most up-to-date documentation, including the latest versions of Feature Notices.

Printed documentation is available for GA releases on request only and with a lead time of six weeks. The printed documentation set includes pocket guides for commands and alarms. Pocket guides may also be ordered separately. Exceptions to printed documentation are:

- Hardware or Installation manuals are printed without the linked attachments found in the electronic version of the manuals.
- The Release Notice is available only on the Customer Support site.

Note:

Customers may print a reasonable number of each manual for their own use.

Documentation is updated when significant changes are made that affect system operation. Updates resulting from Severity 1 and 2 PRs are made to existing manuals. Other changes are included in the documentation for the next scheduled release. Updates are made by re-issuing an electronic file to the customer support site. Customers with printed documentation should contact their Sales Representative for an addendum. Occasionally, changes are communicated first with a Documentation Bulletin to provide customers with an advanced notice of the issue until officially released in the documentation. Documentation Bulletins are posted on the Customer Support site and can be viewed per product and release.

Maintenance and Administration Subsystem

The Maintenance and Administration Subsystem (MAS) is the central management point for the EAGLE 5 ISS. The MAS provides user interface, maintenance communication, peripheral services,

alarm processing, system disk interface, and measurements. Management and redundancy are provided by use of two separate subsystem processors.

The MAS resides on two separate sets of Maintenance and Administration Subsystem Processor (MASP) cards and a Maintenance Disk and Alarm card (collectively referred to as control cards). The control cards are located in slots 1113 through 1118 of the EAGLE 5 ISS control shelf. The control cards can be either E5-based cards or legacy cards.

Note: In normal operation, the E5-based control cards and the legacy control cards cannot be mixed in one EAGLE 5 ISS control shelf.

Legacy Control Cards

The legacy set of EAGLE 5 ISS control cards consists of the following cards:

- Two MASP card sets; each set contains the following two cards:
 - A General Purpose Service Module II (GPSM-II) card
 - A Terminal Disk Module (TDM) card
- One Maintenance Disk and Alarm (MDAL) card

General Purpose Service Module II (GPSM-II) Card

Each GPSM-II card contains the Communications Processor and the Applications Processor and provides connections to the IMT bus. The card controls the maintenance and database administration activity and performs both application and communication processing. GPSM-II cards are located in slots 1113 and 1115 of the control shelf.

Terminal Disk Module (TDM) Card

Each TDM card provides the Terminal Processor for the 16 I/O ports, and interfaces to the Maintenance Disk and Alarm (MDAL) card. The TDM card also distributes Composite Clocks and High Speed Master clocks throughout the EAGLE 5 ISS, and distributes Shelf ID to the EAGLE 5 ISS. Each TDM card contains one fixed disk drive that is used to store primary and backup system databases, measurements, and Generic Program Loads (GPLs). The TDM cards are located in slots 1114 and 1116 of the control shelf.

Maintenance Disk and Alarm (MDAL) Card

The MDAL card processes alarm requests and provides fan control. There is only one MDAL card in a control card set. Critical, major, and minor system alarms are provided for up to 6 individual frames. In addition to the 3 system alarms, the MDAL card provides the system audible alarm. The MDAL card provides control of fans on a per-frame basis and allows for each fan relay to be set individually. The MDAL card contains a removable cartridge drive; the removable cartridge is used for installing new software; backing up the system software, the application software, and the database; and for downloading data for off-line processing. The MDAL card is located in slots 1117 and 1118 of the control shelf.

E5-based Control Cards

The E5-based set of EAGLE 5 ISS control cards consists of the following cards:

- Two Maintenance and Administration Subsystem Processor cards (E5-MASP) cards. Each dual-slot E5-MASP card is made up of the following two modules:
 - Maintenance Communication Application Processor (E5-MCAP) card

- Terminal Disk Module (E5-TDM) card
- One Maintenance Disk and Alarm card (E5-MDAL card)

Maintenance Communication Application Processor (E5-MCAP) Card

The E5-MCAP card contains the Communications Processor and Applications Processor and provides connections to the IMT bus. The card controls the maintenance and database administration activity and performs both application and communication processing. E5-MCAP cards are located in slots 1113 and 1115 of the control shelf.

Each E5-MCAP card contains two USB ports. One latched USB port is used with removable flash media (“thumb drives”), and one flush-mounted USB port is used with a plug-in “credit card” flash drive. The removable media drive is used to install and back up customer data. The credit card drive is used for upgrade and could be used for disaster recovery.

Terminal Disk Module (E5-TDM) Card

The E5-TDM card provides the Terminal Processor for the 16 I/O ports, and interfaces to the Maintenance Disk and Alarm (E5-MDAL) card and fixed disk storage. The E5-TDM card also distributes Composite Clocks and High Speed Master clocks throughout the EAGLE 5 ISS, and distributes Shelf ID to the EAGLE 5 ISS. Each E5-TDM card contains one fixed SATA drive that is used to store primary and backup system databases, measurements, and Generic Program Loads (GPLs). E5-TDM cards are located in slots 1114 and 1116 of the control shelf.

Maintenance Disk and Alarm (E5-MDAL) Card

The E5-MDAL card processes alarm requests and provides fan control. There is only one E5-MDAL card in a control card set. Critical, major, and minor system alarms are provided for up to 6 individual frames. In addition to the 3 system alarms, the E5-MDAL card provides the system audible alarm. The E5-MDAL card provides control of fans on a per-frame basis, and allows for each fan relay to be set individually. The E5-MDAL card does not contain a removable cartridge drive; drives for removable media are located on the E5-MCAP card. The E5-MDAL card is located in slots 1117 and 1118 of the control shelf.

EAGLE 5 ISS Database Partitions

The data that the EAGLE 5 ISS uses to perform its functions are stored in two separate areas: the fixed disk drives, and the removable cartridge. The following sections describe these areas and data that is stored on them. These areas and their partitions are shown in *Figure 1: EAGLE 5 ISS Database Partitions (Legacy Control Cards)* on page 9 and *Figure 2: EAGLE 5 ISS Database Partitions (E5-Based Control Cards)* on page 10.

Figure 1: EAGLE 5 ISS Database Partitions (Legacy Control Cards)


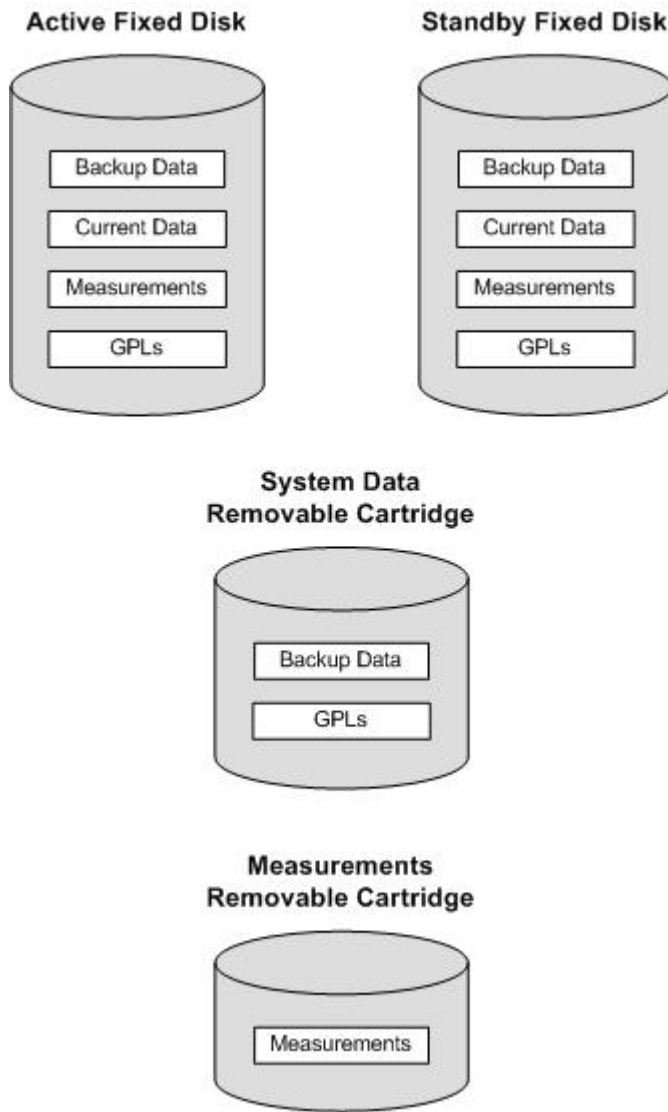


Figure 2: EAGLE 5 ISS Database Partitions (E5-Based Control Cards)

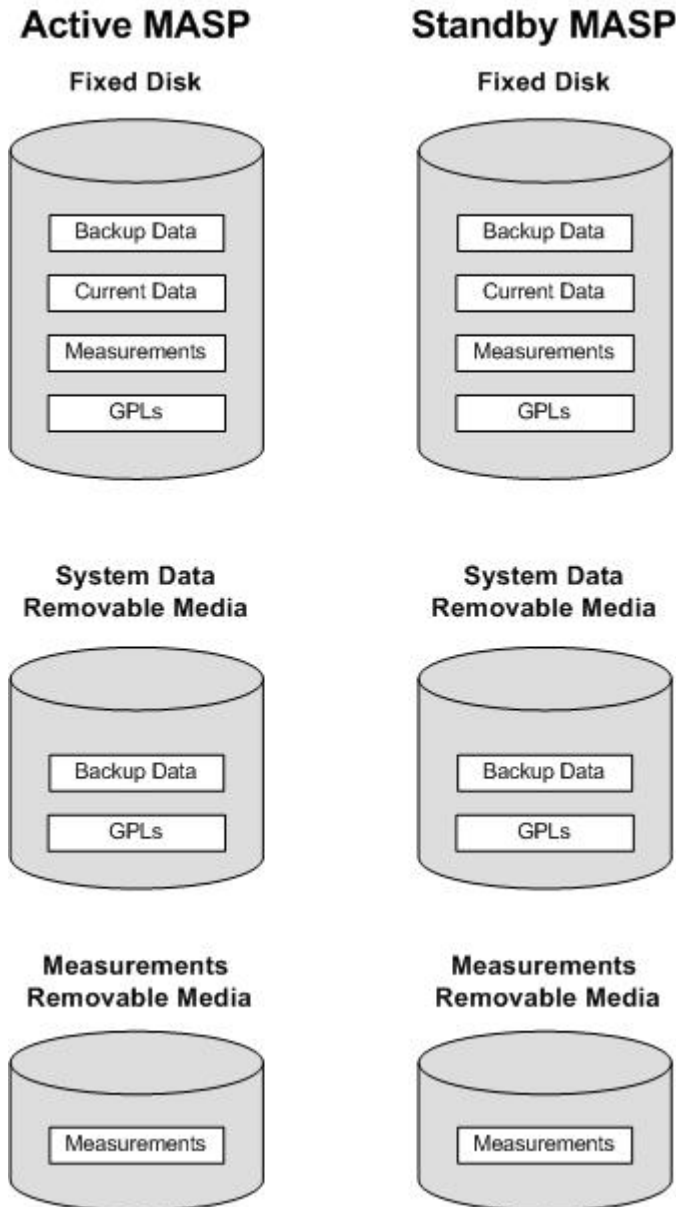

Fixed Disk Drive

There are two fixed disk drives on the EAGLE 5 ISS. The fixed disk drives contain the “master” set of data and programs for the EAGLE 5 ISS. The two fixed disk drives are located on the terminal disk modules (TDMs). Both disks have the same files. The data stored on the fixed disks is partially replicated on the various cards in the EAGLE 5 ISS. Changes made during database administration sessions are sent to the appropriate cards.

The data on the fixed disks can be viewed as four partitions.

- Current partition
- Backup partition

- Measurements partition
- Generic program loads (GPLs) partition

The data which can be administered by users is stored in two partitions on the fixed disk, a current database partition which has the tables which are changed by on-line administration, and a backup database partition which is a user-controlled copy of the current partition.

All of the on-line data administration commands effect the data in the current partition. The purpose of the backup partition is to provide the users with a means of rapidly restoring the database to a known good state if there has been a problem while changing the current partition.

A full set of GPLs is stored on the fixed disk, in the GPL partition. There is an approved GPL and a trial GPL for each type of GPL in this set and a utility GPL, which has only an approved version. Copies of these GPLs are downloaded to the EAGLE 5 ISS cards. The GPL provides each card with its functionality. For example, the `ss7ansi` GPL provides MTP functionality for link interface modules (LIMs).

Measurement tables are organized as a single partition on the fixed disk. These tables are used as holding areas for the measurement counts.

Removable Cartridge or Removable Media

The removable cartridge is used with the legacy MDAL control card in card location 1117. The removable media is used with the E5-MCAP card portion of the E5-MASP in card locations 1113 and 1115.

The removable cartridge or removable media is used for two purposes.

- To hold an off-line backup copy of the administered data and system GPLs
- To hold a copy of the measurement tables

Because of the size of the data stored on the fixed disk drives on the TDMs, a single removable cartridge or removable media cannot store all of the data in the database, GPL and measurements partitions.

To use a removable cartridge or removable media to hold the system data, it must be formatted for system data. To use a removable cartridge or removable media to hold measurements data, it must be formatted for measurements data. The EAGLE 5 ISS provides the user the ability to format a removable cartridge or removable media for either of these purposes. A removable cartridge or removable media can be formatted on the EAGLE 5 ISS by using the `format-disk` command. More information on the `format-disk` command can be found in the *Commands Manual*. More information on the removable cartridge or removable media drives can be found in the *Hardware Manual - EAGLE 5 ISS*.

Additional and preformatted removable cartridges or removable media are available from the [Customer Care Center](#) on page 4.

Locate Product Documentation on the Customer Support Site

Access to Tekelec's Customer Support site is restricted to current Tekelec customers only. This section describes how to log into the Tekelec Customer Support site and locate a document.

Viewing the document requires Adobe Acrobat Reader, which can be downloaded at www.adobe.com.

1. Log into the Tekelec **new** Customer Support site at support.tekelec.com.

Note: If you have not registered for this new site, click the **Register Here** link. Have your customer number available. The response time for registration requests is 24 to 48 hours.

2. Click the **Product Support** tab.
3. Use the Search field to locate a document by its part number, release number, document name, or document type. The Search field accepts both full and partial entries.
4. Click a subject folder to browse through a list of related files.
5. To download a file to your location, right-click the file name and select **Save Target As**.

Gateway Screening (GWS) Overview

Topics:

- [Introduction Page 16](#)
- [Gateway Screening States Page 19](#)
- [Gateway Screening Attributes Page 20](#)
- [User Interface Requirements Page 28](#)
- [14-Bit ITU National Point Code Formats Page 34](#)
- [Gateway Screening Using Duplicate ITU National Point Codes Page 36](#)
- [Gateway Screening Configuration Page 37](#)
- [Adding an GLS Card Page 52](#)
- [Removing a GLS Card Page 60](#)
- [Configuring Gateway Screening Stop Action Sets Page 63](#)
- [Configuring TLNP Gateway Screening Stop Action Sets Page 75](#)
- [Removing Gateway Screening Stop Action Sets Page 88](#)
- [Setting the Threshold for Reporting Gateway Screening Activity Page 91](#)
- [Setting the Maximum Number of Gateway Screening Rejected Messages Page 95](#)

Chapter 2, Gateway Screening (GWS) Overview, contains an overview of the Gateway Screening feature and the procedures for provisioning the GLS card, gateway screening stop action sets, the threshold for gateway screening activity, and the maximum number of gateway screening rejected messages.

Introduction

This chapter provides an overview of the gateway screening feature and procedures for provisioning these items in the database:

- GLS cards
- Gateway screening stop action sets
- The threshold for gateway screening activity
- Setting the maximum number of gateway screening rejected messages

The gateway screening tables are loaded onto Link Interface Modules (LIMs) or service modules. Service modules can be any of these cards:

- Translation Services Modules (TSMs)
- Database Services Modules (DSMs).
- EAGLE 5-Service Module 4 GB (E5-SM4G)

The use of the service modules in the EAGLE 5 ISS is dependent on the combination of global title translation features that are being used in the EAGLE 5 ISS. for more information on the global title translation features, go to the *Database Administration Manual - Global Title Translation* .

The gateway screening tables provide screening of MTP (LIMs) and SCCP (service modules TSMs or DSMs) messages.

MTP Screening consists of the following items:

- Allowed Originating Point Code (OPC)
- Blocked Originating Point Code (BLKOPC)
- Allowed Signaling Information Octet (SIO)
- Allowed Destination Point Code (DPC)
- Blocked Destination Point Code (BLKDPC)
- Allowed Affected Destination Field (DESTFLD)
- Allowed ISUP Message Type (ISUP) - ISUP and TUP messages can be screened by the allowed ISUP message type screen.

SCCP Screening consists of the following items:

- Allowed Calling Party Address (CGPA)
- Allowed Translation Type (TT)
- Allowed Called Party Address (CDPA)
- Allowed Affected Point Code (AFTPC).

The procedures shown in this manual use a variety of commands. If more information than what is shown in these procedures is needed, go to the *Commands Manual* to find the required information.

The EAGLE 5 ISS's role in the SS7 network is to provide SS7 message transport between originating and destination signaling points. EAGLE 5 ISSs that route messages to and from other networks also perform gateway screening. The screening process results in a message being accepted into the network or rejected. The criteria for message screening depends on the type of message received by the EAGLE 5 ISS, and the contents of the EAGLE 5 ISS screening tables.

Gateway screening functions on the EAGLE 5 ISS reside within the LIM and the service modules and are defined using screening tables or screen sets which contain a set of rules. Each screen set

is uniquely identified by a screen set name. Each rule in the screen set is identified by a screening reference name. Each screening reference belongs to a specific category, which indicates the criteria that is used to either accept or reject an incoming MSU. For example, the category `blkopc` rejects all MSUs with the OPCs specified in the screening reference. The screening parameters (point codes, routing indicator, subsystem number, etc.) are used to match information in the SS7 message. The screening data is defined by the attributes discussed in the [Gateway Screening Attributes](#) on page 20 section.

Each group of screening references is referred to as a screen set and is identified by a particular screen set name (`scrn`). The screen set is applied to a particular linkset. This allows the capability, for example, for specific OPCs with particular SIOs and DPCs to be allowed into the network.

With the SEAS interface, the screen set function is performed by a gateway linkset. A gateway linkset combines the functions of a gateway screening screen set and an SS7 linkset specifying the `gwsa=on` and `scrn` parameters. Like an EAGLE 5 ISS gateway screening screen set, a gateway linkset defines the screening references that are to be used to screen the messages on the linkset. It also defines the linkset whose messages are to be screened. A gateway linkset can only be configured from a SEAS terminal and not from an EAGLE 5 ISS terminal. The linkset attributes of a gateway linkset can be displayed on an EAGLE 5 ISS terminal with the `rtrv-ls` command. A gateway linkset is shown by the entry `SEAS` in the `SCRN` field of the `rtrv-ls` command output. The gateway screening portion of the gateway linkset can only be displayed on the SEAS interface.

There are two basic functions, allow and block. In an allowed screen (for example, allowed DPC), if a match is found and the next screening function identifier (`nsfi`) is equal to anything but `stop`, the next screening reference (`nsr`) is identified and the screening process continues to the next screen identified by the `nsfi` and `nsr` parameters. If the next screening function identifier is `stop`, the message is processed and no further screening takes place. If no match is found, the message is rejected.

In a blocked screen (for example, blocked DPC), if a match is found and the next screening function identifier is `fail`, the message is rejected and no further screening takes place. If no match is found and the next screening function identifier is equal to anything but `stop`, the next screening reference is identified and the screening process continues to the next screen identified by the `nsfi` and `nsr` parameters. If the next screening function identifier is equal to `stop`, the message is processed and no further screening takes place.

When the screening process stops, other actions can be assigned to the screen set. These actions, called gateway screening stop actions, define the actions the EAGLE 5 ISS can perform on the MSU that passes gateway screening. For more information on configuring gateway screening stop actions, go to the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure. The EAGLE 5 ISS currently uses these gateways screening stop actions.

- `COPY` – copy the MSU for the STPLAN feature
- `RDCT` – redirect the MSU for the DTA feature
- `CNCF` – convert the PIP parameter with the GN parameter or the GN parameter with the PIP parameter in the ISUP IAM message for the Calling Name Conversion Facility feature.
- `TLNP` – ISUP IAMs that pass gateway screening are processed either by the ISUP NP with EPAP feature (if the ISUP NP with EPAP feature is enabled and turned on) or by the Triggerless LNP feature (if the Triggerless LNP feature is turned on).
- `TINP` – ISUP IAMs that pass gateway screening are intercepted by the Triggerless ISUP based Number Portability (TINP) feature and converted to include the routing number (RN) if the call is to a ported number. This gateway screening stop action can be specified only if the TINP feature is enabled.

The allowed OPC and DPC screens are useful in the gateway screening process when specifying particular sets of point codes that are allowed to send messages to another network or receive messages from another network. The blocked OPC and DPC screens are useful in the gateway screening process specifying particular sets of point codes that are not allowed to send SS7 messages to another network or receive SS7 messages from another network.

TUP Message Screening

TUP messages are screened using the Allowed ISUP Message Type screen. The TUP protocol is an obsolete predecessor to the ISUP protocol that remains in use in some areas. To screen for TUP messages, a screen set must be defined to screen for messages containing the service indicator value of 4. This is accomplished by defining an allowed SIO screen in the screen set containing the `si=4` parameter.

Since both ISUP and TUP messages are screened using the allowed ISUP message type screen, it is recommended that the screen set contain an allowed SIO screen to screen for ISUP messages, messages containing the service indicator value of 5. Each of these entries in the allowed SIO screen should have separate next screening functions. This allows the screening rules after the allowed SIO screen to have two separate streams, one that ends with screening ISUP messages, the other that ends with screening TUP messages.

The TUP messages can be screened for point codes before the allowed SIO screen with the allowed and blocked OPC screens, and after the SIO screen with the allowed and blocked DPC screens. However, if the screen set does not contain an allowed SIO screen that screens for TUP messages (messages with the service indicator value of 4), the message will be treated by the allowed ISUP message type screen as an ISUP message.

The following commands show how a screen set can be provisioned to screen for TUP and ISUP messages.

```
ent-scr-isup:sr=is01:isupmt=10:nsfi=stop
ent-scr-isup:sr=tu01:tupmt=1:nsfi=stop
ent-scr-dpc:sr=dpc4:ni=1:nc=2:ncm=3:nsfi=isup:nsr=tu01
ent-scr-dpc:sr=dpc5:ni=7:nc=1:ncm=0:nsfi=isup:nsr=is01
ent-scr-sio:sr=si02:nic=2:pri=0:si=4:nsfi=dpc:nsr=dpc4
ent-scr-sio:sr=si02:nic=2:pri=0:si=5:nsfi=dpc:nsr=dpc5
ent-scrset:scrn=ist2:nsr=si02:nsfi=sio
```

In this example screen set configuration, messages are screened by the allowed SIO screen `si02` for either ISUP or TUP messages. ISUP messages are further screened by the allowed DPC screen `dpc5` and TUP messages are screened by the allowed DPC screen `dpc4`. The ISUP messages containing the ANSI point code 001-002-003 are passed onto the allowed ISUP screen `is01`. The TUP messages containing the ANSI point code 007-001-000 are passed onto the allowed ISUP screen `tu01`.

Note: The gateway screening rules are entered in reverse of the order that the screening process takes place.

Gateway Screening States

Gateway screening on a particular linkset can be set to function in one of four states:

NO SCREENING – Screening is not performed. All message signaling units (MSUs) are passed. This state is set by the `gwsa=off` and `gws=off` parameters of the `ent-ls` or `chg-ls` commands.

SCREEN AND REPORT – Screening is performed. When an MSU fails screening it is discarded, an output message is generated, and measurements are pegged. This state is set by the `gwsa=on` and `gws=on` parameters of the `ent-ls` or `chg-ls` commands.

SCREEN AND DON'T REPORT – Screening is performed. When an MSU fails screening it is discarded and measurements are pegged, but no output message is generated. This state is set by the `gwsa=on` and `gws=off` parameters of the `ent-ls` or `chg-ls` commands.

SCREEN TEST MODE – Screening is performed, but all MSUs are passed. When an MSU fails screening, an output message is generated, but the MSU is still passed. This state is set by the `gwsa=off` and `gws=on` parameters of the `ent-ls` or `chg-ls` commands.



CAUTION

CAUTION: When Gateway Screening is in the screen test mode, any action in the gateway screening stop action set specified by the `actname` parameter at the end of the gateway screening process will be performed.

The `gwsa` and `gws` parameters are described in the [Linkset Parameters](#) on page 19 section.

Linkset Parameters

Optional parameters of the enter linkset (`ent-ls`) command or the change linkset (`chg-ls`) command are used to set the screening state. These parameters are:

SCRN – the name of the gateway screening screen set that is associated with the linkset.

GWSA – Gateway screening action – The value `on` allows gateway screening to be performed on the linkset. The value `off`, does not allow gateway screening to be performed on the linkset. This parameter can only be specified if the `scrn` parameter is specified.

GWSM – Gateway screening messaging – The value `on` allows output messages to be generated. The value `off` does not allow output messages to be generated. This parameter can only be specified if the `scrn` parameter is specified.

GWSD – Gateway screening MSU discard – If gateway screening cannot be performed and the `gwsd` parameter is set to `on`, all MSUs on the linkset are discarded. These are two examples of why gateway screening could not be performed.

- No GLS cards are configured and installed in the EAGLE 5 ISS.
- The screen set is too big to be loaded onto the LIM or service module.

The value `off` does not allow messages to be discarded. This parameter can only be specified if the `scrn` and `gwsa=on` parameters are specified.

Note: Discarding all MSUs on a linkset will not allow any MSUs on the linkset to be routed. It is recommended that the value specified for the `gwsd` parameter is `off`. The `gwsd` parameter should only be set to `on` if you wish screen MSUs for gateway screening rather than routing MSUs through the EAGLE 5 ISS.

Refer to the *Commands Manual* for more information on the `ent-ls` or `chg-ls` commands.

Gateway Screening Attributes

Each screen has attributes which hold information required to perform a particular screening function. The following attributes are required in order to implement all of the screening functions.

The screen set name (`scrn`) is a four character (one alpha and up to three alphanumeric) value that specifies the name of the screen set.

The screening reference (`sr`) is a four character (one alpha and up to three alphanumeric) value. Combined with the next screening function identifier (`nsfi`), it uniquely defines a screening table.

The network identifier for ANSI point codes (`ni`) is an integer between 0 and 255, the asterisk "*", or the character "c".

The network cluster for ANSI point codes (`nc`) is an integer between 0 and 255, the asterisk "*", or the character "c".

The network cluster member for ANSI point codes (`ncm`) is an integer between 0 and 255, the asterisk "*", or the character "c".

The zone for ITU international point codes (`zone`) is an integer between 0 and 7, the asterisk "*", or the character "c".

The area for ITU international point codes (`area`) is an integer between 0 and 255, the asterisk "*", or the character "c".

The ID for ITU international point codes (`id`) is an integer between 0 and 7, the asterisk "*", or the character "c".

The 14-bit ITU national point code (`npc`) is an integer between 1 and 16383, the asterisk "*", or the character "c". The EAGLE 5 ISS supports different formats for 14-bit ITU national point codes as defined by the `npcfmti` parameter of the `chg-stpopts` command. No matter what format is defined by the `npcfmti` parameter, the 14-bit ITU national point code must be entered as an integer for gateway screening. If the format of the 14-bit ITU national point code that you wish to enter for gateway screening is not a single integer, the point code value must be converted into a single integer value. For more information on converting 14-bit ITU national point code values, see the [14-Bit ITU National Point Code Formats](#) on page 34 section. For more information on the different ITU national point code formats, see the 14-Bit ITU National Point Code Formats section in Chapter 2, Configuring Destination Tables in the *Database Administration Manual - SS7*.

Gateway Screening supports using ITU international spare point codes in addition to ITU international point codes, and 14-bit ITU national spare point codes in addition to 14-bit ITU national point codes. The `pcst` parameter is used to specify the whether or not the ITU international and 14-bit ITU national point codes are spare point codes (`pcst=s` parameter) or not (`pcst=none` parameter). For more information about ITU international and 14-bit ITU national spare point codes, see Chapter 2, Configuring Destination Tables in the *Database Administration Manual - SS7*. Gateway Screening does not support using private point codes.

The main signaling area value for 24-bit ITU national point codes (`msa`) is an integer between 0 and 255, the asterisk "*", or the character "c".

The sub-signaling area value for 24-bit ITU national point codes (`ssa`) is an integer between 0 and 255, the asterisk "*", or the character "c".

The signaling point value for 24-bit ITU national point codes (*sp*) is an integer between 0 and 255, the asterisk "*", or the character "c".

The ISUP message type (*isupmt*)/TUP message type (*tupmt*) is an integer between 0 and 255, or the character "*". This parameter specifies either an ISUP message type or a TUP message type for the ISUP screening reference specified in the *sr* parameter.

The service indicator (*si*) is an integer between 0 and 15. This parameter specifies a service indicator for the SIO screening reference specified in the *sr* parameter. The service indicator is the first 4 bits of an SIO.

The network indicator code (*nic*) is an integer between 0 and 3 or an "*" (asterisk). This parameter specifies a network indicator code for the SIO screening reference specified in the *sr* parameter. The network indicator code is the last 2 bits of an SIO.

The H0 heading code (*h0*) is an integer between 0 and 15, or an "*" (asterisk). This parameter specifies the first four bits of a message type for the SIO screening reference.

The H1 heading code (*h1*) is an integer between 0 and 15, or an "*" (asterisk). This parameter specifies last four bits of a message type for the SIO screening reference.

The message priority (*pri*) is an integer between 0 and 3. This parameter specifies the message priorities for the SIO screening reference.

The subsystem number (*ssn*) is an integer between 1 and 255 or an "*" (asterisk). This parameter identifies the SCP application that should receive the message.

The routing indicator (*ri*) is destination point code (DPC), global title translation (GT), or "*" (asterisk). This parameter indicates whether a subsequent global title translation is required.

- *gt* – indicates that a subsequent translation is required.
- *dpc* – indicates that no further translation is required.
- * (asterisk) – indicates all possible values (DPC and GT).

The translation type (*type*) is an integer between 0 and 255 or a "*" (asterisk). Identifies the type of global title translation. It is the decimal representation of the 1-byte field used in SS7.

The SCCP message type (*sccpmt*) is an integer with the values 9 (UDT messages), 10 (UDTS messages), 17 (XUDT messages), 18 (XUDTS messages), or "*" (asterisk). This parameter specifies one of these message types and is part of the calling party address screen.

The SCCP management (SCMG) format ID (*scmgfid*) is an integer from 1 to 255 or "*" (asterisk). This parameter specifies the function and format of an SCMG message and is part of the called party address screen.

The next screening function identifier (*nsfi*) is the screen function that is required to continue processing the message. It is the next step in processing the message. The values for this attribute are: *opc*, *blkopc*, *sio*, *dpc*, *blkdpc*, *destfld*, *isupcgpa*, *tt*, *cdpa*, *aftpc*, *stop*, and *fail*.

The next screening reference (*nsr*) is a four character (one alpha and up to three alphanumeric) value. Combined with the next screening function identifier (*nsfi*), it uniquely defines the next screening table to be used in the gateway screening process.

The gateway screening stop action set name (*actname*) is a six character (one alpha and up to five alphanumeric characters) value. Specified only with the *nsfi=stop* parameter, the gateway screening stop action set defines the additional actions the EAGLE 5 ISS can perform on MSUs that pass gateway screening.

The asterisk, or "*", is a single entry that indicates all possible values for that parameter.

These attributes are not used on all screens. The following list shows which attributes are required for each screening function. There are two types of attributes, search keys and results. The search keys are used to match fields in the SS7 message in order to determine the screening function result. The result is determined by matching a search key with information in the current SS7 message. The result indicates the next step in the screening process.

- Screen Set screening function
 - Search Key - SCRNM
 - Result - NSFI, NSR, ACTNAME
- Allowed OPC screening function
 - Search Key - SR, NI, NC, NCM, ZONE, AREA, ID, NPC, MSA, SSA, SP, PCST
 - Result - NSFI, NSR, ACTNAME
- Blocked OPC screening function
 - Search Key - SR, NI, NC, NCM, ZONE, AREA, ID, NPC, MSA, SSA, SP, PCST
 - Result - NSFI, NSR, ACTNAME
- Allowed SIO screening function
 - Search Key - SR, NIC, SI, H0, H1, PRI
 - Result - NSFI, NSR, ACTNAME
- Allowed DPC screening function
 - Search Key - SR, NI, NC, NCM, ZONE, AREA, ID, NPC, MSA, SSA, SP, PCST
 - Result - NSFI, NSR, ACTNAME
- Blocked Allowed DPC screening function
 - Search Key - SR, NI, NC, NCM, ZONE, AREA, ID, NPC, MSA, SSA, SP, PCST
 - Result - NSFI, NSR, ACTNAME
- Allowed DESTFLD screening function
 - Search Key - SR, NI, NC, NCM, ZONE, AREA, ID, NPC, MSA, SSA, SP, PCST
 - Result - NSFI, ACTNAME
- Allowed ISUP screening function
 - Search Key - SR, ISUPMT, TUPMT
 - Result - NSFI, ACTNAME

Note: The Allowed ISUP Screening function table contains both the ISUP message type (ISUPMT) and TUP message type (TUPMT). Only one of these parameters can be specified for an allowed ISUP screen. The parameter value to be used is dependent on the service indicator (SI) value specified in the allowed SIO screen: SI=5 for an ISUP message type, SI=4 for a TUP message type.
- Allowed CGPA screening function
 - Search Key - SR, NI, NC, NCM, ZONE, AREA, ID, NPC, MSA, SSA, SP, RI, SSN, SCCPMT, PCST
 - Result - NSFI, NSR, ACTNAME

- Allowed TT screening function
 - Search Key - SR, TYPE
 - Result - NSFI, NSR, ACTNAME
- Allowed CDPA screening function
 - Search Key - SR, NI, NC, NCM,,ZONE, AREA, ID, NPC, MSA, SSA, SP, SSN, SCMGFID, PCST
 - Result - NSFI, NSR, ACTNAME
- Allowed AFTPC screening function
 - Search Key - SR, NI, NC, NCM,,ZONE, AREA, ID, NPC, MSA, SSA, SP, SSN, PCST
 - Result - NSFI, ACTNAME

Note: The NSR attribute can only be specified when the NSFI is not STOP. The NSR cannot be specified with the ACTNAME attribute. The ACTNAME attribute can only be specified when the NSFI is STOP. The ACTNAME parameter cannot be specified with the NSR parameter. NSFI and NSR can only be defined once per screening table.

Use of the Character " c " for the NI, NC, NCM, ZONE, AREA, ID, NPC, MSA, SSA, and SP Parameters

The character " c " is used in the blocked OPC or DPC screens (for parameters *ni*, *nc*, *ncm*, *zone*, *area*, *id*, *npc*, *msa*, *ssa*, and *sp*) to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked OPC or DPC screens. The character " c " is used this way. When screening for a blocked OPC or DPC and the point code being screened does not match any of the point codes in the blocked OPC or DPC screens, the message is not rejected and the screening process continues. To allow the screening process to continue, the blocked OPC and blocked DPC screens must have at least one entry consisting of a screening reference, a point code, a next screening function identifier, and a next screening reference. The point code is in the form of *ni=c*, *nc=c*, *ncm=c* (for ANSI point codes), *zone=c*, *area=c*, *id=c* (for ITU international point codes), *npc=c* (for 14-bit ITU national point codes), and *msa=c*, *ssa=c*, *sp=c* (for 24-bit ITU national point codes). When the character " c " is specified, the next screening function identifier and next screening reference must be specified, unless the next screening function identifier is *stop* (*nsfi=stop*). Then the next screening reference cannot be specified.

When the point code does not match any entries in the blocked OPC or DPC screens, the screening process is directed to the screening reference with the point code *c-c-c* or *npc=c*. The next screening function identifier and next screening reference in this entry are examined to determine the next step in the screening process.

When a blocked OPC or DPC screen is created, the first entry for the *ni-nc-ncm*, *zone-area-id*, or *msa-ssa-sp* must be *c-c-c*, or the *npc* must "c." Subsequent entries can be specific point codes.

If the character " c " is specified for any parameters *ni*, *nc*, *ncm*, *zone*, *area*, *id*, *msa*, *ssa*, or *sp*, it must be specified for all three parameters. No other values can be used. For example, a point code *c-c-255* is not allowed. The point code must be *c-c-c*. The "*" (asterisk) value cannot be used with the character " c " (for example, a point code *c-c-** is not allowed).

ANSI, ITU international, or 24-bit ITU national point codes using the value "c" can be entered by specifying only the *ni=c* parameter (for ANSI point codes), *zone=c* parameter (for ITU

international point codes), or `msa=c` parameter (for 24-bit ITU national point codes), and the `nc`, `ncm`, `area`, `id`, `ssa`, and `sp` parameters can be omitted.

The `pcst` and `npcst` parameters, for specifying the ITU international and 14-bit ITU national spare point codes, cannot be used with point codes containing the character “c”.

Specifying a Range of Values for Gateway Screening Parameters

The values of these gateway screening parameters can be specified as a range of values.

`ni` – the network identifier for an ANSI point code

`nc` – the network cluster for an ANSI point code

`ncm` – the network cluster member for an ANSI point code

`pri` – the message priority in the SIO field of an MSU

`h0` – the H0 heading code in the SIF field of an MSU

`h1` – the H1 heading code in the SIF field of an MSU

`type` – the translation type in the called party address field of an MSU

`isupmt` – the ISUP message type

`tupmt` – the TUP message type

A range of values is specified with the values that define the range separated by two ampersands (&&), for example, `:ni=025&&100` specifies all network indicators for ANSI point codes from 25 to 100.

A range of values for an ANSI point code parameter can be specified with asterisks (*) or single values for other point code parameters. [Table 2: Valid Value Combinations for ANSI Point Code Parameters](#) on page 24 shows the valid combinations of these parameter values.

Table 2: Valid Value Combinations for ANSI Point Code Parameters

NI	NC	NCM
Single Value	Single Value	Single Value
Single Value	Single Value	Range of Values
Single Value	Single Value	Asterisk
Single Value	Range of Values	Asterisk
Single Value	Asterisk	Asterisk
Range of Values	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

A range of values for the H0 and H1 heading codes can be specified with asterisks (*) or single values for other heading code parameter. [Table 3: Valid Value Combinations for H0 and H1 Parameters](#) on page 25 shows the valid combinations of these parameter values.

Table 3: Valid Value Combinations for H0 and H1 Parameters

H0	H1
Single Value	Single Value
Single Value	Range of Values
Single Value	Asterisk
Range of Values	Asterisk
Asterisk	Asterisk

When changing or removing an existing gateway screening entry, the ANSI point code values, priority values, H0 and H1 heading code values, translation type, ISUP message type, or TUP message type values specified with the command must match the values configured in the database for the specified screening reference. If a command is specified with a parameter value that is part of a range of values for that parameter already configured for that screening reference, the command is rejected.

For example, the database contains a gateway screening entry for the range of allowed OPCs 010-010-010 to 010-010-100 in Allowed OPC screening reference `opc1`. If an attempt is made to remove or change Allowed OPC screening reference `opc1` and the ANSI point code 010-010-025 is specified. The command is rejected because point code 010-010-025 is a part of the point code range configured in the database. To remove or change Allowed OPC screening reference `opc1`, these point code parameters must be specified with the command, `ni=010, nc=010, ncm=010&&100`.

If the ANSI point code, priority value, H0 and H1 heading code values, or translation type values specified with an enter command is within the range of values already configured for the specified screening reference, the command is rejected. For example, the `ent-scr-opc` command is entered with the point code 010-010-050 assigned to screening reference `opc1`. If the database contains the range of point codes 010-010-010 to 010-010-100, specified as `ni=010, nc=010, ncm=010&&100`, the command is rejected. If the database contains an entry for all point codes with the network identifier of 010 and network cluster of 010, `ni=010, nc=010, ncm=*`, the command is rejected.

A range of values can be specified when displaying gateway screening entries. The range of values does not have to match the values configured in the database. The range of values specified with a retrieve command is used to limit the number of entries to search for. There are some restrictions for using ANSI point code values with retrieve commands. [Table 4: Valid Parameter Combinations for ANSI Point Code Parameters](#) on page 26 shows the valid combinations of the ANSI point code parameters.

Table 4: Valid Parameter Combinations for ANSI Point Code Parameters

NI	NC	NCM
Single value	Single value	Single value, a range of values, an asterisk, or the NCM value not specified
Single value	A range of values, an asterisk, or the NC value is not specified	the NCM value is not specified
A range of NI values, an asterisk, or the NI value is not specified	the NC value is not specified	the NCM value is not specified

The range of values are displayed in the output of the retrieve commands the same way as they were entered. The following are examples of outputs containing ranges of values.

```
rtrv-scr-blkdp:sr=iec:ni=240:nc=001:ncm=010&&018
```

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = BLOCKED DPC
SR  NI      NC      NCM      NSF1     NSR/ACT
IEC  240     001     010&&020 STOP     -----
```

```
rtrv-scr-sio:sr=iec:nic=1:si=1
```

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED SIO
SR  NIC  PRI  SI  H0      H1      NSF1     NSR/ACT
IEC  2    0&&2  1    08&&11  *      BLKDPC  WDB2
IEC  2    1    1    11     03&&07  DPC     ABC2
```

```
rtrv-scr-tt:all=yes
```

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED TT
SR  TYPE      NSF1     NSR/ACT
IEC  005&&010  STOP     -----
IEC  012      STOP     -----
IEC  016      CDPA     IEC
WRD2 243      STOP     -----
WRD4 *        STOP     -----
```

Use of the Asterisk “ * ” for the ZONE, AREA, ID, MSA, SSA, and SP Parameters

A range of values for an ITU-I or 24-bit ITU-N point code parameter can be specified using a combination of asterisks (*) and single values for the point code parameters. [Table 5: Valid Value Combinations for ITU-I Point Code Parameters](#) on page 27 shows the valid combinations of the ITU-I parameter values. [Table 6: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters](#) on page 27 shows the valid combinations of the 24-bit ITU-N parameter values.

Table 5: Valid Value Combinations for ITU-I Point Code Parameters

ZONE	AREA	ID
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

Table 6: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters

MSA	SSA	SP
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

Table 7: Valid Parameter Combinations for ITU-I Point Code Parameters on page 27 shows the valid combinations of the ITU-I point code parameters used with the retrieve commands when displaying ITU-I gateway screening entries.

Table 7: Valid Parameter Combinations for ITU-I Point Code Parameters

ZONE	AREA	ID
Single value	Single value	Single value, an asterisk, or the ID value not specified
Single value	An asterisk, or the AREA value is not specified	the ID value is not specified
An asterisk, or the ZONE value is not specified	the AREA value is not specified	the ID value is not specified

Table 8: Valid Parameter Combinations for 24-bit ITU-N Point Code Parameters on page 28 shows the valid combinations of the 24-bit ITU-N point code parameters used with the retrieve commands when displaying 24-bit ITU-N gateway screening entries.

Table 8: Valid Parameter Combinations for 24-bit ITU-N Point Code Parameters

MSA	SSA	SP
Single value	Single value	Single value, an asterisk, or the SP value not specified
Single value	An asterisk, or the SSA value is not specified	the SP value is not specified
An asterisk, or the MSA value is not specified	the SSA value is not specified	the SP value is not specified

User Interface Requirements

A screening table is created, modified, displayed and removed using these on-line commands. For more information on these commands, go to the *Commands Manual*.

- Screen Set – ent-scrset, chg-scrset, dlt-scrset, rtrv-scrset
- Allowed Originating Point Code – ent-scr-opc, chg-scr-opc, dlt-scr-opc, rtrv-scr-opc
- Blocked Originating Point Code – ent-scr-blkopc, chg-scr-blkopc, dlt-scr-blkopc, rtrv-scr-blkopc
- Allowed Service Information Octet – ent-scr-sio, chg-scr-sio, dlt-scr-sio, rtrv-scr-sio
- Allowed Destination Point Code – ent-scr-dpc, chg-scr-dpc, dlt-scr-dpc, rtrv-scr-dpc
- Blocked Destination Point Code – ent-scr-blkdpc, chg-scr-blkdpc, dlt-scr-blkdpc, rtrv-scr-blkdpc
- Allowed Affected Destination Field – ent-scr-destfld, chg-scr-destfld, dlt-scr-destfld, rtrv-scr-destfld
- Allowed ISUP/TUP Message Type – ent-scr-isup, chg-scr-isup, dlt-scr-isup, rtrv-scr-isup
- Allowed Calling Party Address – ent-scr-cgpa, chg-scr-cgpa, dlt-scr-cgpa, rtrv-scr-cgpa
- Allowed Called Party Address – ent-scr-cdpa, chg-scr-cdpa, dlt-scr-cdpa, rtrv-scr-cdpa
- Allowed Translation Type – ent-scr-tt, chg-scr-tt, dlt-scr-tt, rtrv-scr-tt
- Allowed Affected Point Code – ent-scr-aftpc, chg-scr-aftpc, dlt-scr-aftpc, rtrv-scr-aftpc
- Gateway Screening Stop Action Sets – chg-gws-actset, rtrv-gws-actset

Command Summary

This section briefly describes each type of command used in this chapter. There are four commands for each screening function. One to enter the screening information (`ent`), one to change the screening information after it has been entered (`chg`), one to delete screening information (`dlt`), and one to display the screening information (`rtrv`).

If the command is not accepted, a "Command Rejected" message is displayed. If the command is accepted, a time stamp and a "Command Completed" message is displayed. For example:

```
E2361 Cmd Rej: Screen set name not defined
```

or

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0  
ENT-SCR-OPC: MASP A - COMPLTD
```

Any time a screen set is affected by a command (for example, an entry is added to, removed from, or changed in the screen set) a "Screen Set Affected" message is displayed indicating the percentage of memory that screen set occupies (100% = the maximum space available). This information is useful in determining how "full" the screen set is at any given time. The percentages are calculated after the command is executed. For example, the output message, ENT-SCR-OPC: SCREEN SET AFFECTED - SS01 25% FULL, indicates that after an entry was added to screen set SS01 by the `ent-scr-opc` command, it occupied 25% of the maximum space available. The following is an example of the output that can be received when a screen set is affected.

```
Extended Processing Time Required -- Please Wait  
Notice: The number of screensets affected is 2.  
ENT-SCR-OPC: SCREEN SET AFFECTED - ss01 25% FULL  
ENT-SCR-OPC: SCREEN SET AFFECTED - ss04 35% FULL  
ENT-SCR-OPC: MASP A - COMPLTD
```

When a new screen set is created it immediately occupies space which may or may not be over the allowed limit. The user must know how much space has been occupied by the new screen set. For example, if the screen set SCR1 is created, the output of the `ent-scrset` command has the following format:

```
Extended Processing Time Required -- Please Wait  
Notice: The number of screensets affected is 1.  
ENT-SCRSET: SCREEN SET AFFECTED - scr1 95% FULL  
ENT-SCRSET: MASP A - COMPLTD
```

Note: A screen set can be over 100% full, but it is not recommended that the screen set remain in this condition. The gateway screening process will not function properly using a screen set that is over 100% full. Some entries must be removed from the screen set to reduce the screen set capacity to 100% or below.

Enter Commands

All of the parameters in the enter command are mandatory. If the enter command contains a screening reference that does not exist, a new screening table is created. If the screening reference exists, and an entry that matches the specified parameters does not already exist, a new entry is added to the screening table. If an entry exists already, the command is rejected.

Change Commands

At least one parameter must be changed in the change commands. Parameters that are considered part of the search key must be specified in every `chg` command (for example, the `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `npc`, `msa`, `ssa`, and `sp` parameters for the `chg-scr-opc` command). Each of these parameters has a corresponding "new" parameter (for example, `nni`, `nnc`, `nncm`, `nzone`, `narea`, `nid`, `nnpc`, `nmsa`, `nssa`, `nsp`) which may be specified in order to change the entry in the screening table. Parameters that are not part of the search key may be specified, but do not have "new" values. For example, the `nsfi`, `nsr`, `ri`, and `actname` parameters do not have "new" parameters (for example, `nnsfi`, `nnsr`, `nri`, or `nactname`). If a "new" parameter is not specified, it assumes the value of the corresponding search key parameter. For example, if the `nni` parameter is not specified, then the `ni` parameter does not change since the `nni` parameter assumes the value of the `ni` parameter. If, however, a "new" parameter is specified, it must follow the same rules as the search keys. For example, if the `nni` and `nncm` parameters are not specified, and the `nnc` parameter is specified as an "*" (asterisk), then the `ncm` parameter must be an "*" (asterisk). The new data must not already exist in the screening table. If an entry already exists which matches the new data, the command is rejected.

Delete Commands

The use of the asterisk value in a delete command implies the deletion of a specific entry containing that asterisk value, not the deletion of multiple entries whose values may be in the range implied by the asterisk. For example, entering `dlt-scr-opc:sr=opcl:ni=*:nc=*:ncm=*` cannot be used to remove all entries in `opcl`.

When the last entry is deleted from a screening table, the entire table is deleted, unless it is referenced by another screening table. If a screening table is referenced and an attempt is made to delete the last entry in the screening table, an error message is displayed.

Retrieve Commands

The retrieve commands for each screening function have the same parameters as the enter commands with an additional parameter called `all`. The `all` parameter defaults to `no`, and can only be specified if no other parameters are specified. If the `all` parameter is specified and is `yes`, then a detailed output consisting of every entry in each rule of the indicated screening function type is displayed. There are no rules associated with parameter combinations (for example, if the `nc` parameter is equal to `*` then the `ncm` parameter must be "*"). If an entry is specified using a "*", then only the entries where that parameter is a "*" is output.

If the `NSFI` has a value other than `STOP` or `FAIL`, then the name of the screening reference to be used in the next step of the gateway screening process (`NSR`) must be specified. The value of the `NSR` is shown in the `NSR/ACT` field.

If the `NSFI` is `STOP`, no `NSR` value can be specified. The gateway screening stop action sets can be specified with the `actname` parameter if the `NSFI` is `STOP`. If a gateway screening stop set has been assigned to the screen, the `NSR/ACT` field shows the name of the gateway screening stop action set. for more information on the gateway screening stop action sets, go to the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure.

If the `NSFI` is `FAIL` or `STOP` and no `NSR` or `ACTNAME` value is assigned to the screen, the entry ----- is shown in the `NSR/ACT` field.

The following is an example of a detailed output using the `rtrv-scr-opc` command with the `all=yes` parameter specified.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED OPC
SR      NI      NC      NCM      NSF1     NSR/ACT
IEC     240      001     010&&200 STOP     -----
IEC     241      *      *      CGPA     cg04
SR      ZONE   AREA   ID      NSF1     NSR/ACT
IEC     1       003    4      BLKOPC   blk1
IEC     1       003    5      STOP     COPY
SR      NPC
IEC     00235
IEC     00240
SR      NI      NC      NCM      NSF1     NSR/ACT
WRD2    243      015&&075 *      STOP     RDCT
WRD3    243      105     002     CGPA     WRD4
SR      NPC
WRD4    00245
WRD4    00247
STOP     CR
```

For the `rtrv-scrset:all=yes` command, the output consists of every screen set and every screening table in each screen set, in addition to the fields displayed from the `rtrv-scrset` command with no parameters. The following is an example of the detailed output of the `rtrv-scrset:all=yes` command.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCRN   NSF1     NSR/ACT  RULES  DESTFLD
SS01   OPC      IEC      120    Y
      DPC      GOOP     33
      SIO      WRD1     5
SS02   STOP     -----  0      Y
SS03   DPC      WRD1     56     Y
      SIO      WRD2     10
      BLKDPC  WRD5     30
```

Parameters that are not specified default to “all possible values” for that parameter. If no parameters are specified (except for the `rtrv-scrset` command), a summary output is displayed. A summary output consists of three columns of information, the screening references for the specified screen (SR), and an indicator of whether the screen table is referenced or not (REF), and the number of entries in the screening reference (RULES). The following is an example of a summary output using the `rtrv-scr-opc` command with no parameters.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED OPC
SR      REF  RULES
IEC     YES   2
WRD2    YES   1
WRD3    NO    4
WRD4    YES   9
```

For the `rtrv-scrset` command, if no parameters are specified, the output displays the following information.

- The capacity of the gateway screening database, as a percentage of the maximum capacity
- The percentage of the maximum number of the CDPA and AFTPC tables
- The total number of screen sets in the database with the percentage of the screen set capacity

- The number of SEAS and EAGLE 5 ISS screen sets being used
- The screen set name (SCRN)
- The next screening function that should be used in the gateway screening process (NSFI)
- The next screening reference or the gateway screening stop action set name (NSR/ACT)
- The memory capacity (percentage) of each screen set (FULL)
- The number of entries (rules) in the screen set (RULES)
- The number of tables in the screen set (TABLES)
- Whether the automatic allowed affected destination screening (DESTFLD) for network management messages is applied against the routing table, self point codes, and capability point codes. When this parameter is on, the automatic screening is applied at the end of the provisioned screen set.

The following is an example of the output of the `rtrv-scrset` command with no parameters.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
ENTIRE GWS DATABASE IS 1% FULL
CDPA + AFTPC TABLES ARE 1% FULL
SCREEN SET TABLE IS (7 OF 255) 2% FULL
THERE ARE 0 SEAS SCREEN SETS USED ( prefix 00nn )
THERE ARE 7 EAGLE SCREEN SETS USED

SCRN  NSFI    NSR/ACT  FULL  RULES  TABLES  DESTFLD
ss01  OPC     opc1    51%  2075   22       Y
ss02  OPC     opc2     2%   75     22       Y
ss03  OPC     opc3     2%   75     22       Y
ss04  OPC     opc1    51%  2075   22       N
ss07  OPC     opc1    51%  2075   22       Y
ss09  OPC     opc1    51%  2075   22       N
ss28  OPC     opc1    51%  2075   22       Y
```

The outputs of the retrieve commands contains the following fields. There are certain fields that are used with specific commands and these are noted in the description of the field.

AREA – The area value of an ITU international point code, expressed as zone-area-id. This field is used with all screening functions except screen set, allowed SIO, and allowed TT screening functions.

DESTFLD – Whether the automatic allowed affected destination screening for network management messages is applied against the routing table, self point codes, and capability point codes. When this parameter is on, the automatic screening is applied at the end of the provisioned screen set. This field is only used with the screen set function.

FULL – The capacity of allowed memory a given screen set occupies, expressed as percentage. This field is only used with the screen set function.

H0 – The H0 heading code in the service information field. The H0 field shows the first four bits of the message type indicator in the SIO field. This field is only used with the allowed SIO screening function.

H1 – The H1 heading code in the service information field. The H1 field shows the last four bits of the message type indicator in the SIO field. This field is only used with the allowed SIO screening function.

ID – The ID value of an ITU international point code, expressed as zone-area-id. This field is used with all screening functions except screen set, allowed SIO, and allowed TT screening functions.

ISUPMT/TUPMT – The ISUP message type (**ISUPMT**) in the service information field of an ISUP message or the TUP message type (**TUPMT**) in the service information field of a TUP message. This field is used only with allowed ISUP screening functions.

MSA – The main signaling area value of a 24-bit ITU national point code, expressed as `msa-ssa-sp`. This field is used with all screening functions except screen set, allowed SIO, and allowed TT screening functions.

NC – The network cluster of an ANSI point code, expressed as `ni-nc-ncm`. This field is used with all screening functions except screen set, allowed SIO, and allowed TT screening functions.

NCM – The network cluster member of an ANSI point code, expressed as `ni-nc-ncm`. This field is used with all screening functions except screen set, allowed SIO, and allowed TT screening functions.

NI – The network identifier of an ANSI point code, expressed as `ni-nc-ncm`. This field is used with all screening functions except screen set, allowed SIO, and allowed TT screening functions.

NIC – The network indicator code in the service information octet. This field is only used with the allowed SIO screening function.

NPC – The ITU national point code. This field is used with all screening functions except screen set, allowed SIO, and allowed TT screening functions.

NSFI – The next screening function identifier. The next screening function identifier specifies the next screening function that should be used in the gateway screening process. This field is used with all screening functions.

NSR/ACT – The next screening reference or the gateway screening stop action set name. The next screening reference is the name of the of the next gateway screening entity that should be used in the screening process. The gateway screening stop action set name is the name of the gateway screening stop action set assigned to the screen defining the additional action to be performed on the MSU that passes gateway screening. This field is used with all screening functions.

PRI – The priority of a message in the service information octet. This field is only used with the allowed SIO screening function.

REF – An indicator of whether the specified screening table is referenced by another screening table. This field is used with the summary outputs of all retrieve commands except the retrieve screen set (`rtrv-scrset`) command.

RI – The routing indicator in the called party address (CDPA). This field is only used with the allowed CGPA screening function.

RULES – The number of entries in the screen. This field is only used with the screen set function.

SCCPMT – The SCCP message type. This field is only used with the allowed calling party address function.

SCMGFID – The SCCP management (SCMG) format ID, which defines the function and format of each SCMG message. This field is only used with the allowed called party address function.

SCRN – The name of the screen set. This field is only used with the screen set function.

SI – The service indicator for the service information octet, which are the last two bits of the subservice field. This field is only used with the allowed SIO screening function.

SP – The signaling point value of a 24-bit ITU national point code, expressed as `msa-ssa-sp`. This field is used with all screening functions except screen set, allowed SIO, and allowed TT screening functions.

SR – The name of the screening reference. This field is used with all screening functions except the screen set screening function.

SSA – The sub-signaling area value of a 24-bit ITU national point code, expressed as `msa-ssa-sp`. This field is used with all screening functions except screen set, allowed SIO, and allowed TT screening functions.

SSN – The subsystem number of a given point code. This field is only used with the allowed CGPA, allowed CDPA, and allowed AFTPC screening functions.

TABLES – The number of tables in the screen. This field is only used with the screen set function.

TYPE – The translation type that is allowed for global title translation. This field is only used with the allowed TT screening function.

ZONE – The zone value of an ITU international point code, expressed as `zone-area-id`. This field is used with all screening functions except screen set, allowed SIO, and allowed TT screening functions.

The ITU international and 14-bit ITU national spare point codes are displayed in the output of the Gateway Screening retrieve commands with the spare point code subtype prefix “s-”.

14-Bit ITU National Point Code Formats

Gateway screening only allows 14-bit ITU national point codes to be provisioned in the database by the enter, delete, or change gateway screening commands, and displayed by the gateway screening retrieve commands as a single number. If a format other than a single number (14-0-0-0) for the 14-bit ITU national point code has been defined by the `npcfmt i` parameter of the `chg-stpopts` command, the 14-bit ITU national point code must be converted into a single number so that it can be used by gateway screening.

For example, the format of the 14-bit ITU national point code is 4-4-4-2 and the user would like to add point code value 7-7-7-1 into the allowed OPC screen. The point code value 7-7-7-1 would have to be converted to a single number so that the point code can be added to the allowed OPC screen. To determine what multiple part 14-bit ITU national point code is represented by the single number 14-bit ITU national point code in the gateway screening table, the single number point code must be converted to a multiple part point code.

To convert a single number 14-bit ITU national point code to a multiple part point code, perform the [Converting Single Number 14-Bit ITU National Point Codes](#) on page 34 procedure.

To convert a multiple part 14-bit ITU national point code to a single number point code, perform the [Converting Multiple Part 14-Bit ITU National Point Codes](#) on page 35 procedure.

For a definition of the different formats that can be used for 14-bit ITU national point codes, see the 14-Bit ITU National Point Code Formats section in Chapter 2, Configuring Destination Tables in the *Database Administration Manual - SS7*.

Converting Single Number 14-Bit ITU National Point Codes

To convert a single number 14-bit ITU national point code to a multiple part 14-bit ITU national point code, perform these steps. To make this conversion, you will need to know the format of the 14-bit ITU national point code. This can be verified in the `NPCFMTI` field of the `rtrv-stpopts`

command output. For this example, the 14-bit ITU national point codes 14781 and 695 are converted to point codes using the 3-8-3-0 format.

1. The point code is converted to a binary number.

This can be done with most scientific calculators.

- a) The number 14781 converts to the binary number 11100110111101.
- b) The number 695 converts to the binary number 1010110111.

Note: Make sure the binary number contains 14 digits. If it does not, add leading zeros to the binary number to bring the total number of digits in the number to 14.

In this example, the binary equivalent for the decimal number 695 (1010110111) contains 10 digits, so four zeros must be added to the beginning of the binary number. The resulting binary number is now 00001010110111.

2. Divide the binary number into the number of parts required by the format of the 14-bit ITU national point code.

For this example, the format is 3-8-3-0. Since the last part of the point code format is 0, the point code format contains only three parts. Divide the point code into three parts, the first part of the point code contains the first three digits of the 14-digit binary number, the second part of the point code contains the next eight digits of the 14-digit binary number, and the third part of the point code contains the last three digits of the 14-digit binary number.

For this example, the binary numbers would be divided like this:

- a) 11100110111101 = 111 00110111 101
- b) 00001010110111 = 000 01010110 111

3. Convert each part of the point code into a decimal number using the same scientific calculator used in step 1 and separate each part of the point code with dashes.

The results are as follows.

- a) 111 00110111 101 = 7-55-5
- b) 000 01010110 111 = 0-86-7

When the 14-bit ITU national point codes are converted from single numbers to multiple part point codes, the resulting value of the multiple part point code depends on the point code format specified by the `npcfmt i` parameter of the `chg-stpopts` command. When converting the single number point code 14781 to the point code format 3-8-3-0, the resulting point code value is 7-55-5. If point code 14781 is converted to the point code format 4-4-4-2, the resulting point code value is 14-6-15-1.

Converting Multiple Part 14-Bit ITU National Point Codes

To convert multiple part 14-bit ITU national point codes to a single number, perform these steps. To make this conversion, you will need to know the format of the 14-bit ITU national point code. This can be verified in the `NPCFMT I` field of the `rtrv-stpopts` command output. For this example, the 14-bit ITU national point codes 7-55-5 and 0-86-7, using the 3-8-3-0 point code format, are converted into a single number.

1. Convert each part of the point code into a binary number using a scientific calculator.

The results are as follows.

- a) 7-55-5 = 111 00110111 101
 - b) 0-86-7 = 000 01010110 111
2. Combine each part of the point code into a single binary number as follows.
- a) 111 00110111 101 = 11100110111101
 - b) 000 01010110 111 = 00001010110111

Note: If the binary number has any zeros at the beginning of the number, remove these zeros as they are not necessary.

In this example, the binary equivalent for the point code 0-86-7 (00001010110111) contains four zeros at the beginning of the binary number. When the leading zeros are removed from the binary number, the resulting binary number is now 1010110111.

3. Convert the binary number to a decimal number using the same scientific calculator used in step 1.
- a) The binary number 11100110111101 converts to the decimal number 14781.
 - b) The binary number 1010110111 converts to the decimal number 695.


Gateway Screening Using Duplicate ITU National Point Codes

Note: The Duplicate ITU National Point Code feature applies only to 14-bit ITU national point codes.

Gateway screening does not support the Duplicate ITU National Point Code Support feature. The point code value specified with the `npc` parameter can only be a 5-digit number and cannot contain any group code values. However, by assigning a different screenset to the linksets that have different group codes, you can screen on ITU national point codes that have group codes assigned to them. The screenset is assigned to the linkset with the `scrn` parameter of either the `ent-ls` or `chg-ls` command.

For example, in the network in [Figure 3: Sample Network Showing Gateway Screening Using Duplicate ITU National Point Codes](#) on page 36, if you want to screen out MSUs coming from OPC 6217 in group GE, but allow MSUs coming from OPC 6217 in group FR, you could assign different screensets to linksets LSB1 and LSB2. The screenset assigned to linkset LSB1 would allow MSUs from OPC 6217. The screenset assigned to linkset LSB2 would block MSUs from OPC 6217.

Figure 3: Sample Network Showing Gateway Screening Using Duplicate ITU National Point Codes

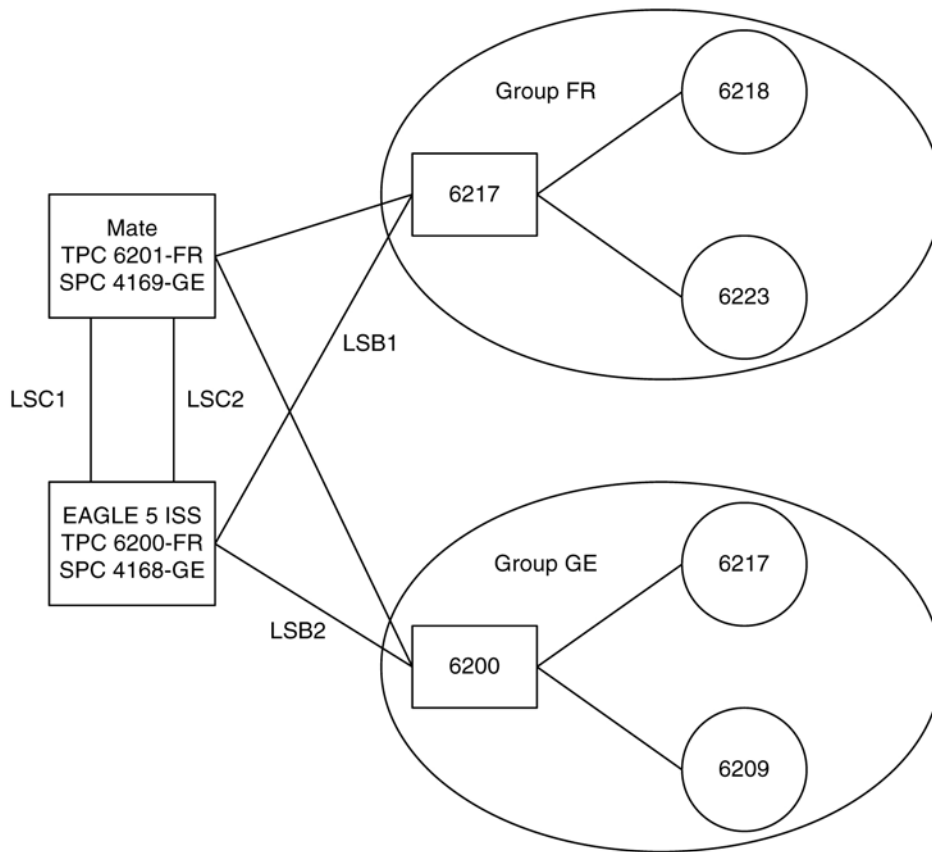

Gateway Screening Configuration

Gateway screening can be configured in a variety of ways, depending on the criteria you wish to screen the messages for. The examples used in these procedures are based on seven example configurations ([Figure 5: Gateway Screening Configuration - Example 1](#) on page 42 through [Figure 11: Gateway Screening Configuration - Example 7](#) on page 51). Each example configuration shows the screening order used by the EAGLE 5 ISS, with the screening criteria for each screen, and the order that these screens are added to the database to achieve the screening order, with the command entry required to enter the screening criteria into the database.

Each procedure adding a gateway screening entity to the database contains a table showing the parameters and the data used for the command examples.

Note: The gateway screening rules table can contain a maximum of 362,700 rules.

The EAGLE 5 ISS can contain a maximum of 255 screen sets.

Each screen set can contain a maximum of 4,000 rules, however the total number of rules contained in all the screen sets cannot exceed 362,700.

These general rules apply to configuring gateway screening entities in the database. Each procedure contains any rules that are specific to that procedure.

1. The gateway screening feature must be turned on before gateway screening entities can be added to the database.

Verify this by entering the `rtrv-feat` command. If the gateway screening feature is off, it can be turned on by entering the `chg-feat:gws=on` command.

Note: Once the gateway screening feature is turned on with the `chg-feat` command, it cannot be turned off

2. A TSM running the GLS application must be configured in the database with the `ent-card:type=tsm:appl=gl:loc=<TSM Card Location>` command.

Verify this with the `rtrv-card` command.

3. Changing or removing an existing gateway screening entity will change the screening order for the messages on the linkset.

Verify the new screening order before changing or removing any gateway screening entities.

4. If the screen set being added to the database, includes existing screening references, messages in the linkset being screened will be screened against all entries in those screening references.

This could allow a message into the EAGLE 5 ISS that was not supposed to be allowed in, or a message blocked from the EAGLE 5 ISS that is supposed to be allowed in. Verify the contents of existing screening references to make sure that you want all messages in the linkset screened against all entries in the existing screening references.

5. The gateway screening entity specified by the `nsfi` and `nsr` parameters must be in the database.
6. If the `nsfi` and `nsr` parameters do not reference an existing screening entity, the `nsfi` parameter must be set to `stop` and the `nsr` parameter cannot be specified.

When the `nsfi` parameter is set to `stop`, the gateway screening process stops at the specified screen.

7. The `actname` parameter, specifying the gateway screening stop action set assigned to the screen, can only be specified with the `nsfi=stop` parameter.



CAUTION

CAUTION: When Gateway Screening is in the screen test mode, as defined by the linkset parameters `gwsa=off` and `gws=on`, any action in the gateway screening stop action set specified by the `actname` parameter at the end of the gateway screening process will be performed.

8. The word `SEAS` cannot be used as a value for the `scrn` parameter of the `ent-scrset`, `dlt-scrset`, and `chg-scrset` commands.

The word `SEAS` is used in the `rtrv-ls` command output, in the `SCRN` field, to show gateway linksets created on the SEAS interface. A gateway linkset can only be configured from a SEAS terminal and not from an EAGLE 5 ISS terminal. Gateway linksets can only be displayed from the SEAS interface.

9. When removing gateway screening entities from the database, the specified entity cannot be removed if it is referenced by other gateway screening entities.

If it is referenced by other gateway screening entities, either the `nsfi` parameter in those gateway screening entities must be changed to `stop`, or the `nsfi` and `nsr` parameters in the those gateway screening entities must be changed to reference other gateway screening entities.

10. Point code values containing all zeros, shown in the following list, cannot be specified for any gateway screening command:
 - ANSI Point Code - 000-000-000
 - ITU-I Point Code - 0-000-0
11. For example, the 14-bit ITU national point code 1 ($npc=1$) and the 24-bit ITU national point code 000-000-001 ($msa=0, ssa=0, sp=1$) cannot be specified for the same screening reference as both of these point codes have the same internal value. This would also apply to using the asterisk as a point code value. The $npc=*$ and the $msa=*, ssa=*, sp=*$ parameters cannot be specified in the same screening reference.
12. If the last entry in the specified screening reference is removed from the database, the screening reference is removed from the database.

If an attempt is made to display that specified screening reference name (for example, entering the `rtrv-scr-opc:sr=iec` command after removing the last entry in the allowed OPC screen IEC), the following error message is displayed showing that the specified screening reference name could not be found in the database.

```
E2573 Cmd Rej: SR or NSR does not reference an existing SR
```

13. The EAGLE 5 ISS screens messages in a hierarchical fashion.

For example, allowed OPC screens are checked before blocked OPC screens; blocked OPC screens are checked before allowed SIO screens, and so on. The gateway screening entities must be entered in reverse of the order that the screening process takes place (see [Figure 4: The Gateway Screening Process](#) on page 40). To add gateway screening entities into the database, the first entity to be entered must be the entity that you want to stop screening the message on. The other entities follow in the proper order and the screen set is the last entity to be added into the database. The screen set entity must be in the database for gateway screening to take place. [Table 9: Gateway Screening Process and Provisioning Order](#) on page 39 shows the order of the MTP gateway screening process and the SCCP gateway screening process and the order that these gateway screening entities must be entered into the database.


Table 9: Gateway Screening Process and Provisioning Order

MTP Gateway Screening Order		SCCP Gateway Screening Order	
Screening Order	Order of Entry into the Database	Screening Order	Order of Entry into the Database
1. Screen Set	1. Allowed DESTFLD	1. Screen Set	1. Allowed AFTPC
2. Allowed OPC	or Allowed ISUP*	2. Allowed OPC	2. Allowed CDPA
3. Blocked OPC	2. Blocked DPC	3. Blocked OPC	3. Allowed TT
4. Allowed SIO	3. Allowed DPC	4. Allowed SIO	4. Allowed CGPA
5. Allowed DPC	4. Allowed SIO	5. Allowed DPC	5. Blocked DPC
6. Blocked DPC	5. Blocked OPC	6. Blocked DPC	6. Allowed DPC
7. Allowed DESTFLD	6. Allowed OPC	7. Allowed CGPA	7. Allowed SIO

or Allowed ISUP*	7. Screen Set	8. Allowed TT 9. Allowed CDPA 10. Allowed AFTPC	8. Blocked OPC 9. Allowed OPC 10. Screen Set
* The allowed ISUP screen can contain ISUP and TUP message types.			

Using the `ent-ls` or `chg-ls` commands, the screen set can then be assigned to a linkset and all messages on that linkset are screened for acceptance into the network.

Figure 4: The Gateway Screening Process

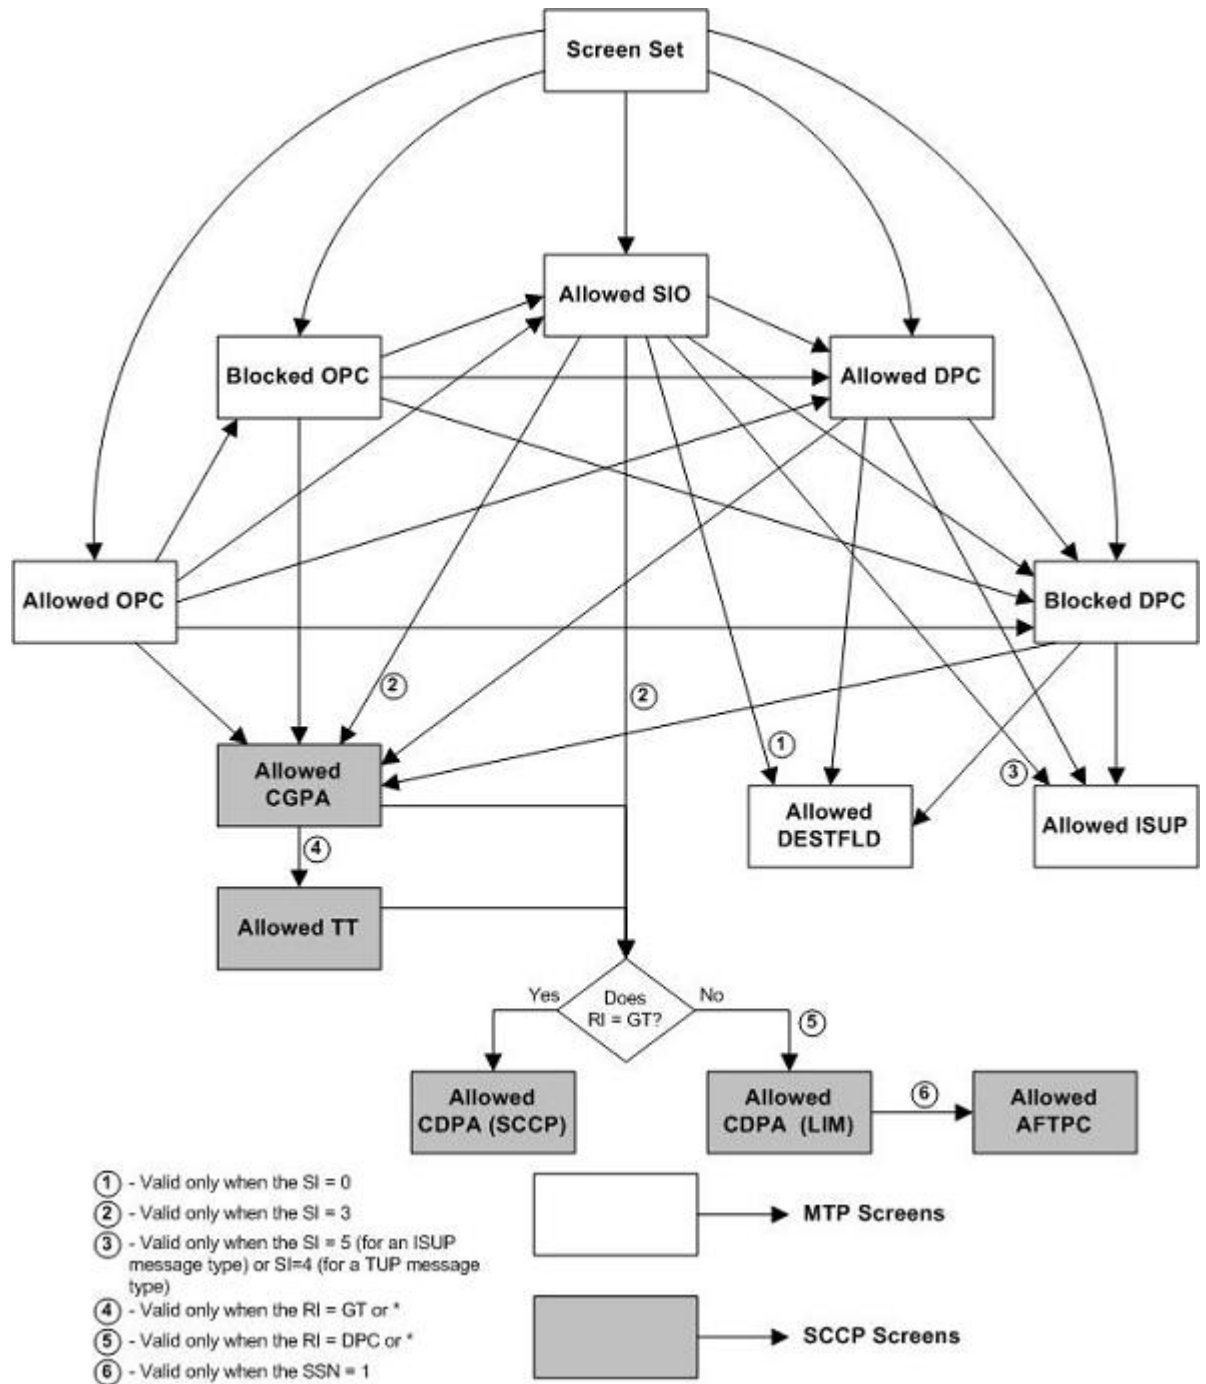


Gateway Screening Configuration Examples

Example 1

Example 1 screens the messages in a linkset for the following criteria. [Figure 5: Gateway Screening Configuration - Example 1](#) on page 42 shows the screening order the EAGLE 5 ISS uses and the order that the screens must be entered into the database.

- Allow into the EAGLE 5 ISS messages containing the following items
 - The OPC 001-001-001
 - The DPC 003-003-003
 - The calling party address (CGPA) 006-006-006, with the subsystem number of 253 and the routing indicator (*ri*) of *dpc* and the SCCP message type of UDT
 - The called party address (CDPA) 003-003-003 with the subsystem number of 001, and the SCMG format ID of 050
 - The allowed affected point code (AFTPC) of 008-008-008 with the subsystem number of 250
- Block from the EAGLE 5 ISS messages containing these items
 - The OPC 001-002-002
 - The DPC 004-004-004
- The message that passes the gateway screening criteria is copied for the STPLAN application (specified with the *actname* parameter and the name of the gateway screening stop action set containing the *COPY* gateway screening stop action).

Figure 5: Gateway Screening Configuration - Example 1

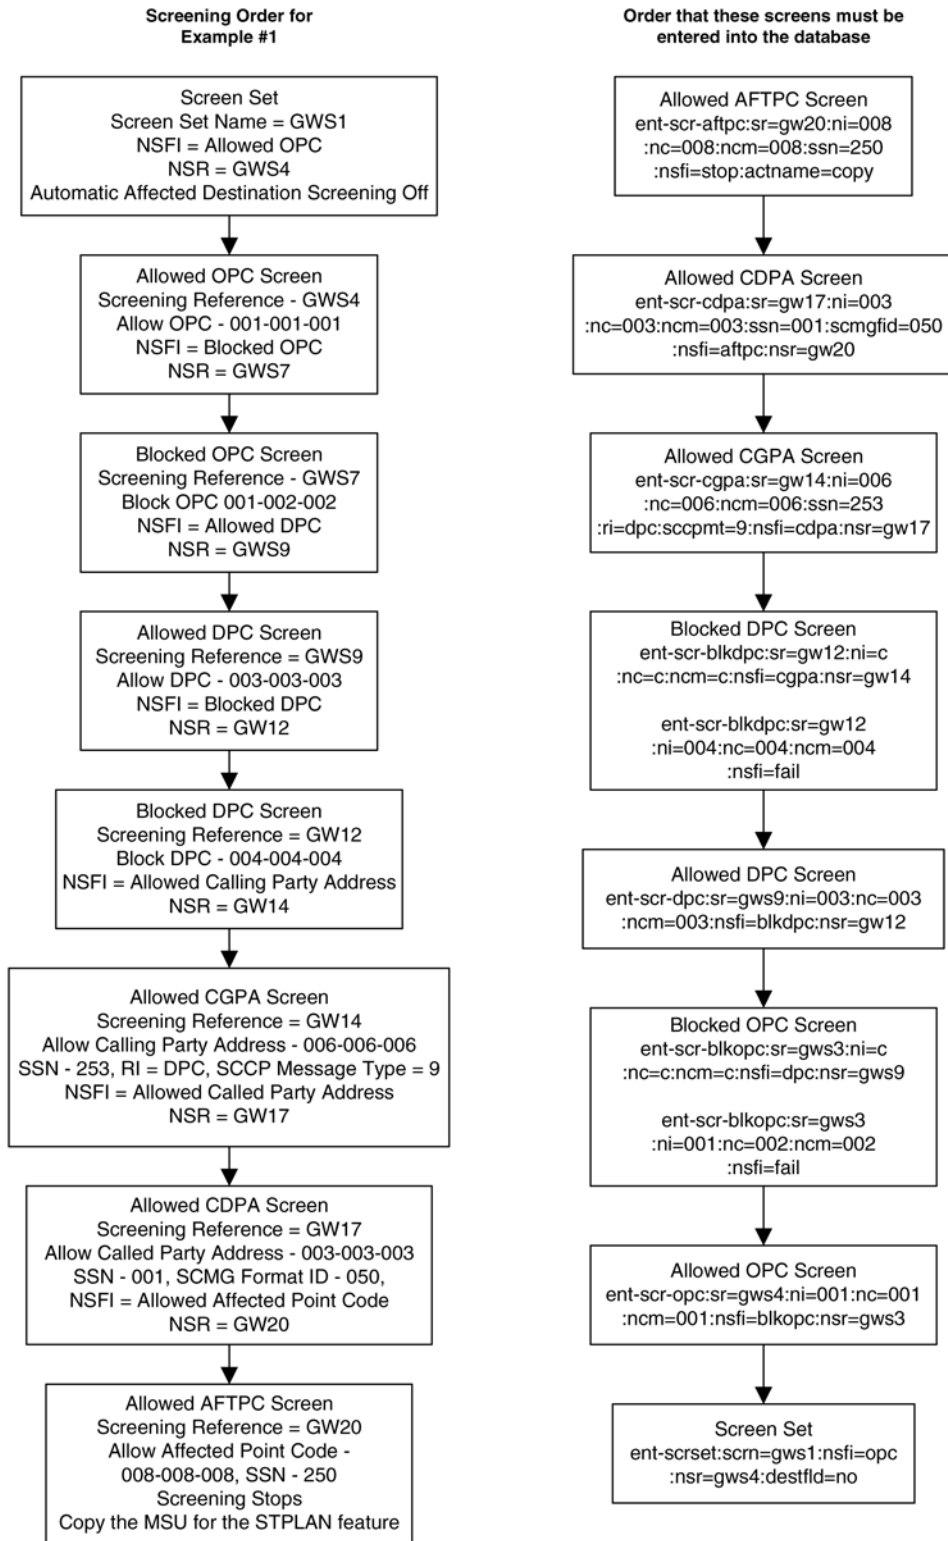

Example 2

Example 2 screens the messages in a linkset for the following criteria. [Figure 6: Gateway Screening Configuration - Example 2](#) on page 44 shows the screening order the EAGLE 5 ISS uses and the order that the screens must be entered into the database.

- Allow messages containing the following items into the EAGLE 5 ISS

The following SIO information:


- The network indicator code of 2 (`nic=2`)
- The service indicator of 3 (`si=3`)
- Message priorities ranging from 1 to 3 (`:pri=1&&3`)

The calling party address (CGPA) 7-100-4, with the subsystem number of 254 and the routing indicator (`ri`) of *, and the SCCP message type of UDT5

The called party address (CDPA) 5-117-2 with the subsystem number of 254

- Block messages containing the OPC 4-250-3 from the EAGLE 5 ISS

Figure 6: Gateway Screening Configuration - Example 2

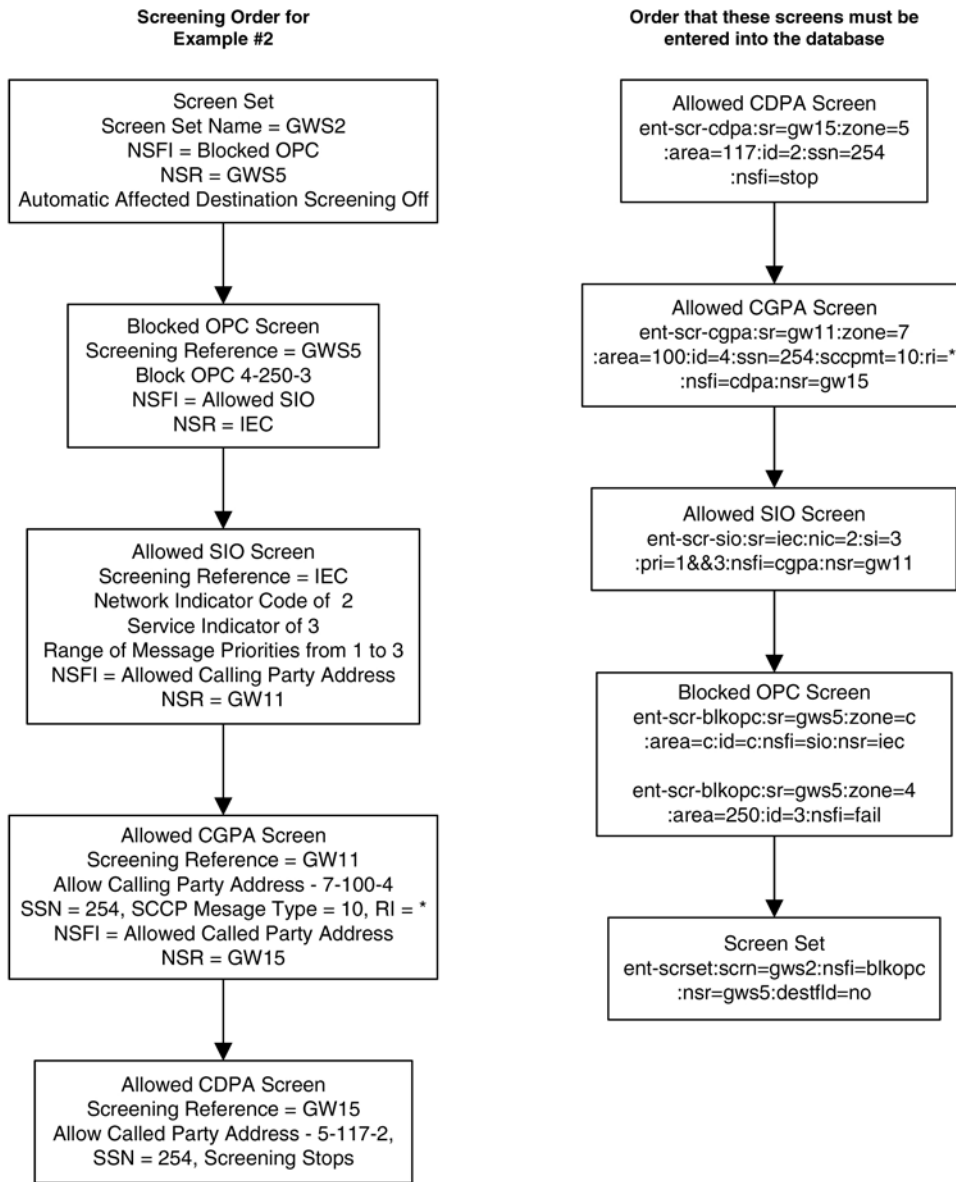

Example 3

Example 3 screens the messages in a linkset for the following criteria. [Figure 7: Gateway Screening Configuration - Example 3](#) on page 46 shows the screening order the EAGLE 5 ISS uses and the order that the screens must be entered into the database.

- Allow into the EAGLE 5 ISS messages containing the following items

The DPCs from 070-070-025 to 070-070-135


The calling party address (CGPA) 007-007-007, with the subsystem number of 250 and the routing indicator (ri) of gt and the SCCP Message type of XUDT

The translation type (TT) 250

The called party address (CDPA) 006-006-006 with the subsystem number of 253

- Block messages containing the DPC 005-005-005 from the EAGLE 5 ISS
- Automatic Destination Field screening is on.

Figure 7: Gateway Screening Configuration - Example 3

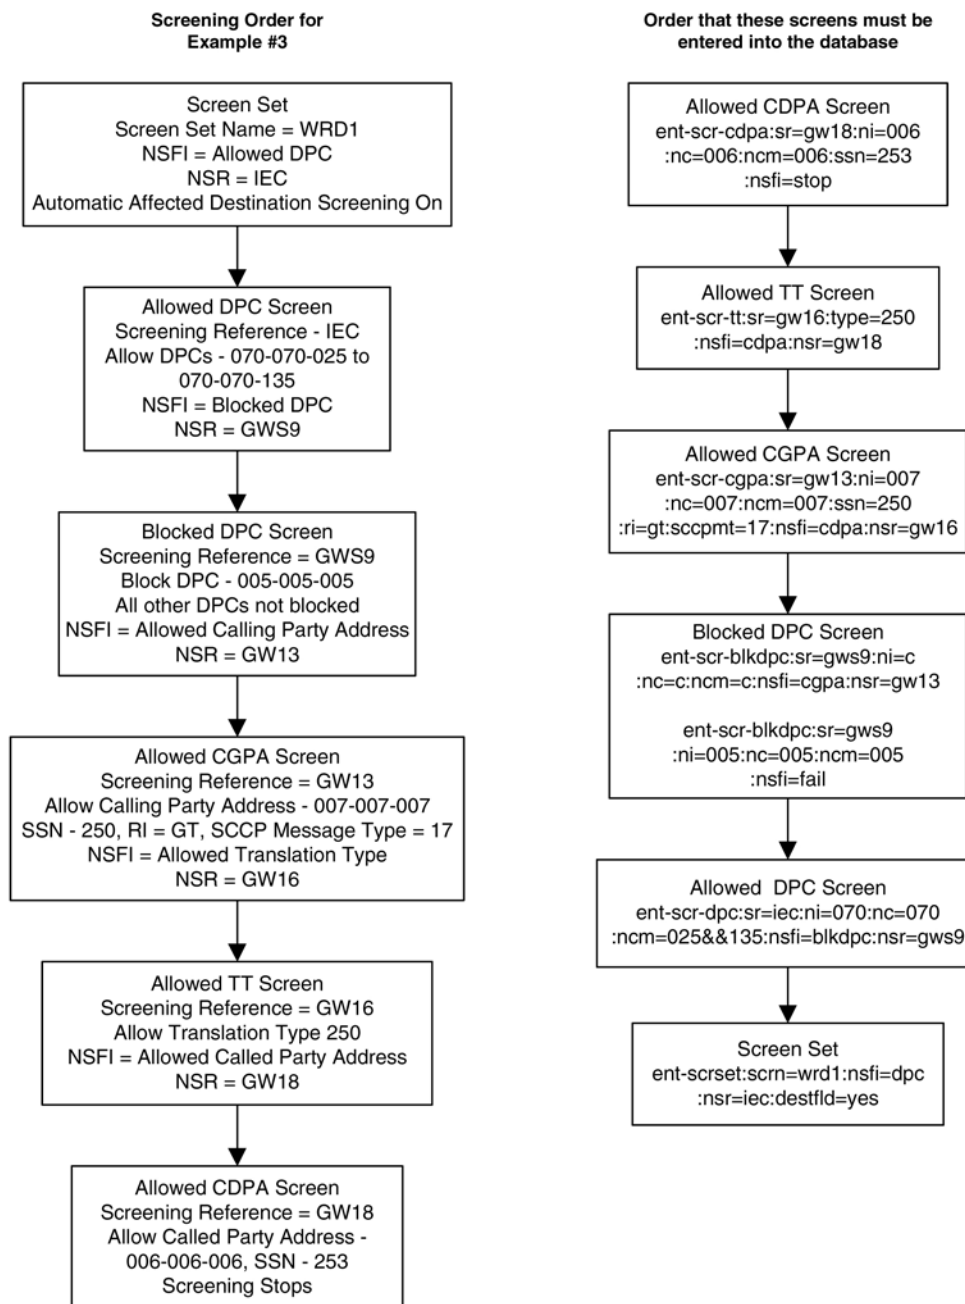

Example 4

Example 4 screens the messages in a linkset for the following criteria. [Figure 8: Gateway Screening Configuration - Example 4](#) on page 47 shows the screening order the EAGLE 5 ISS uses and the order that the screens must be entered into the database.

- Allow messages containing the following items into the EAGLE 5 ISS

The following SIO information:


- The network indicator code of 2 (*nic=2*)
- The service indicator of 3 (*si=3*)
- Message priority of 3 (*pri=3*)

The called party address (CDPA) 007-007-007 with the subsystem number of 001 and SCMG format ID of 100

The allowed affected point code (AFTPC) of 010-010-010 with the subsystem number of 015

- The message that passes the gateway screening criteria is copied for the STPLAN application (specified with the *actname* parameter and the name of the gateway screening stop action set containing the *COPY* gateway screening stop action).
- Automatic Destination Field screening is on.

Figure 8: Gateway Screening Configuration - Example 4

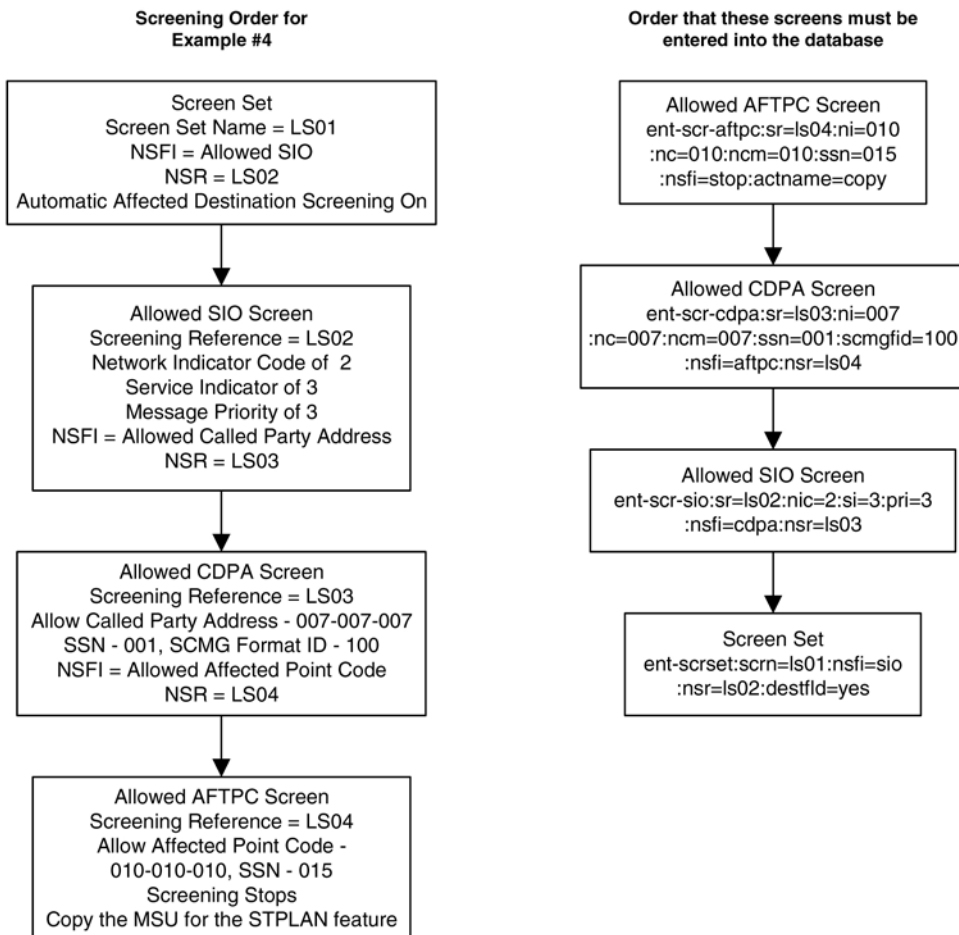

Example 5

Example 5 screens the messages in a linkset for the following criteria. *Figure 9: Gateway Screening Configuration - Example 5* on page 48 shows the screening order the EAGLE 5 ISS uses and the order that the screens must be entered into the database.

- Allow into the EAGLE 5 ISS messages containing the following items

The OPC 010-010-010


The following SIO information:

- The network indicator code of 2 (`nic=2`)
- The service indicator of 0 (`si=0`)
- Heading code 0 of 4 (`h0=4`)
- Heading code 1 of 5 (`h1=5`)
- Message priority of 3 (`pri=3`)

The allowed affected destination field (DESTFLD) of 100-100-100

- Block messages containing the OPC 020-020-020 from the EAGLE 5 ISS
- The message that passes the gateway screening criteria is copied for the STPLAN application and is redirected for the gateway screening redirect function (specified with the `actname` parameter and the name of the gateway screening stop action set containing the `COPY` and `RDCT` gateway screening stop actions).

Figure 9: Gateway Screening Configuration - Example 5

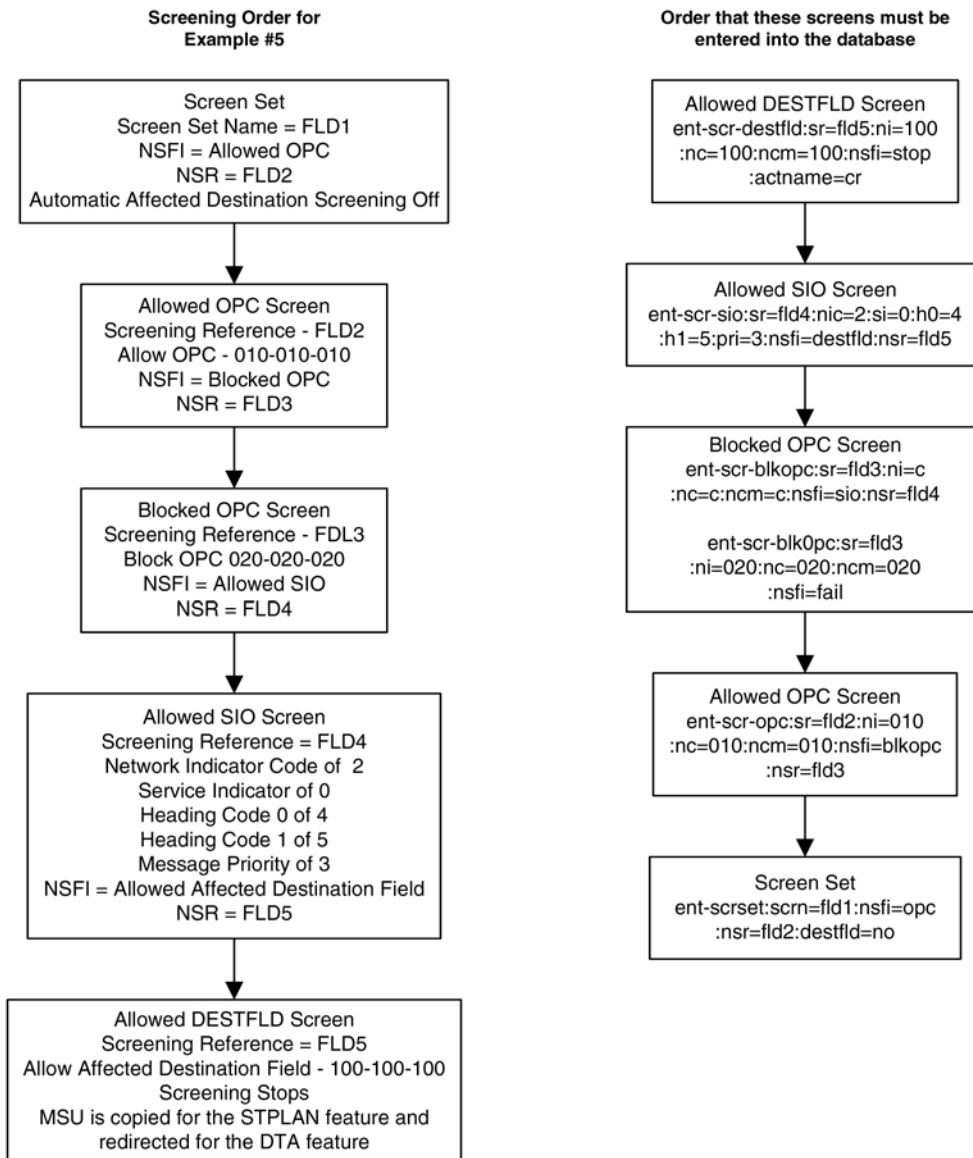

Example 6

Example 6 screens the messages in a linkset for the following criteria. [Figure 10: Gateway Screening Configuration - Example 6](#) on page 50 shows the screening order the EAGLE 5 ISS uses and the order that the screens must be entered into the database.

- Allow into the EAGLE 5 ISS messages containing the following items

The OPC 015-015-015


The following SIO information:

- The network indicator code of 2 (*nic=2*)
- The service indicator of 5 (*si=5*)
- Message priority of 3 (*pri=3*)

The allowed ISUP message type (ISUP) of 135

- Block messages containing the OPC 025-025-025 from the EAGLE 5 ISS
- The message that passes the gateway screening criteria is copied for the STPLAN application and is redirected for the gateway screening redirect function (specified with the `actname` parameter and the name of the gateway screening stop action set containing the `COPY` and `RDCT` gateway screening stop actions).

Figure 10: Gateway Screening Configuration - Example 6

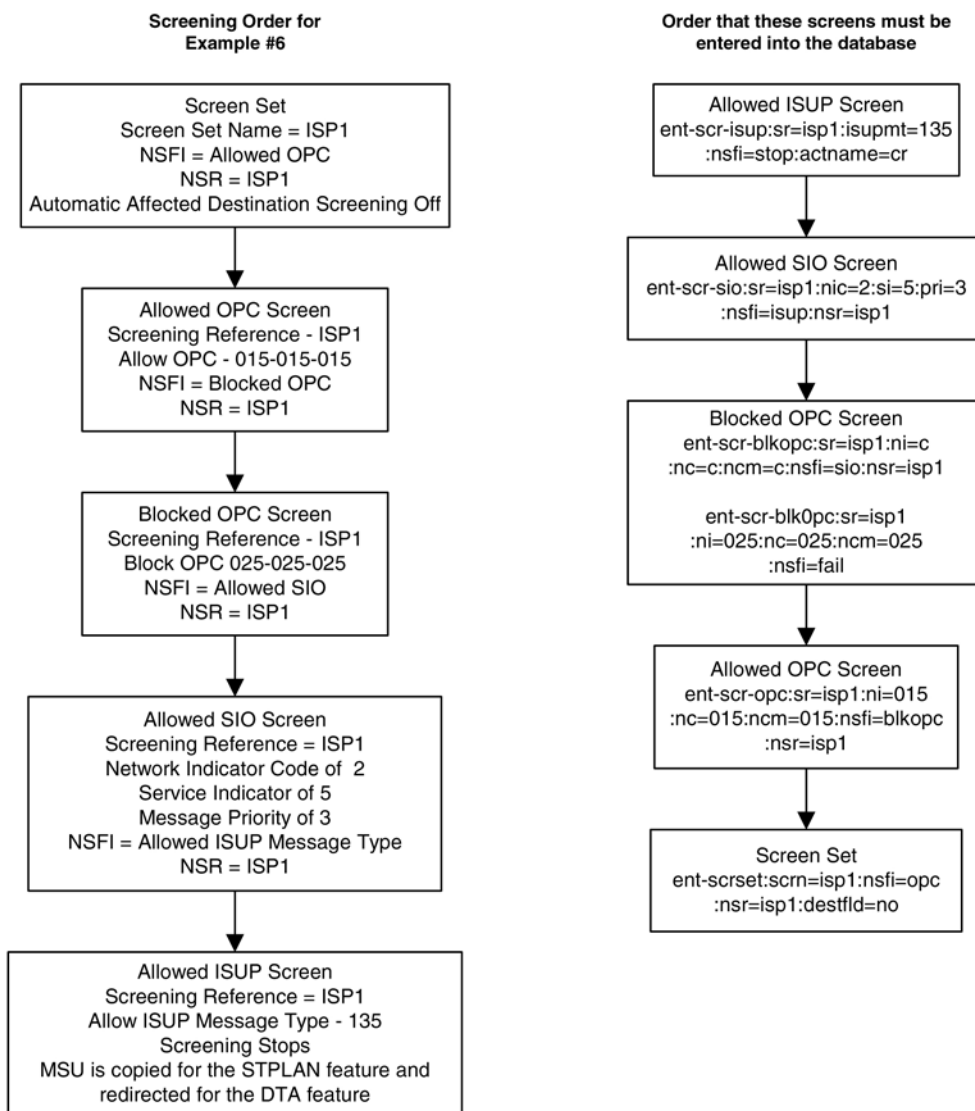


Example 7

Example 7 screens the messages in a linkset for the following criteria. [Figure 11: Gateway Screening Configuration - Example 7](#) on page 51 shows the screening order the EAGLE 5 ISS uses and the order that the screens must be entered into the database.

- Allow into the EAGLE 5 ISS messages containing the following items:

- TUP messages containing these items:
 - The OPC 017-017-017
 - The DPC 050-034-049
 - The following SIO information:
 - The network indicator code of 2 (`nic=2`)
 - The service indicator of 4 (`si=4`)
 - Message priority of 3 (`pri=3`)
 - The allowed TUP message type of 100
- ISUP messages containing these items:
 - The OPC 017-017-017
 - The DPC 073-200-059
 - The following SIO information:
 - The network indicator code of 2 (`nic=2`)
 - The service indicator of 5 (`si=5`)
 - Message priority of 3 (`pri=3`)
 - The allowed ISUP message type of 139
- The messages, both TUP and ISUP, that pass the gateway screening criteria are copied for the STPLAN application and are redirected for the gateway screening redirect function (specified with the `actname` parameter and the name of the gateway screening stop action set containing the `COPY` and `RDCT` gateway screening stop actions).

Figure 11: Gateway Screening Configuration - Example 7

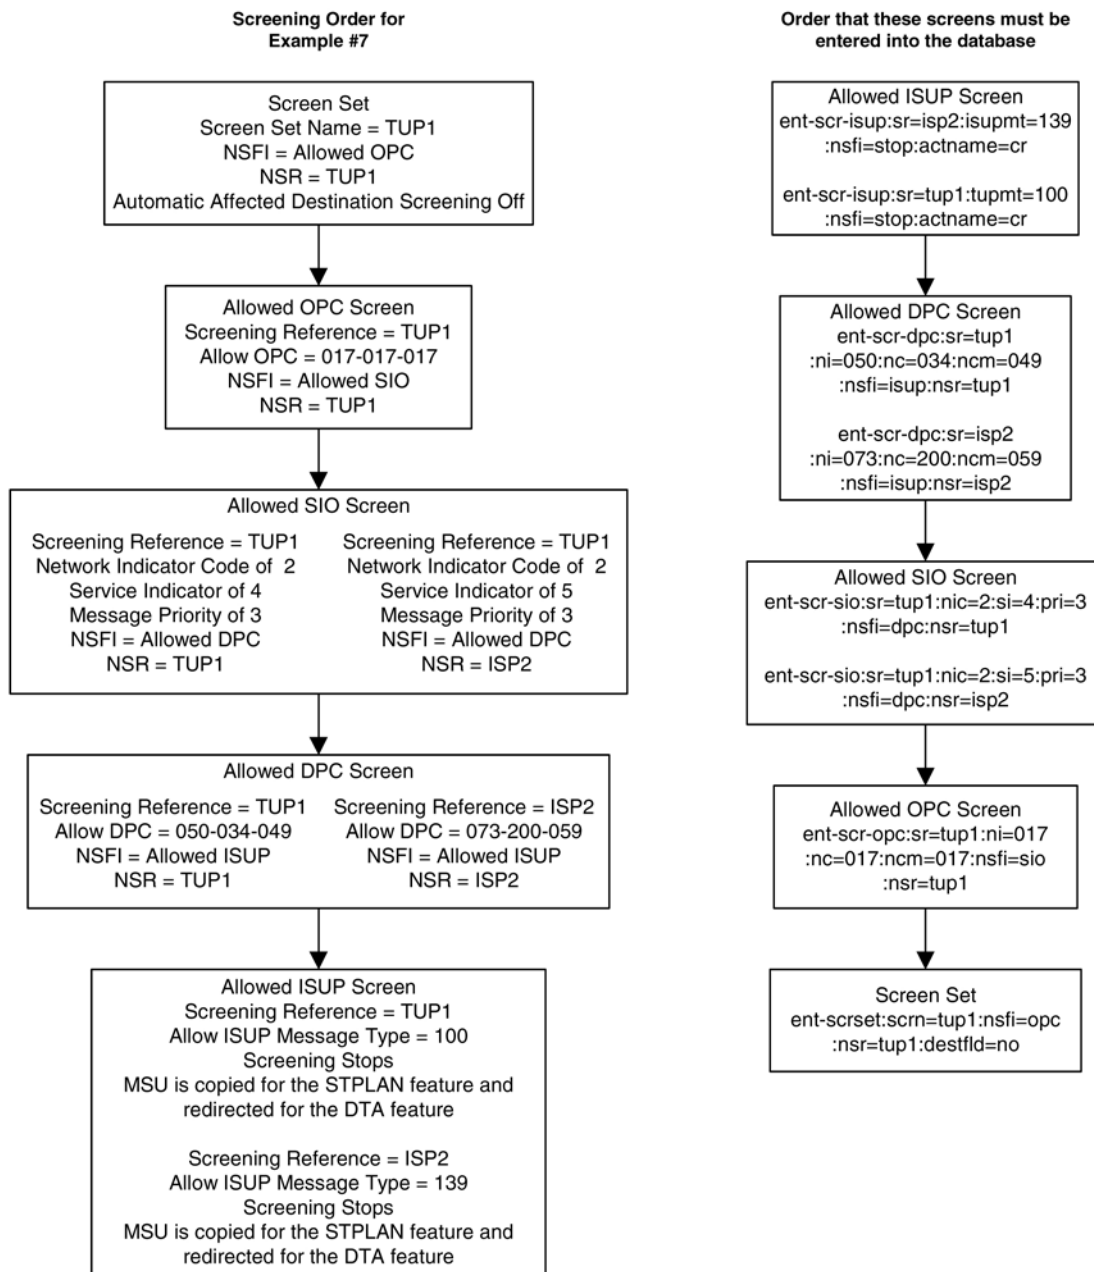

Adding an GLS Card

This procedure is used to add a card to support the gateway screening feature (a GLS card), shown in [Table 10: GLS Card Types](#) on page 53, using the `ent-card` command.

Table 10: GLS Card Types

Card Type	Part Number
TSM-256	870-1289-XX
TSM-512	870-1290-XX
TSM-768	870-1291-XX
TSM-1024	870-1292-XX
E5-TSM	870-2943-01

The `ent-card` command uses these parameters.

`:loc` – The location of the card being added to the database.

`:type` – The type of card being added to the database. For this procedure, the value of this parameter is `tsm`.

`:appl` – The application software that is assigned to the card. For this procedure, the value of this parameter is `gls`.

`:force` – Allow the LIM to be added to the database even if there are not enough service modules to support the number of LIMs in the EAGLE 5 ISS. This parameter is obsolete and is no longer used.

The shelf to which the card is to be added, must already be in the database. This can be verified with the `rtrv-shlf` command. If the shelf is not in the database, see the Adding a Shelf procedure in the *Database Administration Manual – System Management*.

The card cannot be added to the database if the specified card location already has a card assigned to it.

Before the card can be configured in the database for the gateway screening feature, the gateway screening feature must be turned on with the `chg-feat` command. The `rtrv-feat` command can verify that the gateway screening feature is on.

Note: After the Gateway Screening feature is turned on with the `chg-feat` command, the feature cannot be turned off.

The E5-TSM requires two HIPR cards in the shelf where it is installed.

The EAGLE 5 ISS can contain a maximum of eight GLS cards. The examples in this procedure are used to add a GLS card in card slot 1212 to the database.

1. Display the cards in the EAGLE 5 ISS using the `rtrv-card` command.

This is an example of the possible output. Cards should be distributed throughout the EAGLE 5 ISS for proper power distribution. Refer to the *Installation Manual - EAGLE 5 ISS* for the shelf power distribution. This is an example of the possible output.

```
rlghncxa03w 08-11-25 09:58:31 GMT EAGLE5 40.0.0
CARD   TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1101   TSM        SCCP
1102   TSM        GLS
1113   GPSM      EOAM
1114   TDM-A
1115   GPSM      EOAM
```

1116	TDM-B							
1117	MDAL							
1201	LIMDS0	SS7ANSI	sp2	A	0	sp1	B	0
1203	LIMDS0	SS7ANSI	sp3	A	0			
1204	LIMDS0	SS7ANSI	sp3	A	1			
1206	LIMDS0	SS7ANSI	nsp3	A	1	nsp4	B	1
1207	LIMV35	SS7GX25	nsp1	A	0			
1208	LIMV35	SS7GX25	nsp1	A	1			
1211	TSM	GLS						
1216	ACMENET	STPLAN						
1308	LIMDS0	SS7ANSI	sp6	A	1	sp7	B	0
1314	LIMDS0	SS7ANSI	sp7	A	1	sp5	B	1
1317	ACMENET	STPLAN						

If the APPL field of the `rtrv-card` command output shows cards assigned to the GLS application continue the procedure with [Step 4](#) on page 54.

If the APPL field of the `rtrv-card` command output shows no cards assigned to the GLS application continue the procedure with [Step 2](#) on page 54.

2. Verify that the gateway screening feature is on, by entering the `rtrv-feat` command.

If the gateway screening feature is on, the GWS field should be set to on. For this example, the gateway screening feature is off.

Note: The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

If the Gateway Screening feature is on, continue the procedure with one of these steps.

- If a TSM is being added, continue the procedure with [Step 6](#) on page 55.
- If an E5-TSM is being added, continue the procedure with [Step 5](#) on page 55.

If the Gateway Screening feature is not on, continue the procedure with [Step 3](#) on page 54.

3. If the gateway screening feature is not on, shown by the `GWS = off` entry in the `rtrv-feat` command output in [Step 2](#) on page 54, turn the gateway screening feature on by entering this command.

```
chg-feat:gws=on
```

Note: After the Gateway Screening feature is turned on with the `chg-feat` command, it cannot be turned off.

When the `chg-feat` has successfully completed, this message should appear.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
CHG-FEAT: MASP A - COMPLTD
```

If an E5-TSM is being added, continue the procedure with [Step 5](#) on page 55.

If a TSM is being added, continue the procedure with [Step 6](#) on page 55.

4. Display the GLS cards that are in the database by entering this command.

```
rept-stat-card:appl=gl
```

This is an example of the possible output.

```
rlghncxa03w 08-11-01 16:07:48 GMT EAGLE5 40.0.0
CARD VERSION TYPE GPL PST SST AST
1102 131-010-000 TSM GLS IS-NR Active -----
```

```
1211 131-010-000 TSM GLSHC IS-NR Active -----
```

Command Completed.

E5-TSMs are shown by the entry GLSHC in the GPL column of the `rept-stat-gpl` output. TSMs are shown by the entry GLS in the GPL column of the `rept-stat-gpl` output. Continue the procedure by performing one of these actions.

- If E5-TSMs are shown in the `rept-stat-card` output, and an E5-TSM is being added to the same shelf as the E5-TSMs shown in the `rept-stat-card` output, continue the procedure with [Step 6](#) on page 55.
 - If E5-TSMs are shown in the `rept-stat-card` output, and an E5-TSM is being added to a different shelf as the E5-TSMs shown in the `rept-stat-card` output, continue the procedure with [Step 5](#) on page 55.
 - If E5-TSMs are not shown in the `rept-stat-card` output, and an E5-TSM is being added, continue the procedure with [Step 5](#) on page 55.
 - If a TSM is being added, continue the procedure with [Step 6](#) on page 55.
5. Verify that HIPR cards are installed at card locations 9 and 10 in the shelf where the E5-TSM card will be installed. Enter this command.

```
rept-stat-gpl:gpl=hipr
```

This is an example of the possible output.

```
rlghncxa03w 08-12-01 11:40:26 GMT EAGLE5 40.0.0
GPL CARD RUNNING APPROVED TRIAL
HIPR 1109 126-002-000 126-002-000 126-003-000
HIPR 1110 126-002-000 126-002-000 126-003-000
HIPR 1209 126-002-000 126-002-000 126-003-000
HIPR 1210 126-002-000 126-002-000 126-003-000
HIPR 1309 126-002-000 126-002-000 126-003-000
HIPR 1310 126-002-000 126-002-000 126-003-000
Command Completed
```

If HIPR cards are installed at card locations 9 and 10 in the shelf where the E5-TSM card will be installed, continue the procedure with [Step 6](#) on page 55.

If HIPR cards are not installed in the shelf where the E5-TSM card will be installed, refer the *Installation Manual - EAGLE 5 ISS* and install the HIPR cards. Once the HIPR cards have been installed, continue the procedure with [Step 6](#) on page 55.

6. Verify that the GLS card has been physically installed into the proper location.

If the GLS card is in the required card location, continue the procedure with [Step 7](#) on page 56.

If the GLS card is not in the required card location, continue the procedure by performing one of these actions.

- If the GLS card is a TSM, insert the TSM into the card location. Continue the procedure with [Step 7](#) on page 56.
- If the GLS card is an E5-TSM, insert the E5-TSM into the card location. Continue the procedure with [Step 7](#) on page 56.



CAUTION

CAUTION: If the versions of the flash GPLs on the E5-TSM do not match the flash GPL versions in the database when the E5-TSM is inserted into the card slot, UAM 0002 is generated indicating that these GPL versions do not match. If UAM 0002 has been generated, perform the alarm clearing procedure for UAM 0002 in the

Unsolicited Alarm and Information Messages Manual before proceeding with this procedure.

7. Add the GLS card to the database using the `ent-card` command.

For this example, enter this command.

```
ent-card:loc=1212:type=tsm:appl=glS
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0
ENT-CARD: MASP A - COMPLTD
```

8. Verify the changes using the `rtrv-card` command with the card location specified.

For this example, enter this command.

```
rtrv-card:loc=1212
```

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0
CARD   TYPE      APPL      LSET NAME      LINK SLC      LSET NAME      LINK SLC
1212   TSM         GLS
```

9. Put the card in service using the `rst-card` command with the card location specified in [Step 7](#) on page 56 . For this example, enter this command.

```
rst-card:loc=1212
```

When this command has successfully completed, this message should appear.


```
rlghncxa03w 06-10-28 08:21:07 GMT EAGLE5 36.0.0
Card has been allowed.
```


10. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.


These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 12: Adding an GLS Card to the Database

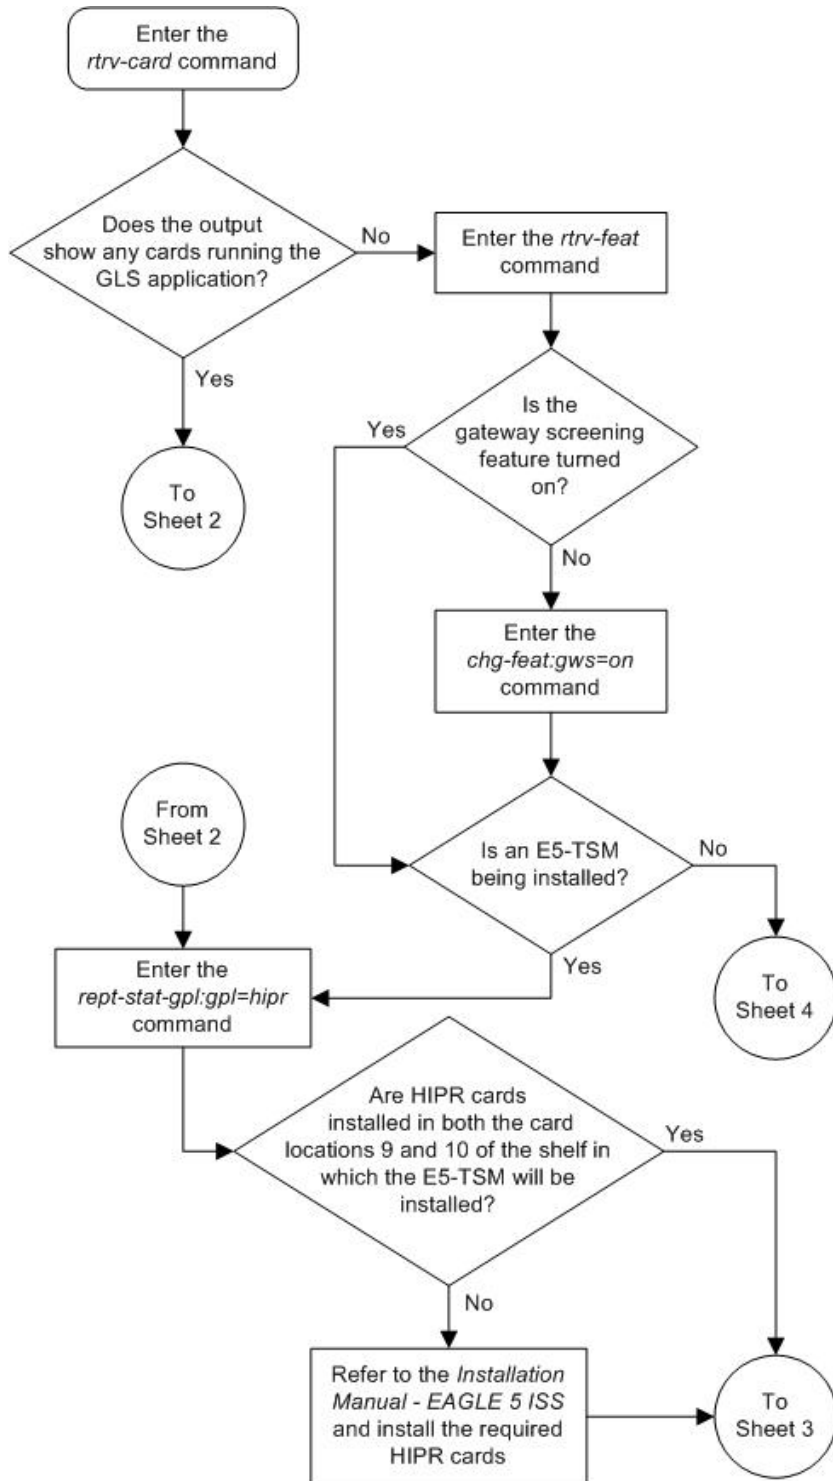

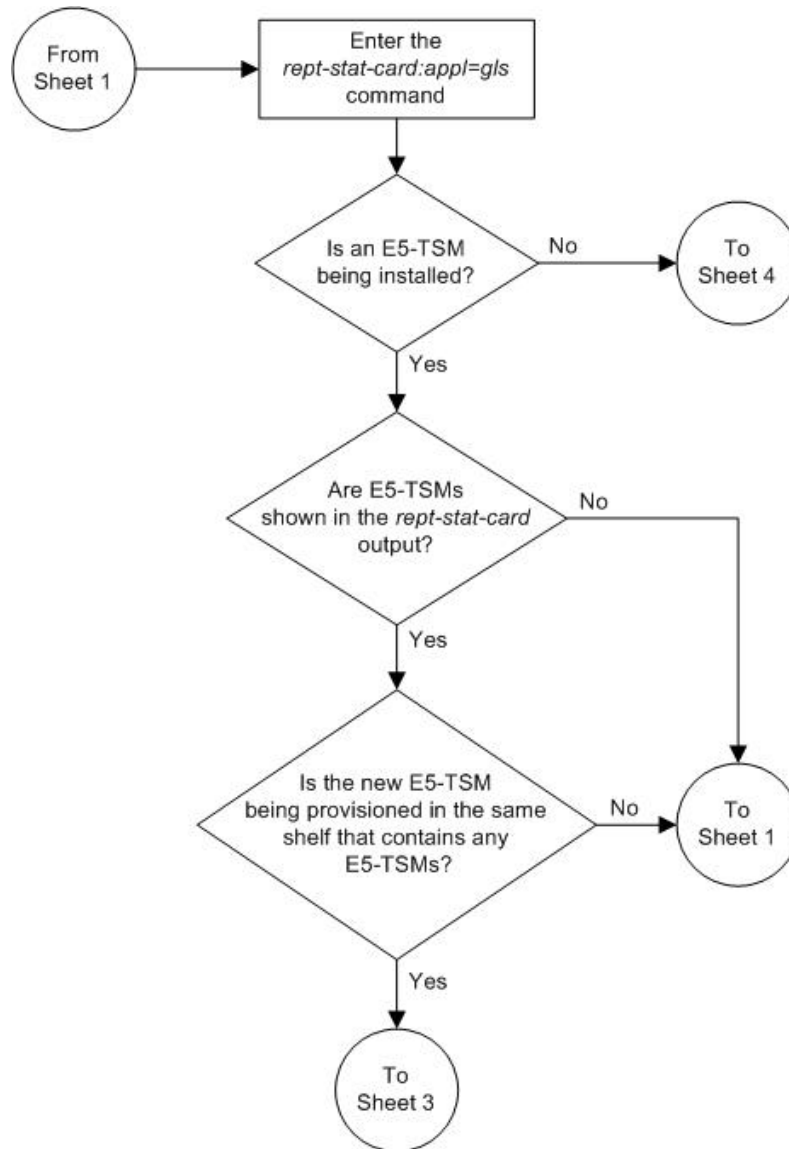

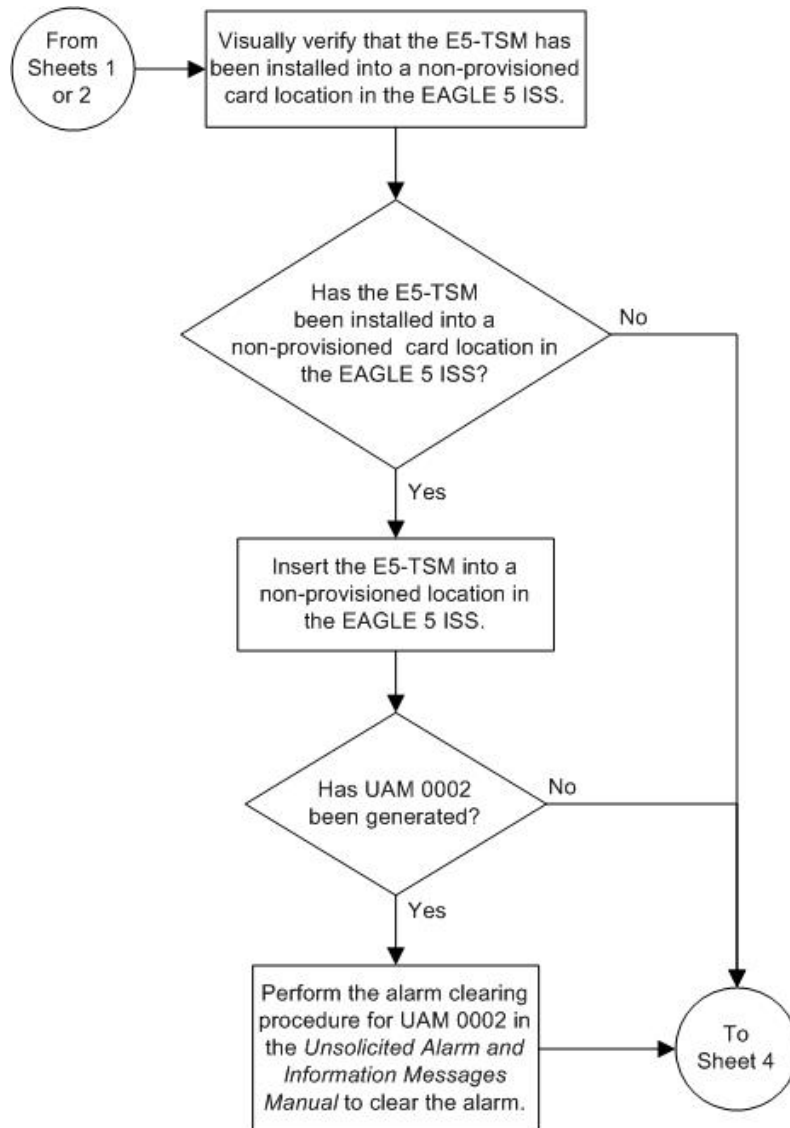

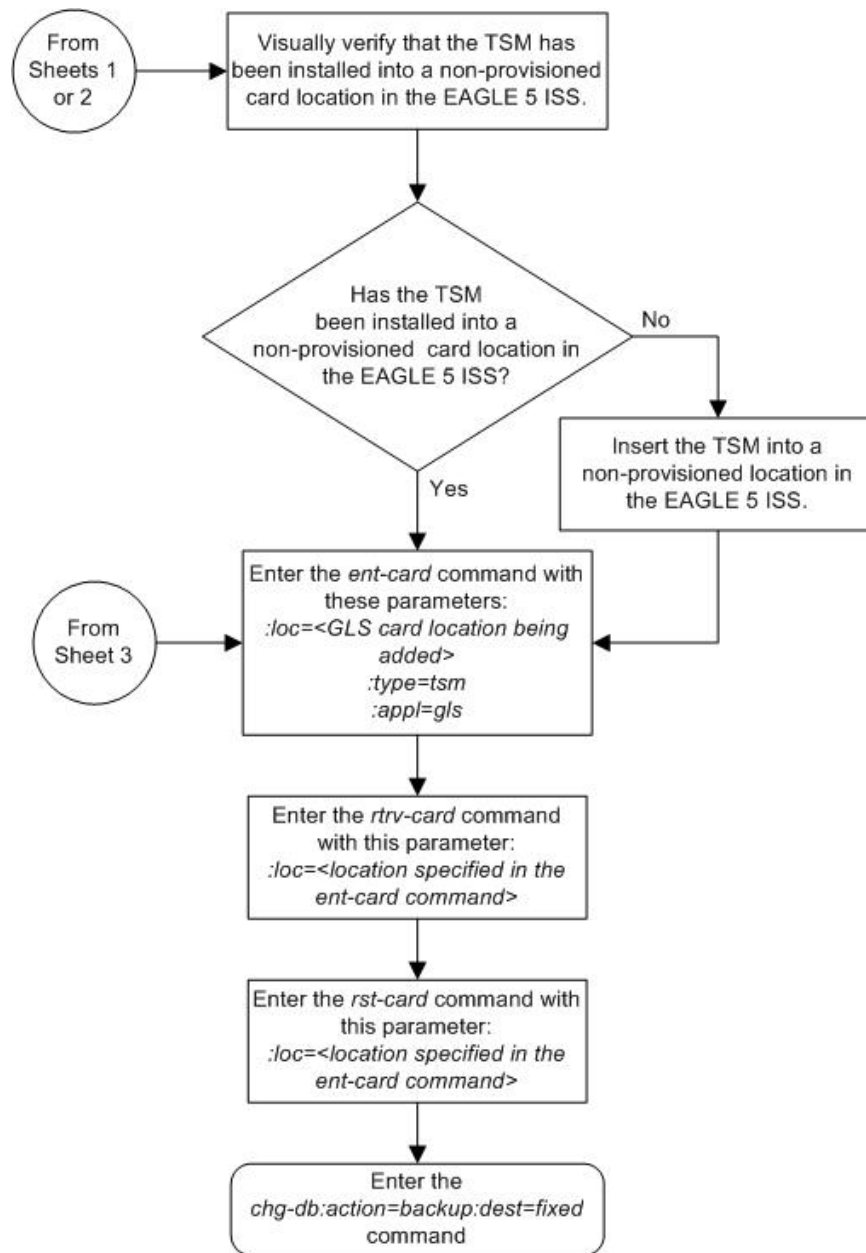

Removing a GLS Card

This procedure is used to remove GLS cards, used by gateway screening, from the database using the `dlt-card` command. The card cannot be removed if it does not exist in the database.



CAUTION: If the GLS card is the last GLS card in service, removing this card from the database will disable the Gateway Screening feature.

The examples in this procedure are used to remove the GLS card in card location 1205.

Canceling the REPT-STAT-CARD Command

Because the `rept-stat-card` command used in this procedure can output information for a long period of time, the `rept-stat-card` command can be canceled and the output to the terminal stopped. There are three ways that the `rept-stat-card` command can be canceled.

- Press the F9 function key on the keyboard at the terminal where the `rept-stat-card` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rept-stat-card` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rept-stat-card` command was entered, from another terminal other than the terminal where the `rept-stat-card` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the cards in the database using the `rtrv-card` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 09:58:31 GMT EAGLE5 36.0.0
CARD  TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1101  TSM          SCCP
1102  TSM          GLS
1103  ACMENET     STPLAN
1104  ACMENET     STPLAN
1113  GPSM        EOAM
1114  TDM-A
1115  GPSM        EOAM
1116  TDM-B
1117  MDAL
1201  LIMDS0      SS7ANSI   lsn1           A    0    lsn2           B    1
1202  LIMV35      SS7GX25   lsn2           A    0
1203  LIMV35      SS7ANSI   lsn2           A    0    lsn1           B    1
1205  TSM          GLS
```

2. Display the cards that are in service with the `rept-stat-card:stat=nr` command.

```
rept-stat-card:stat=nr
```

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1101  110-003-000  TSM      SCCP     IS-NR    Active   ---
1102  110-003-000  TSM      GLS      IS-NR    Active   ---
1103  110-002-000  ACMENET  STPLAN  IS-NR    Active   ---
1104  110-002-000  ACMENET  STPLAN  IS-NR    Active   ---
1109  109-003-000  HMUX     BPHMUX  IS-NR    Active   ---
1110  109-003-000  HMUX     BPHMUX  IS-NR    Active   ---
1201  110-003-000  LIMDS0   SS7ANSI  IS-NR    Active   ---
1202  110-002-000  LIMV35   SS7GX25  IS-NR    Active   ---
1203  110-003-000  LIMV35   SS7ANSI  IS-NR    Active   ---
1205  110-003-000  TSM      GLS      IS-NR    Active   ---
```

1209	109-003-000	HMUX	BPHMUX	IS-NR	Active	---
1210	109-003-000	HMUX	BPHMUX	IS-NR	Active	---

- An GLS card is identified by the entry GLS in the APPL fields in the outputs in steps 1 and 2. Remove the card from service using the `rmv-card` command and specifying the card location. If the GLS card to be inhibited is the only GLS card in service, shown in step 2, the `force=yes` parameter must also be specified. For this example, enter this command.

```
rmv-card:loc=1205
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
Card has been inhibited.
```

- Remove the card from the database using the `dlt-card` command. The `dlt-card` command has only one parameter, `loc`, which is the location of the card. For this example, enter this command.

```
dlt-card:loc=1205
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0
DLT-CARD: MASP A - COMPLTD
```

- Verify the changes using the `rtrv-card` command specifying the card that was removed in step 4.

For this example, enter this command.

```
rtrv-card:loc=1205
```


When this command has successfully completed, this message should appear.

```
E2144 Cmd Rej: Location invalid for hardware configuration
```

- Backup the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 13: Removing a GLS Card

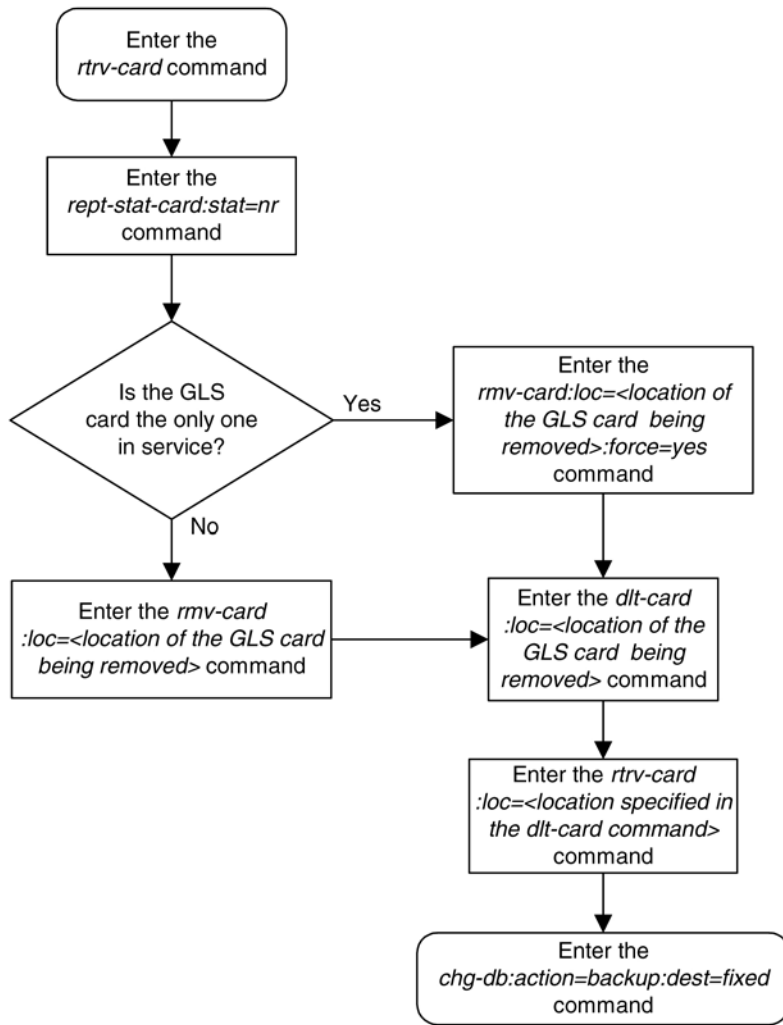

Configuring Gateway Screening Stop Action Sets

This procedure is used to add a gateway screening stop action set to the database or change an existing gateway screening stop action set using the `chg-gws-actset` command.

The gateway screening stop action sets define the actions that are performed on the MSU when the gateway screening process has stopped. These gateway screening stop action sets replace the `copy` and `redirect` parameters that have been used with the gateway screening commands when the gateway screening process stops.

The database can contain a maximum of 16 gateway screening stop action sets, with each set containing a maximum of 10 gateway screening stop actions. Eight gateway screening stop actions have been defined.

- COPY – copy the MSU for the STPLAN feature
- RDCT – redirect the MSU for the DTA feature

- CNCF – convert the PIP parameter with the GN parameter or the GN parameter with the PIP parameter in the ISUP IAM message for the Calling Name Conversion Facility feature.
- TLNP – ISUP IAMs that pass gateway screening are processed either by the ISUP NP with EPAP feature or by the Triggerless LNP feature. This gateway screening stop action is discussed in more detail in the [Configuring TLNP Gateway Screening Stop Action Sets](#) on page 75 procedure.
- TINP – ISUP IAMs that pass gateway screening are intercepted by the Triggerless ISUP based Number Portability (TINP) feature and converted to include the routing number (RN) if the call is to a ported number. This gateway screening stop action can be specified only if the TINP stop action is assigned to a stop action set. If the TINP feature is enabled and turned on, the ISUP NP with EPAP feature (if the ISUP NP with EPAP feature is enabled) is overridden.
- TIF, TIF2, TIF3 - TIF processing is applied to the messages that pass Gateway Screening. These gateway screening stop actions can be specified only if the `tinp`, `tif`, `tif2`, or `tif3` stop action is already assigned to a gateway screening stop action set, or if any of these features are enabled.
 - TIF Number Portability
 - TIF SCS Forwarding
 - TIF Simple Number Substitution
- NONE – no action is performed on the MSU.



CAUTION: When Gateway Screening is in the screen test mode, as defined by the linkset parameters `gwsa=off` and `gws=on`, any action in the gateway screening stop action sets created in this procedure will be performed.

The `chg-gws-actset` command uses these parameters.

`:actid` – The ID number of the gateway screening stop action set. The value of this parameter is from 4 to 16.

`:actname` – The name of the gateway screening stop action set consisting of 1 alphabetic character followed by up to 5 alphanumeric characters.

`:force` – The `force=yes` parameter must be specified when changing the gateway screening stop actions of an existing gateway screening stop action set.

`:all=none` – sets the value of each gateway screening stop action in the gateway screening stop action set to none. Refer to the procedure [Removing Gateway Screening Stop Action Sets](#) on page 88 for information about using this parameter.

`:act1` to `:act10` – The ten gateway screening stop actions for each gateway screening stop action set. Gateway screening stop action 1 (`act1`) is the first stop action to be performed and gateway screening stop action 10 (`act10`) is the last stop action to be performed on the MSU.

The first three gateway screening stop action sets (`actid=1`, `actid=2`, and `actid=3`) are already defined with the existing gateway screening stop actions shown in [Table 11: Gateway Screening Stop Action Definitions If the CNCF Feature Is Off](#) on page 65.

Table 11: Gateway Screening Stop Action Definitions If the CNCF Feature Is Off

Gateway Screening Stop Action ID	Gateway Screening Stop Action Set Name	Stop Action 1	Stop Action 2	Action Performed by the EAGLE 5 ISS
1	copy	copy	—	copy the MSU for the STPLAN feature
2	rdct	rdct	—	redirect the MSU for the DTA feature
3	cr	copy	rdct	copy the MSU for the STPLAN feature and redirect the MSU for the DTA feature

The word none cannot be used for the actname parameter.

The `force=yes` parameter must be specified when changing an existing gateway screening stop action set.

If the `copy` gateway screening action is specified with the `chg-gws-actset` command, it must be specified with the `act1` parameter.

A specific gateway screening stop action can only be specified once in a specific gateway screening stop action set. For example, the `chg-gws-actset` command cannot be executed if the `copy` gateway screening stop action is specified for gateway screening stop action parameters `act1` and `act2` as shown in this command example.

```
chg-gws-actset:actid=4:act1=copy:act2=copy
```

The value of the `actname` parameter must be unique. The value of this parameter is used by the `actname` parameter in the gateway screening commands and is shown in the `NSR/ACT` field of the outputs of the retrieve gateway screening commands to define the action that is performed on the MSU that passes gateway screening.

When a gateway screening stop action set is being entered in to the database for the first time, the name of the gateway screening stop action set (`actname`) must be added to the database before any gateway screening stop actions are assigned to the gateway screening stop action set.

[Table 12: Gateway Screening Stop Action Set Parameter Combinations](#) on page 65 shows the combinations of parameter values that can be specified for `act1`, `act2`, and `act3` parameters for gateway screening stop action sets 4 through 16.

Table 12: Gateway Screening Stop Action Set Parameter Combinations

ACT1	ACT2	ACT3
cncf		
copy	cncf	
copy	cncf	rdct
cncf	rdct	
tinp		

ACT1	ACT2	ACT3
copy	tinp	
tif		
copy	tif	
copy	cncf	tif
cncf	tif	
tif2		
copy	tif2	
copy	cncf	tif2
cncf	tif2	
tif3		
copy	tif3	
copy	cncf	tif3
cncf	tif3	

A blank entry in this table means that the ACT2 or ACT3 parameter has no value.

The cncf stop action can be specified only if the CNCF feature is turned on.

The tinp stop action can be specified only if the tinp stop action is assigned to a stop action set.

The tif, tif2, or tif3 stop actions can be specified only if one or more of these features are enabled.

- TIF Number Portability
- TIF SCS Forwarding
- TIF Simple Number Substitution

1. Verify that the gateway screening feature is turned on, by entering the `rtrv-feat` command.

If the gateway screening feature is turned on, the GWS field should be set to `on`. In this example, the gateway screening feature is off.

Note: The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

If the gateway screening feature is turned on, go to [Step 3](#) on page 67 .

2. If the gateway screening feature is not turned on, shown by the `GWS = off` entry in the `rtrv-feat` command output in [Step 1](#) on page 66 , turn it on by entering this command.

```
chg-feat:gws=on
```

Note: Once the gateway screening feature is turned on with the `chg-feat` command, it cannot be turned off.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
CHG-FEAT: MASP A - COMPLTD
```

3. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

Action IDs 1, 2, and 3 are predefined and cannot be changed. Action ID 1 contains only the COPY stop action. Action ID 2 contains the RDCT stop action. Action ID 3 contains the COPY and the RDCT stop action as shown in the following output example.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME  1    2    3    4    5    6    7    8    9    10
---  ---
1    copy  copy
2    rdct  rdct
3    cr    copy rdct
```

GWS action set table is (3 of 16) 19% full

4. To specify the CNCF gateway screening stop action, the Calling Name Conversion Facility (CNCF) feature must be turned on. If the CNCF gateway screening stop action is shown in [Step 3](#) on page 67, or if the `rtrv-feat` output in [Step 1](#) on page 66 shows that the CNCF feature is on, continue the procedure with [Step 6](#) on page 67. If the CNCF feature is not turned on, shown by the `CNCF = off` entry in the `rtrv-feat` command output in [Step 1](#) on page 66, turn it on by entering this command.

```
chg-feat:cncf=on
```

Note: Once the calling name conversion facility feature is turned on with the `chg-feat` command, it cannot be turned off.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0
CHG-FEAT: MASP A - COMPLTD
```

5. The TIF, TIF2, or TIF3 stop actions cannot be specified unless their corresponding features are enabled. If you do not wish to specify these stop actions, or if these stop actions are shown in [Step 3](#) on page 67, continue the procedure with [Step 7](#) on page 68. If these stop actions are not shown in [Step 3](#) on page 67, continue the procedure with [Step 6](#) on page 67.

The TINP stop action cannot be specified unless the TINP stop action is assigned to an existing stop action set. If you do not wish to specify the TINP stop action, or if the TINP stop action is shown in [Step 3](#) on page 67, continue the procedure with [Step 7](#) on page 68. If the TINP stop action is not shown in [Step 3](#) on page 67, the TINP stop action cannot be added to a stop action set. Continue the procedure with [Step 7](#) on page 68.

6. Display the features that are enabled by entering the `rtrv-ctrl-feat` command. The following is an example of the possible output.

```
rlghncxa03w 07-05-30 21:15:37 GMT EAGLE5 37.2.0
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
Command Class Management	893005801	off	----
Intermed GTT Load Sharing	893006901	off	----

XGTT Table Expansion	893006101	off	----
XMAP Table Expansion	893007710	on	3000
Large System # Links	893005910	on	2000
Routesets	893006401	on	6000
GSM MAP SRI Redirect	893014001	on	----
ISUP NP with EPAP	893013801	on	----
HC-MIM SLK Capacity	893012707	on	64

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period	Left
Zero entries found.					

The following features have expired temporary keys:

Feature Name	Partnum
Zero entries found.	

If you wish to specify the TIF, TIF2, or TIF3 stop actions, one or more of these features must be enabled.

- TIF Number Portability
- TIF SCS Forwarding
- TIF Simple Number Substitution

If the TIF Number Portability, TIF SCS Forwarding, or TIF Simple Number Substitution features are enabled, the TIF, TIF2, and TIF3 stop actions can be specified. Continue the procedure with [Step 7](#) on page 68.

The TIF Number Portability, TIF SCS Forwarding, or TIF Simple Number Substitution features must be enabled. If these features are not enabled, perform the procedures in the *Number Plan Processor Guide* to enable at least one of these features. After the TIF Number Portability, TIF SCS Forwarding, or TIF Simple Number Substitution features have been enabled, continue the procedure with [Step 7](#) on page 68.

7. Add the gateway screening stop action to the database by using the `chg-gws-actset` command.

[Table 12: Gateway Screening Stop Action Set Parameter Combinations](#) on page 65 shows the parameter combinations that can be used for the stop action parameters (act1 - act10).

```
chg-gws-actset:actid=4:actname=cncf:act1=cncf
```

```
chg-gws-actset:actid=5:actname=cpcncf:act1=copy:act2=cncf
```

```
chg-gws-actset:actid=6:actname=cncfrd:act1=cncf:act2=rdct
```

```
chg-gws-actset:actid=7:actname=cpcfrrd:act1=copy:act2=cncf:act3=rdct
```

```
chg-gws-actset:actid=8:actname=cptinp:act1=copy:act2=тинп
```

```
chg-gws-actset:actid=9:actname=тинп:act1=тинп
```

```
chg-gws-actset:actid=10:actname=tif1:act1=tif
```

```
chg-gws-actset:actid=11:actname=tif2:act1=copy:act2=tif2
```


```
chg-gws-actset:actid=12:actname=tif3:act1=copy:act2=tif3
```


If an existing gateway screening stop action set is being changed, the `force=yes` parameter must be specified with the `chg-gws-actset` command.


The `force=yes` parameter can be specified with the `chg-gws-actset` command if a new GWS stop action set is being created, but is not necessary.

The `actname` parameter must be specified for a new GWS stop action set. The `actname` parameter is not required, but can be specified, if an existing stop action set is being changed.

If the `actname` parameter value is different from what is shown in the `rtrv-gws-actset` output for the GWS stop action set being changed, the name of the GWS stop action set will be changed to the new `actname` parameter value (see the first Caution).

 **CAUTION:** Changing the name of an existing GWS stop action set will prevent the actions defined in the GWS stop action set from being used to process the MSUs that pass gateway screening. If the name of the GWS stop action set is changed, enter the gateway screening retrieve commands (`rtrv-scrset`, `rtrv-scr-opc`, `rtrv-scr-blkopc`, `rtrv-scr-sio`, `rtrv-scr-dpc`, `rtrv-scr-blkdpc`, `rtrv-scr-destfld`, `rtrv-scr-isup`, `rtrv-scr-cgpa`, `rtrv-scr-tt`, `rtrv-scr-cdpa`, and `rtrv-scr-aftpc`) with the `actname` parameter and the old GWS stop action set name to identify the screens that need to be changed to use the new GWS stop action set name. To change these screens, perform the appropriate procedures in Chapters [Allowed Affected Point Code \(AFTPC\) Screen Configuration](#) on page 97 through [Allowed ISUP Message Type Screen Configuration](#) on page 435 in this manual.

 **CAUTION:** Caution must be used when changing the stop actions in existing gateway screening stop action sets because these gateway screening stop action sets may be used by one or more gateway screening rules. Changes in the existing gateway screening stop action sets will change how MSUs that pass gateway screening are processed.

 **CAUTION:** Caution must be used when specifying the RDCT stop action in an existing GWS stop action set. Specifying the RDCT stop action for Allowed OPC screens containing the adjacent point code of a linkset, for Allowed SIO screens containing the service indicator values 1 (SI=1) or 2 (SI=2), or for Allowed DPC screens containing the EAGLE 5 ISS's point code can cause signaling link failures. To verify whether or not the GWS stop action set name used in this procedure is referenced by these screens, enter the `rtrv-scr-opc`, `rtrv-scr-sio`, or `rtrv-scr-dpc` commands, with the `actname` parameter and the GWS stop action set name used in this procedure.

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
CAUTION: GWS action set may be referenced by one or more GWS rules
CHG-GWS-ACTSET: MASP A - COMPLTD
```

- Verify the changes using the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:31:30 GMT EAGLE5 36.0.0
ACT  ACT      ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME      1    2    3    4    5    6    7    8    9    10
--   -
1    copy      copy
2    rdct      rdct
```

```

3   cr      copy rdct
4   cncf    cncf
5   cpcncf  copy cncf
6   cncfrd  cncf rdct
7   cpcfrd  copy cncf rdct
8   cptinp  copy tinp
9   tinp    tinp
10  tif1    tif
11  tif2    copy tif2
12  tif3    copy tif3
    
```

GWS action set table is (12 of 16) 75% full


- Backup the new changes using the `chg-db:action=backup:dest=fixed` command.


These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```


BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
    
```


Figure 14: Configuring Gateway Screening Stop Action Sets

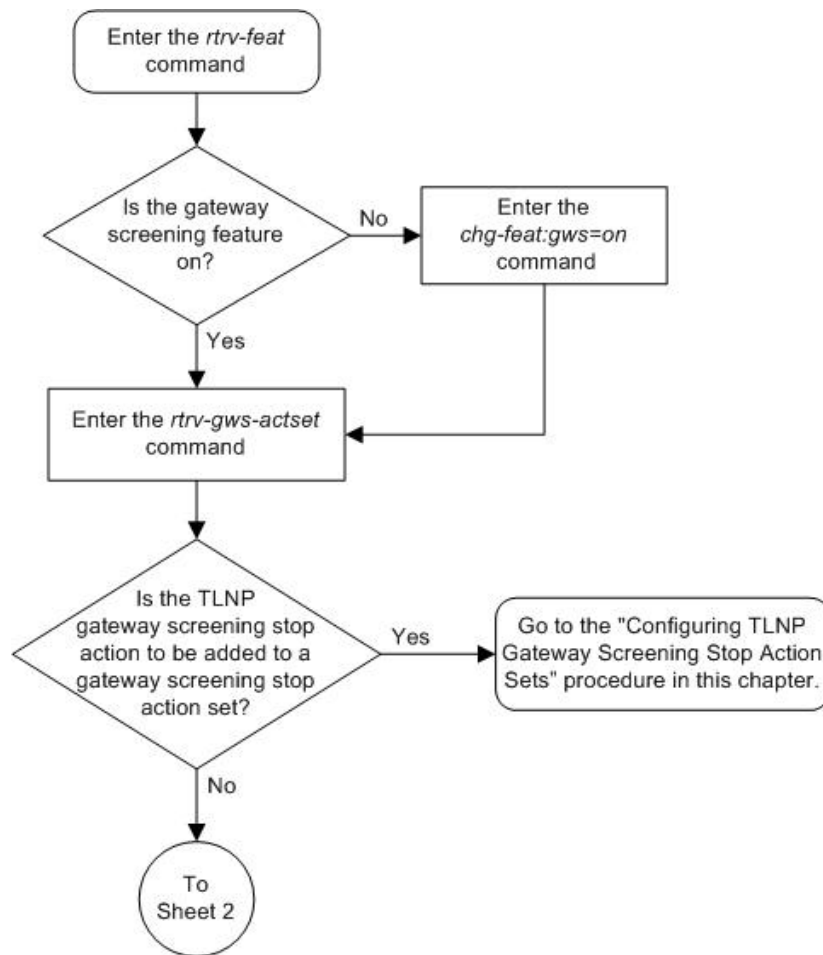

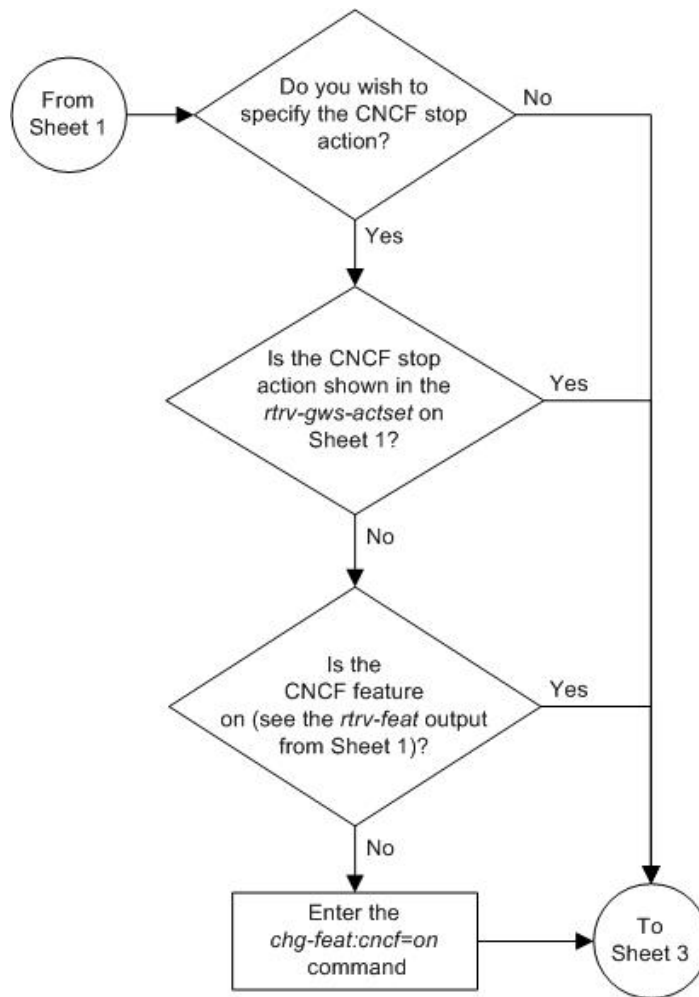

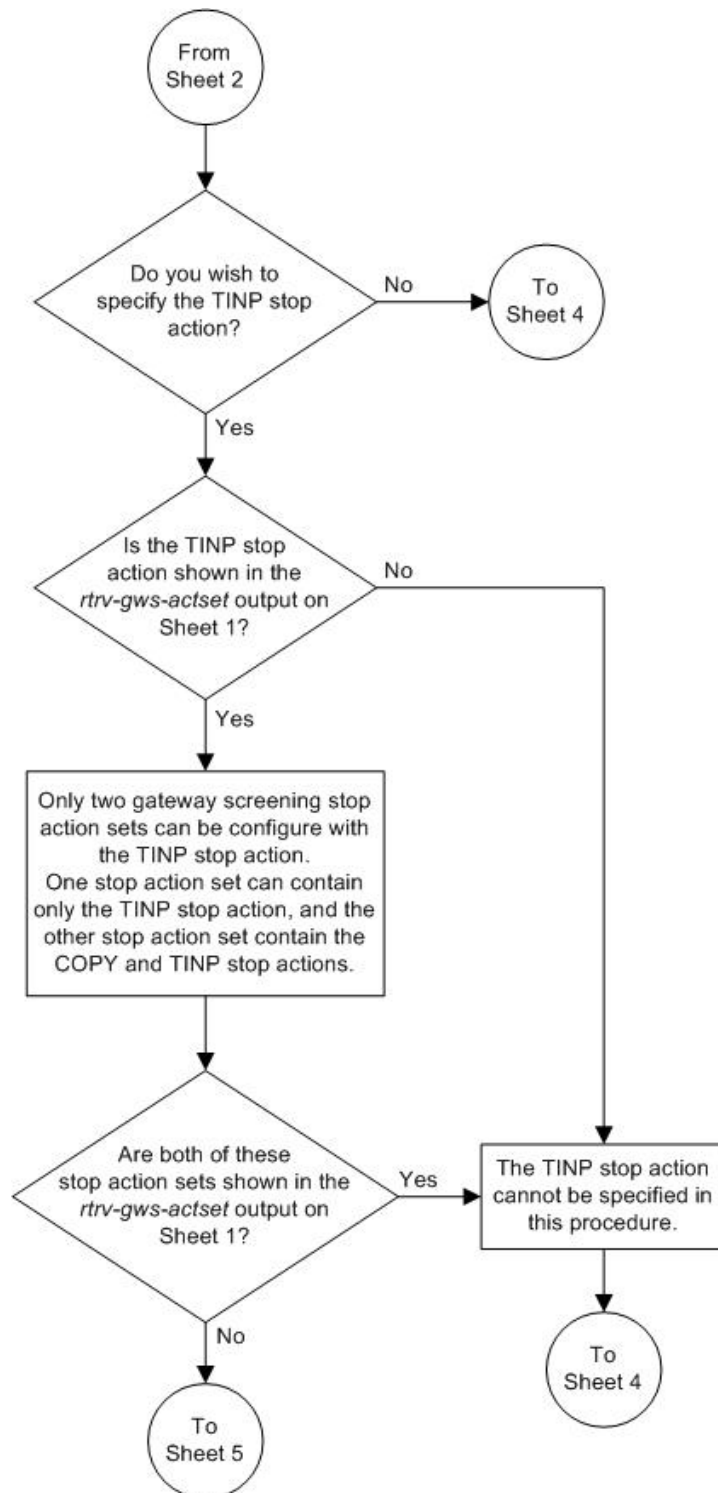

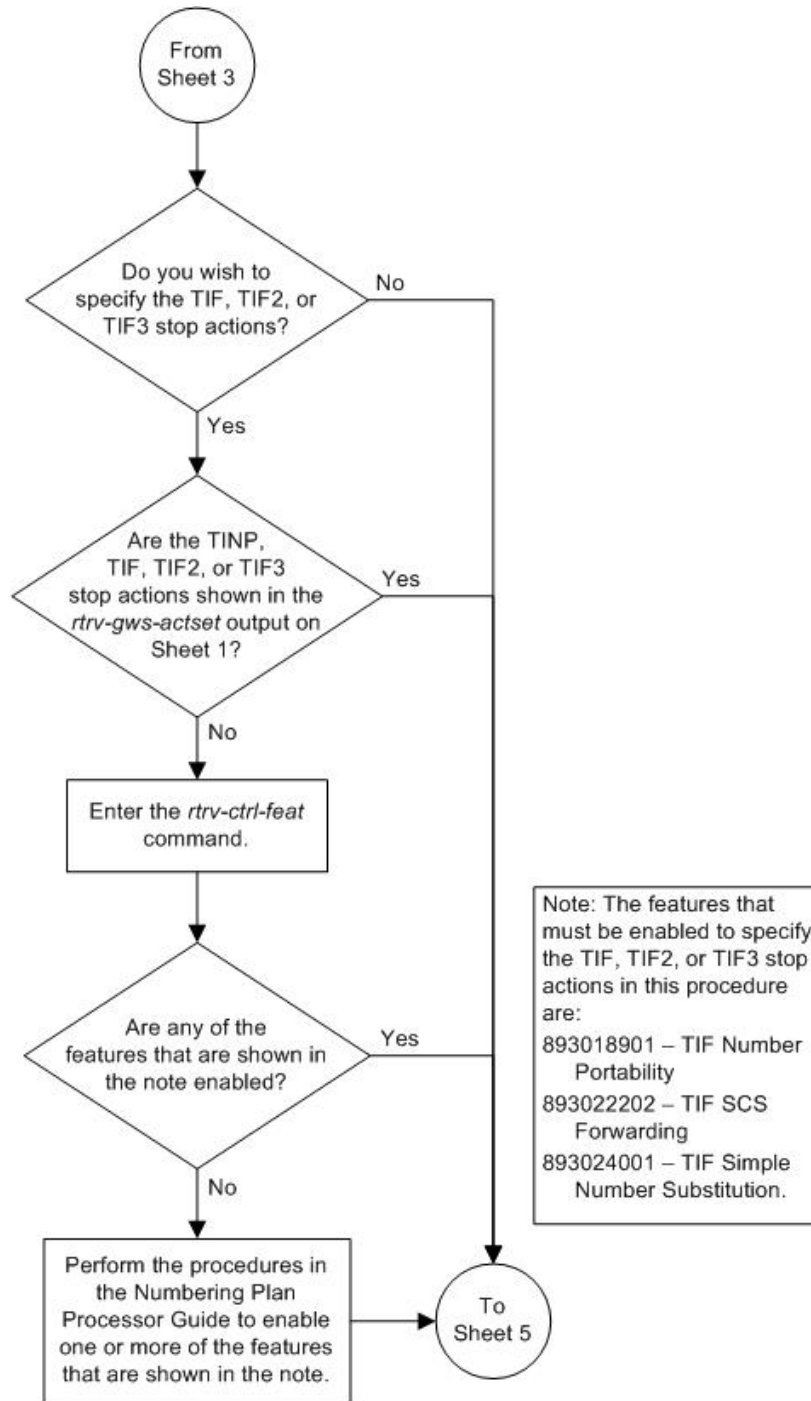

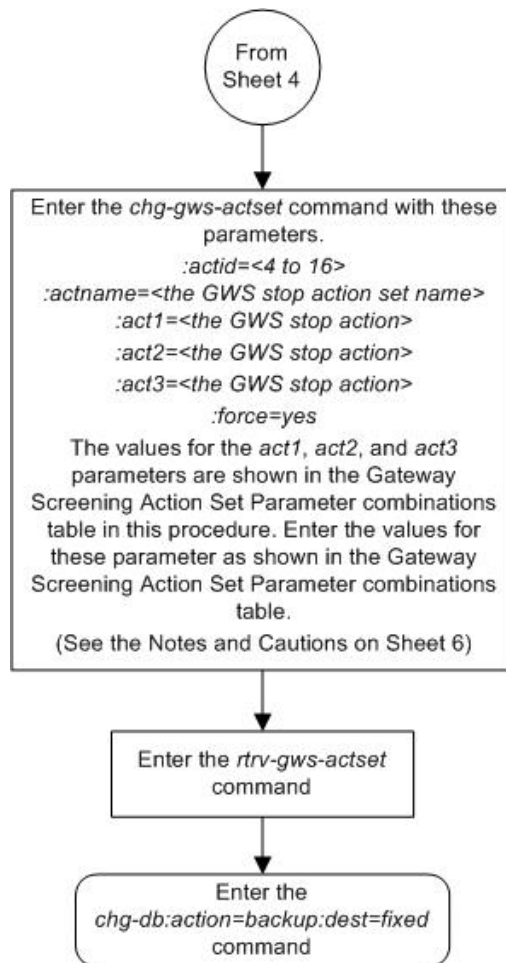

Notes:

1. The *force=yes* parameter must be specified with the *chg-gws-actset* command if an existing GWS stop action set is being changed.
2. The *force=yes* parameter can be specified with the *chg-gws-actset* command if a new GWS stop action set is being created, but is not necessary.
3. The *actname* parameter must be specified for a new GWS stop action set.
4. The *actname* parameter is not required, but can be specified, if an existing stop action set is being changed.
5. If the *actname* parameter value is different from what is shown in the *rtrv-gws-actset* output for the GWS stop action set being changed, the name of the GWS stop action set will be changed to the new *actname* parameter value (see Caution 1).

Cautions:

1. Changing the name of an existing GWS stop action set will prevent the actions defined in the GWS stop action set from being used to process the MSUs that pass gateway screening. If the name of the GWS stop action set is changed, enter the gateway screening retrieve commands (*rtrv-scrset*, *rtrv-scr-opc*, *rtrv-scr-blkopc*, *rtrv-scr-sio*, *rtrv-scr-dpc*, *rtrv-scr-blkdpc*, *rtrv-scr-destfld*, *rtrv-scr-isup*, *rtrv-scr-cgpa*, *rtrv-scr-tt*, *rtrv-scr-cdpa*, and *rtrv-scr-aftpc*) with the *actname* parameter and the old GWS stop action set name to identify the screens that need to be changed to use the new GWS stop action set name. To change these screens, perform the appropriate procedures in Chapters 3 through 15 in this manual.

2. Caution must be used when changing the stop actions in existing gateway screening stop action sets because these gateway screening stop action sets may be used by one or more gateway screening rules. Changes in the existing gateway screening stop action sets will change how MSUs that pass gateway screening are processed.

3. Caution must be used when specifying the RDCT stop action in an existing GWS stop action set. Specifying the RDCT stop action for Allowed OPC screens containing the adjacent point code of a linkset, for Allowed SIO screens containing the service indicator values 1 (SI=1) or 2 (SI=2), or for Allowed DPC screens containing the Eagle's point code can cause signaling link failures.

To verify whether or not the GWS stop action set name used in this procedure is referenced by these screens, enter the *rtrv-scr-opc*, *rtrv-scr-sio*, or *rtrv-scr-dpc* commands, with the *actname* parameter and the GWS stop action set name used in this procedure.

Configuring TLNP Gateway Screening Stop Action Sets

This procedure is used to add a gateway screening stop action set containing the TLNP gateway screening stop action to the database using the *chg-gws-actset* command.

The gateway screening stop action sets define the actions that are performed on the MSU when the gateway screening process has stopped.

The database can contain a maximum of 16 gateway screening stop action sets, with each set containing a maximum of 10 gateway screening stop actions. For this procedure only two gateway screening stop actions can be used.

- COPY – copy the MSU for the STPLAN feature

- TLNP – ISUP IAMs that pass gateway screening are processed either by the ISUP NP with EPAP feature (if the ISUP NP with EPAP feature is enabled and turned on) or by the Triggerless LNP feature (if the LNP feature is enabled and the Triggerless LNP feature is turned on). The ISUP NP with EPAP feature is discussed in more detail in the *Feature Manual - G-Port*. The Triggerless LNP feature is discussed in more detail in the *LNP Feature Activation Guide*.

The status of the ISUP NP with EPAP feature can be verified with the `rtrv-ctrl-feat` command. The ISUP NP with EPAP feature also requires that the G-Port feature is enabled and that the Gateway Screening feature is turned on. The status of the G-Port feature can be verified with the `rtrv-ctrl-feat` command. The status of the Gateway Screening feature can be verified with the `rtrv-feat` command. Enabling the G-Port feature is discussed in more detail in the *Feature Manual - G-PORT*.



CAUTION: When Gateway Screening is in the screen test mode, as defined by the linkset parameters `gwsa=off` and `gwsn=on`, any action in the gateway screening stop action sets created in this procedure will be performed.

The `chg-gws-actset` command in this procedure uses these parameters.

`:actid` – The ID number of the gateway screening stop action set. The value of this parameter is from 4 to 16.

`:actname` – The name of the gateway screening stop action set consisting of 1 alphabetic character followed by up to 5 alphanumeric characters. The word `none` cannot be used for the `actname` parameter.

`:force` – The `force=yes` parameter must be specified when changing the gateway screening stop actions of an existing gateway screening stop action set.

`:act1` and `:act2` – Only two gateway screening stop action sets can be defined with the TLNP gateway screening stop action:

- One set with only the TLNP gateway Screening stop action (defined with the `act1=tlnp` parameter).
- Another set with the COPY and TLNP gateway screening stop action (defined by the `act1=copy` and `act2=tlnp` parameters).

The value of the `actname` parameter must be unique. The value of this parameter is used by the `actname` parameter in the gateway screening commands and is shown in the NSR/ACT field of the outputs of the retrieve gateway screening commands to define the action that is performed on the MSU that passes gateway screening.

When a gateway screening stop action set is being entered into the database for the first time, the name of the gateway screening stop action set (`actname`) must be added to the database before any gateway screening stop actions are assigned to the gateway screening stop action set.

The `tlnp` gateway screening stop action cannot be specified with either the `cncf` (calling name conversion facility) or `rdct` (redirect) gateway screening actions in the same gateway screening action set.

Table 13: Sample TLNP Gateway Screening Stop Action Set Configuration

ACTID	ACTNAME	ACT1	ACT2	ACT3
4	TLNP	tlnp	—	—
5	CPNP	copy	tlnp	—

1. Verify that the gateway screening feature is turned on, by entering the `rtrv-feat` command.

If the gateway screening feature is turned on, the GWS field should be set to on. In this example, the gateway screening feature is off.

Note: The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

If the gateway screening feature is turned on, go to step 3.

2. If the gateway screening feature is not turned on, shown by the `GWS = off` entry in the `rtrv-feat` command output in step 1, turn it on by entering this command.

```
chg-feat:gws=on
```

Note: Once the gateway screening feature is turned on with the `chg-feat` command, it cannot be turned off.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
CHG-FEAT: MASP A - COMPLTD
```

3. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

Action IDs 1, 2, and 3 are predefined and cannot be changed. Action ID 1 contains only the COPY stop action. Action ID 2 contains the RDCT stop action. Action ID 3 contains the COPY and the RDCT stop actions as shown in the following output example.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME  1   2   3   4   5   6   7   8   9   10
---  ---
1    copy  copy
2    rdct  rdct
3    cr    copy rdct

GWS action set table is (3 of 16) 19% full
```

If the `rtrv-gws-actset` output shows that these gateway screening stop action sets: one with `ACT1=tlnp` and the other with `ACT1=copy` and `ACT2=tlnp`, this procedure cannot be performed.

If only one of these gateway screening stop action sets are shown, skip steps 4 through 11, and go to step 12.

If neither of these gateway screening stop action sets are shown, go to step 4.

4. Verify whether or not the LNP or ISUP NP with EPAP features are enabled, using the `rtrv-ctrl-feat` command.

If the LNP feature is enabled, the LNP TNs field with a telephone number quantity greater than zero is shown in the `rtrv-ctrl-feat` output. If the ISUP NP with EPAP feature is enabled, the ISUP NP with EPAP Active field is shown in the `rtrv-ctrl-feat` output.

This is an example of the possible output.

```
rlghncxa03w 06-10-30 21:15:37 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name          Partnum    Status    Quantity
Command Class Management 893005801  off      ----
Intermed GTT Load Sharing 893006901  off      ----
XGTT Table Expansion    893006101  off      ----
XMAP Table Expansion    893007710  on       3000
Large System # Links    893005910  on       2000
Routesets              893006401  on       6000
GSM MAP SRI Redirect    893014001  on       ----
ISUP NP with EPAP Active 893013801  on       ----
HC-MIM SLK Capacity     893012707  on       64

The following features have been temporarily enabled:

Feature Name          Partnum    Status    Quantity    Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name          Partnum
Zero entries found.
```

If the ISUP NP with EPAP feature is enabled, skip steps 5 through 10, and go to step 11.

If the LNP feature is enabled, perform the “Configuring the Triggerless LNP Feature” procedure in the *LNP Feature Activation Guide*.

If neither the ISUP NP with EPAP or the LNP features are enabled, perform the “Configuring the Triggerless LNP Feature” procedure in the *LNP Feature Activation Guide* to use the `tlnp` gateway screening stop action for the Triggerless LNP feature.

To use the `tlnp` gateway screening stop action for the ISUPNP with EPAP feature, and neither the ISUP NP with EPAP or the LNP features are enabled, verify that the G-Port feature is enabled. If the G-Port feature is enabled, the entry `GPORT` is shown in the `rtrv-ctrl-feat` output. If the G-Port feature is not enabled, go to the *Feature Manual - G-Port* and enable the G-Port feature. Then go to step 5.

If the G-Port feature is enabled, go to step 5.

Note: If the `rtrv-ctrl-feat` output in step 4 shows any controlled features, skip steps 5, 6, 7, and 8, and go to step 9.

Note: If the `rtrv-ctrl-feat` output shows only the HC-MIMSLK Capacity feature with a quantity of 64, then no other features are enabled. Steps 5, 6, 7, and 8 must be performed.

5. Display the serial number in the database with the `rtrv-serial-num` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-30 21:15:37 GMT EAGLE5 36.0.0
System serial number = ntxxxxxxxxxxxxxxx

System serial number is not locked.

rlghncxa03w 06-10-30 21:15:37 GMT EAGLE5 36.0.0
Command Completed
```

Note: If the serial number is locked, skip step 6 and go to step 7.

Note: If the serial number is correct and locked, skip steps 6, 7, and 8, and go to step 9. If the serial number is correct but not locked, skip steps 6 and 7, and go to step 8. If the serial number is not correct, but is locked, the ISUPNP with EPAP feature cannot be enabled and the remainder of this procedure cannot be performed. Contact the Customer Care Center to get an incorrect and locked serial number changed. Refer to [Customer Care Center](#) on page 4 for the contact information. The serial number can be found on a label affixed to the control shelf (shelf 1100).

6. Enter the correct serial number into the database using the `ent-serial-num` command with the `serial` parameter.

For this example, enter this command.

```
ent-serial-num:serial=<EAGLE 5 ISS's correct serial number>
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
ENT-SERIAL-NUM: MASP A - COMPLTD
```

7. Verify that the serial number entered into step 6 was entered correctly using the `rtrv-serial-num` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
System serial number = nt00001231

System serial number is not locked.
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
Command Completed
```

If the serial number was not entered correctly, repeat steps 6 and 7 and re-enter the correct serial number.

8. Lock the serial number in the database by entering the `ent-serial-num` command with the serial number shown in step 5, if the serial number shown in step 5 is correct, or with the serial number shown in step 7, if the serial number was changed in step 6, and with the `lock=yes` parameter.

For this example, enter this command.

```
ent-serial-num:serial=<EAGLE 5 ISS's serial number>:lock=yes
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
ENT-SERIAL-NUM: MASP A - COMPLTD
```

9. Enable the ISUP NP with EPAP feature by entering the `enable-ctrl-feat` command.

For this example, enter this command.

```
enable-ctrl-feat:partnum=893013801:fak=<feature access key>
```

Note: The values for the feature access key (the `fak` parameter) are provided by Tekelec. If you do not have the controlled feature part number or the feature access key for the feature you wish to enable, contact your Tekelec Sales Representative or Account Representative.

When the `enable-ctrl-feat` command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-30 21:15:37 GMT EAGLE5 36.0.0
ENABLE-CTRL-FEAT: MASP B - COMPLTD
```

10. Verify the changes by entering the `rtrv-ctrl-feat` command with the part number specified in step 9.

```
rtrv-ctrl-feat:partnum=893013801
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-30 21:16:37 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name          Partnum   Status   Quantity
ISUP NP with EPAP    893013801 off      ----
```

Note: If the TLNP feature is on, shown in the `rtrv-feat` output in step 1, skip this step and step 12, and go to step 13.

11. Turn the TLNP feature on by entering this command.

```
chg-feat:tlnp=on
```

Note: Once the TLNP feature is turned on with the `chg-feat` command, it cannot be turned off.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
CHG-FEAT: MASP A - COMPLTD
```

12. Add the TLNP gateway screening stop action to the database by using the `chg-gws-actset` command.

For this example, enter these commands based on the sample configuration shown in [Table 13: Sample TLNP Gateway Screening Stop Action Set Configuration](#) on page 77.

```
chg-gws-actset:actid=4:actname=tlnp:act1=tlnp
```

```
chg-gws-actset:actid=5:actname=cpnp:act1=copy:act2=tlnp
```

If an existing gateway screening stop action set is being changed, the `force=yes` parameter must be specified with the `chg-gws-actset` command.

The `force=yes` parameter can be specified with the `chg-gws-actset` command if a new GWS stop action set is being created, but is not necessary.

The `actname` parameter must be specified for a new GWS stop action set.

The actname parameter is not required, but can be specified, if an existing stop action set is being changed.

If the actname parameter value is different from what is shown in the rtrv-gws-actset output for the GWS stop action set being changed, the name of the GWS stop action set will be changed to the new actname parameter value (see the first Caution).



CAUTION

CAUTION: Changing the name of an existing GWS stop action set will prevent the actions defined in the GWS stop action set from being used to process the MSUs that pass gateway screening. If the name of the GWS stop action set is changed, enter the gateway screening retrieve commands (rtrv-scrset, rtrv-scr-opc, rtrv-scr-blkopc, rtrv-scr-sio, rtrv-scr-dpc, rtrv-scr-blkdpc, rtrv-scr-destfld, rtrv-scr-isup, rtrv-scr-cgpa, rtrv-scr-tt, rtrv-scr-cdpa, and rtrv-scr-aftpc) with the actname parameter and the old GWS stop action set name to identify the screens that need to be changed to use the new GWS stop action set name. To change these screens, perform the appropriate procedures in *Allowed Affected Point Code (AFTPC) Screen Configuration* on page 97 through *Allowed ISUP Message Type Screen Configuration* on page 435 in this manual.



CAUTION

CAUTION: Caution must be used when changing the stop actions in existing gateway screening stop action sets because these gateway screening stop action sets may be used by one or more gateway screening rules. Changes in the existing gateway screening stop action sets will change how MSUs that pass gateway screening are processed.

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
CAUTION: GWS action set may be referenced by one or more GWS rules
CHG-GWS-ACTSET: MASP A - COMPLTD
```

13. Verify the changes using the rtrv-gws-actset command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:31:30 GMT EAGLE5 36.0.0
ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME  1    2    3    4    5    6    7    8    9    10
--   -
1    copy  copy
2    rdct  rdct
3    cr    copy rdct
4    tlnp  tlnp
5    cpnp  copy tlnp

GWS action set table is (5 of 16) 31% full
```


14. Backup the new changes using the chg-db:action=backup:dest=fixed command.

These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
```


BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
 BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.

Figure 15: Configuring TLNP Gateway Screening Stop Action Sets

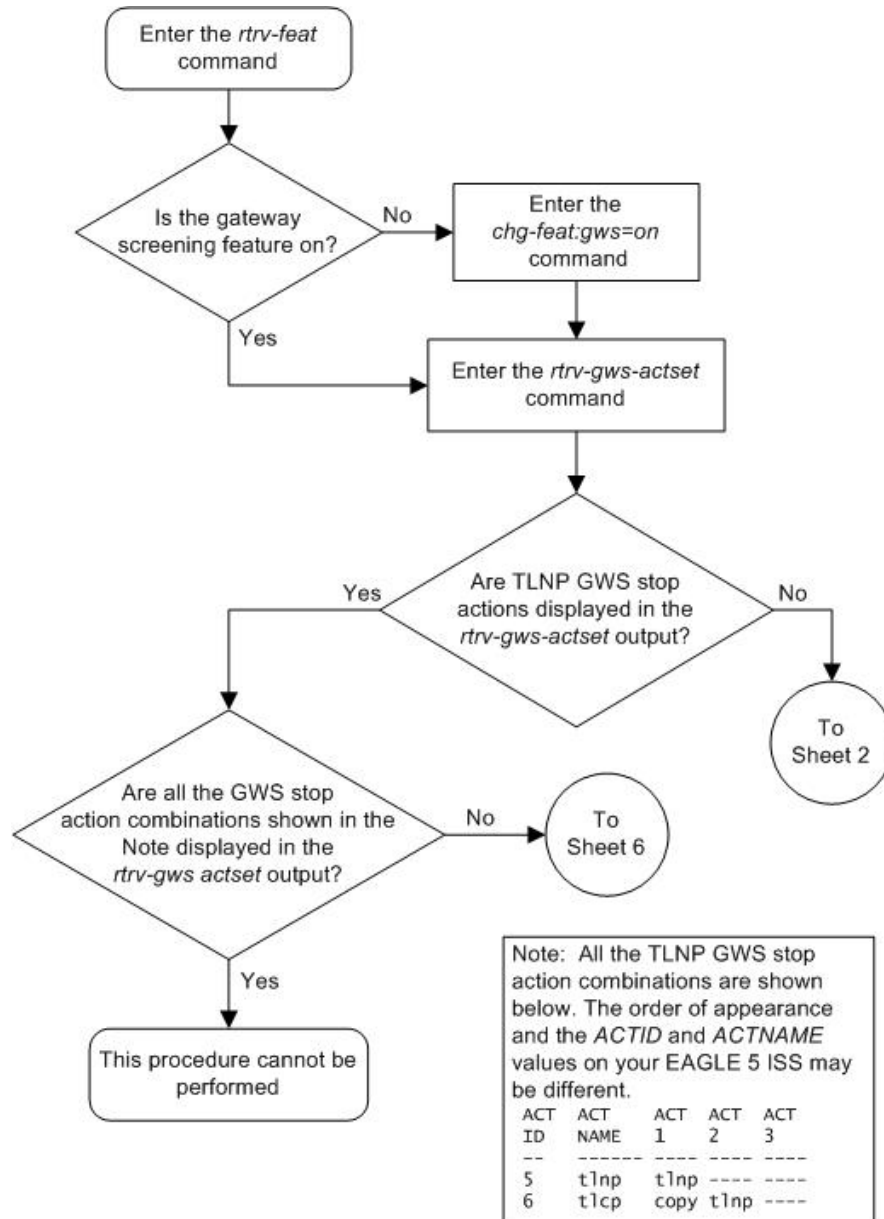


Note: All the TLNP GWS stop action combinations are shown below. The order of appearance and the ACTID and ACTNAME values on your EAGLE 5 ISS may be different.


ACT ID	ACT NAME	ACT 1	ACT 2	ACT 3
5	tlnp	tlnp	----	----
6	tlcp	copy	tlnp	----

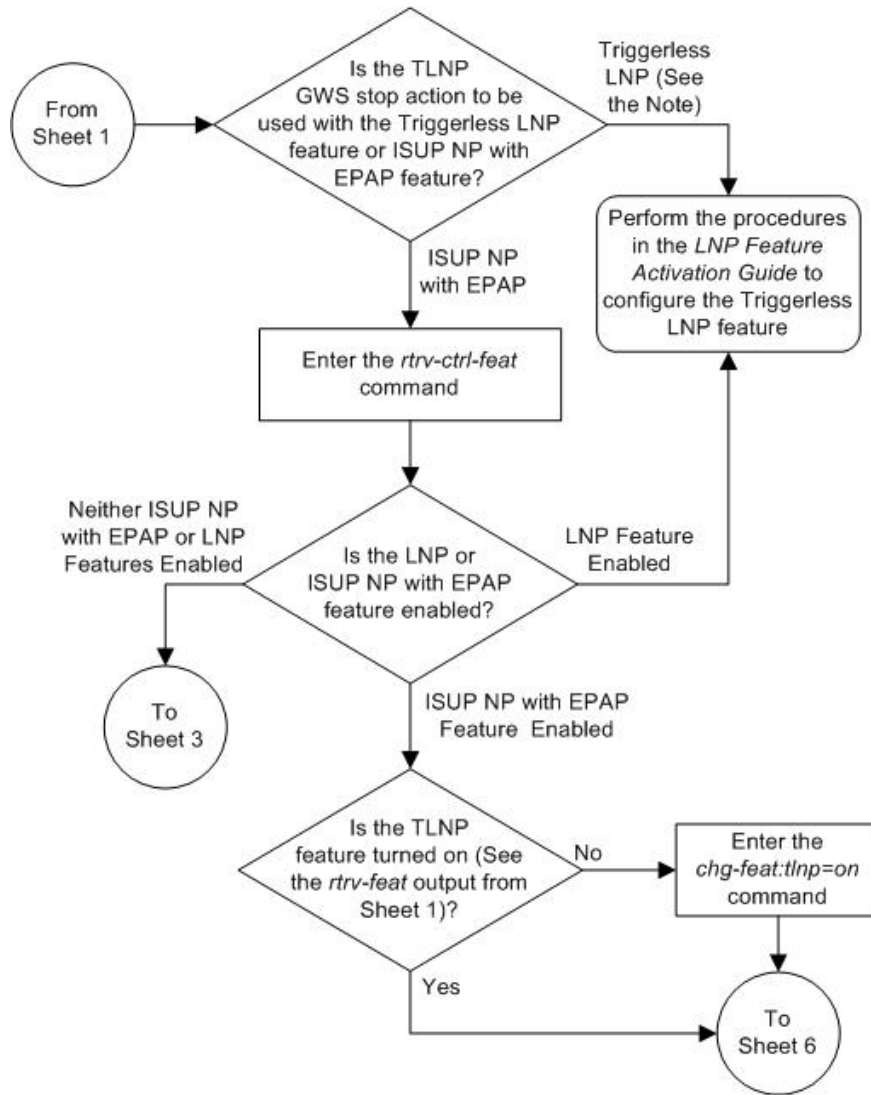

Note: If the TIF, TIF2, or TIF3 gateway screening stop actions are shown in the *rtrv-gws-actset* output on Sheet 1, the LNP and Triggerless LNP features cannot be used for the TLNP gateway screening stop action.

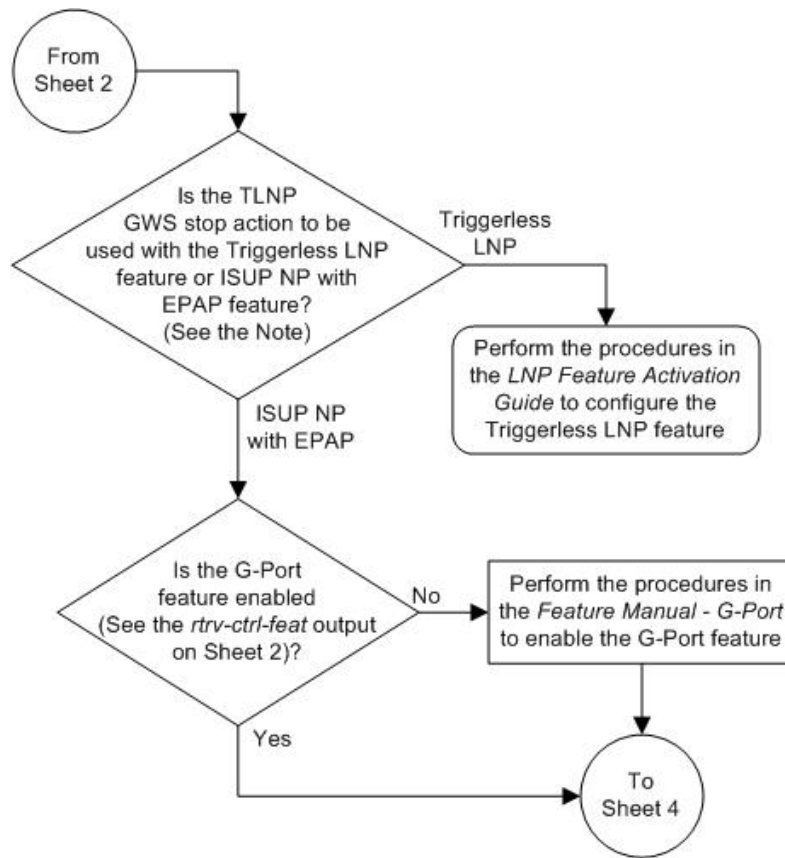



Note: If the TIF Number Portability, TIF SCS Forwarding, or TIF Simple Number Substitution features are shown in the *rtrv-ctrl-feat* output on Sheet 2 as enabled, the LNP and Triggerless LNP features cannot be used for the TLNP gateway screening stop action.

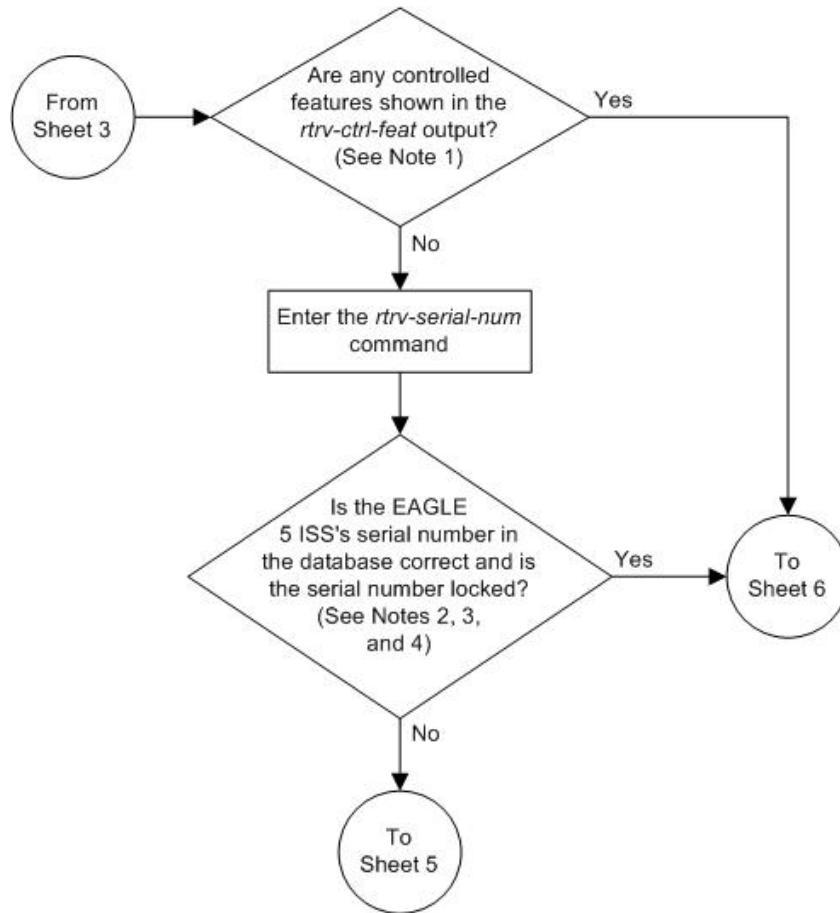

Notes:

1. If the *rtrv-ctrl-feat* output shows only the HC-MIM SLK Capacity feature with a quantity of 64, the answer to this question is no and the Eagle 5 ISS's serial number must be verified. This is the default entry for the *rtrv-ctrl-feat* output. This entry is shown whether or not the Eagle 5 ISS's serial number is in the database.
2. If the serial number is locked, it cannot be changed.
3. If the serial number is not locked, the controlled feature cannot be enabled.
4. The serial number can be found on a label affixed to the control shelf (shelf 1100).

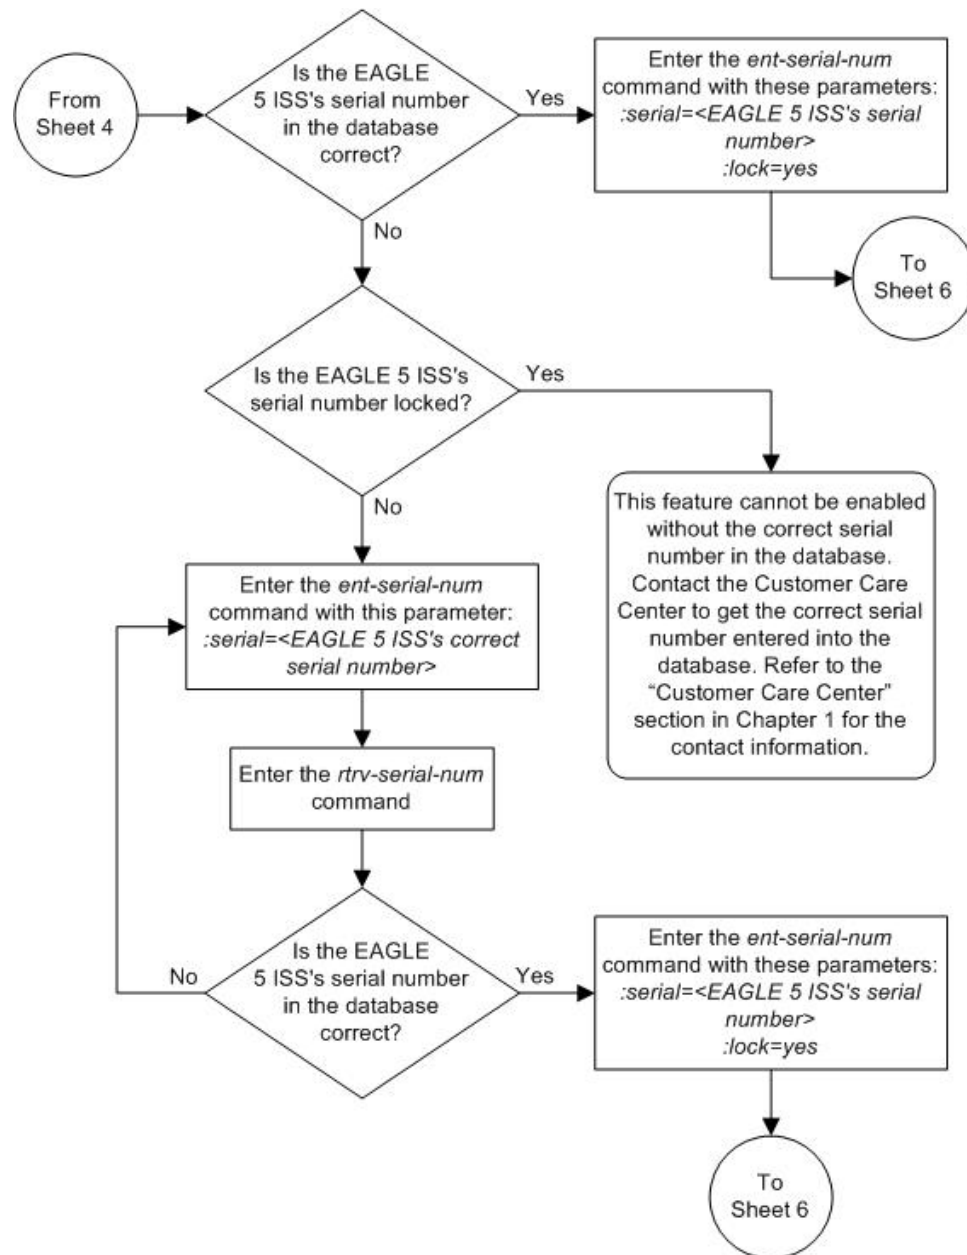

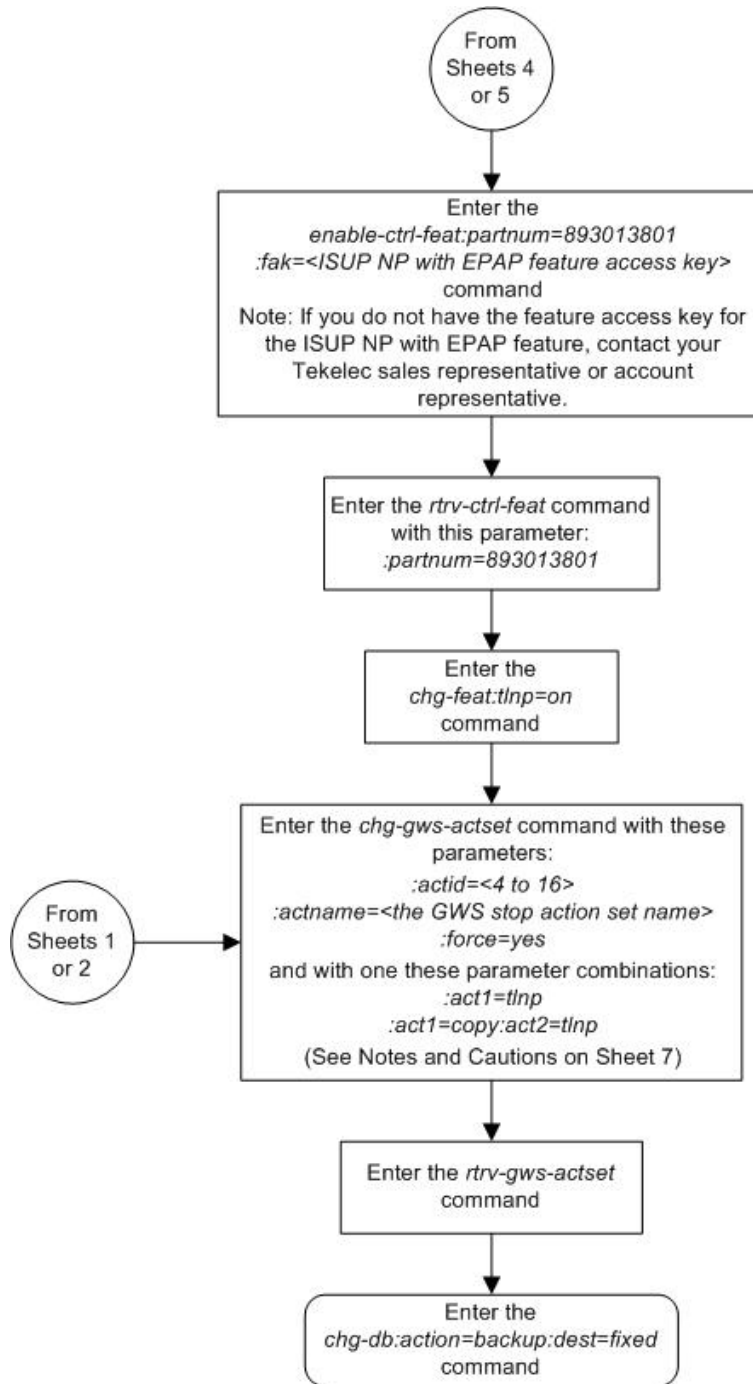

Notes:

1. The *force=yes* parameter must be specified with the *chg-gws-actset* command if an existing GWS stop action set is being changed.
2. The *force=yes* parameter can be specified with the *chg-gws-actset* command if a new GWS stop action set is being created, but is not necessary.
3. The TLNP GWS stop action cannot be in the same GWS stop action set with either the CNCF or RDCT GWS stop actions.
4. The *actname* parameter must be specified for a new GWS stop action set.
5. The *actname* parameter is not required, but can be specified, if an existing stop action set is being changed.
6. If the *actname* parameter value is different from what is shown in the *rtv-gws-actset* output for the GWS stop action set being changed, the name of the GWS stop action set will be changed to the new *actname* parameter value (see Caution 1).

Cautions:

1. **Changing the name of an existing GWS stop action set will prevent the actions defined in the GWS stop action set from being used to process the MSUs that pass gateway screening. If the name of the GWS stop action set is changed, enter the gateway screening retrieve commands (*rtv-scrset*, *rtv-scr-opc*, *rtv-scr-blkopc*, *rtv-scr-sio*, *rtv-scr-dpc*, *rtv-scr-blkdpc*, *rtv-scr-destfld*, *rtv-scr-isup*, *rtv-scr-cgpa*, *rtv-scr-tt*, *rtv-scr-cdpa*, and *rtv-scr-aftpc*) with the *actname* parameter and the old GWS stop action set name to identify the screens that need to be changed to use the new GWS stop action set name. To change these screens, perform the appropriate procedures in Chapters 3 through 15 in this manual.**
2. **Caution must be used when changing the stop actions in existing gateway screening stop action sets because these gateway screening stop action sets may be used by one or more gateway screening rules. Changes in the existing gateway screening stop action sets will change how MSUs that pass gateway screening are processed.**

Removing Gateway Screening Stop Action Sets

This procedure is used to remove a gateway screening stop action set from the database or a gateway screening stop action from a gateway screening stop action set from the database using the *chg-gws-actset* command.

The database can contain a maximum of 16 gateway screening stop action sets, with each set containing a maximum of 10 gateway screening stop actions. Five gateway screening stop actions have been defined.

The *chg-gws-actset* command uses these parameters in this procedure.

:actid – The ID number of the gateway screening stop action set. The value of this parameter is from 4 to 16.

:force – The *force=yes* parameter must be specified when changing the gateway screening stop actions of an existing gateway screening stop action set.

:all=none – Sets the value of each gateway screening stop action in the gateway screening stop action set to none.

:act1 to :act10 – One of ten gateway screening stop actions being removed from the gateway screening stop action set.

The first three gateway screening stop action sets (actid=1, actid=2, and actid=3) cannot be changed or removed.

No other optional parameters can be specified all=none parameter.

The force=yes parameter must be specified when changing an existing gateway screening stop action set.

1. Display the gateway screening stop action sets in the database with the rtrv-gws-actset command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
ACT  ACT      ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME      1    2    3    4    5    6    7    8    9    10
-----
1    copy      copy
2    rdct      rdct
3    cr        copy rdct
4    cncf      cncf
5    cpnf      copy cncf
6    cfrd      copy cncf rdct
7    cnrd      cncf rdct
8    tlnp      tlnp
9    tlcp      copy tlnp

GWS action set table is (9 of 16) 56% full
```


2. Either remove a gateway screening stop action set from the database or remove a gateway screening stop action from a gateway screening stop action set from the database by entering the chg-gws-actset command.

If you wish to remove the gateway screening stop actions from an existing gateway screening stop action set (stop action sets 4 through 16), enter the chg-gws-actset command with the all=none, actid, and force=yes parameters, as shown in this command example.

```
chg-gws-actset:actid=4:all=none:force=yes
```

If you wish to remove individual gateway screening stop actions from an existing gateway screening stop action set (stop action sets 4 through 16), enter the chg-gws-actset command with the stop action parameter (act1 through act10) value equal to none and the force=yes parameter, as shown in this command example.

```
chg-gws-actset:actid=5:act2=none:force=yes
```

 **CAUTION:** Caution must be used when changing the stop actions in existing gateway screening stop action sets because these gateway screening stop action sets may be used by one or more gateway screening rules. Changes in the existing gateway screening stop action sets will change how MSUs that pass gateway screening are processed.

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
CAUTION: GWS action set may be referenced by one or more GWS rules
CHG-GWS-ACTSET: MASP A - COMPLTD
```

3. Verify the changes using the rtrv-gws-actset command.

This is an example of the possible output.

```

rlghncxa03w 06-10-25 15:31:30 GMT EAGLE5 36.0.0
ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME  1    2    3    4    5    6    7    8    9    10
-----
1    copy  copy
2    rdct  rdct
3    cr    copy rdct
4    ----  ----
5    cpcncf copy
6    cncfrd cncf rdct
7    cpcfrd copy cncf rdct
8    tlnp  tlnp
9    cpnp  copy tlnp

GWS action set table is (8 of 16) 50% full
    
```


4. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```

BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
    
```

Figure 16: Removing Gateway Screening Stop Action Sets

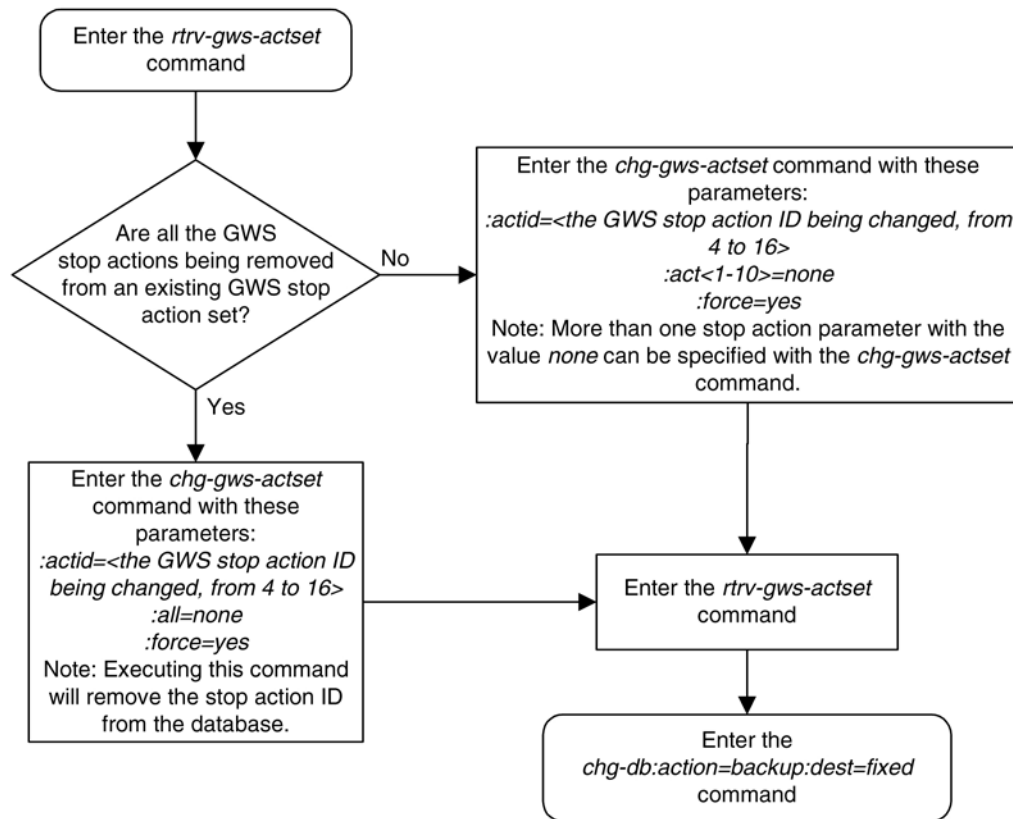

Setting the Threshold for Reporting Gateway Screening Activity

This procedure is used to set the threshold for reporting these gateway screening activities using the `set-gtwy-acthresh` command.

- The threshold for MSUs received on a gateway link set.
- The threshold for MSUs rejected on a gateway link set because of screening.

These thresholds are set on a linkset basis. These gateway screening activities are reported only if the threshold is set and only if the threshold is reached.

The `set-gtwy-acthresh` command uses these parameters.

`:intrvl` – The examination period, in minutes, during which the gateway screening activity thresholds are to be tested.

`:lsn` – The name of the linkset that the thresholds are assigned to.

`:recv` – The threshold for MSUs received on the gateway link set.

`:rej` – The threshold for MSUs rejected on the gateway link set because of screening.

Canceling the RTRV-LS Command

Because the `rtrv-ls` command used in this procedure can output information for a long period of time, the `rtrv-ls` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-ls` command can be canceled.

- Press the F9 function key on the keyboard at the terminal where the `rtrv-ls` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-ls` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-ls` command was entered, from another terminal other than the terminal where the `rtrv-ls` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the gateway screening thresholds in the database using the `rtrv-gtwy-acthresh` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
LSN      REJ      RECV     INTRVL
WY644368 10       1000     10
WY234456 25       2000     20
LN123556 25       2500     30
OP239900 -         5        5
```

2. Display the current linkset configuration using the `rtrv-ls` command.

The following is an example of the possible output.

```

rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
                                     L3T SLT
LSN      APCA      (SS7)  SCRNL SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsa1     240-020-000 ss01  1  1  yes A  1  off off off no  off
lsa2     240-030-000 ss02  1  2  no  C  3  on  on  on yes  off
lsa3     240-040-000 ss03  1  3  yes C  5  off off off yes  off
ln123556 240-050-000 ss01  1  8  yes C  5  on  on  on yes  off
op239900 240-060-000 ss01  1  7  yes C  5  on  on  on yes  off
wy234456 240-070-000 ss01  1  6  yes C  5  on  on  on yes  off
wy644368 240-080-000 ss01  1  5  yes C  5  on  on  on yes  off

                                     L3T SLT
LSN      APCA      (X25)  SCRNL SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
ls6      244-010-004 ss04  1  4  no  A  6  off off off ---  off
ls7      244-012-005 ss07  1  5  no  C  3  on  on  on ---  off
ls8      244-012-006 ss09  1  6  no  C  8  off off off ---  off

                                     L3T SLT
LSN      APCI      (SS7)  SCRNL SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsi1     1-111-1     ss01  1  1  yes A  1  off off off ---  ---
lsi2     1-111-2     ss02  1  2  no  C  3  on  on  on ---  ---
lsi3     1-111-3     ss03  1  3  yes C  5  off off off ---  ---

                                     L3T SLT
LSN      APCN      (SS7)  SCRNL SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsn1     11111     ss01  1  1  yes A  1  off off off ---  off
lsn2     11112     ss02  1  2  no  C  3  on  on  on ---  off
lsn3     11113     ss03  1  3  yes C  5  off off off ---  off

Link set table is ( 12 of 1024) 1% full

```

3. Set the gateway screening thresholds for a linkset using the `set-gtwy-acthresh` command.

For this example, enter this command.

```
set-gtwy-acthresh:lsn=lsa2:intrvl=20:rej=30:rcv=2500
```

When this command has successfully completed, a message similar to the following should appear.

```

rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0
SET-GTWY-TRSHLD: MASP A - COMPLTD

```

4. Verify the changes using the `rtrv-gtwy-acthresh` command with the linkset name specified in step 3.

For this example, enter this command.

```
rtrv-gtwy-acthresh:lsn=lsa2
```

The following is an example of the possible output.

```

rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
LSN      REJ      RECV      INTRVL
LSA2     30       2500     20


```

5. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.  
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.  
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.  
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 17: Setting the Threshold for Reporting Gateway Screening Activity

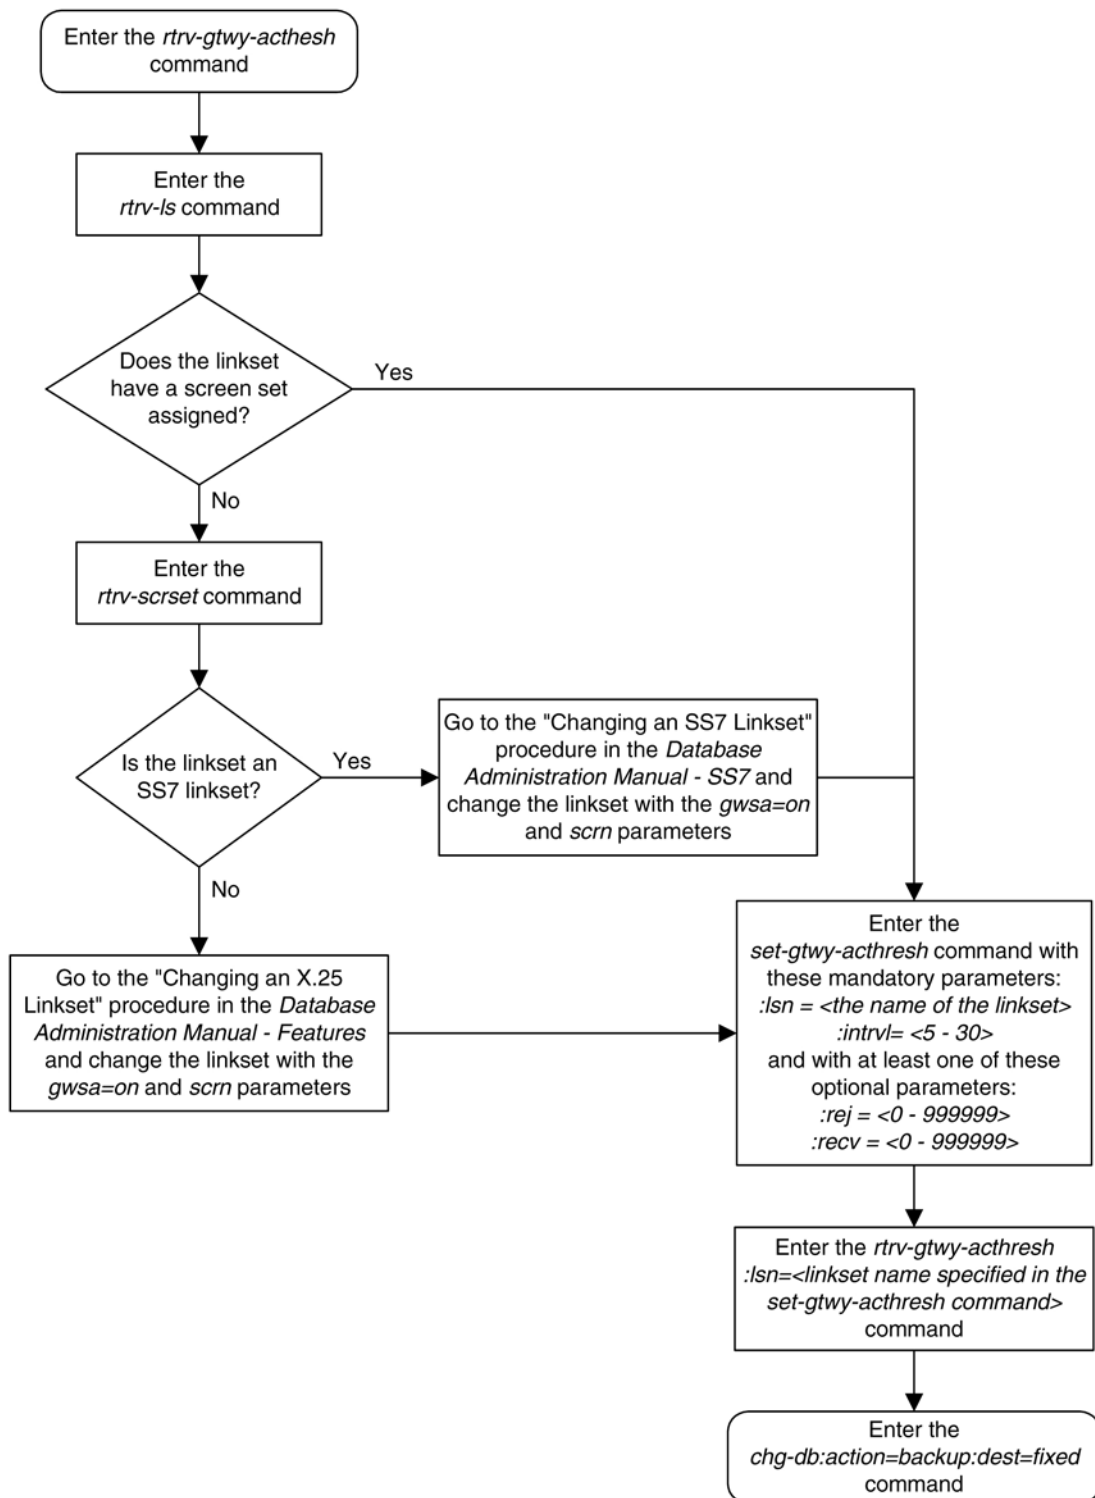

Setting the Maximum Number of Gateway Screening Rejected Messages

When an MSU is rejected because of gateway screening, a UIM is sent to the terminal alerting the user that the MSU has been rejected. The EAGLE 5 ISS allows the user to configure the maximum number of these UIMs that can be sent to the terminal for a specified time period. This procedure is used to configure the maximum number of UIMs sent to the terminal and the time period using the `set-scrrej-prmtrs` command.

The `set-scrrej-prmtrs` command uses these parameters.

`:limit` – the number of UIMs to be sent to the EAGLE 5 ISS terminals during the time period specified by the `intrvl` parameter. The values for this parameter range from 0 to 9999.

`:intrvl` – the amount of time, in minutes, that the maximum number of UIMs, defined by the `limit` parameter, can be sent to the EAGLE 5 ISS terminals.

The examples in this procedure are used to set the number of UIMs to 500 and the time period to 20 minutes.

1. Display the current gateway screening rejected UIM limit in the database using the `rtrv-gtwy-prmtrs` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
LIMIT INTRVL
1000 15
```

2. Set the gateway screening rejected UIM limit using the `set-scrrej-prmtrs` command.

For this example, enter this command.

```
set-scrrej-prmtrs:limit=500:intrvl=20
```

When this command has successfully completed, a message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
SET-SCRREJ-PRMTRS: MASP A - COMPLTD
```

3. Verify the changes using the `rtrv-gtwy-prmtrs` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
LIMIT INTRVL
500 20
```


4. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
```

BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.

Figure 18: Setting the Maximum Number of Gateway Screening Rejected Messages

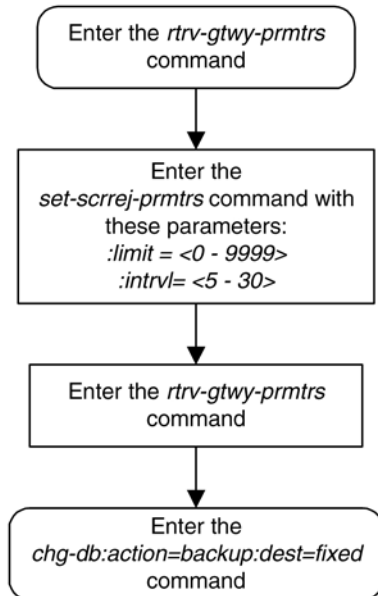

Chapter 3

Allowed Affected Point Code (AFTPC) Screen Configuration

Topics:

- [Introduction Page 98](#)
- [Adding an Allowed Affected Point Code Screen Page 102](#)
- [Removing an Allowed Affected Point Code Screen Page 110](#)
- [Changing an Allowed Affected Point Code Screen Page 114](#)

Chapter 3, Allowed Affected Point Code (AFTPC) Screen Configuration, contains the procedures necessary to configure allowed affected point code screens.

Introduction

The allowed affected point code (AFTPC) screen is used to identify affected point codes. Messages containing the allowed affected point code in the AFTPC screen are allowed into the EAGLE 5 ISS for further processing. The gray shaded areas in [Figure 20: Allowed Affected Point Code Screening Function](#) on page 101 shows the fields of the SS7 message that are checked by the AFTPC screening function. Affected point codes are found in subsystem-prohibited (SSP), subsystem-status-test (SST) and subsystem-allowed (SSA) SCCP management messages. This is the last screen in the gateway screening process.

Gateway Screening Actions

The Gateway Screening process stops with this screen. The `nsf i` parameter value can only be `stop`.

If a match is not found, the message is discarded.


If a match is found, the message is processed. If a gateway screening stop action set is specified with the screen, shown by the `actname` parameter value, the message is processed according to the gateway screening stop actions that are assigned to the gateway screening stop action set.

- If the `copy` gateway screening stop action is specified, the message is processed and a copy of the message is sent by the STPLAN feature to an external application.
- If the `rdct` (redirect) gateway screening stop action is specified, the message is diverted from the original destination and sent to another destination with the Database Transport Access feature, specified by global title translation, for further processing.
- If the `cncf` gateway screening stop action is specified, the PIP parameter in the incoming ISUP IAM message is converted to the GN parameter. The GN parameter in the incoming ISUP IAM message is converted to the PIP parameter. The message is then sent to the node specified by the DPC in the routing label in the message. For more information on the Calling Name Conversion Facility feature, see [Calling Name Conversion Facility \(CNCF\) Configuration](#) on page 417.
- If the `tlnp` gateway screening stop action is specified, ISUP IAMs that pass gateway screening are processed either by the ISUP NP with EPAP feature (if the ISUP NP with EPAP feature is enabled and turned on) or by the Triggerless LNP feature (if the Triggerless LNP feature is turned on). The ISUP NP with EPAP feature is discussed in more detail in the *Feature Manual - G-Port*. The Triggerless LNP feature is discussed in more detail in the *LNP Feature Activation Guide*.
- If the `tinp` gateway screening stop action is specified, ISUP IAMs that pass gateway screening are intercepted by the Triggerless ISUP based Number Portability (TINP) feature and converted to include the routing number (RN) if the call is to a ported number. The TINP feature is discussed in more detail in the *Feature Manual - G-Port*.
- If the `tif`, `tif2`, or `tif3` gateway screening stop actions are specified, TIF processing is applied to the message.

Allowed AFTPC Screening Actions

Figure 19: Allowed AFTPC Screening Actions on page 99 shows the screening actions of the allowed AFTPC screen.

Figure 19: Allowed AFTPC Screening Actions

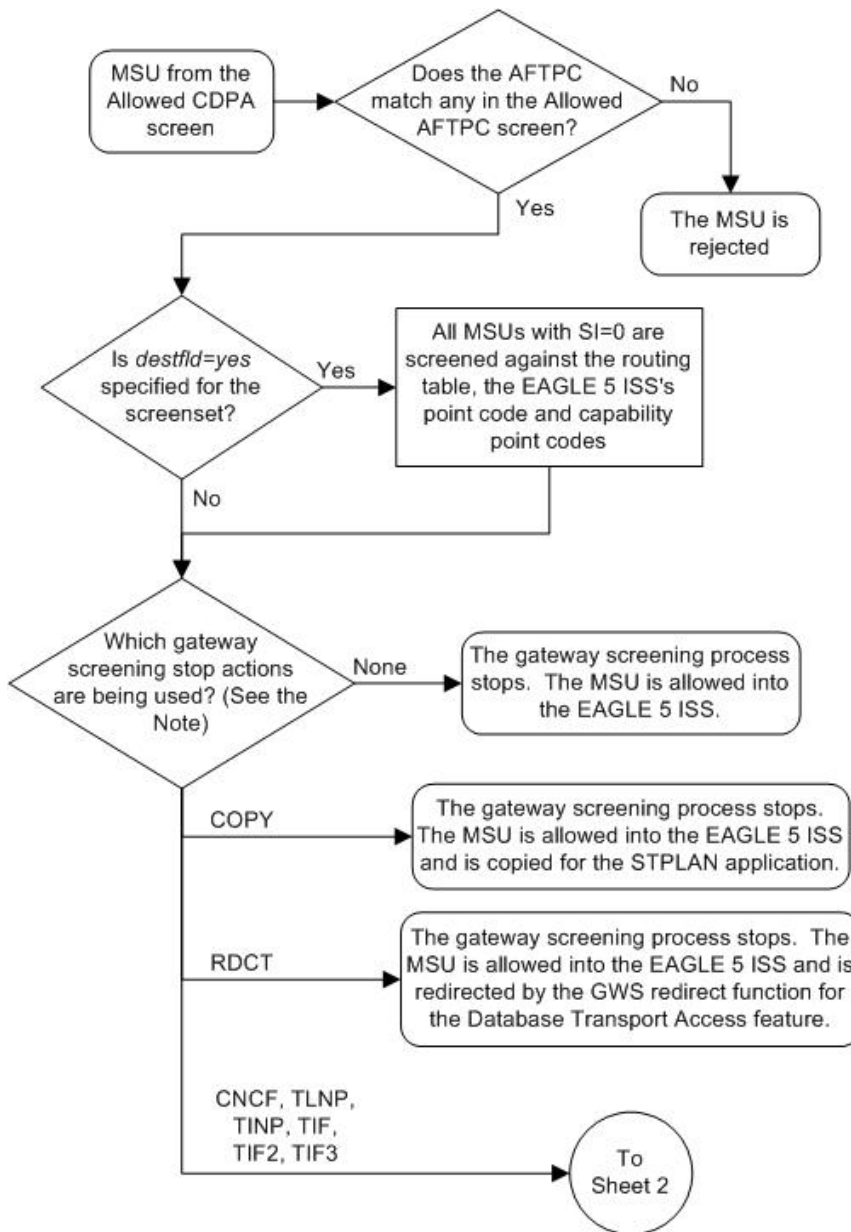

Note: Combinations of the gateway screening stop actions shown on Sheets 2 and 3 may be assigned to a gateway screening stop action set. Refer to the Configuring Gateway Screening Stop Action Sets and the Configuring TLNP Gateway Screening Stop Action Sets procedures in Chapter 2 of this manual for the combinations that can be used.

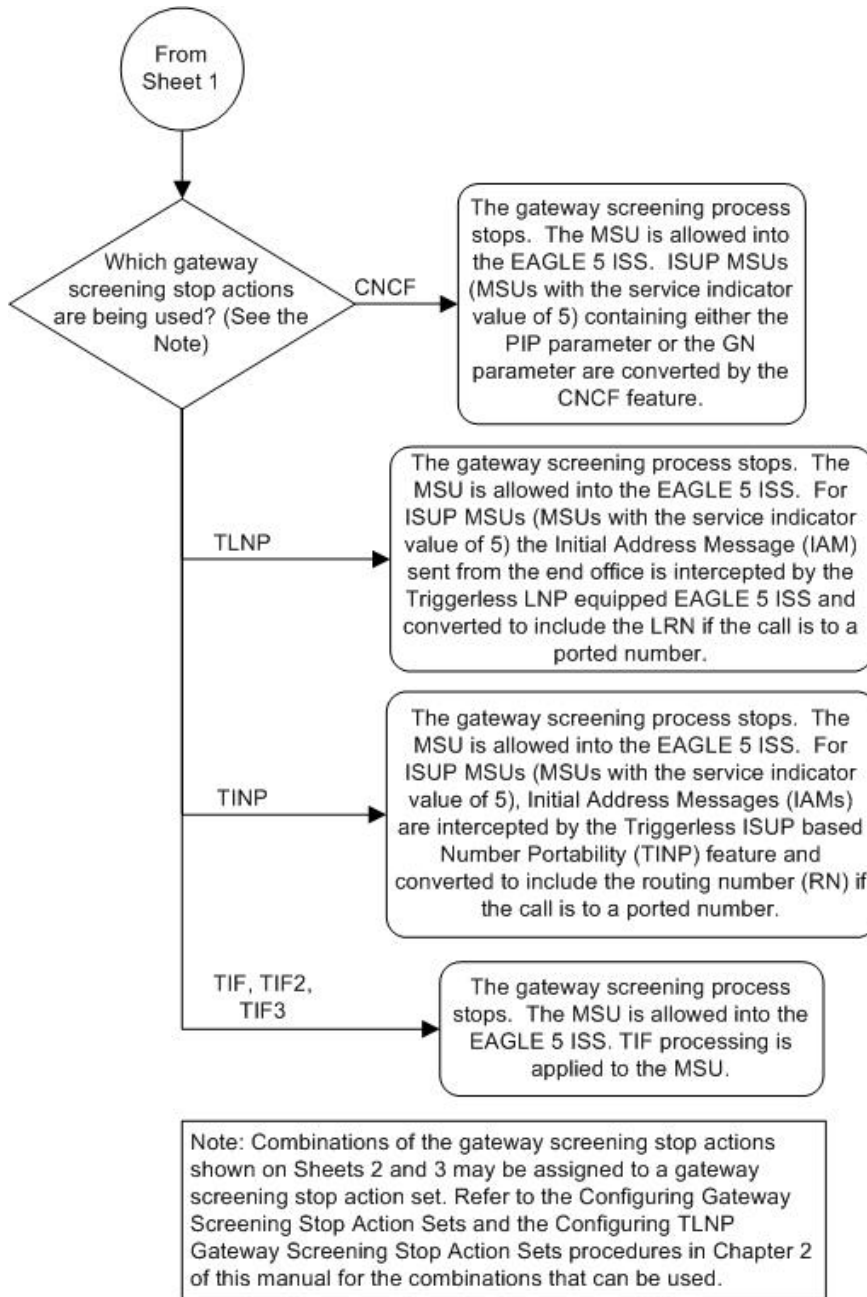


Figure 20: Allowed Affected Point Code Screening Function

ANSI MSU (ANSI Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF					
		DPC NCM NC NI	Routing Label OPC NCM NC NI		SLS xx	CGPA	CDPA

ITU-I MSU (ITU International Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF					
		DPC ID AREA ZONE	Routing Label OPC ID AREA ZONE		SLS xx	CGPA	CDPA

14-Bit ITU-N MSU (14-Bit ITU National Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF					
		DPC NPC	Routing Label OPC NPC		SLS xx	CGPA	CDPA

24-Bit ITU-N MSU (24-Bit ITU National Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF					
		DPC SP SSA MSA	Routing Label OPC SP SSA MSA		SLS xx	CGPA	CDPA

Adding an Allowed Affected Point Code Screen

This procedure is used to add an allowed affected point code (AFTPC) screen to the database using the `ent-scr-aftpc` command. The parameters used by the `ent-scr-aftpc` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The examples in this procedure are used to add the allowed AFTPC screen data shown in [Table 14: Example Gateway Screening Allowed AFTPC Configuration Table](#) on page 103 and based on the

example configurations shown in [Figure 5: Gateway Screening Configuration - Example 1](#) on page 42 and [Figure 8: Gateway Screening Configuration - Example 4](#) on page 47.

Table 14: Example Gateway Screening Allowed AFTPC Configuration Table

Screening Reference	NI	NC	NCM	SSN	NSFI	ACTNAME
gw20	008	008	008	250	stop	COPY
ls04	010	010	010	015	stop	COPY

Note: If you using multiple-part ITU national point codes with gateway screening, see the [14-Bit ITU National Point Code Formats](#) on page 34 section.

Specifying a Range of Values

A range of values can be specified for the point code parameters *ni*, *nc*, or *ncm*.

If a range of values is specified for any of these parameters, and the value of the other parameters match existing values for the screening reference name, the range of values for the point code parameter cannot include any values for that parameter that are currently provisioned for the screening reference name.

For example, screening reference name *scr1* contains these entries:

SR	NI	NC	NCM	SSN	NSFI	NSR/ACT
SCR1	240	001	010	012	STOP	-----
SCR1	241	010	020	015	STOP	-----

Another entry for screening reference *scr1* with the *ni* value of 240 and the *nc* value of 001 cannot be specified if the range of values for the *ncm* parameter includes the value 010.

The ANSI point code parameter values can be specified as a single value, a range of values, or with an asterisk (*). The asterisk specifies all possible values for the *ni*, *nc*, and *ncm* parameters. [Table 15: Valid Value Combinations for ANSI Point Code Parameters](#) on page 103 shows the valid combinations of these parameter values.

Table 15: Valid Value Combinations for ANSI Point Code Parameters

NI	NC	NCM
Single Value	Single Value	Single Value
Single Value	Single Value	Range of Values
Single Value	Single Value	Asterisk
Single Value	Range of Values	Asterisk
Single Value	Asterisk	Asterisk
Range of Values	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

A range of values can also be specified for an ITU-I or 24-bit ITU-N point code parameter using a combination of asterisks (*) and single values for the point code parameters. [Table 16: Valid Value](#)

[Combinations for ITU-I Point Code Parameters](#) on page 104 shows the valid combinations of the ITU-I parameter values. [Table 17: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters](#) on page 104 shows the valid combinations of the 24-bit ITU-N parameter values.

Table 16: Valid Value Combinations for ITU-I Point Code Parameters

ZONE	AREA	ID
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

Table 17: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters

MSA	SSA	SP
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

1. Verify that the gateway screening feature is on, by entering the `rtrv-feat` command.

If the gateway screening feature is on, the `GWS` field is set to `on`.

Note: The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

If the gateway screening feature is on, shown by the entry `GWS = on` in the `rtrv-feat` command output, skip step 2, and go to step 3.

2. Turn the gateway screening feature on by entering this command.

```
chg-feat:gws=on
```

Note: Once the gateway screening feature is turned on with the `chg-feat` command, it cannot be turned off.

The gateway screening feature must be purchased before you turn this feature on with the `chg-feat` command. If you are not sure if you have purchased the gateway screening feature, contact your Tekelec Sales Representative or Account Representative.

When the `chg-feat` has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 11:43:04 GMT EAGLE5 36.0.0
CHG-FEAT: MASP A - COMPLTD
```

3. Display all allowed AFTPC screens in the database using the `rtrv-scr-aftpc` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED AFTPC
SR      REF  RULES
IEC     YES   2
WRD2    YES   1
WRD4    YES   9
```

If the screening reference names that you wish to add with this procedure are not shown in the `rtrv-scr-aftpc` command output, go to step 4. For this example, the screening reference names are not shown. If these screening reference names are shown in the `rtrv-scr-aftpc` command output, make sure the screening data you wish to enter is not already in the database by entering the `rtrv-scr-aftpc` command with the screening reference name. For example, enter the `rtrv-scr-aftpc:sr=iec` command. The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED AFTPC
SR  NI      NC      NCM      SSN      NSFI      NSR/ACT
IEC 010     010     011     012     STOP     -----
IEC 010     010     013     012     STOP     -----
```

If a gateway screening stop action set is to be assigned to the allowed AFTPC screen being added to the database, go to step 4. Otherwise, go to step 5.

4. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
ACT ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID  NAME  1    2    3    4    5    6    7    8    9    10
---  ---
1    copy  copy
2    rdct  rdct
3    cr    copy rdct
4    cnf   cnf
5    cpcnf copy cnf
6    cnfrd cnf rdct
7    cpcfrd copy cnf rdct

GWS action set table is (7 of 16) 44% full
```

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to configure the required gateway screening stop action set.

Note: If the point code being added in this procedure is not an ITU-I or 14-bit ITU-N spare point code, skip step 5 and to step 6.

Note: If the point code being added in this procedure is an ITU-I or 14-bit ITU-N spare point code and the screening reference contains ITU-I or 14-bit ITU-N spare point codes, skip step 5 and go to step 6.

5. Display the status of the ITU National and International Spare Point Code Support feature by entering the `rtrv-ctrl-feat` command with the ITU National and International Spare Point Code Support feature part number.

Enter this command.

```
rtrv-ctrl-feat:partnum=893013601
```

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name          Partnum  Status  Quantity
Spare Point Code Support 893013601 on      ----

The following features have been temporarily enabled:

Feature Name          Partnum  Status  Quantity  Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name          Partnum
Zero entries found.
```

If the ITU National and International Spare Point Code Support feature is enabled, go to step 6.

If the ITU National and International Spare Point Code Support feature is not enabled, perform the “Activating the ITU National and International Spare Point Code Support Feature” procedure in the Database *Administration Manual - SS7* to enable the ITU National and International Spare Point Code Support feature as required. After the feature has been enabled, go to step 6.

6. Add the new allowed AFTPC screen to the database using the `ent-scr-aftpc` command.



CAUTION

CAUTION: The EAGLE 5 ISS does not support redirecting MSUs for the DTA feature or intercepting ISUP IAM messages for the Calling Name Conversion Facility feature from the allowed AFTPC screen. Gateway screening stop action sets containing either the RDCT (redirect) or CNCF (calling name conversion facility) stop actions should not be assigned to the allowed AFTPC screen. If a gateway screening stop action set containing the RDCT or CNCF stop actions is specified with the `ent-scr-aftpc` command, unsolicited information message (UIM) 1127 is generated when the attempt is made to redirect MSUs from the allowed AFTPC screen. Unsolicited information message (UIM) 1217 is generated when ISUP IAM MSUs are intercepted from the allowed AFTPC screen. For more information on UIMs 1127 and 1217, go to the *Unsolicited Alarm and Information Messages Manual*.

If a gateway screening stop action is to be assigned to the allowed AFTPC screen being changed, enter the `ent-scr-aftpc` command with the `nsfi=stop` parameter and the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 4.

The following list contains the values for `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `npc`, `msa`, `ssa`, `sp`, and `ssn` parameters:

- `ni` – 0 - 255 or an asterisk (*)
- `nc` – 0 - 255 or an asterisk (*)
- `ncm` – 0 - 255 or an asterisk (*)
- `zone` – 0 - 7 or an asterisk (*)

- area – 0 - 255 or an asterisk (*)
- id – 0 - 7 or an asterisk (*)
- npc – 1 - 16383 or an asterisk (*)
- msa – 0 - 255 or an asterisk (*)
- ssa – 0 - 255 or an asterisk (*)
- sp – 0 - 255 or an asterisk (*)
- ssn – 0 - 255 or an asterisk (*)

A range of values can be specified for the *ni*, *nc*, and *ncm* parameters. See the [“Specifying a Range of Values”](#) on page 103 section for more information on how the asterisk and a range of values are used for the *ni*, *nc*, and *ncm* parameters.

To add a spare point code to the allowed AFTPC screen, the *pcst=s* parameter must be specified. To add a non-spare point code to the allowed AFTPC screen, the *pcst* parameter does not have to be specified. If the *pcst* parameter is specified for a screen containing an ITU-I or 14-bit ITU-N non-spare point code, the value must be none. For this example, enter these commands.

```
ent-scr-aftpc:sr=gw20:ni=008:nc=008:ncm=008:ssn=250:nsfi=stop
:actname=copy
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
ENT-SCR-AFTPC: SCREEN SET AFFECTED - GW20 1% FULL
ENT-SCR-AFTPC: MASP A - COMPLTD
```

```
ent-scr-aftpc:sr=ls04:ni=010:nc=010:ncm=010:ssn=015:nsfi=stop
:actname=copy
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0
ENT-SCR-AFTPC: SCREEN SET AFFECTED - LS04 1% FULL
ENT-SCR-AFTPC: MASP A - COMPLTD
```

7. Verify the changes using the `rtrv-scr-aftpc` command with the screening reference name used in step 6.

For this example, enter these commands.

```
rtrv-scr-aftpc:sr=gw20
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED AFTPC
SR  NI      NC      NCM      SSN      NSF1    NSR/ACT
GW20 008      008      008      250      STOP    COPY
```

```
rtrv-scr-aftpc:sr=ls04
```

The following is an example of the possible output.


```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED AFTPC
SR  NI      NC      NCM      SSN      NSF1    NSR/ACT
LS04 010      010      010      015      STOP    COPY
```


- Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 21: Adding an Allowed Affected Point Code Screen

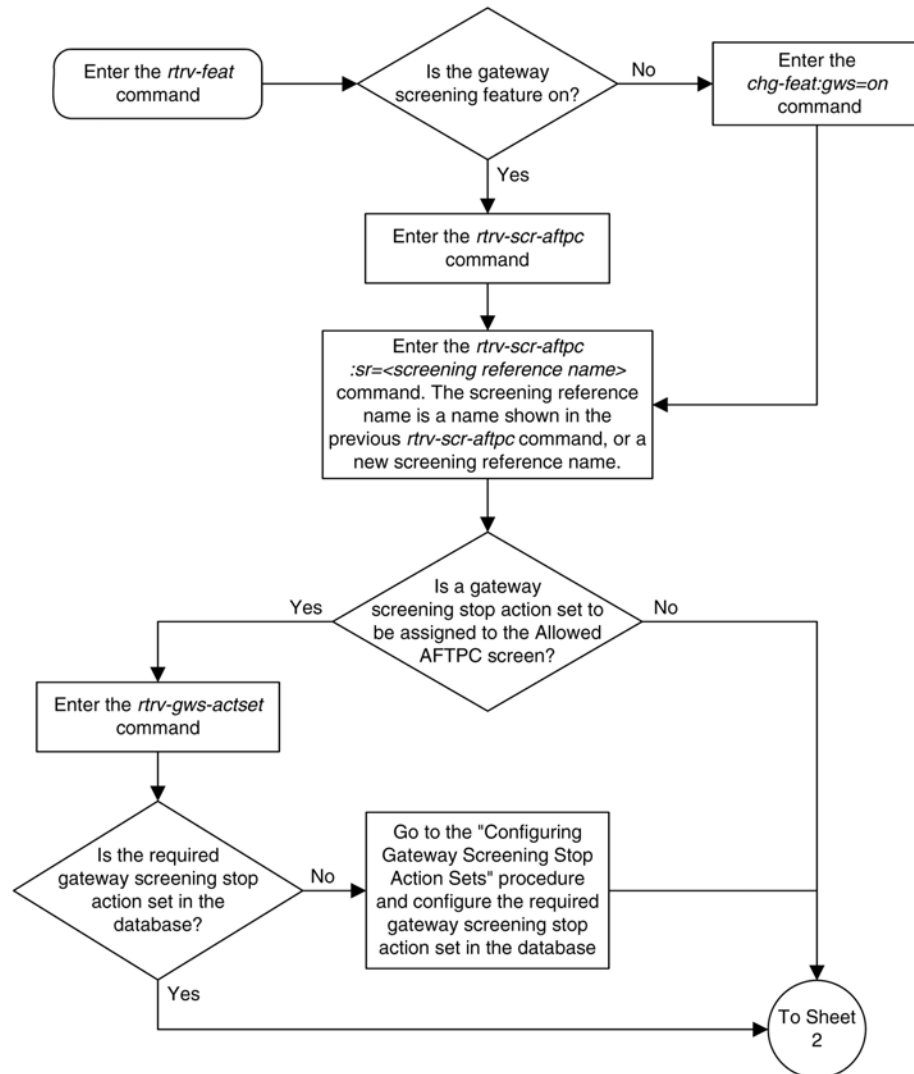

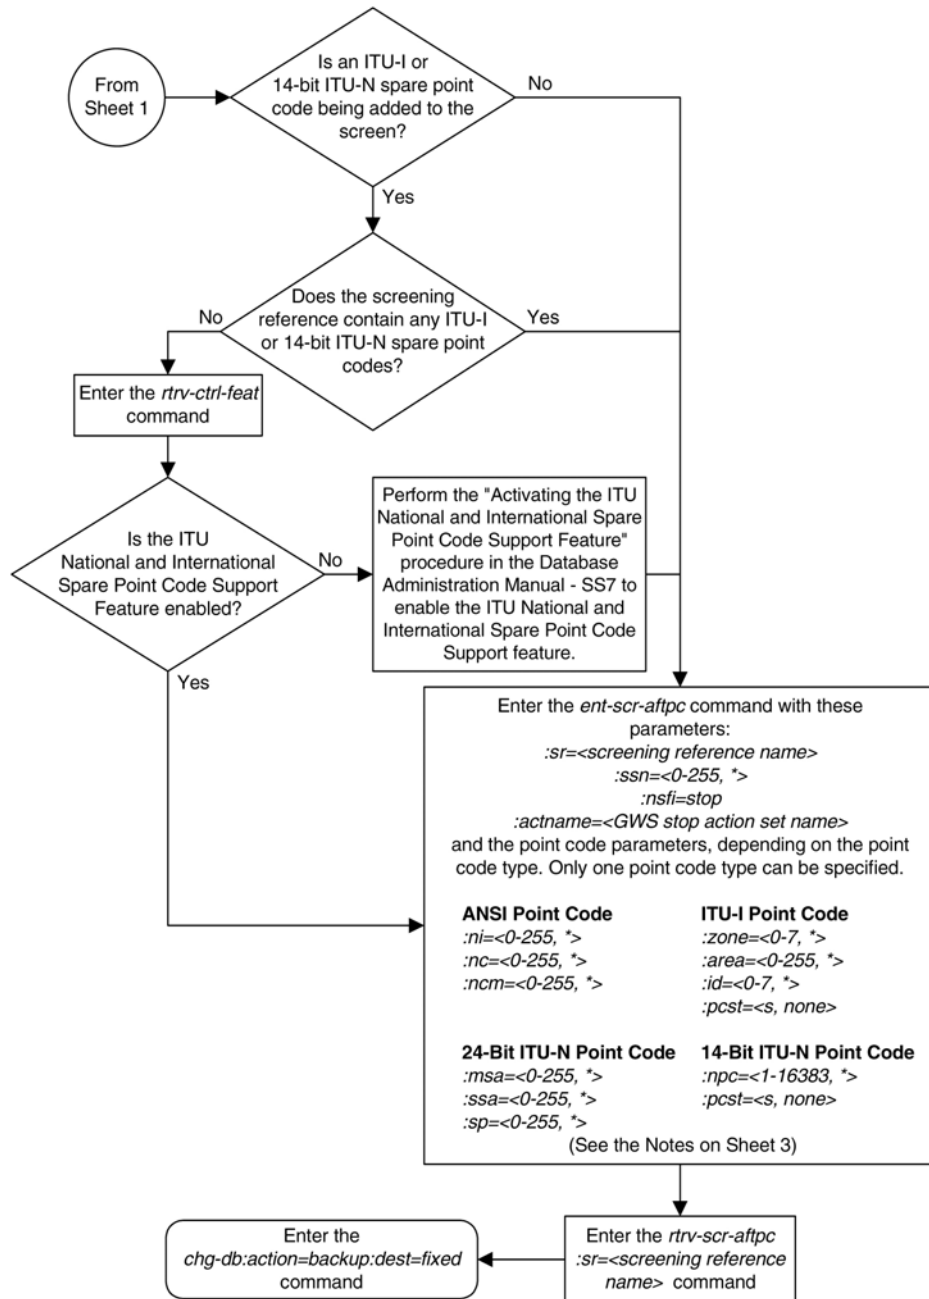

Notes:

1. A range of values can be specified for the *ni*, *nc*, or *ncm* parameters by inserting double ampersands (&&) between the parameter values defining the range. For example, to specify the range 025 to 200 for the *ni* parameter, enter 025&&200 for the *ni* parameter value.
2. The asterisk (*) specifies the entire range of values for that parameter.
For more information about specifying a range of values and about using the asterisk, see the "Gateway Screening Attributes" section in Chapter 2 and the "Specifying a Range of Values" section in this procedure.
3. The *actname* parameter is optional. If the *actname* parameter is specified, the *actname* parameter value is one of the gateway screening stop action set names shown in the *rtrv-gws-actset* output on Sheet 1.
4. To add a non-spare point code, the *pcst* parameter does not have to be specified. If the *pcst* parameter is specified for a screen containing an ITU-I or 14-bit ITU-N non-spare point code, the value must be *none*.
5. To add a spare point code, the *pcst=s* parameter must be specified.

Removing an Allowed Affected Point Code Screen

This procedure is used to remove an allowed affected point code (AFTPC) screen from the database using the `dlt-scr-aftpc` command. The parameters used by the `dlt-scr-aftpc` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure removes the allowed AFTPC screen `wrd0` from the database.

Note: If you using multiple-part ITU national point codes with gateway screening, see the [14-Bit ITU National Point Code Formats](#) on page 34 section.

1. Display the allowed AFTPC screens in the database using the `rtrv-scr-aftpc` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED AFTPC
SR      REF  RULES
GW20   YES   1
IEC    YES   2
LS04   YES   1
WRD0   YES   1
WRD2   YES   1
WRD4   YES   9
```

From the `rtrv-scr-aftpc` output, display the allowed AFTPC screen you wish to remove using the `rtrv-scr-aftpc` command with the screening reference name. For this example, enter the `rtrv-scr-aftpc:sr=wrd0` command. The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED AFTPC
SR      ZONE  AREA  ID      SSN      NSFI      NSR/ACT
WRD0    1       004   6       023     STOP     -----
```

2. An allowed AFTPC screen can only be referenced by an allowed CDPA screen.

Verify any references to the allowed AFTPC screen being removed from the database using the `rtrv-scr-cdpa:nsfi=aftpc` command. The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED CDPA
SR      ZONE  AREA  ID      SSN      SCMGFID  NSFI    NSR/ACT
IEC     1      134   *       001      002      AFTPC   IEC

SR      ZONE  AREA  ID      SSN      SCMGFID  NSFI    NSR/ACT
WRD1    1      004   6       001      005      AFTPC   WRD0

SR      NPC      SSN      SCMGFID  NSFI    NSR/ACT
WRD4    12345     001      100      AFTPC   IEC
```

If the screen being removed is referenced by any CDPA screens, perform the [Changing an Allowed Called Party Address Screen](#) on page 143 procedure to change the NSFI of those CDPA screens to reference other AFTPC screens or change the NSFI of these screens to STOP.

- Remove the allowed AFTPC screen from the database using the `dlt-scr-aftpc` command with the screening reference name shown in the `rtrv-scr-aftpc` output in step 1 and with the point code parameter values (`ni`, `nc`, `ncm`, or `zone`, `area`, `id`, or `npc`, or `msa`, `ssa`, `sp`) and the `ssn` parameter value of the screen being removed from the database.

The values for these parameters must be entered exactly as shown in the `rtrv-scr-aftpc` output.

To remove an entry containing either an ITU-I or a 14-bit ITU-N spare point code, the `pcst=s` parameter must be specified with the `dlt-scr-aftpc` command.

To remove an entry containing either an ITU-I or a 14-bit ITU-N non-spare point code, the `pcst` parameter does not have to be specified with the `dlt-scr-aftpc` command. If the `pcst` parameter is specified, the value must be `none`.

For this example, enter this command.

```
dlt-scr-aftpc:sr=wrdo:zone=1:area=004:id=6:ssn=023
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0
DLT-SCR-AFTPC: SCREEN SET AFFECTED - WRD0 0% FULL
DLT-SCR-AFTPC: MASP A - COMPLTD
```

- Verify the changes using the `rtrv-scr-aftpc` command with screening reference name used in step 3.

For this example, enter this command.

```
rtrv-scr-aftpc:sr=wrdo
```

The following message should appear.

```
E2573 Cmd Rej: SR or NSR does not reference an existing SR
```


This message shows that the specified screening reference name is not in the database and the action of the `dlt-scr-aftpc` command in step 5 was successful. If the specified screening reference name contained more than one entry when the `dlt-scr-aftpc` command was executed in step 4, the `rtrv-scr-aftpc:sr=` command output would show the remaining entries in the screening reference instead of error message E2573.

5. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.  
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.  
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.  
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 22: Removing an Allowed Affected Point Code Screen

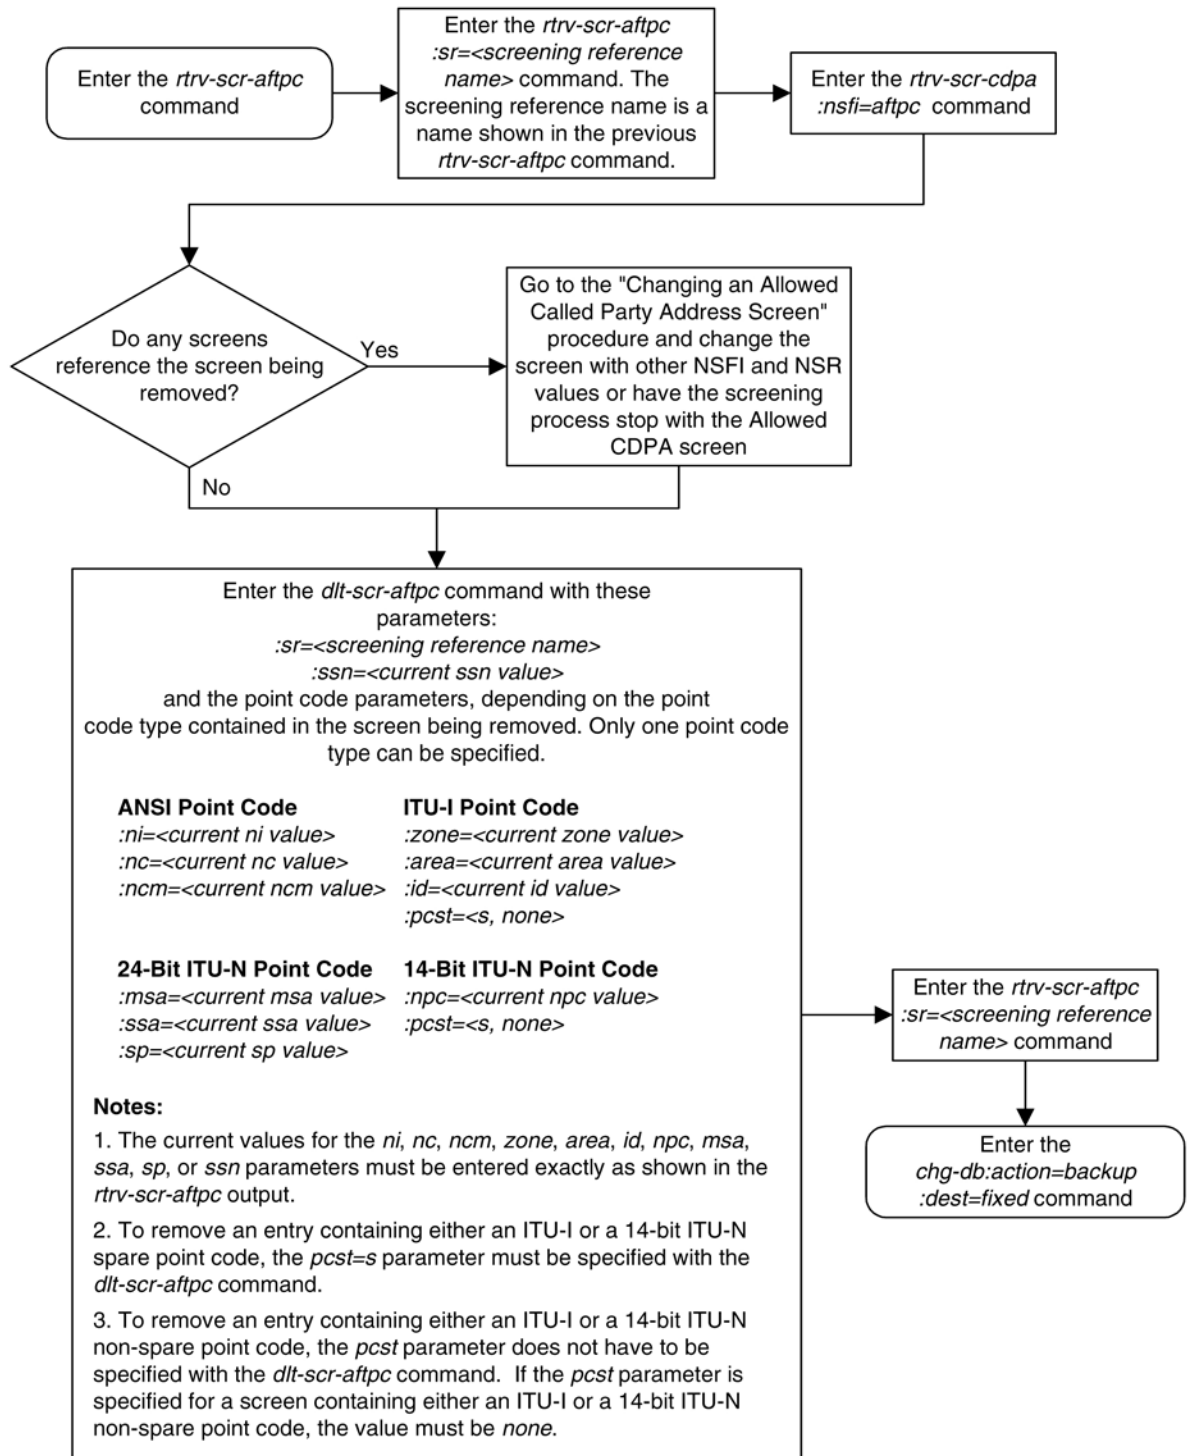

Changing an Allowed Affected Point Code Screen

This procedure is used to change the attributes of an allowed affected point code (AFTPC) screen in the database using the `chg-scr-aftpc` command. The parameters used by the `chg-scr-aftpc` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure is used to change the point code 009-009-009 for the allowed AFTPC screen `gw21` to 100-100-100, and the subsystem number from 253 to 150.

Note: If you using multiple-part ITU national point codes with gateway screening, see the [14-Bit ITU National Point Code Formats](#) on page 34 section.

Specifying a Range of Values

A range of values can be specified for the point code parameters `ni`, `nc`, or `ncm`.

If a range of values is specified for any of these parameters, and the value of the other parameters match existing values for the screening reference name, the range of values for the point code parameter cannot include any values for that parameter that are currently provisioned for the screening reference name.

For example, screening reference name `scr1` contains these entries:

SR	NI	NC	NCM	SSN	NSFI	NSR/ACT
SCR1	240	001	010	012	STOP	-----
SCR1	241	010	020	015	STOP	-----

Another entry for screening reference `scr1` with the `ni` value of 240 and the `nc` value of 001 cannot be specified if the range of values for the `ncm` parameter includes the value 010.

The ANSI point code parameter values can be specified as a single value, a range of values, or with an asterisk (*). The asterisk specifies all possible values for the `ni`, `nc`, and `ncm` parameters. [Table 18: Valid Value Combinations for ANSI Point Code Parameters](#) on page 114 shows the valid combinations of these parameter values.

Table 18: Valid Value Combinations for ANSI Point Code Parameters

NI	NC	NCM
Single Value	Single Value	Single Value
Single Value	Single Value	Range of Values
Single Value	Single Value	Asterisk
Single Value	Range of Values	Asterisk
Single Value	Asterisk	Asterisk

NI	NC	NCM
Range of Values	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

A range of values can also be specified for an ITU-I or 24-bit ITU-N point code parameter using a combination of asterisks (*) and single values for the point code parameters. [Table 19: Valid Value Combinations for ITU-I Point Code Parameters](#) on page 115 shows the valid combinations of the ITU-I parameter values. [Table 20: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters](#) on page 115 shows the valid combinations of the 24-bit ITU-N parameter values.

Table 19: Valid Value Combinations for ITU-I Point Code Parameters

ZONE	AREA	ID
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

Table 20: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters

MSA	SSA	SP
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

1. Display the allowed AFTPC screens in the database using the `rtrv-scr-aftpc` command.

The following is an example of the possible output.

```

rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED AFTPC
SR    REF  RULES
GW20  YES   1
GW21  YES   1
IEC   YES   2
LS04  YES   1
    
```

```
WRD0 YES 1
WRD2 YES 1
WRD4 YES 9
```

From the `rtrv-scr-aftpc` output, display the allowed AFTPC screen you wish to change using the `rtrv-scr-aftpc` command with the screening reference name. For this example, enter this command.

```
rtrv-scr-aftpc:sr=gw21
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED AFTPC
SR NI NC NCM SSN NSFI NSR/ACT
GW21 009 009 009 253 STOP -----
```

If a gateway screening stop action set is to be assigned to the allowed AFTPC screen being changed in this procedure, go to step 2. Otherwise, skip step 2 and go to step 3.

2. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
ACT ACT ACT ACT ACT ACT ACT ACT ACT ACT ACT
ID NAME 1 2 3 4 5 6 7 8 9 10
--
1 copy copy
2 rdct rdct
3 cr copy rdct
4 cncf cncf
5 cpncf copy cncf
6 cncfrd cncf rdct
7 cpcf rd copy cncf rdct
GWS action set table is (7 of 16) 44% full
```

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to configure the required gateway screening stop action set.

3. Display the status of the ITU National and International Spare Point Code Support feature by entering the `rtrv-ctrl-feat` command with the ITU National and International Spare Point Code Support feature part number.

Note: If any of these conditions apply to this procedure, skip this step and go to step 4:

- The point code in the screen is not being changed.
- The screen being changed contains either an ANSI or 24-bit ITU-N point code.
- The ITU-I or 14-bit ITU-N non-spare point code in the screen is not being changed to an ITU-I or 14-bit ITU-N spare point code.
- The point code in the screen is an ITU-I or 14-bit ITU-N spare point code or the screening reference contains other screens with ITU-I or 14-bit ITU-N spare point codes.

Enter this command.

```
rtrv-ctrl-feat:partnum=893013601
```

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
Spare Point Code Support	893013601	on	----

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period Left
Zero entries found.				

The following features have expired temporary keys:

Feature Name	Partnum
Zero entries found.	

If the ITU National and International Spare Point Code Support feature is enabled, go to step 4.

If the ITU National and International Spare Point Code Support feature is not enabled, perform the “Activating the ITU National and International Spare Point Code Support Feature” procedure in the *Database Administration Manual - SS7* to enable the ITU National and International Spare Point Code Support feature as required. After the feature has been enabled, go to step 4.

4. Change the attributes of an allowed AFTPC screen using the `chg-scr-aftpc` command.

If a gateway screening stop action is to be assigned to the allowed AFTPC screen being changed, enter the `chg-scr-aftpc` command with the `nsfi=stop` parameter and the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 2.

The current values for the `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `npc`, `msa`, `ssa`, `sp`, and `ssn` parameters must be entered exactly as shown in the `rtrv-scr-aftpc` output in step 1.

The following list contains the values for the `nni`, `nnc`, `nncm`, `nzone`, `narea`, `nid`, `nnpc`, `nmsa`, `nssa`, `nsp`, and `nssn` parameters:

- `nni` - 0-255 or an asterisk (*)
- `nnc` - 0-255 or an asterisk (*)
- `nncm` - 0-255 or an asterisk (*)
- `nzone` - 0-7 or an asterisk (*)
- `narea` - 0-255 or an asterisk (*)
- `nid` - 0-7 or an asterisk (*)
- `nnpc` - 1 - 16383 or an asterisk (*)
- `nmsa` - 0-255 or an asterisk (*)
- `nssa` - 0-255 or an asterisk (*)
- `nsp` - 0-255 or an asterisk (*)

A range of values can be specified for the `nni`, `nnc`, and `nncm` parameters. See the “[Specifying a Range of Values](#)” on page 114 section for more information on how the asterisk and a range of values are used for the `nni`, `nnc`, and `nncm` parameters.

To change an ITU-I or 14-bit ITU-N spare point code to a non-spare point code, both the `pcst=s` and `npcst=none` parameters must be specified with the `chg-scr-aftpc` command.

To change an ITU-I or 14-bit ITU-N non-spare point code to a spare point code, the `npcst=s` parameter must be specified with the `chg-scr-aftpc` command. The `pcst` parameter does not have to be specified.

If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N spare point code, the `pcst=s` parameter must be specified with the `chg-scr-aftpc` command.

If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N non-spare point code, the `pcst` parameter does not have to be specified with the `chg-scr-aftpc` command. If the `pcst` parameter is specified for a screen containing either an ITU-I or 14-bit ITU-N non-spare point code, the `pcst` parameter value must be none.

For this example, enter this command.

```
chg-scr-aftpc:sr=gw21:ni=009:nc=009:ncm=009:ssn=253:nni=100
:nnc=100:nncm=100:nssn=150
```



CAUTION: The EAGLE 5 ISS does not support redirecting MSUs for the DTA feature or intercepting ISUP IAM messages for the Calling Name Conversion Facility feature from the allowed AFTPC screen. Gateway screening stop action sets containing either the RDCT (redirect) or CNCF (calling name conversion facility) stop actions should not be assigned to the allowed AFTPC screen. If a gateway screening stop action set containing the RDCT or CNCF stop actions is specified with the `chg-scr-aftpc` command, unsolicited information message (UIM) 1127 is generated when the attempt is made to redirect MSUs from the allowed AFTPC screen. Unsolicited information message (UIM) 1217 is generated when ISUP IAM MSUs are intercepted from the allowed AFTPC screen. For more information on UIMs 1127 and 1217, go to the *Unsolicited Alarm and Information Messages Manual*.

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
CHG-SCR-AFTPC: SCREEN SET AFFECTED - GW21 1% FULL
CHG-SCR-AFTPC: MASP A - COMPLTD
```

5. Verify the changes using the `rtrv-scr-aftpc` command with screening reference name used in step 4.

For this example, enter this command.

```
rtrv-scr-aftpc:sr=gw21
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED AFTPC
SR   NI      NC      NCM      SSN      NSFI      NSR/ACT
GW21 100      100      100      150      STOP      -----
```


6. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.


The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
```

BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.

Figure 23: Changing an Allowed Affected Point Code Screen

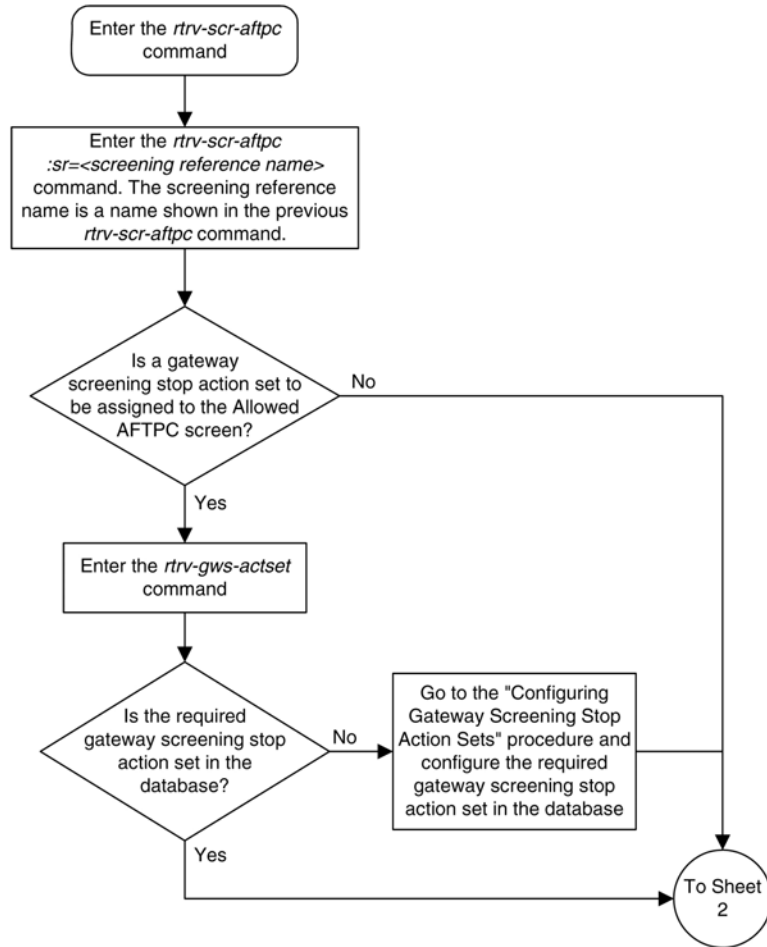

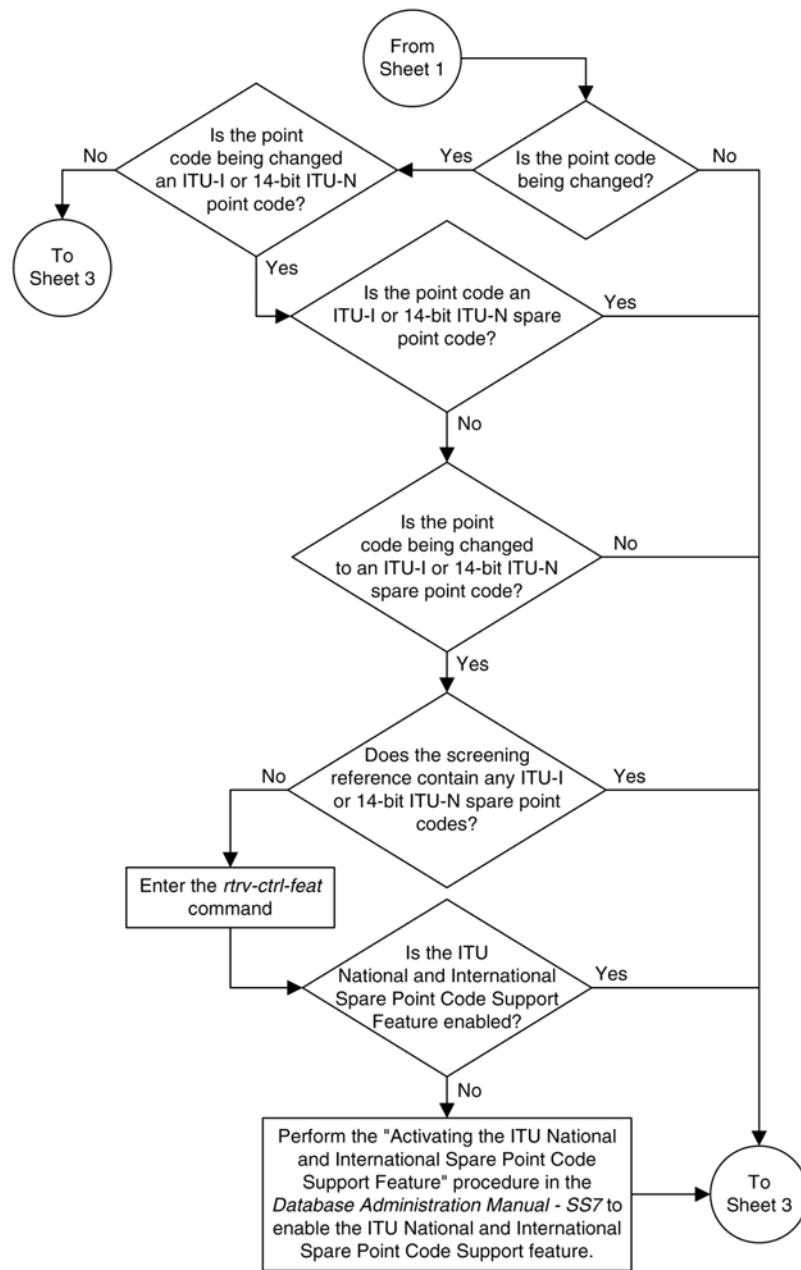

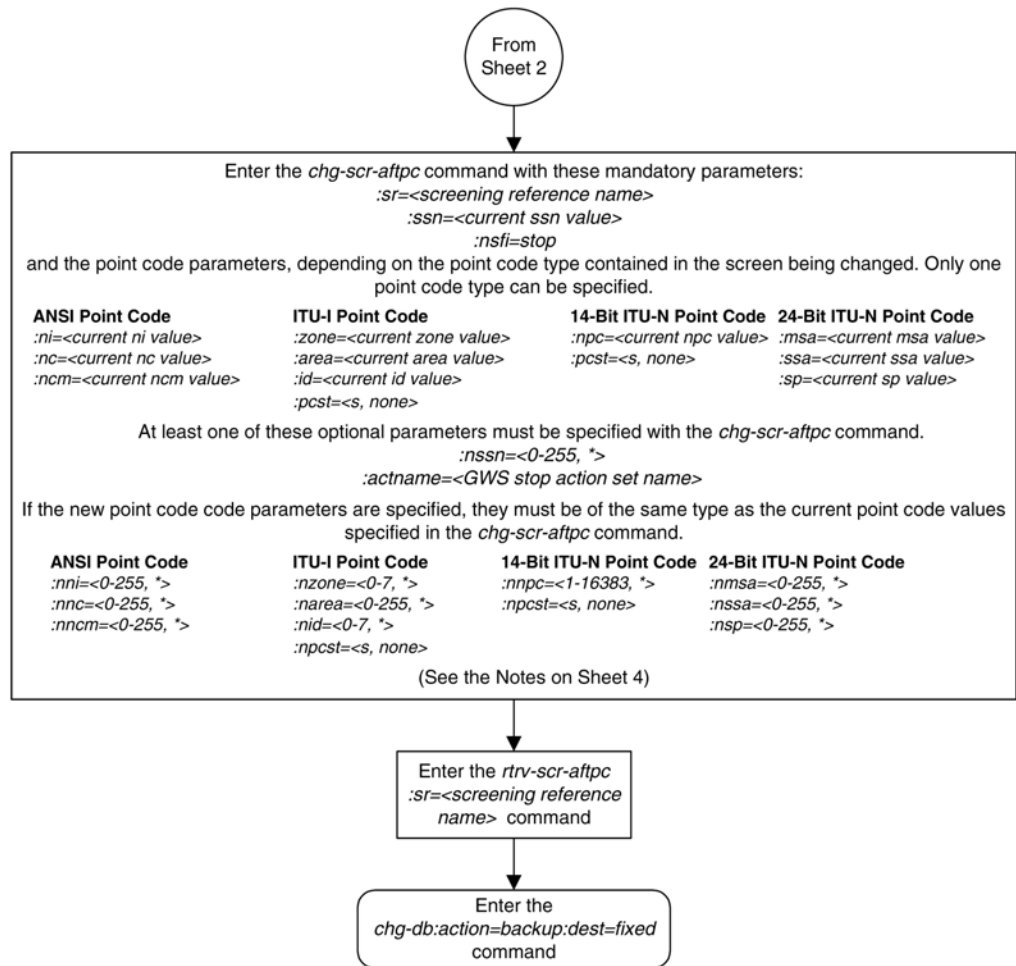

Notes:

1. A range of values can be specified for the *ni*, *nc*, or *ncm* parameters by inserting double ampersands (&&) between the parameter values defining the range. For example, to specify the range 025 to 200 for the *ni* parameter, enter 025&&200 for the *ni* parameter value.
2. The current values for the *ni*, *nc*, *ncm*, *zone*, *area*, *id*, or *ssn* parameters must be entered exactly as shown in the *rtv-scr-aftpc* output.
3. The asterisk (*) specifies the entire range of values for that parameter.
For more information about specifying a range of values and about using the asterisk, see the "Gateway Screening Attributes" section in Chapter 2 and the "Specifying a Range of Values" section in this procedure.
4. The *actname* parameter is optional. If the *actname* parameter is specified, the *actname* parameter value is one of the gateway screening stop action set names shown in the *rtv-gws-actset* output on Sheet 1.
5. To change an ITU-I or 14-bit ITU-N spare point code to a non-spare point code, both the *pcst=s* and *npcst=none* parameters must be specified with the *chg-scr-aftpc* command.
6. To change an ITU-I or 14-bit ITU-N non-spare point code to a spare point code, the *npcst=s* parameter must be specified with the *chg-scr-aftpc* command. The *pcst* parameter does not have to be specified.
7. If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N spare point code, the *pcst=s* parameter must be specified with the *chg-scr-aftpc* command.
8. If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N non-spare point code, the *pcst* parameter does not have to be specified with the *chg-scr-aftpc* command. If the *pcst* parameter is specified for a screen containing either an ITU-I or 14-bit ITU-N non-spare point code, the *pcst* parameter value must be *none*.

Chapter

4

Allowed Called Party (CDPA) Screen Configuration

Topics:

- [Introduction Page 124](#)
- [Adding an Allowed Called Party Address Screen Page 128](#)
- [Removing an Allowed Called Party Address Screen Page 139](#)
- [Changing an Allowed Called Party Address Screen Page 143](#)

Chapter 4, Allowed Called Party (CDPA) Screen Configuration, contains the procedures necessary to configure allowed called party address screens.

Introduction

The allowed called party address (CDPA) screen is used to screen SCCP messages for a DPC in the routing label and a subsystem number in the called party address. The gray shaded areas in [Figure 25: Allowed Called Party Address Screening Function](#) on page 127 shows the fields of the SS7 message that are checked by the CDPA screening function. The screening reference contains a list of point codes and subsystem number combinations.

Gateway Screening Actions

If a match is not found, the message is discarded.

If a match is found, the `nsfi` is examined to determine the next step in the screening process. If the `nsfi` value is any value other than `stop`, the next screening reference (`nsr`) is identified and the screening process continues to the next screen identified by the `nsfi` and `nsr` parameter values.


If the `nsfi` is equal to `stop`, the screening process stops and the message is processed. If a gateway screening stop action set is specified with the screen, shown by the `actname` parameter value, the message is processed according to the gateway screening stop actions that are assigned to the gateway screening stop action set.


- If the `copy` gateway screening stop action is specified, the message is processed and a copy of the message is sent by the STPLAN feature to an external application.
- If the `rdct` (redirect) gateway screening stop action is specified, the message is diverted from the original destination and sent to another destination with the Database Transport Access feature, specified by global title translation, for further processing.
- If the `cncf` gateway screening stop action is specified, the PIP parameter in the incoming ISUP IAM message is converted to the GN parameter. The GN parameter in the incoming ISUP IAM message is converted to the PIP parameter. The message is then sent to the node specified by the DPC in the routing label in the message. For more information on the Calling Name Conversion Facility feature, see [Calling Name Conversion Facility \(CNCF\) Configuration](#) on page 417.
- If the `tlnp` gateway screening stop action is specified, ISUP IAMs that pass gateway screening are processed either by the ISUP NP with EPAP feature (if the ISUP NP with EPAP feature is enabled and turned on) or by the Triggerless LNP feature (if the Triggerless LNP feature is turned on). The ISUP NP with EPAP feature is discussed in more detail in the *Feature Manual - G-Port*. The Triggerless LNP feature is discussed in more detail in the *LNP Feature Activation Guide*.
- If the `tinp` gateway screening stop action is specified, ISUP IAMs that pass gateway screening are intercepted by the Triggerless ISUP based Number Portability (TINP) feature and converted to include the routing number (RN) if the call is to a ported number. The TINP feature is discussed in more detail in the *Feature Manual - G-Port*.
- If the `tif`, `tif2`, or `tif3` gateway screening stop actions are specified, TIF processing is applied to the message.

Allowed CDPA Screening Actions

Figure 24: Allowed CDPA Screening Actions on page 125 shows the screening actions of the allowed CDPA screen.

Figure 24: Allowed CDPA Screening Actions

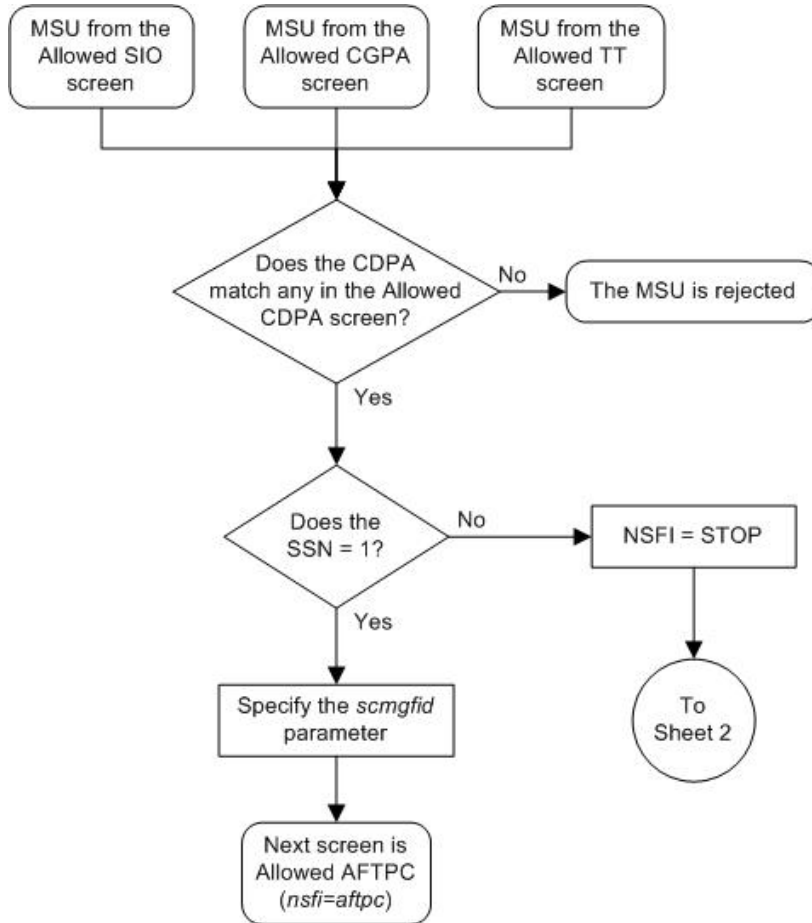

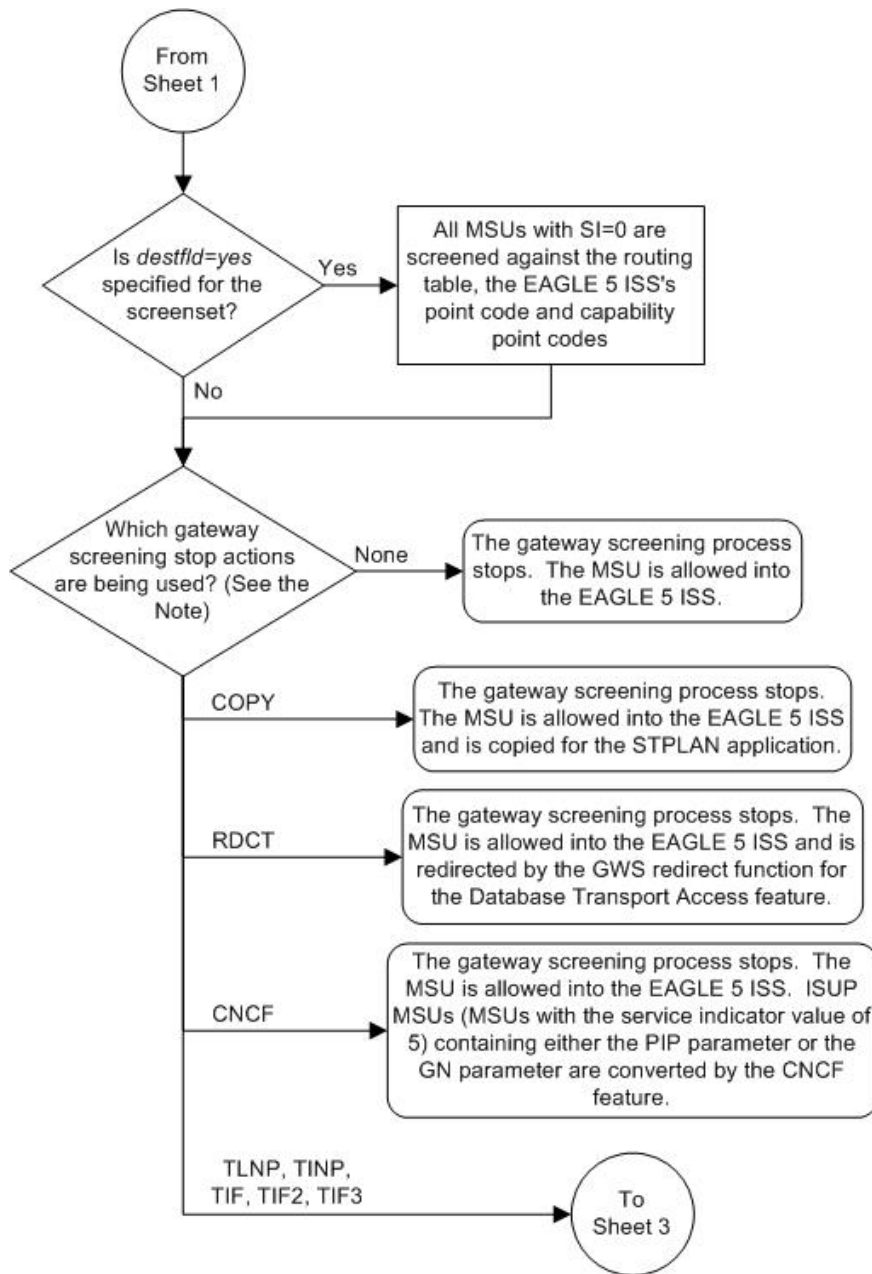

Note: Combinations of the gateway screening stop actions shown on Sheets 2 and 3 may be assigned to a gateway screening stop action set. Refer to the Configuring Gateway Screening Stop Action Sets and the Configuring TLNP Gateway Screening Stop Action Sets procedures in Chapter 2 of this manual for the combinations that can be used.

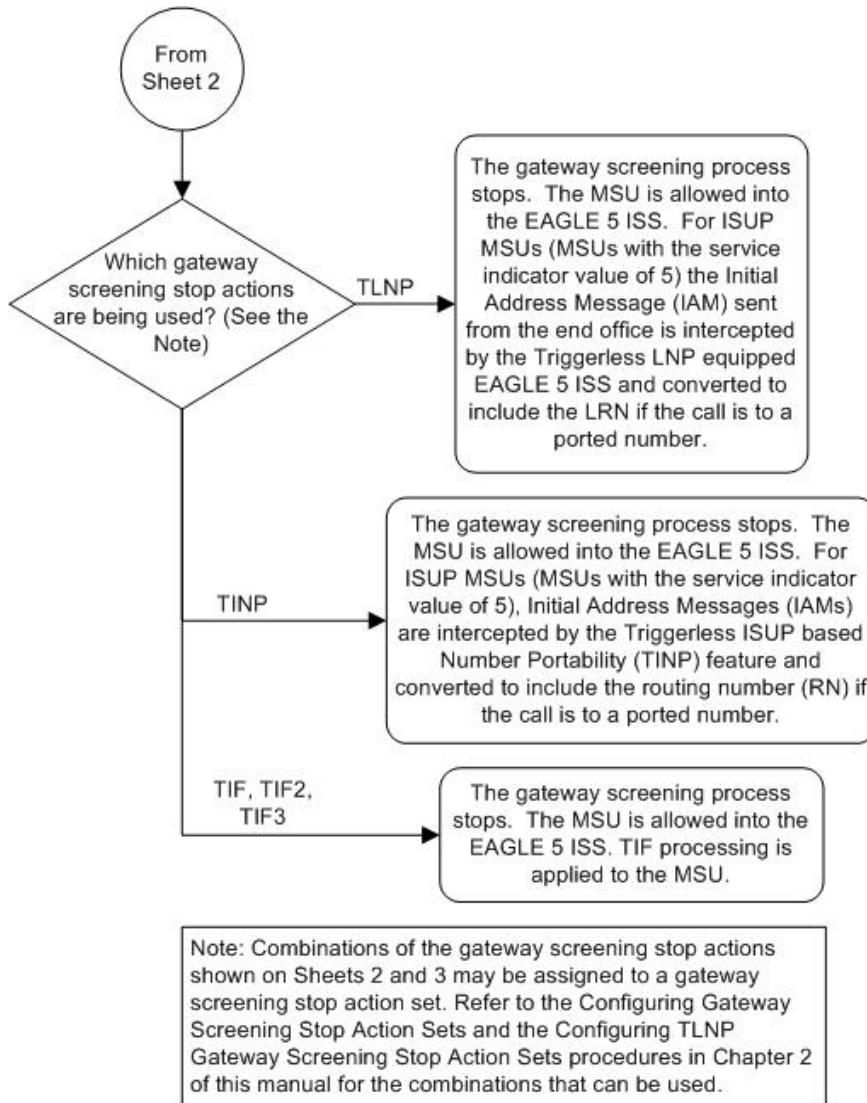


Figure 25: Allowed Called Party Address Screening Function

ANSI MSU (ANSI Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF			
		Routing Label DPC OPC SLS NCM NC NI NCM NC NI xx	CGPA Length Address Indicator Subsystem Point Code (NCM NC NI)	CDPA Length Address Indicator (x x xxxx xx) (x RI xxxx xx) Subsystem Point Code (NCM NC NI)	SCMG Data Length SCMG Format (xxxx xxxx) Point Code (NCM NC NI) Subsystem

ITU-I MSU (ITU International Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF			
		Routing Label DPC OPC SLS ID AREA ZONE ID AREA ZONE xx	CGPA Length Address Indicator Subsystem Point Code (ID AREA ZONE)	CDPA Length Address Indicator (x x xxxx xx) (x RI xxxx xx) Subsystem Point Code (ID AREA ZONE)	SCMG Data Length SCMG Format (xxxx xxxx) Point Code (ID AREA ZONE) Subsystem

14-Bit ITU-N MSU (14-Bit ITU National Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF			
		Routing Label DPC OPC SLS NPC NPC xx	CGPA Length Address Indicator Subsystem Point Code (NPC)	CDPA Length Address Indicator (x x xxxx xx) (x RI xxxx xx) Subsystem Point Code (NPC)	SCMG Data Length SCMG Format (xxxx xxxx) Point Code (NPC) Subsystem

24-Bit ITU-N MSU (24-bit ITU National Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF			
		Routing Label DPC OPC SLS SP SSA MSA SP SSA MSA xx	CGPA Length Address Indicator Subsystem Point Code (SP SSA MSA)	CDPA Length Address Indicator (x x xxxx xx) (x RI xxxx xx) Subsystem Point Code (SP SSA MSA)	SCMG Data Length SCMG Format (xxxx xxxx) Point Code (SP SSA MSA) Subsystem

Adding an Allowed Called Party Address Screen

This procedure is used to add an allowed called party address (CDPA) screen to the database using the `ent-scr-cdpa` command. The parameters used by the `ent-scr-cdpa` command are

shown in the *Gateway Screening Attributes* on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the *Gateway Screening Configuration* on page 37 section.

The examples in this procedure are used to add the allowed CDPA screen data shown in *Table 21: Example Gateway Screening Allowed CDPA Configuration Table* on page 129 and based on the example configurations shown in *Figure 5: Gateway Screening Configuration - Example 1* on page 42 through *Figure 8: Gateway Screening Configuration - Example 4* on page 47.

Table 21: Example Gateway Screening Allowed CDPA Configuration Table

Screening Reference	ZONE	AREA	ID	SSN	SCMGFID	NSFI	NSR
gw15	5	117	2	254	----	stop	----
Screening Reference	NI	NC	NCM	SSN	SCMGFID	NSFI	NSR
gw17	003	003	003	001	050	aftpc	gw20
gw18	006	006	006	253	----	stop	----
ls03	007	007	007	001	100	aftpc	ls04

Note: If you using multiple-part ITU national point codes with gateway screening, see the *14-Bit ITU National Point Code Formats* on page 34 section.

The allowed CDPA screen can only reference an allowed AFTPC screen and the allowed AFTPC screen being referenced must be in the database. This can be verified using the `rtrv-scr-aftpc:all=yes` command. If the desired allowed AFTPC screen is not in the database, perform one of these procedures to add the required screen to the database or change an existing screen in the database.

- *Adding an Allowed Affected Point Code Screen* on page 102
- *Changing an Allowed Affected Point Code Screen* on page 114

Specifying a Range of Values

A range of values can be specified for the point code parameters `ni`, `nc`, or `ncm`.

If a range of values is specified for any of these parameters, and the value of the other parameters match existing values for the screening reference name, the range of values for the point code parameter cannot include any values for that parameter that are currently provisioned for the screening reference name.

For example, screening reference name `scr1` contains these entries:

SR	NI	NC	NCM	SSN	SCMGFID	NSFI	NSR/ACT
SCR1	240	001	010	012	-----	STOP	-----
SCR1	241	010	020	001	002	AFTPC	SCR1

Another entry for screening reference `scr1` with the `ni` value of 240 and the `nc` value of 001 cannot be specified if the range of values for the `ncm` parameter includes the value 010.

The ANSI point code parameter values can be specified as a single value, a range of values, or with an asterisk (*). The asterisk specifies all possible values for the ni, nc, and ncm parameters. [Table 22: Valid Value Combinations for ANSI Point Code Parameters](#) on page 130 shows the valid combinations of these parameter values.

Table 22: Valid Value Combinations for ANSI Point Code Parameters

NI	NC	NCM
Single Value	Single Value	Single Value
Single Value	Single Value	Range of Values
Single Value	Single Value	Asterisk
Single Value	Range of Values	Asterisk
Single Value	Asterisk	Asterisk
Range of Values	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

A range of values can also be specified for an ITU-I or 24-bit ITU-N point code parameter using a combination of asterisks (*) and single values for the point code parameters. [Table 23: Valid Value Combinations for ITU-I Point Code Parameters](#) on page 130 shows the valid combinations of the ITU-I parameter values. [Table 24: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters](#) on page 130 shows the valid combinations of the 24-bit ITU-N parameter values.

Table 23: Valid Value Combinations for ITU-I Point Code Parameters

ZONE	AREA	ID
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

Table 24: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters

MSA	SSA	SP
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

1. Verify that the gateway screening feature is on, by entering the `rtrv-feat` command.
If the gateway screening feature is on, the GWS field is set to on.

Note: The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

If the gateway screening feature is on, shown by the entry `GWS = on` in the `rtrv-feat` command output, skip step 2, and go to step 3.

- Turn the gateway screening feature on by entering this command.

```
chg-feat:gws=on
```

Note: Once the gateway screening feature is turned on with the `chg-feat` command, it cannot be turned off.

The gateway screening feature must be purchased before you turn this feature on with the `chg-feat` command. If you are not sure if you have purchased the gateway screening feature, contact your Tekelec Sales Representative or Account Representative.

When the `chg-feat` has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 11:43:04 GMT EAGLE5 36.0.0
CHG-FEAT: MASP A - COMPLTD
```

- Display all allowed CDPA screens in the database using the `rtrv-scr-cdpa` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED CDPA
SR   REF  RULES
IEC  YES   2
WRD2 YES   1
WRD4 YES   9
```

If the screening reference names that you wish to add with this procedure are not shown in the `rtrv-scr-cdpa` command output, go to step 4. For this example, the screening reference names are not shown. If these screening reference names are shown in the `rtrv-scr-cdpa` command output, make sure the screening data you wish to enter is not already in the database by entering the `rtrv-scr-cdpa` command with the screening reference name. For example, enter the `rtrv-scr-cdpa:sr=iec` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED CDPA
SR   NI      NC      NCM      SSN      SCMGFID  NSF1     NSR/ACT
IEC  240      001     010     012     -----  STOP     -----
SR   ZONE    AREA    ID      SSN      SCMGFID  NSF1     NSR/ACT
IEC  1        134     *       001     002     AFTPC    IEC
```

If a gateway screening stop action set is to be assigned to the allowed CDPA screen being added to the database, go to step 4.

Step 4 verifies the gateway screening stop action set names in the database. The gateway screening stop action set names are assigned only if the NSF1 of the screen being added in this procedure is STOP. If the NSF1 of the new screen will be STOP, but a gateway screening stop action set name will not be assigned to the new screen, skip steps 4 and 5 and go to step 6. If the NSF1 of the new screen is AFTPC, skip step 4 and go to step 5.

4. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
ACT  ACT      ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME     1    2    3    4    5    6    7    8    9    10
--   -
1    copy     copy
2    rdct     rdct
3    cr       copy rdct
4    cnf      cnf
5    cpcnf    copy cnf
6    cnf      cnf rdct
7    cpcfrd   copy cnf rdct

GWS action set table is (7 of 16) 44% full
```

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to configure the required gateway screening stop action set.

Note: If the NSFI of the screen being added in this procedure is STOP, skip step 5 and go to step 6.

5. Enter the `rtrv-scr-aftpc` command to verify that the screen that will be specified by the NSFI/NSR parameter combination in step 7 is in the database.

If the desired screen is not in the database, perform one of these procedures to add the desired screen to the database or change an existing screen in the database.

- [Adding an Allowed Affected Point Code Screen](#) on page 102
- [Changing an Allowed Affected Point Code Screen](#) on page 114.

Note: If the point code being added in this procedure is not an ITU-I or 14-bit ITU-N spare point code, skip step 6 and to step 7.

Note: If the point code being added in this procedure is an ITU-I or 14-bit ITU-N spare point code and the screening reference contains ITU-I or 14-bit ITU-N spare point codes, skip step 6 and go to step 7.

6. Display the status of the ITU National and International Spare Point Code Support feature by entering the `rtrv-ctrl-feat` command with the ITU National and International Spare Point Code Support feature part number.

Enter this command.

```
rtrv-ctrl-feat:partnum=893013601
```

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name                Partnum  Status  Quantity
Spare Point Code Support    893013601 on      ----

The following features have been temporarily enabled:

Feature Name                Partnum  Status  Quantity  Trial Period Left
```

```
Zero entries found.
```

```
The following features have expired temporary keys:
```

```
Feature Name          Partnum
Zero entries found.
```

If the ITU National and International Spare Point Code Support feature is enabled, go to step 7.

If the ITU National and International Spare Point Code Support feature is not enabled, perform the “Activating the ITU National and International Spare Point Code Support Feature” procedure in the *Database Administration Manual - SS7* to enable the ITU National and International Spare Point Code Support feature as required. After the feature has been enabled, go to step 7.

7. Add a new allowed CDPA screen to the database using the `ent-scr-cdpa` command.

If a gateway screening stop action is to be assigned to the allowed CDPA screen being added to the database, enter the `ent-scr-cdpa` command with the `nsfi=stop` parameter and the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 4.



CAUTION: The EAGLE 5 ISS does not support redirecting MSUs for the DTA feature or intercepting ISUP IAM messages for the Calling Name Conversion Facility feature from the allowed CDPA screen. Gateway screening stop action sets containing either the RDCT (redirect) or CNCF (calling name conversion facility) stop actions should not be assigned to the allowed CDPA screen. If a gateway screening stop action set containing the RDCT or CNCF stop actions is specified with the `ent-scr-cdpa` command, unsolicited information message (UIM) 1125 is generated when the attempt is made to redirect MSUs from the allowed CDPA screen. Unsolicited information message (UIM) 1215 is generated when ISUP IAM MSUs are intercepted from the allowed CDPA screen. For more information on UIMs 1125 and 1215, go to the *Unsolicited Alarm and Information Messages Manual*.

The following list contains the values for `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `npc`, `msa`, `ssa`, `sp`, `ssn`, and `scmgfid` parameters:

- `ni` – 0 - 255 or an asterisk (*)
- `nc` – 0 - 255 or an asterisk (*)
- `ncm` – 0 - 255 or an asterisk (*)
- `zone` – 0 - 7 or an asterisk (*)
- `area` – 0 - 255 or an asterisk (*)
- `id` – 0 - 7 or an asterisk (*)
- `npc` – 1 - 16383 or an asterisk (*)
- `msa` – 0 - 255 or an asterisk (*)
- `ssa` – 0 - 255 or an asterisk (*)
- `sp` – 0 - 255 or an asterisk (*)
- `ssn` – 0 - 255 or an asterisk (*)
- `scmgfid` – 1 - 255 or an asterisk (*)

Note: The `scmgfid`, `ssn`, `nsfi`, and `nsr` parameters can be specified only as shown in [Table 25: CDPA Parameter Combinations](#) on page 134.

Table 25: CDPA Parameter Combinations

SSN	SCMGFID	NSFI	NSR
1	1 - 255, *	AFTPC	Must be specified
0, 2-255, *	Cannot be specified	STOP	Cannot be specified

A range of values can be specified for the ni, nc, and ncm parameters. See the *“Specifying a Range of Values”* on page 129 section for more information on how the asterisk and a range of values are used for the ni, nc, and ncm parameters.

To add a spare point code to the allowed CDPA screen, the pcst=s parameter must be specified. To add a non-spare point code to the allowed CDPA screen, the pcst parameter does not have to be specified. If the pcst parameter is specified for a screen containing an ITU-I or 14-bit ITU-N non-spare point code, the value must be none.

For this example, enter these commands.

```
ent-scr-cdpa:sr=gw15:zone=5:area=117:id=2:ssn=254:nsfi=stop
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0
ENT-SCR-CDPA: SCREEN SET AFFECTED - GW15 1% FULL
ENT-SCR-CDPA: MASP A - COMPLTD
```

```
ent-scr-cdpa:sr=gw17:ni=003:nc=003:ncm=003:ssn=001:scmgfid=050
:nsfi=aftpc:nsr=gw20
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0
ENT-SCR-CDPA: SCREEN SET AFFECTED - GW17 1% FULL
ENT-SCR-CDPA: MASP A - COMPLTD
```

```
ent-scr-cdpa:sr=gw18:ni=006:nc=006:ncm=006:ssn=253:nsfi=stop
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
ENT-SCR-CDPA: SCREEN SET AFFECTED - GW18 1% FULL
ENT-SCR-CDPA: MASP A - COMPLTD
```

```
ent-scr-cdpa:sr=ls03:ni=007:nc=007:ncm=007:ssn=001:scmgfid=100
:nsfi=aftpc:nsr=ls04
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:31:30 GMT EAGLE5 36.0.0
ENT-SCR-CDPA: SCREEN SET AFFECTED - LS03 1% FULL
ENT-SCR-CDPA: MASP A - COMPLTD
```

- Verify the changes using the rtrv-scr-cdpa command with the screening reference name used in step 7.

For this example, enter these commands.

```
rtrv-scr-cdpa:sr=gw15
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:32:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED CDPA
SR      ZONE  AREA  ID      SSN      SCMGFID  NSFI    NSR/ACT
GW15    5      117   2       254      -        STOP    -
```

```
rtrv-scr-cdpa:sr=gw17
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:33:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED CDPA
SR  NI      NC      NCM      SSN      SCMGFID  NSFI    NSR/ACT
GW17 003     003     003     001     050     AFTPC   GW20
```

```
rtrv-scr-cdpa:sr=gw18
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:34:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED CDPA
SR  NI      NC      NCM      SSN      SCMGFID  NSFI    NSR/ACT
GW18 006     006     006     253     -        STOP    -
```

```
rtrv-scr-cdpa:sr=ls03
```

The following is an example of the possible output.


```
rlghncxa03w 06-10-25 15:35:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED CDPA
SR  NI      NC      NCM      SSN      SCMGFID  NSFI    NSR/ACT
LS03 007     007     007     001     100     AFTPC   -
```


9. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.


The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 26: Adding an Allowed Called Party Address Screen

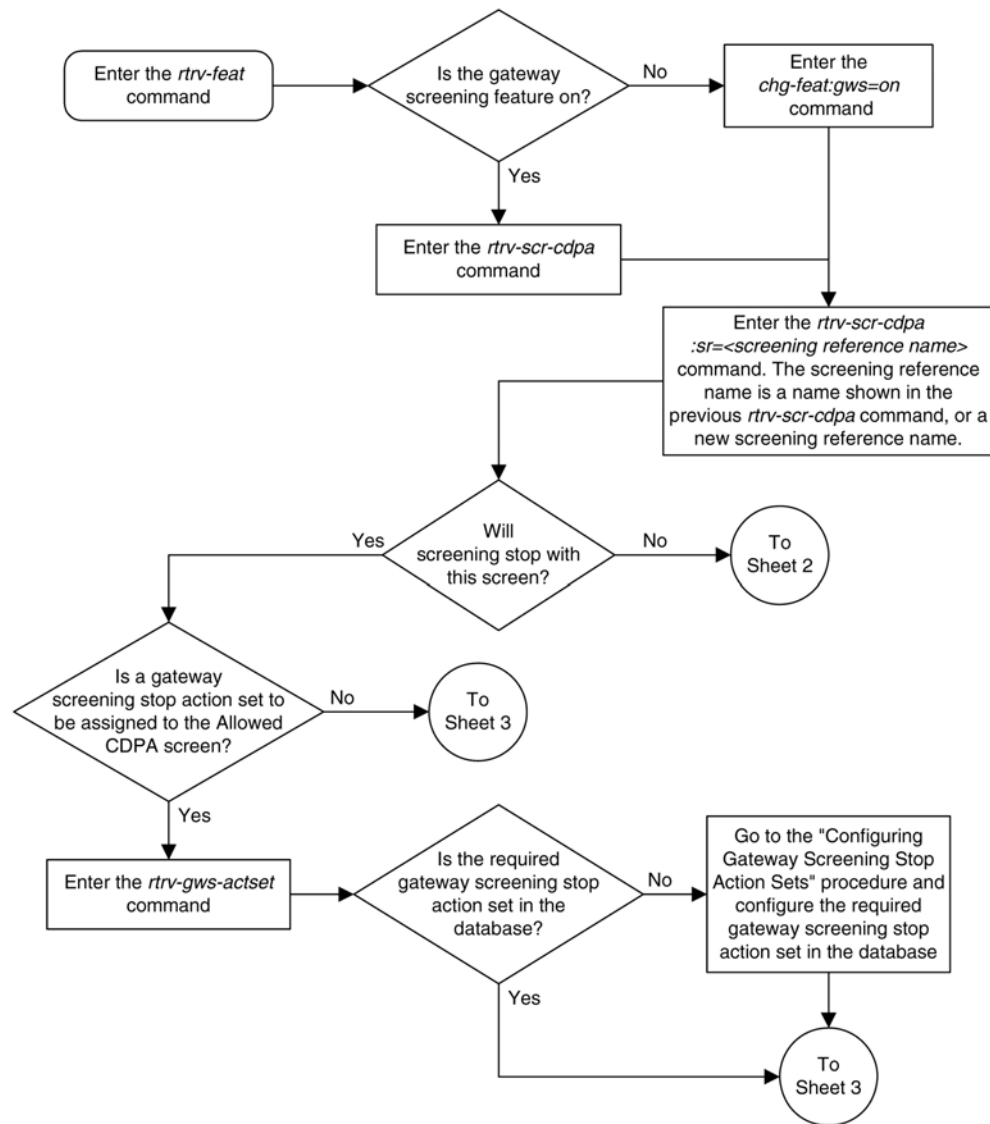

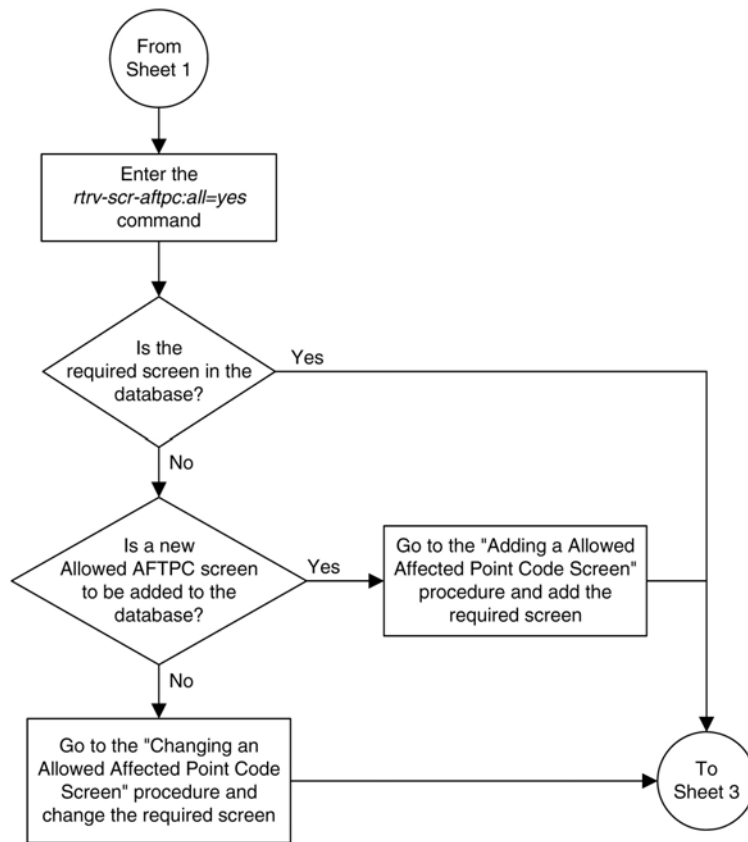

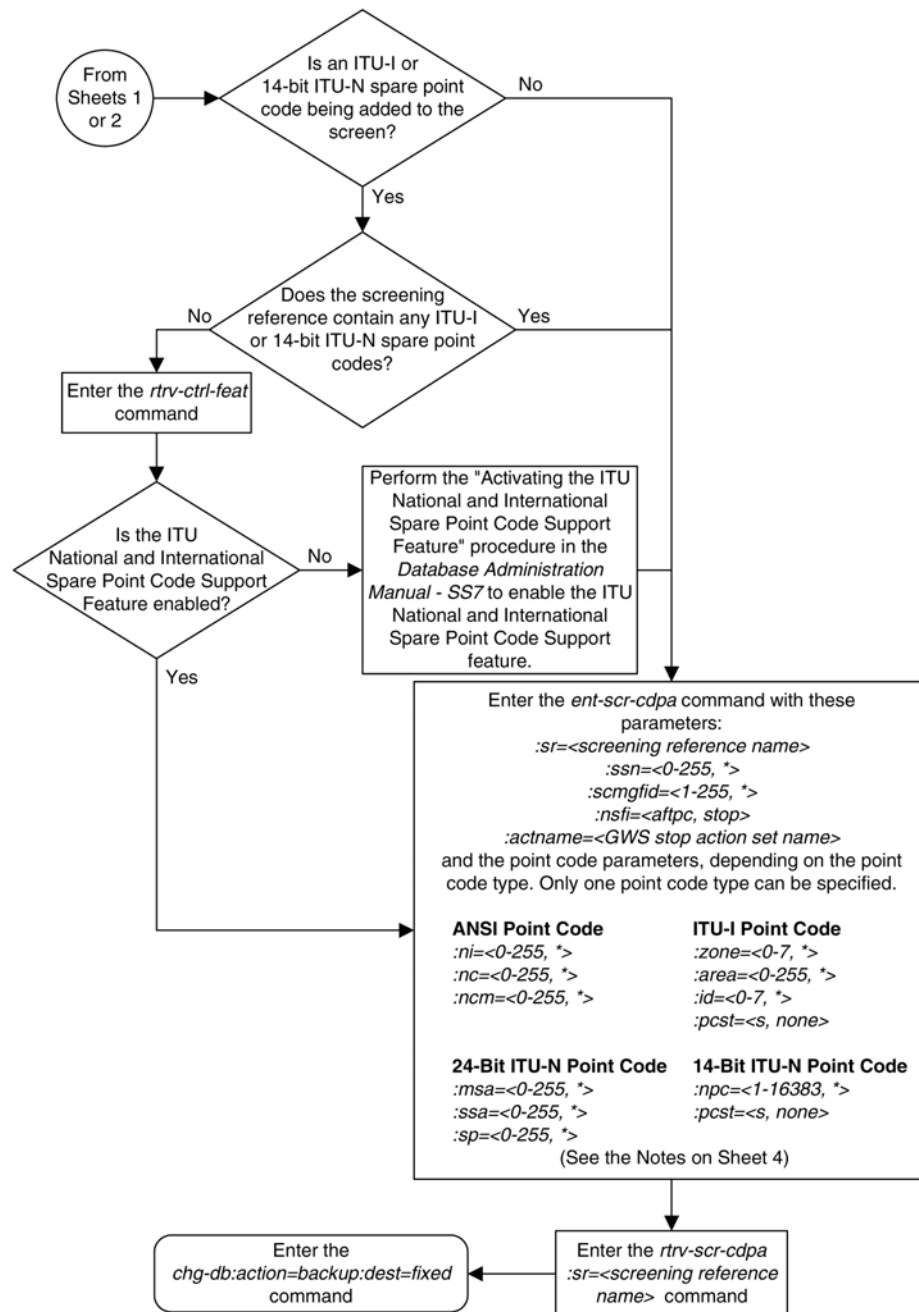

<p>Notes:</p> <ol style="list-style-type: none"> 1. A range of values can be specified for the <i>ni</i>, <i>nc</i>, or <i>ncm</i> parameters by inserting double ampersands (&&) between the parameter values defining the range. For example, to specify the range 025 to 200 for the <i>ni</i> parameter, enter 025&&200 for the <i>ni</i> parameter value. 2. The asterisk (*) specifies the entire range of values for that parameter. <p>For more information about specifying a range of values and about using the asterisk, see the "Gateway Screening Attributes" section in Chapter 2 and the "Specifying a Range of Values" section in this procedure.</p> <ol style="list-style-type: none"> 3. The <i>scmgfid</i> parameter can be specified only if the <i>ssn=1</i> parameter is specified. If either the <i>ssn=1</i> or <i>scmgfid</i> parameter is specified, the other parameter must be specified. The <i>scmgfid</i> parameter cannot be specified if the <i>ssn</i> parameter value is 2 through 255, or *. 4. To specify the <i>nsfi=atpc</i> parameter, the <i>ssn</i> parameter value must be 1. 5. If the <i>ssn</i> parameter value is 2 through 255, or *, the <i>nsfi</i> parameter value must be <i>stop</i>. 6. If the <i>ssn</i> parameter value is 1, the <i>nsfi</i> parameter value can be <i>atpc</i> or <i>stop</i>. 7. The <i>nsr</i> parameter can be specified only, and must be specified, if the <i>nsfi=atpc</i> parameter is specified. 8. The <i>actname</i> parameter can be specified only if the <i>nsfi=stop</i> parameter is specified. The <i>actname</i> parameter is optional. If the <i>actname</i> parameter is specified, the <i>actname</i> parameter value is one of the gateway screening stop action set names shown in the <i>rtrv-gws-actset</i> output on Sheet 1. 9. To add a non-spare point code, the <i>pcst</i> parameter does not have to be specified. If the <i>pcst</i> parameter is specified for a screen containing an ITU-I or 14-bit ITU-N non-spare point code, the value must be <i>none</i>. 10. To add a spare point code, the <i>pcst=s</i> parameter must be specified.
--

Removing an Allowed Called Party Address Screen

This procedure is used to remove an allowed called party address (CDPA) screen from the database using the `dlt-scr-cdpa` command. The parameters used by the `dlt-scr-cdpa` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure removes the allowed CDPA screen `gw17` from the database.

Note: If you using multiple-part ITU national point codes with gateway screening, see the [14-Bit ITU National Point Code Formats](#) on page 34 section.

The allowed CDPA screen can be referenced by one of the following screens.

- Allowed SIO
- Allowed CGPA
- Allowed TT

Verifying the Gateway Screening Configuration

Enter the following commands to verify that none of these screens reference the allowed CDPA screen being removed from the database.

- `rtrv-scr-sio:nsfi=cdpa`
- `rtrv-scr-cgpa:nsfi=cdpa`
- `rtrv-scr-tt:nsfi=cdpa`

Gateway Screening Configuration Procedures

To change the NSFI of any of these screens, perform one of these procedures.

- [Changing an Allowed Translation Type Screen](#) on page 169
 - [Changing an Allowed Calling Party Address Screen](#) on page 198
 - [Changing an Allowed SIO Screen](#) on page 323
1. Display the allowed CDPA screens in the database using the `rtrv-scr-cdpa` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED CDPA
SR   REF  RULES
GW15 YES   1
GW17 YES   1
GW18 YES   1
IEC  YES   2
LS03 YES   1
WRD2 YES   1
WRD4 YES   9
```

From the `rtrv-scr-cdpa` output, display the allowed CDPA screen you wish to remove using the `rtrv-scr-cdpa` command with the screening reference name. For this example, enter the `rtrv-scr-cdpa:sr=gw17` command. The following is an example of the possible output.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED CDPA
SR   NI      NC      NCM      SSN      SCMGFID  NSFI      NSR/ACT
GW17 003      003      003      001      050      AFTPC     GW20
```

2. Enter the commands in the [Verifying the Gateway Screening Configuration](#) on page 139 section to verify that the screen being removed is not referenced by other screens in the database.

If the screen being removed is referenced by other screens, perform the procedures shown in the [Gateway Screening Configuration Procedures](#) on page 139 section to change the NSFI of those screens to reference other screens or change the NSFI of these screens to STOP.

3. Remove the allowed CDPA screen from the database using the `dlt-scr-cdpa` command. The current values for the `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `npc`, `msa`, `ssa`, `sp`, `ssn`, and `scmgfid` parameters must be entered exactly as shown in the `rtrv-scr-cdpa` output. If dashes are shown for the `scmgfid` parameter, the `scmgfid` parameter cannot be specified with the `dlt-scr-cdpa` command.

To remove an entry containing either an ITU-I or a 14-bit ITU-N spare point code, the `pcst=s` parameter must be specified with the `dlt-scr-cdpa` command.

To remove an entry containing either an ITU-I or a 14-bit ITU-N non-spare point code, the `pcst` parameter does not have to be specified with the `dlt-scr-cdpa` command. If the `pcst` parameter is specified, the value must be none.

For this command, enter this command:

```
dlt-scr-cdpa:sr=gw17:ni=003:nc=003:ncm=003:ssn=001:scmgfid=050
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
```

```
DLT-SCR-CDPA: SCREEN SET AFFECTED - GW17 0% FULL  
DLT-SCR-CDPA: MASP A - COMPLTD
```

4. Verify the changes using the `rtrv-scr-cdpa` command with the screening reference name used in step 3.

For this example, enter this command.

```
rtrv-scr-cdpa:sr=gw17
```

The following is an example of the possible output.

```
E2573 Cmd Rej: SR or NSR does not reference an existing SR
```


This message shows that the specified screening reference name is not in the database and the action of the `dlt-scr-cdpa` command in step 3 was successful. If the specified screening reference name contained more than one entry when the `dlt-scr-cdpa` command was executed in step 3, the `rtrv-scr-cdpa:sr=` command output would show the remaining entries in the screening reference instead of error message E2573.


5. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.  
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.  
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.  
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 27: Removing an Allowed Called Party Address Screen

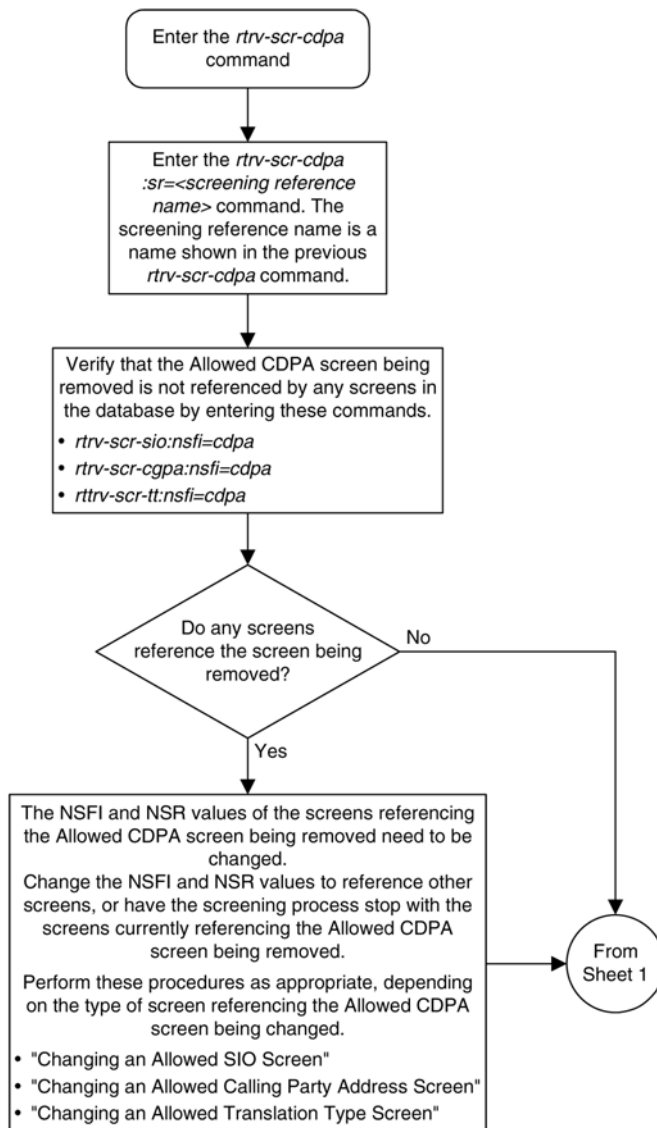

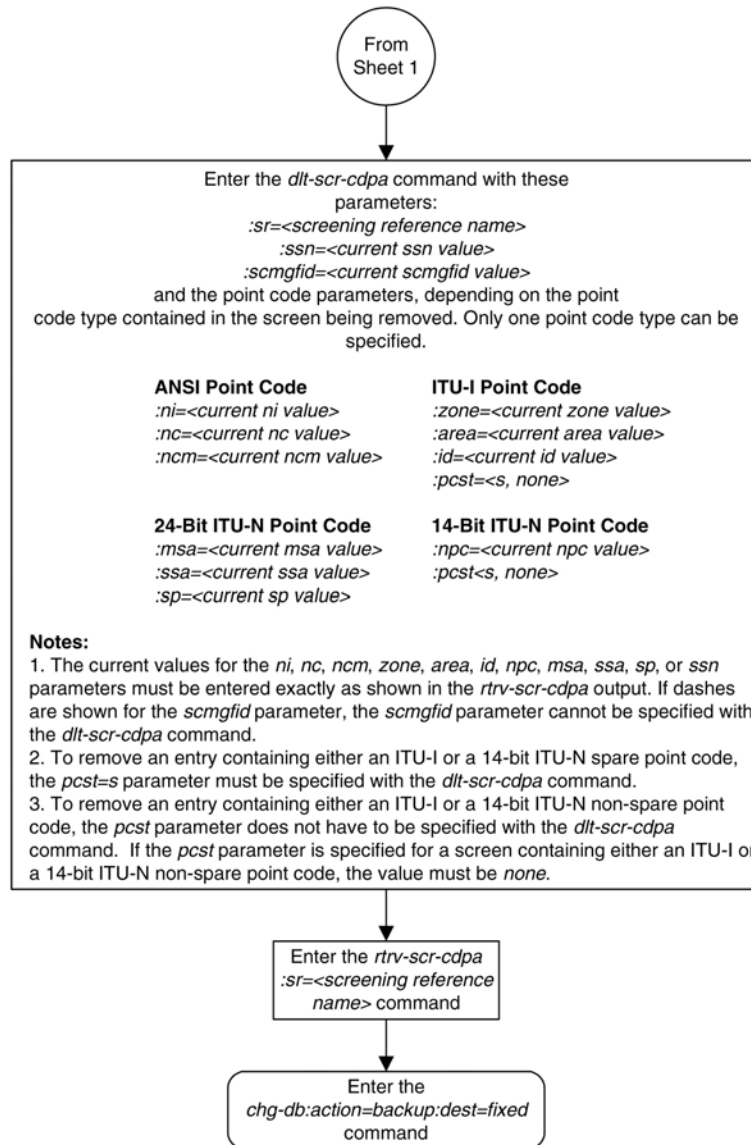

Changing an Allowed Called Party Address Screen

This procedure is used to change the attributes of an allowed called party address (CDPA) screen in the database using the *chg-scr-cdpa* command. The parameters used by the *chg-scr-cdpa* command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure is used to change the point code 5-117-2 for the allowed CDPA screen *gw15* to 2-230-7, the subsystem number from 254 to 001, the NSFI to *af tpc*, the NSR of *itu1*, and the new SCMG format ID of 150.

Note: If you using multiple-part ITU national point codes with gateway screening, see the [14-Bit ITU National Point Code Formats](#) on page 34 section.

The allowed CDPA screen can only reference an allowed AFTPC screen. This can be verified using the `rtrv-scr-aftpc:all=yes` command. If the desired allowed AFTPC screen is not in the database, perform one of these procedures to add the required screen to the database or change an existing screen in the database.

- [Adding an Allowed Affected Point Code Screen](#) on page 102
- [Changing an Allowed Affected Point Code Screen](#) on page 114

Specifying a Range of Values

A range of values can be specified for the point code parameters `ni`, `nc`, or `ncm`.

If a range of values is specified for any of these parameters, and the value of the other parameters match existing values for the screening reference name, the range of values for the point code parameter cannot include any values for that parameter that are currently provisioned for the screening reference name.

For example, screening reference name `scr1` contains these entries:

SR	NI	NC	NCM	SSN	SCMGFID	NSFI	NSR/ACT
SCR1	240	001	010	012	-----	STOP	-----
SCR1	241	010	020	001	002	AFTPC	SCR1

Another entry for screening reference `scr1` with the `ni` value of 240 and the `nc` value of 001 cannot be specified if the range of values for the `ncm` parameter includes the value 010.

The ANSI point code parameter values can be specified as a single value, a range of values, or with an asterisk (*). The asterisk specifies all possible values for the `ni`, `nc`, and `ncm` parameters. [Table 26: Valid Value Combinations for ANSI Point Code Parameters](#) on page 144 shows the valid combinations of these parameter values.

Table 26: Valid Value Combinations for ANSI Point Code Parameters

NI	NC	NCM
Single Value	Single Value	Single Value
Single Value	Single Value	Range of Values
Single Value	Single Value	Asterisk
Single Value	Range of Values	Asterisk
Single Value	Asterisk	Asterisk
Range of Values	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

A range of values can also be specified for an ITU-I or 24-bit ITU-N point code parameter using a combination of asterisks (*) and single values for the point code parameters. [Table 27: Valid Value Combinations for ITU-I Point Code Parameters](#) on page 145 shows the valid combinations of the ITU-I parameter values. [Table 28: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters](#) on page 145 shows the valid combinations of the 24-bit ITU-N parameter values.

Table 27: Valid Value Combinations for ITU-I Point Code Parameters

ZONE	AREA	ID
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

Table 28: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters

MSA	SSA	SP
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

1. Display the allowed CDPA screens in the database using the `rtrv-scr-cdpa` command.

The following is an example of the possible output.

```

rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED CDPA
SR    REF  RULES
GW15  YES   1
GW17  YES   1
GW18  YES   1
IEC   YES   2
LS03  YES   1
WRD2  YES   1
WRD4  YES   9
    
```

From the `rtrv-scr-cdpa` output, display the allowed CDPA screen you wish to change using the `rtrv-scr-cdpa` command with the screening reference name. For this example, enter this command.

```
rtrv-scr-cdpa:sr=gw15
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED CDPA
SR      ZONE   AREA   ID      SSN      SCMGFID  NSFI    NSR/ACT
GW15   5        117    2       254     - - - - - STOP   - - - - -
```

If a gateway screening stop action set is to be assigned to the allowed CDPA screen being changed in this procedure, go to step 2.

Step 2 verifies the gateway screening stop action set names in the database. The gateway screening stop action set names are assigned only if the NSFI of the screen being changed in this procedure is STOP. If the NSFI of the screen will be changed to STOP, but a gateway screening stop action set name will not be assigned to the screen, skip steps 2 and 3 and go to step 4. If the NSFI of the screen will not be STOP, skip step 2 and go to step 3.

2. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
ACT  ACT    ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME  1    2    3    4    5    6    7    8    9    10
---  ---  ---  ---  ---  ---  ---  ---  ---  ---  ---  ---
1    copy  copy
2    rdct  rdct
3    cr    copy rdct
4    cnf   cnf
5    cpnf  copy cnf
6    cnf   rdct
7    cpcfrd copy cnf rdct

GWS action set table is (7 of 16) 44% full
```

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure and configure the required gateway screening stop action set.

Note: If the NSFI of the screen being added in this procedure is STOP, skip step 3 and go to step 4.

3. Enter the `rtrv-scr-aftpc` command to verify that the screen that will be specified by the NSFI/NSR parameter combination in step 5 is in the database.

If the desired screen is not in the database, perform one of these procedures to add the desired screen to the database or change an existing screen in the database.

- [Adding an Allowed Affected Point Code Screen](#) on page 102
- [Changing an Allowed Affected Point Code Screen](#) on page 114.

Note: If any of these conditions apply to this procedure, skip step 4 and go to step 5:

- The point code in the screen is not being changed.
- The screen being changed contains either an ANSI or 24-bit ITU-N point code.
- The ITU-I or 14-bit ITU-N non-spare point code in the screen is not being changed to an ITU-I or 14-bit ITU-N spare point code.
- The point code in the screen is an ITU-I or 14-bit ITU-N spare point code or the screening reference contains other screens with ITU-I or 14-bit ITU-N spare point codes.

4. Display the status of the ITU National and International Spare Point Code Support feature by entering the `rtrv-ctrl-feat` command with the ITU National and International Spare Point Code Support feature part number.

Enter this command.

```
rtrv-ctrl-feat:partnum=893013601
```

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name          Partnum   Status Quantity
Spare Point Code Support 893013601 on      ----

The following features have been temporarily enabled:

Feature Name          Partnum   Status Quantity   Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name          Partnum
Zero entries found.
```

If the ITU National and International Spare Point Code Support feature is enabled, go to step 5.

If the ITU National and International Spare Point Code Support feature is not enabled, perform the “Activating the ITU National and International Spare Point Code Support Feature” procedure in the Database *Administration Manual - SS7* to enable the ITU National and International Spare Point Code Support feature as required. After the feature has been enabled, go to step 5.

5. Change the attributes for the allowed CDPA screen using the `chg-scr-cdpa` command.

If a gateway screening stop action is to be assigned to the allowed CDPA screen being changed, enter the `chg-scr-cdpa` command with the `nsfi=stop` parameter and the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 2.



CAUTION

CAUTION: The EAGLE 5 ISS does not support redirecting MSUs for the DTA feature or intercepting ISUP IAM messages for the Calling Name Conversion Facility feature from the allowed CDPA screen. Gateway screening stop action sets containing either the RDCT (redirect) or CNCF (calling name conversion facility) stop actions should not be assigned to the allowed CDPA screen. If a gateway screening stop action set containing the RDCT or CNCF stop actions is specified with the `chg-scr-cdpa` command, unsolicited information message (UIM) 1125 is generated when the attempt is made to redirect MSUs from the allowed CDPA screen. Unsolicited information message (UIM) 1215 is generated when ISUP IAM MSUs are intercepted from the allowed CDPA screen. For more information on UIMs 1125 and 1215, go to the *Unsolicited Alarm and Information Messages Manual*.

The current values for the `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `npc`, `msa`, `ssa`, and `sp`, `ssn`, and `scmgfid` parameters must be entered exactly as shown in the `rtrv-scr-cdpa` output in step 1. If the `scmgfid` value is shown as dashes, the `scmgfid` parameter cannot be specified.

The following list contains the values for nni, nnc, nncm, nzone, narea, nid, nnpc, nmsa, nssa, nsp, nssn, and nscmgfid parameters:

- nni – 0 - 255 or an asterisk (*)
- nnc – 0 - 255 or an asterisk (*)
- nncm – 0 - 255 or an asterisk (*)
- nzone – 0 - 7 or an asterisk (*)
- narea – 0 - 255 or an asterisk (*)
- nid – 0 - 7 or an asterisk (*)
- nnpc – 1 - 16383 or an asterisk (*)
- nmsa – 0 - 255 or an asterisk (*)
- nssa – 0 - 255 or an asterisk (*)
- nsp – 0 - 255 or an asterisk (*)
- nssn – 0 - 255 or an asterisk (*)
- nscmgfid – 1 - 255 or an asterisk (*)

Note: The nsfi=aftpc parameter can be specified only if the ssn value (new or current) is 1. [Table 29: CDPA Parameter Combinations](#) on page 148 shows the valid parameter combinations for the ssn, scmgfid, nsfi, and nsr parameter values.

Table 29: CDPA Parameter Combinations

New or Current SSN Value	New or Current SCMGFID Value	NSFI	NSR
1	1 - 255, *	AFTPC or STOP	Must be specified if NSFI=AFTPC
0, 2-255, *	Cannot be specified	STOP	Cannot be specified

A range of values can be specified for the nni, nnc, and nncm parameters. See the [“Specifying a Range of Values”](#) on page 144 section for more information on how the asterisk and a range of values are used for the nni, nnc, and nncm parameters.

To change an ITU-I or 14-bit ITU-N spare point code to a non-spare point code, both the pcst=s and npcst=none parameters must be specified with the chg-scr-cdpa command.

To change an ITU-I or 14-bit ITU-N non-spare point code to a spare point code, the npcst=s parameter must be specified with the chg-scr-cdpa command. The pcst parameter does not have to be specified.

If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N spare point code, the pcst=s parameter must be specified with the chg-scr-cdpa command.

If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N non-spare point code, the pcst parameter does not have to be specified with the chg-scr-cdpa command. If the pcst parameter is specified for a screen containing either an ITU-I or 14-bit ITU-N non-spare point code, the pcst parameter value must be none.

For this example, enter this command.

```
chg-scr-cdpa:sr=gw15:zone=5:area=117:id=2:ssn=254:nzone=2
:narea=230:nid=7:nssn=001:nscmgfid=150:nsfi=aftpc:nsr=it1
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
CHG-SCR-CDPA: SCREEN SET AFFECTED - GW15 1% FULL
CHG-SCR-CDPA: MASP A - COMPLTD
```

6. Verify the changes using the `rtrv-scr-cdpa` command with the screening reference name used in step 5.

For this example, enter this command.

```
rtrv-scr-cdpa:sr=gw15
```

The following is an example of the possible output.


```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED CDPA
SR      ZONE  AREA  ID      SSN      SCMGFID  NSFI      NSR/ACT
GW15    2       230   7       001      150      AFTPC     ITU1
```


7. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.


The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 28: Changing an Allowed Called Party Address Screen

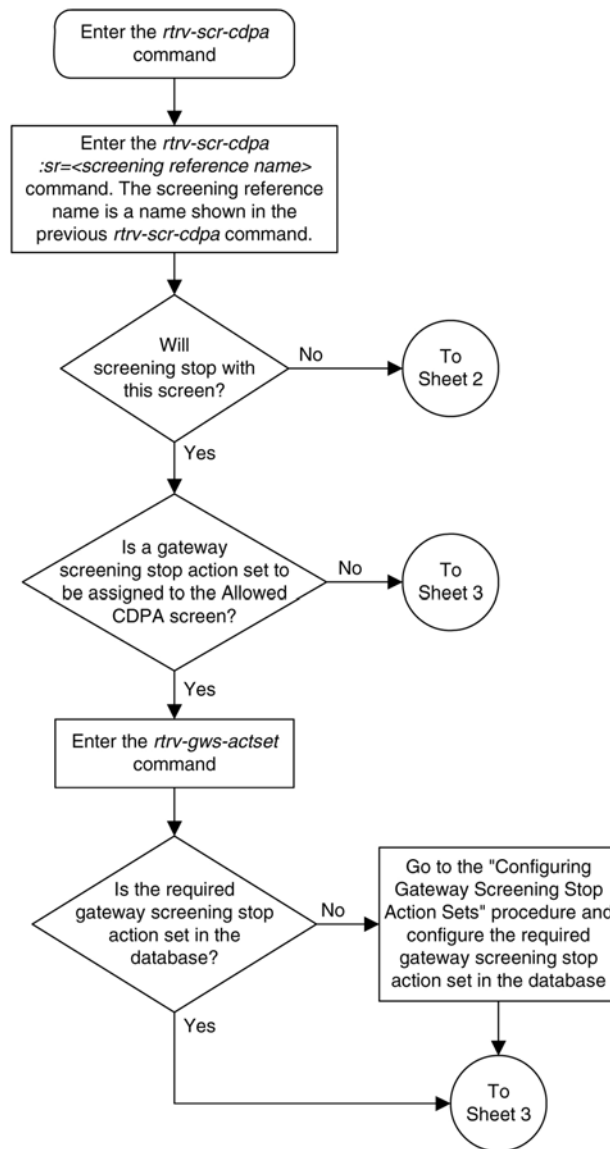

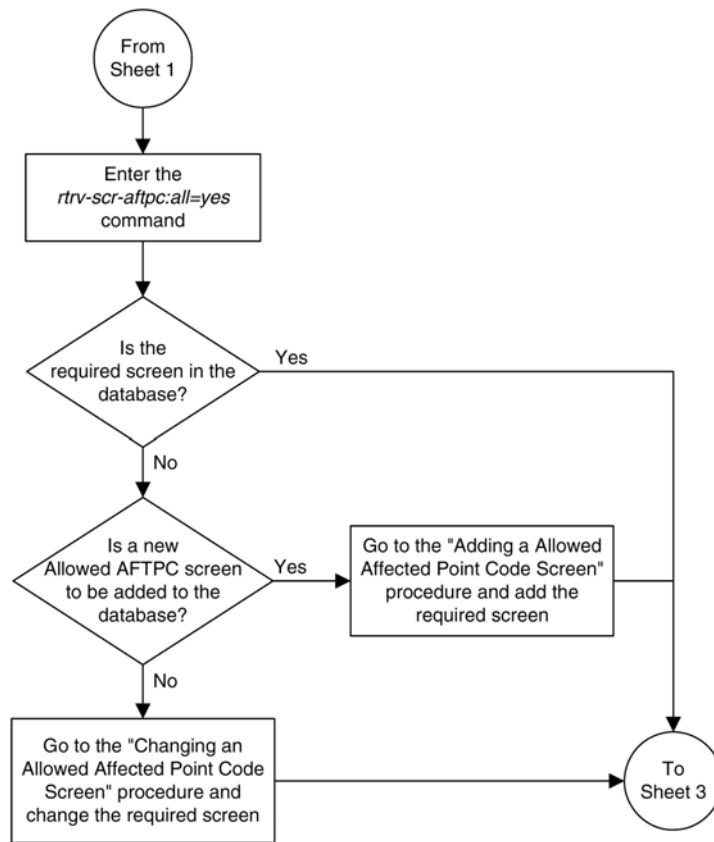

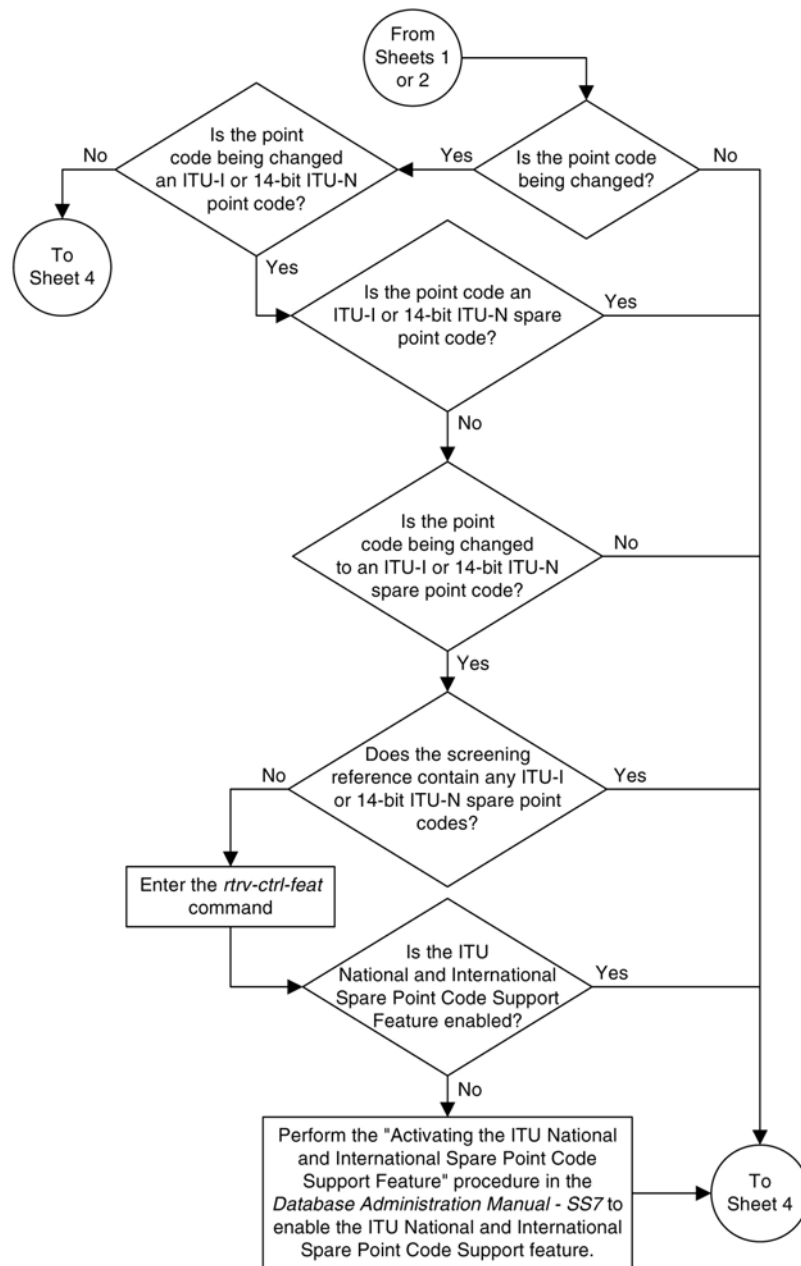

From
Sheet 3

Enter the *chg-scr-cdpa* command with these mandatory parameters:
:sr=<screening reference name>
:ssn=<current ssn value>
:scmgfid=<current scmgfid value>

and the point code parameters, depending on the point code type contained in the screen being changed. Only one point code type can be specified.

ANSI Point Code	ITU-I Point Code	14-Bit ITU-N Point Code	24-Bit ITU-N Point Code
<i>:ni=<current ni value></i>	<i>:zone=<current zone value></i>	<i>:npc=<current npc value></i>	<i>:msa=<current msa value></i>
<i>:nc=<current nc value></i>	<i>:area=<current area value></i>	<i>:pcst=<s, none></i>	<i>:ssa=<current ssa value></i>
<i>:ncm=<current ncm value></i>	<i>:id=<current id value></i>		<i>:sp=<current sp value></i>
	<i>:pcst=<s, none></i>		

At least one of these optional parameters must be specified with the *chg-scr-cdpa* command.

*:nssn=<0-255, *>*
*:nscmgfid=<1-255, *>*
:nsfi=<aftpc, stop>
:nsr=<next screening reference>
:actname=<GWS stop action set name>

If the new point code code parameters are specified, they must be of the same type as the current point code values specified in the *chg-scr-cdpa* command.

ANSI Point Code	ITU-I Point Code	14-Bit ITU-N Point Code	24-Bit ITU-N Point Code
<i>:nni=<0-255, *></i>	<i>:nzone=<0-7, *></i>	<i>:nnpc=<1-16383, *></i>	<i>:nmsa=<0-255, *></i>
<i>:nnc=<0-255, *></i>	<i>:narea=<0-255, *></i>	<i>:npcst=<s, none></i>	<i>:nssa=<0-255, *></i>
<i>:nncm=<0-255, *></i>	<i>:nid=<0-7, *></i>		<i>:nsp=<0-255, *></i>
	<i>:npcst=<s, none></i>		

(See the Notes on Sheet 5)

Enter the *rtv-scr-cdpa*
:sr=<screening reference name> command

Enter the
chg-db:action=backup:dest=fixed
 command

Notes:

1. A range of values can be specified for the *nni*, *nnn*, or *nnnm* parameters by inserting double ampersands (&&) between the parameter values defining the range. For example, to specify the range 025 to 200 for the *nni* parameter, enter 025&&200 for the *nni* parameter value.
2. The asterisk (*) specifies the entire range of values for that parameter.
For more information about specifying a range of values and about using the asterisk, see the "Gateway Screening Attributes" section in Chapter 2 and the "Specifying a Range of Values" section in this procedure.
3. The *nscmgfid* parameter can be specified only if the *ssn* parameter value (if unchanged) or the *nssn* parameter value is 1. If either the *nssn=1* or *nscmgfid* parameter is specified, the other parameter must be specified. The *nscmgfid* parameter cannot be specified if the *ssn* parameter value is 2 through 255, or *.
4. To specify the *nsfi=atpc* parameter, the *ssn* parameter value (if unchanged) or the *nssn* parameter value must be 1.
5. If the *ssn* parameter value (if unchanged) or the *nssn* parameter value is 2 through 255, or *, the *nsfi* parameter value must be *stop*.
6. If the *ssn* parameter value (if unchanged) or the *nssn* parameter value is 1, the *nsfi* parameter value can be either *atpc* or *stop*.
7. The *nsr* parameter can be specified only, and must be specified, if the *nsfi=atpc* parameter is specified.
8. The *actname* parameter can be specified only if the *nsfi* value is *stop* (either the current *nsfi* value is *stop* and not being changed, or the *nsfi* value is being changed to *stop*). The *actname* parameter is optional. If the *actname* parameter is specified, the *actname* parameter value is one of the gateway screening stop action set names shown in the *rtrv-gws-actset* output on Sheet 1.
9. The current values for the *ni*, *nc*, *ncm*, *zone*, *area*, *id*, *npc*, *msa*, *ssa*, *sp*, or *ssn* parameters must be entered exactly as shown in the *rtrv-scr-cdpa* output. If dashes are shown for the *scmgfid* parameter, the *scmgfid* parameter cannot be specified with the *chg-scr-cdpa* command.
10. To change an ITU-I or 14-bit ITU-N spare point code to a non-spare point code, both the *pcst=s* and *npcst=none* parameters must be specified with the *chg-scr-cdpa* command.
11. To change an ITU-I or 14-bit ITU-N non-spare point code to a spare point code, the *npcst=s* parameter must be specified with the *chg-scr-cdpa* command. The *pcst* parameter does not have to be specified.
12. If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N spare point code, the *pcst=s* parameter must be specified with the *chg-scr-cdpa* command.
13. If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N non-spare point code, the *pcst* parameter does not have to be specified with the *chg-scr-cdpa* command. If the *pcst* parameter is specified for a screen containing either an ITU-I or 14-bit ITU-N non-spare point code, the *pcst* parameter value must be *none*.

Chapter 5

Allowed Translation Type (TT) Screen Configuration

Topics:

- *Introduction Page 156*
- *Adding an Allowed Translation Type Screen Page 161*
- *Removing an Allowed Translation Type Screen Page 167*
- *Changing an Allowed Translation Type Screen Page 169*

Chapter 5, Allowed Translation Type (TT) Screen Configuration, contains the procedures necessary to configure allowed translation type screens.

Introduction

The allowed translation type (TT) screen is used to screen all SCCP messages which have the specified translation type value in the called party address. The gray shaded areas in [Figure 30: Allowed Translation Type Screening Function](#) on page 159 shows the fields of the SS7 message that are checked by the TT screening function.

Gateway Screening Actions

If a match is not found, the message is discarded.

If a match is found, the `nsfi` is examined to determine the next step in the screening process. If the `nsfi` value is any value other than `stop`, the next screening reference (`nsr`) is identified and the screening process continues to the next screen identified by the `nsfi` and `nsr` parameter values.


If the `nsfi` is equal to `stop`, the screening process stops and the message is processed. If a gateway screening stop action set is specified with the screen, shown by the `actname` parameter value, the message is processed according to the gateway screening stop actions that are assigned to the gateway screening stop action set.


- If the `copy` gateway screening stop action is specified, the message is processed and a copy of the message is sent by the STPLAN feature to an external application.
- If the `rdct` (redirect) gateway screening stop action is specified, the message is diverted from the original destination and sent to another destination with the Database Transport Access feature, specified by global title translation, for further processing.
- If the `cncf` gateway screening stop action is specified, the PIP parameter in the incoming ISUP IAM message is converted to the GN parameter. The GN parameter in the incoming ISUP IAM message is converted to the PIP parameter. The message is then sent to the node specified by the DPC in the routing label in the message. For more information on the Calling Name Conversion Facility feature, see [Calling Name Conversion Facility \(CNCF\) Configuration](#) on page 417.
- If the `tlnp` gateway screening stop action is specified, ISUP IAMs that pass gateway screening are processed either by the ISUP NP with EPAP feature (if the ISUP NP with EPAP feature is enabled and turned on) or by the Triggerless LNP feature (if the Triggerless LNP feature is turned on). The ISUP NP with EPAP feature is discussed in more detail in the *Feature Manual - G-Port*. The Triggerless LNP feature is discussed in more detail in the *LNP Feature Activation Guide*.
- If the `tinp` gateway screening stop action is specified, ISUP IAMs that pass gateway screening are intercepted by the Triggerless ISUP based Number Portability (TINP) feature and converted to include the routing number (RN) if the call is to a ported number. The TINP feature is discussed in more detail in the *Feature Manual - G-Port*.
- If the `tif`, `tif2`, or `tif3` gateway screening stop actions are specified, TIF processing is applied to the message.

Allowed TT Screening Actions

Figure 29: Allowed TT Screening Actions on page 157 shows the screening actions of the allowed TT screen.

Figure 29: Allowed TT Screening Actions

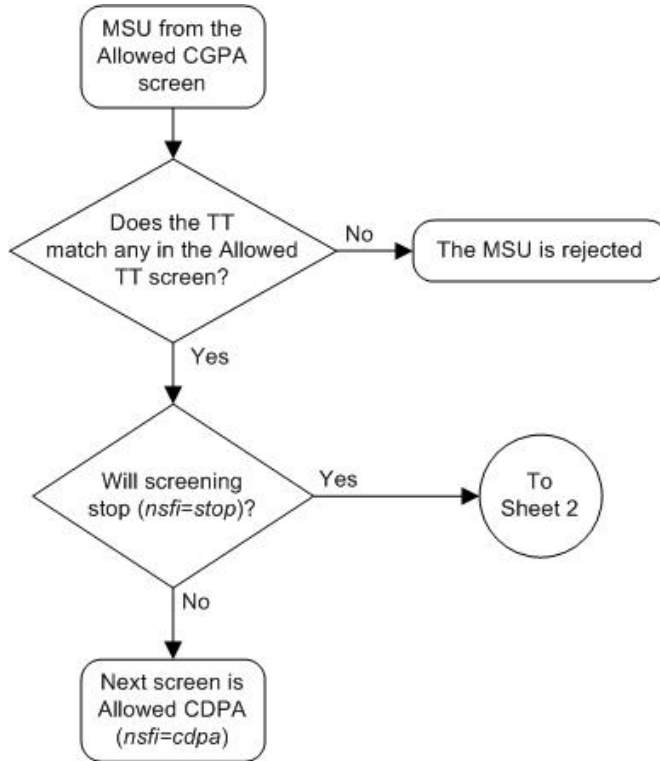

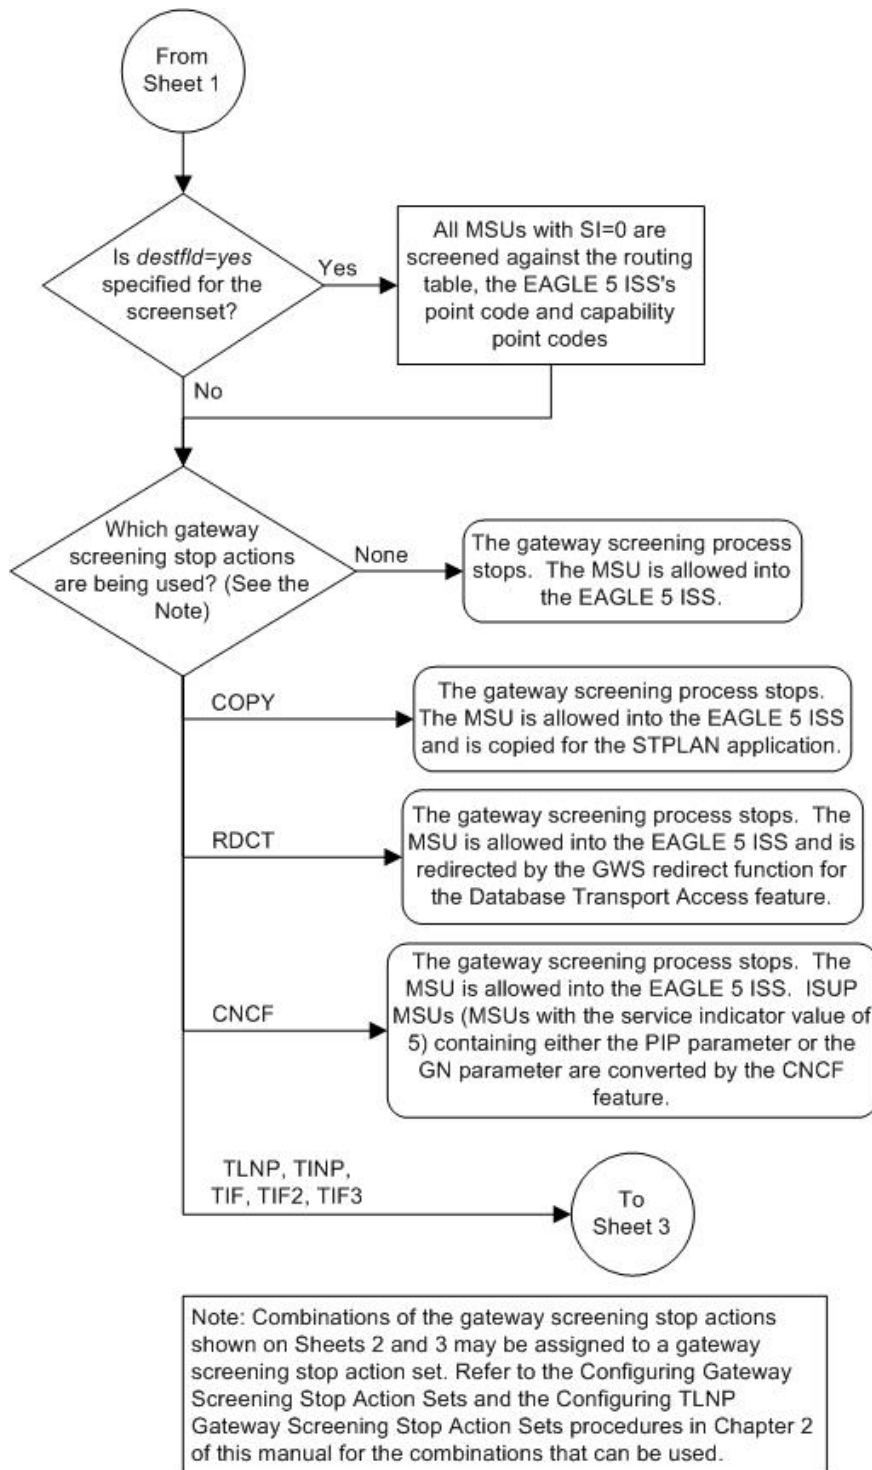

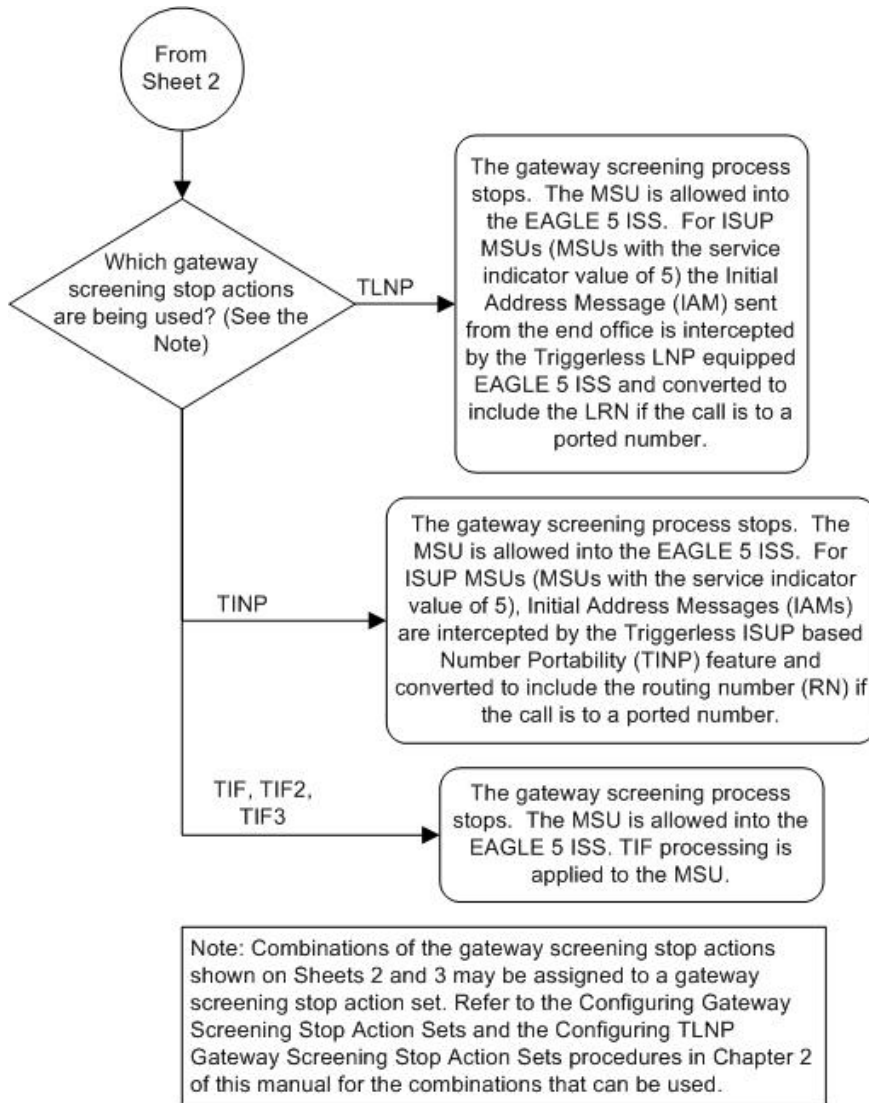


Figure 30: Allowed Translation Type Screening Function

ANSI MSU (ANSI Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF			
		Routing Label DPC OPC SLS NCM NC NI NCM NC NI xx		CGPA Length Address Indicator Subsystem Point Code (NCM NC NI)	CDPA Length Address Indicator (x x xxxx xx) (x RI xxxx xx) Subsystem Point Code (NCM NC NI) Address (Translation Type) (Digits)

ITU-I MSU (ITU International Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF			
		Routing Label DPC OPC SLS ID AREA ZONE ID AREA ZONE xx		CGPA Length Address Indicator Subsystem Point Code (ID AREA ZONE)	CDPA Length Address Indicator (x x xxxx xx) (x RI xxxx xx) Subsystem Point Code (ID AREA ZONE) Address (Translation Type) (Digits)

14-Bit ITU-N MSU (14-Bit ITU National Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF			
		Routing Label DPC OPC SLS NPC NPC xx		CGPA Length Address Indicator Subsystem Point Code (NPC)	CDPA Length Address Indicator (x x xxxx xx) (x RI xxxx xx) Subsystem Point Code (NPC) Address (Translation Type) (Digits)

24-Bit ITU-N MSU (24-Bit ITU National Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF			
		Routing Label DPC OPC SLS SP SSA MSA SP SSA MSA xx		CGPA Length Address Indicator Subsystem Point Code (SP SSA MSA)	CDPA Length Address Indicator (x x xxxx xx) (x RI xxxx xx) Subsystem Point Code (SP SSA MSA) Address (Translation Type) (Digits)

Adding an Allowed Translation Type Screen

This procedure is used to add an allowed translation type (TT) screen to the database using the `ent-scr-tt` command. The parameters used by the `ent-scr-tt` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The examples in this procedure are used to add the allowed TT screen data shown in [Table 30: Example Gateway Screening Allowed TT Configuration Table](#) on page 161 and based on the example configuration shown in [Figure 7: Gateway Screening Configuration - Example 3](#) on page 46.

Table 30: Example Gateway Screening Allowed TT Configuration Table

Screening Reference	TYPE	NSFI	NSR
gw16	250	cdpa	gw18

The allowed TT screen can only reference an allowed CDPA screen and the allowed CDPA screen being referenced must be in the database. This can be verified using the `rtrv-scr-cdpa:all=yes` command. If the desired allowed CDPA screen is not in the database, perform one of these procedures to add the required screen to the database or change an existing screen in the database.

- [Adding an Allowed Called Party Address Screen](#) on page 128
- [Changing an Allowed Called Party Address Screen](#) on page 143

Specifying a Range of Values

A range of values can be specified for the `type` parameter. The range of values specified for the `type` parameter cannot include any values currently provisioned for the screen reference name.

For example, screening reference name `scr1` contains these entries:

SR	TYPE	NSFI	NSR/ACT
scr1	110	STOP	-----
scr1	125	STOP	-----

Another entry for screening reference `scr1` cannot contain a range of values that would include the `type` parameter values 110 or 125.

1. Verify that the gateway screening feature is on, by entering the `rtrv-feat` command.

If the gateway screening feature is on, the `GWS` field is set to `on`.

Note: The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

If the gateway screening feature is on, shown by the entry `GWS = on` in the `rtrv-feat` command output, skip step 2, and go to step 3.

2. Turn the gateway screening feature on by entering this command.

```
chg-feat:gws=on
```

Note: Once the gateway screening feature is turned on with the `chg-feat` command, it cannot be turned off.

The gateway screening feature must be purchased before you turn this feature on with the `chg-feat` command. If you are not sure if you have purchased the gateway screening feature, contact your Tekelec Sales Representative or Account Representative.

When the `chg-feat` has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 11:43:04 GMT EAGLE5 36.0.0
CHG-FEAT: MASP A - COMPLTD
```

3. Display all allowed TT screens in the database using the `rtrv-scr-tt` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED TT
SR      REF  RULES
IEC     YES   2
WRD2    YES   1
WRD4    YES   9
```

If the screening reference names that you wish to add with this procedure are not shown in the `rtrv-scr-tt` command output, go to step 4. For this example, the screening reference names are not shown. If these screening reference names are shown in the `rtrv-scr-tt` command output, make sure the screening data you wish to enter is not already in the database by entering the `rtrv-scr-tt` command with the screening reference name. For example, enter the `rtrv-scr-tt:sr=iec` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED TT
SR      TYPE   NSFI   NSR/ACT
IEC     005&&010 STOP   -----
IEC     012     STOP   -----
IEC     016     CDPA   IEC
WRD2    243     STOP   -----
WRD4    *       STOP   -----
```

If a gateway screening stop action set is to be assigned to the allowed TT screen being added to the database, go to step 4.

Step 4 verifies the gateway screening stop action set names in the database. The gateway screening stop action set names are assigned only if the NSFI of the screen being added in this procedure is STOP. If the NSFI of the new screen will be STOP, but a gateway screening stop action set name will not be assigned to the new screen, skip steps 4 and 5 and go to step 6. If the NSFI of the new screen is CDPA, skip step 4 and go to step 5.

4. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
ACT  ACT    ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME    1    2    3    4    5    6    7    8    9    10
--   ---    -    -    -    -    -    -    -    -    -    -
1    copy    copy
```



```

2   rdct   rdct
3   cr     copy rdct
4   cncf   cncf
5   cpncf  copy cncf
6   cncfrd cncf rdct
7   cpcfrd copy cncf rdct

```

```
GWS action set table is (7 of 16) 44% full
```

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to configure the required gateway screening stop action set.

Note: If the NSFI of the screen being added in this procedure is STOP, skip step 5 and go to step 6.

5. Enter the `rtrv-scr-cdpa` command to verify that the screen that will be specified by the NSFI/NSR parameter combination in step 6 is in the database.

If the desired screen is not in the database, perform one of these procedures to add the desired screen to the database or change an existing screen in the database.

- [Adding an Allowed Called Party Address Screen](#) on page 128
- [Changing an Allowed Called Party Address Screen](#) on page 143.

6. Add a new allowed TT screen to the database using the `ent-scr-tt` command.

If a gateway screening stop action is to be assigned to the allowed TT screen being changed, enter the `ent-scr-tt` command with the `nsfi=stop` parameter and the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 4.



CAUTION

CAUTION: The EAGLE 5 ISS does not support redirecting MSUs for the DTA feature or intercepting ISUP IAM messages for the Calling Name Conversion Facility feature from the allowed TT screen. Gateway screening stop action sets containing either the RDCT (redirect) or CNCF (calling name conversion facility) stop actions should not be assigned to the allowed TT screen. If a gateway screening stop action set containing the RDCT or CNCF stop actions is specified with the `ent-scr-tt` command, unsolicited information message (UIM) 1128 is generated when the attempt is made to redirect MSUs from the allowed TT screen. Unsolicited information message (UIM) 1218 is generated when ISUP IAM MSUs are intercepted from the allowed TT screen. For more information on UIMs 1128 and 1218, go to the *Unsolicited Alarm and Information Messages Manual*.

The value of the `type` parameter can be from 0 to 255 or an asterisk (*).

A range of values can be specified for the `type` parameter. See the [“Specifying a Range of Values”](#) on page 161 section for more information on how a range of values is used for the `type` parameter.

For this example, enter this command.

```
ent-scr-tt:sr=gw16:type=250:nsfi=cdpa:nsr=gw18
```

A message similar to the following should appear.

```

rlghncxa03w 06-10-25 15:28:30 GMT  EAGLE5 36.0.0
ENT-SCR-TT: SCREEN SET AFFECTED - GW16  1% FULL
ENT-SCR-TT: MASP A - COMPLTD

```

7. Verify the changes using the `rtrv-scr-tt` command with the screening reference name used in step 6.

For this example, enter this command.

```
rtrv-scr-tt:sr=gw16
```

The following is an example of the possible output.


```
rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED TT
SR      TYPE      NSFI      NSR/ACT
GW16   250          CDPA      GW18
```


8. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.


The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 31: Adding an Allowed Translation Type Screen

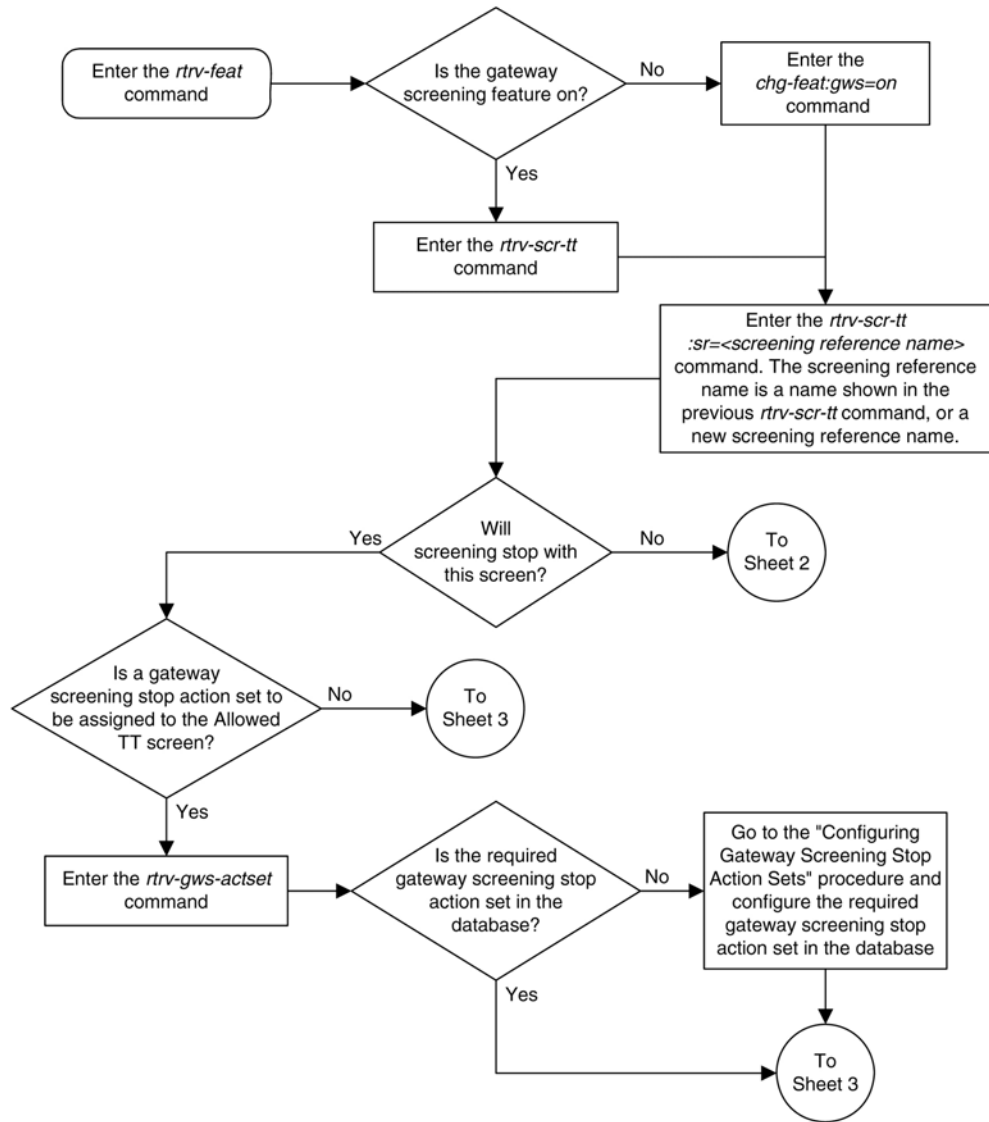

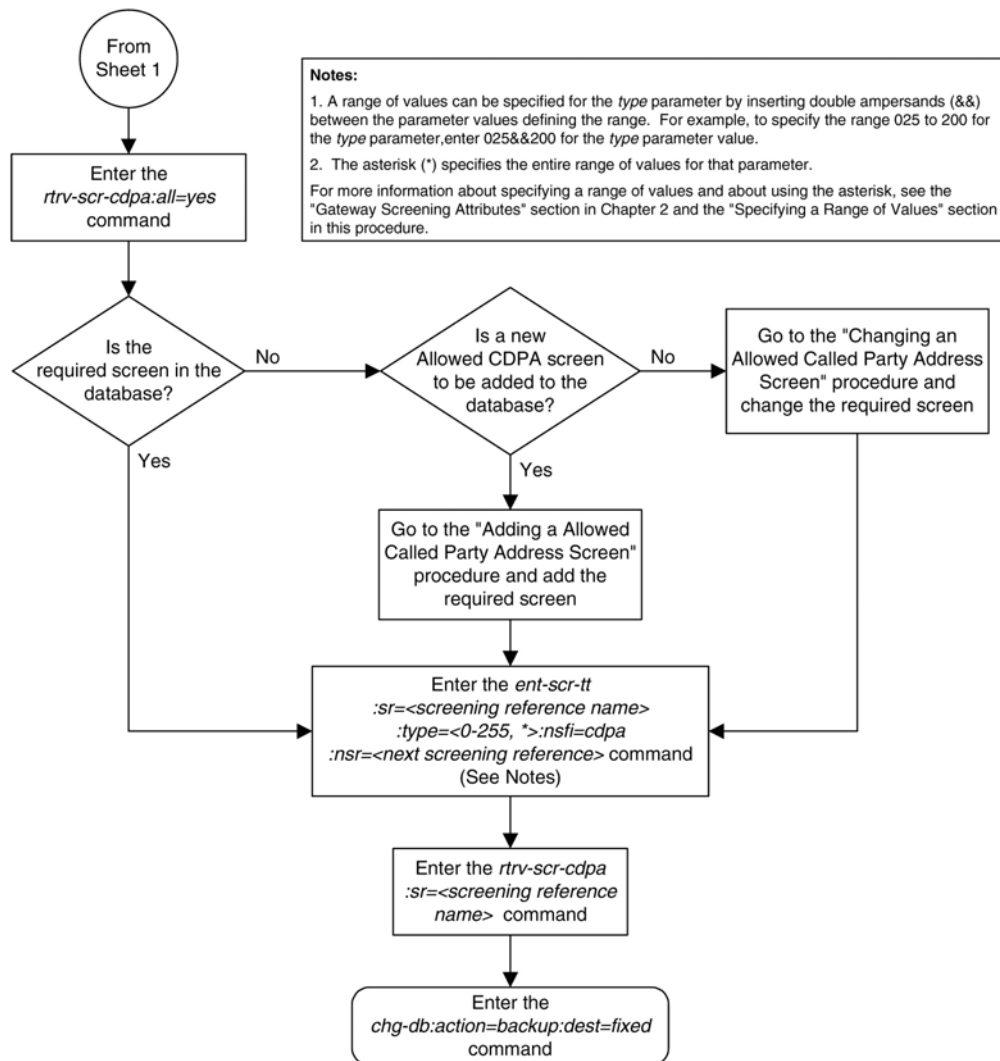

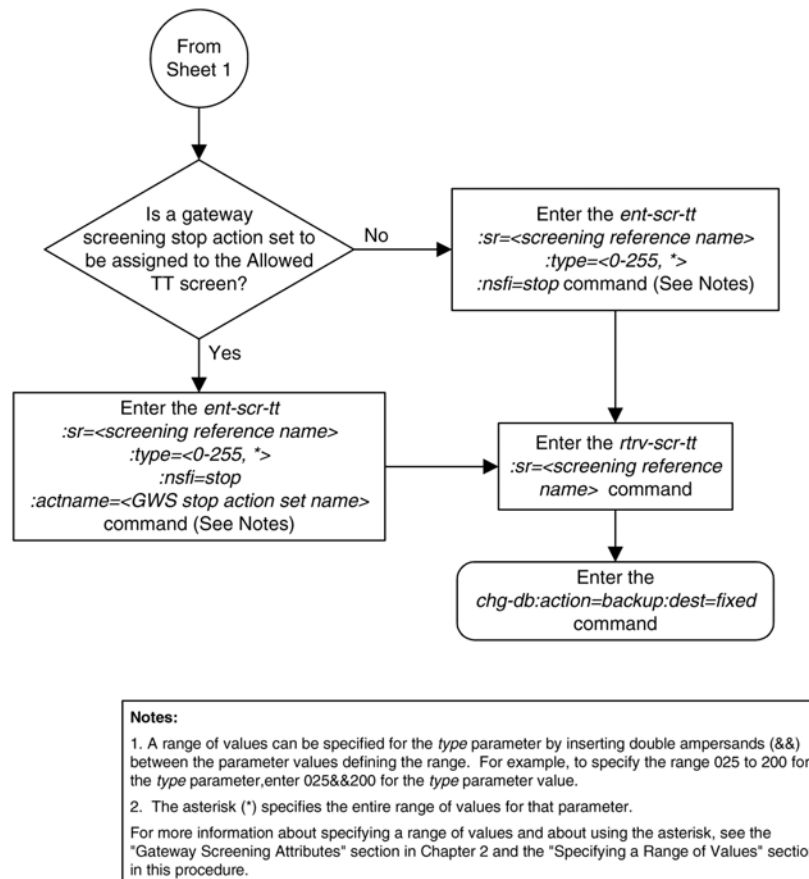

Removing an Allowed Translation Type Screen

This procedure is used to remove an allowed translation type (TT) screen from the database using the `dlt-scr-tt` command. The parameters used by the `dlt-scr-tt` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure removes the allowed TT screen `iec`, with the translation type 016 from the database.

The allowed TT screen can be referenced by the Allowed CGPA screen. Enter the `rtrv-scr-cgpa:nsfi=tt` command to verify that this screen does not reference the allowed TT screen being removed from the database.

To change the NSFI of any of these screens, perform the [Changing an Allowed Calling Party Address Screen](#) on page 198 procedure.

1. Display the allowed TT screens in the database using the `rtrv-scr-tt` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
```

```
SCREEN = ALLOWED TT
SR   REF  RULES
GW16 YES   1
IEC  YES   3
WRD2 YES   1
WRD4 YES   1
```

From the `rtrv-scr-tt` output, display the allowed TT screen you wish to remove using the `rtrv-scr-tt` command with the screening reference name. For this example, enter the `rtrv-scr-tt:sr=iec` command. The following is an example of the possible output. The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED TT
SR   TYPE   NSFI   NSR/ACT
IEC  005&&010 STOP  -----
IEC  012     STOP  -----
IEC  016     CDPA  IEC
```

2. Enter the `rtrv-scr-cgpa:nsfi=tt` command to verify that the screen being removed is not referenced by other screens in the database.

If the screen being removed is referenced by other screens, perform the [Changing an Allowed Calling Party Address Screen](#) on page 198 procedure procedure and change the NSFI of those screens to reference other screens or change the NSFI of these screens to STOP.

3. Remove the allowed TT screen from the database using the `dlt-scr-tt` command.

The current value of the `type` parameter must be entered exactly as shown in the `rtrv-scr-tt` output. For this example, enter this command.

```
dlt-scr-tt:sr=iec:type=016
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
DLT-SCR-TT: SCREEN SET AFFECTED - IEC 2% FULL
DLT-SCR-TT: MASP A - COMPLTD
```

4. Verify the changes using the `rtrv-scr-tt` command with the screening reference name used in step 3.

For this example, enter this command.

```
rtrv-scr-tt:sr=iec
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED TT
SR   TYPE   NSFI   NSR/ACT
IEC  005&&010 STOP  -----
IEC  012     STOP  -----
```


5. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
```

BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.

Figure 32: Removing an Allowed Translation Type Screen

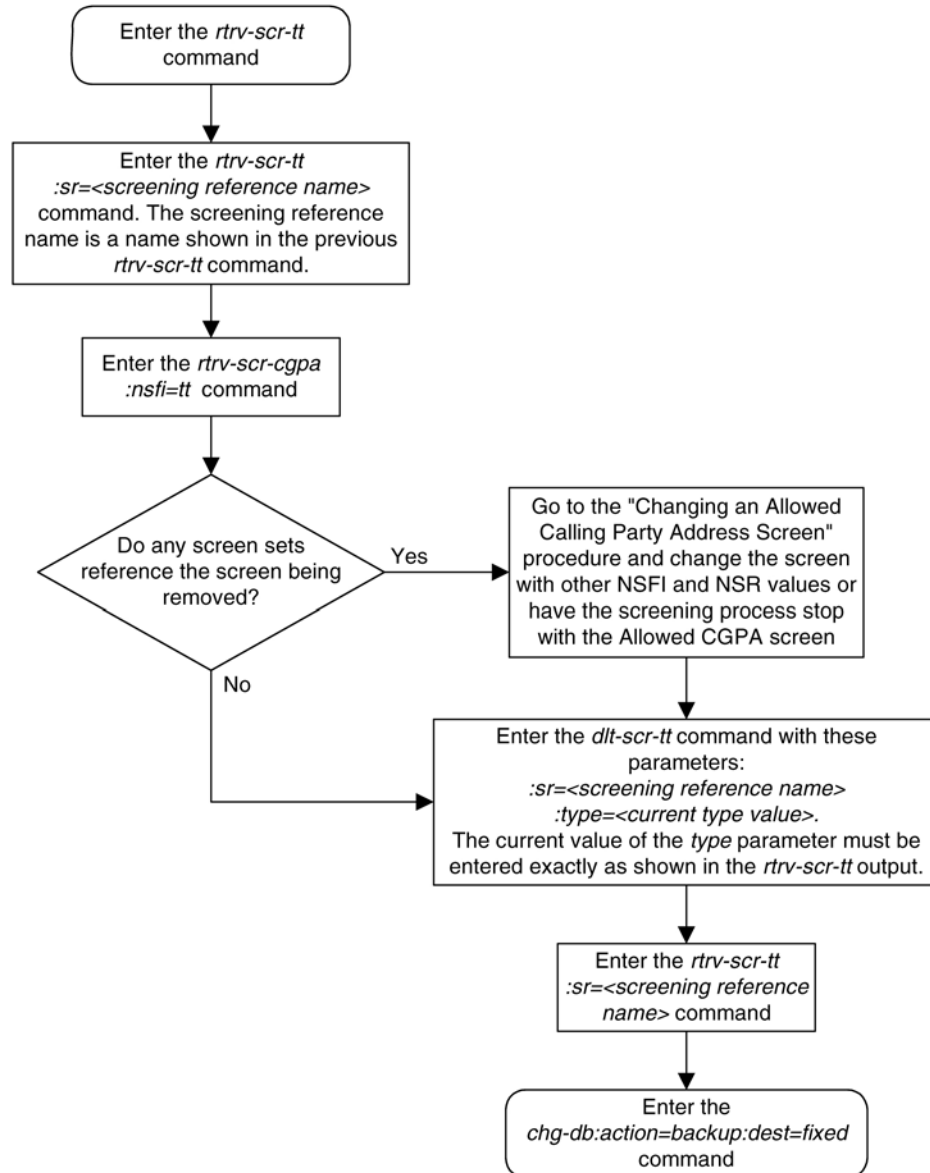

Changing an Allowed Translation Type Screen

This procedure is used to change the attributes of an allowed translation type (TT) screen in the database using the `chg-scr-tt` command. The parameters used by the `chg-scr-tt` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to

configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure is used to change the translation type 016 for the allowed CGPA screen `iec` to 210 and change the NSFI to `stop`.

The allowed TT screen can only reference an allowed CDPA screen. This can be verified using the `rtrv-scr-cdpa:all=yes` command. If the desired allowed CDPA screen is not in the database, perform one of these procedures to add the required screen to the database or change an existing screen in the database.

- [Adding an Allowed Called Party Address Screen](#) on page 128
- [Changing an Allowed Called Party Address Screen](#) on page 143

Specifying a Range of Values

A range of values can be specified for the `type` parameter. The range of values specified for the `type` parameter cannot include any values currently provisioned for the screen reference name.

For example, screening reference name `scr1` contains these entries:

```
SR   TYPE      NSFI   NSR/ACT
scr1 110        STOP   -----
scr1 125        STOP   -----
```

Another entry for screening reference `scr1` cannot contain a range of values that would include the `type` parameter values 110 or 125.

1. Display the allowed TT screens in the database using the `rtrv-scr-tt` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED TT
SR   REF  RULES
GW16 YES    1
IEC  YES    3
WRD2 YES    1
WRD4 YES    1
```

From the `rtrv-scr-tt` output, display the allowed TT screen you wish to remove using the `rtrv-scr-tt` command with the screening reference name. For this example, enter the `rtrv-scr-tt:sr=iec` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED TT
SR   TYPE      NSFI   NSR/ACT
IEC  005&&010  STOP   -----
IEC  012        STOP   -----
IEC  016        CDPA   IEC
```

If a gateway screening stop action set is to be assigned to the allowed TT screen being added to the database, go to step 2.

Step 2 verifies the gateway screening stop action set names in the database. The gateway screening stop action set names are assigned only if the NSFI of the screen being changed in this procedure is STOP. If the NSFI of the screen will be changed to STOP, but a gateway

screening stop action set name will not be assigned to the screen, skip steps 2 and 3 and go to step 4. If the NSFI of the screen will not be STOP, skip step 2 and go to step 3.

2. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME  1    2    3    4    5    6    7    8    9    10
---  ---
1    copy  copy
2    rdct  rdct
3    cr    copy rdct
4    cncf  cncf
5    cpcncf copy cncf
6    cncfrd cncf rdct
7    cpcfrd copy cncf rdct

GWS action set table is (7 of 16) 44% full
```

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to configure the required gateway screening stop action set.

Note: If the NSFI of the screen being added in this procedure is STOP, skip step 3 and go to step 4.

3. Enter the `rtrv-scr-cdpa` command to verify that the screen that will be specified by the NSFI/NSR parameter combination in step 4 is in the database.

If the desired screen is not in the database, perform one of these procedures to add the desired screen to the database or change an existing screen in the database.

- [Adding an Allowed Called Party Address Screen](#) on page 128
- [Changing an Allowed Called Party Address Screen](#) on page 143.

4. Change the attributes of an allowed TT screen using the `chg-scr-tt` command.

If a gateway screening stop action is to be assigned to the allowed TT screen being changed, enter the `chg-scr-tt` command with the `nsfi=stop` parameter and the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 2.



CAUTION: The EAGLE 5 ISS does not support redirecting MSUs for the DTA feature or intercepting ISUP IAM messages for the Calling Name Conversion Facility feature from the allowed TT screen. Gateway screening stop action sets containing either the RDCT (redirect) or CNCF (calling name conversion facility) stop actions should not be assigned to the allowed TT screen. If a gateway screening stop action set containing the RDCT or CNCF stop actions is specified with the `chg-scr-tt` command, unsolicited information message (UIM) 1128 is generated when the attempt is made to redirect MSUs from the allowed TT screen. Unsolicited information message (UIM) 1218 is generated when ISUP IAM MSUs are intercepted from the allowed TT screen. For more information on UIMs 1128 and 1218, go to the *Unsolicited Alarm and Information Messages Manual*.

The value of the `ntype` parameter can be from 0 to 255 or an asterisk (*). The current value of the `type` parameter must be entered exactly as shown in the `rtrv-scr-tt` output in step 1.

A range of values can be specified for the `ntype` parameter. See the *“Specifying a Range of Values”* on page 170 section for more information on how a range of values is used for the `ntype` parameter.

For this example, enter this command.

```
chg-scr-tt:sr=iec:type=016:ntype=210:nsfi=stop
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
CHG-SCR-TT: SCREEN SET AFFECTED - IEC 4% FULL
CHG-SCR-TT: MASP A - COMPLTD
```

5. Verify the changes using the `rtrv-scr-tt` command with the screening reference name used in step 4.

For this example, enter this command.

```
rtrv-scr-tt:sr=iec
```

The following is an example of the possible output.


```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED TT
SR      TYPE      NSFI      NSR/ACT
IEC     005&&010    STOP     -----
IEC     012         STOP     -----
IEC     210         STOP     -----
```


6. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.


The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 33: Changing an Allowed Translation Type Screen

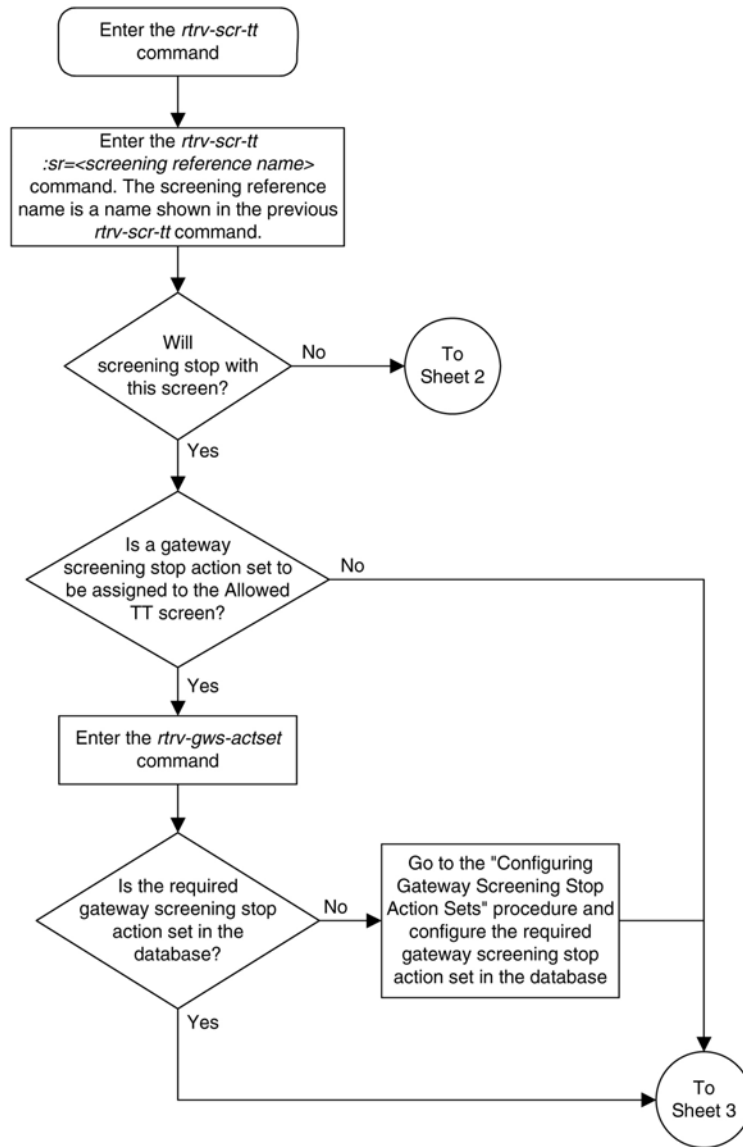

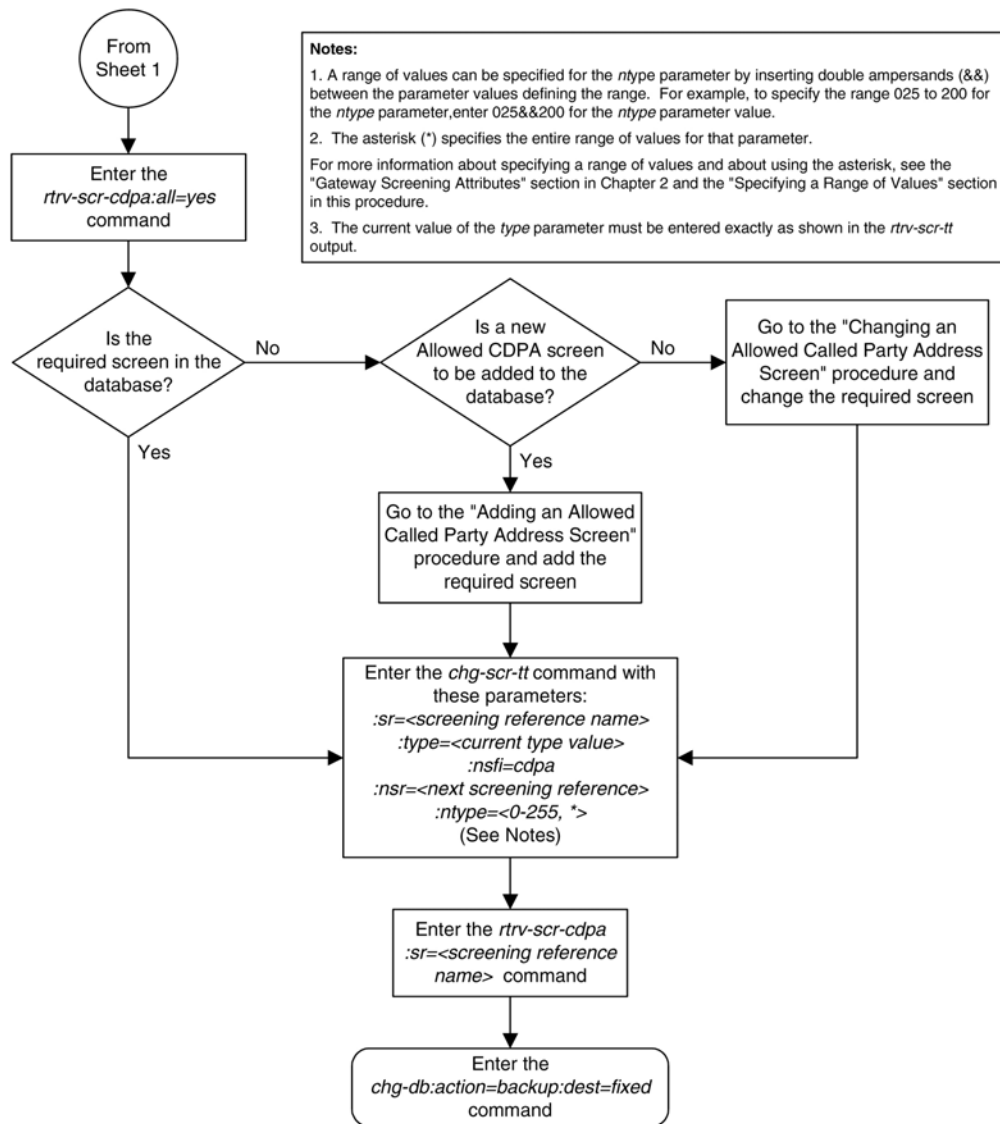

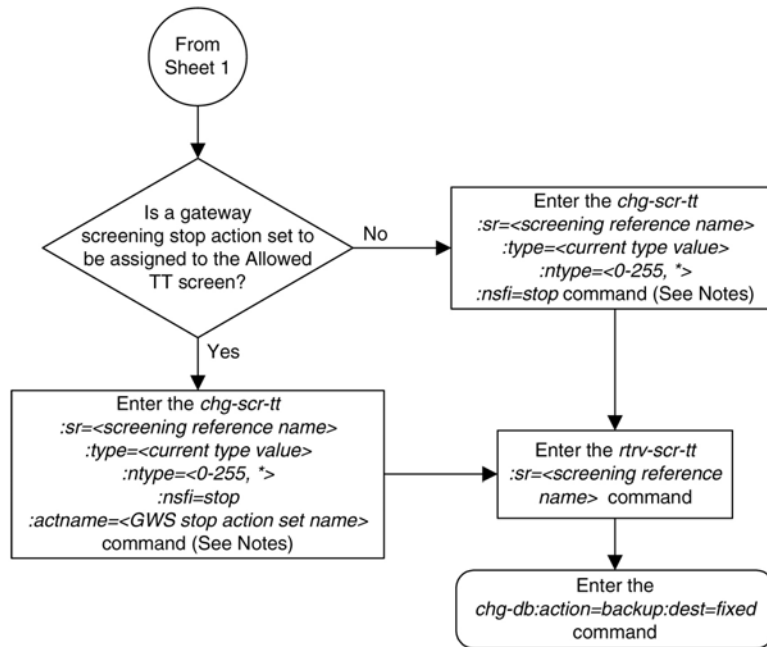

Notes:

1. A range of values can be specified for the *ntype* parameter by inserting double ampersands (&&) between the parameter values defining the range. For example, to specify the range 025 to 200 for the *ntype* parameter, enter 025&&200 for the *ntype* parameter value.
 2. The asterisk (*) specifies the entire range of values for that parameter.
- For more information about specifying a range of values and about using the asterisk, see the "Gateway Screening Attributes" section in Chapter 2 and the "Specifying a Range of Values" section in this procedure.
3. The current value of the *type* parameter must be entered exactly as shown in the *rtv-scr-tt* output.

Chapter 6

Allowed Calling Party (CGPA) Screen Configuration

Topics:

- [Introduction Page 178](#)
- [Adding an Allowed Calling Party Address Screen Page 184](#)
- [Removing an Allowed Calling Party Address Screen Page 194](#)
- [Changing an Allowed Calling Party Address Screen Page 198](#)

Chapter 6, Allowed Calling Party (CGPA) Screen Configuration, contains the procedures necessary to configure allowed calling party address screens.

Introduction

The allowed calling party address (CGPA) screen is used to screen SCCP messages from another network. The gray shaded areas in [Figure 35: Allowed Calling Party Address Screening Function](#) on page 182 shows the fields of the SS7 message that are checked by the CGPA screening function. The screening reference contains a list of point codes and subsystem number combinations.

Gateway Screening Actions

If a match is not found, the message is discarded.

If a match is found, the `nsfi` is examined to determine the next step in the screening process. If the `nsfi` value is any value other than `stop`, the next screening reference (`nsr`) is identified and the screening process continues to the next screen identified by the `nsfi` and `nsr` parameter values.

If the `nsfi` is equal to `stop`, the screening process stops and the message is processed. If a gateway screening stop action set is specified with the screen, shown by the `actname` parameter value, the message is processed according to the gateway screening stop actions that are assigned to the gateway screening stop action set.

- If the `copy` gateway screening stop action is specified, the message is processed and a copy of the message is sent by the STPLAN feature to an external application.
- If the `rdct` (redirect) gateway screening stop action is specified, the message is diverted from the original destination and sent to another destination with the Database Transport Access feature, specified by global title translation, for further processing.
- If the `cncf` gateway screening stop action is specified, the PIP parameter in the incoming ISUP IAM message is converted to the GN parameter. The GN parameter in the incoming ISUP IAM message is converted to the PIP parameter. The message is then sent to the node specified by the DPC in the routing label in the message. For more information on the Calling Name Conversion Facility feature, see [Calling Name Conversion Facility \(CNCF\) Configuration](#) on page 417.
- If the `tlnp` gateway screening stop action is specified, ISUP IAMs that pass gateway screening are processed either by the ISUP NP with EPAP feature (if the ISUP NP with EPAP feature is enabled and turned on) or by the Triggerless LNP feature (if the Triggerless LNP feature is turned on). The ISUP NP with EPAP feature is discussed in more detail in the *Feature Manual - G-Port*. The Triggerless LNP feature is discussed in more detail in the *LNP Feature Activation Guide*.
- If the `tinp` gateway screening stop action is specified, ISUP IAMs that pass gateway screening are intercepted by the Triggerless ISUP based Number Portability (TINP) feature and converted to include the routing number (RN) if the call is to a ported number. The TINP feature is discussed in more detail in the *Feature Manual - G-Port*.
- If the `tif`, `tif2`, or `tif3` gateway screening stop actions are specified, TIF processing is applied to the message.

Allowed CGPA Screening Actions

Any MSU that does not contain a service indicator of 3 in the SIO field and does not contain the SCCP message types 9, 10, 17, or 18 and reaches this screen in the gateway screening process automatically passes gateway screening and is allowed into the EAGLE 5 ISS.


The value of the `nsfi` parameter is based on the value of the routing indicator (`ri`) parameter. [Table 31: Valid Parameter Combinations for the Allowed CGPA Screening Function](#) on page 179 shows the valid combinations of `nsfi` values and routing indicator values.


Table 31: Valid Parameter Combinations for the Allowed CGPA Screening Function

Routing Indicator (RI) Values	Nest Screening Function Identifier (NSFI) Values
GT	TT
DPC	CDPA
* (asterisk)	TT, CDPA

[Figure 34: Allowed CGPA Screening Actions](#) on page 179 shows the screening actions of the allowed CGPA screen.

Figure 34: Allowed CGPA Screening Actions

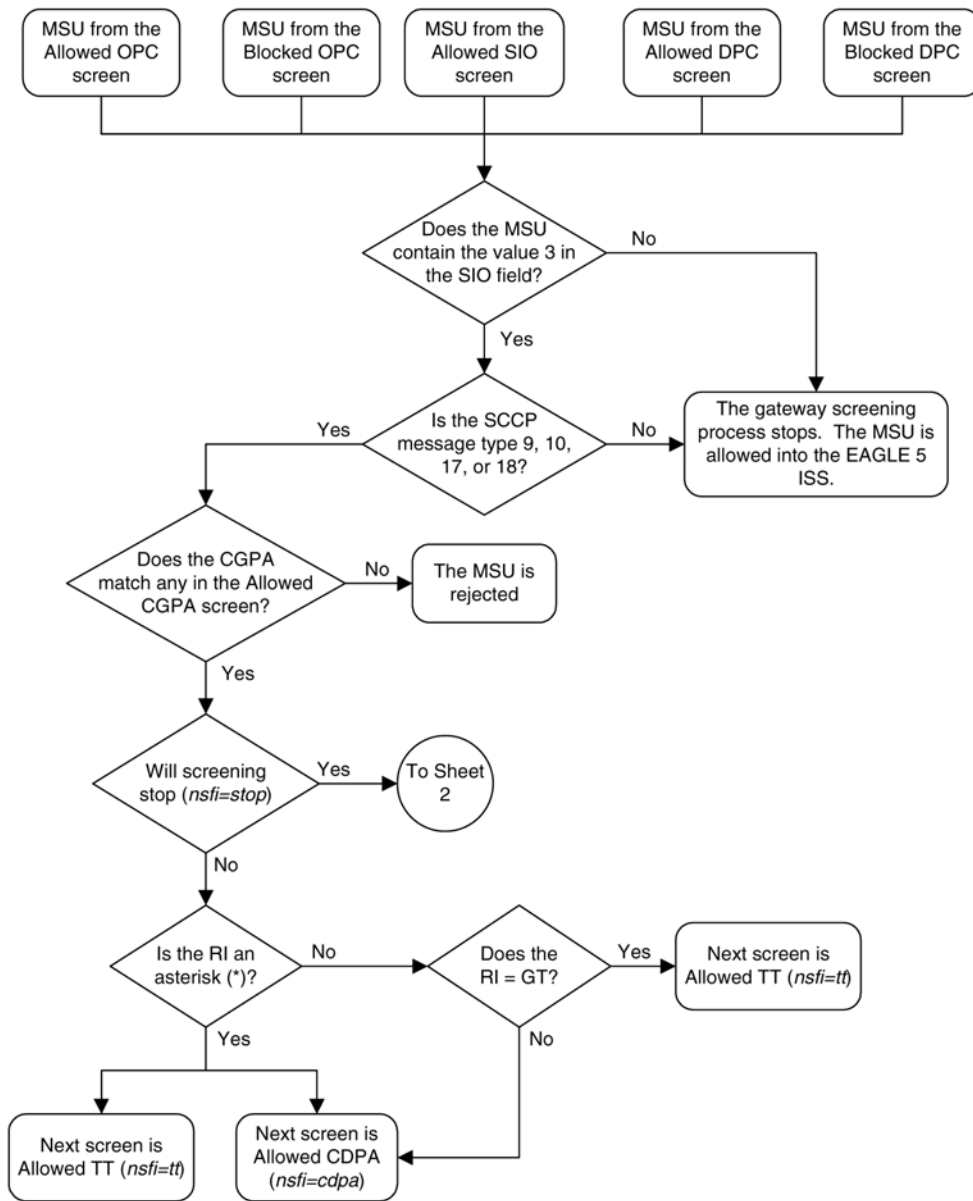

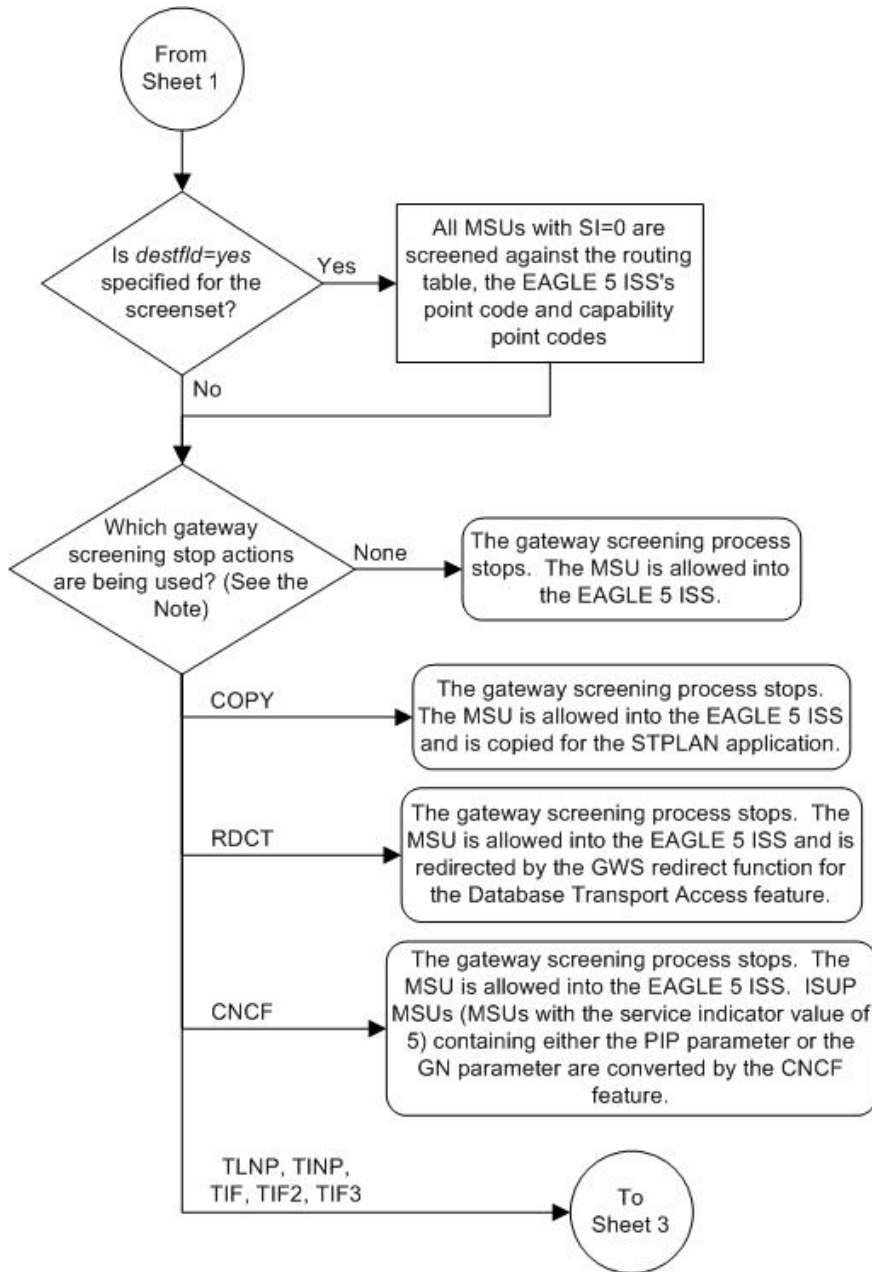

Note: Combinations of the gateway screening stop actions shown on Sheets 2 and 3 may be assigned to a gateway screening stop action set. Refer to the Configuring Gateway Screening Stop Action Sets and the Configuring TLNP Gateway Screening Stop Action Sets procedures in Chapter 2 of this manual for the combinations that can be used.

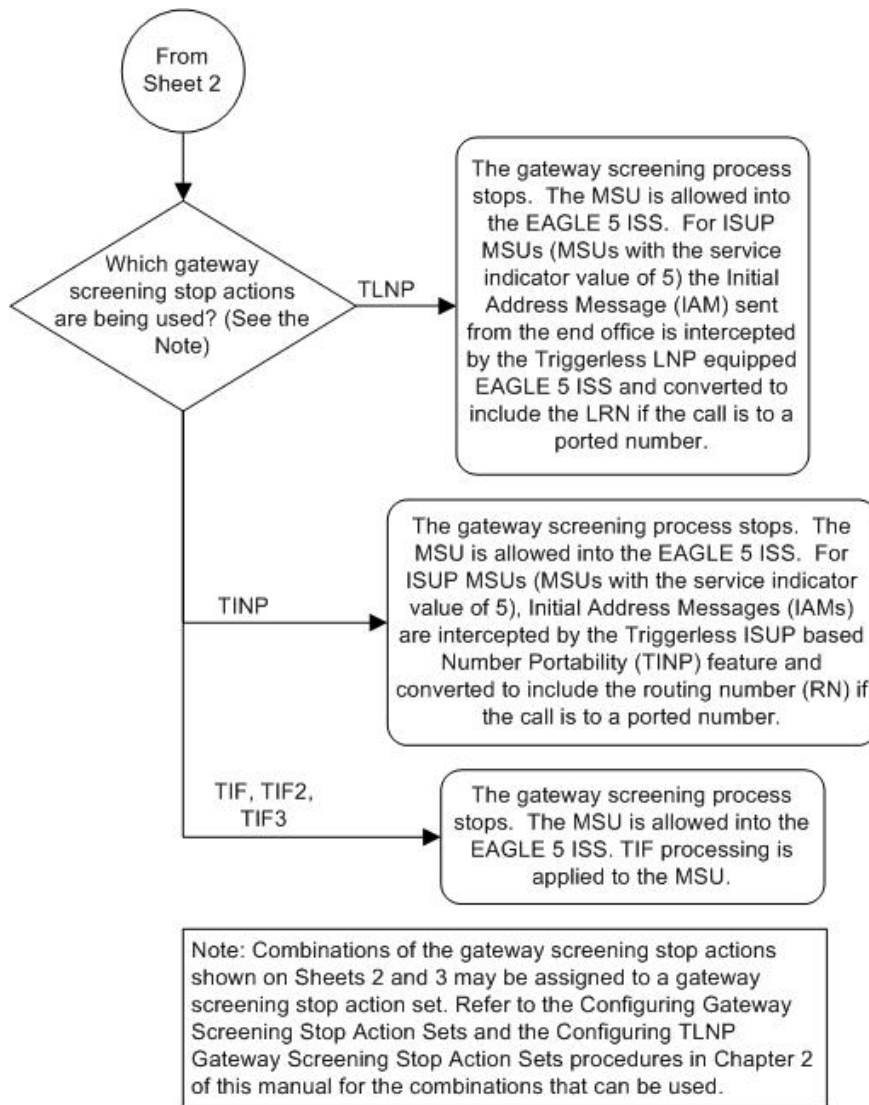


Figure 35: Allowed Calling Party Address Screening Function

ANSI MSU (ANSI Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF				
		DPC NCM NC NI	Routing Label OPC NCM NC NI	SLS xx	SCCP Message Type xxxx xxxx	CGPA Length Address Indicator Subsystem Point Code (NCM NC NI)

ITU-I MSU (ITU International Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF				
		DPC ID AREA ZONE	Routing Label OPC ID AREA ZONE	SLS xx	SCCP Message Type xxxx xxxx	CGPA Length Address Indicator Subsystem Point Code (ID AREA ZONE)

14-Bit ITU-N MSU (14-Bit ITU National Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF				
		DPC NPC	Routing Label OPC NPC	SLS xx	SCCP Message Type xxxx xxxx	CGPA Length Address Indicator Subsystem Point Code (NPC)

24-Bit ITU-N MSU (24-Bit ITU National Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF				
		DPC SP SSA MSA	Routing Label OPC SP SSA MSA	SLS xx	SCCP Message Type xxxx xxxx	CGPA Length Address Indicator Subsystem Point Code (SP SSA MSA)

Adding an Allowed Calling Party Address Screen

This procedure is used to add an allowed calling party address (CGPA) screen to the database using the `ent-scr-cgpa` command. The parameters used by the `ent-scr-cgpa` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The examples in this procedure are used to add the allowed CGPA screen data shown in [Table 32: Example Gateway Screening Allowed CGPA Configuration Table](#) on page 184 and based on the example configurations shown in [Figure 5: Gateway Screening Configuration - Example 1](#) on page 42 through [Figure 7: Gateway Screening Configuration - Example 3](#) on page 46.

Table 32: Example Gateway Screening Allowed CGPA Configuration Table

Screening Reference	ZONE	AREA	ID	SSN	RI	SCCPMT	NSFI	NSR
gw11	7	100	4	254	*	010	cdpa	gw15
Screening Reference	NI	NC	NCM	SSN	RI	SCCPMT	NSFI	NSR
gw13	007	007	007	250	gt	017	tt	gw16
gw14	006	006	006	253	dpc	009	cdpa	gw17

Note: If you using multiple-part ITU national point codes with gateway screening, see the [14-Bit ITU National Point Code Formats](#) on page 34 section.

The allowed CGPA screen can reference one of the following screens.

- Allowed TT
- Allowed CDPA

Verifying the Gateway Screening Configuration

Enter the following commands to verify that these screens are in the database.

- `rtrv-scr-tt:all=yes`
- `rtrv-scr-cdpa:all=yes`

Gateway Screening Configuration Procedures

If the desired screen is not in the database, perform one of the following procedures to add the desired screen to the database or change an existing screen in the database.

- [Adding an Allowed Translation Type Screen](#) on page 161
- [Adding an Allowed Called Party Address Screen](#) on page 128
- [Changing an Allowed Translation Type Screen](#) on page 169
- [Changing an Allowed Called Party Address Screen](#) on page 143

Specifying a Range of Values

A range of values can be specified for the point code parameters *ni*, *nc*, or *ncm*.

If a range of values is specified for any of these parameters, and the value of the other parameters match existing values for the screening reference name, the range of values for the point code parameter cannot include any values for that parameter that are currently provisioned for the screening reference name.

For example, screening reference name *scr1* contains these entries:

SR	NI	NC	NCM	SSN	RI	SCCPMT	NSFI	NSR/ACT
SCR1	240	001	010	012	DPC	009	STOP	-----
SCR1	241	010	020	*	GT	017	TT	SCR1

Another entry for screening reference *scr1* with the *ni* value of 240 and the *nc* value of 001 cannot be specified if the range of values for the *ncm* parameter includes the value 010.

The ANSI point code parameter values can be specified as a single value, a range of values, or with an asterisk (*). The asterisk specifies all possible values for the *ni*, *nc*, and *ncm* parameters. [Table 33: Valid Value Combinations for ANSI Point Code Parameters](#) on page 185 shows the valid combinations of these parameter values.

Table 33: Valid Value Combinations for ANSI Point Code Parameters

NI	NC	NCM
Single Value	Single Value	Single Value
Single Value	Single Value	Range of Values
Single Value	Single Value	Asterisk
Single Value	Range of Values	Asterisk
Single Value	Asterisk	Asterisk
Range of Values	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

A range of values can also be specified for an ITU-I or 24-bit ITU-N point code parameter using a combination of asterisks (*) and single values for the point code parameters. [Table 34: Valid Value Combinations for ITU-I Point Code Parameters](#) on page 185 shows the valid combinations of the ITU-I parameter values. [Table 35: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters](#) on page 186 shows the valid combinations of the 24-bit ITU-N parameter values.

Table 34: Valid Value Combinations for ITU-I Point Code Parameters

ZONE	AREA	ID
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

Table 35: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters

MSA	SSA	SP
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

1. Verify that the gateway screening feature is on, by entering the `rtrv-feat` command.

If the gateway screening feature is on, the `GWS` field is set to `on`.

Note: The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

If the gateway screening feature is on, shown by the entry `GWS = on` in the `rtrv-feat` command output, skip step 2, and go to step 3.

2. Turn the gateway screening feature on by entering this command.

```
chg-feat:gws=on
```

Note: Once the gateway screening feature is turned on with the `chg-feat` command, it cannot be turned off.

The gateway screening feature must be purchased before you turn this feature on with the `chg-feat` command. If you are not sure if you have purchased the gateway screening feature, contact your Tekelec Sales Representative or Account Representative.

When the `chg-feat` has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 11:43:04 GMT EAGLE5 36.0.0
CHG-FEAT: MASP A - COMPLTD
```

3. Display all allowed CGPA screens in the database using the `rtrv-scr-cgpa` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED CGPA
SR   REF  RULES
IEC  YES   2
WRD2 YES   1
WRD4 YES   9
```

If the screening reference names that you wish to add with this procedure are not shown in the `rtrv-scr-cgpa` command output, go to step 2. For this example, the screening reference names are not shown. If these screening reference names are shown in the `rtrv-scr-cgpa` command output, make sure the screening data you wish to enter is not already in the database by entering the `rtrv-scr-cgpa` command with the screening reference name. For example, enter the `rtrv-scr-cgpa:sr=iec` command. The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
```



```
SCREEN = ALLOWED CGPA
SR  NI      NC      NCM      SSN      RI  SCCPMT  NSFI  NSR/ACT
IEC 240     001     010     012     DPC 009     STOP  -----
IEC 241     010     *       *       GT   017     TT    TT1
```

If a gateway screening stop action set is to be assigned to the allowed CGPA screen being added to the database, go to step 4.

Step 4 verifies the gateway screening stop action set names in the database. The gateway screening stop action set names are assigned only if the NSFI of the screen being added in this procedure is STOP. If the NSFI of the new screen will be STOP, but a gateway screening stop action set name will not be assigned to the new screen, skip steps 4 and 5 and go to step 6. If the NSFI of the new screen is not STOP, skip step 4 and go to step 5.

4. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
ACT ACT      ACT ACT      ACT ACT      ACT ACT      ACT ACT      ACT ACT
ID  NAME     1    2    3    4    5    6    7    8    9    10
--  -
1   copy     copy
2   rdct     rdct
3   cr       copy rdct
4   cncf     cncf
5   cpcncf   copy cncf
6   cncfrd   cncf rdct
7   cpcfird  copy cncf rdct

GWS action set table is (7 of 16) 44% full
```

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to configure the required gateway screening stop action set.

Note: If the NSFI of the screen being added in this procedure is STOP, skip step 5 and go to step 6.

5. Enter the commands in the [Verifying the Gateway Screening Configuration](#) on page 184 section to verify that the screen that will be specified by the NSFI/NSR parameter combination in step 7 is in the database.

If the desired screen is not in the database, perform one of the procedures shown in the [Gateway Screening Configuration Procedures](#) on page 184 section to add the desired screen to the database or change an existing screen in the database.

Note: If the point code being added in this procedure is not an ITU-I or 14-bit ITU-N spare point code, skip step 6 and to step 7.

Note: If the point code being added in this procedure is an ITU-I or 14-bit ITU-N spare point code and the screening reference contains ITU-I or 14-bit ITU-N spare point codes, skip step 6 and go to step 7.

6. Display the status of the ITU National and International Spare Point Code Support feature by entering the `rtrv-ctrl-feat` command with the ITU National and International Spare Point Code Support feature part number.

Enter this command.

```
rtrv-ctrl-feat:partnum=893013601
```

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name          Partnum  Status Quantity
Spare Point Code Support 893013601 on      ----

The following features have been temporarily enabled:

Feature Name          Partnum  Status Quantity  Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name          Partnum
Zero entries found.
```

If the ITU National and International Spare Point Code Support feature is enabled, go to step 7.

If the ITU National and International Spare Point Code Support feature is not enabled, perform the “Activating the ITU National and International Spare Point Code Support Feature” procedure in the Database *Administration Manual - SS7* to enable the ITU National and International Spare Point Code Support feature as required. After the feature has been enabled, go to step 7.

7. Add a new allowed CGPA screen to the database using the `ent-scr-cgpa` command.

If a gateway screening stop action is to be assigned to the allowed CGPA screen being changed, enter the `ent-scr-cgpa` command with the `nsfi=stop` parameter and the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 4.



CAUTION

CAUTION: The EAGLE 5 ISS does not support redirecting MSUs for the DTA feature or intercepting ISUP IAM messages for the Calling Name Conversion Facility feature from the allowed CGPA screen. Gateway screening stop action sets containing either the RDCT (redirect) or CNCF (calling name conversion facility) stop actions should not be assigned to the allowed CGPA screen. If a gateway screening stop action set containing the RDCT or CNCF stop actions is specified with the `ent-scr-cgpa` command, unsolicited information message (UIM) 1126 is generated when the attempt is made to redirect MSUs from the allowed CGPA screen. Unsolicited information message (UIM) 1216 is generated when ISUP IAM MSUs are intercepted from the allowed CGPA screen. For more information on UIMs 1126 and 1216, go to the *Unsolicited Alarm and Information Messages Manual*.

The following list contains the values for `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `npc`, `msa`, `ssa`, `sp`, `ssn`, `ri`, and `scpmt` parameters:

- `ni` – 0 - 255 or an asterisk (*)
- `nc` – 0 - 255 or an asterisk (*)
- `ncm` – 0 - 255 or an asterisk (*)
- `zone` – 0 - 7 or an asterisk (*)
- `area` – 0 - 255 or an asterisk (*)

- id – 0 - 7 or an asterisk (*)
- npc – 1 - 16383 or an asterisk (*)
- msa – 0 - 255 or an asterisk (*)
- ssa – 0 - 255 or an asterisk (*)
- sp – 0 - 255 or an asterisk (*)
- ssn – 0 - 255 or an asterisk (*)
- ri – gt, dpc or an asterisk (*)
- sccpmt – 9, 10, 17, 18 or an asterisk (*)

Note: If either the `ri=gt` or `nsfi=tt` parameter is specified, the other parameter must be specified. If either the `ri=dpc` or `nsfi=cdpa` parameter is specified, the other parameter must be specified. If the `ri=*` parameter is specified, either the `nsfi=gt` or `nsfi=dpc` parameters can be specified.

Note: If the `sccpmt` parameter is not specified, an asterisk will be entered as the value of the `sccpmt` parameter.

A range of values can be specified for the `ni`, `nc`, and `ncm` parameters. See the [“Specifying a Range of Values”](#) on page 184 section for more information on how the asterisk and a range of values are used for the `ni`, `nc`, and `ncm` parameters.

To add a spare point code to the allowed CGPA screen, the `pcst=s` parameter must be specified. To add a non-spare point code to the allowed CGPA screen, the `pcst` parameter does not have to be specified. If the `pcst` parameter is specified for a screen containing an ITU-I or 14-bit ITU-N non-spare point code, the value must be `none`.

For this example, enter these commands.

```
ent-scr-cgpa:sr=gw11:zone=7:area=100:id=4:ssn=254:ri=*  
:sccpmt=010:nsfi=cdpa:nsr=gw15
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0  
ENT-SCR-CGPA: SCREEN SET AFFECTED - GW11 1% FULL  
ENT-SCR-CGPA: MASP A - COMPLTD
```

```
ent-scr-cgpa:sr=gw13:ni=007:nc=007:ncm=007:ssn=250:ri=gt  
:sccpmt=017:nsfi=tt:nsr=gw16
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0  
ENT-SCR-CGPA: SCREEN SET AFFECTED - GW13 1% FULL  
ENT-SCR-CGPA: MASP A - COMPLTD
```

```
ent-scr-cgpa:sr=gw14:ni=006:nc=006:ncm=006:ssn=253:ri=dpc  
:sccpmt=009:nsfi=cdpa:nsr=gw17
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0  
ENT-SCR-CGPA: SCREEN SET AFFECTED - GW14 1% FULL  
ENT-SCR-CGPA: MASP A - COMPLTD
```

8. Verify the changes using the `rtrv-scr-cgpa` command with the screening reference name used in step 7.

For this example, enter these commands.

```
rtrv-scr-cgpa:sr=gw11
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:32:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED CGPA
SR      ZONE  AREA  ID      SSN      RI      SCCPMT  NSFI  NSR/ACT
GW11    7      100   4       254     *       010    CDPA  GW15
```

```
rtrv-scr-cgpa:sr=gw13
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:33:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED CGPA
SR  NI      NC      NCM      SSN      RI      SCCPMT  NSFI  NSR/ACT
GW13 007     007     007     250     SSN    017    CDPA  GW16
```

```
rtrv-scr-cgpa:sr=gw14
```

The following is an example of the possible output.


```
rlghncxa03w 06-10-25 15:34:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED CGPA
SR  NI      NC      NCM      SSN      RI      SCCPMT  NSFI  NSR/ACT
GW14 006     006     006     253     GT     009     TT    GW17
```


9. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.


The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 36: Adding an Allowed Calling Party Address Screen

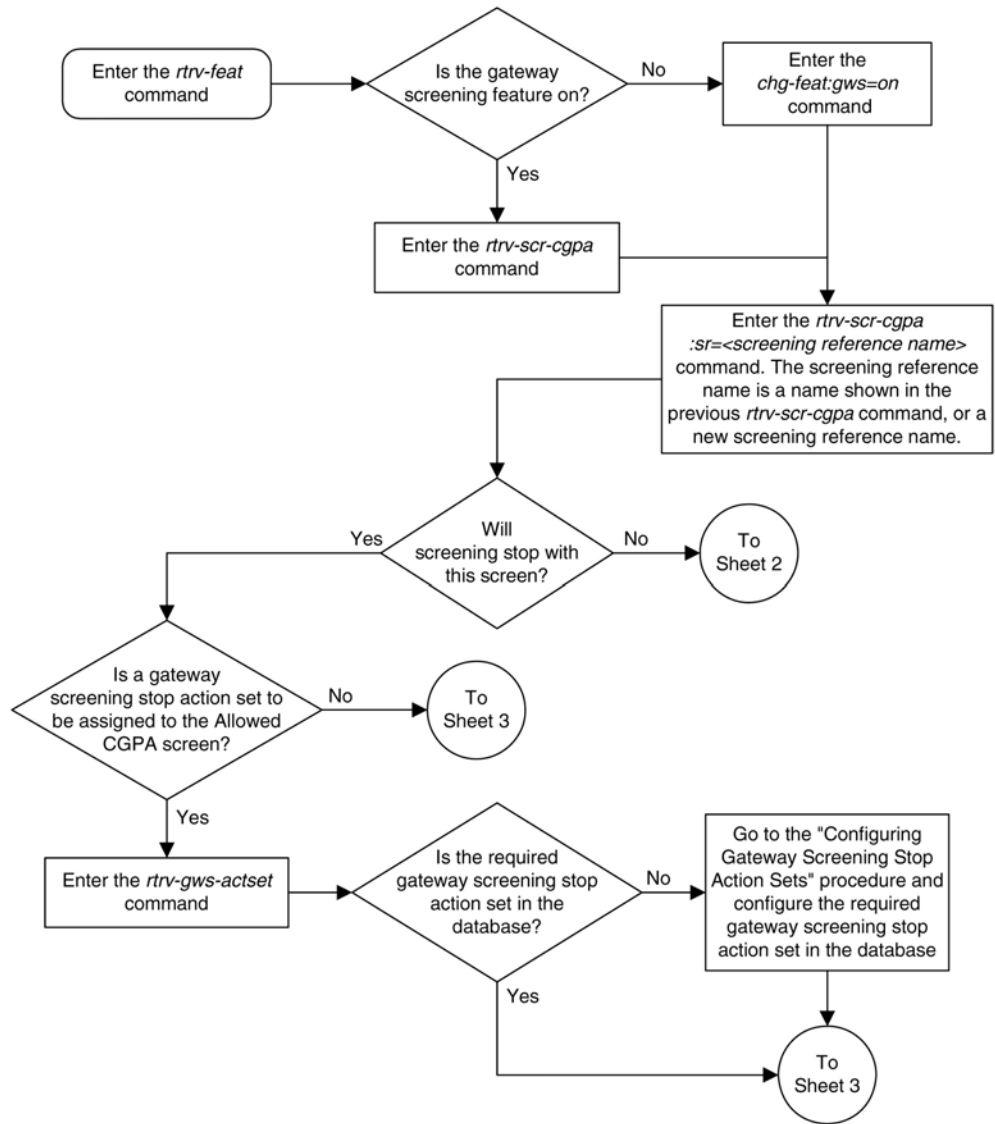

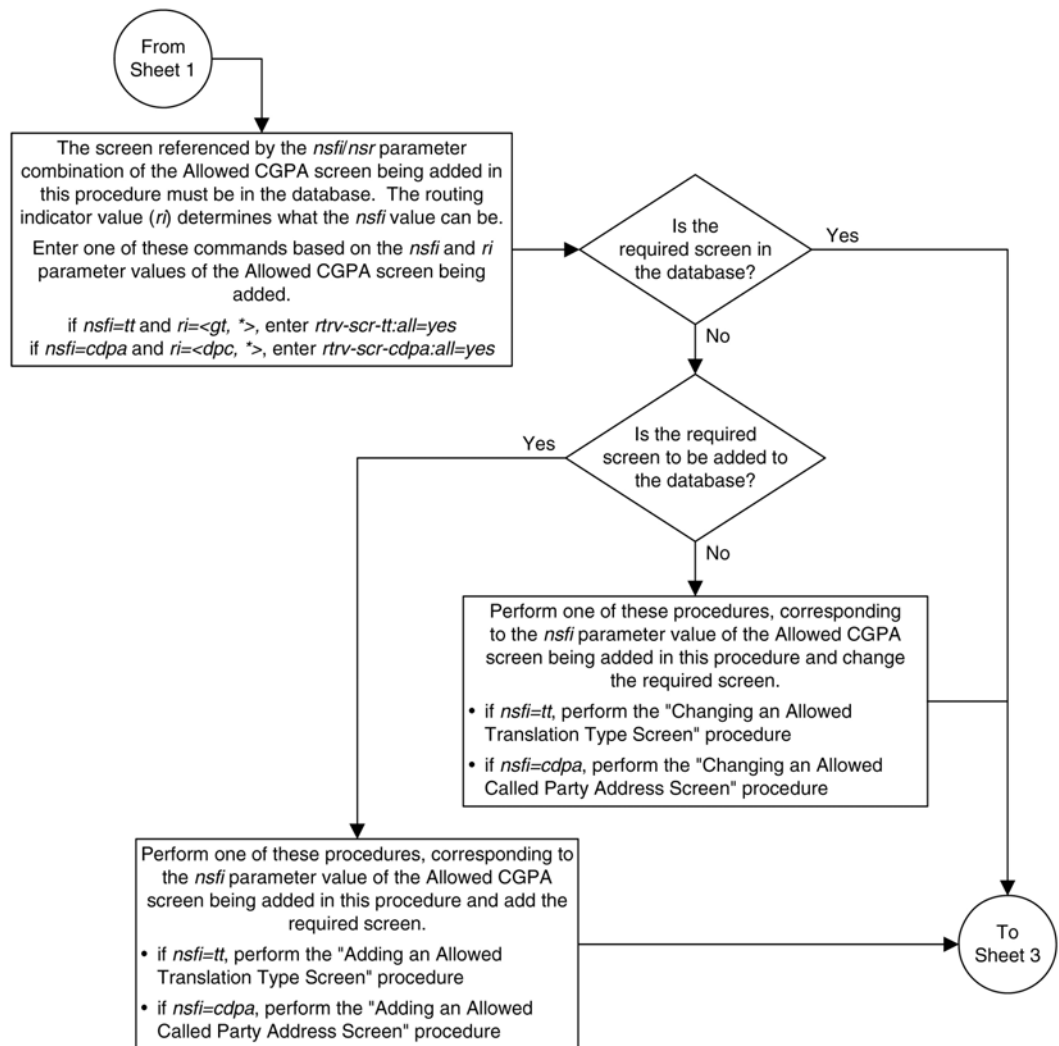

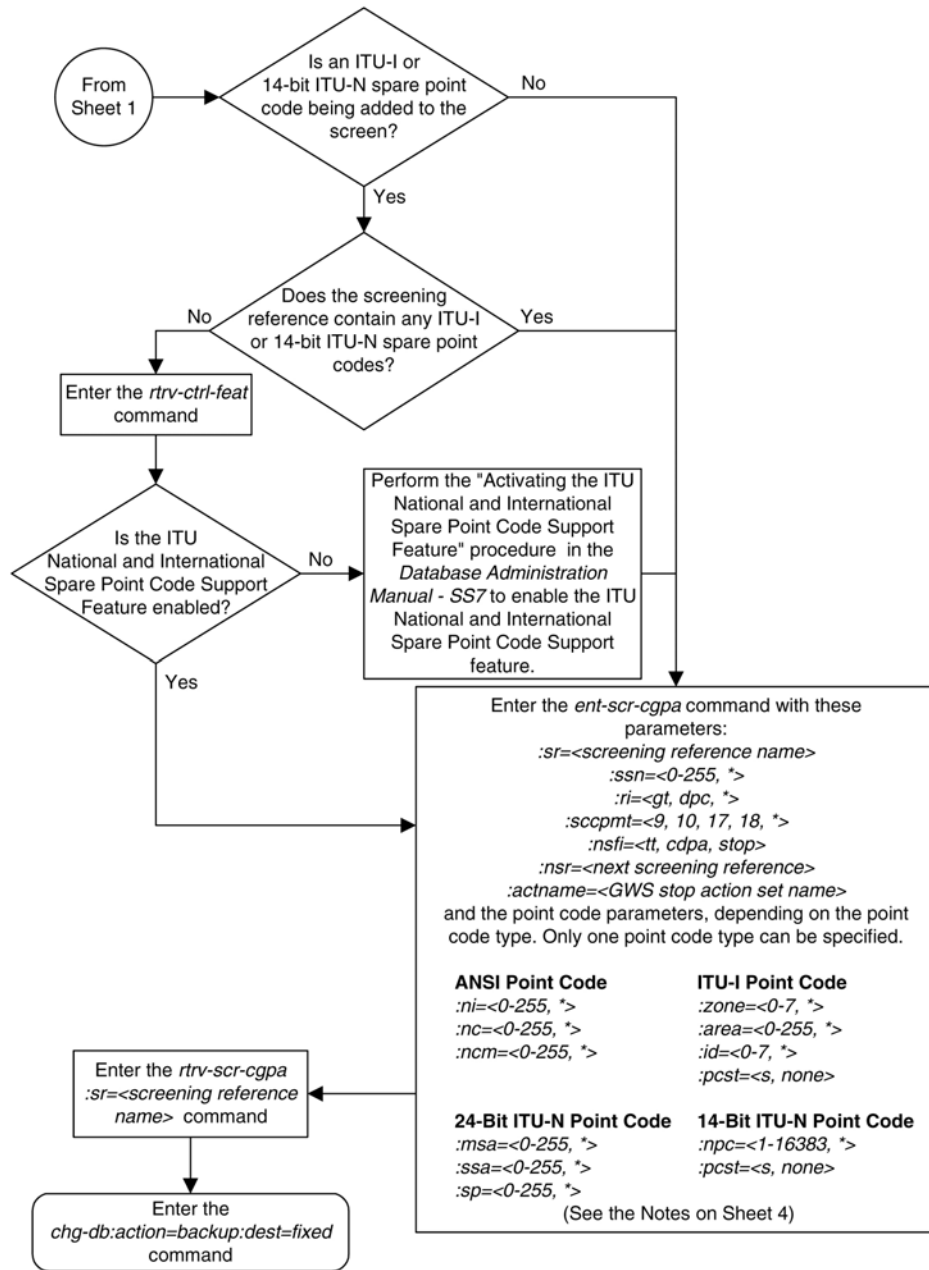

Notes:

1. A range of values can be specified for the *ni*, *nc*, or *ncm* parameters by inserting double ampersands (&&) between the parameter values defining the range. For example, to specify the range 025 to 200 for the *ni* parameter, enter 025&&200 for the *ni* parameter value.
2. The asterisk (*) specifies the entire range of values for that parameter.
For more information about specifying a range of values and about using the asterisk, see the "Gateway Screening Attributes" section in Chapter 2 and the "Specifying a Range of Values" section in this procedure.
3. If the *sccpmt* parameter is not specified, an asterisk will be entered as the value for the *sccpmt* parameter.
4. To specify the *nsfi=tt* parameter, the *ri* parameter value must be *gt* or ***.
5. To specify the *nsfi=cdpa* parameter, the *ri* parameter value must be *dpc* or ***.
6. The *nsr* parameter can be specified only, and must be specified, if the *nsfi=tt* or *nsfi=cdpa* parameters are specified.
7. The *actname* parameter can be specified only if the *nsfi=stop* parameter is specified. The *actname* parameter is optional. If the *actname* parameter is specified, the *actname* parameter value is one of the gateway screening stop action set names shown in the *rtrv-gws-actset* output on Sheet 1.
8. To add a non-spare point code, the *pcst* parameter does not have to be specified. If the *pcst* parameter is specified for a screen containing an ITU-I or 14-bit ITU-N non-spare point code, the value must be *none*.
9. To add a spare point code, the *pcst=s* parameter must be specified.

Removing an Allowed Calling Party Address Screen

This procedure is used to remove an allowed calling party address (CGPA) screen from the database using the `dlt-scr-cgpa` command. The parameters used by the `dlt-scr-cgpa` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure removes the allowed CGPA screen `gw14` from the database.

Note: If you using multiple-part ITU national point codes with gateway screening, see the [14-Bit ITU National Point Code Formats](#) on page 34 section.

The allowed CGPA screen can be referenced by one of the following screens.

- Allowed OPC
- Blocked OPC
- Allowed SIO
- Allowed DPC
- Blocked DPC

Verifying the Gateway Screening Configuration

Enter the following commands to verify that none of these screens reference the allowed CGPA screen being removed from the database.

- `rtrv-scr-opc:nsfi=cgpa`
- `rtrv-scr-blkopc:nsfi=cgpa`
- `rtrv-scr-sio:nsfi=cgpa`

- `rtrv-scr-dpc:nsfi=cgpa`
- `rtrv-scr-blkdpc:nsfi=cgpa`

Gateway Screening Configuration Procedures

To change the NSFI of any of these screens, perform one of these procedures.

- [Changing a Blocked DPC Screen](#) on page 258
- [Changing an Allowed DPC Screen](#) on page 292
- [Changing an Allowed SIO Screen](#) on page 323
- [Changing a Blocked OPC Screen](#) on page 353
- [Changing an Allowed OPC Screen](#) on page 386

1. Display the allowed CGPA screens in the database using the `rtrv-scr-cgpa` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED CGPA
SR      REF  RULES
GW11   YES   1
GW13   YES   1
GW14   YES   1
IEC    YES   2
WRD2   YES   1
WRD4   YES   9
```

From the `rtrv-scr-cgpa` output, display the allowed CGPA screen you wish to remove using the `rtrv-scr-cgpa` command with the screening reference name. For this example, enter the `rtrv-scr-cgpa:sr=gw14` command. The following is an example of the possible output.

```
rtrv-scr-cgpa:sr=gw14
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED CGPA
SR  NI      NC      NCM      SSN      RI      SCCPMT  NSFI  NSR/ACT
GW14 003     003     003     253     GT     009     TT    GW17
```

2. Enter the commands in the [Verifying the Gateway Screening Configuration](#) on page 194 section to verify that the screen being removed is not referenced by other screens in the database.

If the screen being removed is referenced by other screens, perform the procedures shown in the [Gateway Screening Configuration Procedures](#) on page 195 section to change the NSFI of those screens to reference other screens or change the NSFI of these screens to STOP.

3. Remove the allowed CGPA screen from the database using the `dlt-scr-cgpa` command.

The current values for the `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `npc`, `msa`, `ssa`, `sp`, `ri`, `ssn`, or `sccpmt` parameters must be entered exactly as shown in the `rtrv-scr-cgpa` output.

To remove an entry containing either an ITU-I or a 14-bit ITU-N spare point code, the `pcst=s` parameter must be specified with the `dlt-scr-cgpa` command.

To remove an entry containing either an ITU-I or a 14-bit ITU-N non-spare point code, the `pcst` parameter does not have to be specified with the `dlt-scr-cgpa` command. If the `pcst` parameter is specified, the value must be none.

For this example, enter this command.

```
dlt-scr-cgpa:sr=gw14:ni=003:nc=003:ncm=003:ssn=253:sccpmt=009
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0  
DLT-SCR-CGPA: SCREEN SET AFFECTED - GW14 0% FULL  
DLT-SCR-CGPA: MASP A - COMPLTD
```

4. Verify the changes using the `rtrv-scr-cgpa` command with the screening reference name used in step 3.

For this example, enter this command.

```
rtrv-scr-cgpa:sr=gw14
```

The following is an example of the possible output.

```
E2573 Cmd Rej: SR or NSR does not reference an existing SR
```


This message shows that the specified screening reference name is not in the database and the action of the `dlt-scr-cgpa` command in step 3 was successful. If the specified screening reference name contained more than one entry when the `dlt-scr-cgpa` command was executed in step 3, the `rtrv-scr-cgpa:sr=` command output would show the remaining entries in the screening reference instead of error message E2573.


5. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.  
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.  
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.  
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 37: Removing an Allowed Calling Party Address Screen

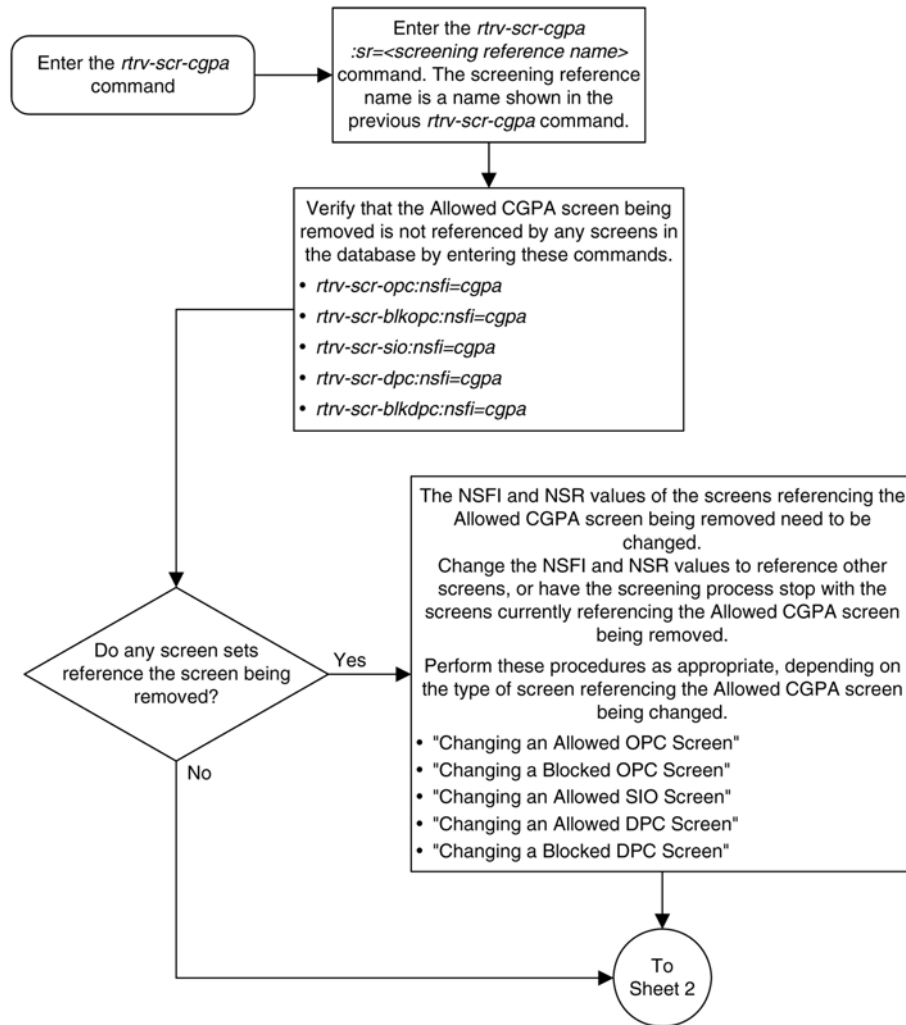

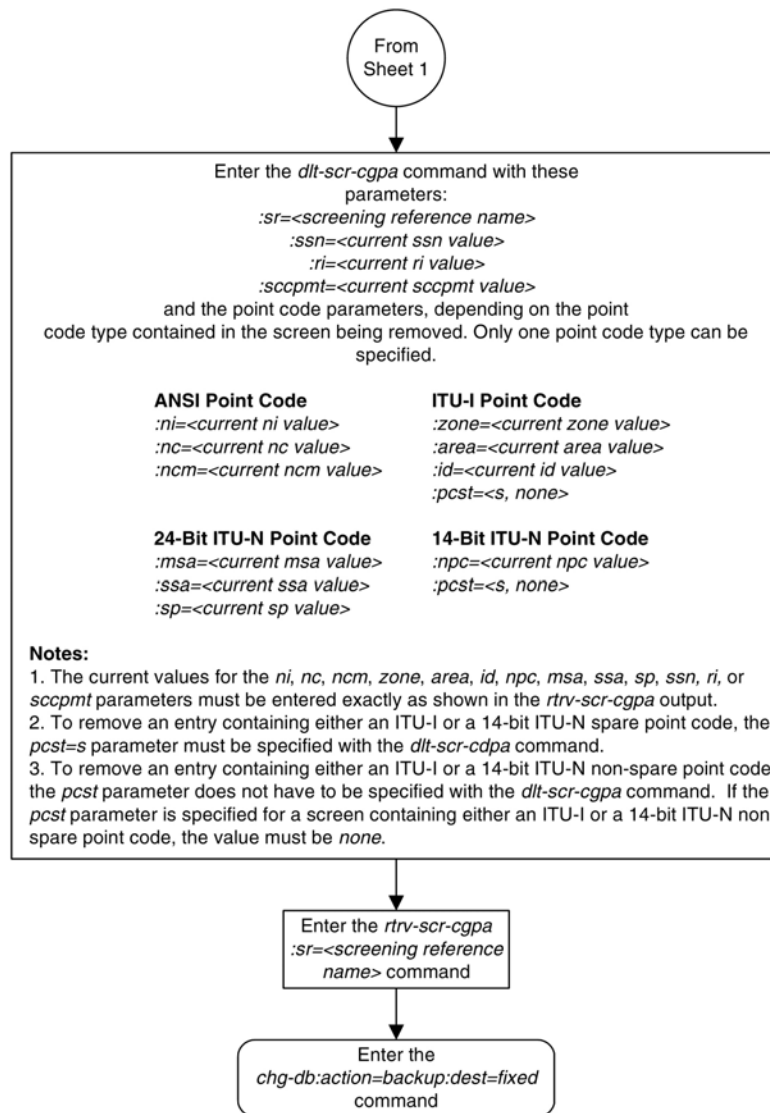

Changing an Allowed Calling Party Address Screen

This procedure is used to change the attributes of an allowed calling party address (CGPA) screen in the database using the *chg-scr-cgpa* command. The parameters used by the *chg-scr-cgpa* command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure is used to change the point code 003-003-003 for the allowed CGPA screen *gw14* to 230-230-230 and change the subsystem number from 253 to 150.

Note: If you using multiple-part ITU national point codes with gateway screening, see the [14-Bit ITU National Point Code Formats](#) on page 34 section.

The allowed CGPA screen can reference one of the following screens.

- Allowed TT
- Allowed CDPA

Verifying the Gateway Screening Configuration

Enter the following commands to verify that these screens are in the database.

- `rtrv-scr-tt:all=yes`
- `rtrv-scr-cdpa:all=yes`

Gateway Screening Configuration Procedures

If the desired screen is not in the database, perform one of these procedures to add the desired screen to the database or change an existing screen in the database.

- [Adding an Allowed Translation Type Screen](#) on page 161
- [Adding an Allowed Called Party Address Screen](#) on page 128
- [Changing an Allowed Translation Type Screen](#) on page 169
- [Changing an Allowed Called Party Address Screen](#) on page 143

Specifying a Range of Values

A range of values can be specified for the point code parameters `ni`, `nc`, or `ncm`.

If a range of values is specified for any of these parameters, and the value of the other parameters match existing values for the screening reference name, the range of values for the point code parameter cannot include any values for that parameter that are currently provisioned for the screening reference name.

For example, screening reference name `scr1` contains these entries:

SR	NI	NC	NCM	SSN	RI	SCCPMT	NSFI	NSR/ACT
SCR1	240	001	010	012	DPC	009	STOP	-----
SCR1	241	010	020	*	GT	017	TT	SCR1

Another entry for screening reference `scr1` with the `ni` value of 240 and the `nc` value of 001 cannot be specified if the range of values for the `ncm` parameter includes the value 010.

The ANSI point code parameter values can be specified as a single value, a range of values, or with an asterisk (*). The asterisk specifies all possible values for the `ni`, `nc`, and `ncm` parameters. [Table 36: Valid Value Combinations for ANSI Point Code Parameters](#) on page 199 shows the valid combinations of these parameter values.

Table 36: Valid Value Combinations for ANSI Point Code Parameters

NI	NC	NCM
Single Value	Single Value	Single Value
Single Value	Single Value	Range of Values
Single Value	Single Value	Asterisk

NI	NC	NCM
Single Value	Range of Values	Asterisk
Single Value	Asterisk	Asterisk
Range of Values	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

A range of values can also be specified for an ITU-I or 24-bit ITU-N point code parameter using a combination of asterisks (*) and single values for the point code parameters. [Table 37: Valid Value Combinations for ITU-I Point Code Parameters](#) on page 200 shows the valid combinations of the ITU-I parameter values. [Table 38: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters](#) on page 200 shows the valid combinations of the 24-bit ITU-N parameter values.

Table 37: Valid Value Combinations for ITU-I Point Code Parameters

ZONE	AREA	ID
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

Table 38: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters

MSA	SSA	SP
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

1. Display the allowed CGPA screens in the database using the `rtrv-scr-cgpa` command. The following is an example of the possible output.

```
r1ghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
```

```
SCREEN = ALLOWED CGPA
SR    REF  RULES
GW11  YES   1
GW13  YES   1
GW14  YES   1
IEC   YES   2
WRD2  YES   1
WRD4  YES   9
```

From the `rtrv-scr-cgpa` output, display the allowed CGPA screen you wish to change using the `rtrv-scr-cgpa` command with the screening reference name. For this example, enter this command.

```
rtrv-scr-cgpa:sr=gw14
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED CGPA
SR    NI      NC      NCM      SSN      RI      SCCPMT  NSFI      NSR/ACT
GW14  003      003      003      253      GT      009      TT        GW17
```

If a gateway screening stop action set is to be assigned to the allowed CGPA screen being added to the database, go to step 2.

Step 2 verifies the gateway screening stop action set names in the database. The gateway screening stop action set names are assigned only if the NSFI of the screen being changed in this procedure is STOP. If the NSFI of the screen will be changed to STOP, but a gateway screening stop action set name will not be assigned to the screen, skip steps 2 and 3 and go to step 4. If the NSFI of the screen will not be STOP, skip step 2 and go to step 3.

2. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
ACT  ACT    ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME    1    2    3    4    5    6    7    8    9    10
---  ---
1    copy    copy
2    rdct    rdct
3    cr      copy  rdct
4    cncf    cncf
5    cpncf   copy  cncf
6    cncfrd  cncf  rdct
7    cpcfrrd copy  cncf  rdct

GWS action set table is (7 of 16) 44% full
```

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to configure the required gateway screening stop action set.

Note: If the NSFI of the screen being changed in this procedure will be STOP, or if the NSFI of the screen is not being changed, skip step 3 and go to step 4.

3. Enter the commands in the [Verifying the Gateway Screening Configuration](#) on page 199 section to verify that the screen that will be specified by the NSFI/NSR parameter combination in step 5 is in the database.

If the desired screen is not in the database, perform one of the procedures shown in the [Gateway Screening Configuration Procedures](#) on page 199 section to add the desired screen to the database or change an existing screen in the database.

Note: If any of these conditions apply to this procedure, skip this step and go to step 5:

- The point code in the screen is not being changed.
- The screen being changed contains either an ANSI or 24-bit ITU-N point code.
- The ITU-I or 14-bit ITU-N non-spare point code in the screen is not being changed to an ITU-I or 14-bit ITU-N spare point code.
- The point code in the screen is an ITU-I or 14-bit ITU-N spare point code or the screening reference contains other screens with ITU-I or 14-bit ITU-N spare point codes.

4. Display the status of the ITU National and International Spare Point Code Support feature by entering the `rtrv-ctrl-feat` command with the ITU National and International Spare Point Code Support feature part number.

Enter this command.

```
rtrv-ctrl-feat:partnum=893013601
```

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name                Partnum  Status  Quantity
Spare Point Code Support    893013601 on      ----

The following features have been temporarily enabled:

Feature Name                Partnum  Status  Quantity  Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name                Partnum
Zero entries found.
```

If the ITU National and International Spare Point Code Support feature is enabled, go to step 5.

If the ITU National and International Spare Point Code Support feature is not enabled, perform the “Activating the ITU National and International Spare Point Code Support Feature” procedure in the Database *Administration Manual - SS7* to enable the ITU National and International Spare Point Code Support feature as required. After the feature has been enabled, go to step 5.

5. Change the attributes of an allowed CGPA screen using the `chg-scr-cgpa` command.

If a gateway screening stop action is to be assigned to the allowed CGPA screen being changed, enter the `chg-scr-cgpa` command with the `nsfi=stop` parameter and the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 2.



CAUTION

CAUTION: The EAGLE 5 ISS does not support redirecting MSUs for the DTA feature or intercepting ISUP IAM messages for the Calling Name Conversion Facility feature from the allowed CGPA screen. Gateway screening stop action sets containing either the RDCT (redirect) or CNCF (calling name conversion facility)

stop actions should not be assigned to the allowed CGPA screen. If a gateway screening stop action set containing the RDCT or CNCF stop actions is specified with the `chg-scr-cgpa` command, unsolicited information message (UIM) 1126 is generated when the attempt is made to redirect MSUs from the allowed CGPA screen. Unsolicited information message (UIM) 1216 is generated when ISUP IAM MSUs are intercepted from the allowed CGPA screen. For more information on UIMs 1126 and 1216, go to the *Unsolicited Alarm and Information Messages Manual*.

The current values for the `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `npc`, `msa`, `ssa`, `sp`, `ssn`, `ri`, and `sccpmt` parameters must be entered exactly as shown in the `rtrv-scr-cgpa` output in step 1.

The following list contains the values for `nni`, `nnc`, `nncm`, `nzone`, `narea`, `nid`, `nnpc`, `nssn`, `nmsa`, `nssa`, `nsp`, `nri`, and `nsccpmt` parameters:

- `nni` – 0 - 255 or an asterisk (*)
- `nnc` – 0 - 255 or an asterisk (*)
- `nncm` – 0 - 255 or an asterisk (*)
- `nzone` – 0 - 7 or an asterisk (*)
- `narea` – 0 - 255 or an asterisk (*)
- `nid` – 0 - 7 or an asterisk (*)
- `nnpc` – 1 - 16383 or an asterisk (*)
- `nmsa` – 0 - 255 or an asterisk (*)
- `nssa` – 0 - 255 or an asterisk (*)
- `nsp` – 0 - 255 or an asterisk (*)
- `nssn` – 0 - 255 or an asterisk (*)
- `nri` – `gt`, `dpc` or an asterisk (*)
- `nsccpmt` – 9, 10, 17, 18 or an asterisk (*)

Note: The `nri`, `nsfi`, and `nsr` parameters can be specified only as shown in [Table 39: CGPA Parameter Combinations](#) on page 203.

Table 39: CGPA Parameter Combinations

New or Current RI Value	NSFI	NSR
GT	TT, STOP	Must be specified if NSFI=TT
DPC	CDPA, STOP	Must be specified if NSFI=CDPA
*	TT, CDPA, STOP	Must be specified if NSFI=TT or NSFI=CDPA

A range of values can be specified for the `nni`, `nnc`, and `nncm` parameters. See the *“Specifying a Range of Values”* on page 199 section for more information on how the asterisk and a range of values are used for the `nni`, `nnc`, and `nncm` parameters.

To change an ITU-I or 14-bit ITU-N spare point code to a non-spare point code, both the `pcst=s` and `npcst=none` parameters must be specified with the `chg-scr-cgpa` command.

To change an ITU-I or 14-bit ITU-N non-spare point code to a spare point code, the `npcst=s` parameter must be specified with the `chg-scr-cgpa` command. The `pcst` parameter does not have to be specified.

If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N spare point code, the `pcst=s` parameter must be specified with the `chg-scr-cgpa` command.

If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N non-spare point code, the `pcst` parameter does not have to be specified with the `chg-scr-cgpa` command. If the `pcst` parameter is specified for a screen containing either an ITU-I or 14-bit ITU-N non-spare point code, the `pcst` parameter value must be `none`.

For this example, enter this command.

```
chg-scr-cgpa:sr=gw14:ni=003:nc=003:ncm=003:ssn=253:sccpmt=009
:nni=230:nnc=230:nncm=230:nssn=150
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
CHG-SCR-CGPA: SCREEN SET AFFECTED - GW14 1% FULL
CHG-SCR-CGPA: MASP A - COMPLTD
```

6. Verify the changes using the `rtrv-scr-cgpa` command with the screening reference name used in step 5.

For this example, enter this command.

```
rtrv-scr-cgpa:sr=gw14
```

The following is an example of the possible output.


```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED CGPA
SR      NI      NC      NCM      SSN      RI      SCCPMT  NSFI     NSR/ACT
GW14   230      230      230      150      GT      009     TT       GW17
```


7. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.


The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 38: Changing an Allowed Calling Party Address Screen

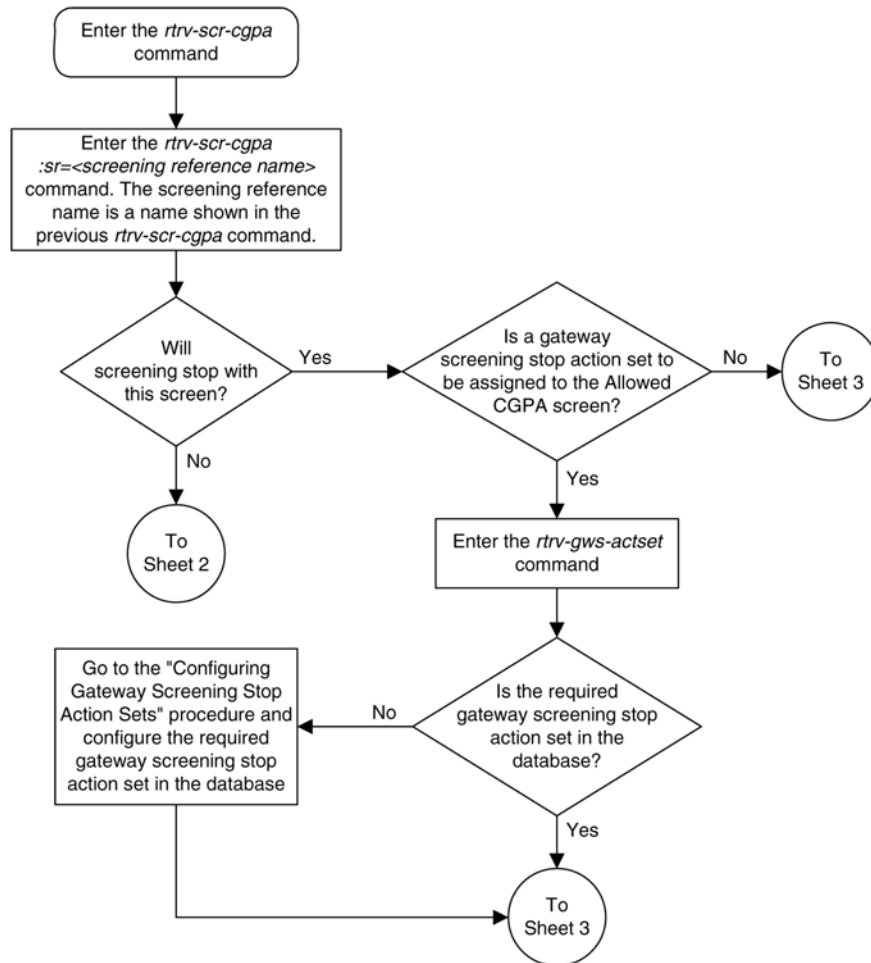

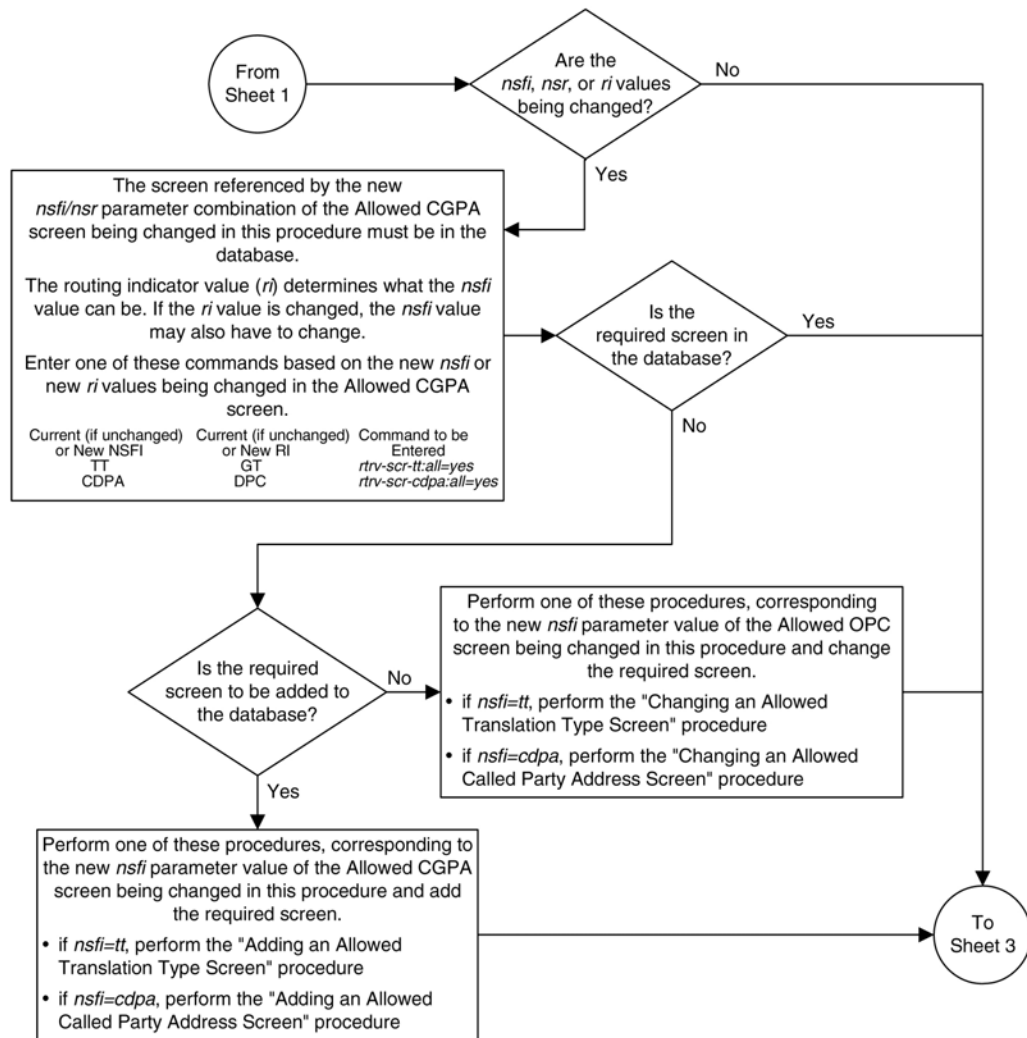

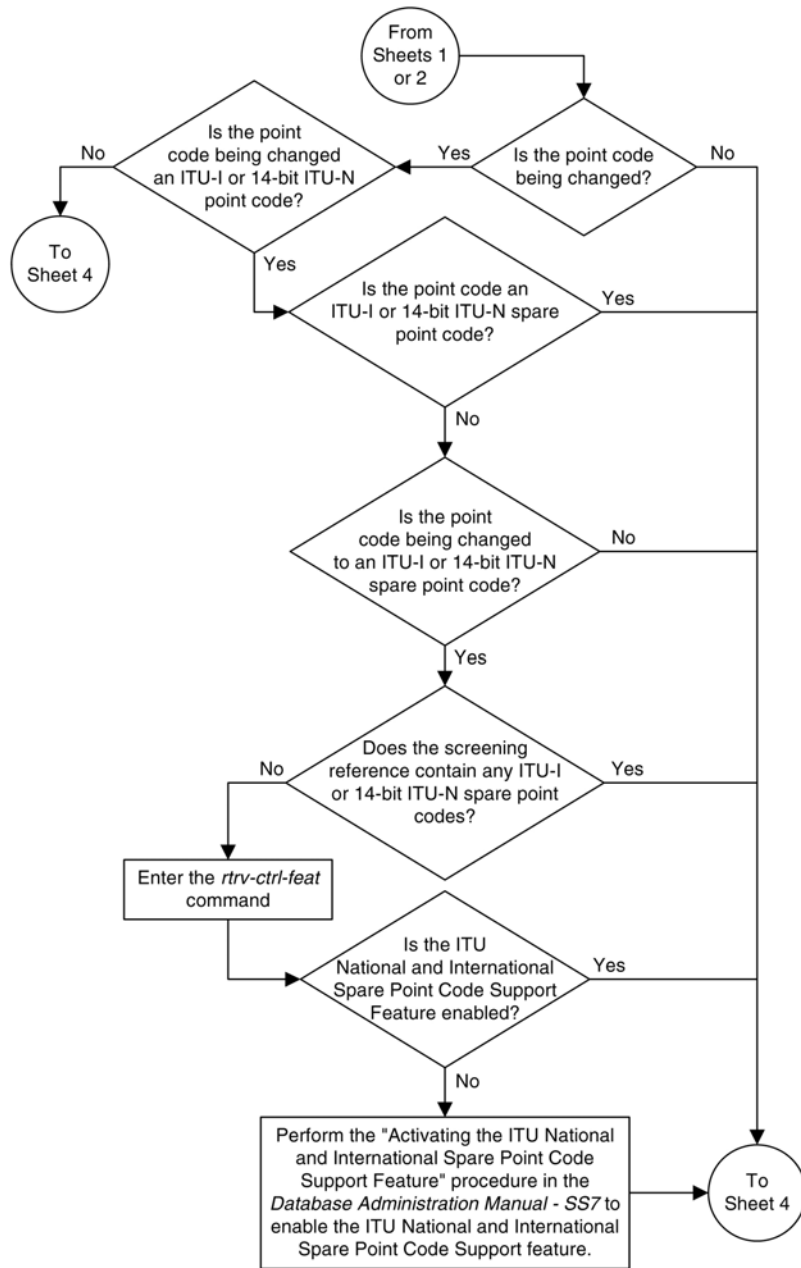



Enter the *chg-scr-cgpa* command with these mandatory parameters:

```

:sr=<screening reference name>
:ssn=<current ssn value>
:ri=<current ri value>
:scpmt=<current scpmt value>

```

and the point code parameters, depending on the point code type contained in the screen being changed. Only one point code type can be specified.

ANSI Point Code	ITU-I Point Code	14-Bit ITU-N Point Code	24-Bit ITU-N Point Code
:ni=<current ni value>	:zone=<current zone value>	:npc=<current npc value>	:msa=<current msa value>
:nc=<current nc value>	:area=<current area value>	:pcst=<s, none>	:ssa=<current ssa value>
:ncm=<current ncm value>	:id=<current id value>		:sp=<current sp value>
	:pcst=<s, none>		

At least one of these optional parameters must be specified with the *chg-scr-cgpa* command.

```

:nssn=<0-255, *>
:nri=<gt, dpc, *>
:nscpmt=<9, 10, 17, 18>
:nsfi=<tt, cdpa, stop>
:nsr=<next screening reference>
:actname=<GWS stop action set name>

```

If the new point code code parameters are specified, they must be of the same type as the current point code values specified in the *chg-scr-cgpa* command.

ANSI Point Code	ITU-I Point Code	14-Bit ITU-N Point Code	24-Bit ITU-N Point Code
:nni=<0-255, *>	:nzone=<0-7, *>	:nnpc=<1-16383, *>	:nmsa=<0-255, *>
:nnc=<0-255, *>	:narea=<0-255, *>	:npcst=<s, none>	:nssa=<0-255, *>
:nncm=<0-255, *>	:nid=<0-7, *>		:nsp=<0-255, *>
	:npcst=<s, none>		

(See the Notes on Sheet 5)

Enter the *rtv-scr-cgpa*
:sr=<screening reference name> command

Enter the
chg-db:action=backup:dest=fixed
command

Notes:

1. A range of values can be specified for the *nni*, *nnc*, or *nncm* parameters by inserting double ampersands (&&) between the parameter values defining the range. For example, to specify the range 025 to 200 for the *nni* parameter, enter 025&&200 for the *nni* parameter value.
2. The asterisk (*) specifies the entire range of values for that parameter.
For more information about specifying a range of values and about using the asterisk, see the "Gateway Screening Attributes" section in Chapter 2 and the "Specifying a Range of Values" section in this procedure.
3. If either the *nsfi=<tt or cdpa>* or *nsr* parameters are specified, the other parameter must be specified.
4. If the *nsfi=stop* parameter is specified, or if the current *nsfi* value is stop and is not being changed, the *nsr* parameter cannot be specified.
5. The *actname* parameter can be specified only when the *nsfi* value is stop (either the current *nsfi* value is stop and not being changed, or if the *nsfi* value is being changed to stop). The *actname* parameter is optional. If the *actname* parameter is specified, the *actname* parameter value is one of the gateway screening stop action set names shown in the *rtrv-gws-actset* output on Sheet 1.
6. The *nri=gt* parameter can be specified only if the *nsfi* value is TT. If the *nsfi=tt* parameter is specified, the *ri* value must be GT or *.
7. The *nri=dpc* parameter can be specified only if the *nsfi* value is CDPA. If the *nsfi=cdpa* parameter is specified, the *ri* value must be DPC or *.
8. The current values for the *ni*, *nc*, *nncm*, *zone*, *area*, *id*, *npc*, *ssn*, *ri*, and *sccpmt* parameters must be entered exactly as shown in the *rtrv-scr-cgpa* output.
9. To change an ITU-I or 14-bit ITU-N spare point code to a non-spare point code, both the *pcst=s* and *npcst=none* parameters must be specified with the *chg-scr-cgpa* command.
10. To change an ITU-I or 14-bit ITU-N non-spare point code to a spare point code, the *npcst=s* parameter must be specified with the *chg-scr-cgpa* command. The *pcst* parameter does not have to be specified.
11. If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N spare point code, the *pcst=s* parameter must be specified with the *chg-scr-cgpa* command.
12. If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N non-spare point code, the *pcst* parameter does not have to be specified with the *chg-scr-cgpa* command. If the *pcst* parameter is specified for a screen containing either an ITU-I or 14-bit ITU-N non-spare point code, the *pcst* parameter value must be none.

Allowed Affected Destination Field (DESTFLD) Screen Configuration

Topics:

- [Introduction Page 212](#)
- [Adding an Allowed Affected Destination Field Screen Page 216](#)
- [Removing an Allowed Affected Destination Field Screen Page 224](#)
- [Changing an Allowed Affected Destination Field Screen Page 227](#)

Chapter 7, Allowed Affected Destination Field (DESTFLD) Screen Configuration, contains the procedures necessary to configure allowed affected destination field screens.

Introduction

The Affected Destination Field screen identifies the point code in the affected destination field, the concerned signaling point code of incoming MTP network management messages from another network that are allowed into the EAGLE 5 ISS. The gray shaded areas in [Figure 40: Allowed Affected Destination Field Screening Function](#) on page 215 shows the fields of the SS7 message that are checked by the Affected Destination Field screening function.

Network management messages contain the entry 0 in the service indicator field of the SIO. This is the last screen in the MTP portion of the gateway screening process. This `nsf i` for this screen has only one value, `stop`.

Note: Screening of the affected destination field can also be performed without configuring an allowed affected destination field screen by specifying the `destfld=yes` parameter when configuring a screen set. For more information on the screen set `destfld=yes` parameter, see the section [Automatic Destination Field Screening](#) on page 400.

Gateway Screening Actions

The Gateway Screening process stops with this screen. The `nsf i` parameter value can only be `stop`.

If a match is not found, the message is discarded.

If a match is found, the message is processed. If a gateway screening stop action set is specified with the screen, shown by the `actname` parameter value, the message is processed according to the gateway screening stop actions that are assigned to the gateway screening stop action set.

- If the `copy` gateway screening stop action is specified, the message is processed and a copy of the message is sent by the STPLAN feature to an external application.
- If the `rdct` (redirect) gateway screening stop action is specified, the message is diverted from the original destination and sent to another destination with the Database Transport Access feature, specified by global title translation, for further processing.
- If the `cncf` gateway screening stop action is specified, the PIP parameter in the incoming ISUP IAM message is converted to the GN parameter. The GN parameter in the incoming ISUP IAM message is converted to the PIP parameter. The message is then sent to the node specified by the DPC in the routing label in the message. For more information on the Calling Name Conversion Facility feature, see [Calling Name Conversion Facility \(CNCF\) Configuration](#) on page 417.
- If the `tlnp` gateway screening stop action is specified, ISUP IAMs that pass gateway screening are processed either by the ISUP NP with EPAP feature (if the ISUP NP with EPAP feature is enabled and turned on) or by the Triggerless LNP feature (if the Triggerless LNP feature is turned on). The ISUP NP with EPAP feature is discussed in more detail in the *Feature Manual - G-Port*. The Triggerless LNP feature is discussed in more detail in the *LNP Feature Activation Guide*.
- If the `tinp` gateway screening stop action is specified, ISUP IAMs that pass gateway screening are intercepted by the Triggerless ISUP based Number Portability (TINP) feature and converted to include the routing number (RN) if the call is to a ported number. The TINP feature is discussed in more detail in the *Feature Manual - G-Port*.


- If the `tif`, `tif2`, or `tif3` gateway screening stop actions are specified, TIF processing is applied to the message.


Allowed Affected Destination Screening Actions

These network management messages are screened by the Allowed Affected Destination Field: TFP, TFA, TFR, TFC, UPU, and SRST (RSP, RSR). Any MSU that is not one of these network management message types, or does not contain a service indicator of 0 in the SIO field and reaches this screen in the gateway screening process automatically passes gateway screening and is allowed into the EAGLE 5 ISS.

Figure 39: Allowed Affected Destination Screening Actions on page 213 shows the screening actions of the allowed affected destination field screen.

Figure 39: Allowed Affected Destination Screening Actions

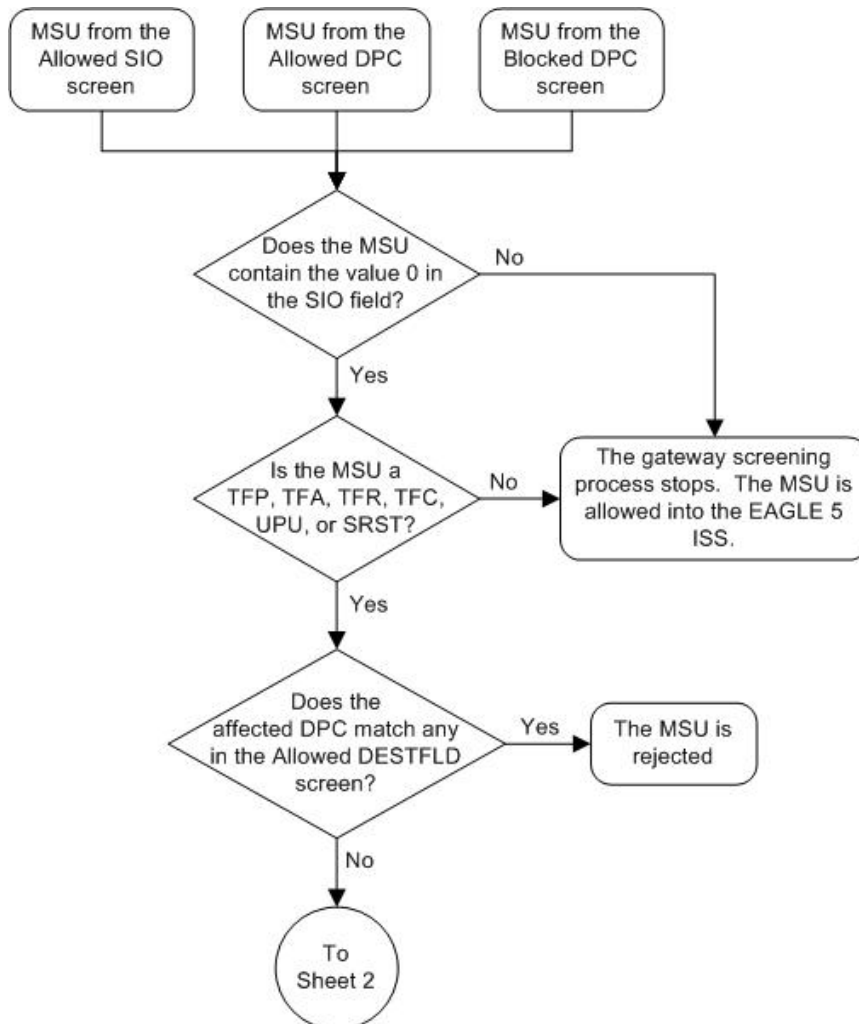

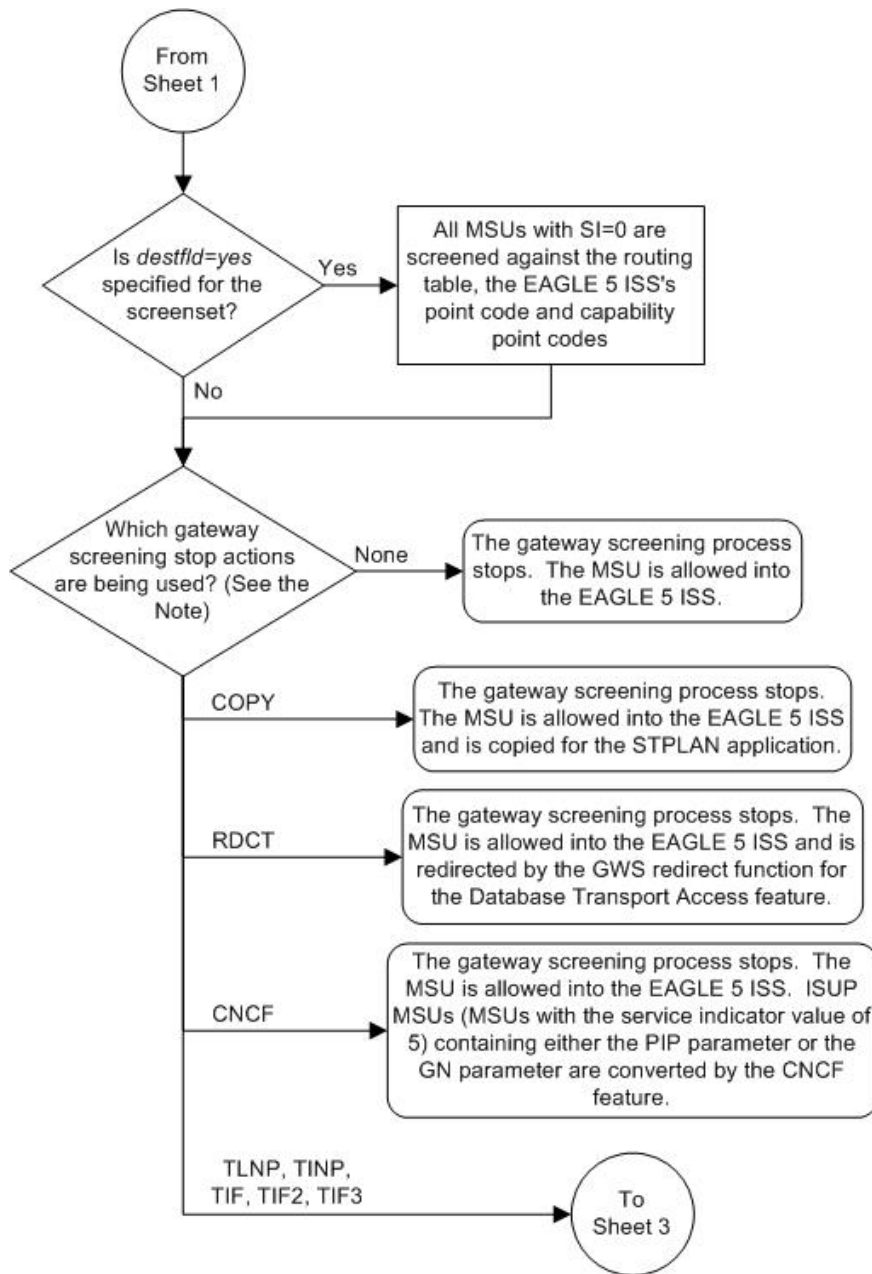

Note: Combinations of the gateway screening stop actions shown on Sheets 2 and 3 may be assigned to a gateway screening stop action set. Refer to the Configuring Gateway Screening Stop Action Sets and the Configuring TLNP Gateway Screening Stop Action Sets procedures in Chapter 2 of this manual for the combinations that can be used.

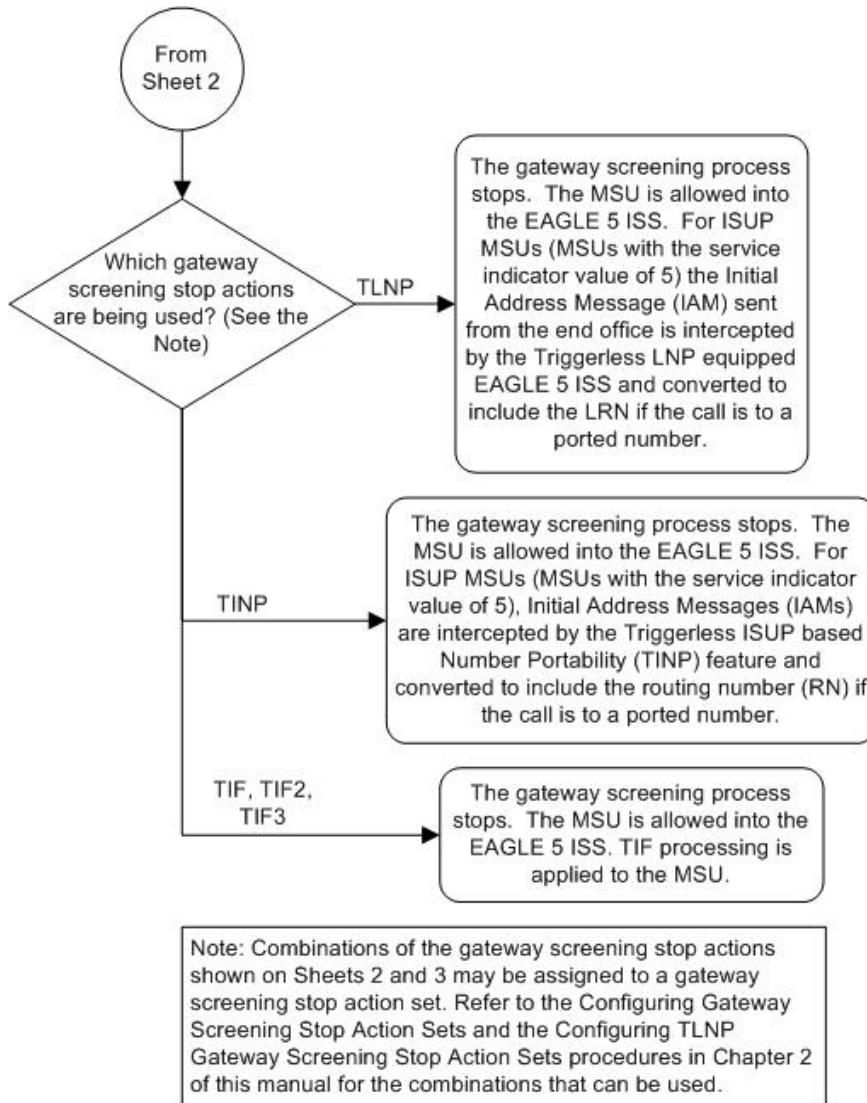


Figure 40: Allowed Affected Destination Field Screening Function

ANSI MSU (ANSI Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF			
		DPC NCM NC NI	Routing Label OPC NCM NC NI	SLS xx	H1 H0

ITU-I MSU (ITU International Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF			
		DPC ID AREA ZONE	Routing Label OPC ID AREA ZONE	SLS xx	H1 H0

14-Bit ITU-N MSU (14-Bit ITU National Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF			
		DPC NPC	Routing Label NPC	SLS xx	H1 H0

24-Bit ITU-N MSU (24-Bit ITU National Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF			
		DPC SP SSA MSA	Routing Label OPC SP SSA MSA	SLS xx	H1 H0

Adding an Allowed Affected Destination Field Screen

This procedure is used to add an allowed affected destination field (DESTFLD) screen to the database using the `ent-scr-destfld` command. The parameters used by the `ent-scr-destfld` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The examples in this procedure are used to add the allowed DESTFLD screen data shown in [Table 40: Example Gateway Screening Allowed DESTFLD Configuration Table](#) on page 217 and based on the example configuration shown in [Figure 9: Gateway Screening Configuration - Example 5](#) on page 48.

Table 40: Example Gateway Screening Allowed DESTFLD Configuration Table

Screening Reference	NI	NC	NCM	NSFI	ACTNAME
fld5	100	100	100	stop	CR

Note: If you using multiple-part ITU national point codes with gateway screening, see the [14-Bit ITU National Point Code Formats](#) on page 34 section.

Specifying a Range of Values

A range of values can be specified for the point code parameters `ni`, `nc`, or `ncm`.

If a range of values is specified for any of these parameters, and the value of the other parameters match existing values for the screening reference name, the range of values for the point code parameter cannot include any values for that parameter that are currently provisioned for the screening reference name.

For example, screening reference name `scr1` contains these entries:

SR	NI	NC	NCM	NSFI	NSR/ACT
SCR1	240	001	010	STOP	-----
SCR1	241	010	020	STOP	-----

Another entry for screening reference `scr1` with the `ni` value of 240 and the `nc` value of 001 cannot be specified if the range of values for the `ncm` parameter includes the value 010.

The ANSI point code parameter values can be specified as a single value, a range of values, or with an asterisk (*). The asterisk specifies all possible values for the `ni`, `nc`, and `ncm` parameters. [Table 41: Valid Value Combinations for ANSI Point Code Parameters](#) on page 217 shows the valid combinations of these parameter values.

Table 41: Valid Value Combinations for ANSI Point Code Parameters

NI	NC	NCM
Single Value	Single Value	Single Value
Single Value	Single Value	Range of Values
Single Value	Single Value	Asterisk
Single Value	Range of Values	Asterisk
Single Value	Asterisk	Asterisk
Range of Values	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

A range of values can also be specified for an ITU-I or 24-bit ITU-N point code parameter using a combination of asterisks (*) and single values for the point code parameters. [Table 42: Valid Value Combinations for ITU-I Point Code Parameters](#) on page 218 shows the valid combinations of the ITU-I parameter values. [Table 43: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters](#) on page 218 shows the valid combinations of the 24-bit ITU-N parameter values.

Table 42: Valid Value Combinations for ITU-I Point Code Parameters

ZONE	AREA	ID
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

Table 43: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters

MSA	SSA	SP
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

1. Verify that the gateway screening feature is on, by entering the `rtrv-feat` command.

If the gateway screening feature is on, the `GWS` field is set to `on`.

Note: The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

If the gateway screening feature is on, shown by the entry `GWS = on` in the `rtrv-feat` command output, skip step 2, and go to step 3.

2. Turn the gateway screening feature on by entering this command.

```
chg-feat:gws=on
```

Note: Once the gateway screening feature is turned on with the `chg-feat` command, it cannot be turned off.

The gateway screening feature must be purchased before you turn this feature on with the `chg-feat` command. If you are not sure if you have purchased the gateway screening feature, contact your Tekelec Sales Representative or Account Representative.

When the `chg-feat` has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 11:43:04 GMT EAGLE5 36.0.0
CHG-FEAT: MASP A - COMPLTD
```

3. Display all allowed DESTFLD screens in the database using the `rtrv-scr-destfld` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED DESTFLD
SR      REF  RULES
IEC    YES   2
```



```
WRD2 YES 1
WRD4 YES 9
```

If the screening reference names that you wish to add with this procedure are not shown in the `rtrv-scr-destfld` command output, go to step 4. For this example, the screening reference names are not shown. If these screening reference names are shown in the `rtrv-scr-destfld` command output, make sure the screening data you wish to enter is not already in the database by entering the `rtrv-scr-destfld` command with the screening reference name. For example, enter the `rtrv-scr-destfld:sr=iec` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED DESTFLD
SR NI NC NCM NSFI NSR/ACT
IEC 240 001 010 STOP -----
IEC 241 010 * STOP COPY
```

If a gateway screening stop action set is to be assigned to the allowed DESTFLD screen being added to the database, go to step 4. Otherwise, go to step 5.

4. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0
ACT ACT ACT ACT ACT ACT ACT ACT ACT ACT ACT
ID NAME 1 2 3 4 5 6 7 8 9 10
--
1 copy copy
2 rdct rdct
3 cr copy rdct
4 cncf cncf
5 cpncf copy cncf
6 cncfrd cncf rdct
7 cpcfrd copy cncf rdct

GWS action set table is (7 of 16) 44% full
```

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to configure the required gateway screening stop action set.

Note: If the point code being added in this procedure is not an ITU-I or 14-bit ITU-N spare point code, skip this step and to step 6.

Note: If the point code being added in this procedure is an ITU-I or 14-bit ITU-N spare point code and the screening reference contains ITU-I or 14-bit ITU-N spare point codes, skip this step and go to step 6.

5. Display the status of the ITU National and International Spare Point Code Support feature by entering the `rtrv-ctrl-feat` command with the ITU National and International Spare Point Code Support feature part number.

Enter this command.

```
rtrv-ctrl-feat:partnum=893013601
```

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name          Partnum   Status  Quantity
Spare Point Code Support 893013601 on      ----

The following features have been temporarily enabled:

Feature Name          Partnum   Status  Quantity  Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name          Partnum
Zero entries found.
```

If the ITU National and International Spare Point Code Support feature is enabled, go to step 6.

If the ITU National and International Spare Point Code Support feature is not enabled, perform the “Activating the ITU National and International Spare Point Code Support Feature” procedure in the Database *Administration Manual - SS7* to enable the ITU National and International Spare Point Code Support feature as required. After the feature has been enabled, go to step 6.

6. Add a new allowed DESTFLD screen to the database using the `ent-scr-destfld` command.

If a gateway screening stop action is to be assigned to the allowed DESTFLD screen being changed, enter the `ent-scr-destfld` command with the `nsfi=stop` parameter and the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 4.

The following list contains the values for `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `npc`, `msa`, `ssa`, and `sp` parameters:

- `ni` - 0 - 255 or an asterisk (*)
- `nc` - 0 - 255 or an asterisk (*)
- `ncm` - 0 - 255 or an asterisk (*)
- `zone` - 0 - 7 or an asterisk (*)
- `area` - 0 - 255 or an asterisk (*)
- `id` - 0 - 7 or an asterisk (*)
- `npc` - 1 - 16383 or an asterisk (*)
- `msa` - 0 - 255 or an asterisk (*)
- `ssa` - 0 - 255 or an asterisk (*)
- `sp` - 0 - 255 or an asterisk (*)

A range of values can be specified for the `ni`, `nc`, and `ncm` parameters. See the “[Specifying a Range of Values](#)” on page 217 section for more information on how the asterisk and a range of values are used for the `ni`, `nc`, and `ncm` parameters.

To add a spare point code to the allowed DESTFLD screen, the `pcst=s` parameter must be specified. To add a non-spare point code to the allowed DESTFLD screen, the `pcst` parameter does not have to be specified. If the `pcst` parameter is specified for a screen containing an ITU-I or 14-bit ITU-N non-spare point code, the value must be `none`.

For this example, enter this command.

```
ent-scr-destfld:sr=fld5:ni=100:nc=100:ncm=100:nsfi=stop :actname=cr
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0
ENT-SCR-DESTFLD: SCREEN SET AFFECTED - FLD5 1% FULL
ENT-SCR-DESTFLD: MASP A - COMPLTD
```

7. Verify the changes using the `rtrv-scr-destfld` command with the screening reference name used in step 6. For this example, enter this command.

```
rtrv-scr-destfld:sr=fld5
```

The following is an example of the possible output.


```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED DESTFLD
SR      NI      NC      NCM      NSFI      NSR/ACT
FLD5   100      100      100      STOP      CR
```


8. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 41: Adding an Allowed Affected Destination Field Screen

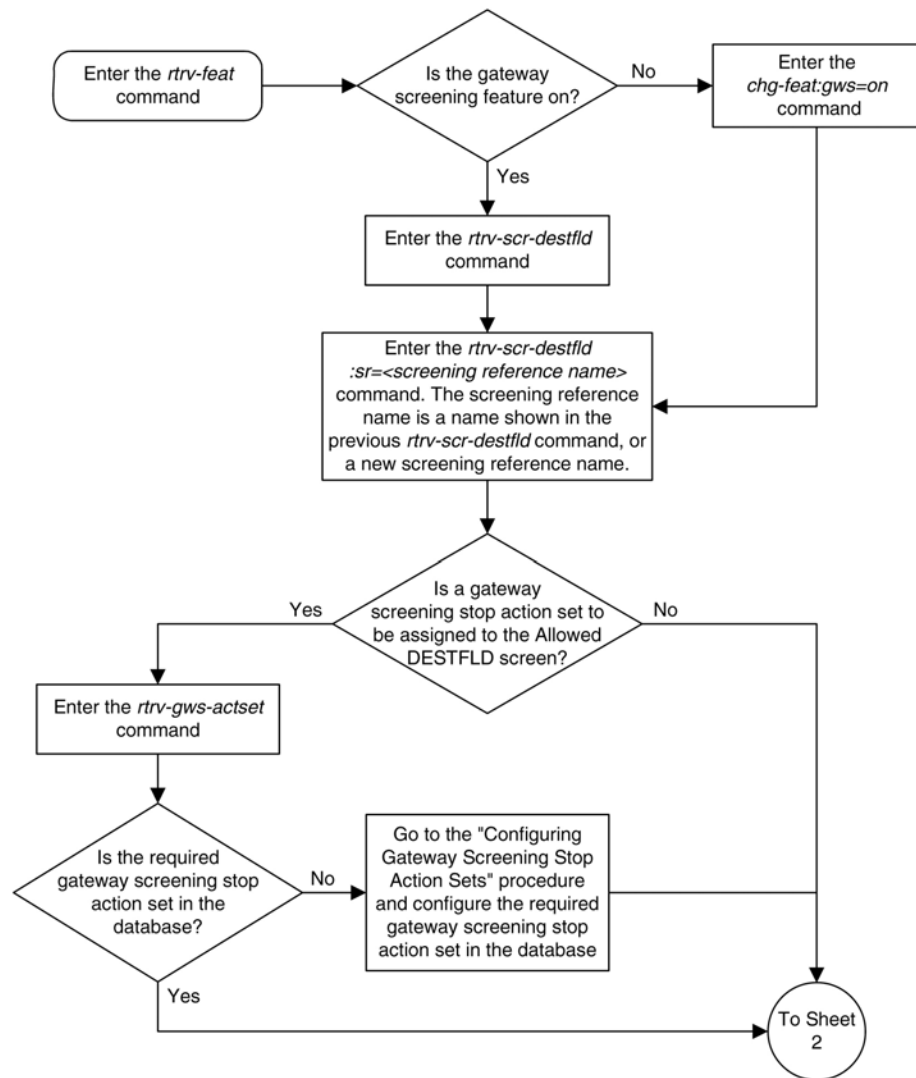

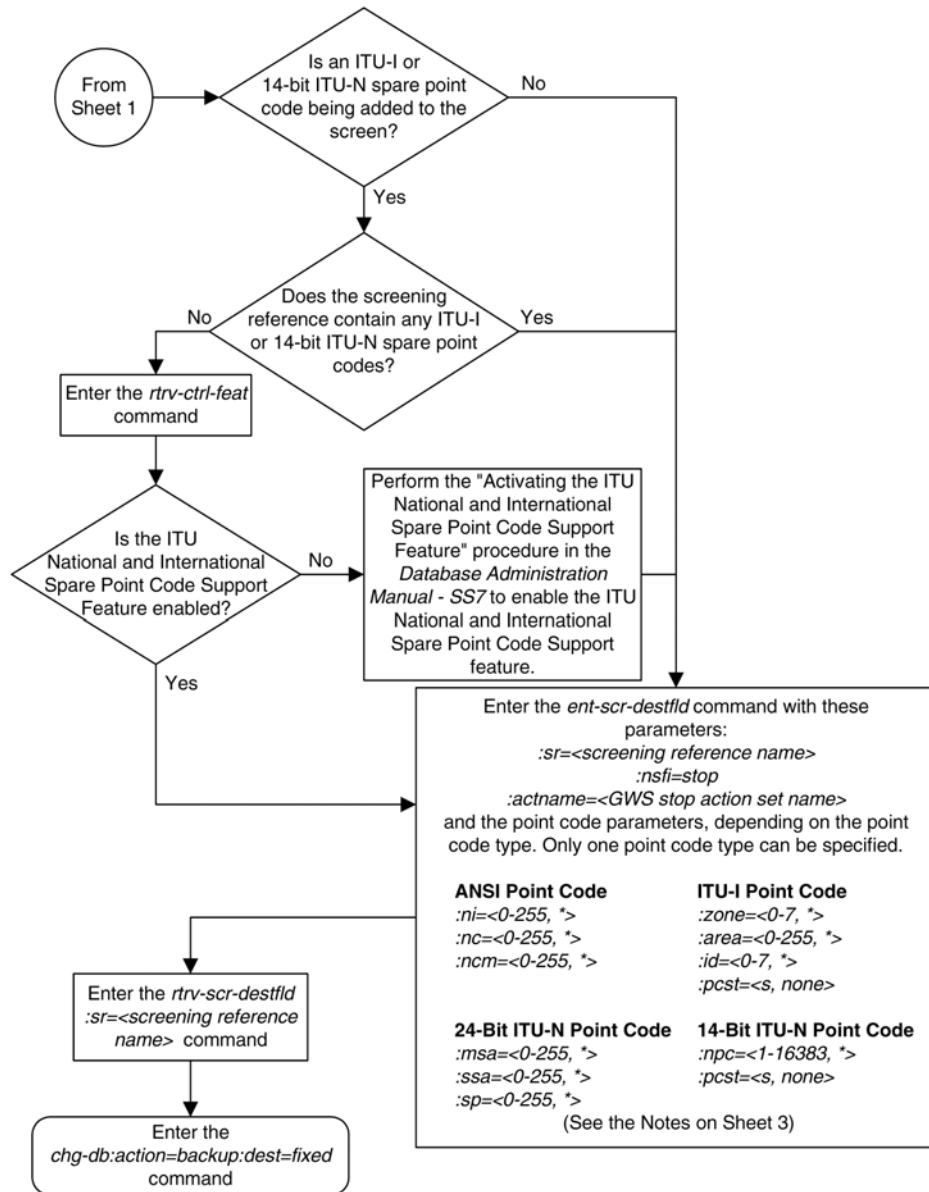

Notes:

1. A range of values can be specified for the *ni*, *nc*, or *ncm* parameters by inserting double ampersands (&&) between the parameter values defining the range. For example, to specify the range 025 to 200 for the *ni* parameter, enter 025&&200 for the *ni* parameter value.
2. The asterisk (*) specifies the entire range of values for that parameter.
For more information about specifying a range of values and about using the asterisk, see the "Gateway Screening Attributes" section in Chapter 2 and the "Specifying a Range of Values" section in this procedure.
3. The *actname* parameter is optional. If the *actname* parameter is specified, the *actname* parameter value is one of the gateway screening stop action set names shown in the *rtrv-gws-actset* output on Sheet 1.
4. To add a non-spare point code, the *pcst* parameter does not have to be specified. If the *pcst* parameter is specified for a screen containing an ITU-I or 14-bit ITU-N non-spare point code, the value must be *none*.
5. To add a spare point code, the *pcst=s* parameter must be specified.

Removing an Allowed Affected Destination Field Screen

This procedure is used to remove an allowed affected destination field (DESTFLD) screen from the database using the `dlt-scr-destfld` command. The parameters used by the `dlt-scr-destfld` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure removes the allowed DESTFLD screen `fld5` from the database.

Note: If you using multiple-part ITU national point codes with gateway screening, see the [14-Bit ITU National Point Code Formats](#) on page 34 section.

The allowed DESTFLD screen can be referenced by one of the following screens.

- Allowed SIO
- Allowed DPC
- Blocked DPC

Verifying the Gateway Screening Configuration

Enter the following commands to verify that none of these screens reference the allowed CGPA screen being removed from the database.

- `rtrv-scr-sio:nsfi=destfld`
- `rtrv-scr-dpc:nsfi=destfld`
- `rtrv-scr-blkdpc:nsfi=destfld`

Gateway Screening Configuration Procedures

To change the NSFI of any of these screens, perform one of these procedures.

- [Changing an Allowed SIO Screen](#) on page 323
- [Changing an Allowed DPC Screen](#) on page 292
- [Changing a Blocked DPC Screen](#) on page 258

1. Display the allowed DESTFLD screens in the database using the `rtrv-scr-destfld` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED DESTFLD
SR      REF  RULES
FLD5   YES   1
IEC    YES   6
WRD2   YES   1
WRD4   YES   9
```

From the `rtrv-scr-destfld` output, display the allowed DESTFLD screen you wish to remove using the `rtrv-scr-destfld` command with the screening reference name. For this example, enter this command.

```
rtrv-scr-destfld:sr=fld5
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED DESTFLD
SR  NI      NC      NCM      NSFI  NSR/ACT
fld5 100     100     100     STOP  cr
```

2. Enter the commands in the [Verifying the Gateway Screening Configuration](#) on page 224 section to verify that the screen being removed is not referenced by other screens in the database.

If the screen being removed is referenced by other screens, perform the procedures shown in the [Gateway Screening Configuration Procedures](#) on page 224 section to change the NSFI of those screens to reference other screens or change the NSFI of these screens to STOP.

3. Remove the allowed DESTFLD screen from the database using the `dlt-scr-destfld` command with the screening reference name shown in the `rtrv-scr-destfld` output in step 1 and with the point code parameter values (`ni`, `nc`, `ncm`, or `zone`, `area`, `id`, `npc`, `msa`, `ssa`, or `sp`) of the screen being removed from the database.

The values for these parameters must be entered exactly as shown in the `rtrv-scr-destfld` output.

To remove an entry containing either an ITU-I or a 14-bit ITU-N spare point code, the `pcst=s` parameter must be specified with the `dlt-scr-destfld` command.

To remove an entry containing either an ITU-I or a 14-bit ITU-N non-spare point code, the `pcst` parameter does not have to be specified with the `dlt-scr-destfld` command. If the `pcst` parameter is specified, the value must be none.

For this example, enter this command.

```
dlt-scr-destfld:sr=fld5:ni=100:nc=100:ncm=100
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
DLT-SCR-DESTFLD: SCREEN SET AFFECTED - FLD5 0% FULL
DLT-SCR-DESTFLD: MASP A - COMPLTD
```

4. Verify the changes using the `rtrv-scr-destfld` command with the screening reference name used in step 3.

For this example, enter this command.

```
rtrv-scr-destfld:sr=fld5
```

The following is an example of the possible output.

```
E2573 Cmd Rej: SR or NSR does not reference an existing SR
```


This message shows that the specified screening reference name is not in the database and the action of the `dlt-scr-destfld` command in step 3 was successful. If the specified screening reference name contained more than one entry when the `dlt-scr-destfld` command was executed in step 3, the `rtrv-scr-destfld:sr=` command output would show the remaining entries in the screening reference instead of error message E2573.


5. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 42: Removing an Allowed Affected Destination Field Screen

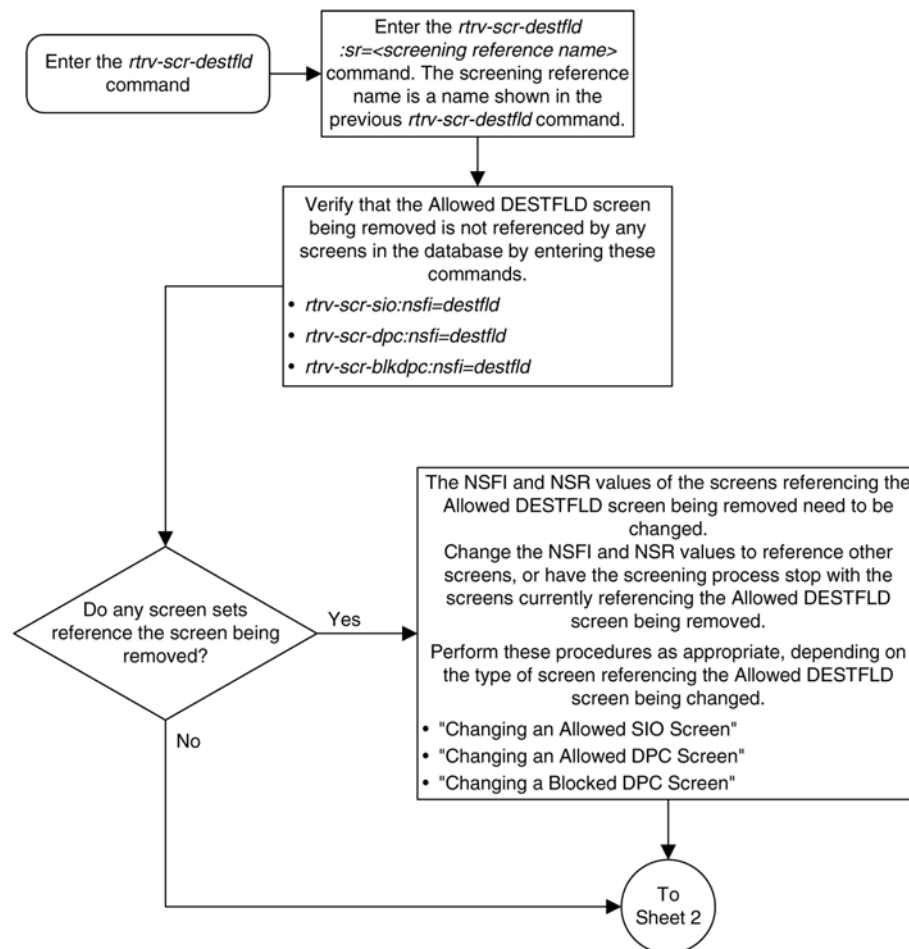

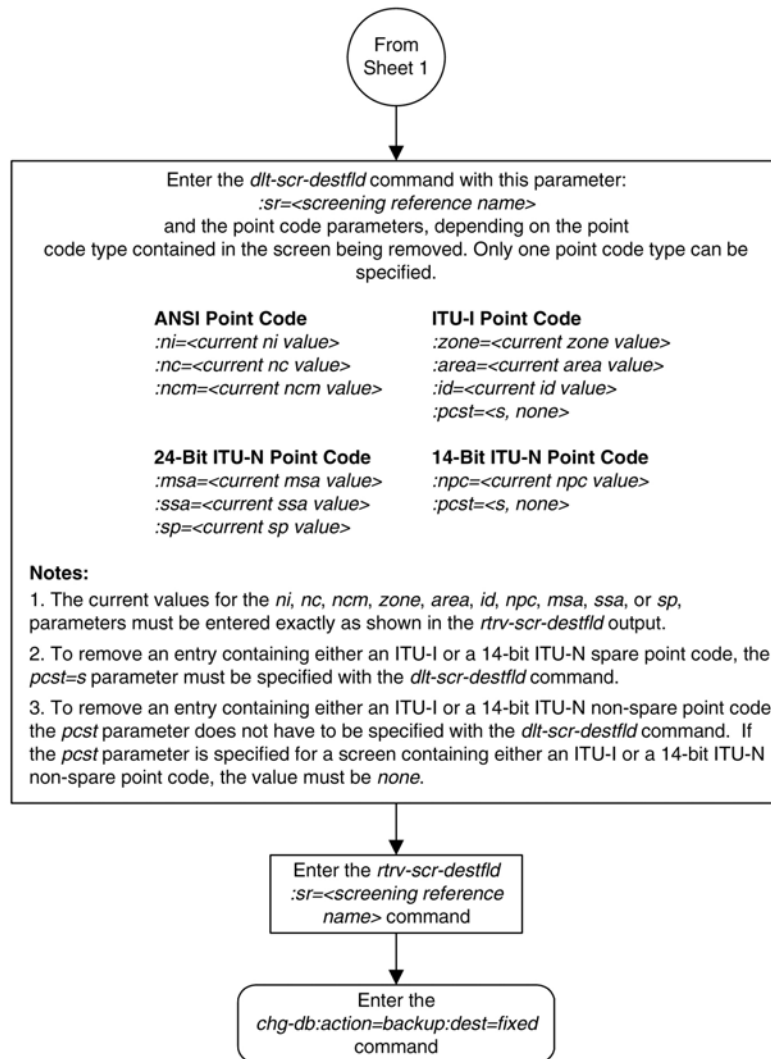

Changing an Allowed Affected Destination Field Screen

This procedure is used to change the attributes of an allowed affected destination field (DESTFLD) screen in the database using the *chg-scr-destfld* command. The parameters used by the *chg-scr-destfld* command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure is used to change the point code 100-100-100 for the allowed DESTFLD screen f1d5 to 030-030-030 and to redirect the MSU for the DTA feature.

Note: If you using multiple-part ITU national point codes with gateway screening, see the [14-Bit ITU National Point Code Formats](#) on page 34 section.

Specifying a Range of Values

A range of values can be specified for the point code parameters *ni*, *nc*, or *ncm*.

If a range of values is specified for any of these parameters, and the value of the other parameters match existing values for the screening reference name, the range of values for the point code parameter cannot include any values for that parameter that are currently provisioned for the screening reference name.

For example, screening reference name *scr1* contains these entries:

SR	NI	NC	NCM	NSFI	NSR/ACT
SCR1	240	001	010	STOP	-----
SCR1	241	010	020	STOP	-----

Another entry for screening reference *scr1* with the *ni* value of 240 and the *nc* value of 001 cannot be specified if the range of values for the *ncm* parameter includes the value 010.

The ANSI point code parameter values can be specified as a single value, a range of values, or with an asterisk (*). The asterisk specifies all possible values for the *ni*, *nc*, and *ncm* parameters. [Table 44: Valid Value Combinations for ANSI Point Code Parameters](#) on page 228 shows the valid combinations of these parameter values.

Table 44: Valid Value Combinations for ANSI Point Code Parameters

NI	NC	NCM
Single Value	Single Value	Single Value
Single Value	Single Value	Range of Values
Single Value	Single Value	Asterisk
Single Value	Range of Values	Asterisk
Single Value	Asterisk	Asterisk
Range of Values	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

A range of values can also be specified for an ITU-I or 24-bit ITU-N point code parameter using a combination of asterisks (*) and single values for the point code parameters. [Table 45: Valid Value Combinations for ITU-I Point Code Parameters](#) on page 229 shows the valid combinations of the ITU-I parameter values. [Table 46: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters](#) on page 229 shows the valid combinations of the 24-bit ITU-N parameter values.

Table 45: Valid Value Combinations for ITU-I Point Code Parameters

ZONE	AREA	ID
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

Table 46: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters

MSA	SSA	SP
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

1. Display the allowed DESTFLD screens in the database using the `rtrv-scr-destfld` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED DESTFLD
SR   REF  RULES
FLD5 YES   1
IEC  YES   6
WRD2 YES   1
WRD4 YES   9
```

From the `rtrv-scr-destfld` output, display the allowed DESTFLD screen you wish to change using the `rtrv-scr-destfld` command with the screening reference name. For this example, enter this command.

```
rtrv-scr-destfld:sr=fld5
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED DESTFLD
SR   NI      NC      NCM      NSFI      NSR/ACT
fld5 100      100      100      STOP      cr
```

If a gateway screening stop action set is to be assigned to the allowed DESTFLD screen being added to the database, go to step 2. Otherwise, go to step 3.

2. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
ACT  ACT      ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME      1    2    3    4    5    6    7    8    9    10
--   -
1    copy      copy
2    rdct      rdct
3    cr        copy rdct
4    cncf      cncf
5    cpcncf    copy cncf
6    cncfrd    cncf rdct
7    cpcfrd    copy cncf rdct

GWS action set table is (7 of 16) 44% full
```

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to configure the required gateway screening stop action set.

3. Display the status of the ITU National and International Spare Point Code Support feature by entering the `rtrv-ctrl-feat` command with the ITU National and International Spare Point Code Support feature part number.

Note: If any of these conditions apply to this procedure, skip this step and go to step 4:

- The point code in the screen is not being changed.
- The screen being changed contains either an ANSI or 24-bit ITU-N point code.
- The ITU-I or 14-bit ITU-N non-spare point code in the screen is not being changed to an ITU-I or 14-bit ITU-N spare point code.
- The point code in the screen is an ITU-I or 14-bit ITU-N spare point code or the screening reference contains other screens with ITU-I or 14-bit ITU-N spare point codes.

Enter this command.

```
rtrv-ctrl-feat:partnum=893013601
```

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name                Partnum  Status  Quantity
Spare Point Code Support    893013601 on      ----

The following features have been temporarily enabled:

Feature Name                Partnum  Status  Quantity  Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name                Partnum
Zero entries found.
```

If the ITU National and International Spare Point Code Support feature is enabled, go to step 4.

If the ITU National and International Spare Point Code Support feature is not enabled, perform the “Activating the ITU National and International Spare Point Code Support Feature” procedure in the Database *Administration Manual - SS7* to enable the ITU National and International Spare Point Code Support feature as required. After the feature has been enabled, go to step 4.

4. Change the attributes of an allowed DESTFLD screen using the `chg-scr-destfld` command.

If a gateway screening stop action is to be assigned to the allowed DESTFLD screen being changed, enter the `chg-scr-destfld` command with the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 2.

The current values for the `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `npc`, `msa`, `ssa`, and `sp` parameters must be entered exactly as shown in the `rtrv-scr-destfld` output in step 1.

The following list contains the values for the `nni`, `nnc`, `nncm`, `nzone`, `narea`, `nid`, `nnpc`, `nmsa`, `nssa`, and `nsp` parameters:

- `nni` - 0-255 or an asterisk (*)
- `nnc` - 0-255 or an asterisk (*)
- `nncm` - 0-255 or an asterisk (*)
- `nzone` - 0-7 or an asterisk (*)
- `narea` - 0-255 or an asterisk (*)
- `nid` - 0-7 or an asterisk (*)
- `nnpc` - 1 - 16383 or an asterisk (*)
- `nmsa` - 0-255 or an asterisk (*)
- `nssa` - 0-255 or an asterisk (*)
- `nsp` - 0-255 or an asterisk (*)

```
chg-scr-destfld:sr=fld5:ni=100:nc=100:ncm=100:nni=030:nnc=030
:nncm=030:actname=rdct
```

The following messages appear.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
CHG-SCR-DESTFLD: SCREEN SET AFFECTED - FLD5 1% FULL
CHG-SCR-DESTFLD: MASP A - COMPLTD
```

5. Verify the changes using the `rtrv-scr-destfld` command with screening reference name used in step 4.

For this example, enter this command.

```
rtrv-scr-destfld:sr=fld5
```

The following is an example of the possible output.


```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED DESTFLD
SR   NI      NC      NCM      NSFI   NSR/ACT
fld5 030      030      030      STOP   rdct
```


6. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.


The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 43: Changing an Allowed Affected Destination Field Screen

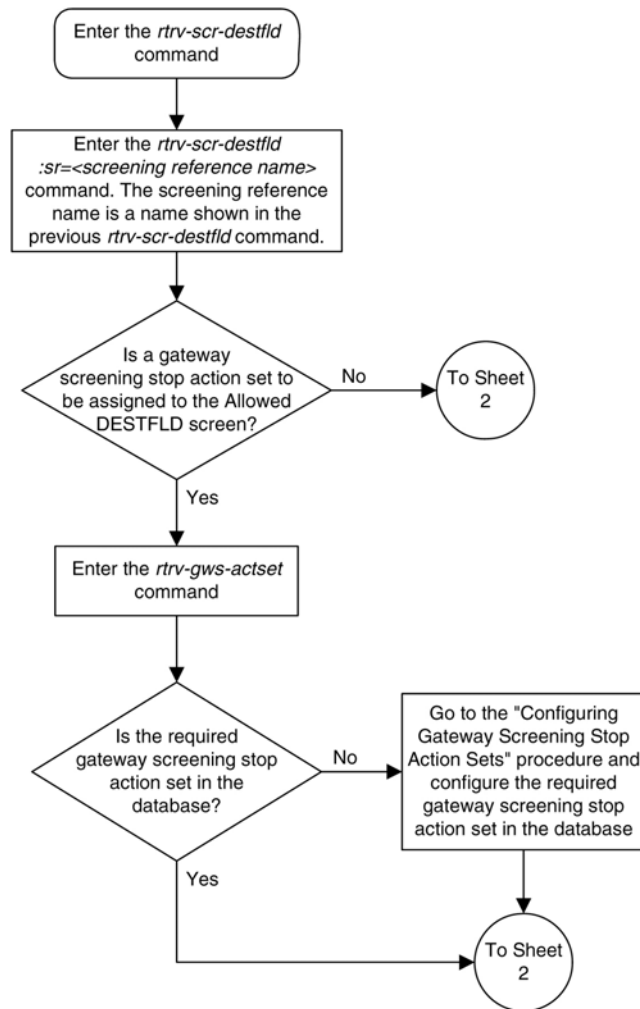

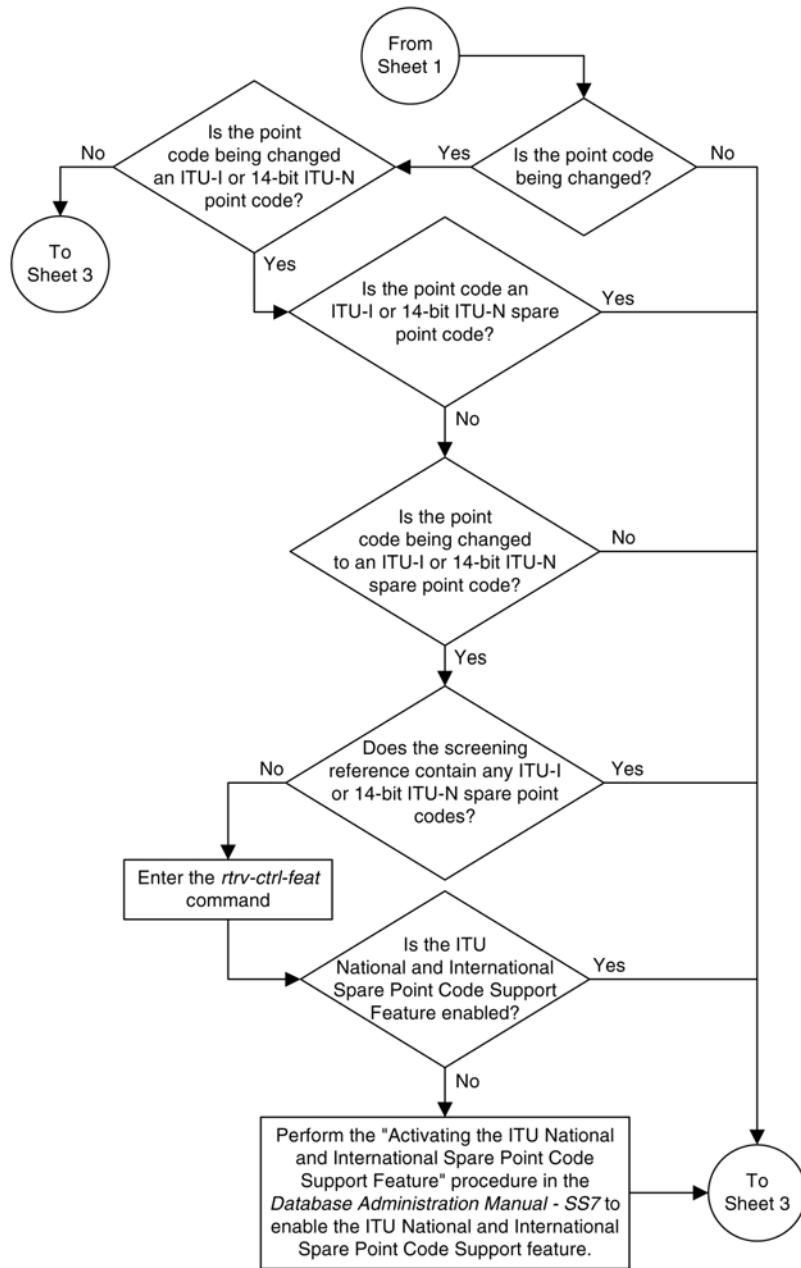

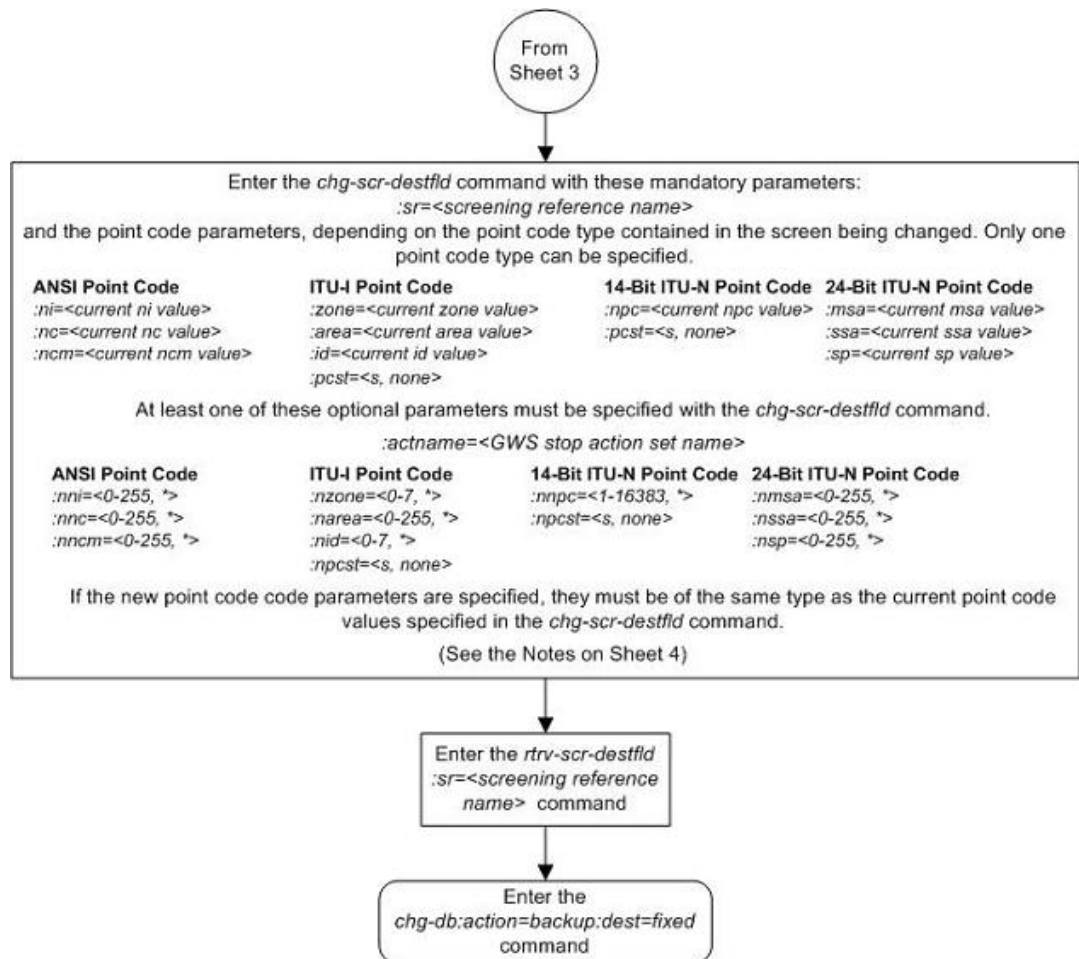

Notes:

1. A range of values can be specified for the *nni*, *nnc*, or *nncm* parameters by inserting double ampersands (&&) between the parameter values defining the range. For example, to specify the range 025 to 200 for the *nni* parameter, enter 025&&200 for the *nni* parameter value.

2. The asterisk (*) specifies the entire range of values for that parameter.

For more information about specifying a range of values and about using the asterisk, see the "Gateway Screening Attributes" section in Chapter 2 and the "Specifying a Range of Values" section in this procedure.

3. The *actname* parameter is optional. If the *actname* parameter is specified, the *actname* parameter value is one of the gateway screening stop action set names shown in the *rtv-gws-actset* output on Sheet 1.

4. The current values for the *ni*, *nc*, *nncm*, *zone*, *area*, *id*, *npc*, *msa*, *ssa*, and *sp* parameters must be entered exactly as shown in the *rtv-scr-destfld* output.

5. To change an ITU-I or 14-bit ITU-N spare point code to a non-spare point code, both the *pcst=s* and *npcst=none* parameters must be specified with the *chg-scr-destfld* command.

6. To change an ITU-I or 14-bit ITU-N non-spare point code to a spare point code, the *npcst=s* parameter must be specified with the *chg-scr-destfld* command. The *pcst* parameter does not have to be specified.

7. If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N spare point code, the *pcst=s* parameter must be specified with the *chg-scr-destfld* command.

8. If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N non-spare point code, the *pcst* parameter does not have to be specified with the *chg-scr-destfld* command. If the *pcst* parameter is specified for a screen containing either an ITU-I or 14-bit ITU-N non-spare point code, the *pcst* parameter value must be *none*.

Chapter 8

Blocked Destination Point Code (BLKDPC) Screen Configuration

Topics:

- [Introduction Page 238](#)
- [Adding a Blocked DPC Screen Page 242](#)
- [Removing a Blocked DPC Screen Page 254](#)
- [Changing a Blocked DPC Screen Page 258](#)

Chapter 8, Blocked Destination Point Code (BLKDPC) Screen Configuration, contains the procedures necessary to configure blocked destination point code screens.

Introduction

The blocked DPC screen identifies DPC's that are not allowed to receive SS7 messages from another network. The gray shaded areas in [Figure 45: Blocked DPC Screening Functions](#) on page 241 shows the fields of the SS7 message that are checked by the blocked DPC screening function.

Gateway Screening Actions

If a match is found, the `nsfi` is equal to `fail`, the message is discarded and no further screening takes place.

If a match is not found, the `nsfi` is examined to determine the next step in the screening process. If the `nsfi` value is any value other than `stop`, the next screening reference (`nsr`) is identified and the screening process continues to the next screen identified by the `nsfi` and `nsr` parameter values.


If the `nsfi` is equal to `stop`, the screening process stops and the message is processed. If a gateway screening stop action set is specified with the screen, shown by the `actname` parameter value, the message is processed according to the gateway screening stop actions that are assigned to the gateway screening stop action set.


- If the `copy` gateway screening stop action is specified, the message is processed and a copy of the message is sent by the STPLAN feature to an external application.
- If the `rdct` (redirect) gateway screening stop action is specified, the message is diverted from the original destination and sent to another destination with the Database Transport Access feature, specified by global title translation, for further processing.
- If the `cncf` gateway screening stop action is specified, the PIP parameter in the incoming ISUP IAM message is converted to the GN parameter. The GN parameter in the incoming ISUP IAM message is converted to the PIP parameter. The message is then sent to the node specified by the DPC in the routing label in the message. For more information on the Calling Name Conversion Facility feature, see [Calling Name Conversion Facility \(CNCF\) Configuration](#) on page 417.
- If the `tlnp` gateway screening stop action is specified, ISUP IAMs that pass gateway screening are processed either by the ISUP NP with EPAP feature (if the ISUP NP with EPAP feature is enabled and turned on) or by the Triggerless LNP feature (if the Triggerless LNP feature is turned on). The ISUP NP with EPAP feature is discussed in more detail in the *Feature Manual - G-Port*. The Triggerless LNP feature is discussed in more detail in the *LNP Feature Activation Guide*.
- If the `tinp` gateway screening stop action is specified, ISUP IAMs that pass gateway screening are intercepted by the Triggerless ISUP based Number Portability (TINP) feature and converted to include the routing number (RN) if the call is to a ported number. The TINP feature is discussed in more detail in the *Feature Manual - G-Port*.
- If the `tif`, `tif2`, or `tif3` gateway screening stop actions are specified, TIF processing is applied to the message.

Blocked DPC Screening Actions

Figure 44: *Blocked DPC Screening Actions* on page 239 shows the screening actions of the blocked DPC screen.

Figure 44: Blocked DPC Screening Actions

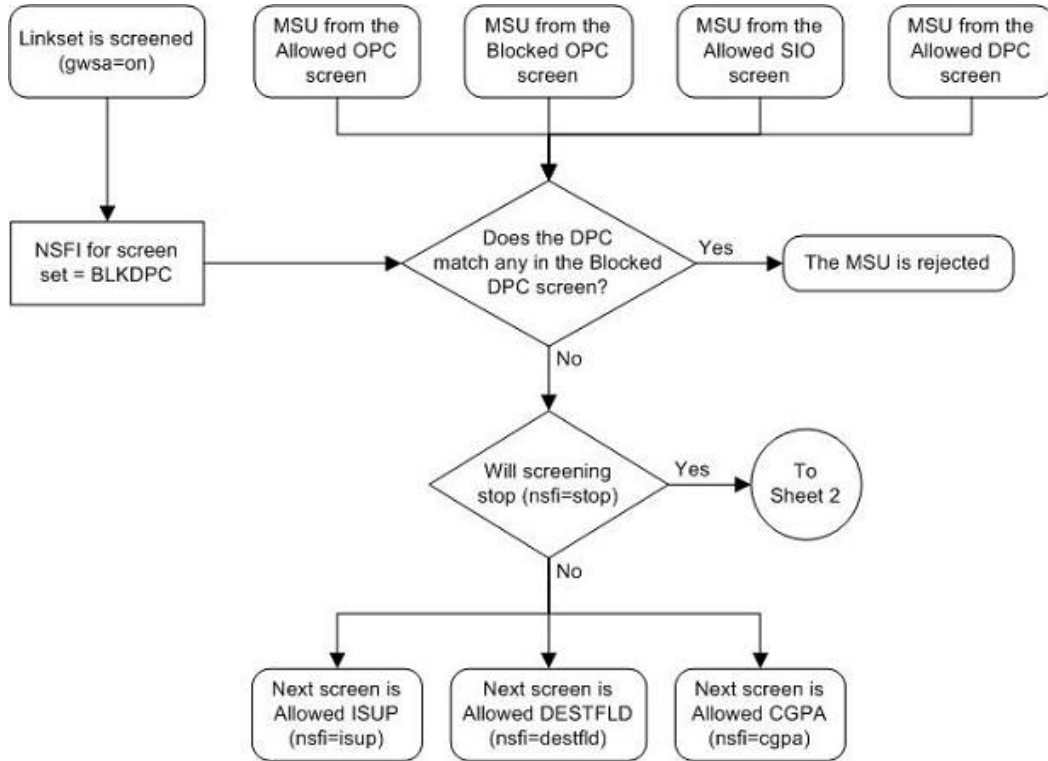

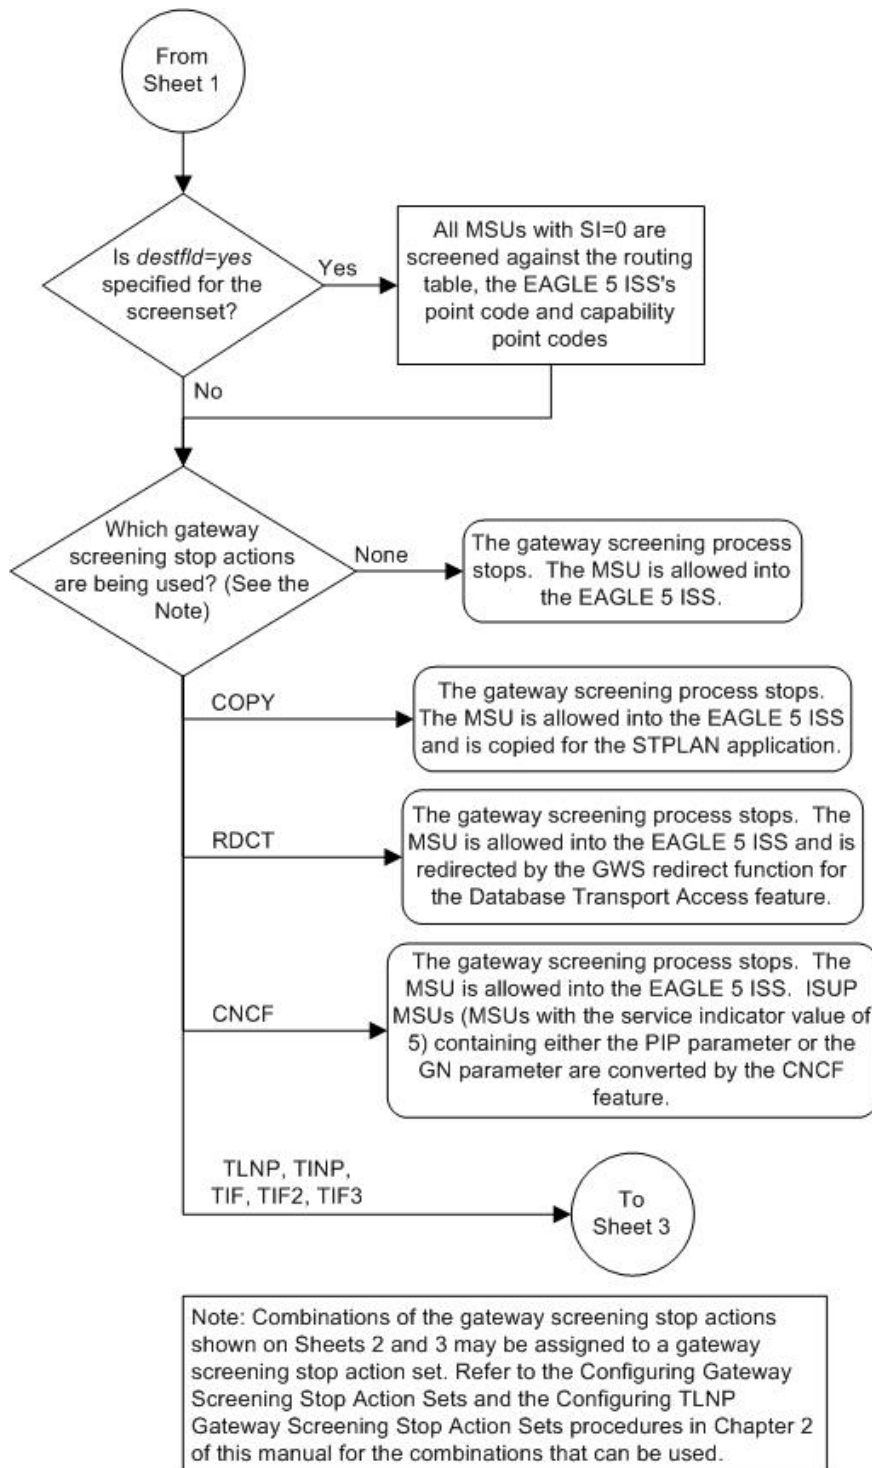

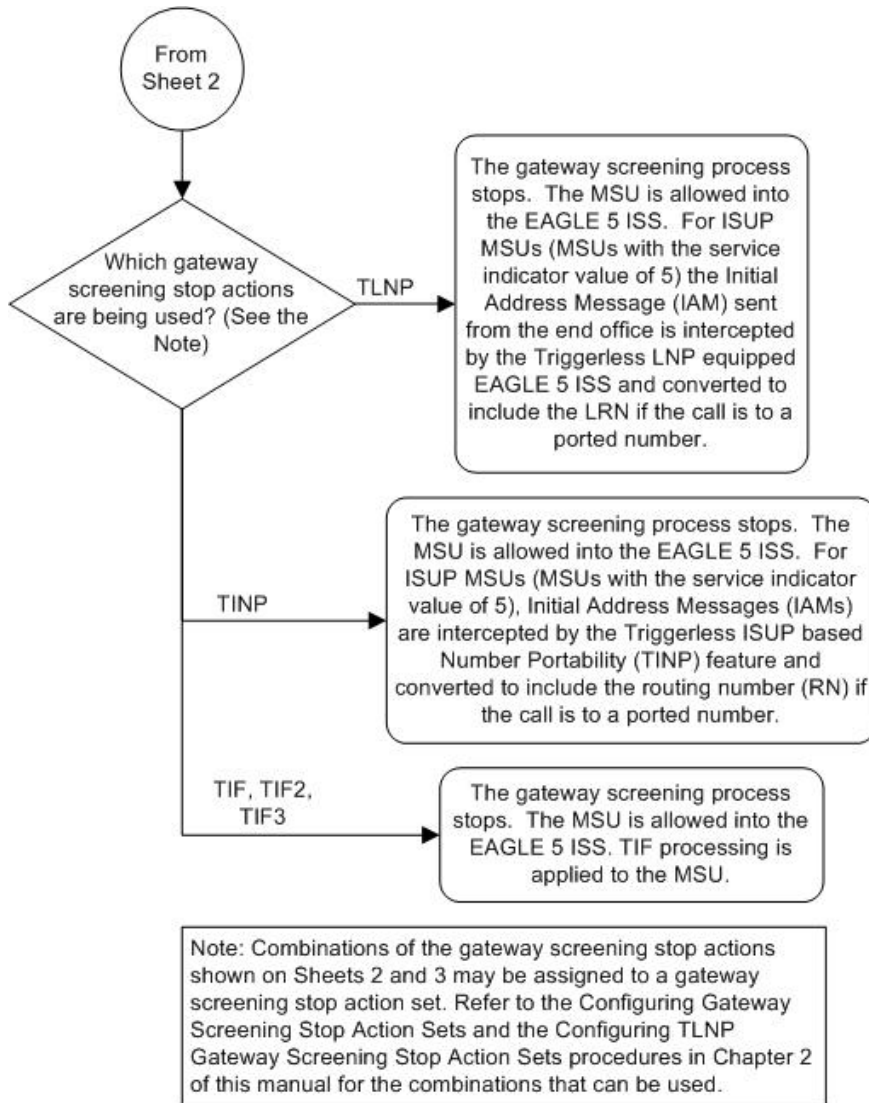


Figure 45: Blocked DPC Screening Functions

ANSI MSU (ANSI Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF		
		DPC NCM NC NI	Routing Label OPC NCM NC NI	SLS xx

ITU-I MSU (ITU International Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF		
		DPC ID AREA ZONE	Routing Label OPC ID AREA ZONE	SLS xx

14-Bit ITU-N MSU (14-Bit ITU National Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF		
		DPC NPC	Routing Label OPC NPC	SLS xx

24-Bit ITU-N MSU (24-Bit ITU National Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF		
		DPC SP SSA MSA	Routing Label OPC SP SSA MSA	SLS xx

Adding a Blocked DPC Screen

This procedure is used to add a blocked destination point code (DPC) screen to the database using the `ent-scr-blkdpc` command. The parameters used by the `ent-scr-blkdpc` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The examples in this procedure are used to add the blocked DPC screen data shown in [Table 47: Example Gateway Screening Blocked DPC Configuration Table](#) on page 243 and based on the example configurations shown in [Figure 5: Gateway Screening Configuration - Example 1](#) on page 42 and [Figure 7: Gateway Screening Configuration - Example 3](#) on page 46.

Table 47: Example Gateway Screening Blocked DPC Configuration Table

Screening Reference	NI	NC	NCM	NSFI	NSR
gws9	C	C	C	cgpa	gw13
gws9	005	005	005	fail	----
gw12	C	C	C	cgpa	gw14
gw12	004	004	004	fail	----

Note: If you using multiple-part ITU national point codes with gateway screening, see the [14-Bit ITU National Point Code Formats](#) on page 34 section.

The blocked DPC screen can reference one of the following screens.

- Allowed Affected Destination Field
- Allowed CGPA
- Allowed ISUP

Verifying Gateway Screening Configuration

Enter the following commands to verify that these screens are in the database.

- `rtrv-scr-destfld:all=yes`
- `rtrv-scr-cgpa:all=yes`
- `rtrv-scr-isup:all=yes`

Gateway Screening Configuration Procedures

If the desired screen is not in the database, perform one of the following procedures to add the desired screen to the database or change an existing screen in the database.

- [Adding an Allowed Affected Destination Field Screen](#) on page 216
- [Adding an Allowed Calling Party Address Screen](#) on page 184
- [Adding an Allowed ISUP Message Type Screen](#) on page 441
- [Changing an Allowed Affected Destination Field Screen](#) on page 227
- [Changing an Allowed Calling Party Address Screen](#) on page 198
- [Changing an Allowed ISUP Message Type Screen](#) on page 450

For the first entry for a specific screening reference, the value for the point code must be `c`, and the NSFI must be either `stop` or `cgpa`. If the NSFI is `stop`, the screening of the message will stop at the specified blocked DPC screen. If the NSFI is `cgpa`, then any message containing a point code that is not listed in the blocked DPC screen with a NSFI equal to `fail`, will continue to be screened with the allowed CGPA screen. All subsequent entries for that screening reference must contain a numeric point code value, the NSFI must be equal to `fail`, and the `nsr` parameter cannot be specified. Any message that contains a DPC in the blocked DPC screen with the NSFI equal to `fail` will be rejected from the network and the screening process is stopped.

The `pcst` parameter, specifying whether or not the ITU-I or 14-bit ITU-N point code is a spare point code, cannot be used with the `zone=c` or `npc=c` parameters.

Specifying a Range of Values

A range of values can be specified for the point code parameters `ni`, `nc`, or `ncm`.

If a range of values is specified for any of these parameters, and the value of the other parameters match existing values for the screening reference name, the range of values for the point code parameter cannot include any values for that parameter that are currently provisioned for the screening reference name.

For example, screening reference name `scr1` contains these entries:

SR	NI	NC	NCM	NSFI	NSR/ACT
SCR1	C	C	C	CGPA	cg01
SCR1	240	001	010	FAIL	-----
SCR1	241	010	020	FAIL	-----

Another entry for screening reference `scr1` with the `ni` value of 240 and the `nc` value of 001 cannot be specified if the range of values for the `ncm` parameter includes the value 010.

The ANSI point code parameter values can be specified as a single value, a range of values, or with an asterisk (*). The asterisk specifies all possible values for the `ni`, `nc`, and `ncm` parameters. [Table 48: Valid Value Combinations for ANSI Point Code Parameters](#) on page 244 shows the valid combinations of these parameter values.

Table 48: Valid Value Combinations for ANSI Point Code Parameters

NI	NC	NCM
Single Value	Single Value	Single Value
Single Value	Single Value	Range of Values
Single Value	Single Value	Asterisk
Single Value	Range of Values	Asterisk
Single Value	Asterisk	Asterisk
Range of Values	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

A range of values can also be specified for an ITU-I or 24-bit ITU-N point code parameter using a combination of asterisks (*) and single values for the point code parameters. [Table 49: Valid Value Combinations for ITU-I Point Code Parameters](#) on page 244 shows the valid combinations of the ITU-I parameter values. [Table 50: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters](#) on page 245 shows the valid combinations of the 24-bit ITU-N parameter values.

Table 49: Valid Value Combinations for ITU-I Point Code Parameters

ZONE	AREA	ID
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

Table 50: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters

MSA	SSA	SP
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

1. Verify that the gateway screening feature is on, by entering the `rtrv-feat` command.

If the gateway screening feature is on, the `GWS` field is set to on.

Note: The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

If the gateway screening feature is on, shown by the entry `GWS = on` in the `rtrv-feat` command output, skip step 2, and go to step 3.

2. Turn the gateway screening feature on by entering this command.

```
chg-feat:gws=on
```

Note: Once the gateway screening feature is turned on with the `chg-feat` command, it cannot be turned off.

The gateway screening feature must be purchased before you turn this feature on with the `chg-feat` command. If you are not sure if you have purchased the gateway screening feature, contact your Tekelec Sales Representative or Account Representative.

When the `chg-feat` has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 11:43:04 GMT EAGLE5 36.0.0
CHG-FEAT: MASP A - COMPLTD
```

3. Display all blocked DPC screens in the database using the `rtrv-scr-blkdpc` command. The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = BLOCKED DPC
SR   REF  RULES
IEC  YES   6
WRD2 YES   1
WRD3 NO    4
WRD4 YES   9
```

If the screening reference names that you wish to add with this procedure are not shown in the `rtrv-scr-blkdpc` command output, go to step 4. For this example, the screening reference names are not shown. If these screening reference names are shown in the `rtrv-scr-blkdpc` command output, make sure the screening data you wish to enter is not already in the database by entering the `rtrv-scr-blkdpc` command with the screening reference name. For example, enter the `rtrv-scr-blkdpc:sr=iec` command. The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
```

```
SCREEN = BLOCKED DPC
SR   NI      NC      NCM      NSF1      NSR/ACT
IEC  240     001     010     FAIL     -----
IEC  241     010     *       FAIL     -----

SR   NPC
IEC  00235
NSF1 FAIL
NSR/ACT -----

SR   ZONE  AREA  ID      NSF1      NSR/ACT
IEC  1     003  4      FAIL     -----
IEC  1     003  5      FAIL     -----
IEC  C     C    C      CGPA     cg01
```

If a gateway screening stop action set is to be assigned to the blocked DPC screen being added to the database, go to step 4.

Step 4 verifies the gateway screening stop action set names in the database. The gateway screening stop action set names are assigned only if the NSF1 of the screen being added in this procedure is STOP. If the NSF1 of the new screen will be STOP, but a gateway screening stop action set name will not be assigned to the new screen, skip steps 4 and 5 and go to step 6. If the NSF1 of the new screen is not STOP, skip step 4 and go to step 5.

4. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
ACT  ACT    ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME   1    2    3    4    5    6    7    8    9    10
---  ---
1    copy   copy
2    rdct   rdct
3    cr     copy rdct
4    cncf   cncf
5    cpncf  copy cncf
6    cncfrd cncf rdct
7    cpcfrd copy cncf rdct

GWS action set table is (7 of 16) 44% full
```

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to configure the required gateway screening stop action set.

Note: If the NSF1 of the screen being added in this procedure is STOP or FAIL, skip step 5 and go to step 6.

5. Enter the commands in the [Verifying the Gateway Screening Configuration](#) on page 243 section to verify that the screen that will be specified by the NSF1/NSR parameter combination in step 7 is in the database.

If the desired screen is not in the database, perform one of the procedures shown in the [Gateway Screening Configuration Procedures](#) on page 243 section to add the desired screen to the database or change an existing screen in the database.

Note: If the point code being added in this procedure is not an ITU-I or 14-bit ITU-N spare point code, skip this step and to step 7.

Note: If the point code being added in this procedure is an ITU-I or 14-bit ITU-N spare point code and the screening reference contains ITU-I or 14-bit ITU-N spare point codes, skip this step and go to step 7.

6. Display the status of the ITU National and International Spare Point Code Support feature by entering the `rtrv-ctrl-feat` command with the ITU National and International Spare Point Code Support feature part number.

Enter this command.

```
rtrv-ctrl-feat:partnum=893013601
```

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name          Partnum   Status  Quantity
Spare Point Code Support 893013601 on      ----

The following features have been temporarily enabled:

Feature Name          Partnum   Status  Quantity   Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name          Partnum
Zero entries found.
```

If the ITU National and International Spare Point Code Support feature is enabled, go to step 7.

If the ITU National and International Spare Point Code Support feature is not enabled, perform the “Activating the ITU National and International Spare Point Code Support Feature” procedure in the *Database Administration Manual - SS7* to enable the ITU National and International Spare Point Code Support feature as required. After the feature has been enabled, go to step 7.

7. Add a new blocked DPC screen to the database using the `ent-scr-blkdpc` command.

If a gateway screening stop action is to be assigned to the blocked DPC screen being added, enter the `ent-scr-blkdpc` command with the `nsfi=stop` parameter and the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 4.

The following list contains the values for `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `npc`, `msa`, `ssa`, and `sp` parameters:

- `ni` - 0-255, `c`, or an asterisk (*)
- `nc` - 0-255, `c`, or an asterisk (*)
- `ncm` - 0-255, `c`, or an asterisk (*)
- `zone` - 0-7, `c`, or an asterisk (*)
- `area` - 0-255, `c`, or an asterisk (*)
- `id` - 0-7, `c`, or an asterisk (*)
- `npc` - 1 - 16383, `c`, or an asterisk (*)
- `msa` - 0-255, `c`, or an asterisk (*)
- `ssa` - 0-255, `c`, or an asterisk (*)

- sp - 0-255, c, or an asterisk (*)

A range of values can be specified for the ni, nc, and ncm parameters. See the *“Specifying a Range of Values”* on page 243 section for more information on how the asterisk and a range of values are used for the ni, nc, and ncm parameters.

To add a spare point code to the blocked DPC screen, the pcst=s parameter must be specified. To add a non-spare point code to the blocked DPC screen, the pcst parameter does not have to be specified. If the pcst parameter is specified for a screen containing an ITU-I or 14-bit ITU-N non-spare point code, the value must be none. The pcst parameter cannot be used with the zone=c or npc=c parameters.

For this example, enter these commands.

```
ent-scr-blkdpc:sr=gws9:ni=c:nc=c:ncm=c:nsfi=cgpa:nsr=gw13
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0
ENT-SCR-BLKDPC: SCREEN SET AFFECTED - GWS9 1% FULL
ENT-SCR-BLKDPC: MASP A - COMPLTD
```

```
ent-scr-blkdpc:sr=gws9:ni=005:nc=005:ncm=005:nsfi=fail
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0
ENT-SCR-BLKDPC: SCREEN SET AFFECTED - GWS9 1% FULL
ENT-SCR-BLKDPC: MASP A - COMPLTD
```

```
ent-scr-blkdpc:sr=gw12:ni=c:nc=c:ncm=c:nsfi=cgpa:nsr=gw14
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
ENT-SCR-BLKDPC: SCREEN SET AFFECTED - GW12 1% FULL
ENT-SCR-BLKDPC: MASP A - COMPLTD
```

```
ent-scr-blkdpc:sr=gw12:ni=004:nc=004:ncm=004:nsfi=fail
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:31:30 GMT EAGLE5 36.0.0
ENT-SCR-BLKDPC: SCREEN SET AFFECTED - GW12 1% FULL
ENT-SCR-BLKDPC: MASP A - COMPLTD
```

8. Verify the changes using the rtrv-scr-blkdpc command with the screening reference name used in step 7. For this example, enter these commands.

```
rtrv-scr-blkdpc:sr=gws9
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:32:30 GMT EAGLE5 36.0.0
SCREEN = BLOCKED DPC
SR  NI      NC      NCM      NSFI     NSR/ACT
GWS9 C        C        C        CGPA     GW13
GWS9 005     005     005     FAIL     -----
```

```
rtrv-scr-blkdpc:sr=gw12
```

The following is an example of the possible output.


```
rlghncxa03w 06-10-25 15:33:30 GMT EAGLE5 36.0.0
SCREEN = BLOCKED DPC
SR      NI      NC      NCM      NSFI      NSR/ACT
GW12   C        C        C        CGPA      GW14
GW12   004      004      004      FAIL      -----
```


9. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 46: Adding a Blocked DPC Screen

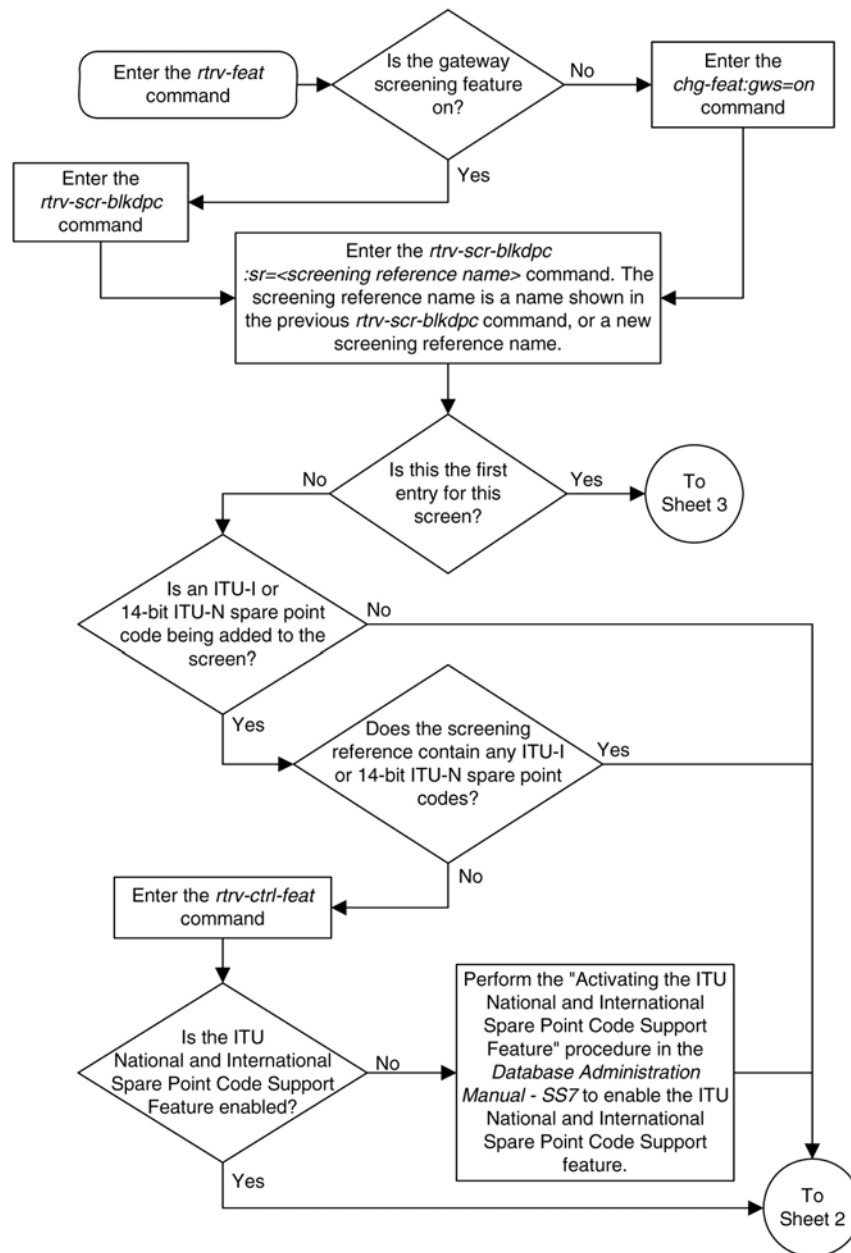

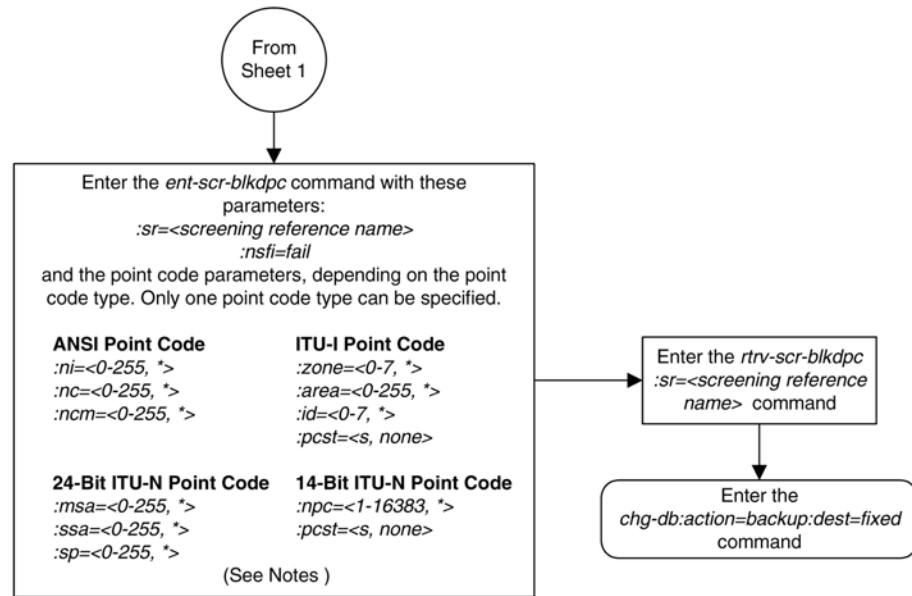



Notes:


1. A range of values can be specified for the *ni*, *nc*, or *ncm* parameters by inserting double ampersands (&&) between the parameter values defining the range. For example, to specify the range 025 to 200 for the *ni* parameter, enter 025&&200 for the *ni* parameter value.
2. The asterisk (*) specifies the entire range of values for that parameter.

For more information about specifying a range of values and about using the asterisk, see the "Gateway Screening Attributes" section in Chapter 2 and the "Specifying a Range of Values" section in this procedure.

3. To add a non-spare point code, the *pcst* parameter does not have to be specified. If the *pcst* parameter is specified for a screen containing an ITU-I or 14-bit ITU-N non-spare point code, the value must be *none*.
4. To add a spare point code, the *pcst=s* parameter must be specified.

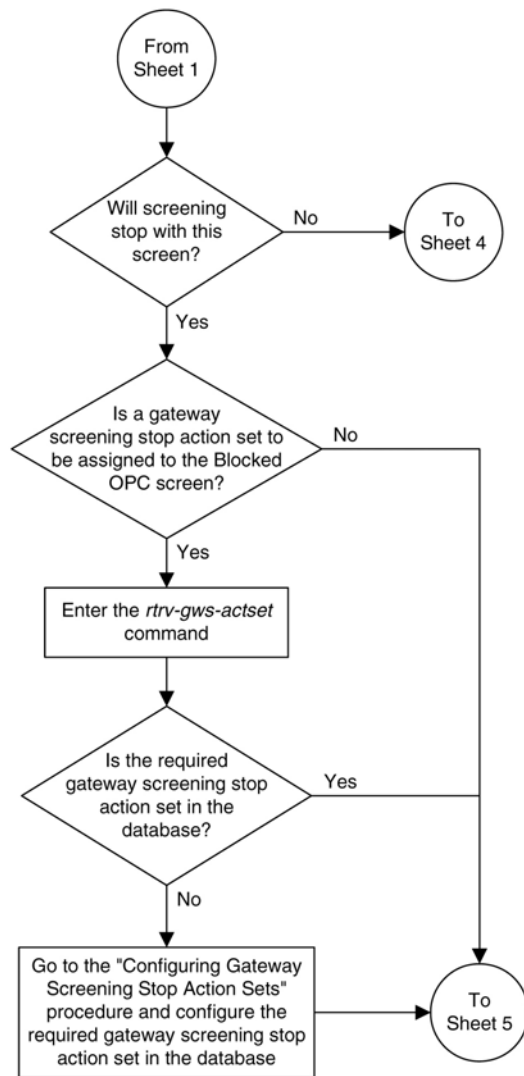

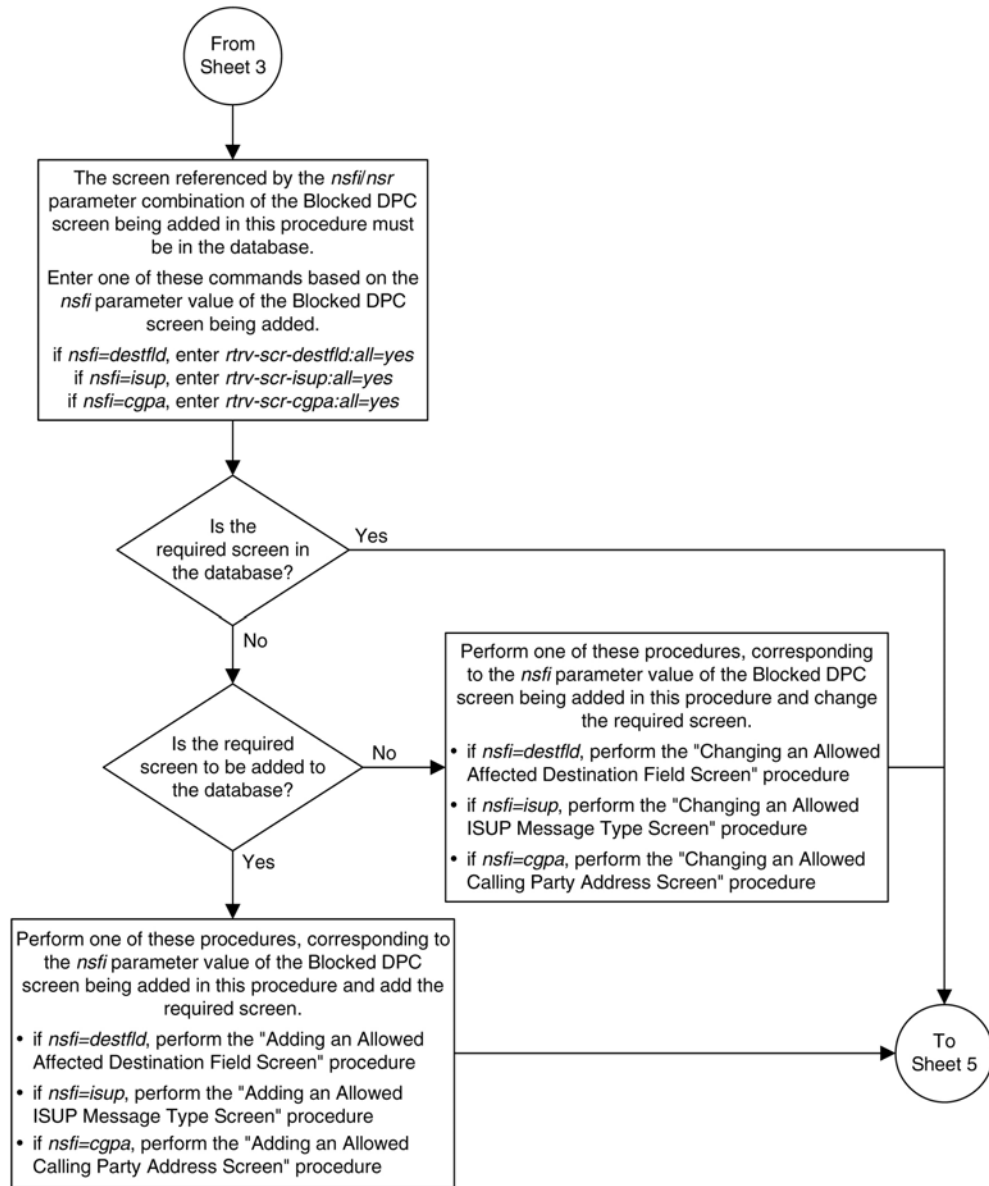

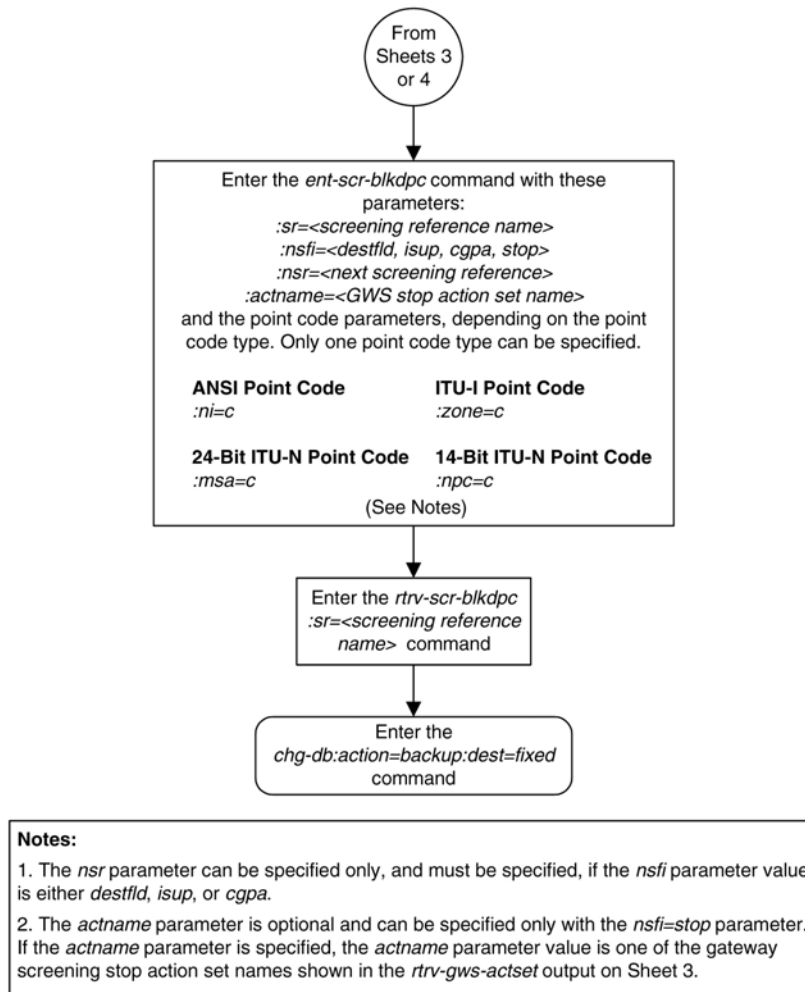

Removing a Blocked DPC Screen

This procedure is used to remove a blocked destination point code (DPC) screen from the database using the *dlt-scr-blkdpc* command. The parameters used by the *dlt-scr-blkdpc* command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure removes the blocked DPC screen *iec* with the point code 240-001-010 from the database.

Note: If you using multiple-part ITU national point codes with gateway screening, see the [14-Bit ITU National Point Code Formats](#) on page 34 section.

The *c-c-c* entry cannot be removed from the blocked DPC screen unless all other entries in the blocked DPC screen have been removed. The *c-c-c* entry cannot be removed from the blocked DPC screen if other screens reference the blocked DPC screen. If the last entry (*c-c-c*) in the blocked

DPC screen is removed, the blocked DPC screen is removed. The blocked DPC screen can be referenced by one of the following screens.

- Screen Set
- Allowed OPC
- Blocked OPC
- Allowed SIO
- Allowed DPC

Verifying the Gateway Screening Configuration

Enter the following commands to verify that none of these screens reference the blocked DPC screen being removed from the database.

- `rtrv-scrset:nsfi=blkdpc`
- `rtrv-scr-opc:nsfi=blkdpc`
- `rtrv-scr-blkopc:nsfi=blkdpc`
- `rtrv-scr-sio:nsfi=blkdpc`
- `rtrv-scr-dpc:nsfi=blkdpc`

Gateway Screening Configuration Procedures

To change the NSFI of any of these screens, perform one of these procedures.

- [Changing a Screen Set](#) on page 409
- [Changing an Allowed OPC Screen](#) on page 386
- [Changing a Blocked OPC Screen](#) on page 353
- [Changing an Allowed SIO Screen](#) on page 323
- [Changing an Allowed DPC Screen](#) on page 292

1. Display the blocked DPC screens in the database using the `rtrv-scr-blkdpc` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = BLOCKED DPC

SR    REF  RULES
IEC   YES   6
WRD2  YES   1
WRD3  NO    4
WRD4  YES   9
```

From the `rtrv-scr-blkdpc` output, display the blocked DPC screen you wish to remove using the `rtrv-scr-blkdpc` command with the screening reference name. For this example, enter this command.

```
rtrv-scr-blkdpc:sr=iec
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = BLOCKED DPC

SR    NI    NC    NCM    NSFI    NSR/ACT
IEC   240    001   010   FAIL    -----
IEC   241    010   *     FAIL    -----
SR    NPC
IEC   00235    FAIL    NSR/ACT
```

SR	ZONE	AREA	ID	NSFI	NSR/ACT
IEC	1	003	4	FAIL	-----
IEC	1	003	5	FAIL	-----
IEC	C	C	C	CGPA	cg01

2. Enter the commands in the [Verifying the Gateway Screening Configuration](#) on page 255 section to verify that the screen being removed is not referenced by other screens in the database.

If the screen being removed is referenced by other screens, perform the procedures shown in the [Gateway Screening Configuration Procedures](#) on page 255 section to change the NSFI of those screens to reference other screens or change the NSFI of these screens to STOP.

3. Remove the blocked DPC screen from the database using the `dlt-scr-blkdpc` command with the screening reference name shown in the `rtrv-scr-blkdpc` output in step 1 and with the point code parameter values (`ni`, `nc`, `ncm`, or `zone`, `area`, `id`, `npc`, `msa`, `ssa`, or `sp`) of the screen being removed from the database. The values for these parameters must be entered exactly as shown in the `rtrv-scr-blkdpc` output.

To remove an entry containing either an ITU-I or a 14-bit ITU-N spare point code, the `pcst=s` parameter must be specified with the `dlt-scr-blkdpc` command.

To remove an entry containing either an ITU-I or a 14-bit ITU-N non-spare point code, the `pcst` parameter does not have to be specified with the `dlt-scr-blkdpc` command. If the `pcst` parameter is specified, the value must be `none`.

The `pcst` parameter cannot be used with the `zone=c` or the `npc=c` parameters.

For this example, enter this command.

```
dlt-scr-blkdpc:sr=iec:ni=240:nc=001:ncm=010
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
DLT-SCR-BLKDPC: SCREEN SET AFFECTED - IEC 25% FULL
DLT-SCR-BLKDPC: MASP A - COMPLTD
```

4. Verify the changes using the `rtrv-scr-blkdpc` command with the screening reference name used in step 3.

For this example, enter this command.

```
rtrv-scr-blkdpc:sr=iec
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
SCREEN = BLOCKED DPC
SR      NI      NC      NCM      NSFI      NSR/ACT
IEC     241     010     *        FAIL      -----

SR      NPC
IEC     00235
NSFI    FAIL      NSR/ACT
-----

SR      ZONE  AREA  ID      NSFI      NSR/ACT
IEC     1      003   4       FAIL      -----
```

IEC	1	003	5	FAIL	-----
IEC	C	C	C	CGPA	cg01

If the screen removed in step 3 was the last screen contained in the specified screening reference, the screening reference is removed from the database. The following message is displayed.


```
E2573 Cmd Rej: SR or NSR does not reference an existing SR
```


5. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 47: Removing a Blocked DPC Screen

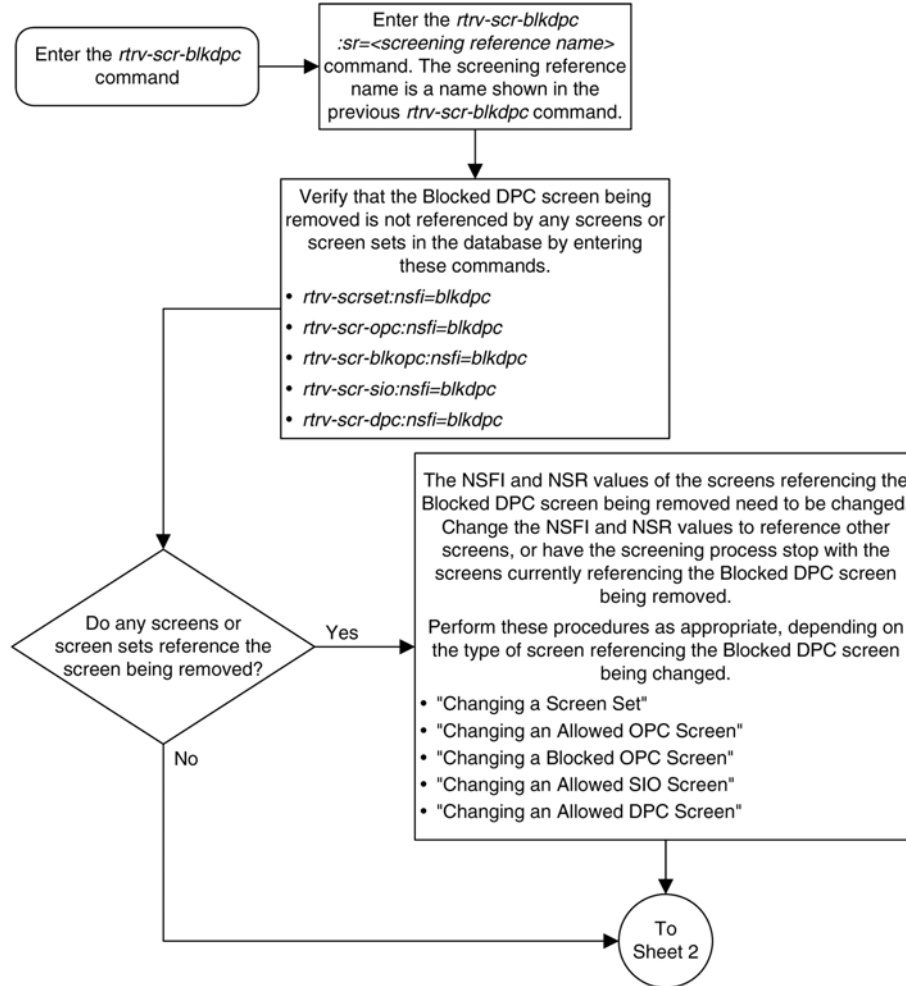

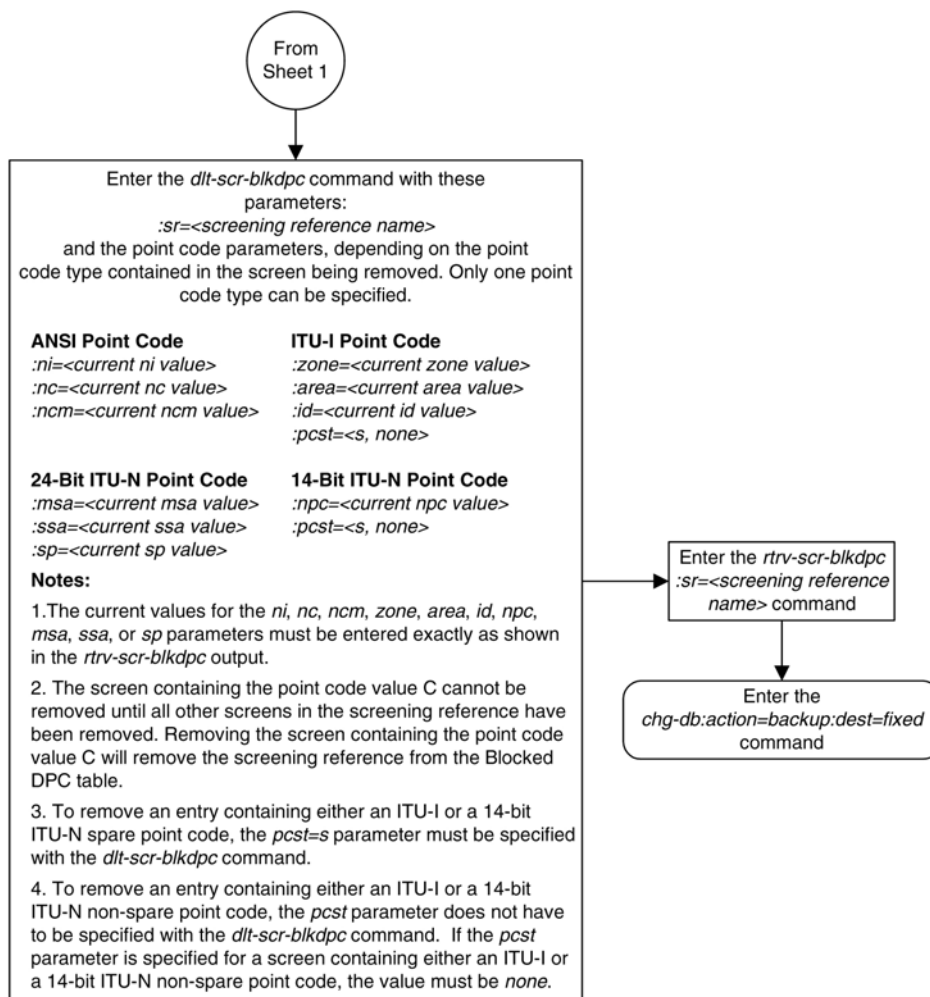

Changing a Blocked DPC Screen

This procedure is used to change the attributes of a blocked destination point code (DPC) screen in the database using the *chg-scr-blkdpcc* command. The parameters used by the *chg-scr-blkdpcc* command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure is used to change the point code 003-003-003 for the blocked DPC screen gw12 to 230-230-230.

Note: If you using multiple-part ITU national point codes with gateway screening, see the [14-Bit ITU National Point Code Formats](#) on page 34 section.

If the current *ni*, *nc*, and *ncm* are equal to the character " c ", only the next screening function identifier and next screening reference can be changed. The next screening function identifier

cannot be equal to `fail`. If the next screening function identifier is not equal to `stop`, the next screening reference must be specified. Otherwise, only the blocked DPC can be changed.

The blocked DPC screen can reference one of the following screens.

- Allowed Affected Destination Field
- Allowed CGPA
- Allowed ISUP

Verifying the Gateway Screening Configuration

Enter the following commands to verify that these screens are in the database.

- `rtrv-scr-destfld:all=yes`
- `rtrv-scr-cgpa:all=yes`
- `rtrv-scr-isup:all=yes`

Gateway Screening Configuration Procedures

If the desired screen is not in the database, perform one of these procedures to add the desired screen to the database or change an existing screen in the database.

- [Adding an Allowed Affected Destination Field Screen](#) on page 216
- [Adding an Allowed Calling Party Address Screen](#) on page 184
- [Adding an Allowed ISUP Message Type Screen](#) on page 441
- [Changing an Allowed Affected Destination Field Screen](#) on page 227
- [Changing an Allowed Calling Party Address Screen](#) on page 198
- [Changing an Allowed ISUP Message Type Screen](#) on page 450

If the NSFI is `stop`, the screening of the message will stop at the specified blocked DPC screen. If the NSFI is either `cgpa`, `destfld`, or `isup`, then any message containing a point code that is not listed in the blocked DPC screen with a NSFI equal to `fail`, will continue to be screened with either the allowed CGPA, allowed DESTFLD, or allowed ISUP screen. All subsequent entries for that screening reference must contain a numeric point code value, the NSFI must be equal to `fail`, and the `nsr` parameter cannot be specified. Any message that contains a DPC in the blocked DPC screen with the NSFI equal to `fail` will be rejected from the network and the screening process is stopped.

The `pcst` or `npcst` parameters, specifying whether or not the ITU-I or 14-bit ITU-N point code is a spare point code, cannot be used with the `zone=c` or `npc=c` parameters.

Specifying a Range of Values

A range of values can be specified for the point code parameters `ni`, `nc`, or `ncm`.

If a range of values is specified for any of these parameters, and the value of the other parameters match existing values for the screening reference name, the range of values for the point code parameter cannot include any values for that parameter that are currently provisioned for the screening reference name.

For example, screening reference name `scr1` contains these entries:

SR	NI	NC	NCM	NSFI	NSR/ACT
SCR1	C	C	C	CGPA	cg01

```
SCR1 240 001 010 FAIL -----
SCR1 241 010 020 FAIL -----
```

Another entry for screening reference `scr1` with the `ni` value of 240 and the `nc` value of 001 cannot be specified if the range of values for the `ncm` parameter includes the value 010.

The ANSI point code parameter values can be specified as a single value, a range of values, or with an asterisk (*). The asterisk specifies all possible values for the `ni`, `nc`, and `ncm` parameters. [Table 51: Valid Value Combinations for ANSI Point Code Parameters](#) on page 260 shows the valid combinations of these parameter values.

Table 51: Valid Value Combinations for ANSI Point Code Parameters

NI	NC	NCM
Single Value	Single Value	Single Value
Single Value	Single Value	Range of Values
Single Value	Single Value	Asterisk
Single Value	Range of Values	Asterisk
Single Value	Asterisk	Asterisk
Range of Values	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

A range of values can also be specified for an ITU-I or 24-bit ITU-N point code parameter using a combination of asterisks (*) and single values for the point code parameters. [Table 52: Valid Value Combinations for ITU-I Point Code Parameters](#) on page 260 shows the valid combinations of the ITU-I parameter values. [Table 53: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters](#) on page 261 shows the valid combinations of the 24-bit ITU-N parameter values.

Table 52: Valid Value Combinations for ITU-I Point Code Parameters

ZONE	AREA	ID
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

Table 53: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters

MSA	SSA	SP
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

1. Display the blocked DPC screens in the database using the `rtrv-scr-blkdpc` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = BLOCKED DPC
SR   REF  RULES
GW12 YES   2
IEC  YES   6
WRD2 YES   1
WRD3 NO    4
WRD4 YES   9
```

From the `rtrv-scr-blkdpc` output, display the blocked DPC screen you wish to change using the `rtrv-scr-blkdpc` command with the screening reference name. For this example, enter this command.

```
rtrv-scr-blkdpc:sr=gw12
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = BLOCKED DPC
SR   NI      NC      NCM      NSFI      NSR/ACT
GW12 C        C        C        CGPA      GW14
GW12 003      003      003      FAIL      -----
```

If a gateway screening stop action set is to be assigned to the blocked DPC screen being changed in the database, go to step 2.

Step 2 verifies the gateway screening stop action set names in the database. The gateway screening stop action set names are assigned only if the NSFI of the screen being changed in this procedure is STOP. If the NSFI of the screen will be changed to STOP, but a gateway screening stop action set name will not be assigned to the screen, skip steps 2 and 3 and go to step 4. If the NSFI of the screen will not be STOP, skip step 2 and go to step 3.

2. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
ACT ACT  ACT ACT  ACT ACT  ACT ACT  ACT ACT  ACT ACT
ID  NAME  1    2    3    4    5    6    7    8    9    10
```

```

-----
1  copy  copy
2  rdct  rdct
3  cr    copy rdct
4  cnf   cnf
5  cpcnf copy cnf
6  cnf   rdct
7  cpcnf copy cnf rdct

GWS action set table is (7 of 16) 44% full

```

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to configure the required gateway screening stop action set.

Note: If the NSFI of the screen being changed in this procedure will be STOP or FAIL, or if the NSFI of the screen is not being changed, skip step 3 and go to step 4.

3. Enter the commands in the [Verifying the Gateway Screening Configuration](#) on page 259 section to verify that the screen that will be specified by the NSFI/NSR parameter combination in step 5 is in the database.

If the desired screen is not in the database, go to one of the procedures shown in the [Gateway Screening Configuration Procedures](#) on page 259 section to add the desired screen to the database or change an existing screen in the database.

Note: If any of these conditions apply to this procedure, skip this step and go to step 5:

- The point code in the screen is not being changed.
- The screen being changed contains either an ANSI or 24-bit ITU-N point code.
- The ITU-I or 14-bit ITU-N non-spare point code in the screen is not being changed to an ITU-I or 14-bit ITU-N spare point code.
- The point code in the screen is an ITU-I or 14-bit ITU-N spare point code or the screening reference contains other screens with ITU-I or 14-bit ITU-N spare point codes.

4. Display the status of the ITU National and International Spare Point Code Support feature by entering the `rtrv-ctrl-feat` command with the ITU National and International Spare Point Code Support feature part number.

Enter this command.

```
rtrv-ctrl-feat:partnum=893013601
```

This is an example of the possible output.

```

rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name          Partnum  Status  Quantity
Spare Point Code Support  893013601 on      ----

The following features have been temporarily enabled:

Feature Name          Partnum  Status  Quantity  Trial Period Left
Zero entries found.

The following features have expired temporary keys:

```

Feature Name	Partnum
Zero entries found.	

If the ITU National and International Spare Point Code Support feature is enabled, go to step 5.

If the ITU National and International Spare Point Code Support feature is not enabled, perform the “Activating the ITU National and International Spare Point Code Support Feature” procedure in the *Database Administration Manual - SS7* to enable the ITU National and International Spare Point Code Support feature as required. After the feature has been enabled, go to step 5.

5. Change the attributes of a blocked DPC screen using the `chg-scr-blkdpc` command.

If a gateway screening stop action is to be assigned to the blocked DPC screen being changed, enter the `chg-scr-blkdpc` command with the `nsfi=stop` parameter and the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 2.

The current values for the `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `npc`, `msa`, `ssa`, and `sp` parameters must be entered exactly as shown in the `rtrv-scr-blkdpc` output in step 1.

The following list contains the values for the `nni`, `nnc`, `nncm`, `nzone`, `narea`, `nid`, `nnpc`, `nmsa`, `nssa`, and `nsp` parameters:

- `nni` – 0 - 255, c, or an asterisk (*)
- `nnc` – 0 - 255, c, or an asterisk (*)
- `nncm` – 0 - 255, c, or an asterisk (*)
- `nzone` – 0 - 7, c, or an asterisk (*)
- `narea` – 0 - 255, c, or an asterisk (*)
- `nid` – 0 - 7, c, or an asterisk (*)
- `nnpc` – 1 - 16383, c, or an asterisk (*)
- `nmsa` – 0 - 255, c, or an asterisk (*)
- `nssa` – 0 - 255, c, or an asterisk (*)
- `nsp` – 0 - 255, c, or an asterisk (*)

A range of values can be specified for the `nni`, `nnc`, and `nncm` parameters. See the “[Specifying a Range of Values](#)” on page 259 section for more information on how the asterisk and a range of values are used for the `nni`, `nnc`, and `nncm` parameters.

To change an ITU-I or 14-bit ITU-N spare point code to a non-spare point code, both the `pcst=s` and `npcst=none` parameters must be specified with the `chg-scr-blkdpc` command.

To change an ITU-I or 14-bit ITU-N non-spare point code to a spare point code, the `npcst=s` parameter must be specified with the `chg-scr-blkdpc` command. The `pcst` parameter does not have to be specified.

If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N spare point code, the `pcst=s` parameter must be specified with the `chg-scr-blkdpc` command.

If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N non-spare point code, the `pcst` parameter does not have to be specified with the `chg-scr-blkdpc` command. If the `pcst` parameter is specified for a screen containing either an ITU-I or 14-bit ITU-N non-spare point code, the `pcst` parameter value must be `none`.

The `pcst` or `npcst` parameters cannot be used with the `zone=c` or `npc=c` parameters.

For this example, enter this command.

```
chg-scr-blkdpc:sr=gw12:ni=003:nc=003:ncm=003:nni=230:nnc=230 :nncm=230
```

The following messages appear.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0  
CHG-SCR-BLKDPC: SCREEN SET AFFECTED - GW12 1% FULL  
CHG-SCR-BLKDPC: MASP A - COMPLTD
```

6. Verify the changes using the `rtrv-scr-blkdpc` command with the screening reference name used in step 5.

For this example, enter this command.

```
rtrv-scr-blkdpc:sr=gw12
```

The following is an example of the possible output.


```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0  
SCREEN = BLOCKED DPC  
SR    NI      NC      NCM      NSF1     NSR/ACT  
GW12  C        C        C        CGPA     GW14  
GW12  230      230     230     FAIL     -----
```

7. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.  
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.  
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.  
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 48: Changing a Blocked DPC Screen

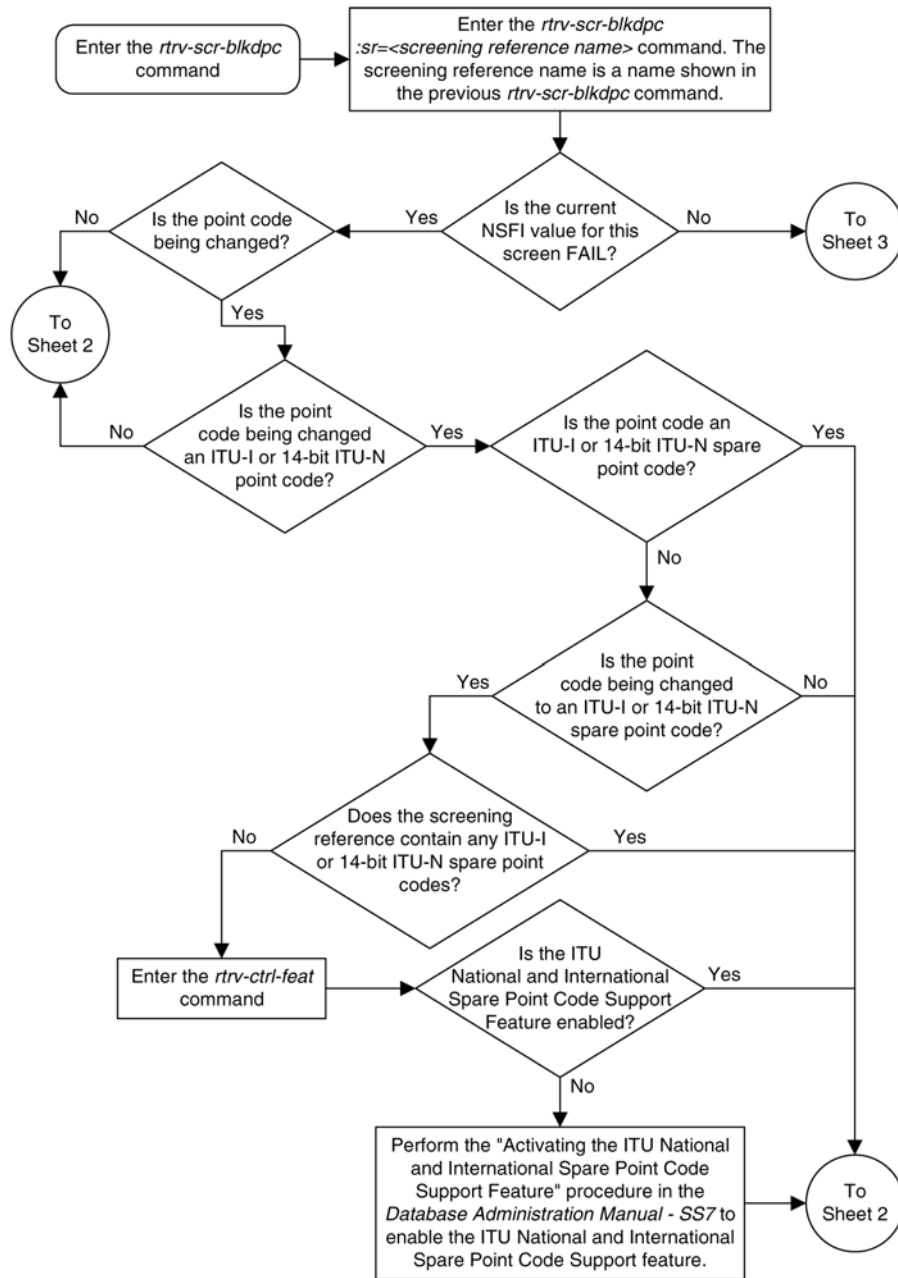



Enter the *chg-scr-blkdpc* command with this mandatory parameter:
:sr=<screening reference name>
 and the point code parameters, depending on the point code type contained in the screen being changed. Only one point code type can be specified.

ANSI Point Code	ITU-I Point Code	14-Bit ITU-N Point Code	24-Bit ITU-N Point Code
<i>:ni=<current ni value></i>	<i>:zone=<current zone value></i>	<i>:npc=<current npc value></i>	<i>:msa=<current msa value></i>
<i>:nc=<current nc value></i>	<i>:area=<current area value></i>	<i>:pcst=<s, none></i>	<i>:ssa=<current ssa value></i>
<i>:ncm=<current ncm value></i>	<i>:id=<current id value></i>		<i>:sp=<current sp value></i>
	<i>:pcst=<s, none></i>		

At least one of these optional point code parameters must be specified with the *chg-scr-blkdpc* command.

ANSI Point Code	ITU-I Point Code	14-Bit ITU-N Point Code	24-Bit ITU-N Point Code
<i>:nni=<0-255, *></i>	<i>:nzone=<0-7, *></i>	<i>:nnpc=<1-16383, *></i>	<i>:nmsa=<0-255, *></i>
<i>:nnc=<0-255, *></i>	<i>:narea=<0-255, *></i>	<i>:npcst=<s, none></i>	<i>:nssa=<0-255, *></i>
<i>:nncm=<0-255, *></i>	<i>:nid=<0-7, *></i>		<i>:nsp=<0-255, *></i>
	<i>:npcst=<s, none></i>		

The new point code code parameters must be of the same type as the current point code values specified in the *chg-scr-blkdpc* command
 (See Notes)

Enter the *rtrv-scr-blkdpc*
:sr=<screening reference name> command


Enter the *chg-db:action=backup:dest=fixed*
 command


Notes:


1. A range of values can be specified for the *nni*, *nnc*, or *nncm* parameters by inserting double ampersands (&&) between the parameter values defining the range. For example, to specify the range 025 to 200 for the *nni* parameter, enter 025&&200 for the *nni* parameter value.
2. The current values for the *ni*, *nc*, *ncm*, *zone*, *area*, *id*, *npc*, *msa*, *ssa*, or *sp* parameters must be entered exactly as shown in the *rtrv-scr-blkdpc* output. The current point code value cannot be C.
3. The asterisk (*) specifies the entire range of values for that parameter.

For more information about specifying a range of values and about using the asterisk, see the "Gateway Screening Attributes" section in Chapter 2 and the "Specifying a Range of Values" section in this procedure.

4. To change an ITU-I or 14-bit ITU-N spare point code to a non-spare point code, both the *pcst=s* and *npcst=none* parameters must be specified with the *chg-scr-blkdpc* command.
5. To change an ITU-I or 14-bit ITU-N non-spare point code to a spare point code, the *npcst=s* parameter must be specified with the *chg-scr-blkdpc* command. The *pcst* parameter does not have to be specified.
6. If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N spare point code, the *pcst=s* parameter must be specified with the *chg-scr-blkdpc* command.
7. If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N non-spare point code, the *pcst* parameter does not have to be specified with the *chg-scr-blkdpc* command. If the *pcst* parameter is specified for a screen containing either an ITU-I or 14-bit ITU-N non-spare point code, the *pcst* parameter value must be *none*.

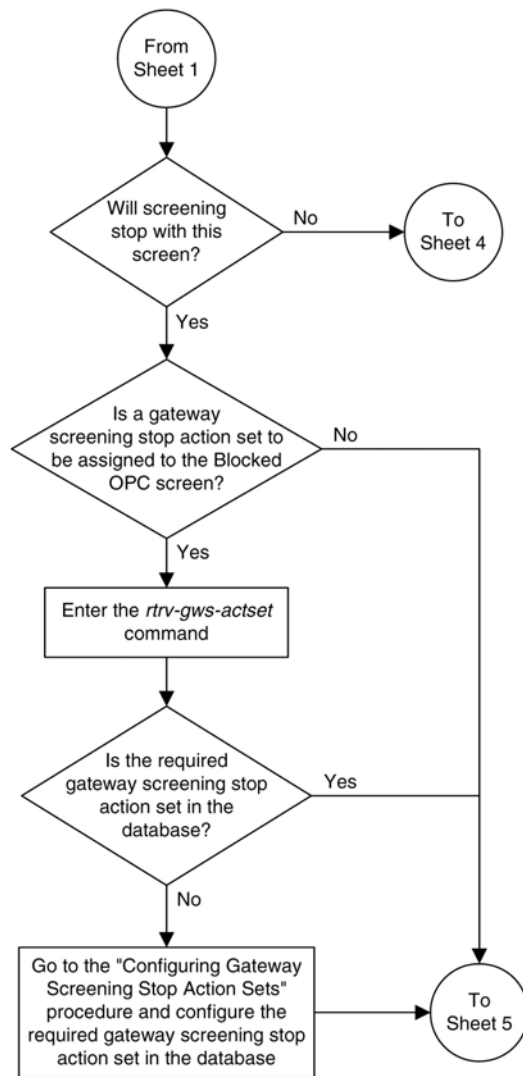

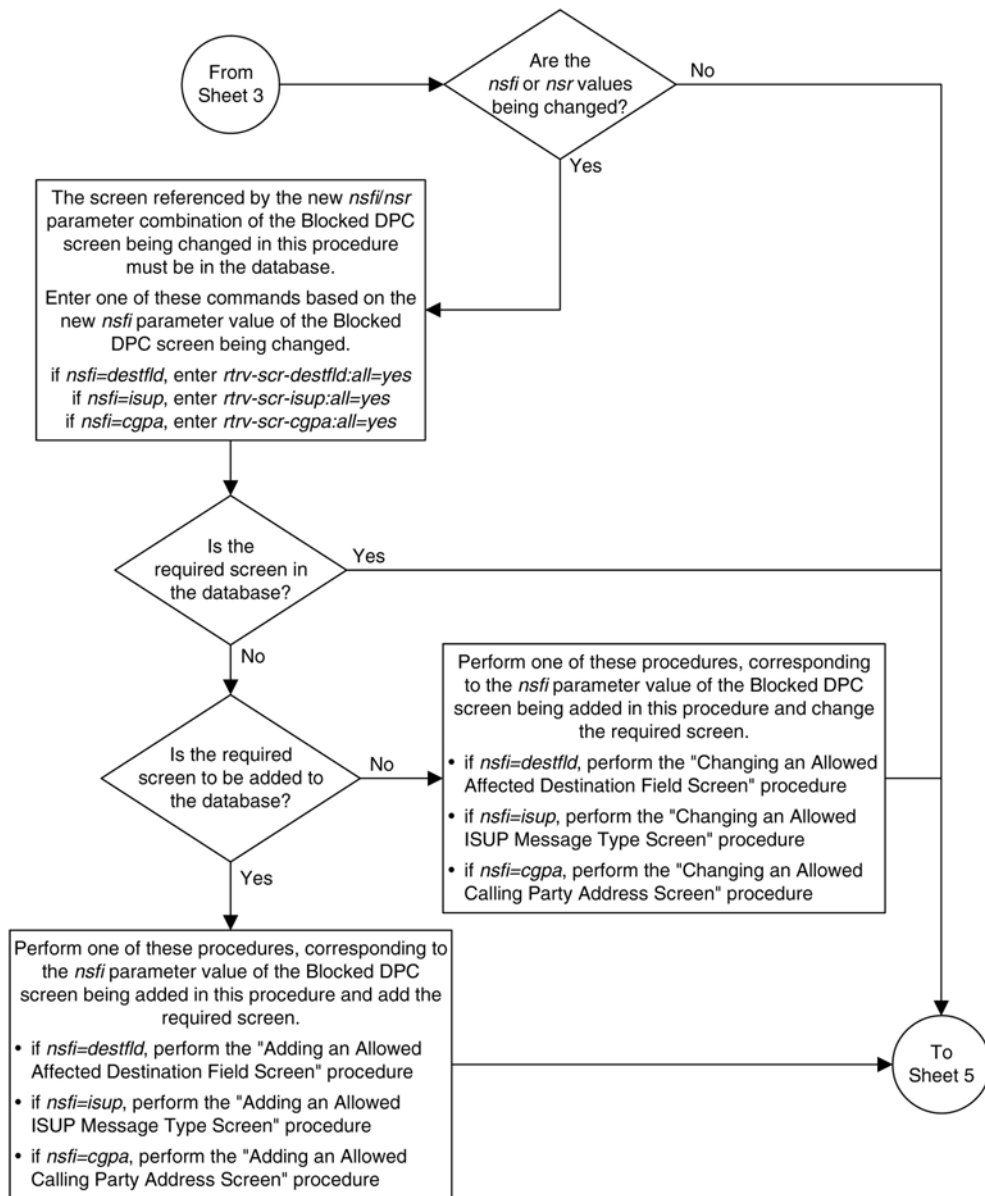

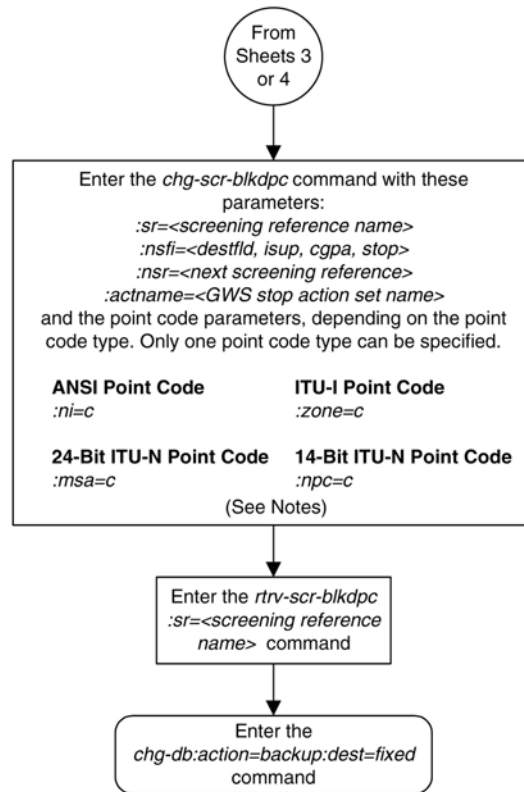

Notes:

1. The *nsr* parameter can be specified only, and must be specified, if the *nsfi* parameter value is either *destfld*, *isup*, or *cgpa*.
2. The *actname* parameter is optional and can be specified only with the *nsfi=stop* parameter. If the *actname* parameter is specified, the *actname* parameter value is one of the gateway screening stop action set names shown in the *rtv-gws-actset* output on Sheet 3.

Chapter

9

Allowed Destination Point Code (DPC) Screen Configuration

Topics:

- [Introduction Page 272](#)
- [Adding an Allowed DPC Screen Page 276](#)
- [Removing an Allowed DPC Screen Page 289](#)
- [Changing an Allowed DPC Screen Page 292](#)

Chapter 9, Allowed Destination Point Code (DPC) Screen Configuration, contains the procedures necessary to configure allowed destination point code screens.

Introduction

The allowed destination point code (DPC) screen identifies a set of DPC's that are allowed to receive SS7 messages from another network. The gray shaded areas in [Figure 50: Allowed DPC Screening Functions](#) on page 275 shows the fields of the SS7 message that are checked by the allowed DPC screening function.

Gateway Screening Actions

If a match is not found, the message is discarded.

If a match is found, the `nsfi` is examined to determine the next step in the screening process. If the `nsfi` value is any value other than `stop`, the next screening reference (`nsr`) is identified and the screening process continues to the next screen identified by the `nsfi` and `nsr` parameter values.


If the `nsfi` is equal to `stop`, the screening process stops and the message is processed. If a gateway screening stop action set is specified with the screen, shown by the `actname` parameter value, the message is processed according to the gateway screening stop actions that are assigned to the gateway screening stop action set.


- If the `copy` gateway screening stop action is specified, the message is processed and a copy of the message is sent by the STPLAN feature to an external application.
- If the `rdct` (redirect) gateway screening stop action is specified, the message is diverted from the original destination and sent to another destination with the Database Transport Access feature, specified by global title translation, for further processing.
- If the `cncf` gateway screening stop action is specified, the PIP parameter in the incoming ISUP IAM message is converted to the GN parameter. The GN parameter in the incoming ISUP IAM message is converted to the PIP parameter. The message is then sent to the node specified by the DPC in the routing label in the message. For more information on the Calling Name Conversion Facility feature, see [Calling Name Conversion Facility \(CNCF\) Configuration](#) on page 417.
- If the `tlnp` gateway screening stop action is specified, ISUP IAMs that pass gateway screening are processed either by the ISUP NP with EPAP feature (if the ISUP NP with EPAP feature is enabled and turned on) or by the Triggerless LNP feature (if the Triggerless LNP feature is turned on). The ISUP NP with EPAP feature is discussed in more detail in the *Feature Manual - G-Port*. The Triggerless LNP feature is discussed in more detail in the *LNP Feature Activation Guide*.
- If the `tinp` gateway screening stop action is specified, ISUP IAMs that pass gateway screening are intercepted by the Triggerless ISUP based Number Portability (TINP) feature and converted to include the routing number (RN) if the call is to a ported number. The TINP feature is discussed in more detail in the *Feature Manual - G-Port*.
- If the `tif`, `tif2`, or `tif3` gateway screening stop actions are specified, TIF processing is applied to the message.

Allowed DPC Screening Actions

Figure 49: Allowed DPC Screening Actions on page 273 shows the screening actions of the allowed DPC screen.

Figure 49: Allowed DPC Screening Actions

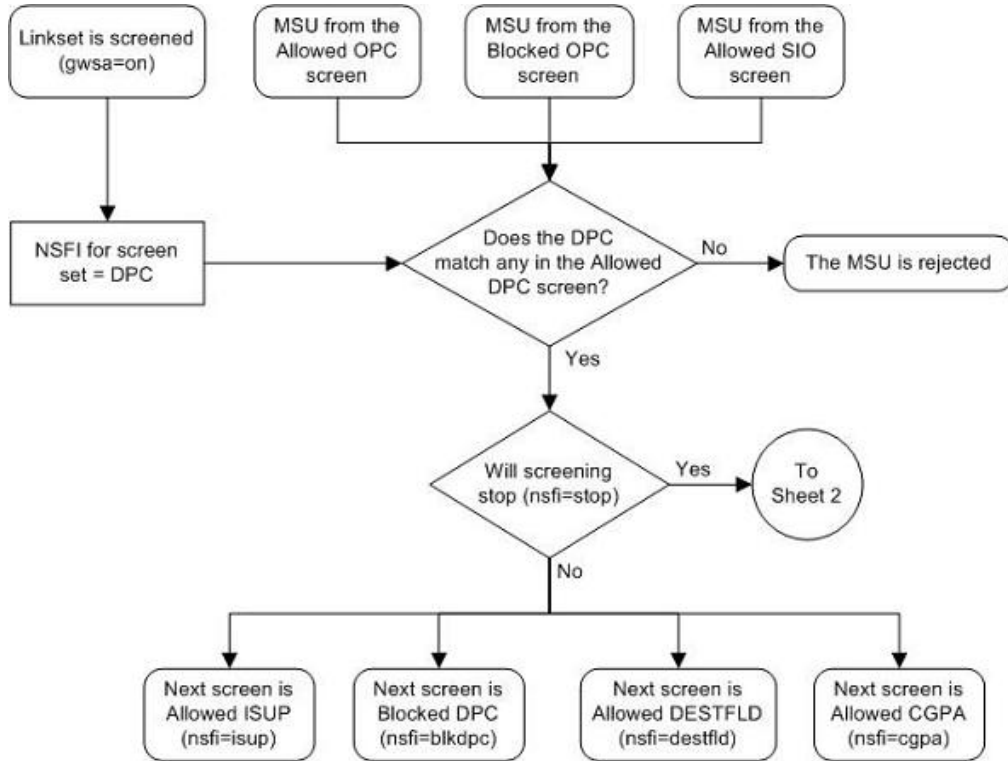

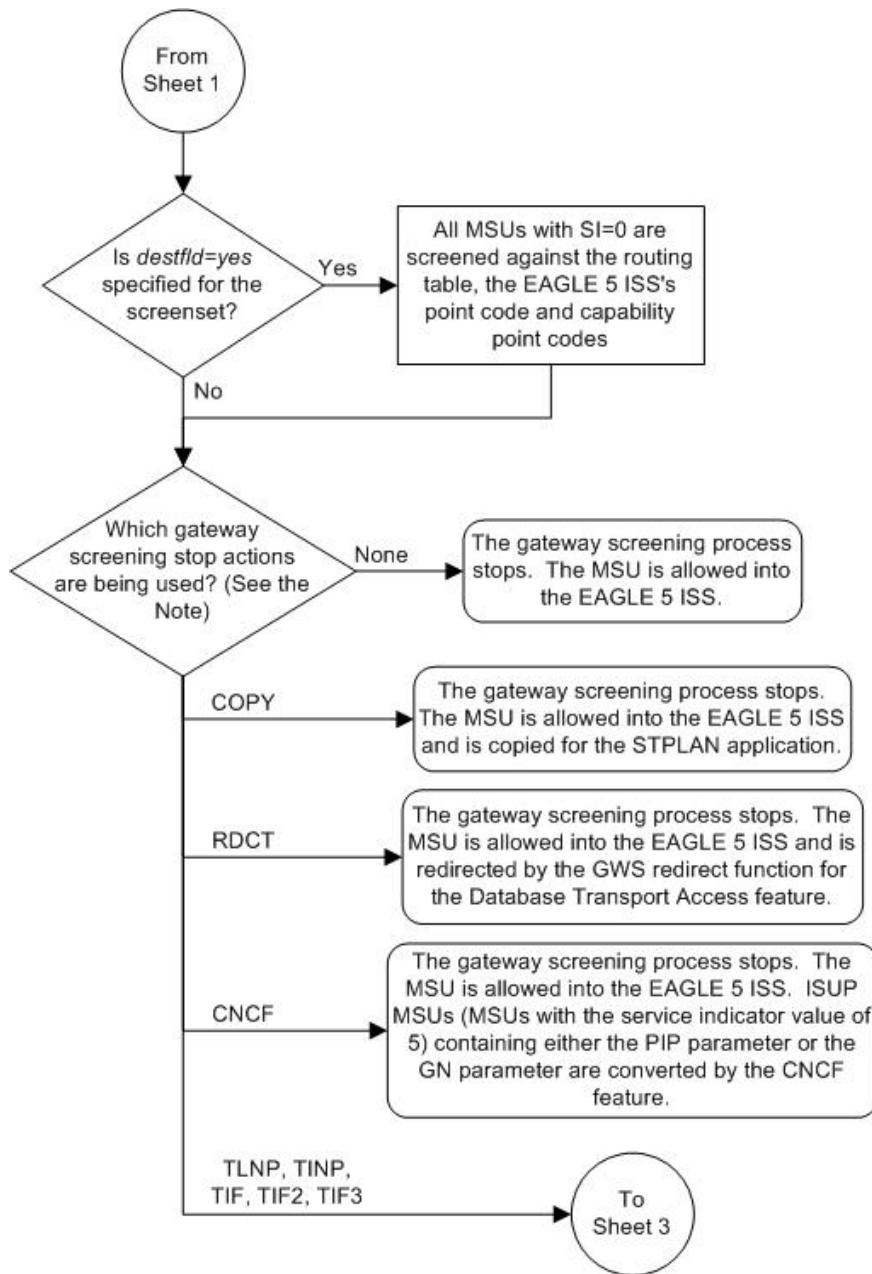

Note: Combinations of the gateway screening stop actions shown on Sheets 2 and 3 may be assigned to a gateway screening stop action set. Refer to the Configuring Gateway Screening Stop Action Sets and the Configuring TLNP Gateway Screening Stop Action Sets procedures in Chapter 2 of this manual for the combinations that can be used.

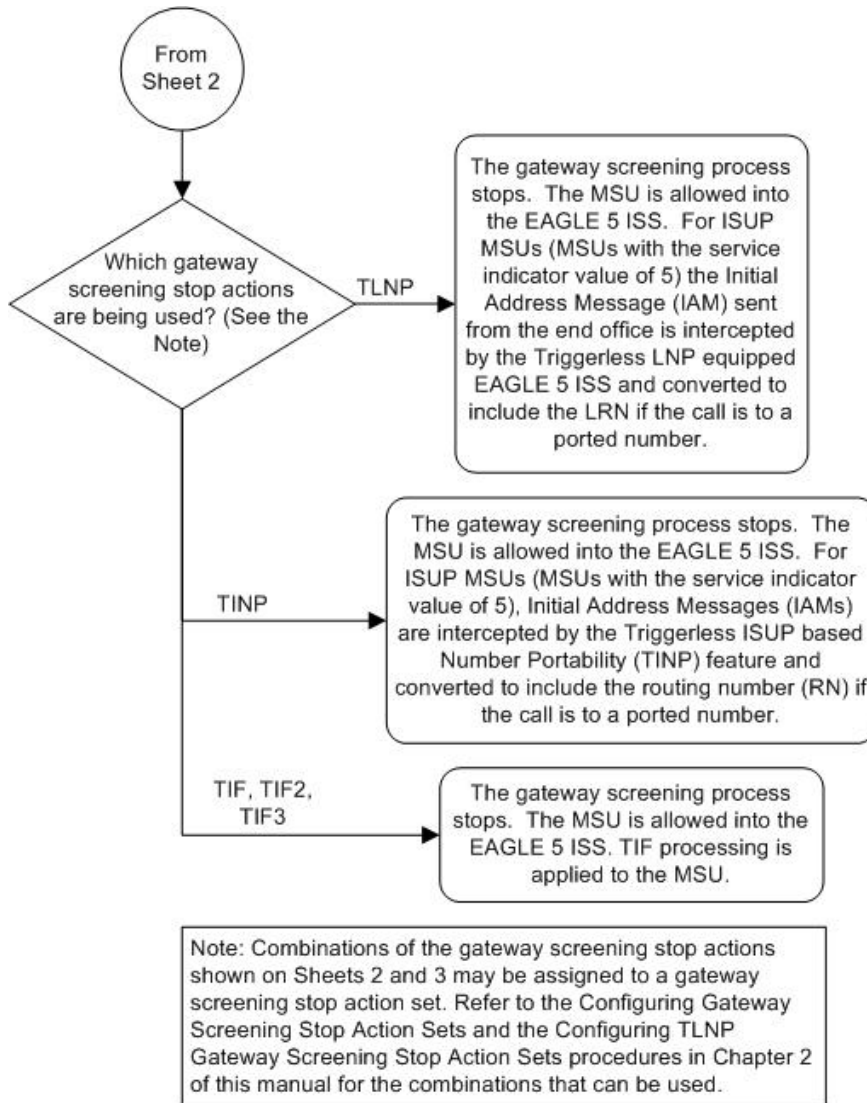


Figure 50: Allowed DPC Screening Functions

ANSI MSU (ANSI Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF		
		DPC NCM NC NI	Routing Label OPC NCM NC NI	SLS xx

ITU-I MSU (ITU International Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF		
		DPC ID AREA ZONE	Routing Label OPC ID AREA ZONE	SLS xx

14-Bit ITU-N MSU (14-Bit ITU National Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF		
		DPC NPC	Routing Label OPC NPC	SLS xx

24-Bit ITU-N MSU (24-Bit ITU National Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF		
		DPC SP SSA MSA	Routing Label OPC SP SSA MSA	SLS xx

Adding an Allowed DPC Screen

This procedure is used to add an allowed destination point code (DPC) screen to the database using the `ent-scr-dpc` command. The parameters used by the `ent-scr-dpc` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The examples in this procedure are used to add the allowed DPC screen data shown in [Table 54: Example Gateway Screening Allowed DPC Configuration Table](#) on page 277 and based on the example configurations shown in [Figure 5: Gateway Screening Configuration - Example 1](#) on page 42, [Figure 7: Gateway Screening Configuration - Example 3](#) on page 46, and [Figure 11: Gateway Screening Configuration - Example 7](#) on page 51.

Table 54: Example Gateway Screening Allowed DPC Configuration Table

Screening Reference	NI	NC	NCM	NSFI	NSR
gws9	003	003	003	blkdpc	gw12
iec	070	070	025&&135	blkdpc	gws9
isp2	073	200	059	isup	isp2
tup1	050	034	049	isup	tup1

Note: If you using multiple-part ITU national point codes with gateway screening, see the [14-Bit ITU National Point Code Formats](#) on page 34 section.

The allowed DPC screen can reference one of the following screens.

- Blocked DPC
- Allowed Affected Destination Field
- Allowed CGPA
- Allowed ISUP

Verifying the Gateway Screening Configuration

Enter the following commands to verify that these screens are in the database.

- `rtrv-scr-blkdpc:all=yes`
- `rtrv-scr-destfld:all=yes`
- `rtrv-scr-cgpa:all=yes`
- `rtrv-scr-isup:all=yes`

Gateway Screening Configuration Procedures

If the desired screen is not in the database, perform one of these procedures to add the desired screen to the database or change an existing screen in the database.

- [Adding a Blocked DPC Screen](#) on page 242
- [Adding an Allowed Affected Destination Field Screen](#) on page 216
- [Adding an Allowed Calling Party Address Screen](#) on page 184
- [Adding an Allowed ISUP Message Type Screen](#) on page 441
- [Changing a Blocked DPC Screen](#) on page 258
- [Changing an Allowed Affected Destination Field Screen](#) on page 227
- [Changing an Allowed Calling Party Address Screen](#) on page 198
- [Changing an Allowed ISUP Message Type Screen](#) on page 450

Specifying a Range of Values

A range of values can be specified for the point code parameters `ni`, `nc`, or `ncm`.

If a range of values is specified for any of these parameters, and the value of the other parameters match existing values for the screening reference name, the range of values for the point code

parameter cannot include any values for that parameter that are currently provisioned for the screening reference name.

For example, screening reference name `scr1` contains these entries:

SR	NI	NC	NCM	NSFI	NSR/ACT
SCR1	240	001	010	CGPA	-----
SCR1	241	010	020	STOP	-----

Another entry for screening reference `scr1` with the `ni` value of 240 and the `nc` value of 001 cannot be specified if the range of values for the `ncm` parameter includes the value 010.

The ANSI point code parameter values can be specified as a single value, a range of values, or with an asterisk (*). The asterisk specifies all possible values for the `ni`, `nc`, and `ncm` parameters. [Table 55: Valid Value Combinations for ANSI Point Code Parameters](#) on page 278 shows the valid combinations of these parameter values.

Table 55: Valid Value Combinations for ANSI Point Code Parameters

NI	NC	NCM
Single Value	Single Value	Single Value
Single Value	Single Value	Range of Values
Single Value	Single Value	Asterisk
Single Value	Range of Values	Asterisk
Single Value	Asterisk	Asterisk
Range of Values	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

A range of values can also be specified for an ITU-I or 24-bit ITU-N point code parameter using a combination of asterisks (*) and single values for the point code parameters. [Table 56: Valid Value Combinations for ITU-I Point Code Parameters](#) on page 278 shows the valid combinations of the ITU-I parameter values. [Table 57: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters](#) on page 279 shows the valid combinations of the 24-bit ITU-N parameter values.

Table 56: Valid Value Combinations for ITU-I Point Code Parameters

ZONE	AREA	ID
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk

ZONE	AREA	ID
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

Table 57: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters

MSA	SSA	SP
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

1. Verify that the gateway screening feature is on, by entering the `rtrv-feat` command.

If the gateway screening feature is on, the `GWS` field is set to `on`.

Note: The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

If the gateway screening feature is on, shown by the entry `GWS = on` in the `rtrv-feat` command output, skip step 2, and go to step 3.

2. Turn the gateway screening feature on by entering this command.

```
chg-feat:gws=on
```

Note: Once the gateway screening feature is turned on with the `chg-feat` command, it cannot be turned off.

Note: The gateway screening feature must be purchased before you turn this feature on with the `chg-feat` command. If you are not sure if you have purchased the gateway screening feature, contact your Tekelec Sales Representative or Account Representative.

When the `chg-feat` has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 11:43:04 GMT EAGLE5 36.0.0
CHG-FEAT: MASP A - COMPLTD
```

3. Display all allowed DPC screens in the database using the `rtrv-scr-dpc` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED DPC
SR     REF  RULES
IEC   YES   6
```

```
WRD2 YES 1
WRD4 YES 9
```

If the screening reference names that you wish to add with this procedure are not shown in the `rtrv-scr-dpc` command output, go to step 2. For this example, the screening reference names are not shown. If these screening reference names are shown in the `rtrv-scr-dpc` command output, make sure the screening data you wish to enter is not already in the database by entering the `rtrv-scr-dpc` command with the screening reference name. For example, enter the `rtrv-scr-dpc:sr=iec` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED DPC
SR NI NC NCM NSFI NSR/ACT
IEC 240 001 010 STOP -----
IEC 241 010 * CGPA cg04
SR NPC NSFI NSR/ACT
IEC 00235 CGPA cg04
IEC 00240 CGPA cg01
SR ZONE AREA ID NSFI NSR/ACT
IEC 1 003 4 BLKDPC blk1
IEC 1 003 5 STOP -----
```

If a gateway screening stop action set is to be assigned to the allowed DPC screen being added to the database, go to step 4.

Step 4 verifies the gateway screening stop action set names in the database. The gateway screening stop action set names are assigned only if the NSFI of the screen being added in this procedure is STOP. If the NSFI of the new screen will be STOP, but a gateway screening stop action set name will not be assigned to the new screen, skip steps 4, 5, and 6 and go to step 7. If the NSFI of the new screen is not STOP, skip step 4 and 5, and go to step 6.

4. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
ACT ACT ACT ACT ACT ACT ACT ACT ACT ACT ACT
ID NAME 1 2 3 4 5 6 7 8 9 10
-----
1 copy copy
2 rdct rdct
3 cr copy rdct
4 cncf cncf
5 cpcncf copy cncf
6 cncfrd cncf rdct
7 cpcf rd copy cncf rdct
GWS action set table is (7 of 16) 44% full
```

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to configure the required gateway screening stop action set.

Note: If the gateway screening stop action set being assigned to the Allowed DPC screen does not contain the redirect stop action, skip step 5 and go to step 6.

5. Verify the EAGLE 5 ISS's point code by entering the `rtrv-sid` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 36.0.0
PCA          PCI          PCN          CLLI          PCTYPE
100-100-100  3-75-7        7-9-8-1     rlghncxa03w  OTHER

CPCA
002-002-002      002-002-003      002-002-004      002-002-005
002-002-006      002-002-007      002-002-008      002-002-009
004-002-001      004-003-003      050-060-070

CPCA (LNP)
005-005-002      005-005-004      005-005-005      006-006-006

CPCI
1-002-1          1-002-2          1-002-3          1-002-4
2-001-1          7-222-7

CPCN
2-0-10-3        2-0-11-0        2-0-11-2        2-0-12-1
2-2-3-3        2-2-4-0        10-14-10-1
```



CAUTION

CAUTION: Redirecting SLTA/SLTM messages prevents SLTA/SLTM messages from being returned to the EAGLE 5 ISS. The signaling link carrying these messages will fail if these messages are not returned to the EAGLE 5 ISS. To prevent SLTA/SLTM messages from being redirected, gateway screening stop action sets containing the redirect stop action should not be assigned to Allowed DPC screens containing the EAGLE 5 ISS's point code.

Note: If the NSFI of the screen being added in this procedure is STOP, skip step 6 and go to step 7.

6. Enter the commands in the [Verifying the Gateway Screening Configuration](#) on page 277 section to verify that the screen that will be specified by the NSFI/NSR parameter combination in step 8 is in the database.

If the desired screen is not in the database, perform one of the procedures shown in the [Gateway Screening Configuration Procedures](#) on page 277 section to add the desired screen to the database or change an existing screen in the database.

Note: If the point code being added in this procedure is not an ITU-I or 14-bit ITU-N spare point code, continue the procedure with step 8.

Note: If the point code being added in this procedure is an ITU-I or 14-bit ITU-N spare point code and the screening reference contains ITU-I or 14-bit ITU-N spare point codes, continue the procedure with step 8.

7. Display the status of the ITU National and International Spare Point Code Support feature by entering the `rtrv-ctrl-feat` command with the ITU National and International Spare Point Code Support feature part number.

Enter this command.

```
rtrv-ctrl-feat:partnum=893013601
```

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
The following features have been permanently enabled:
```

```
Feature Name      Partnum  Status  Quantity
Spare Point Code Support  893013601 on      ----
```

The following features have been temporarily enabled:

```
Feature Name      Partnum  Status  Quantity  Trial Period Left
Zero entries found.
```

The following features have expired temporary keys:

```
Feature Name      Partnum
Zero entries found.
```

If the ITU National and International Spare Point Code Support feature is enabled, go to step 8.

If the ITU National and International Spare Point Code Support feature is not enabled, perform the “Activating the ITU National and International Spare Point Code Support Feature” procedure in the Database *Administration Manual - SS7* to enable the ITU National and International Spare Point Code Support feature as required. After the feature has been enabled, go to step 8.

8. Add a new allowed DPC screen to the database using the `ent-scr-dpc` command.

If a gateway screening stop action is to be assigned to the allowed DPC screen being added, enter the `ent-scr-dpc` command with the `nsfi=stop` parameter and the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 4.



CAUTION

CAUTION: Redirecting SLTA/SLTM messages prevents SLTA/SLTM messages from being returned to the EAGLE 5 ISS. The signaling link carrying these messages will fail if these messages are not returned to the EAGLE 5 ISS. To prevent SLTA/SLTM messages from being redirected, gateway screening stop action sets containing the redirect stop action should not be assigned to Allowed DPC screens containing the EAGLE 5 ISS’s point code, shown in step 5.

The following list contains the values for `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `npc`, `msa`, `ssa`, and `sp` parameters:

- `ni` – 0 - 255 or an asterisk (*)
- `nc` – 0 - 255 or an asterisk (*)
- `ncm` – 0 - 255 or an asterisk (*)
- `zone` – 0 - 7 or an asterisk (*)
- `area` – 0 - 255 or an asterisk (*)
- `id` – 0 - 7 or an asterisk (*)
- `npc` – 1 - 16383 or an asterisk (*)
- `msa` – 0 - 255 or an asterisk (*)
- `ssa` – 0 - 255 or an asterisk (*)
- `sp` – 0 - 255 or an asterisk (*)

A range of values can be specified for the `ni`, `nc`, and `ncm` parameters. See the “[Specifying a Range of Values](#)” on page 277 section for more information on how the asterisk and a range of values are used for the `ni`, `nc`, and `ncm` parameters. To add a spare point code to the allowed DPC screen, the `pcst=s` parameter must be specified.

To add a non-spare point code to the allowed DPC screen, the `pcst` parameter does not have to be specified. If the `pcst` parameter is specified for a screen containing an ITU-I or 14-bit ITU-N non-spare point code, the value must be none.

For this example, enter these commands.

```
ent-scr-dpc:sr=gws9:ni=003:nc=003:ncm=003:nsfi=blkdpc:nsr=gw12
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0
ENT-SCR-DPC: SCREEN SET AFFECTED - GWS9 1% FULL
ENT-SCR-DPC: MASP A - COMPLTD
```

```
ent-scr-dpc:sr=isp2:ni=073:nc=200:ncm=059:nsfi=isup:nsr=isp2
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0
ENT-SCR-DPC: SCREEN SET AFFECTED - ISP2 1% FULL
ENT-SCR-DPC: MASP A - COMPLTD
```

```
ent-scr-dpc:sr=tup1:ni=050:nc=034:ncm=059:nsfi=isup:nsr=tup1
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0
ENT-SCR-DPC: SCREEN SET AFFECTED - TUP1 1% FULL
ENT-SCR-DPC: MASP A - COMPLTD
```

```
ent-scr-dpc:sr=iec:ni=070:nc=070:ncm=025&&135:nsfi=blkdpc :nsr=gws9
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0
ENT-SCR-DPC: SCREEN SET AFFECTED - IEC 1% FULL
ENT-SCR-DPC: MASP A - COMPLTD
```

- Verify the changes using the `rtrv-scr-dpc` command with the screening reference name used in step 8.

For this example, enter these commands.

```
rtrv-scr-dpc:sr=gws9
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED DPC
SR   NI      NC      NCM      NSFI      NSR/ACT
GWS9 003      003      003      BLKDPC   GW12
```

```
rtrv-scr-dpc:sr=iec
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:31:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED DPC
SR   NI      NC      NCM      NSFI      NSR/ACT
IEC  070      070      025&&135 BLKDPC   GWS9
```

```
rtrv-scr-dpc:sr=isp2
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:31:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED DPC
SR      NI      NC      NCM      NSFI      NSR/ACT
ISP2    073      200      059      ISUP      ISP2
```

```
rtrv-scr-dpc:sr=tup1
```

The following is an example of the possible output.


```
rlghncxa03w 06-10-25 15:31:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED DPC
SR      NI      NC      NCM      NSFI      NSR/ACT
TUP1    050      034      049      ISUP      TUP1
```


10. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.


The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 51: Adding an Allowed DPC Screen

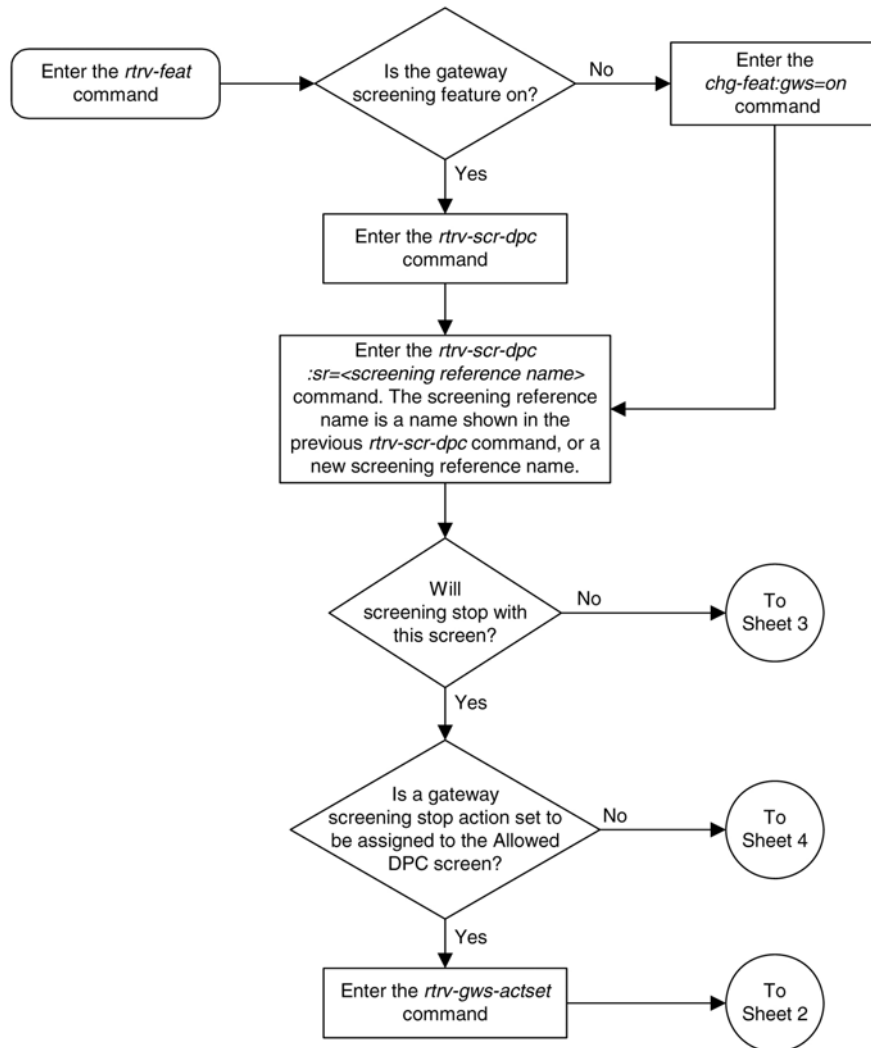

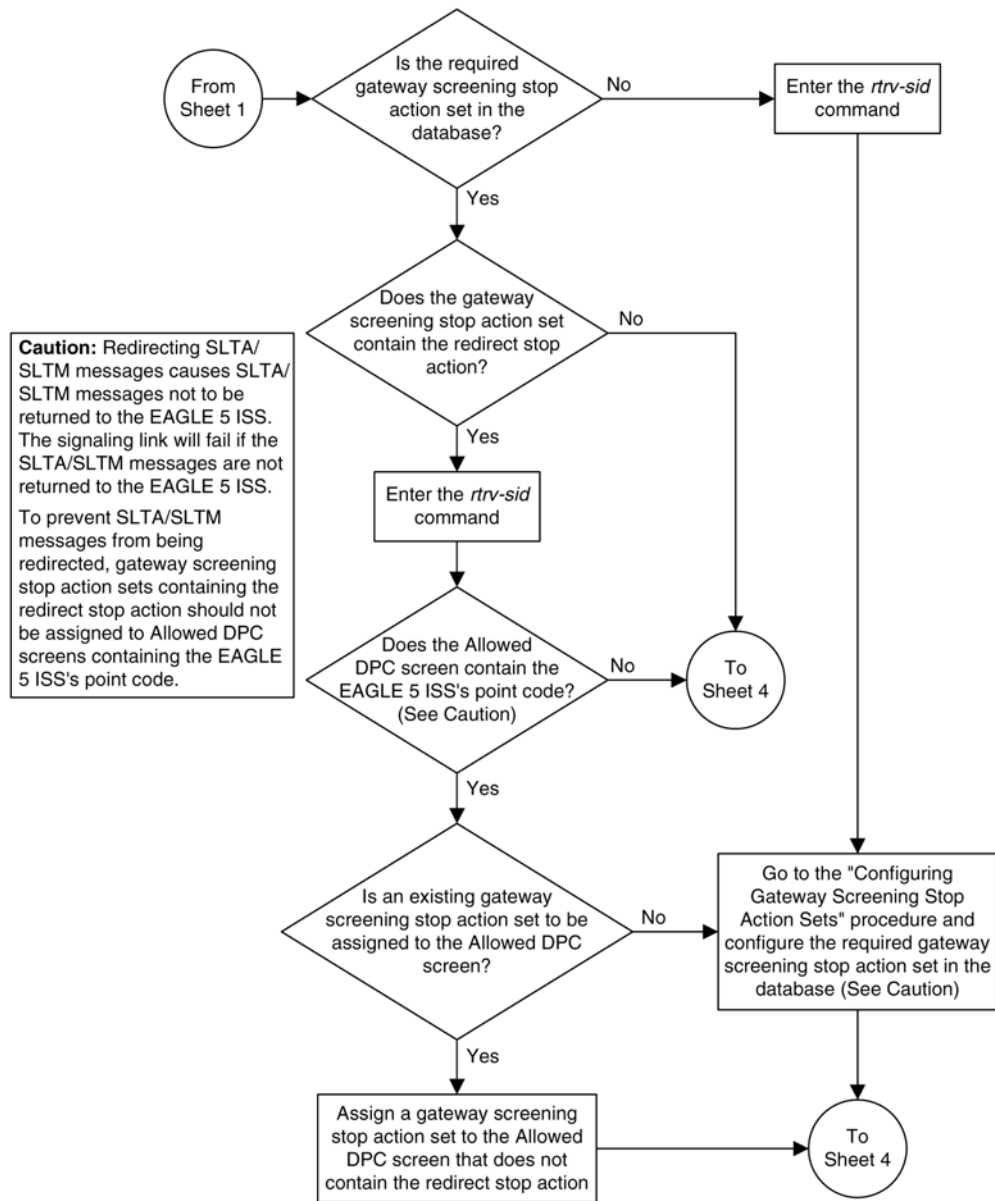

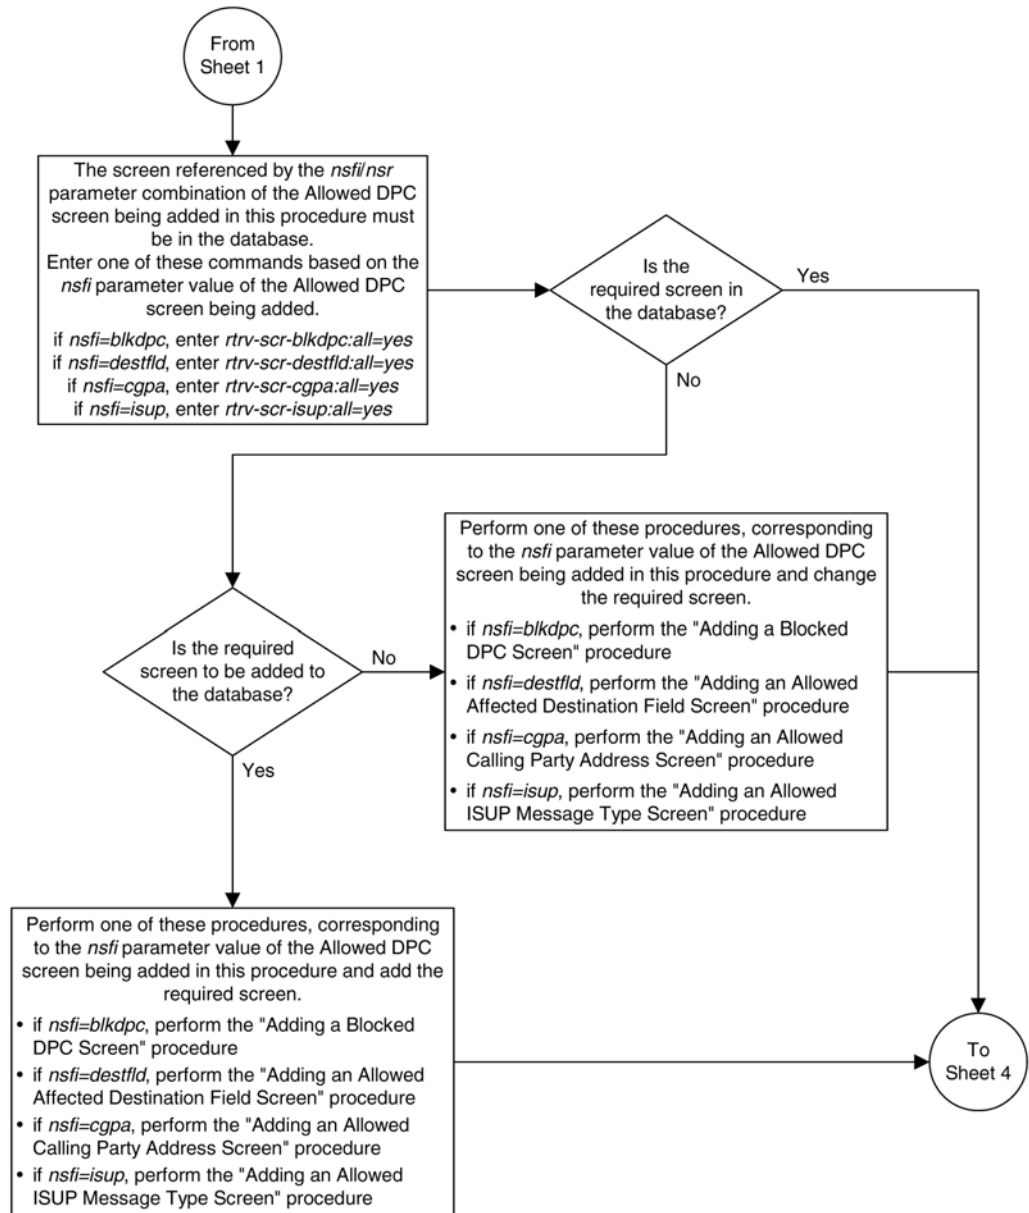

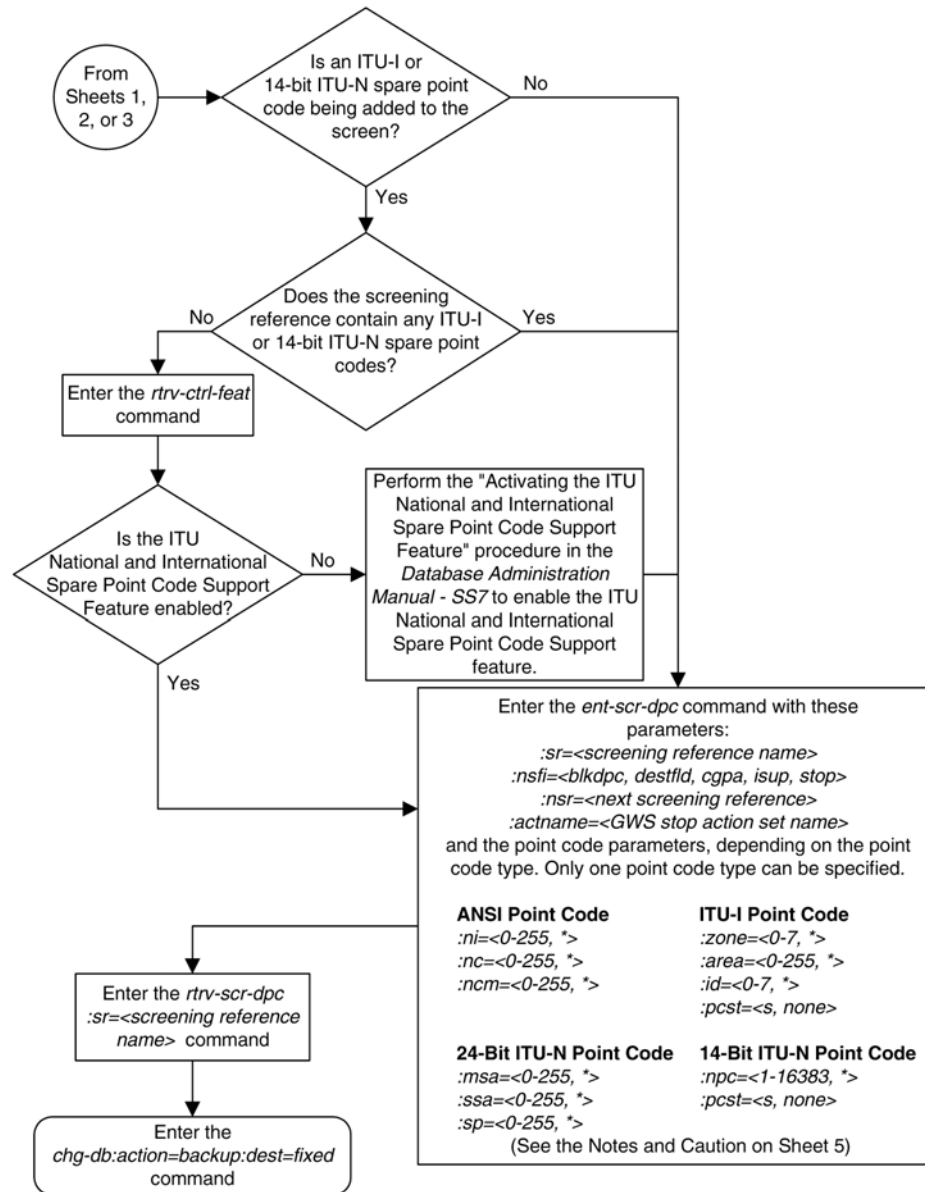

Notes:

1. A range of values can be specified for the *ni*, *nc*, or *ncm* parameters by inserting double ampersands (&&) between the parameter values defining the range. For example, to specify the range 025 to 200 for the *ni* parameter, enter 025&&200 for the *ni* parameter value.

2. The asterisk (*) specifies the entire range of values for that parameter.

For more information about specifying a range of values and about using the asterisk, see the "Gateway Screening Attributes" section in Chapter 2 and the "Specifying a Range of Values" section in this procedure.

3. The *nsr* parameter can be specified only, and must be specified, if the *nsfi* parameter value is either *blkdpc*, *destfld*, *cgpa*, or *isup*.

4. The *actname* parameter is optional and can be specified only with the *nsfi=stop* parameter. If the *actname* parameter is specified, the *actname* parameter value is one of the gateway screening stop action set names shown in the *rtrv-gws-actset* output on Sheet 1.

5. To add a non-spare point code, the *pcst* parameter does not have to be specified. If the *pcst* parameter is specified for a screen containing an ITU-I or 14-bit ITU-N non-spare point code, the value must be *none*.

6. To add a spare point code, the *pcst=s* parameter must be specified.

Caution: Redirecting SLTA/SLTM messages causes SLTA/SLTM messages not to be returned to the EAGLE 5 ISS. The signaling link will fail if the SLTA/SLTM messages are not returned to the EAGLE 5 ISS.

To prevent SLTA/SLTM messages from being redirected, gateway screening stop action sets containing the redirect stop action should not be assigned to Allowed DPC screens containing the EAGLE 5 ISS's point code.

Removing an Allowed DPC Screen

This procedure is used to remove an allowed destination point code (DPC) screen from the database using the `dlt-scr-dpc` command. The parameters used by the `dlt-scr-dpc` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure removes the allowed DPC screen `gws9` from the database.

Note: If you using multiple-part ITU national point codes with gateway screening, see the [14-Bit ITU National Point Code Formats](#) on page 34 section.

The allowed DPC screen can be referenced by one of the following screens.

- Screen Set
- Allowed OPC
- Blocked OPC
- Allowed SIO

Verifying the Gateway Screening Configuration

Enter the following commands to verify that none of these screens reference the allowed DPC screen being removed from the database.

- `rtrv-scrset:nsfi=dpc`
- `rtrv-scr-opc:nsfi=dpc`
- `rtrv-scr-blkopc:nsfi=dpc`
- `rtrv-scr-sio:nsfi=dpc`

Gateway Screening Configuration Procedures

To change the NSFI of any of these screens, perform one of these procedures.

- [Changing a Screen Set](#) on page 409
- [Changing an Allowed OPC Screen](#) on page 386
- [Changing a Blocked OPC Screen](#) on page 353
- [Changing an Allowed SIO Screen](#) on page 323

1. Display the allowed DPC screens in the database using the `rtrv-scr-dpc` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED DPC

SR   REF  RULES
GWS9 YES   1
IEC  YES   6
ISP2 YES   1
TUP1 YES   1
WRD2 YES   1
WRD4 YES   9
```

From the `rtrv-scr-dpc` output, display the allowed DPC screen you wish to remove using the `rtrv-scr-dpc` command with the screening reference name. For this example, enter this command.

```
rtrv-scr-dpc:sr=gws9
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED DPC
SR   NI      NC      NCM      NSFI      NSR/ACT
GWS9 003      003      003      BLKDPC    GW12
```

2. Enter the commands in the [Verifying the Gateway Screening Configuration](#) on page 289 section to verify that the screen being removed is not referenced by other screens in the database.

If the screen being removed is referenced by other screens, perform the procedures shown in the [Gateway Screening Configuration Procedures](#) on page 290 section to change the NSFI of those screens to reference other screens or change the NSFI of these screens to STOP.

3. Remove the allowed DPC screen from the database using the `dlt-scr-dpc` command with the screening reference name shown in the `rtrv-scr-dpc` output in step 1 and with the point code parameter values (`ni`, `nc`, `ncm`, or `zone`, `area`, `id`, or `npc`, or `msa`, `ssa`, `sp`) of the screen being removed from the database.

The values for these parameters must be entered exactly as shown in the `rtrv-scr-dpc` output.

To remove an entry containing either an ITU-I or a 14-bit ITU-N spare point code, the `pcst=s` parameter must be specified with the `dlt-scr-dpc` command.

To remove an entry containing either an ITU-I or a 14-bit ITU-N non-spare point code, the `pcst` parameter does not have to be specified with the `dlt-scr-dpc` command. If the `pcst` parameter is specified, the value must be none.

For this example, enter this command.


```
dlt-scr-dpc:sr=gws9:ni=003:nc=003:ncm=003
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0  
DLT-SCR-DPC: SCREEN SET AFFECTED - GWS9 0% FULL  
DLT-SCR-DPC: MASP A - COMPLTD
```

4. Verify the changes using the `rtrv-scr-dpc` command with the screening reference name used in step 3.

For this example, enter this command.

```
rtrv-scr-dpc:sr=gws9
```

The following is an example of the possible output.

```
E2573 Cmd Rej: SR or NSR does not reference an existing SR
```


This message shows that the specified screening reference name is not in the database and the action of the `dlt-scr-dpc` command in step 3 was successful. If the specified screening reference name contained more than one entry when the `dlt-scr-dpc` command was executed in step 3, the `rtrv-scr-dpc:sr=` command output would show the remaining entries in the screening reference instead of error message E2573.

5. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.  
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.  
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.  
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 52: Removing an Allowed DPC Screen

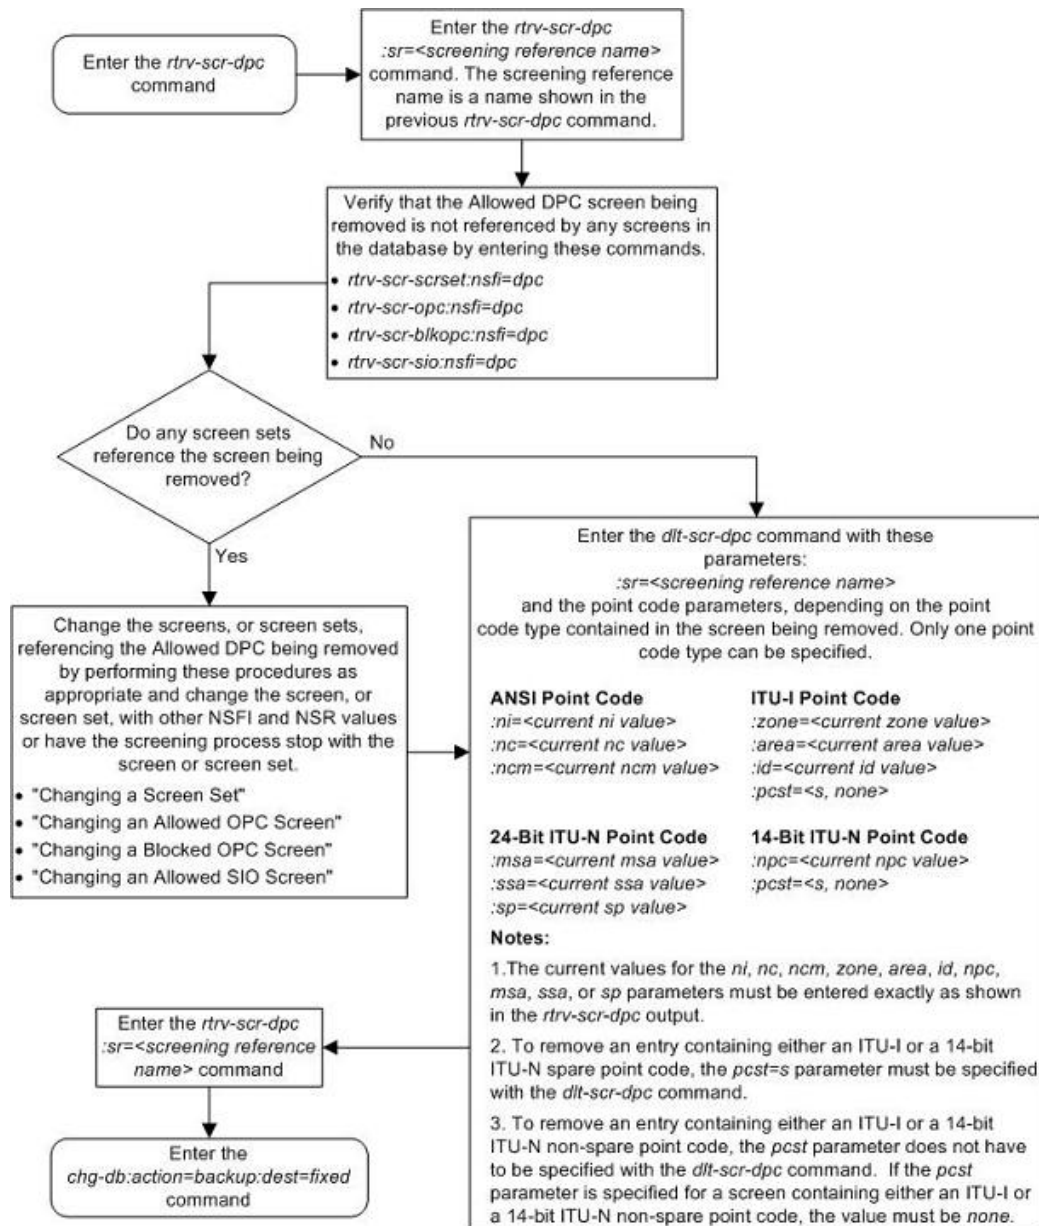

Changing an Allowed DPC Screen

This procedure is used to change the attributes of an allowed destination point code (DPC) screen in the database using the `chg-scr-dpc` command. The parameters used by the `chg-scr-dpc` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure change point code in the allowed DPC screen `gws9` to 009-009-009 and change the `nsfi` to `stop`.

Note: If you using multiple-part ITU national point codes with gateway screening, see the [14-Bit ITU National Point Code Formats](#) on page 34 section.

The allowed DPC screen can reference one of the following screens.

- Blocked DPC
- Allowed Affected Destination Field
- Allowed CGPA
- Allowed ISUP Message Type

Verifying the Gateway Screening Configuration

Enter the following commands to verify that these screens are in the database.

- `rtrv-scr-blkdpc:all=yes`
- `rtrv-scr-destfld:all=yes`
- `rtrv-scr-cgpa:all=yes`
- `rtrv-scr-isup:all=yes`

Gateway Screening Configuration Procedures

If the desired screen is not in the database, perform one of these procedures to add the desired screen to the database or change an existing screen in the database.

- [Adding a Blocked DPC Screen](#) on page 242
- [Adding an Allowed Affected Destination Field Screen](#) on page 216
- [Adding an Allowed Calling Party Address Screen](#) on page 184
- [Adding an Allowed ISUP Message Type Screen](#) on page 441
- [Changing a Blocked DPC Screen](#) on page 258
- [Changing an Allowed Affected Destination Field Screen](#) on page 227
- [Changing an Allowed Calling Party Address Screen](#) on page 198
- [Changing an Allowed ISUP Message Type Screen](#) on page 450

Specifying a Range of Values

A range of values can be specified for the point code parameters `ni`, `nc`, or `ncm`.

If a range of values is specified for any of these parameters, and the value of the other parameters match existing values for the screening reference name, the range of values for the point code parameter cannot include any values for that parameter that are currently provisioned for the screening reference name.

For example, screening reference name `scr1` contains these entries:

SR	NI	NC	NCM	NSFI	NSR/ACT
SCR1	240	001	010	CGPA	-----
SCR1	241	010	020	STOP	-----

Another entry for screening reference `scr1` with the `ni` value of 240 and the `nc` value of 001 cannot be specified if the range of values for the `ncm` parameter includes the value 010.

The ANSI point code parameter values can be specified as a single value, a range of values, or with an asterisk (*). The asterisk specifies all possible values for the `ni`, `nc`, and `ncm` parameters.

Table 58: Valid Value Combinations for ANSI Point Code Parameters on page 294 shows the valid combinations of these parameter values.

Table 58: Valid Value Combinations for ANSI Point Code Parameters

NI	NC	NCM
Single Value	Single Value	Single Value
Single Value	Single Value	Range of Values
Single Value	Single Value	Asterisk
Single Value	Range of Values	Asterisk
Single Value	Asterisk	Asterisk
Range of Values	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

A range of values can also be specified for an ITU-I or 24-bit ITU-N point code parameter using a combination of asterisks (*) and single values for the point code parameters. *Table 59: Valid Value Combinations for ITU-I Point Code Parameters* on page 294 shows the valid combinations of the ITU-I parameter values. *Table 60: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters* on page 294 shows the valid combinations of the 24-bit ITU-N parameter values.

Table 59: Valid Value Combinations for ITU-I Point Code Parameters

ZONE	AREA	ID
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

Table 60: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters

MSA	SSA	SP
Single Value	Single Value	Single Value

MSA	SSA	SP
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

1. Display the allowed DPC screens in the database using the `rtrv-scr-dpc` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED DPC
SR   REF  RULES
GWS9 YES   1
IEC  YES   6
ISP2 YES   1
TUP1 YES   1
WRD2 YES   1
WRD4 YES   9
```

From the `rtrv-scr-dpc` output, display the allowed DPC screen you wish to remove using the `rtrv-scr-dpc` command with the screening reference name. For this example, enter this command.

```
rtrv-scr-dpc:sr=gws9
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED DPC
SR   NI      NC      NCM      NSFI      NSR/ACT
GWS9 003     003     003     BLKDPC    GW12
```

If a gateway screening stop action set is to be assigned to the allowed DPC screen being changed in the database, go to step 2.

Step 2 verifies the gateway screening stop action set names in the database. The gateway screening stop action set names are assigned only if the NSFI of the screen being changed in this procedure is STOP. If the NSFI of the screen will be changed to STOP, but a gateway screening stop action set name will not be assigned to the screen, skip steps 2, 3, and 4, and go to step 5. If the NSFI of the screen will not be STOP, skip step 2 and 3, and go to step 4.

2. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME  1    2    3    4    5    6    7    8    9    10
---  ---
1    copy  copy
2    rdct  rdct
3    cr    copy rdct
4    cncf  cncf
```

```
5  cpcncf copy cncf
6  cncfrd cncf rdct
7  cpcfcd copy cncf rdct
```

GWS action set table is (7 of 16) 44% full

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to configure the required gateway screening stop action set.

Note: If the gateway screening stop action set being assigned to the Allowed DPC screen does not contain the redirect stop action, skip step 3 and go to step 4.

3. Verify the EAGLE 5 ISS's point code by entering the `rtrv-sid` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 36.0.0
PCA          PCI          PCN          CLLI          PCTYPE
100-100-100  3-75-7          7-9-8-1      rlghncxa03w  OTHER

CPCA
002-002-002  002-002-003    002-002-004  002-002-005
002-002-006  002-002-007    002-002-008  002-002-009
004-002-001  004-003-003    050-060-070

CPCA (LNP)
005-005-002  005-005-004    005-005-005  006-006-006

CPCI
1-002-1      1-002-2        1-002-3      1-002-4
2-001-1      7-222-7

CPCN
2-0-10-3    2-0-11-0      2-0-11-2     2-0-12-1
2-2-3-3     2-2-4-0      10-14-10-1
```



CAUTION: Redirecting SLTA/SLTM messages prevents SLTA/SLTM messages from being returned to the EAGLE 5 ISS. The signaling link carrying these messages will fail if these messages are not returned to the EAGLE 5 ISS. To prevent SLTA/SLTM messages from being redirected, gateway screening stop action sets containing the redirect stop action should not be assigned to Allowed DPC screens containing the EAGLE 5 ISS's point code.

Note: If the NSFI of the screen being changed in this procedure will be STOP, or if the NSFI of the screen is not being changed, skip step 4 and go to step 5.

4. Enter the commands in the [Verifying the Gateway Screening Configuration](#) on page 293 section to verify that the screen that will be specified by the NSFI/NSR parameter combination in step 6 is in the database.

If the desired screen is not in the database, perform one of the procedures shown in the [Gateway Screening Configuration Procedures](#) on page 293 section to add the desired screen to the database or change an existing screen in the database.

Note: If any of these conditions apply to this procedure, skip step 5 and go to step 6:

- The point code in the screen is not being changed.
- The screen being changed contains either an ANSI or 24-bit ITU-N point code.

- The ITU-I or 14-bit ITU-N non-spare point code in the screen is not being changed to an ITU-I or 14-bit ITU-N spare point code.
 - The point code in the screen is an ITU-I or 14-bit ITU-N spare point code or the screening reference contains other screens with ITU-I or 14-bit ITU-N spare point codes.
5. Display the status of the ITU National and International Spare Point Code Support feature by entering the `rtrv-ctrl-feat` command with the ITU National and International Spare Point Code Support feature part number.

Enter this command.

```
rtrv-ctrl-feat:partnum=893013601
```

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
Spare Point Code Support	893013601	on	----

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period Left
Zero entries found.				

The following features have expired temporary keys:


Feature Name	Partnum
Zero entries found.	

If the ITU National and International Spare Point Code Support feature is enabled, go to step 6.

If the ITU National and International Spare Point Code Support feature is not enabled, perform the “Activating the ITU National and International Spare Point Code Support Feature” procedure in the *Database Administration Manual - SS7* to enable the ITU National and International Spare Point Code Support feature as required. After the feature has been enabled, go to step 6.

6. Change the attributes of an allowed DPC screen using the `chg-scr-dpc` command.

If a gateway screening stop action is to be assigned to the allowed DPC screen being changed, enter the `chg-scr-dpc` command with the `nsfi=stop` parameter and the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 2.

 **CAUTION:** Redirecting SLTA/SLTM messages prevents SLTA/SLTM messages from being returned to the EAGLE 5 ISS. The signaling link carrying these messages will fail if these messages are not returned to the EAGLE 5 ISS. To prevent SLTA/SLTM messages from being redirected, gateway screening stop action sets containing the redirect stop action should not be assigned to Allowed DPC screens containing the EAGLE 5 ISS’s point code, shown in step 3.

The current values for the `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `npc`, `msa`, `ssa`, and `sp` parameters must be entered exactly as shown in the `rtrv-scr-dpc` output in step 1.

The following list contains the values for the `nni`, `nnc`, `nncm`, `nzone`, `narea`, `nid`, `nnpc`, `nmsa`, `nssa`, and `nsp` parameters:

- nni - 0-255 or an asterisk (*)
- nnc - 0-255 or an asterisk (*)
- nncm - 0-255 or an asterisk (*)
- nzone - 0-7 or an asterisk (*)
- narea - 0-255 or an asterisk (*)
- nid - 0-7 or an asterisk (*)
- nnpc - 1 - 16383 or an asterisk (*)
- nmsa - 0-255 or an asterisk (*)
- nssa - 0-255 or an asterisk (*)
- nsp - 0-255 or an asterisk (*)

A range of values can be specified for the nni, nnc, and nncm parameters. See the *“Specifying a Range of Values”* on page 293 section for more information on how the asterisk and a range of values are used for the nni, nnc, and nncm parameters.

To change an ITU-I or 14-bit ITU-N spare point code to a non-spare point code, both the pcst=s and npcst=none parameters must be specified with the chg-scr-dpc command.

To change an ITU-I or 14-bit ITU-N non-spare point code to a spare point code, the npcst=s parameter must be specified with the chg-scr-dpc command. The pcst parameter does not have to be specified.

If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N spare point code, the pcst=s parameter must be specified with the chg-scr-dpc command.

If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N non-spare point code, the pcst parameter does not have to be specified with the chg-scr-dpc command. If the pcst parameter is specified for a screen containing either an ITU-I or 14-bit ITU-N non-spare point code, the pcst parameter value must be none.

For this example, enter this command.

```
chg-scr-dpc:sr=gws9:ni=003:nc=003:nmc=003:nni=009:nnc=009
:nncm=009:nsfi=stop
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
CHG-SCR-DPC: SCREEN SET AFFECTED - GWS9 1% FULL
CHG-SCR-DPC: MASP A - COMPLTD
```

7. Verify the changes using the rtrv-scr-dpc command with the screening reference name used in step 6.

For this example, enter this command.

```
rtrv-scr-dpc:sr=gws9
```

The following is an example of the possible output.


```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED DPC
SR NI NC NCM NSFI NSR/ACT
GWS9 009 009 009 STOP -----
```


8. Backup the new changes using the chg-db:action=backup:dest=fixed command.


The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 53: Changing an Allowed DPC Screen

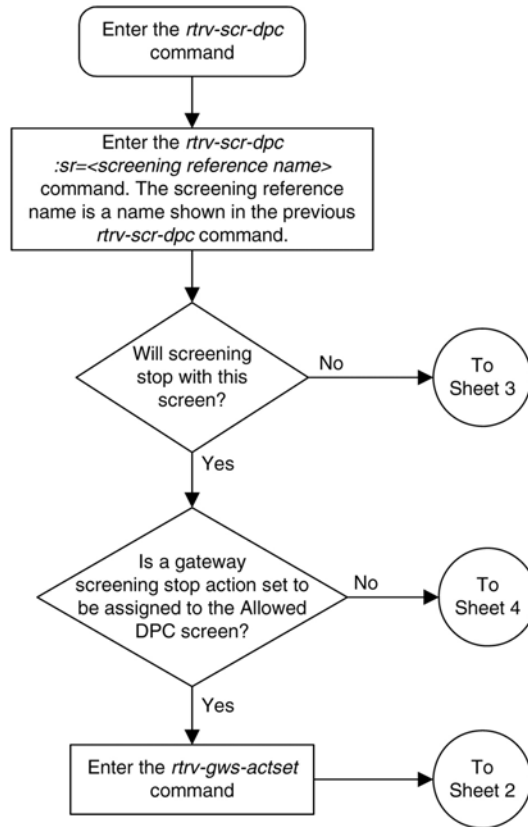

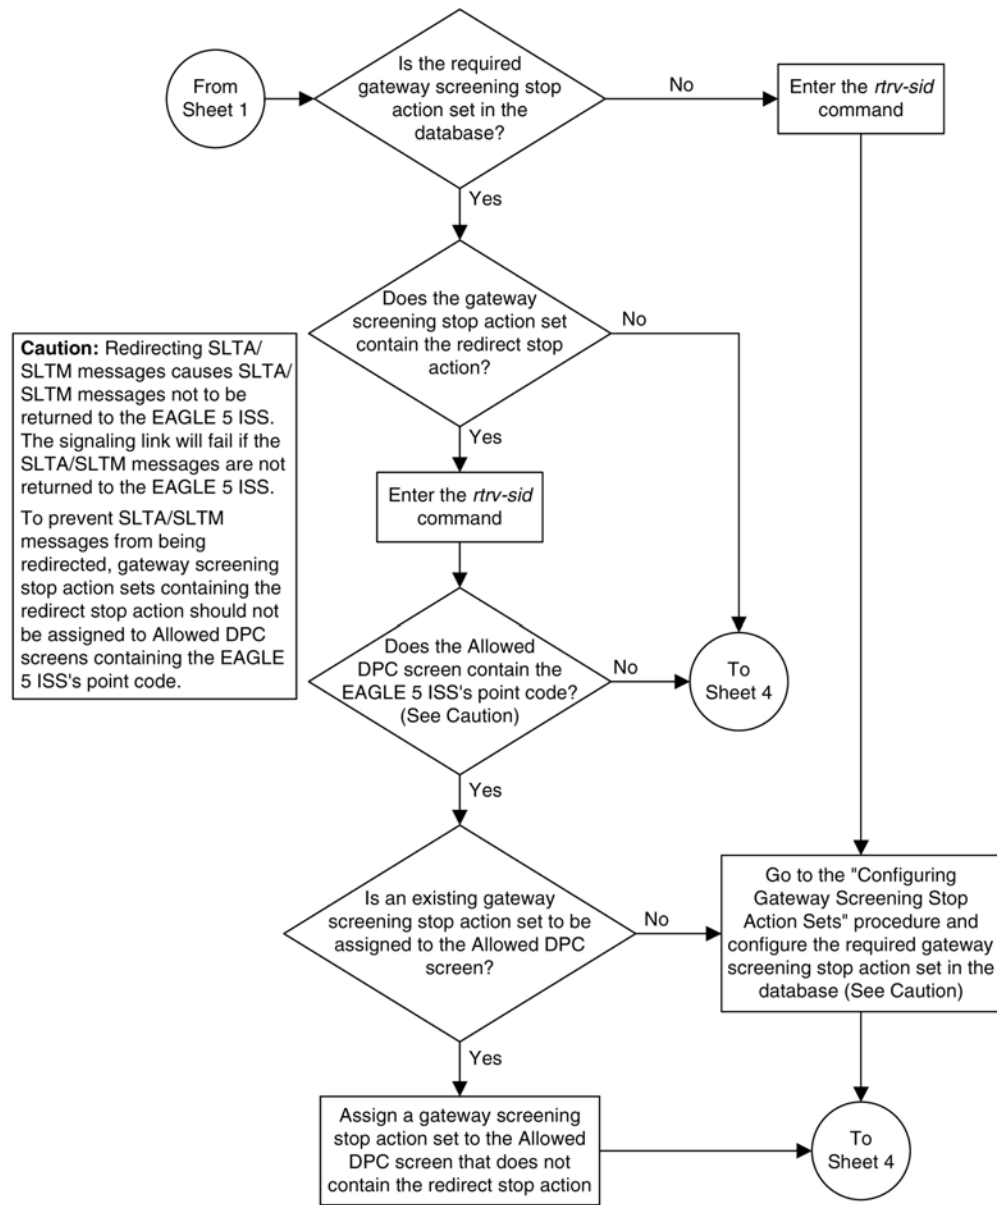

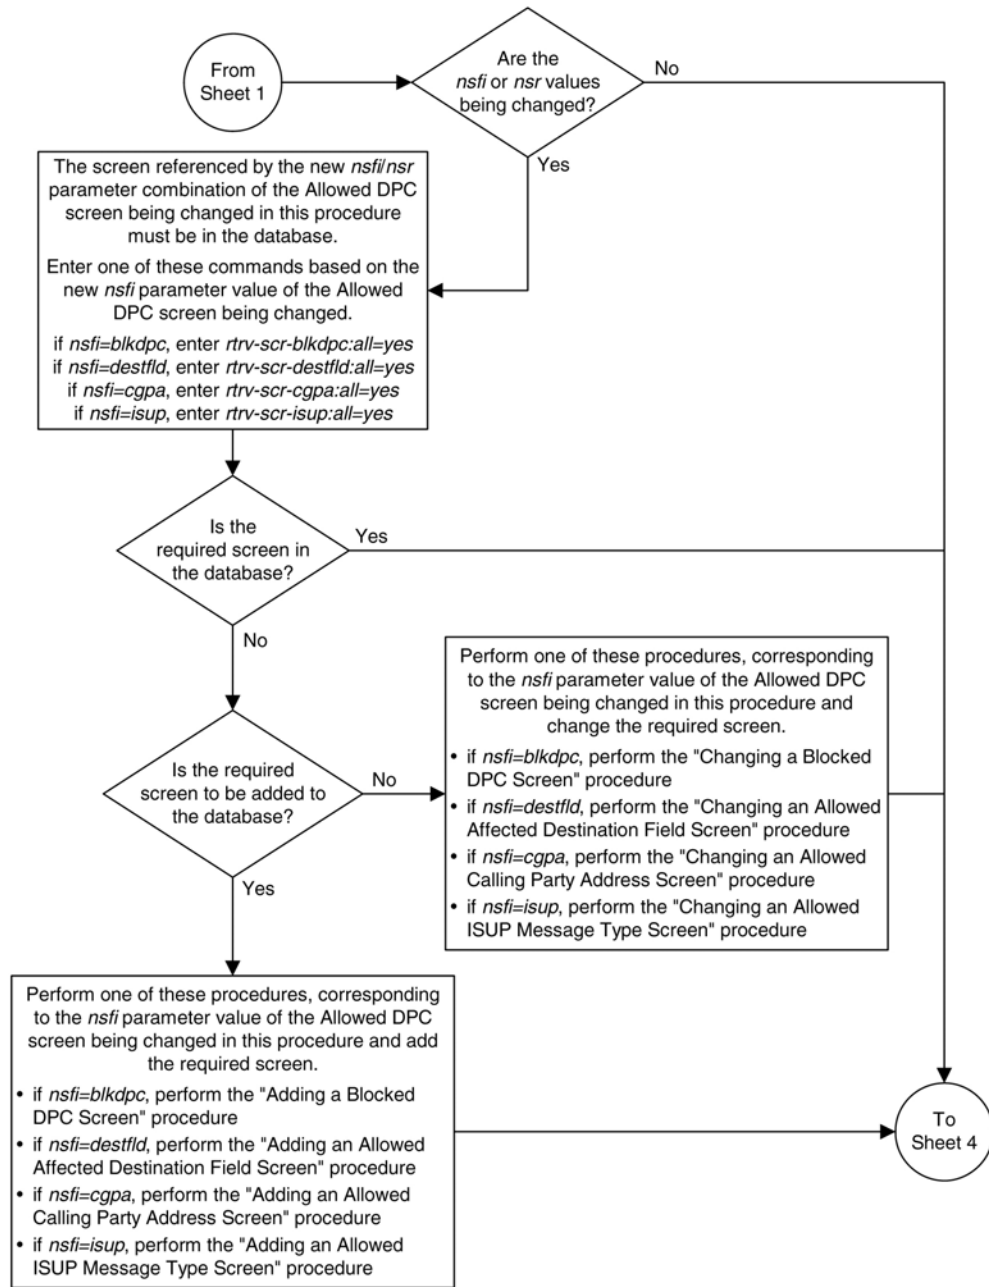

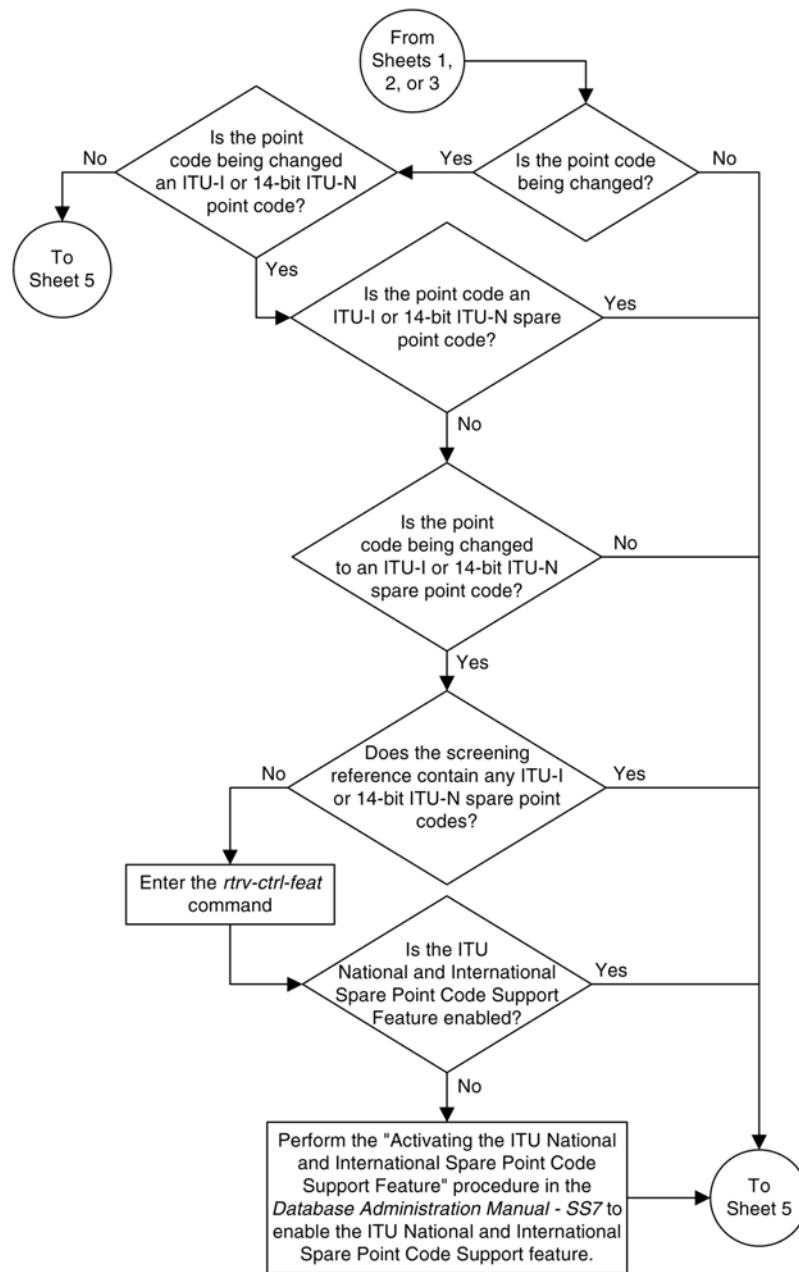

From
Sheet 4

Enter the *chg-scr-dpc* command with this mandatory parameter:
:sr=<screening reference name>
 and the point code parameters, depending on the point code type contained in the screen being changed. Only one point code type can be specified.

ANSI Point Code	ITU-I Point Code	14-Bit ITU-N Point Code	24-Bit ITU-N Point Code
<i>:ni=<current ni value></i>	<i>:zone=<current zone value></i>	<i>:npc=<current npc value></i>	<i>:msa=<current msa value></i>
<i>:nc=<current nc value></i>	<i>:area=<current area value></i>	<i>:pcst=<s, none></i>	<i>:ssa=<current ssa value></i>
<i>:ncm=<current ncm value></i>	<i>:id=<current id value></i>		<i>:sp=<current sp value></i>
	<i>:pcst=<s, none></i>		

At least one of these optional parameters must be specified with the *chg-scr-dpc* command.
:nsfl=<blkdpc, destfld, cgpa, isup, stop>
:nsr=<next screening reference>
:actname=<GWS stop action set name>

If the new point code code parameters are specified, they must be of the same type as the current point code values specified in the *chg-scr-dpc* command.

ANSI Point Code	ITU-I Point Code	14-Bit ITU-N Point Code	24-Bit ITU-N Point Code
<i>:nni=<0-255, *></i>	<i>:nzone=<0-7, *></i>	<i>:npc=<1-16383, *></i>	<i>:msa=<0-255, *></i>
<i>:nnc=<0-255, *></i>	<i>:narea=<0-255, *></i>	<i>:npcst=<s, none></i>	<i>:nssa=<0-255, *></i>
<i>:ncm=<0-255, *></i>	<i>:nid=<0-7, *></i>		<i>:nsp=<0-255, *></i>
	<i>:npcst=<s, none></i>		

(See the Notes and Caution on Sheet 6)

Enter the *rtv-scr-dpc*
:sr=<screening reference name> command

Enter the
chg-db:action=backup:dest=fixed
 command

Notes:

1. A range of values can be specified for the *ni*, *nc*, or *ncm* parameters by inserting double ampersands (&&) between the parameter values defining the range. For example, to specify the range 025 to 200 for the *ni* parameter, enter 025&&200 for the *ni* parameter value.

2. The asterisk (*) specifies the entire range of values for that parameter.

For more information about specifying a range of values and about using the asterisk, see the "Gateway Screening Attributes" section in Chapter 2 and the "Specifying a Range of Values" section in this procedure.

3. The *nsr* parameter can be specified, and must be specified, if the *nsfi* parameter value is either *blkdpc*, *destfld*, *cgpa*, or *isup*.

4. The *actname* parameter is optional and can be specified only with the *nsfi=stop* parameter. If the *actname* parameter is specified, the *actname* parameter value is one of the gateway screening stop action set names shown in the *rtv-gws-actset* output on Sheet 1.

5. To change an ITU-I or 14-bit ITU-N spare point code to a non-spare point code, both the *pcst=s* and *npcst=none* parameters must be specified with the *chg-scr-dpc* command.

6. To change an ITU-I or 14-bit ITU-N non-spare point code to a spare point code, the *npcst=s* parameter must be specified with the *chg-scr-dpc* command. The *pcst* parameter does not have to be specified.

7. If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N spare point code, the *pcst=s* parameter must be specified with the *chg-scr-dpc* command.

8. If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N non-spare point code, the *pcst* parameter does not have to be specified with the *chg-scr-dpc* command. If the *pcst* parameter is specified for a screen containing either an ITU-I or 14-bit ITU-N non-spare point code, the *pcst* parameter value must be *none*.

Caution: Redirecting SLTA/SLTM messages causes SLTA/SLTM messages not to be returned to the EAGLE 5 ISS. The signaling link will fail if the SLTA/STM messages are not returned to the EAGLE 5 ISS.

To prevent SLTA/SLTM messages from being redirected, gateway screening stop action sets containing redirect stop action should not be assigned to Allowed DPC screens containing the EAGLE 5 ISS's point code.

Chapter 10

Allowed Signaling Information Octet (SIO) Screen Configuration

Topics:

- [Introduction Page 306](#)
- [Adding an Allowed SIO Screen Page 311](#)
- [Removing an Allowed SIO Screen Page 320](#)
- [Changing an Allowed SIO Screen Page 323](#)

Chapter 10, Allowed Signaling Information Octet (SIO) Screen Configuration, contains the procedures necessary to configure allowed signaling information octet screens.

Introduction

The allowed signaling information octet (SIO) screen identifies the type of MSUs (ISUP, TCAP, etc.) that are allowed into the network. The gray shaded areas in [Figure 55: Allowed SIO Screening Function](#) on page 310 shows the fields of the SS7 message that are checked by the allowed SIO screening function.

Gateway Screening Actions

If a match is not found, the message is discarded.

If a match is found, the `nsfi` is examined to determine the next step in the screening process. If the `nsfi` value is any value other than `stop`, the next screening reference (`nsr`) is identified and the screening process continues to the next screen identified by the `nsfi` and `nsr` parameter values.

If the `nsfi` is equal to `stop`, the screening process stops and the message is processed. If a gateway screening stop action set is specified with the screen, shown by the `actname` parameter value, the message is processed according to the gateway screening stop actions that are assigned to the gateway screening stop action set.

- If the `copy` gateway screening stop action is specified, the message is processed and a copy of the message is sent by the STPLAN feature to an external application.
- If the `rdct` (redirect) gateway screening stop action is specified, the message is diverted from the original destination and sent to another destination with the Database Transport Access feature, specified by global title translation, for further processing.
- If the `cncf` gateway screening stop action is specified, the PIP parameter in the incoming ISUP IAM message is converted to the GN parameter. The GN parameter in the incoming ISUP IAM message is converted to the PIP parameter. The message is then sent to the node specified by the DPC in the routing label in the message. For more information on the Calling Name Conversion Facility feature, see [Calling Name Conversion Facility \(CNCF\) Configuration](#) on page 417.
- If the `tlnp` gateway screening stop action is specified, ISUP IAMs that pass gateway screening are processed either by the ISUP NP with EPAP feature (if the ISUP NP with EPAP feature is enabled and turned on) or by the Triggerless LNP feature (if the Triggerless LNP feature is turned on). The ISUP NP with EPAP feature is discussed in more detail in the *Feature Manual - G-Port*. The Triggerless LNP feature is discussed in more detail in the *LNP Feature Activation Guide*.
- If the `tinp` gateway screening stop action is specified, ISUP IAMs that pass gateway screening are intercepted by the Triggerless ISUP based Number Portability (TINP) feature and converted to include the routing number (RN) if the call is to a ported number. The TINP feature is discussed in more detail in the *Feature Manual - G-Port*.
- If the `tif`, `tif2`, or `tif3` gateway screening stop actions are specified, TIF processing is applied to the message.

Allowed SIO Screening Actions

The value of the `nsfi` parameter is based on the value of the service indicator (`si`) parameter. [Table 61: Valid Parameter Combinations for the Allowed SIO Screening Function](#) on page 307 shows the valid combinations of `nsfi` values and service indicator values.


Table 61: Valid Parameter Combinations for the Allowed SIO Screening Function


Service Indicator (SI) Values	Nest Screening Function Identifier (NSFI) Values
0	DPC, BLKDPC, DESTFLD
3	DPC, BLKDPC, CGPA, CDPA
4, 5	DPC, BLKDPC, ISUP
All other values (1, 2, 6-15)	DPC, BLKDPC

Messages containing the service indicator value 4 are TUP messages, and messages containing the service indicator value 5 are ISUP messages. Both types of messages are screened using the allowed ISUP screen. TUP messages can be screened for point codes, after the SIO screen, with the allowed and blocked DPC screens. However, if the screen set does not contain an allowed SIO screen that screens for TUP messages (messages with the service indicator value of 4), the message will be treated by the allowed ISUP message type screen as an ISUP message, even if the message contains the service indicator value of 4.

[Figure 54: Allowed SIO Screening Actions](#) on page 307 shows the screening actions of the allowed SIO screen.

Figure 54: Allowed SIO Screening Actions

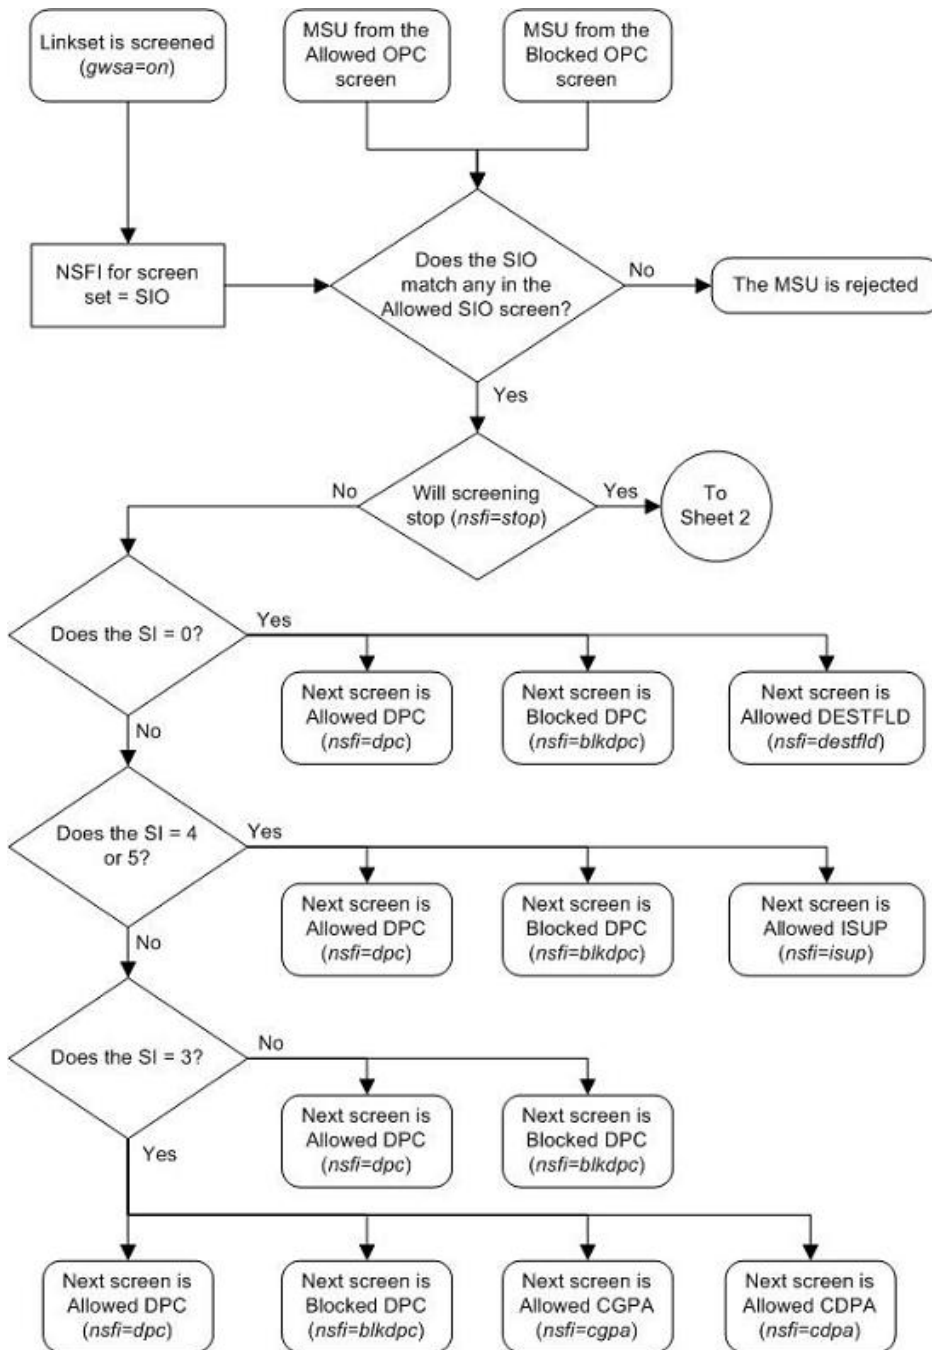

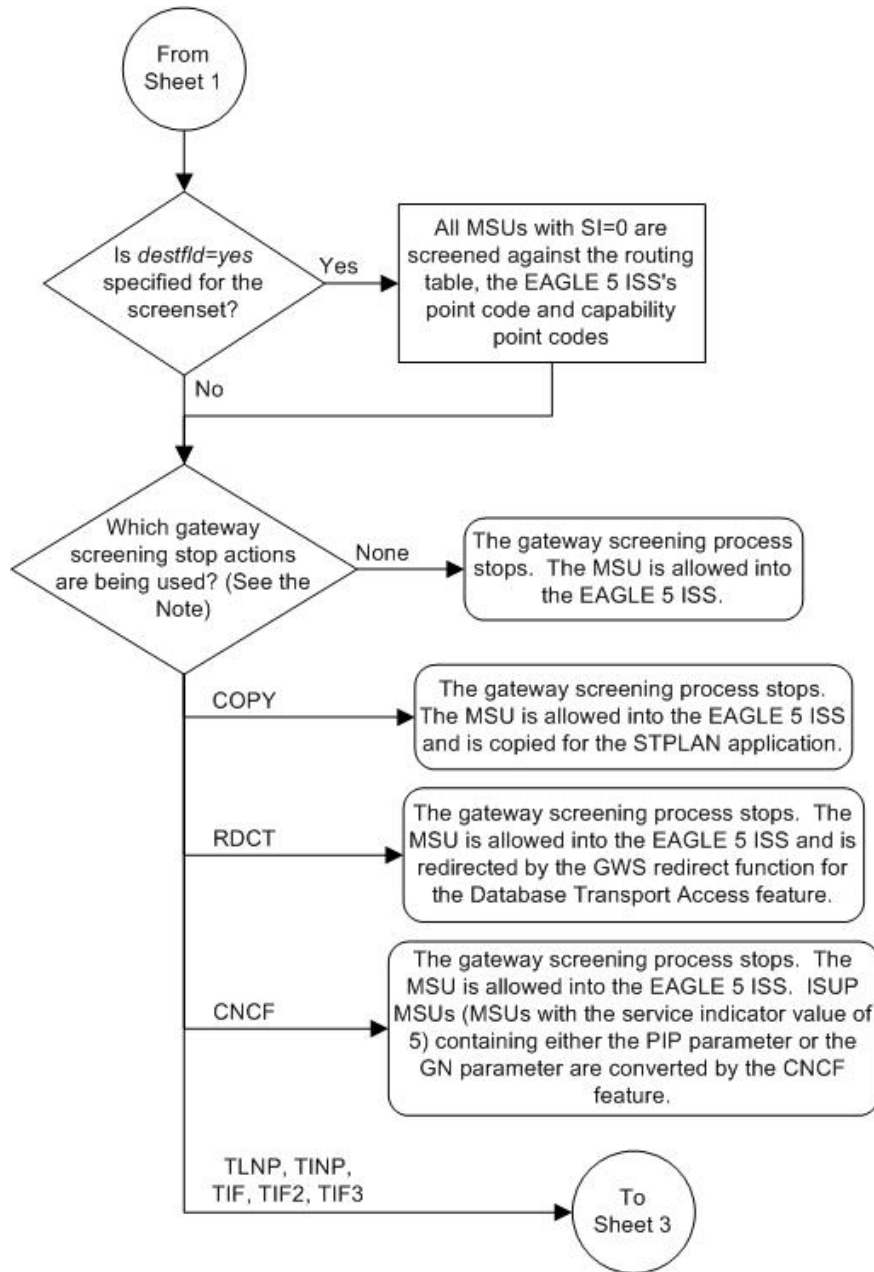

Note: Combinations of the gateway screening stop actions shown on Sheets 2 and 3 may be assigned to a gateway screening stop action set. Refer to the Configuring Gateway Screening Stop Action Sets and the Configuring TLNP Gateway Screening Stop Action Sets procedures in Chapter 2 of this manual for the combinations that can be used.

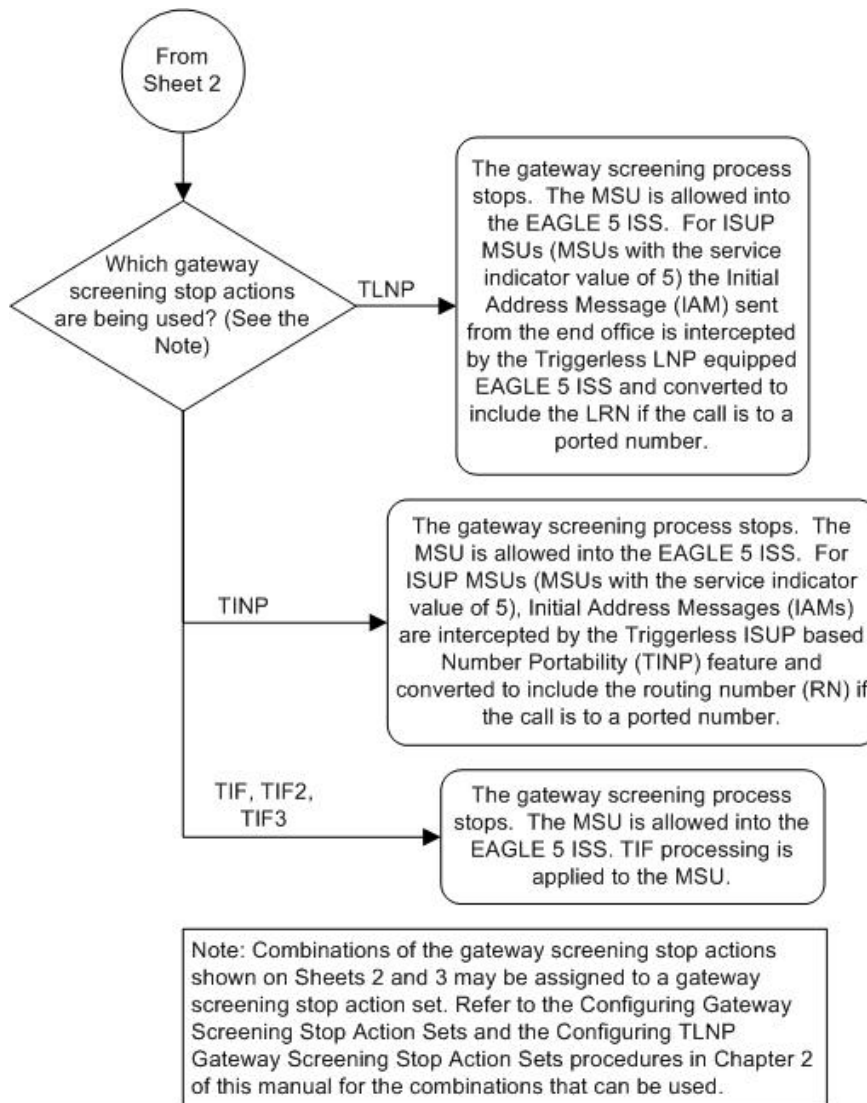


Figure 55: Allowed SIO Screening Function

ANSI MSU (ANSI Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF			
		Routing Label DPC OPC SLS NCM NC NI NCM NC NI xx			H1 H0

ITU-I MSU (ITU International Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF			
		Routing Label DPC OPC SLS ID AREA ZONE ID AREA ZONE xx			H1 H0

14-Bit ITU-N MSU (14-Bit ITU National Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF			
		Routing Label DPC OPC SLS NPC NPC xx			H1 H0

24-Bit ITU-N MSU (24-Bit ITU National Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF			
		Routing Label DPC OPC SLS SP SSA MSA SP SSA MSA xx			H1 H0

Adding an Allowed SIO Screen

This procedure is used to add an allowed signaling information octet (SIO) screen to the database using the `ent-scr-sio` command. The parameters used by the `ent-scr-sio` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The examples in this procedure are used to add the allowed SIO screen data shown in [Table 62: Example Gateway Screening Allowed SIO Configuration Table](#) on page 312 and based on the example configurations shown in [Figure 6: Gateway Screening Configuration - Example 2](#) on page 44, [Figure 8: Gateway Screening Configuration - Example 4](#) on page 47, [Figure 9: Gateway Screening Configuration - Example 5](#) on page 48, [Figure 10: Gateway Screening Configuration - Example 6](#) on page 50, and [Figure 11: Gateway Screening Configuration - Example 7](#) on page 51.

Table 62: Example Gateway Screening Allowed SIO Configuration Table

Screening Reference	NIC	SI	H0	H1	PRI	NSFI	NSR
fld4	2	0	4	5	3	destfld	fld5
iec	2	3	--	--	1&&3	cgpa	gw11
ls02	2	3	--	--	3	cdpa	ls03
isp1	2	5	--	--	3	isup	isp1
tup1	2	4	--	--	3	dpc	tup1
tup1	2	5	--	--	3	dpc	isp2

The allowed SIO screen can reference one of the following screens.

- Allowed DPC
- Blocked DPC
- Allowed Affected Destination Field
- Allowed ISUP Message Type
- Allowed CGPA
- Allowed CDPA

Verifying the Gateway Screening Configuration

Enter the following commands to verify that these screens are in the database.

- `rtrv-scr-dpc:all=yes`
- `rtrv-scr-blkdpc:all=yes`
- `rtrv-scr-destfld:all=yes`
- `rtrv-scr-isup:all=yes`
- `rtrv-scr-cgpa:all=yes`
- `rtrv-scr-cdpa:all=yes`

Gateway Screening Configuration Procedures

If the desired screen is not in the database, perform one of these procedures to add the desired screen to the database or change an existing screen in the database.

- [Adding an Allowed DPC Screen](#) on page 276
- [Adding a Blocked DPC Screen](#) on page 242
- [Adding an Allowed Affected Destination Field Screen](#) on page 216
- [Adding an Allowed ISUP Message Type Screen](#) on page 441
- [Adding an Allowed Calling Party Address Screen](#) on page 184
- [Adding an Allowed Called Party Address Screen](#) on page 128
- [Changing an Allowed DPC Screen](#) on page 292

- [Changing a Blocked DPC Screen](#) on page 258
- [Changing an Allowed Affected Destination Field Screen](#) on page 227
- [Changing an Allowed ISUP Message Type Screen](#) on page 450
- [Changing an Allowed Calling Party Address Screen](#) on page 198
- [Changing an Allowed Called Party Address Screen](#) on page 143

Specifying a Range of Values

A range of values can be specified for the `pri`, `h0`, and `h1` parameters. If a range of values is specified for any of these parameters and the `nic` and `si` values in the screening reference name are not changed, the range of values for the `pri`, `h0`, or `h1` parameters cannot include any values that are currently provisioned for the screening reference name.

For example, screening reference name `scr1` contains these entries:

SR	NIC	PRI	SI	H0	H1	NSFI	NSR/ACT
SCR1	2	3	1	4	5	DPC	LS03
SCR1	2	2	1	2	7	BLKDPC	LS04

Another entry for screening reference `scr1` with the same `nic` and `si` values cannot be specified if:

- The range of values for the `pri` parameter includes the values 2 or 3
- The range of values for the `h0` parameter includes the values 2 or 4
- The range of values for the `h1` parameter includes the values 5 or 7.

Specifying H0 and H1 Values

The `h0` and `h1` values must be specified if the `si` value is 0, 1, or 2. If the `si` value is 3 through 15, the `h0` and `h1` parameters cannot be specified.

The `h0` and `h1` parameters must be specified if either parameter is specified.

The `H0` and `H1` heading code values can be a single value, a range of values with the beginning and end of the range separated by double ampersands (for example, a range of values from 2 to 9, 2&&9), or with an asterisk (*). The asterisk specifies all possible values for the `h0` and `h1` parameters. [Table 63: Valid Value Combinations for H0 and H1 Parameters](#) on page 313 shows the valid combinations of these parameter values.

Table 63: Valid Value Combinations for H0 and H1 Parameters

H0	H1
Single Value	Single Value
Single Value	Range of Values
Single Value	Asterisk
Range of Values	Asterisk
Asterisk	Asterisk

1. Verify that the gateway screening feature is on, by entering the `rtrv-feat` command.

If the gateway screening feature is on, the `GWS` field is set to `on`.

Note: The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

If the gateway screening feature is on, shown by the entry `GWS = on` in the `rtrv-feat` command output, skip step 2, and go to step 3.

2. Turn the gateway screening feature on by entering this command.

```
chg-feat:gws=on
```

Note: Once the gateway screening feature is turned on with the `chg-feat` command, it cannot be turned off.

The gateway screening feature must be purchased before you turn this feature on with the `chg-feat` command. If you are not sure if you have purchased the gateway screening feature, contact your Tekelec Sales Representative or Account Representative.

When the `chg-feat` has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 11:43:04 GMT EAGLE5 36.0.0
CHG-FEAT: MASP A - COMPLTD
```

3. Display all allowed SIO screens in the database using the `rtrv-scr-sio` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED SIO
SR    REF  RULES
IEC   YES   5
WRD2  YES   1
WRD4  YES   9
```

If the screening reference names that you wish to add with this procedure are not shown in the `rtrv-scr-sio` command output, go to either steps 4 or 5.

Step 4 verifies the gateway screening stop action set names in the database. The gateway screening stop action set names are assigned only if the NSFI of the screen being added in this procedure is `STOP`. If the NSFI of the new screen will be `STOP`, but a gateway screening stop action set name will not be assigned to the new screen, skip steps 4 and 5 and go to step 6. If the NSFI of the new screen is not `STOP`, skip step 4 and go to step 5.

If these screening reference names are shown in the `rtrv-scr-sio` command output, make sure the screening data you wish to enter is not already in the database by entering the `rtrv-scr-sio` command with the screening reference name. In this example, screen `iec` will have new data added to it. For this example, enter the `rtrv-scr-sio:sr=iec` command. The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED SIO
SR  NIC  PRI  SI  H0  H1  NSFI  NSR/ACT
IEC  2    0&&3 0  0   0   BLKDPC WDB2
IEC  2    0&&2 0  1   1   DPC    WDB3
IEC  2    0&&1 0  2   2   STOP   -----
```


IEC	2	0&&3	4	--	--	STOP	-----
IEC	2	0&&2	1	*	*	DPC	WDB3

4. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```

rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
ACT  ACT      ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME      1    2    3    4    5    6    7    8    9    10
---  ---
1    copy      copy
2    rdct      rdct
3    cr        copy rdct
4    cncf      cncf
5    cpncf     copy cncf
6    cncfrd    cncf rdct
7    cpcfrrd  copy cncf rdct

GWS action set table is (7 of 16) 44% full

```

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to configure the required gateway screening stop action set.


Note: If the NSFI of the screen being added in this procedure is STOP, skip step 5 and go to step 6.

5. Enter the commands in the [Verifying the Gateway Screening Configuration](#) on page 312 section to verify that the screen that will be specified by the NSFI/NSR parameter combination in step 6 is in the database.

If the desired screen is not in the database, perform one of the procedures shown in the [Gateway Screening Configuration Procedures](#) on page 312 section to add the desired screen to the database or change an existing screen in the database.

6. Add a new allowed SIO screen to the database using the `ent-scr-sio` command.

If a gateway screening stop action set is to be assigned to the new allowed SIO screen, enter the `ent-scr-sio` command with the `nsfi=stop` parameter and the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 4.

 **CAUTION:** Redirecting SLTA/SLTM messages prevents SLTA/SLTM messages from being returned to the EAGLE 5 ISS. The signaling link carrying these messages will fail if these messages are not returned to the EAGLE 5 ISS. To prevent SLTA/SLTM messages from being redirected, gateway screening stop action sets containing the redirect stop action should not be assigned to Allowed SIO screens containing the service indicator values 1 (SI=1) or 2 (SI=2).

The following list contains the values for `nic`, `si`, `pri`, `h0` and `h1` parameters:

- `nic` - 0 - 3, or an asterisk (*)
- `si` - 0 - 15
- `pri` - 0 - 3, or an asterisk (*)
- `h0` - 0 - 15, or an asterisk (*)
- `h1` - 0 - 15, or an asterisk (*)

A range of values can be specified for the `pri`, `h0`, and `h1` parameters. See the *“Specifying a Range of Values”* on page 313 section for more information. See the *“Specifying H0 and H1 Values”* on page 313 section for information on how the asterisk and a range of values are used for the `h0` and `h1` parameters.

The value of the `nsfi` parameter is based on the value of the service indicator (`si`) parameter. *Table 61: Valid Parameter Combinations for the Allowed SIO Screening Function* on page 307 shows the valid combinations of `nsfi` values and service indicator values. For this example, enter these commands.

```
ent-scr-sio:sr=fld4:nic=2:si=0:h0=4:h1=5:pri=3:nsfi=destfld :nsr=fld5
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0
ENT-SCR-SIO: MASP A - COMPLTD
```

```
ent-scr-sio:sr=iec:nic=2:si=3:pri=1&&3:nsfi=cgpa:nsr=gw11
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0
ENT-SCR-SIO: MASP A - COMPLTD
```

```
ent-scr-sio:sr=ls02:nic=2:si=3:pri=3:nsfi=cdpa:nsr=ls03
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
ENT-SCR-SIO: MASP A - COMPLTD
```

```
ent-scr-sio:sr=ispl:nic=2:si=5:pri=3:nsfi=isup:nsr=ispl
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
ENT-SCR-SIO: MASP A - COMPLTD
```

```
ent-scr-sio:sr=tup1:nic=2:si=4:pri=3:nsfi=dpc:nsr=tup1
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
ENT-SCR-SIO: MASP A - COMPLTD
```

```
ent-scr-sio:sr=tup1:nic=2:si=5:pri=3:nsfi=dpc:nsr=isp2
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
ENT-SCR-SIO: MASP A - COMPLTD
```

7. Verify the changes using the `rtrv-scr-sio` command with the screening reference name used in step 6.

For this example, enter these commands.

```
rtrv-scr-sio:sr=iec
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:31:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED SIO
SR    NIC  PRI  SI  H0    H1    NSFI  NSR/ACT
IEC   2    0&&3 0   0      0     BLKDPC WDB2
IEC   2    0&&2 0   1      1     DPC    WDB3
IEC   2    0&&1 0   2      2     STOP   -----
IEC   2    0&&3 4   --     --     STOP   -----
IEC   2    0&&2 1   *      *     DPC    WDB3
IEC   2    1&&3 3   --     --     CGPA   GW11
```

```
rtrv-scr-sio:sr=ls02
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:32:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED SIO
SR    NIC  PRI  SI  H0    H1    NSFI  NSR/ACT
LS02  2    3    3   --     --     CDPA  LS03
```

```
rtrv-scr-sio:sr=fld4
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:33:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED SIO
SR    NIC  PRI  SI  H0    H1    NSFI  NSR/ACT
FLD4  2    3    0   4      5     DESTFLD FDL5
```

```
rtrv-scr-sio:sr=ispl
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:33:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED SIO
SR    NIC  PRI  SI  H0    H1    NSFI  NSR/ACT
isp1  2    3    5   --     --     ISUP  isp1
```

```
rtrv-scr-sio:sr=tup1
```

The following is an example of the possible output.


```
rlghncxa03w 06-10-25 15:33:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED SIO
SR    NIC  PRI  SI  H0    H1    NSFI  NSR/ACT
tup1  2    3    4   --     --     DPC    tup1
tup1  2    3    5   --     --     ISUP  isp2
```


- Backup the new changes using the `chg-db:action=backup:dest=fixed` command.


The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 56: Adding an Allowed SIO Screen

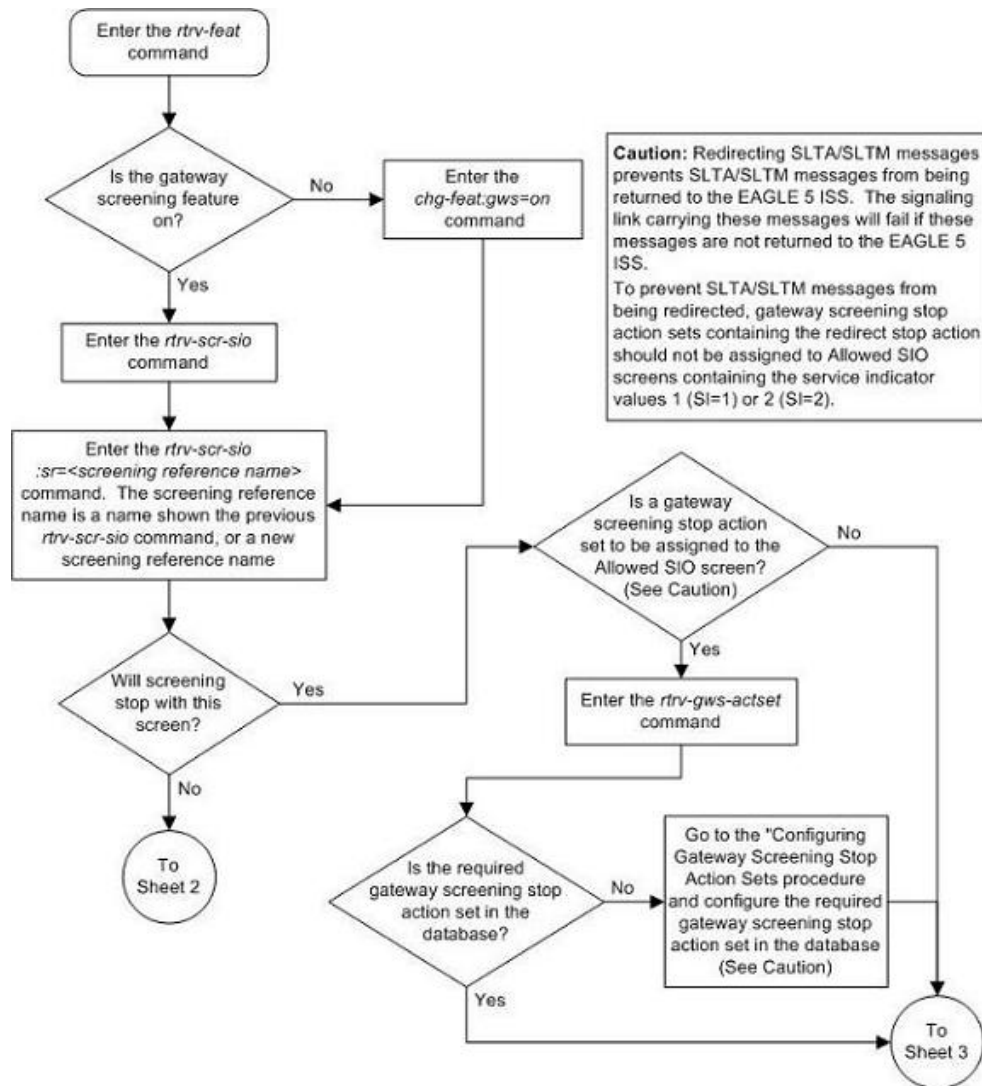

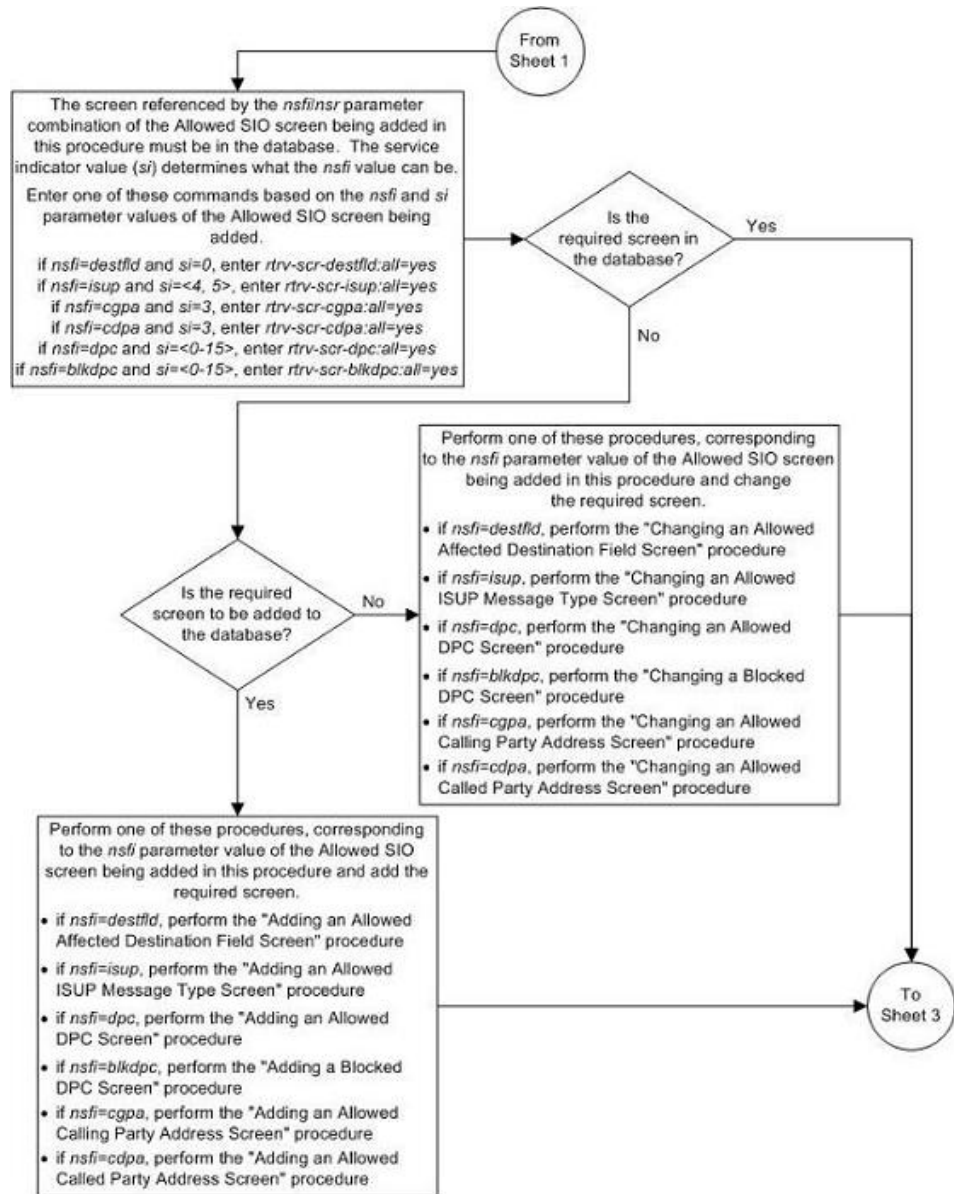

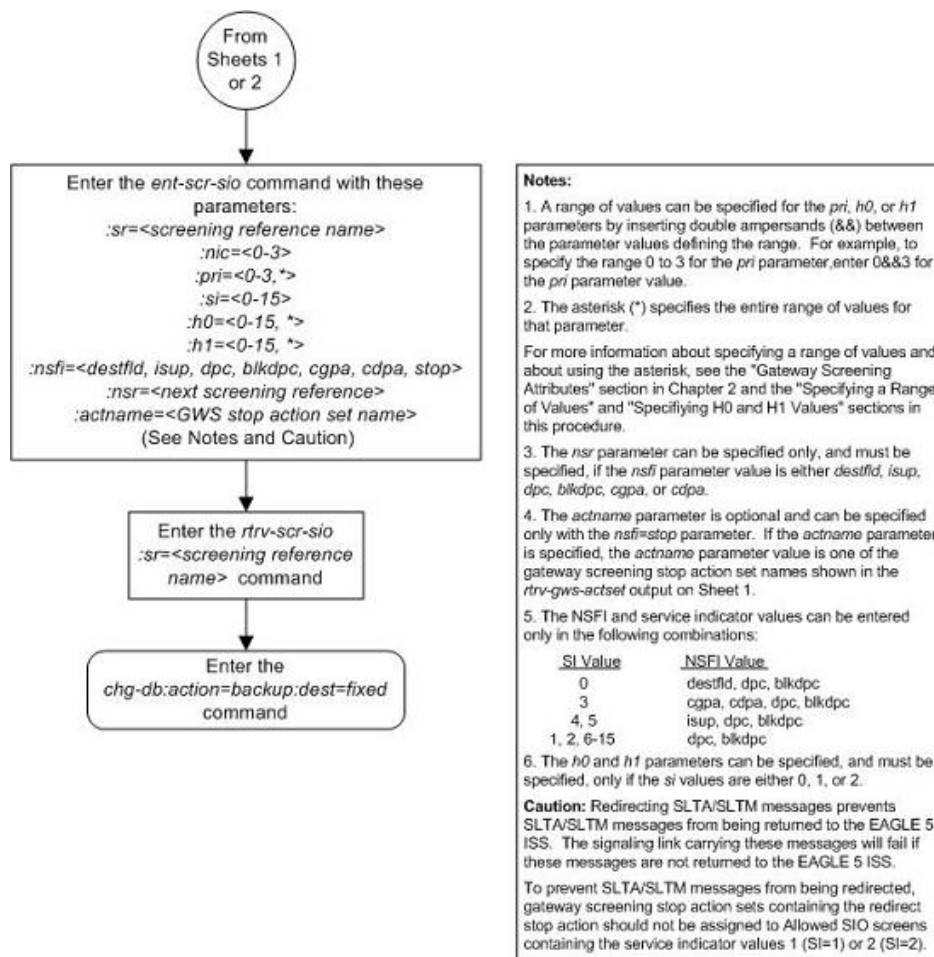

Removing an Allowed SIO Screen

This procedure is used to remove an allowed signaling information octet (SIO) screen from the database using the `dlt-scr-sio` command. The parameters used by the `dlt-scr-sio` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure removes the allowed SIO screen 1s02 from the database.

The allowed SIO screen can be referenced by one of the following screens.

- Screen Set
- Allowed OPC
- Blocked OPC

Verifying the Gateway Screening Configuration

Enter the following commands to verify that none of these screens reference the allowed SIO screen being removed from the database.

- `rtrv-scrset:nsfi=sio`
- `rtrv-scr-opc:nsfi=sio`
- `rtrv-scr-blkopc:nsfi=sio`

Gateway Screening Configuration Procedures

To change the NSFI of any of these screens, perform one of these procedures.

- [Changing a Screen Set](#) on page 409
- [Changing an Allowed OPC Screen](#) on page 386
- [Changing a Blocked OPC Screen](#) on page 353

1. Display the allowed SIO screens in the database using the `rtrv-scr-sio` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED SIO

SR    REF  RULES
IEC   YES   6
ISP1  YES   1
WRD2  YES   1
WRD4  YES   9
LS02  YES   1
TUP1  YES   2
```

From the `rtrv-scr-sio` output, display the allowed SIO screen you wish to remove using the `rtrv-scr-sio` command with the screening reference name. For this example, enter this command.

```
rtrv-scr-sio:sr=ls02
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED SIO
SR    NIC  PRI  SI  H0    H1    NSFI  NSR/ACT
LS02  2     3   3   --   --   CDPA  LS03
```

2. Enter the commands in the [Verifying the Gateway Screening Configuration](#) on page 320 section to verify that the screen being removed is not referenced by other screens in the database.

If the screen being removed is referenced by other screens, perform the procedures shown in the [Gateway Screening Configuration Procedures](#) on page 321 to change the NSFI of those screens to reference other screens or change the NSFI of these screens to STOP.

3. Remove the allowed SIO to the database using the `dlt-scr-sio` command.

The `dlt-scr-sio` command must be entered with these parameters: `sr`, `nic`, `si`, `pri`. The values for these parameters must be entered exactly as shown in the `rtrv-scr-sio` output in step 1. If the screen being removed has values for the `h0` and `h1` parameters, these values must be entered with the other parameter values. If the screen being removed contains dashes for the `h0` and `h1` parameters, the `h0` and `h1` parameters cannot be specified with the `dlt-scr-sio` command. For this example, enter this command.

```
dlt-scr-sio:sr=ls02:nic=2:si=3:pri=3
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0  
DLT-SCR-SIO: SCREEN SET AFFECTED - LS02 0% FULL  
DLT-SCR-SIO: MASP A - COMPLTD
```

4. Verify the changes using the `rtrv-scr-sio` command with the screening reference name used in step 3.

For this example, enter this command.

```
rtrv-scr-sio:sr=ls02
```

The following is an example of the possible output.

```
E2573 Cmd Rej: SR or NSR does not reference an existing SR
```


This message shows that the specified screening reference name is not in the database and the action of the `dlt-scr-sio` command in step 3 was successful. If the specified screening reference name contained more than one entry when the `dlt-scr-sio` command was executed in step 3, the `rtrv-scr-sio:sr=` command output would show the remaining entries in the screening reference instead of error message E2573.

5. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.  
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.  
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.  
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 57: Removing an Allowed SIO Screen

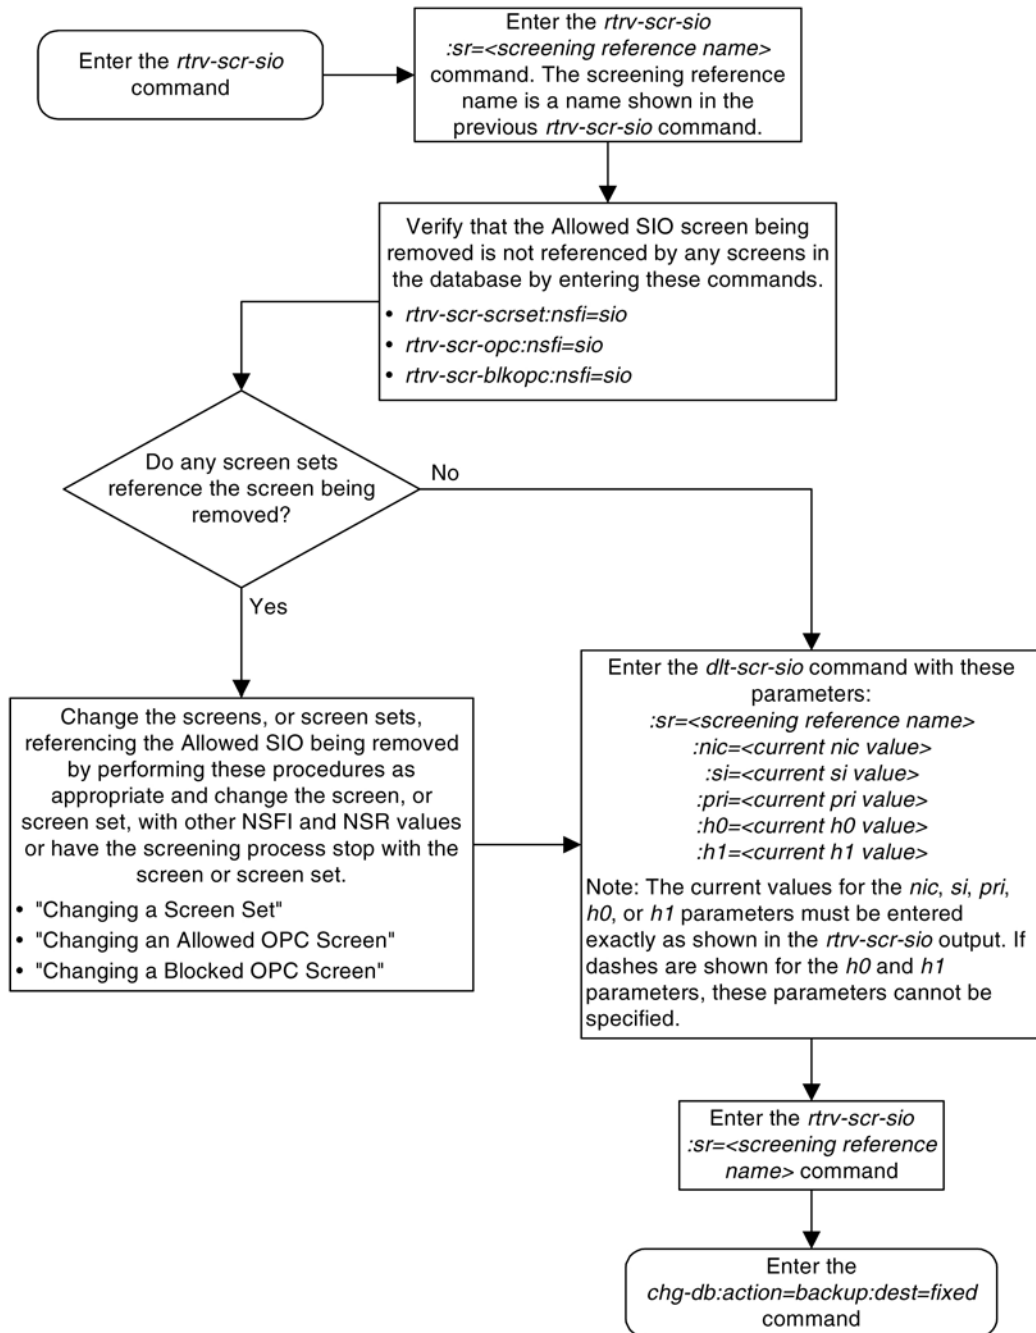

Changing an Allowed SIO Screen

This procedure is used to change the attributes of an allowed signaling information octet (SIO) screen in the database using the `chg-scr-sio` command. The parameters used by the `chg-scr-sio` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The

general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure change the allowed SIO screen `ls02` to an `nic` of 2, an `si` of 14, and an `nsfi` is stop.

The allowed SIO screen can reference one of the following screens.

- Allowed DPC
- Blocked DPC
- Allowed Affected Destination Field
- Allowed ISUP
- Allowed CGPA
- Allowed CDPA

Verifying the Gateway Screening Configuration

Enter the following commands to verify that these screens are in the database.

- `rtrv-scr-dpc:all=yes`
- `rtrv-scr-blkdpc:all=yes`
- `rtrv-scr-destfld:all=yes`
- `rtrv-scr-isup:all=yes`
- `rtrv-scr-cgpa:all=yes`
- `rtrv-scr-cdpa:all=yes`

Gateway Screening Configuration Procedures

If the desired screen is not in the database, perform one of these procedures to add the desired screen to the database or change an existing screen in the database.

- [Adding an Allowed DPC Screen](#) on page 276
- [Adding a Blocked DPC Screen](#) on page 242
- [Adding an Allowed Affected Destination Field Screen](#) on page 216
- [Adding an Allowed ISUP Message Type Screen](#) on page 441
- [Adding an Allowed Calling Party Address Screen](#) on page 184
- [Adding an Allowed Called Party Address Screen](#) on page 128
- [Changing an Allowed DPC Screen](#) on page 292
- [Changing a Blocked DPC Screen](#) on page 258
- [Changing an Allowed Affected Destination Field Screen](#) on page 227
- [Changing an Allowed ISUP Message Type Screen](#) on page 450
- [Changing an Allowed Calling Party Address Screen](#) on page 198
- [Changing an Allowed Called Party Address Screen](#) on page 143

The new values for the network indicator code, service indicator, priority, and heading codes being changed in the allowed SIO screen cannot be in that screen.

Specifying a Range of Values

A range of values can be specified for the `pri`, `h0`, and `h1` parameters. If a range of values is specified for any of these parameters and the `nic` and `si` values in the screening reference name are not changed, the range of values for the `pri`, `h0`, or `h1` parameters cannot include any values that are currently provisioned for the screening reference name.

For example, screening reference name `scr1` contains these entries:

SR	NIC	PRI	SI	H0	H1	NSFI	NSR/ACT
SCR1	2	3	1	4	5	DPC	LS03
SCR1	2	2	1	2	7	BLKDPC	LS04

Another entry for screening reference `scr1` with the same `nic` and `si` values cannot be specified if:

- The range of values for the `pri` parameter includes the values 2 or 3
- The range of values for the `h0` parameter includes the values 2 or 4
- The range of values for the `h1` parameter includes the values 5 or 7.

Changing H0 and H1 Values

The `h0` and `h1` values must be specified if the `si` value is 0, 1, or 2. If the `si` value is 3 through 15, the `h0` and `h1` parameters cannot be specified.

The `nh0` and `nh1` values must be specified if the `nsi` value is 0, 1, or 2. If the `nsi` value is 3 through 15, the `nh0` and `nh1` parameters cannot be specified.

The `h0` and `h1` parameters must be specified if either parameter is specified.

The `nh0` and `nh1` parameters must be specified if either parameter is specified.

The H0 and H1 heading code values can be a single value, a range of values with the beginning and end of the range separated by double ampersands (for example, a range of values from 2 to 9, 2&&9), or with an asterisk (*). The asterisk specifies all possible values for the `h0` and `h1` parameters. [Table 64: Valid Value Combinations for H0 and H1 Parameters](#) on page 325 shows the valid combinations of these parameter values.

Table 64: Valid Value Combinations for H0 and H1 Parameters

H0	H1
Single Value	Single Value
Single Value	Range of Values
Single Value	Asterisk
Range of Values	Asterisk
Asterisk	Asterisk

1. Display the allowed SIO screens in the database using the `rtrv-scr-sio` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED SIO
SR      REF  RULES
IEC     YES   6
ISP1    YES   1
```

```
WRD2 YES 1
WRD4 YES 9
LS02 YES 1
TUP1 YES 2
```

From the `rtrv-scr-sio` output, display the allowed SIO screen you wish to change using the `rtrv-scr-sio` command with the screening reference name. For this example, enter this command.

```
rtrv-scr-sio:sr=ls02
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED SIO
SR  NIC  PRI  SI  H0      H1      NSFI  NSR/ACT
LS02 2    3    3  --    --    CDPA  LS03
```

If a gateway screening stop action set is to be assigned to the allowed SIO screen being changed in the database, go to step 2.

Step 2 verifies the gateway screening stop action set names in the database. The gateway screening stop action set names are assigned only if the NSFI of the screen being changed in this procedure is STOP. If the NSFI of the screen will be changed to STOP, but a gateway screening stop action set name will not be assigned to the screen, skip steps 2 and 3 and go to step 4. If the NSFI of the screen will not be STOP, skip step 2 and go to step 3.

2. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID  NAME  1    2    3    4    5    6    7    8    9    10
---  ---
1    copy  copy
2    rdct  rdct
3    cr    copy rdct
4    cnf   cnf
5    cpcnf copy cnf
6    cnf   rdct
7    cpcnf copy cnf rdct

GWS action set table is (7 of 16) 44% full
```

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to configure the required gateway screening stop action set.

Note: If the NSFI of the screen being changed in this procedure will be STOP, or if the NSFI of the screen is not being changed, skip step 3 and go to step 4.

3. Enter the commands in the [Verifying the Gateway Screening Configuration](#) on page 324 section to verify that the screen that will be specified by the NSFI/NSR parameter combination in step 4 is in the database.

If the desired screen is not in the database, perform one of the procedures shown in the [Gateway Screening Configuration Procedures](#) on page 324 section to add the desired screen to the database or change an existing screen in the database.

- Change the attributes of an allowed SIO screen using the `chg-scr-sio` command.

If a gateway screening stop action is to be assigned to the allowed SIO screen being changed, enter the `chg-scr-sio` command with the `nsfi=stop` parameter and the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 2.



CAUTION

Redirecting SLTA/SLTM messages prevents SLTA/SLTM messages from being returned to the EAGLE 5 ISS. The signaling link carrying these messages will fail if these messages are not returned to the EAGLE 5 ISS. To prevent SLTA/SLTM messages from being redirected, gateway screening stop action sets containing the redirect stop action should not be assigned to Allowed SIO screens containing the service indicator values 1 (SI=1) or 2 (SI=2).

The current values for the `nic`, `si`, `pri`, `h0` and `h1` parameters must be entered in the `chg-scr-sio` command exactly as shown in the `rtrv-scr-sio` output in step 1.

The following list contains the values for `nnic`, `nsi`, `npri`, `nh0` and `nh1` parameters:

- `nnic` - 0 - 3, or an asterisk (*)
- `nsi` - 0 - 15
- `npri` - 0 - 3, or an asterisk (*)
- `nh0` - 0 - 15, or an asterisk (*)
- `nh1` - 0 - 15, or an asterisk (*)

A range of values can be specified for the `npri`, `nh0`, and `nh1` parameters. See the [“Specifying a Range of Values”](#) on page 324 section for more information. See the [“Changing H0 and H1 Values”](#) on page 325 section for information on how the asterisk and a range of values are used for the `nh0` and `nh1` parameters.

The value of the `nsfi` parameter is based on the value of the service indicator (`si`) parameter. [Table 61: Valid Parameter Combinations for the Allowed SIO Screening Function](#) on page 307 shows the valid combinations of `nsfi` values and service indicator values.

For this example, enter this command.

```
chg-scr-sio:sr=ls02:nic=2:si=3:pri=3:nsi=14:nsfi=stop
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
CHG-SCR-SIO: SCREEN SET AFFECTED - LS02 1% FULL
CHG-SCR-SIO: MASP A - COMPLTD
```

- Verify the changes using the `rtrv-scr-sio` command with the screening reference name used in step 4.

For this example, enter this command.

```
rtrv-scr-sio:sr=ls02
```

The following is an example of the possible output.


```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED SIO
SR    NIC  PRI  SI  H0    H1    NSFI    NSR/ACT
LS02  2     3   14  --    --    STOP    -----
```


- Backup the new changes using the `chg-db:action=backup:dest=fixed` command.


The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 58: Changing an Allowed SIO Screen

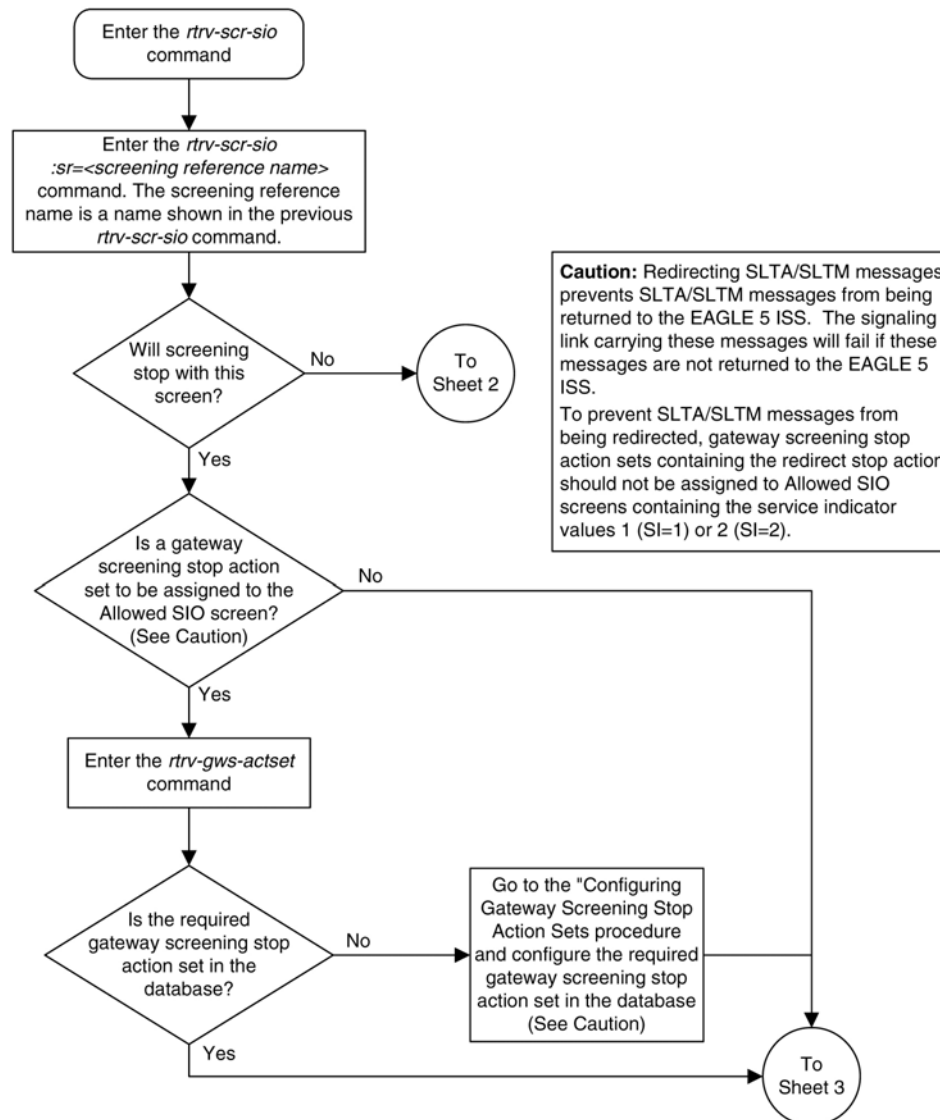

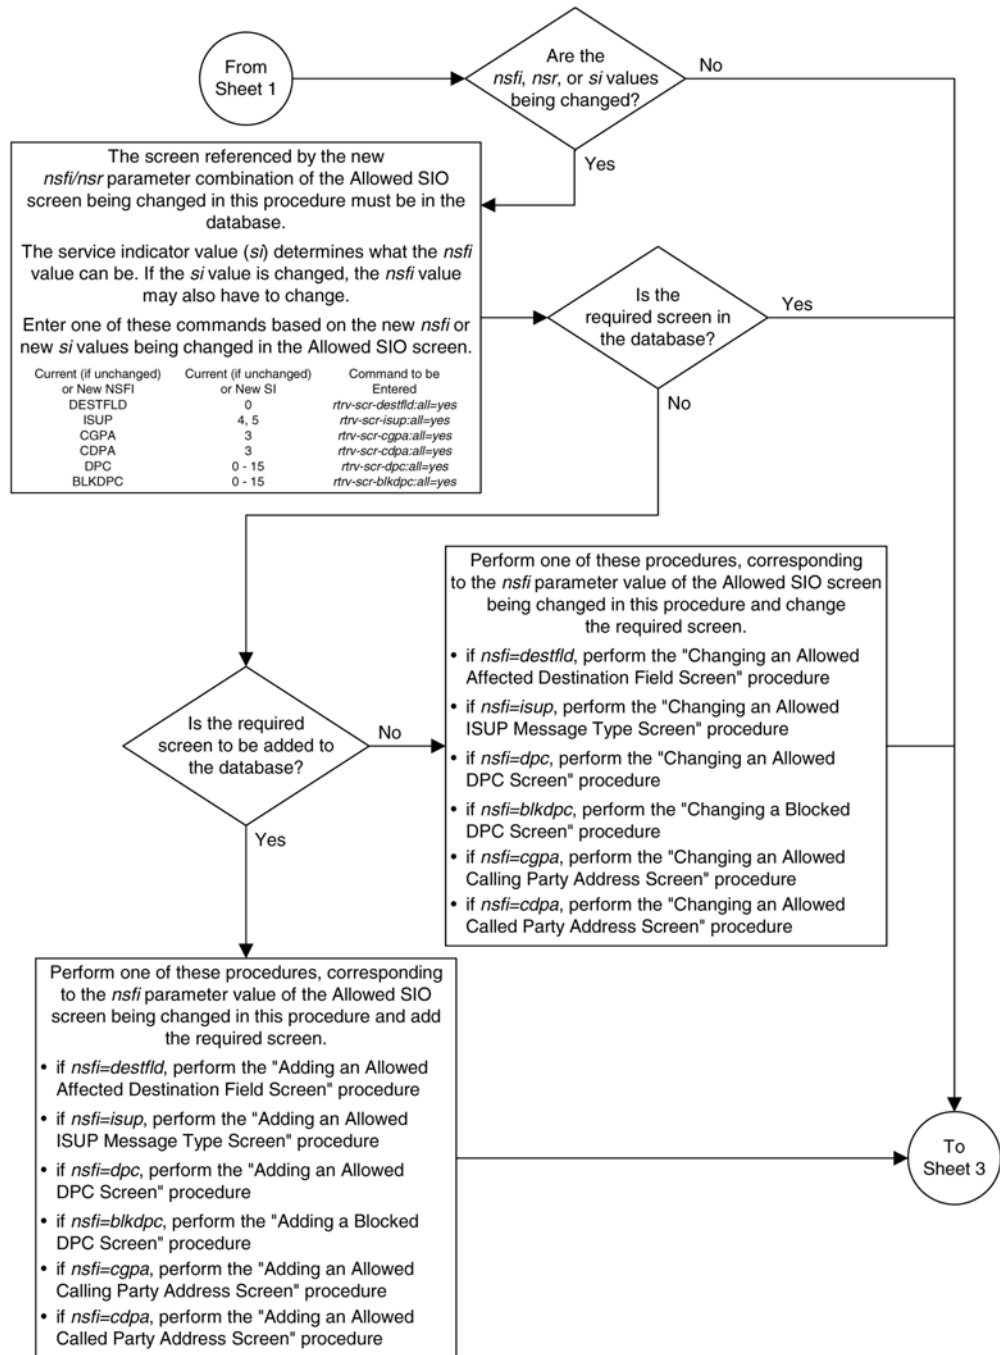

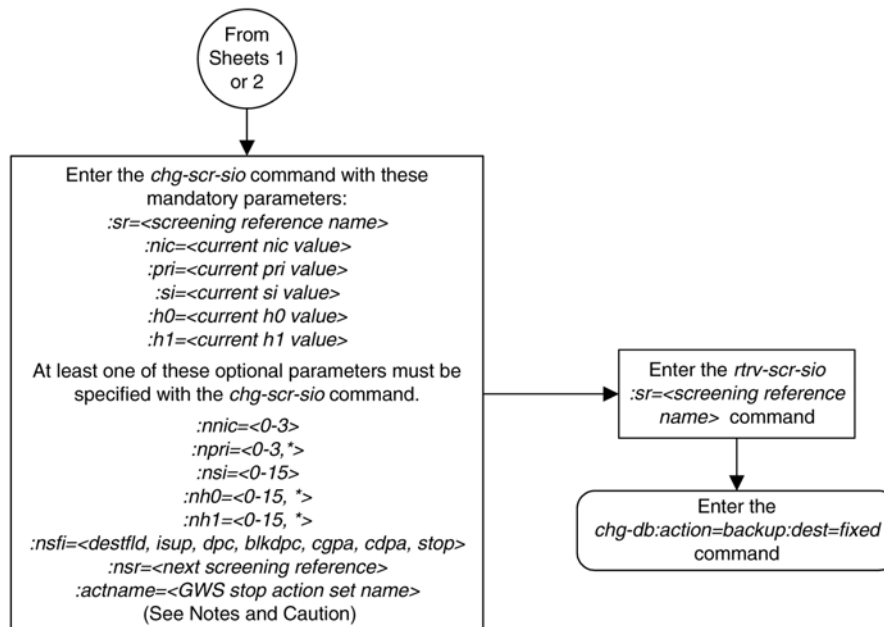

Notes:

1. A range of values can be specified for the *npri*, *nh0*, or *nh1* parameters by inserting double ampersands (&&) between the parameter values defining the range. For example, to specify the range 0 to 3 for the *npri* parameter, enter 0&&3 for the *npri* parameter value.
 2. The asterisk (*) specifies the entire range of values for that parameter.
- For more information about specifying a range of values and about using the asterisk, see the "Gateway Screening Attributes" section in Chapter 2 and the "Specifying a Range of Values" and "Specifying H0 and H1 Values" sections in this procedure.
3. The current values for the *nic*, *si*, *pri*, *h0*, or *h1* parameters must be entered exactly as shown in the *rtrv-scr-sio* output. If dashes are shown for the *h0* and *h1* parameters, these parameters cannot be specified.
 4. The *nsr* parameter can be specified only, and must be specified, if the *nsfi* parameter is specified and its value is either *destfld*, *isup*, *dpc*, *blkdp*, *cgpa*, or *cdpa*.
 5. The *actname* parameter is optional and can be specified only if the current *nsfi* parameter is *stop*, or the new *nsfi* parameter value is *stop*. If the *actname* parameter is specified, the *actname* parameter value is one of the gateway screening stop action set names shown in the *rtrv-gws-actset* output on Sheet 1.
 6. If the *si* parameter value is 0, 1, or 2, the *h0* and *h1* parameters must be specified. If the *si* parameter value is 3 through 15, the *h0* and *h1* parameters cannot be specified.
 7. If the *nsi* parameter value is 0, 1, or 2, the *nh0* and *nh1* parameters must be specified. If the *nsi* parameter value is 3 through 15, the *nh0* and *nh1* parameters cannot be specified.
 8. The NSFI and service indicator values can be entered only in the following combinations:

Current (if unchanged) or New SI Value	Current (if unchanged) or New NSFI Value
0	destfld, dpc, blkdp
3	cgpa, cdpa, dpc, blkdp
4, 5	isup, dpc, blkdp
1, 2, 6 - 15	dpc, blkdp

Caution: Redirecting SLTA/SLTM messages prevents SLTA/SLTM messages from being returned to the EAGLE 5 ISS. The signaling link carrying these messages will fail if these messages are not returned to the EAGLE 5 ISS. To prevent SLTA/SLTM messages from being redirected, gateway screening stop action sets containing the redirect stop action should not be assigned to Allowed SIO screens containing the service indicator values 1 (SI=1) or 2 (SI=2).

Chapter 11

Blocked Originating Point Code (BLKOPC) Screen Configuration

Topics:

- [Introduction Page 332](#)
- [Adding a Blocked OPC Screen Page 336](#)
- [Removing a Blocked OPC Screen Page 349](#)
- [Changing a Blocked OPC Screen Page 353](#)

Chapter 11, Blocked Originating Point Code (BLKOPC) Screen Configuration, contains the procedures necessary to configure blocked originating point code screens.

Introduction

The blocked OPC screen identifies OPC's that are not allowed to send SS7 messages into the network. The gray shaded areas in [Figure 60: Blocked OPC Screening Functions](#) on page 335 shows the fields of the SS7 message that are checked by the blocked OPC screening function.

Gateway Screening Actions

If a match is found, the `nsfi` is equal to `fail`, the message is discarded and no further screening takes place.

If a match is not found, the `nsfi` is examined to determine the next step in the screening process. If the `nsfi` value is any value other than `stop`, the next screening reference (`nsr`) is identified and the screening process continues to the next screen identified by the `nsfi` and `nsr` parameter values.


If the `nsfi` is equal to `stop`, the screening process stops and the message is processed. If a gateway screening stop action set is specified with the screen, shown by the `actname` parameter value, the message is processed according to the gateway screening stop actions that are assigned to the gateway screening stop action set.


- If the `copy` gateway screening stop action is specified, the message is processed and a copy of the message is sent by the STPLAN feature to an external application.
- If the `rdct` (redirect) gateway screening stop action is specified, the message is diverted from the original destination and sent to another destination with the Database Transport Access feature, specified by global title translation, for further processing.
- If the `cncf` gateway screening stop action is specified, the PIP parameter in the incoming ISUP IAM message is converted to the GN parameter. The GN parameter in the incoming ISUP IAM message is converted to the PIP parameter. The message is then sent to the node specified by the DPC in the routing label in the message. For more information on the Calling Name Conversion Facility feature, see [Calling Name Conversion Facility \(CNCF\) Configuration](#) on page 417.
- If the `tlnp` gateway screening stop action is specified, ISUP IAMs that pass gateway screening are processed either by the ISUP NP with EPAP feature (if the ISUP NP with EPAP feature is enabled and turned on) or by the Triggerless LNP feature (if the Triggerless LNP feature is turned on). The ISUP NP with EPAP feature is discussed in more detail in the *Feature Manual - G-Port*. The Triggerless LNP feature is discussed in more detail in the *LNP Feature Activation Guide*.
- If the `tinp` gateway screening stop action is specified, ISUP IAMs that pass gateway screening are intercepted by the Triggerless ISUP based Number Portability (TINP) feature and converted to include the routing number (RN) if the call is to a ported number. The TINP feature is discussed in more detail in the *Feature Manual - G-Port*.
- If the `tif`, `tif2`, or `tif3` gateway screening stop actions are specified, TIF processing is applied to the message.

Blocked OPC Screening Actions

Figure 59: *Blocked OPC Screening Actions* on page 333 shows the screening actions of the blocked OPC screen.

Figure 59: Blocked OPC Screening Actions

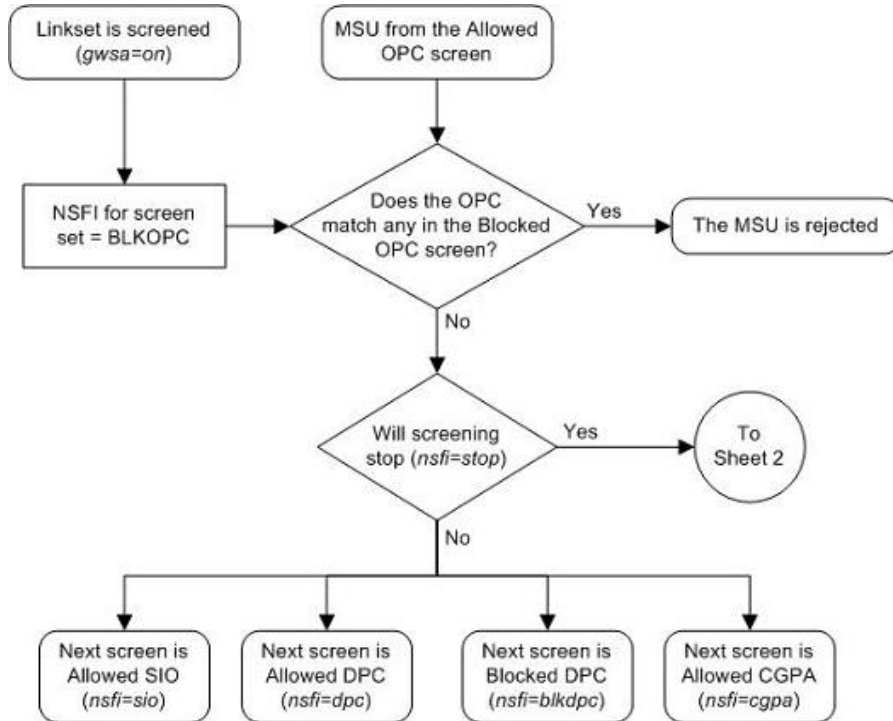

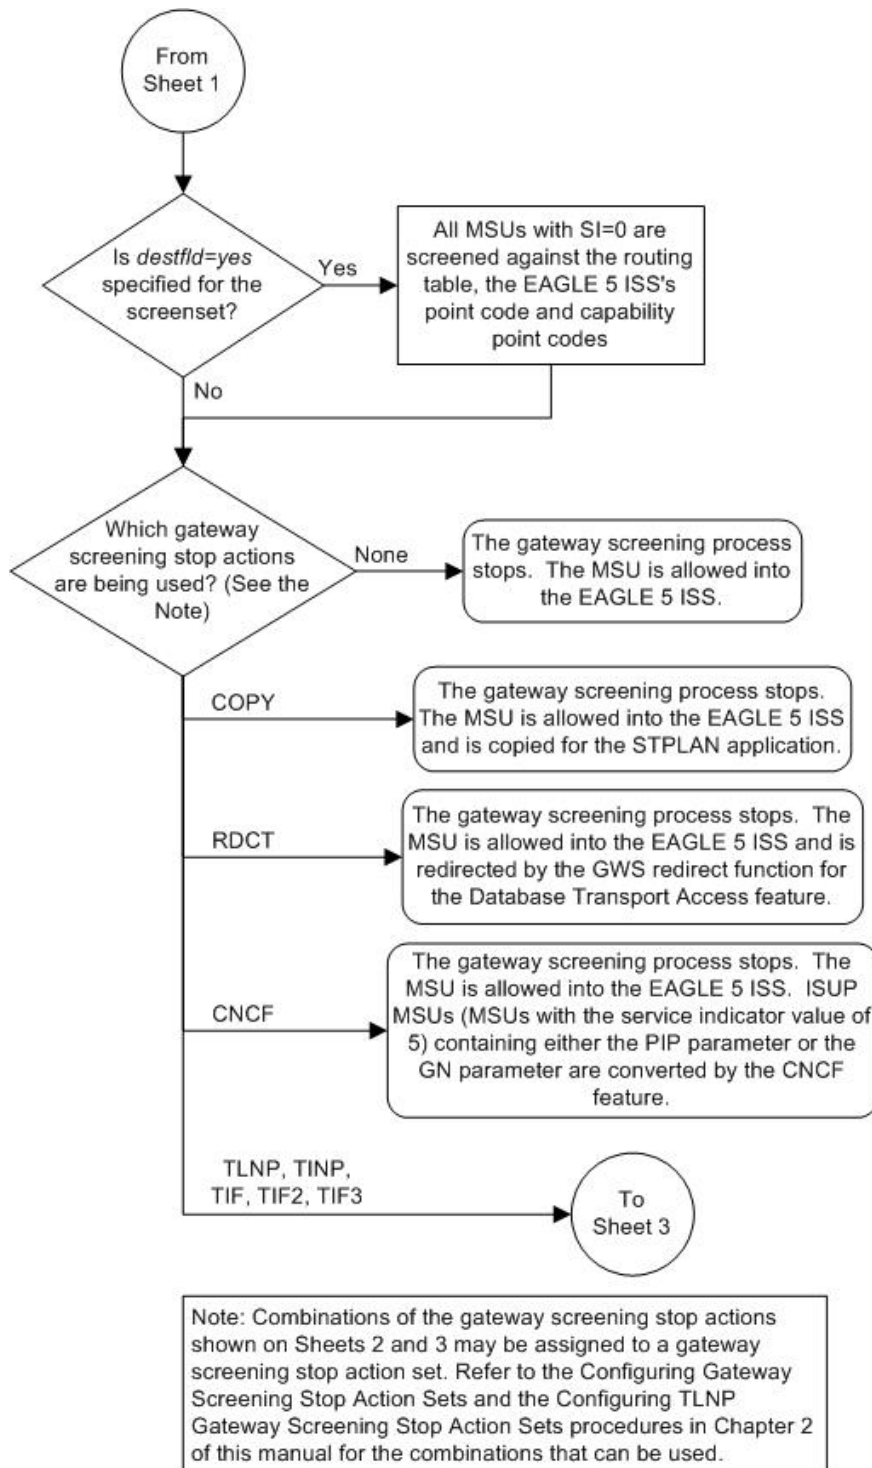

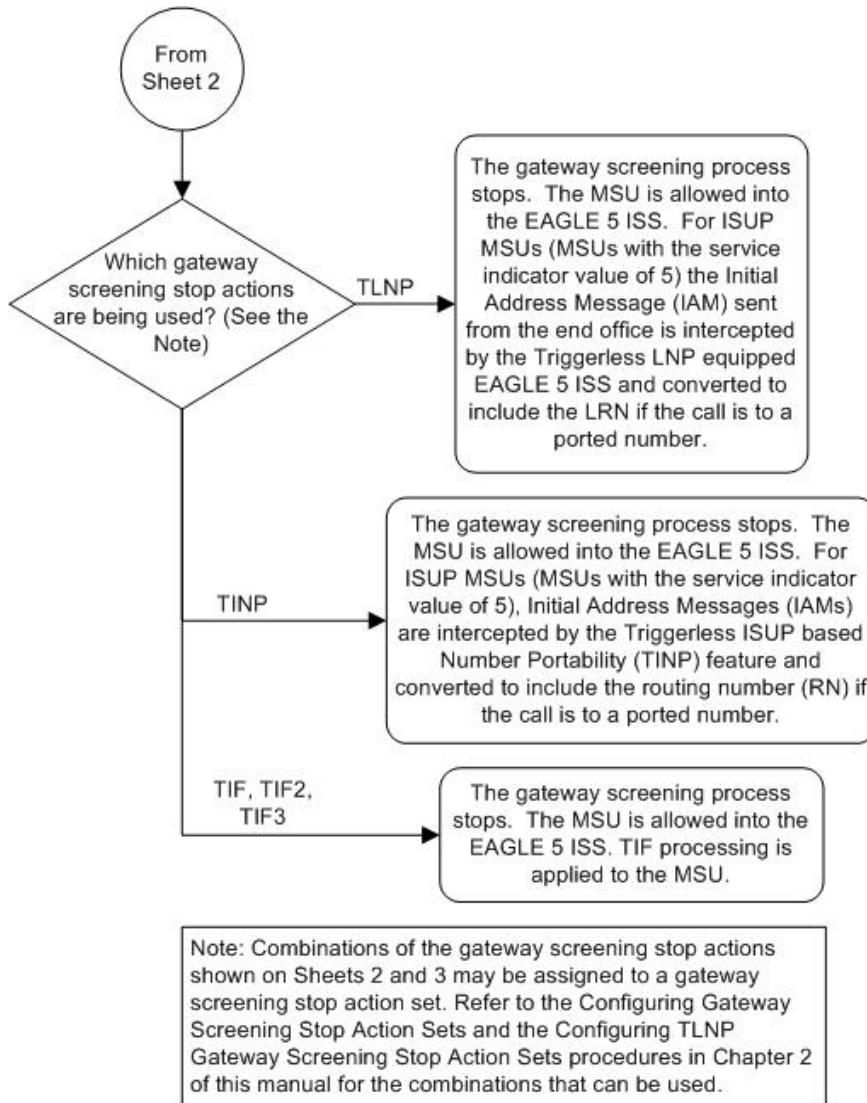


Figure 60: Blocked OPC Screening Functions

ANSI MSU (ANSI Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF			
		DPC NCM NC NI	Routing Label OPC NCM NC NI	SLS xx	

ITU-I MSU (ITU International Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF			
		DPC ID AREA ZONE	Routing Label OPC ID AREA ZONE	SLS xx	

14-Bit ITU-N MSU (14-Bit ITU National Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF		
		DPC NPC	Routing Label OPC NPC	SLS xx

24-Bit ITU-N MSU (24-Bit ITU National Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF			
		DPC SP SSA MSA	Routing Label OPC SP SSA MSA	SLS xx	

Adding a Blocked OPC Screen

This procedure is used to add a blocked originating point code (OPC) screen to the database using the `ent-scr-blkopc` command. The parameters used by the `ent-scr-blkopc` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The examples in this procedure are used to add the blocked OPC screen data shown in [Table 65: Example Gateway Screening Blocked OPC Configuration Table](#) on page 337 and based on the example configurations shown in [Figure 5: Gateway Screening Configuration - Example 1](#) on page 42, [Figure 6: Gateway Screening Configuration - Example 2](#) on page 44, and [Figure 9: Gateway Screening Configuration - Example 5](#) on page 48.

Table 65: Example Gateway Screening Blocked OPC Configuration Table

Screening Reference	ZONE	AREA	ID	NSFI	NSR
gws5	C	C	C	sio	iec
gws5	4	250	3	fail	----
Screening Reference	NI	NC	NCM	NSFI	NSR
fld3	C	C	C	sio	fld4
fld3	020	020	020	fail	----
gws3	C	C	C	dpc	gws9
gws3	001	002	002	fail	----
isp1	C	C	C	sio	isp1
isp1	025	025	025	fail	----

Note: If you using multiple-part ITU national point codes with gateway screening, see the [14-Bit ITU National Point Code Formats](#) on page 34 section.

The blocked OPC screen can reference one of the following screens.

- Allowed SIO
- Allowed DPC
- Blocked DPC
- Allowed CGPA

Verifying the Gateway Screening Configuration

Enter the following commands to verify that these screens are in the database.

- `rtrv-scr-sio:all=yes`
- `rtrv-scr-dpc:all=yes`
- `rtrv-scr-blkdpc:all=yes`
- `rtrv-scr-cgpa:all=yes`

Gateway Screening Configuration Procedures

If the desired screen is not in the database, perform one of the following procedures to add the desired screen to the database or change an existing screen in the database.

- [Adding an Allowed SIO Screen](#) on page 311
- [Adding an Allowed DPC Screen](#) on page 276
- [Adding a Blocked DPC Screen](#) on page 242
- [Adding an Allowed Calling Party Address Screen](#) on page 184
- [Changing an Allowed SIO Screen](#) on page 323
- [Changing an Allowed DPC Screen](#) on page 292
- [Changing a Blocked DPC Screen](#) on page 258

- [Changing an Allowed Calling Party Address Screen](#) on page 198

For the first entry for a specific screening reference, the value for the point code must be `c`, and the NSFI must be either `stop`, `sio`, `dpc`, `blkdpc`, or `cgpa`. If the NSFI is `stop`, the screening of the message will stop at the specified blocked OPC screen. If the NSFI is either `sio`, `dpc`, `blkdpc`, or `cgpa`, then any message containing a point code that is not listed in the blocked OPC screen with a NSFI equal to `fail`, will continue to be screened with either the allowed SIO, allowed DPC, blocked DPC, or the allowed CGPA screen.

All subsequent entries for that screening reference must contain a numeric point code value, the NSFI must be equal to `fail`, and the `nsr` parameter cannot be specified. Any message that contains an OPC in the blocked OPC screen with the NSFI equal to `fail` will be rejected from the network and the screening process is stopped.

The `pcst` parameter, specifying whether or not the ITU-I or 14-bit ITU-N point code is a spare point code, cannot be used with the `zone=c` or `npc=c` parameters.

Specifying a Range of Values

A range of values can be specified for the point code parameters `ni`, `nc`, or `ncm`.

If a range of values is specified for any of these parameters, and the value of the other parameters match existing values for the screening reference name, the range of values for the point code parameter cannot include any values for that parameter that are currently provisioned for the screening reference name.

For example, screening reference name `scr1` contains these entries:

SR	NI	NC	NCM	NSFI	NSR/ACT
SCR1	240	001	010	FAIL	-----
SCR1	241	010	020	FAIL	-----

Another entry for screening reference `scr1` with the `ni` value of 240 and the `nc` value of 001 cannot be specified if the range of values for the `ncm` parameter includes the value 010.

The ANSI point code parameter values can be specified as a single value, a range of values, or with an asterisk (*). The asterisk specifies all possible values for the `ni`, `nc`, and `ncm` parameters. [Table 66: Valid Value Combinations for ANSI Point Code Parameters](#) on page 338 shows the valid combinations of these parameter values.

Table 66: Valid Value Combinations for ANSI Point Code Parameters

NI	NC	NCM
Single Value	Single Value	Single Value
Single Value	Single Value	Range of Values
Single Value	Single Value	Asterisk
Single Value	Range of Values	Asterisk
Single Value	Asterisk	Asterisk
Range of Values	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

A range of values can also be specified for an ITU-I or 24-bit ITU-N point code parameter using a combination of asterisks (*) and single values for the point code parameters. [Table 67: Valid Value Combinations for ITU-I Point Code Parameters](#) on page 339 shows the valid combinations of the ITU-I parameter values. [Table 68: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters](#) on page 339 shows the valid combinations of the 24-bit ITU-N parameter values.

Table 67: Valid Value Combinations for ITU-I Point Code Parameters

ZONE	AREA	ID
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

Table 68: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters

MSA	SSA	SP
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

1. Verify that the gateway screening feature is on, by entering the `rtrv-feat` command.

If the gateway screening feature is on, the `GWS` field is set to `on`.

Note: The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

If the gateway screening feature is on, shown by the entry `GWS = on` in the `rtrv-feat` command output, skip step 2, and go to step 3.

2. Turn the gateway screening feature on by entering this command.

```
chg-feat:gws=on
```

Note: Once the gateway screening feature is turned on with the `chg-feat` command, it cannot be turned off.

The gateway screening feature must be purchased before you turn this feature on with the `chg-feat` command. If you are not sure if you have purchased the gateway screening feature, contact your Tekelec Sales Representative or Account Representative.

When the `chg-feat` has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 11:43:04 GMT EAGLE5 36.0.0
CHG-FEAT: MASP A - COMPLTD
```

3. Display all blocked OPC screens in the database using the `rtrv-scr-blkopc` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = BLOCKED OPC
SR      REF  RULES
IEC     YES   2
WRD2    YES   1
WRD4    YES   9
```

If the screening reference names that you wish to add with this procedure are not shown in the `rtrv-scr-blkopc` command output, go to step 4. For this example, the screening reference names are not shown. If these screening reference names are shown in the `rtrv-scr-blkopc` command output, make sure the screening data you wish to enter is not already in the database by entering the `rtrv-scr-blkopc` command with the screening reference name. For example, enter the `rtrv-scr-blkopc:sr=iec` command. The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
SCREEN = BLOCKED OPC
SR      NI      NC      NCM      NSF1      NSR/ACT
IEC     240     001     010     FAIL     -----
IEC     241     010     *       FAIL     -----

SR      ZONE   AREA   ID      NSF1      NSR/ACT
IEC     1       003   4       FAIL     -----
IEC     1       003   5       FAIL     -----

SR      NI      NC      NCM      NSF1      NSR/ACT
IEC     C       C      C       STOP     CR
SR      NPC
IEC     00235
       NSF1      NSR
       FAIL     -----

SR      NI      NC      NCM      NSF1      NSR/ACT
WRD2    243     015     001     STOP     -----
WRD2    243     105     002     FAIL     -----
WRD2    C      C      C       STOP     -----
```

If a gateway screening stop action set is to be assigned to the blocked OPC screen being added to the database, go to step 4.

Step 4 verifies the gateway screening stop action set names in the database. The gateway screening stop action set names are assigned only if the NSF1 of the screen being added in this procedure is STOP. If the NSF1 of the new screen will be STOP, but a gateway screening stop action set name will not be assigned to the new screen, skip steps 4 and 5 and go to step 6. If the NSF1 of the new screen is not STOP, skip step 4 and go to step 5.

4. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0
ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME  1    2    3    4    5    6    7    8    9    10
---  ---  ---  ---  ---  ---  ---  ---  ---  ---  ---  ---
1    copy  copy
2    rdct  rdct
3    cr    copy rdct
4    cnf   cnf
5    cpnf  copy cnf
6    cnfrd cnf rdct
```

```
7 cpcfird copy cncf rdct
GWS action set table is (7 of 16) 44% full
```

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to configure the required gateway screening stop action set.

Note: If the NSFI of the screen being added in this procedure is STOP or FAIL, skip step 5 and go to step 6.

5. Enter the commands in the [Verifying the Gateway Screening Configuration](#) on page 337 section to verify that the screen that will be specified by the NSFI/NSR parameter combination in step 7 is in the database.

If the desired screen is not in the database, perform one of the procedures shown in the [Gateway Screening Configuration Procedures](#) on page 337 section to add the desired screen to the database or change an existing screen in the database.

6. Display the status of the ITU National and International Spare Point Code Support feature by entering the `rtrv-ctrl-feat` command with the ITU National and International Spare Point Code Support feature part number.

Note: If the point code being added in this procedure is not an ITU-I or 14-bit ITU-N spare point code, skip this step and to step 7.

Note: If the point code being added in this procedure is an ITU-I or 14-bit ITU-N spare point code and the screening reference contains ITU-I or 14-bit ITU-N spare point codes, skip this step and go to step 7.

Enter this command.

```
rtrv-ctrl-feat:partnum=893013601
```

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name                Partnum  Status  Quantity
Spare Point Code Support    893013601 on      ----

The following features have been temporarily enabled:

Feature Name                Partnum  Status  Quantity  Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name                Partnum
Zero entries found.
```

If the ITU National and International Spare Point Code Support feature is enabled, go to step 7.

If the ITU National and International Spare Point Code Support feature is not enabled, perform the “Activating the ITU National and International Spare Point Code Support Feature” procedure in the *Database Administration Manual - SS7* to enable the ITU National and International Spare Point Code Support feature as required. After the feature has been enabled, go to step 7.

7. Add a new blocked OPC screen to the database using the `ent-scr-blkopc` command.

If a gateway screening stop action is to be assigned to the blocked OPC screen being changed, enter the `ent-scr-blkopc` command with the `nsfi=stop` parameter and the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 4. The following list contains the values for `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `npc`, `msa`, `ssa`, and `sp` parameters:

- `ni` - 0 - 255, c, or an asterisk (*)
- `nc` - 0 - 255, c, or an asterisk (*)
- `ncm` - 0 - 255, c, or an asterisk (*)
- `zone` - 0 - 7, c, or an asterisk (*)
- `area` - 0 - 255, c, or an asterisk (*)
- `id` - 0 - 7, c, or an asterisk (*)
- `npc` - 1 - 16383, c, or an asterisk (*)
- `msa` - 0 - 255, c, or an asterisk (*)
- `ssa` - 0 - 255, c, or an asterisk (*)
- `sp` - 0 - 255, c, or an asterisk (*)

A range of values can be specified for the `ni`, `nc`, and `ncm` parameters. See the [“Specifying a Range of Values”](#) on page 338 section for more information on how the asterisk and a range of values are used for the `ni`, `nc`, and `ncm` parameters.

To add a spare point code to the blocked OPC screen, the `pcst=s` parameter must be specified. To add a non-spare point code to the blocked OPC screen, the `pcst` parameter does not have to be specified. If the `pcst` parameter is specified for a screen containing an ITU-I or 14-bit ITU-N non-spare point code, the value must be none. The `pcst` parameter cannot be used with the `zone=c` or `npc=c` parameters.

For this example, enter these commands.

```
ent-scr-blkopc:sr=gws5:zone=c:area=c:id=c:nsfi=sio:nsr=iec
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0
ENT-SCR-BLKOPC: SCREEN SET AFFECTED - GWS5 1% FULL
ENT-SCR-BLKOPC: MASP A - COMPLTD
```

```
ent-scr-blkopc:sr=gws5:zone=4:area=250:id=3:nsfi=fail
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
ENT-SCR-BLKOPC: SCREEN SET AFFECTED - GWS5 1% FULL
ENT-SCR-BLKOPC: MASP A - COMPLTD
```

```
ent-scr-blkopc:sr=gws3:ni=c:nc=c:ncm=c:nsfi=dpc:nsr=gws9
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:31:30 GMT EAGLE5 36.0.0
ENT-SCR-BLKOPC: SCREEN SET AFFECTED - GWS7 1% FULL
ENT-SCR-BLKOPC: MASP A - COMPLTD
```

```
ent-scr-blkopc:sr=gws3:ni=001:nc=002:ncm=002:nsfi=fail
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:32:30 GMT EAGLE5 36.0.0
ENT-SCR-BLKOPC: SCREEN SET AFFECTED - GWS7 1% FULL
ENT-SCR-BLKOPC: MASP A - COMPLTD
```

```
ent-scr-blkopc:sr=fld3:ni=c:nc=c:ncm=c:nsfi=sio:nsr=fld4
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:33:30 GMT EAGLE5 36.0.0
ENT-SCR-BLKOPC: SCREEN SET AFFECTED - FLD3 1% FULL
ENT-SCR-BLKOPC: MASP A - COMPLTD
```

```
ent-scr-blkopc:sr=fld3:ni=020:nc=020:ncm=020:nsfi=fail
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:34:30 GMT EAGLE5 36.0.0
ENT-SCR-BLKOPC: SCREEN SET AFFECTED - FLD3 1% FULL
ENT-SCR-BLKOPC: MASP A - COMPLTD
```

```
ent-scr-blkopc:sr=isp1:ni=c:nc=c:ncm=c:nsfi=sio:nsr=isp1
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:33:30 GMT EAGLE5 36.0.0
ENT-SCR-BLKOPC: SCREEN SET AFFECTED - ISP1 1% FULL
ENT-SCR-BLKOPC: MASP A - COMPLTD
```

```
ent-scr-blkopc:sr=isp1:ni=025:nc=025:ncm=025:nsfi=fail
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:34:30 GMT EAGLE5 36.0.0
ENT-SCR-BLKOPC: SCREEN SET AFFECTED - ISP1 1% FULL
ENT-SCR-BLKOPC: MASP A - COMPLTD
```

- Verify the changes using the `rtrv-scr-blkopc` command with the screening reference name used in step 7. For this example, enter these commands.

```
rtrv-scr-blkopc:sr=gws5
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:35:30 GMT EAGLE5 36.0.0
SCREEN = BLOCKED OPC
SR      ZONE  AREA  ID      NSFI    NSR/ACT
GWS5    4      250   3       FAIL    -----
GWS5    C      C     C       SIO     IEC
```

```
rtrv-scr-blkopc:sr=gws3
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = BLOCKED OPC
SR  NI      NC      NCM     NSFI    NSR/ACT
GWS3 002     002     002     FAIL    -----
GWS3 C       C       C       DPC     GWS9
```

```
rtrv-scr-blkopc:sr=fld3
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:36:30 GMT EAGLE5 36.0.0  
SCREEN = BLOCKED OPC  
SR      NI      NC      NCM      NSF1      NSR/ACT  
FLD3   020     020     020     FAIL     -----  
FLD3   C       C       C       DPC     FLD4
```

```
rtrv-scr-blkopc:sr=isp1
```

The following is an example of the possible output.


```
rlghncxa03w 06-10-25 15:36:30 GMT EAGLE5 36.0.0  
SCREEN = BLOCKED OPC  
SR      NI      NC      NCM      NSF1      NSR/ACT  
ISP1   025     025     025     FAIL     -----  
ISP1   C       C       C       SIO     ISP1
```


9. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.  
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.  
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.  
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 61: Adding a Blocked OPC Screen

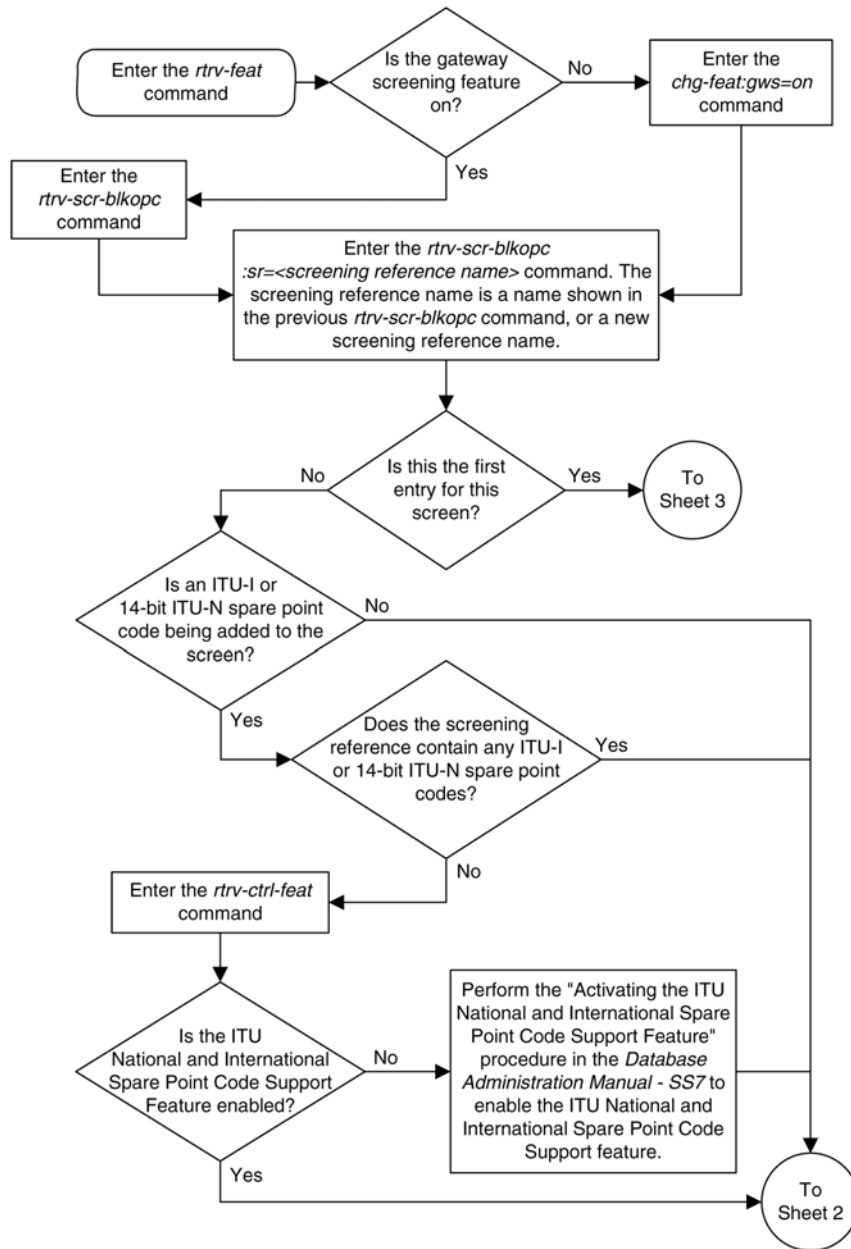

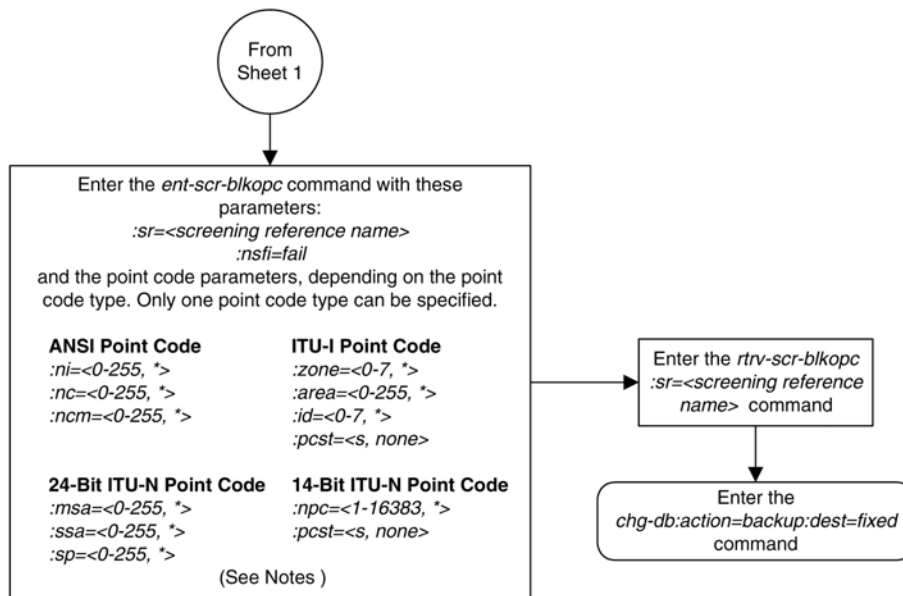



Notes:


1. A range of values can be specified for the *ni*, *nc*, or *ncm* parameters by inserting double ampersands (&&) between the parameter values defining the range. For example, to specify the range 025 to 200 for the *ni* parameter, enter 025&&200 for the *ni* parameter value.
2. The asterisk (*) specifies the entire range of values for that parameter.

For more information about specifying a range of values and about using the asterisk, see the "Gateway Screening Attributes" section in Chapter 2 and the "Specifying a Range of Values" section in this procedure.

3. To add a non-spare point code, the *pcst* parameter does not have to be specified. If the *pcst* parameter is specified for a screen containing an ITU-I or 14-bit ITU-N non-spare point code, the value must be *none*.
4. To add a spare point code, the *pcst=s* parameter must be specified.

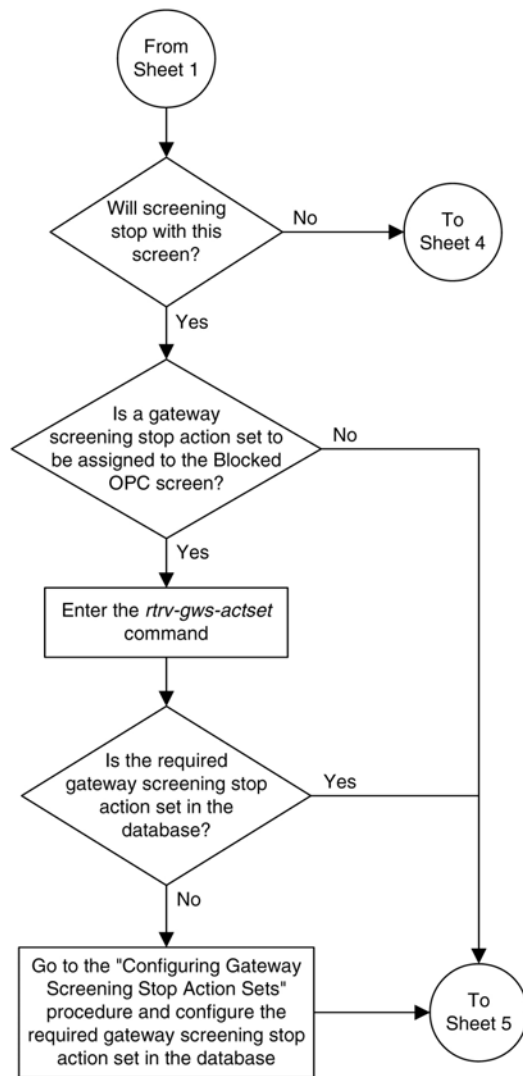

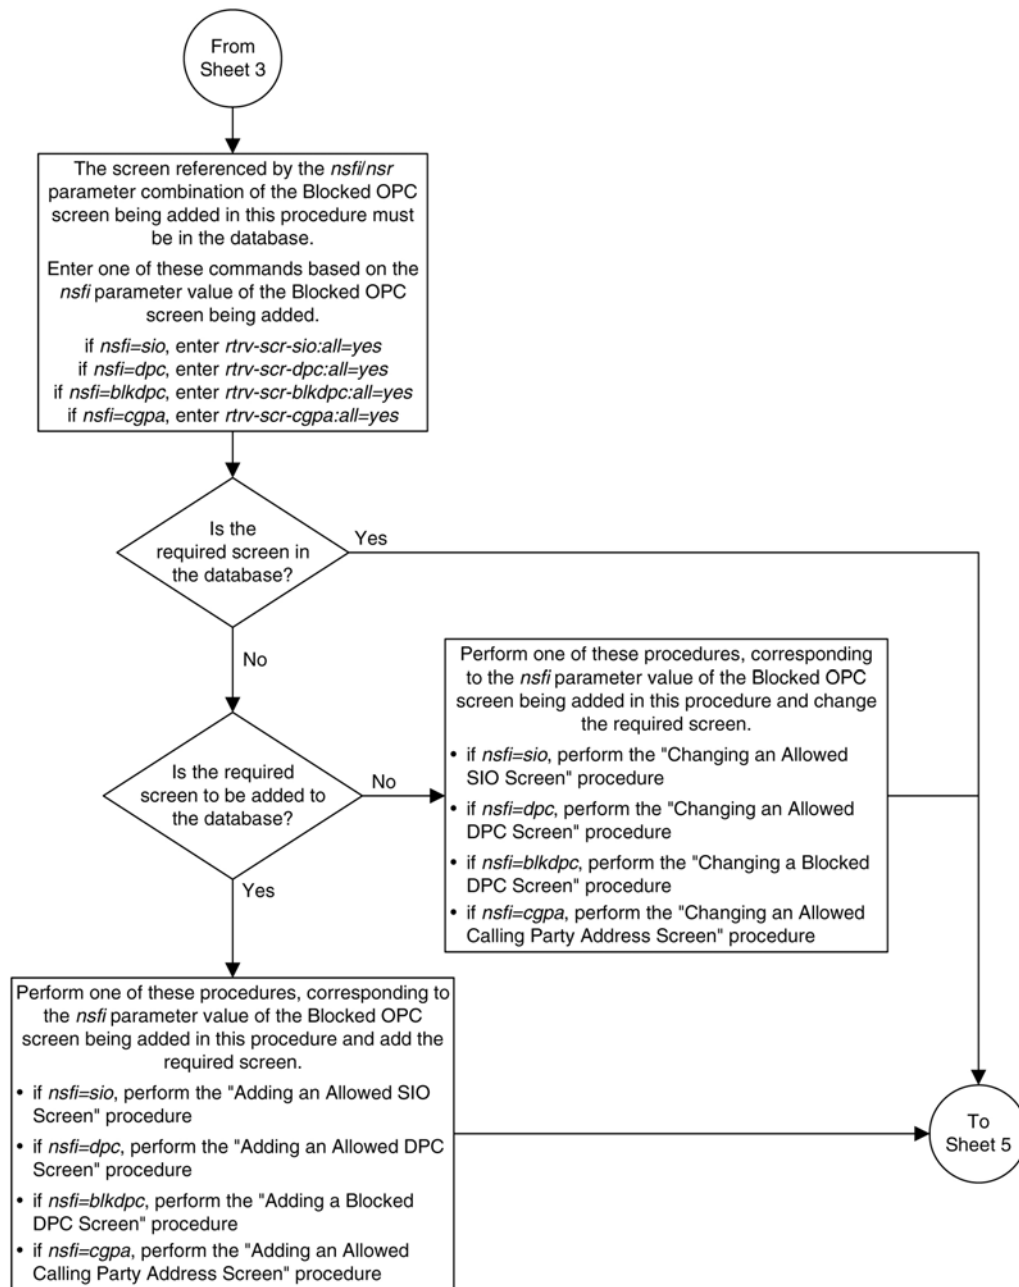

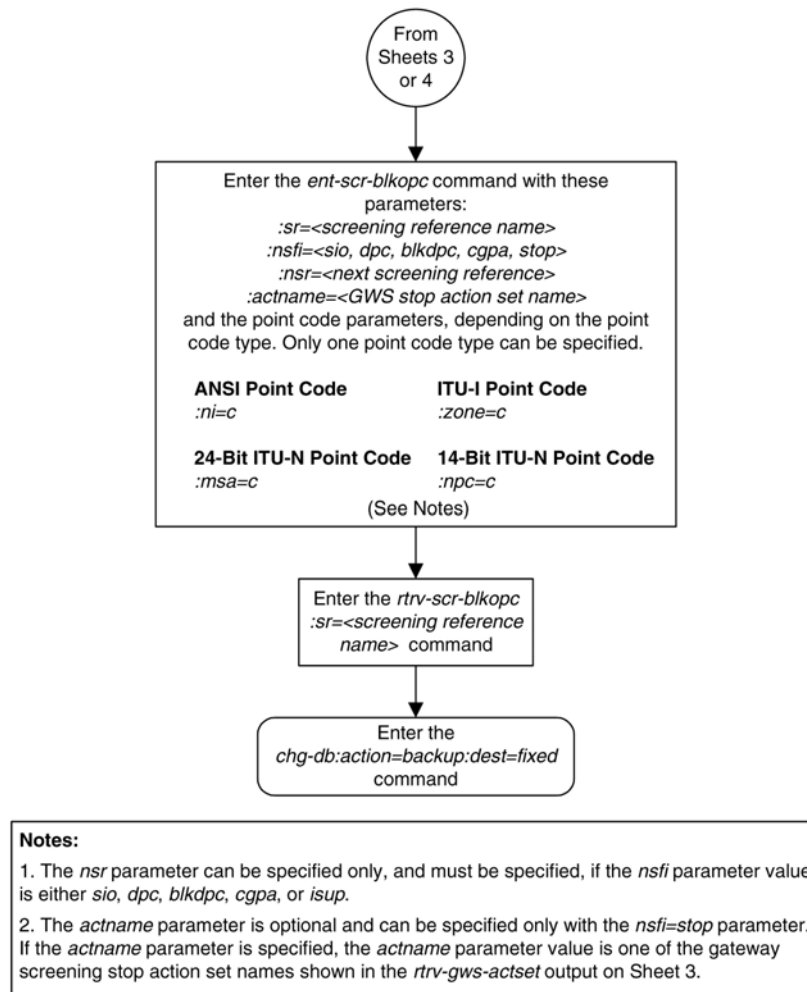

Removing a Blocked OPC Screen

This procedure is used to remove a blocked originating point code (OPC) screen from the database using the `dlt-scr-blkopc` command. The parameters used by the `dlt-scr-blkopc` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure removes the blocked OPC screen `iec` with the point code 240-001-010 from the database.

Note: If you using multiple-part ITU national point codes with gateway screening, see the [14-Bit ITU National Point Code Formats](#) on page 34 section.

The `c-c-c` entry cannot be removed from the blocked OPC screen unless all other entries in the blocked OPC screen have been removed. The `c-c-c` entry cannot be removed from the blocked OPC screen if other screens reference the blocked OPC screen. If the last entry (`c-c-c`) in the blocked

OPC screen is removed, the blocked OPC screen is removed. The blocked OPC screen can be referenced by one of the following screens.

- Screen Set
- Allowed OPC

Verifying the Gateway Screening Configuration

Enter the following commands to verify that none of these screens reference the blocked OPC screen being removed from the database.

- `rtrv-scrset:nsfi=blkopc`
- `rtrv-scr-opc:nsfi=blkopc`

Gateway Screening Configuration Procedures

To change the NSFI of any of these screens, perform one of these procedures.

- [Changing a Screen Set](#) on page 409
- [Changing an Allowed OPC Screen](#) on page 386

1. Display the blocked OPC screens in the database using the `rtrv-scr-blkopc` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = BLOCKED DPC

SR   REF  RULES
IEC  YES   6
ISP1 YES   2
WRD2 YES   2
WRD3 NO    4
WRD4 YES   9
```

From the `rtrv-scr-blkopc` output, display the blocked OPC screen you wish to remove using the `rtrv-scr-blkopc` command with the screening reference name. For this example, enter this command.

```
rtrv-scr-blkopc:sr=iec
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = BLOCKED OPC

SR  NI      NC      NCM      NSFI      NSR/ACT
IEC 240     001     010     FAIL     -----
IEC 241     010     *       FAIL     -----
SR   ZONE   AREA   ID      NSFI      NSR/ACT
IEC  1      003    4       FAIL     -----
IEC  1      003    5       FAIL     -----
SR  NI      NC      NCM      NSFI      NSR/ACT
IEC C       C      C      CGPA     cg01
SR   NPC
IEC 00235      NSFI      NSR
IEC                                FAIL     -----
```

2. Enter the commands in the [Verifying the Gateway Screening Configuration](#) on page 350 section to verify that the screen being removed is not referenced by other screens in the database.

If the screen being removed is referenced by other screens, perform the procedures shown in the *Gateway Screening Configuration Procedures* on page 350 section to change the NSFI of those screens to reference other screens or change the NSFI of these screens to STOP.

- Remove the blocked OPC screen from the database using the `dlt-scr-blkopc` command with the screening reference name shown in the `rtrv-scr-blkopc` output in step 1 and with the point code parameter values (`ni`, `nc`, `ncm`, or `zone`, `area`, `id`, or `npc`, `msa`, `ssa`, `sp`) of the screen being removed from the database.

The values for these parameters must be entered exactly as shown in the `rtrv-scr-blkopc` output.

To remove an entry containing either an ITU-I or a 14-bit ITU-N spare point code, the `pcst=s` parameter must be specified with the `dlt-scr-blkopc` command.

To remove an entry containing either an ITU-I or a 14-bit ITU-N non-spare point code, the `pcst` parameter does not have to be specified with the `dlt-scr-blkopc` command. If the `pcst` parameter is specified, the value must be `none`.

The `pcst` parameter cannot be used with the `zone=c` or the `npc=c` parameters.

For this example, enter this command.

```
dlt-scr-blkopc:sr=iec:ni=240:nc=001:ncm=010
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
DLT-SCR-BLKOPC: SCREEN SET AFFECTED - IEC 2% FULL
DLT-SCR-BLKOPC: MASP A - COMPLTD
```

- Verify the changes using the `rtrv-scr-blkopc` command with the screening reference name used in step 3.

For this example, enter this command.

```
rtrv-scr-blkopc:sr=iec
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
SCREEN = BLOCKED OPC
SR  NI      NC      NCM      NSFI      NSR/ACT
IEC  241     010     *        FAIL      -----
SR   ZONE   AREA   ID       NSFI      NSR/ACT
IEC   1     003     4        FAIL      -----
IEC   1     003     5        FAIL      -----
SR  NI      NC      NCM      NSFI      NSR/ACT
IEC  C      C      C        CGPA      cg01
SR   NPC
IEC  00235          NSFI      NSR
IEC          FAIL      -----
```

If the screen removed in step 3 was the last screen contained in the specified screening reference, the screening reference is removed from the database. The following message is displayed.


```
E2573 Cmd Rej: SR or NSR does not reference an existing SR
```

- Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 62: Removing a Blocked OPC Screen

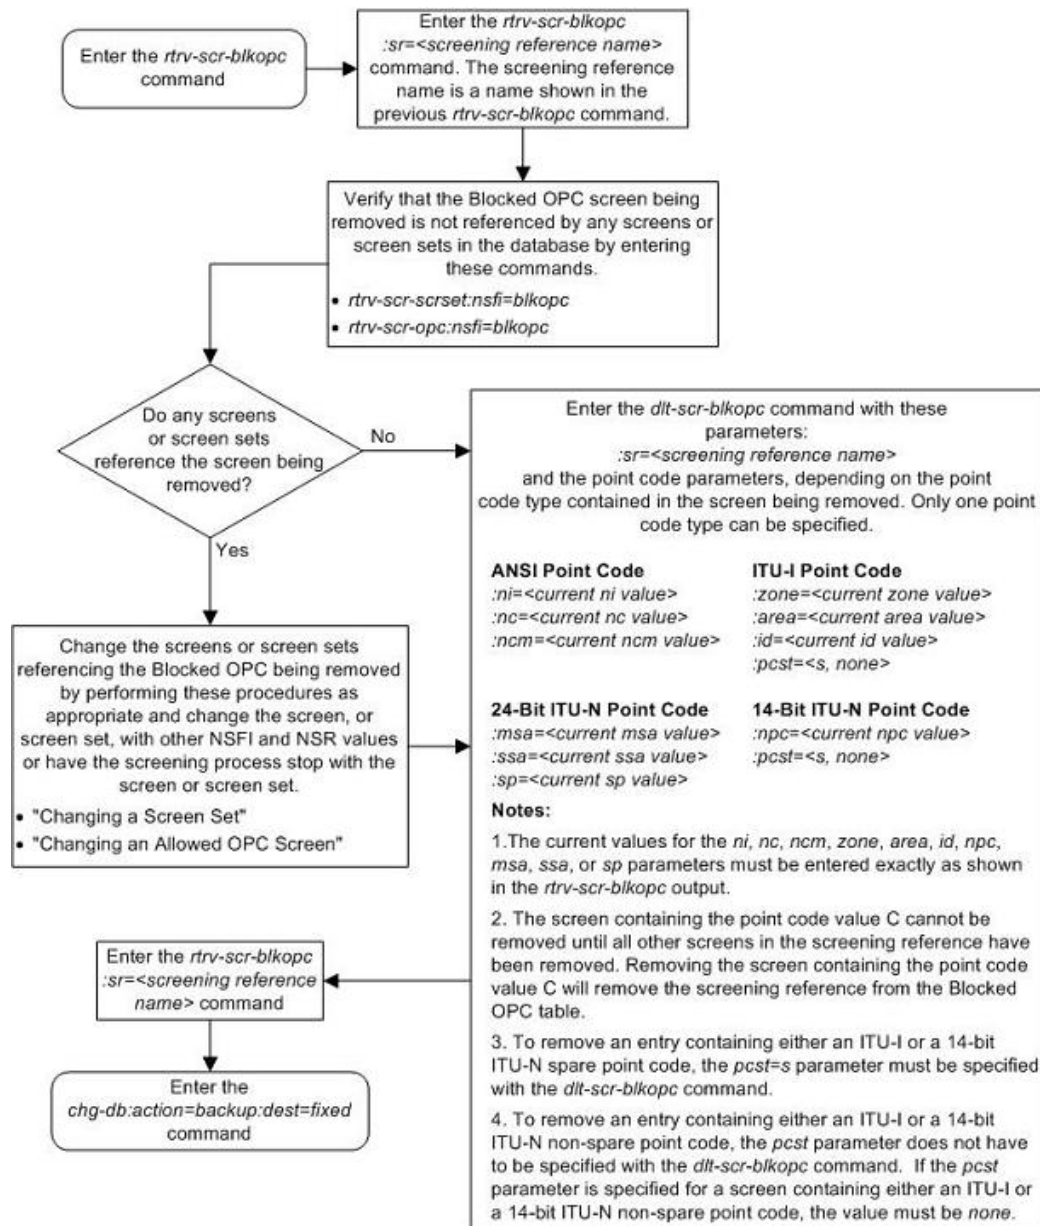

Changing a Blocked OPC Screen

This procedure is used to change the attributes of a blocked originating point code (OPC) screen in the database using the `chg-scr-blkopc` command. The parameters used by the `chg-scr-blkopc` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure is used to change the point code 002-002-002 for the blocked OPC screen `gws7` to 230-230-230.

Note: If you using multiple-part ITU national point codes with gateway screening, [14-Bit ITU National Point Code Formats](#) on page 34 section.

If the current `ni`, `nc`, and `ncm` are equal to the character "c", only the next screening function identifier and next screening reference can be changed. The next screening function identifier cannot be equal to `fail`. If the next screening function identifier is not equal to `stop`, the next screening reference must be specified. Otherwise, only the point code can be changed.

The blocked OPC screen can reference one of the following screens.

- Allowed SIO
- Allowed DPC
- Blocked DPC
- Allowed CGPA

Verifying the Gateway Screening Configuration

Enter the following commands to verify that these screens are in the database.

- `rtrv-scr-sio:all=yes`
- `rtrv-scr-dpc:all=yes`
- `rtrv-scr-blkdpc:all=yes`
- `rtrv-scr-cgpa:all=yes`

Gateway Screening Configuration Procedures

If the desired screen is not in the database, perform one of these procedures to add the desired screen to the database.

- [Adding an Allowed SIO Screen](#) on page 311
- [Adding an Allowed DPC Screen](#) on page 276
- [Adding a Blocked DPC Screen](#) on page 242
- [Adding an Allowed Calling Party Address Screen](#) on page 184
- [Changing an Allowed SIO Screen](#) on page 323
- [Changing an Allowed DPC Screen](#) on page 292
- [Changing a Blocked DPC Screen](#) on page 258
- [Changing an Allowed Calling Party Address Screen](#) on page 198

For the first entry for a specific screening reference, the value for the point code must be `c`, and the NSFI must be either `stop`, `sio`, `dpc`, `blkdpc`, or `cgpa`. If the NSFI is `stop`, the screening of the message will stop at the specified blocked OPC screen. If the NSFI is either `sio`, `dpc`, `blkdpc`, or `cgpa`, then any message containing a point code that is not listed in the blocked OPC screen

with a NSFI equal to `fail`, will continue to be screened with either the allowed SIO, allowed DPC, blocked DPC, or the allowed CGPA screen.

All subsequent entries for that screening reference must contain a numeric point code value, the NSFI must be equal to `fail`, and the `nsr` parameter cannot be specified. Any message that contains an OPC in the blocked OPC screen with the NSFI equal to `fail` will be rejected from the network and the screening process is stopped.

The `pcst` or `npcst` parameters, specifying whether or not the ITU-I or 14-bit ITU-N point code is a spare point code, cannot be used with the `zone=c` or `npc=c` parameters.

Specifying a Range of Values

A range of values can be specified for the point code parameters `ni`, `nc`, or `ncm`.

If a range of values is specified for any of these parameters, and the value of the other parameters match existing values for the screening reference name, the range of values for the point code parameter cannot include any values for that parameter that are currently provisioned for the screening reference name.

For example, screening reference name `scr1` contains these entries:

SR	NI	NC	NCM	NSFI	NSR/ACT
SCR1	240	001	010	FAIL	-----
SCR1	241	010	020	FAIL	-----

Another entry for screening reference `scr1` with the `ni` value of 240 and the `nc` value of 001 cannot be specified if the range of values for the `ncm` parameter includes the value 010.

The ANSI point code parameter values can be specified as a single value, a range of values, or with an asterisk (*). The asterisk specifies all possible values for the `ni`, `nc`, and `ncm` parameters. [Table 69: Valid Value Combinations for ANSI Point Code Parameters](#) on page 354 shows the valid combinations of these parameter values.

Table 69: Valid Value Combinations for ANSI Point Code Parameters

NI	NC	NCM
Single Value	Single Value	Single Value
Single Value	Single Value	Range of Values
Single Value	Single Value	Asterisk
Single Value	Range of Values	Asterisk
Single Value	Asterisk	Asterisk
Range of Values	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

A range of values can also be specified for an ITU-I or 24-bit ITU-N point code parameter using a combination of asterisks (*) and single values for the point code parameters. [Table 70: Valid Value Combinations for ITU-I Point Code Parameters](#) on page 355 shows the valid combinations of the ITU-I parameter values. [Table 71: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters](#) on page 355 shows the valid combinations of the 24-bit ITU-N parameter values.

Table 70: Valid Value Combinations for ITU-I Point Code Parameters

ZONE	AREA	ID
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

Table 71: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters

MSA	SSA	SP
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

1. Display the blocked OPC screens in the database using the `rtrv-scr-blkopc` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = BLOCKED OPC
SR   REF  RULES
GWS7 YES   2
IEC  YES   6
ISP1 YES   2
WRD2 YES   2
WRD3 NO    4
WRD4 YES  10
```

From the `rtrv-scr-blkopc` output, display the blocked OPC screen you wish to change using the `rtrv-scr-blkopc` command with the screening reference name. For this example, enter this command.

```
rtrv-scr-blkopc:sr=gws7
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = BLOCKED OPC
SR      NI      NC      NCM      NSFI      NSR/ACT
GWS7   002      002      002      FAIL      -----
GWS7   C        C        C        DPC      GWS9
```

If a gateway screening stop action set is to be assigned to the blocked OPC screen being changed in the database, go to step 2.

Step 2 verifies the gateway screening stop action set names in the database. The gateway screening stop action set names are assigned only if the NSFI of the screen being changed in this procedure is STOP. If the NSFI of the screen will be changed to STOP, but a gateway screening stop action set name will not be assigned to the screen, skip steps 2 and 3 and go to step 4. If the NSFI of the screen will not be STOP, skip step 2 and go to step 3.

2. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME  1    2    3    4    5    6    7    8    9    10
---  ---
1    copy  copy
2    rdct  rdct
3    cr    copy rdct
4    cnf   cnf
5    cpcnf copy cnf
6    cnf   rdct
7    cpcnf copy cnf rdct

GWS action set table is (7 of 16) 44% full
```

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to configure the required gateway screening stop action set.

Note: If the NSFI of the screen being changed in this procedure will be STOP or FAIL, or if the NSFI of the screen is not being changed, skip step 3 and go to step 4.

3. Enter the commands in the [Verifying the Gateway Screening Configuration](#) on page 353 section to verify that the screen that will be specified by the NSFI/NSR parameter combination in step 5 is in the database.

If the desired screen is not in the database, perform one of the procedures shown in the [Gateway Screening Configuration Procedures](#) on page 353 section to add the desired screen to the database or change an existing screen in the database.

Note: If any of these conditions apply to this procedure, skip this step and go to step 5:

- The point code in the screen is not being changed.
- The screen being changed contains either an ANSI or 24-bit ITU-N point code.
- The ITU-I or 14-bit ITU-N non-spare point code in the screen is not being changed to an ITU-I or 14-bit ITU-N spare point code.
- The point code in the screen is an ITU-I or 14-bit ITU-N spare point code or the screening reference contains other screens with ITU-I or 14-bit ITU-N spare point codes.

4. Display the status of the ITU National and International Spare Point Code Support feature by entering the `rtrv-ctrl-feat` command with the ITU National and International Spare Point Code Support feature part number.

Enter this command.

```
rtrv-ctrl-feat:partnum=893013601
```

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name          Partnum   Status Quantity
Spare Point Code Support 893013601 on      ----

The following features have been temporarily enabled:

Feature Name          Partnum   Status Quantity   Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name          Partnum
Zero entries found.
```

If the ITU National and International Spare Point Code Support feature is enabled, go to step 5.

If the ITU National and International Spare Point Code Support feature is not enabled, perform the “Activating the ITU National and International Spare Point Code Support Feature” procedure in the Database *Administration Manual - SS7* to enable the ITU National and International Spare Point Code Support feature as required. After the feature has been enabled, go to step 5.

5. Change the attributes of the blocked OPC screen using the `chg-scr-blkopc` command.

If a gateway screening stop action is to be assigned to the blocked OPC screen being changed, enter the `chg-scr-blkopc` command with the `nsfi=stop` parameter and the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 2.

The current values for the `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `npc`, `msa`, `ssa`, and `sp` parameters must be entered exactly as shown in the `rtrv-scr-blkopc` output in step 1.

The following list contains the values for the `nni`, `nnc`, `nncm`, `nzone`, `narea`, `nid`, `nnpc`, `nmsa`, `nssa`, and `nsp` parameters:

- `nni` – 0 - 255, c, or an asterisk (*)
- `nnc` – 0 - 255, c, or an asterisk (*)
- `nncm` – 0 - 255, c, or an asterisk (*)
- `nzone` – 0 - 7, c, or an asterisk (*)
- `narea` – 0 - 255, c, or an asterisk (*)
- `nid` – 0 - 7, c, or an asterisk (*)
- `nnpc` – 1 - 16383, c, or an asterisk (*)
- `nmsa` – 0 - 255, c, or an asterisk (*)
- `nssa` – 0 - 255, c, or an asterisk (*)
- `nsp` – 0 - 255, c, or an asterisk (*)

A range of values can be specified for the `nni`, `nnc`, and `nncm` parameters. See the *“Specifying a Range of Values”* on page 354 section for more information on how the asterisk and a range of values are used for the `nni`, `nnc`, and `nncm` parameters.

To change an ITU-I or 14-bit ITU-N spare point code to a non-spare point code, both the `pcst=s` and `npcst=none` parameters must be specified with the `chg-scr-blkopc` command.

To change an ITU-I or 14-bit ITU-N non-spare point code to a spare point code, the `npcst=s` parameter must be specified with the `chg-scr-blkopc` command. The `pcst` parameter does not have to be specified.

If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N spare point code, the `pcst=s` parameter must be specified with the `chg-scr-blkopc` command.

If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N non-spare point code, the `pcst` parameter does not have to be specified with the `chg-scr-blkopc` command. If the `pcst` parameter is specified for a screen containing either an ITU-I or 14-bit ITU-N non-spare point code, the `pcst` parameter value must be `none`.

The `pcst` or `npcst` parameters cannot be used with the `zone=c` or `npc=c` parameters.

For this example, enter this command.

```
chg-scr-blkopc:sr=gws7:ni=002:nc=002:nncm=002:nni=230:nnc=230 :nncm=230
```

The following messages appear.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
CHG-SCR-BLKOPC: SCREEN SET AFFECTED - GWS7 1% FULL
CHG-SCR-BLKOPC: MASP A - COMPLTD
```

Note: Verify the changes using the `rtrv-scr-blkopc` command with the screening reference name used in step 5. For this example, enter this command.

```
rtrv-scr-blkopc:sr=gws7
```

The following is an example of the possible output.


```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0
SCREEN = BLOCKED OPC
SR  NI      NC      NCM      NSF1      NSR/ACT
GWS7 230     230     230     FAIL     -----
GWS7 C       C       C       DPC     GWS9
```


6. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 63: Changing a Blocked OPC Screen

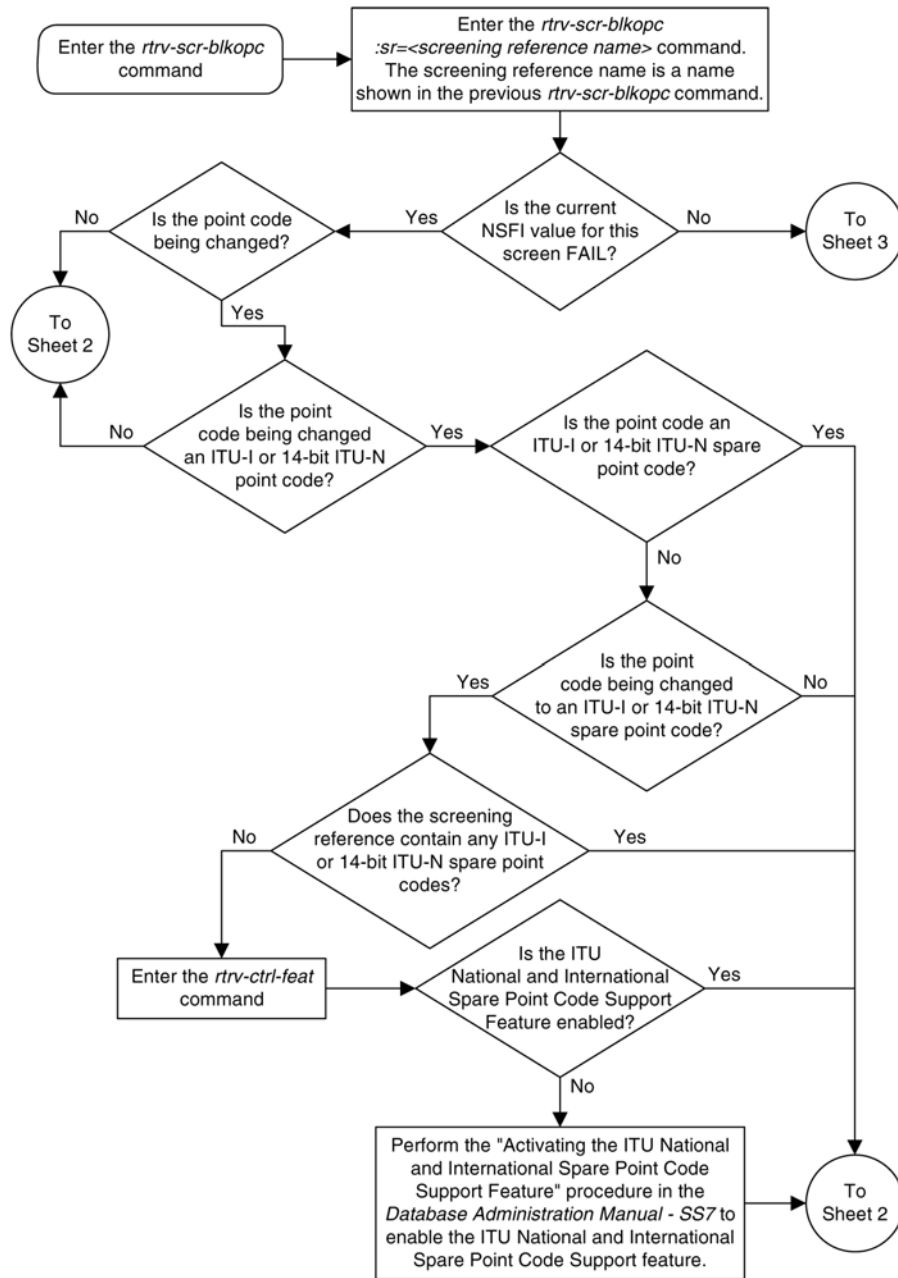



Enter the *chg-scr-blkopc* command with this mandatory parameter:
:sr=<screening reference name>
 and the point code parameters, depending on the point code type contained in the screen being changed. Only one point code type can be specified.

ANSI Point Code	ITU-I Point Code	14-Bit ITU-N Point Code	24-Bit ITU-N Point Code
<i>:ni=<current ni value></i>	<i>:zone=<current zone value></i>	<i>:npc=<current npc value></i>	<i>:msa=<current msa value></i>
<i>:nc=<current nc value></i>	<i>:area=<current area value></i>	<i>:pcst=<s, none></i>	<i>:ssa=<current ssa value></i>
<i>:ncm=<current ncm value></i>	<i>:id=<current id value></i>		<i>:sp=<current sp value></i>
	<i>:pcst=<s, none></i>		

At least one of these optional point code parameters must be specified with the *chg-scr-blkopc* command.


ANSI Point Code	ITU-I Point Code	14-Bit ITU-N Point Code	24-Bit ITU-N Point Code
<i>:nni=<0-255, *></i>	<i>:nzone=<0-7, *></i>	<i>:nnpc=<1-16383, *></i>	<i>:nmsa=<0-255, *></i>
<i>:nnc=<0-255, *></i>	<i>:narea=<0-255, *></i>	<i>:npcst=<s, none></i>	<i>:nssa=<0-255, *></i>
<i>:nncm=<0-255, *></i>	<i>:nid=<0-7, *></i>		<i>:nsp=<0-255, *></i>
	<i>:npcst=<s, none></i>		


The new point code code parameters must be of the same type as the current point code values specified in the *chg-scr-blkopc* command
 (See Notes)


Enter the *rtv-scr-blkopc*
:sr=<screening reference name> command

Enter the *chg-db:action=backup:dest=fixe*
d command

- Notes:**
1. A range of values can be specified for the *nni*, *nnc*, or *nncm* parameters by inserting double ampersands (&&) between the parameter values defining the range. For example, to specify the range 025 to 200 for the *nni* parameter, enter 025&&200 for the *nni* parameter value.
 2. The current values for the *ni*, *nc*, *ncm*, *zone*, *area*, *id*, *npc*, *msa*, *ssa*, or *sp* parameters must be entered exactly as shown in the *rtv-scr-blkopc* output. The current point code value cannot be C.
 3. The asterisk (*) specifies the entire range of values for that parameter.
- For more information about specifying a range of values and about using the asterisk, see the "Gateway Screening Attributes" section in Chapter 2 and the "Specifying a Range of Values" section in this procedure.
4. To change an ITU-I or 14-bit ITU-N spare point code to a non-spare point code, both the *pcst=s* and *npcst=none* parameters must be specified with the *chg-scr-blkopc* command.
 5. To change an ITU-I or 14-bit ITU-N non-spare point code to a spare point code, the *npcst=s* parameter must be specified with the *chg-scr-blkopc* command. The *pcst* parameter does not have to be specified.
 6. If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N spare point code, the *pcst=s* parameter must be specified with the *chg-scr-blkopc* command.
 7. If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N non-spare point code, the *pcst* parameter does not have to be specified with the *chg-scr-blkopc* command. If the *pcst* parameter is specified for a screen containing either an ITU-I or 14-bit ITU-N non-spare point code, the *pcst* parameter value must be *none*.

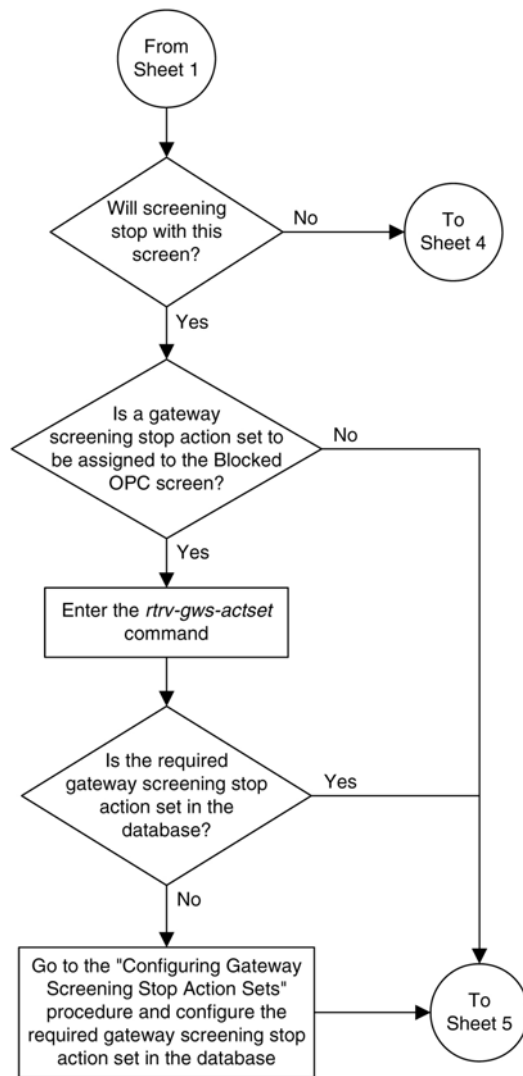

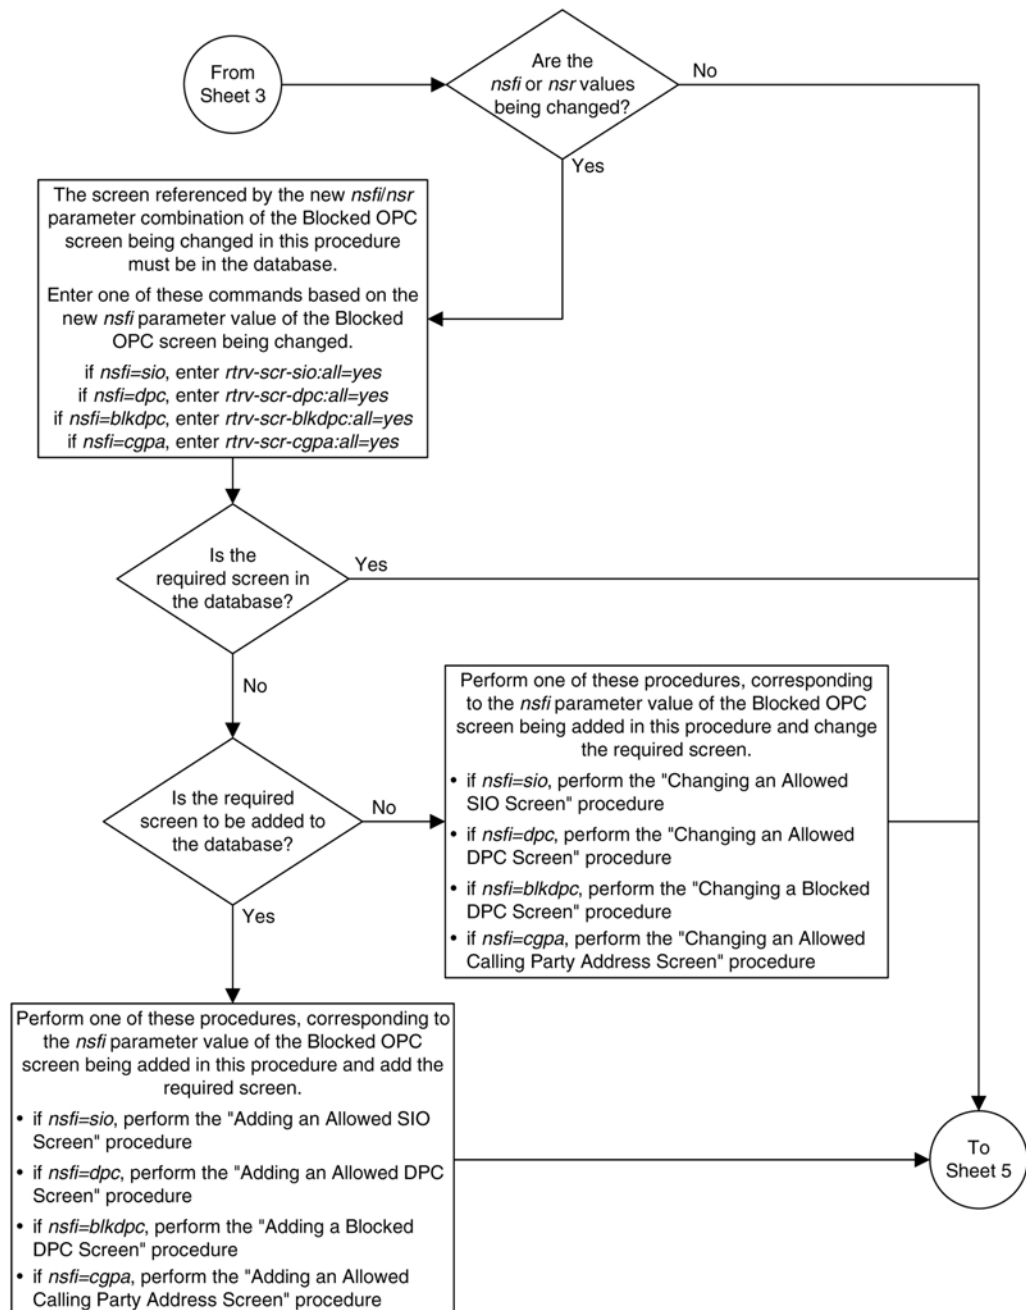

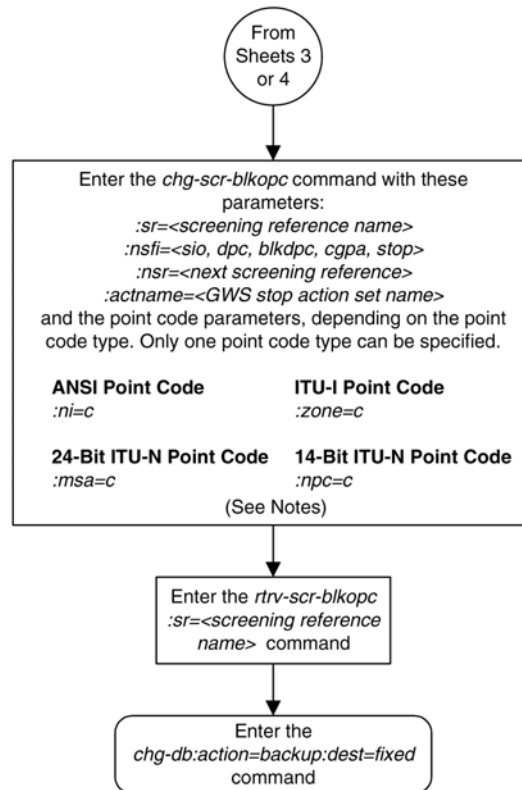

Notes:

1. The *nsr* parameter can be specified only, and must be specified, if the *nsfi* parameter value is either *sio*, *dpc*, *blkdpc*, or *cgpa*.
2. The *actname* parameter is optional and can be specified only with the *nsfi=stop* parameter. If the *actname* parameter is specified, the *actname* parameter value is one of the gateway screening stop action set names shown in the *rtrv-gws-actset* output on Sheet 3.

Chapter 12

Allowed Originating Point Code (OPC) Screen Configuration

Topics:

- [Introduction Page 366](#)
- [Adding an Allowed OPC Screen Page 370](#)
- [Removing an Allowed OPC Screen Page 383](#)
- [Changing an Allowed OPC Screen Page 386](#)

Chapter 12, Allowed Originating Point Code (OPC) Screen Configuration, contains the procedures necessary to configure allowed originating point code screens.

Introduction

The allowed originating point code (OPC) screen identifies a set of OPC's that are allowed to send SS7 messages into the network. The gray shaded areas in [Figure 65: Allowed OPC Screening Functions](#) on page 369 shows the fields of the SS7 message that are checked by the allowed OPC screening function.

Gateway Screening Actions

If a match is not found, the message is discarded.

If a match is found, the `nsfi` is examined to determine the next step in the screening process. If the `nsfi` value is any value other than `stop`, the next screening reference (`nsr`) is identified and the screening process continues to the next screen identified by the `nsfi` and `nsr` parameter values.


If the `nsfi` is equal to `stop`, the screening process stops and the message is processed. If a gateway screening stop action set is specified with the screen, shown by the `actname` parameter value, the message is processed according to the gateway screening stop actions that are assigned to the gateway screening stop action set.


- If the `copy` gateway screening stop action is specified, the message is processed and a copy of the message is sent by the STPLAN feature to an external application.
- If the `rdct` (redirect) gateway screening stop action is specified, the message is diverted from the original destination and sent to another destination with the Database Transport Access feature, specified by global title translation, for further processing.
- If the `cncf` gateway screening stop action is specified, the PIP parameter in the incoming ISUP IAM message is converted to the GN parameter. The GN parameter in the incoming ISUP IAM message is converted to the PIP parameter. The message is then sent to the node specified by the DPC in the routing label in the message. For more information on the Calling Name Conversion Facility feature, see [Calling Name Conversion Facility \(CNCF\) Configuration](#) on page 417.
- If the `tlnp` gateway screening stop action is specified, ISUP IAMs that pass gateway screening are processed either by the ISUP NP with EPAP feature (if the ISUP NP with EPAP feature is enabled and turned on) or by the Triggerless LNP feature (if the Triggerless LNP feature is turned on). The ISUP NP with EPAP feature is discussed in more detail in the *Feature Manual - G-Port*. The Triggerless LNP feature is discussed in more detail in the *LNP Feature Activation Guide*.
- If the `tinp` gateway screening stop action is specified, ISUP IAMs that pass gateway screening are intercepted by the Triggerless ISUP based Number Portability (TINP) feature and converted to include the routing number (RN) if the call is to a ported number. The TINP feature is discussed in more detail in the *Feature Manual - G-Port*.
- If the `tif`, `tif2`, or `tif3` gateway screening stop actions are specified, TIF processing is applied to the message.

Allowed OPC Screening Actions

Figure 64: Allowed OPC Screening Actions on page 367 shows the screening actions of the allowed OPC screen.

Figure 64: Allowed OPC Screening Actions

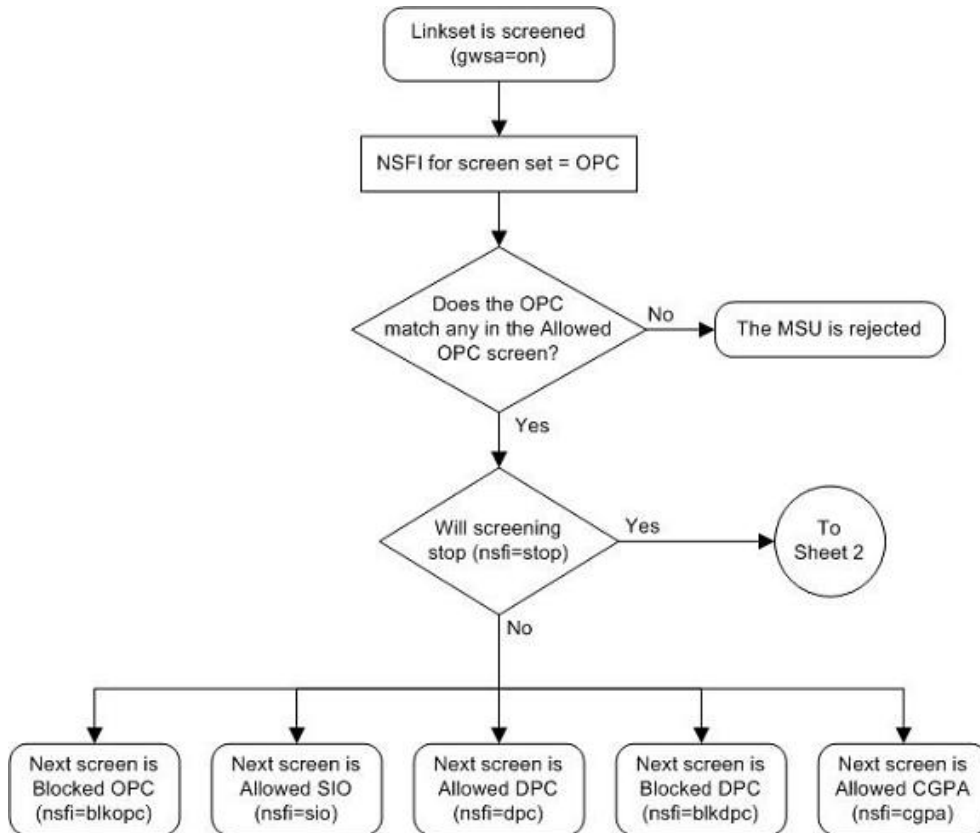

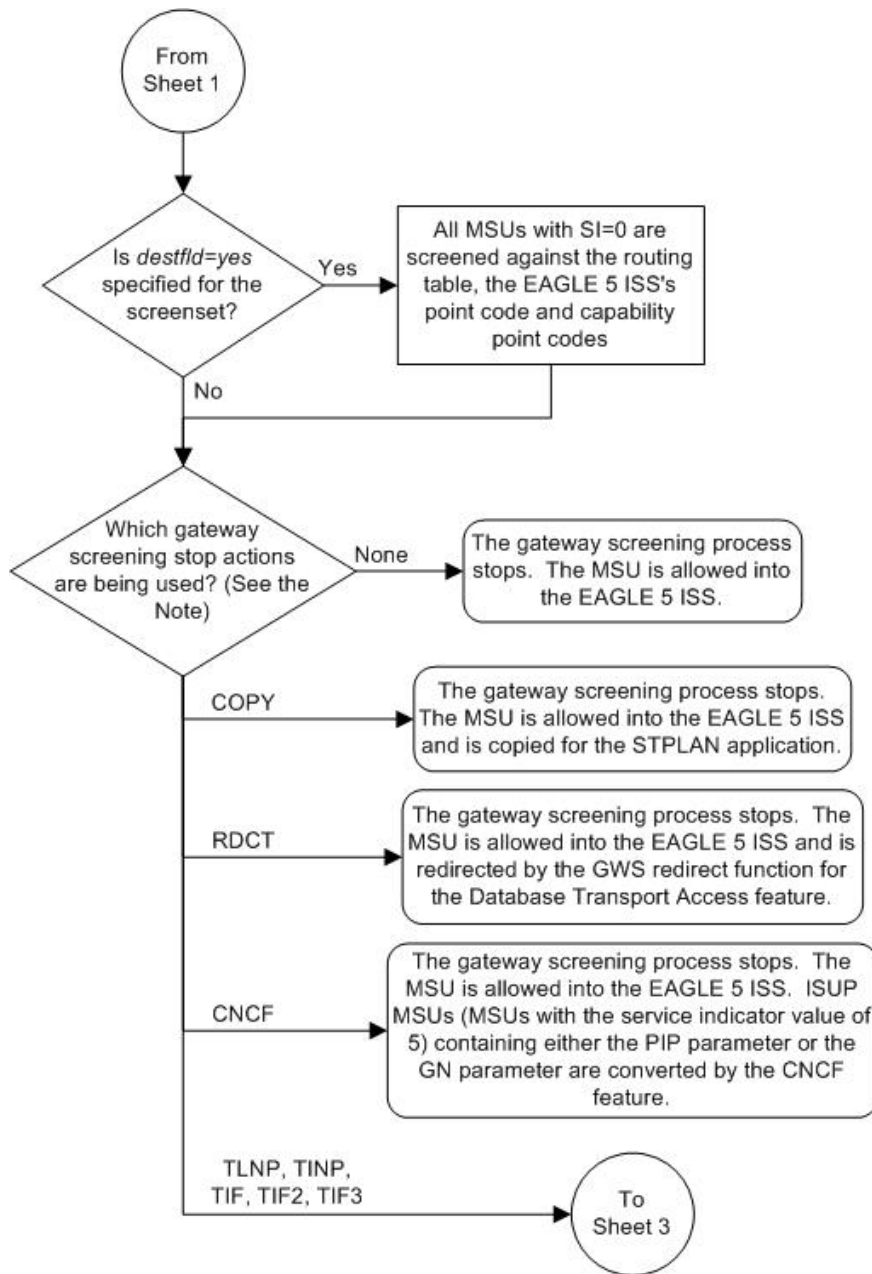

Note: Combinations of the gateway screening stop actions shown on Sheets 2 and 3 may be assigned to a gateway screening stop action set. Refer to the Configuring Gateway Screening Stop Action Sets and the Configuring TLNP Gateway Screening Stop Action Sets procedures in Chapter 2 of this manual for the combinations that can be used.

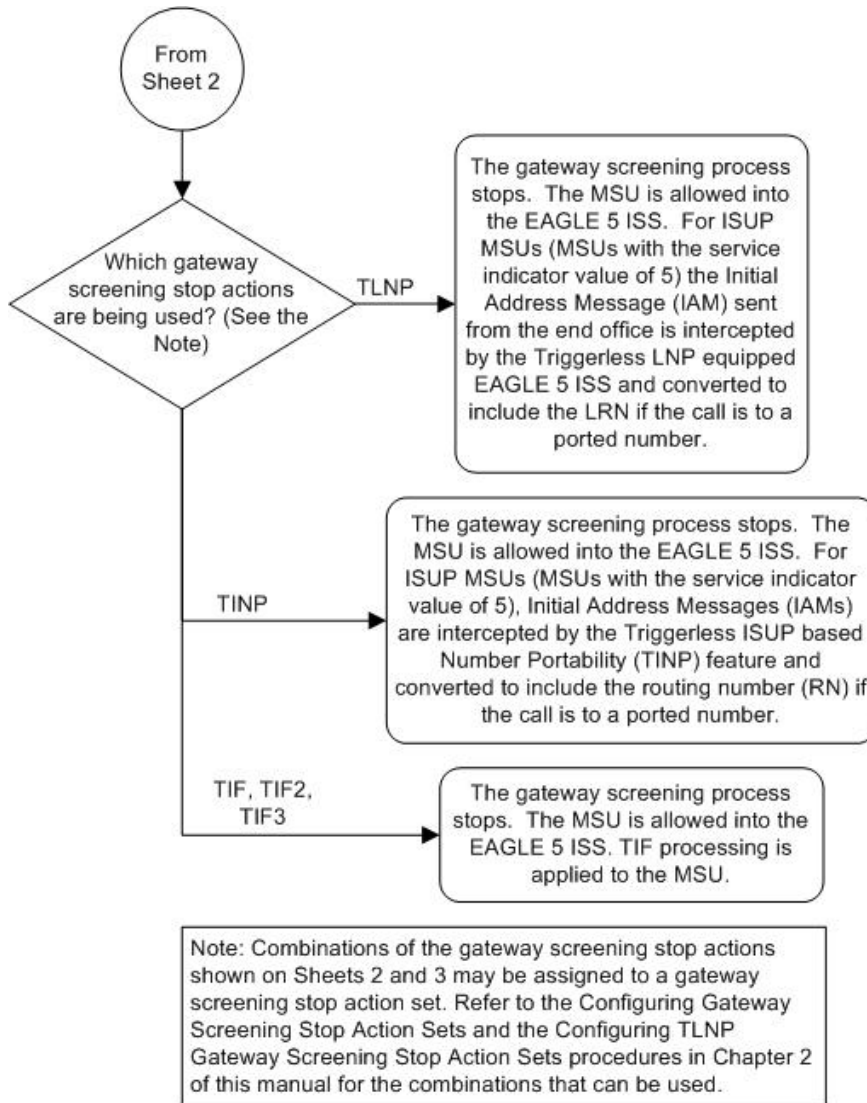


Figure 65: Allowed OPC Screening Functions

ANSI MSU (ANSI Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF			
		DPC NCM NC NI	Routing Label OPC NCM NC NI	SLS xx	

ITU-I MSU (ITU International Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF			
		DPC ID AREA ZONE	Routing Label OPC ID AREA ZONE	SLS xx	

14-Bit ITU-N MSU (14-Bit ITU National Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF		
		DPC NPC	Routing Label OPC NPC	SLS xx

24-Bit ITU-N MSU (24-Bit ITU National Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF			
		DPC SP SSA MSA	Routing Label OPC SP SSA MSA	SLS xx	

Adding an Allowed OPC Screen

This procedure is used to add an allowed originating point code (OPC) screen to the database using the `ent-scr-opc` command. The parameters used by the `ent-scr-opc` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The examples in this procedure are used to add the allowed OPC screen data shown in [Table 72: Example Gateway Screening Allowed OPC Configuration Table](#) on page 371 and based on the example configurations shown in [Figure 5: Gateway Screening Configuration - Example 1](#) on page 42, [Figure 9: Gateway Screening Configuration - Example 5](#) on page 48, and [Figure 11: Gateway Screening Configuration - Example 7](#) on page 51.

Table 72: Example Gateway Screening Allowed OPC Configuration Table

Screening Reference	NI	NC	NCM	NSFI	NSR
gws4	001	001	001	blkopc	gws3
fld2	010	010	010	blkopc	fld3
isp1	015	015	015	blkopc	isp1
tup1	017	017	017	sio	tup1

Note: If you using multiple-part ITU national point codes with gateway screening, see the [14-Bit ITU National Point Code Formats](#) on page 34 section.

The allowed OPC screen can reference one of the following screens.

- Blocked OPC
- Allowed SIO
- Allowed DPC
- Blocked DPC
- Allowed CGPA

Verifying the Gateway Screening Configuration

Enter the following commands to verify that these screens are in the database.

- `rtrv-scr-blkopc:all=yes`
- `rtrv-scr-sio:all=yes`
- `rtrv-scr-dpc:all=yes`
- `rtrv-scr-blkdpc:all=yes`
- `rtrv-scr-cgpa:all=yes`

Gateway Screening Configuration Procedures

If the desired screen is not in the database, perform one of these procedures to add the desired screen to the database or change an existing screen in the database.

- [Adding a Blocked OPC Screen](#) on page 336
- [Adding an Allowed SIO Screen](#) on page 311
- [Adding an Allowed DPC Screen](#) on page 276
- [Adding a Blocked DPC Screen](#) on page 242
- [Adding an Allowed Calling Party Address Screen](#) on page 184
- [Changing a Blocked OPC Screen](#) on page 353
- [Changing an Allowed SIO Screen](#) on page 323
- [Changing an Allowed DPC Screen](#) on page 292
- [Changing a Blocked DPC Screen](#) on page 258
- [Changing an Allowed Calling Party Address Screen](#) on page 198

Specifying a Range of Values

A range of values can be specified for the point code parameters *ni*, *nc*, or *ncm*.

If a range of values is specified for any of these parameters, and the value of the other parameters match existing values for the screening reference name, the range of values for the point code parameter cannot include any values for that parameter that are currently provisioned for the screening reference name.

For example, screening reference name *scr1* contains these entries:

SR	NI	NC	NCM	NSFI	NSR/ACT
SCR1	240	001	010	CGPA	-----
SCR1	241	010	020	STOP	-----

Another entry for screening reference *scr1* with the *ni* value of 240 and the *nc* value of 001 cannot be specified if the range of values for the *ncm* parameter includes the value 010.

The ANSI point code parameter values can be specified as a single value, a range of values, or with an asterisk (*). The asterisk specifies all possible values for the *ni*, *nc*, and *ncm* parameters. [Table 73: Valid Value Combinations for ANSI Point Code Parameters](#) on page 372 shows the valid combinations of these parameter values.

Table 73: Valid Value Combinations for ANSI Point Code Parameters

NI	NC	NCM
Single Value	Single Value	Single Value
Single Value	Single Value	Range of Values
Single Value	Single Value	Asterisk
Single Value	Range of Values	Asterisk
Single Value	Asterisk	Asterisk
Range of Values	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

A range of values can also be specified for an ITU-I or 24-bit ITU-N point code parameter using a combination of asterisks (*) and single values for the point code parameters. [Table 74: Valid Value Combinations for ITU-I Point Code Parameters](#) on page 373 shows the valid combinations of the ITU-I parameter values. [Table 75: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters](#) on page 373 shows the valid combinations of the 24-bit ITU-N parameter values.

Table 74: Valid Value Combinations for ITU-I Point Code Parameters

ZONE	AREA	ID
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

Table 75: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters

MSA	SSA	SP
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

1. Verify that the gateway screening feature is on, by entering the `rtrv-feat` command.

If the gateway screening feature is on, the `GWS` field is set to `on`.

Note: The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

If the gateway screening feature is on, shown by the entry `GWS = on` in the `rtrv-feat` command output, skip step 2, and go to step 3.

2. Turn the gateway screening feature on by entering this command.

```
chg-feat:gws=on
```

Note: Once the gateway screening feature is turned on with the `chg-feat` command, it cannot be turned off.

Note: The gateway screening feature must be purchased before you turn this feature on with the `chg-feat` command. If you are not sure if you have purchased the gateway screening feature, contact your Tekelec Sales Representative or Account Representative.

When the `chg-feat` has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 11:43:04 GMT EAGLE5 36.0.0
CHG-FEAT: MASP A - COMPLTD
```

3. Display all allowed OPC screens in the database using the `rtrv-scr-opc` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED OPC
SR      REF  RULES
IEC     YES   2
WRD2    YES   1
WRD4    YES   9
```

If the screening reference names that you wish to add with this procedure are not shown in the `rtrv-scr-opc` command output, go to step 4. For this example, the screening reference names are not shown. If these screening reference names are shown in the `rtrv-scr-opc` command output, make sure the screening data you wish to enter is not already in the database by entering the `rtrv-scr-opc` command with the screening reference name. For example, enter the `rtrv-scr-opc:sr=iec` command. The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED OPC
SR      NI      NC      NCM      NSF1      NSR/ACT
IEC     240     001     010     STOP     -----
IEC     241     010     *       CGPA     cg04

SR      NPC      NSF1      NSR/ACT
IEC     00235     CGPA     cg04
IEC     00240     CGPA     cg01

SR      ZONE     AREA     ID      NSF1      NSR/ACT
IEC     1       003     4       BLKOPC   blk1
IEC     1       003     5       STOP     -----
```

If a gateway screening stop action set is to be assigned to the allowed OPC screen being added to the database, go to step 4.

Step 4 verifies the gateway screening stop action set names in the database. The gateway screening stop action set names are assigned only if the NSF1 of the screen being added in this procedure is STOP. If the NSF1 of the new screen will be STOP, but a gateway screening stop action set name will not be assigned to the new screen, skip steps 4, 5, and 6, and go to step 7. If the NSF1 of the new screen is not STOP, skip steps 4 and 5, and go to step 6.

4. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME  1    2    3    4    5    6    7    8    9    10
---  ---  ---  ---  ---  ---  ---  ---  ---  ---  ---  ---
1    copy  copy
2    rdct  rdct
3    cr    copy rdct
4    cnf   cnf
5    cpcnf copy cnf
6    cnf   rdct
7    cpcnf copy cnf rdct
```

GWS action set table is (7 of 16) 44% full

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to configure the required gateway screening stop action set.

Note: If the gateway screening stop action set being assigned to the Allowed OPC screen does not contain the redirect stop action, skip step 5 and go to step 6.

5. Verify the point codes of adjacent nodes by entering the `rtrv-ls` command.

The following is an example of the possible output.

```

rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 36.0.0
                                L3T SLT                                GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI  LST LNKS  ACT MES DIS  SLSCI NIS
ele2         001-207-000  none  1  1  no  B   6   off off off  no   off
ls1305      000-005-000  none  1  1  no  A   1   off off off  no   off
ls1307      000-007-000  none  1  1  no  A   1   off off off  no   off
elm1s1      001-001-001  none  1  1  no  A   7   off off off  no   off
elm1s2      001-001-002  none  1  1  no  A   7   off off off  no   off

                                L3T SLT                                GWS GWS GWS
LSN          APCI   (SS7)  SCRN  SET SET BEI  LST LNKS  ACT MES DIS  SLSCI NIS
ele2i       1-207-0     none  1  1  no  B   4   off off off  ---  on
ls1315     0-015-0     none  1  1  no  A   1   off off off  ---  off
ls1317     0-017-0     none  1  1  no  A   1   off off off  ---  on
elm2s1     1-011-1     none  1  1  no  A   7   off off off  ---  off
elm2s2     1-011-2     none  1  1  no  A   7   off off off  ---  off
    
```

Link set table is (10 of 1024) 1% full.



CAUTION

CAUTION: Redirecting SLTA/SLTM messages prevents SLTA/SLTM messages from being returned to the EAGLE 5 ISS. The signaling link carrying these messages will fail if these messages are not returned to the EAGLE 5 ISS. To prevent SLTA/SLTM messages from being redirected, gateway screening stop action sets containing the redirect stop action should not be assigned to Allowed OPC screens containing the adjacent point code of a linkset.

Note: If the NSFI of the screen being added in this procedure is STOP, skip step 6 and go to step 7.

6. Enter the commands in the [Verifying the Gateway Screening Configuration](#) on page 371 section to verify that the screen that will be specified by the NSFI/NSR parameter combination in step 8 is in the database.

If the desired screen is not in the database, perform one of the procedures shown in the [Gateway Screening Configuration Procedures](#) on page 371 section to add the desired screen to the database or change an existing screen in the database.

Note: If the point code being added in this procedure is not an ITU-I or 14-bit ITU-N spare point code, skip step 7 and to step 8.

Note: If the point code being added in this procedure is an ITU-I or 14-bit ITU-N spare point code and the screening reference contains ITU-I or 14-bit ITU-N spare point codes, skip step 7 and go to step 8.

7. Display the status of the ITU National and International Spare Point Code Support feature by entering the `rtrv-ctrl-feat` command with the ITU National and International Spare Point Code Support feature part number.

Enter this command.

```
rtrv-ctrl-feat:partnum=893013601
```

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name          Partnum  Status Quantity
Spare Point Code Support 893013601 on      ----

The following features have been temporarily enabled:

Feature Name          Partnum  Status Quantity  Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name          Partnum
Zero entries found.
```

If the ITU National and International Spare Point Code Support feature is enabled, go to step 8.

If the ITU National and International Spare Point Code Support feature is not enabled, perform the “Activating the ITU National and International Spare Point Code Support Feature” procedure in the Database *Administration Manual - SS7* to enable the ITU National and International Spare Point Code Support feature as required. After the feature has been enabled, go to step 8.

8. Add a new allowed OPC screen to the database using the `ent-scr-opc` command.

If a gateway screening stop action is to be assigned to the allowed OPC screen being changed, enter the `ent-scr-opc` command with the `nsfi=stop` parameter and the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 4.



CAUTION

CAUTION: Redirecting SLTA/SLTM messages prevents SLTA/SLTM messages from being returned to the EAGLE 5 ISS. The signaling link carrying these messages will fail if these messages are not returned to the EAGLE 5 ISS. To prevent SLTA/SLTM messages from being redirected, gateway screening stop action sets containing the redirect stop action should not be assigned to Allowed OPC screens containing the adjacent point code of a linkset, shown in step 5.

The following list contains the values for `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `npc`, `msa`, `ssa`, and `sp` parameters:

- `ni` – 0 - 255 or an asterisk (*)
- `nc` – 0 - 255 or an asterisk (*)
- `ncm` – 0 - 255 or an asterisk (*)
- `zone` – 0 - 7 or an asterisk (*)
- `area` – 0 - 255 or an asterisk (*)
- `id` – 0 - 7 or an asterisk (*)

- npc – 1 - 16383 or an asterisk (*)
- msa – 0 - 255 or an asterisk (*)
- ssa – 0 - 255 or an asterisk (*)
- sp – 0 - 255 or an asterisk (*)

A range of values can be specified for the ni, nc, and ncm parameters. See the *“Specifying a Range of Values”* on page 371 section for more information on how the asterisk and a range of values are used for the ni, nc, and ncm parameters.

To add a spare point code to the allowed OPC screen, the pcst=s parameter must be specified. To add a non-spare point code to the allowed OPC screen, the pcst parameter does not have to be specified. If the pcst parameter is specified for a screen containing an ITU-I or 14-bit ITU-N non-spare point code, the value must be none.

For this example, enter these commands.

```
ent-scr-opc:sr=gws4:ni=001:nc=001:ncm=001:nsfi=blkopc:nsr=gws3
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0
ENT-SCR-OPC: SCREEN SET AFFECTED - GWS4 1% FULL
ENT-SCR-OPC: MASP A - COMPLTD
```

```
ent-scr-opc:sr=fld2:ni=010:nc=010:ncm=010:nsfi=blkopc:nsr=fld3
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0
ENT-SCR-OPC: SCREEN SET AFFECTED - FLD2 1% FULL
ENT-SCR-OPC: MASP A - COMPLTD
```

```
ent-scr-opc:sr=isp1:ni=015:nc=015:ncm=015:nsfi=blkopc:nsr=isp1
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0
ENT-SCR-OPC: SCREEN SET AFFECTED - ISP1 1% FULL
ENT-SCR-OPC: MASP A - COMPLTD
```

```
ent-scr-opc:sr=tup1:ni=017:nc=017:ncm=017:nsfi=sio:nsr=tup1
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0
ENT-SCR-OPC: SCREEN SET AFFECTED - TUP1 1% FULL
ENT-SCR-OPC: MASP A - COMPLTD
```

9. Verify the changes using the rtrv-scr-opc command with the screening reference name used in step 8.

For this example, enter these commands.

```
rtrv-scr-opc:sr=gws4
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED OPC
```

SR	NI	NC	NCM	NSFI	NSR/ACT
GWS4	001	001	001	BLKOPC	GWS3

```
rtrv-scr-opc:sr=fld2
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:31:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED OPC
SR      NI      NC      NCM      NSFI      NSR/ACT
FLD2   010      010      010      BLKOPC   FLD3
```

```
rtrv-scr-opc:sr=ispl
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:31:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED OPC
SR      NI      NC      NCM      NSFI      NSR/ACT
ISP1   015      015      015      BLKOPC   ISP1
```

```
rtrv-scr-opc:sr=tup1
```

The following is an example of the possible output.


```
rlghncxa03w 06-10-25 15:31:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED OPC
SR      NI      NC      NCM      NSFI      NSR/ACT
TUP1   017      017      017      SIO      TUP1
```


- Backup the new changes using the `chg-db:action=backup:dest=fixed` command.


The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 66: Adding an Allowed OPC Screen

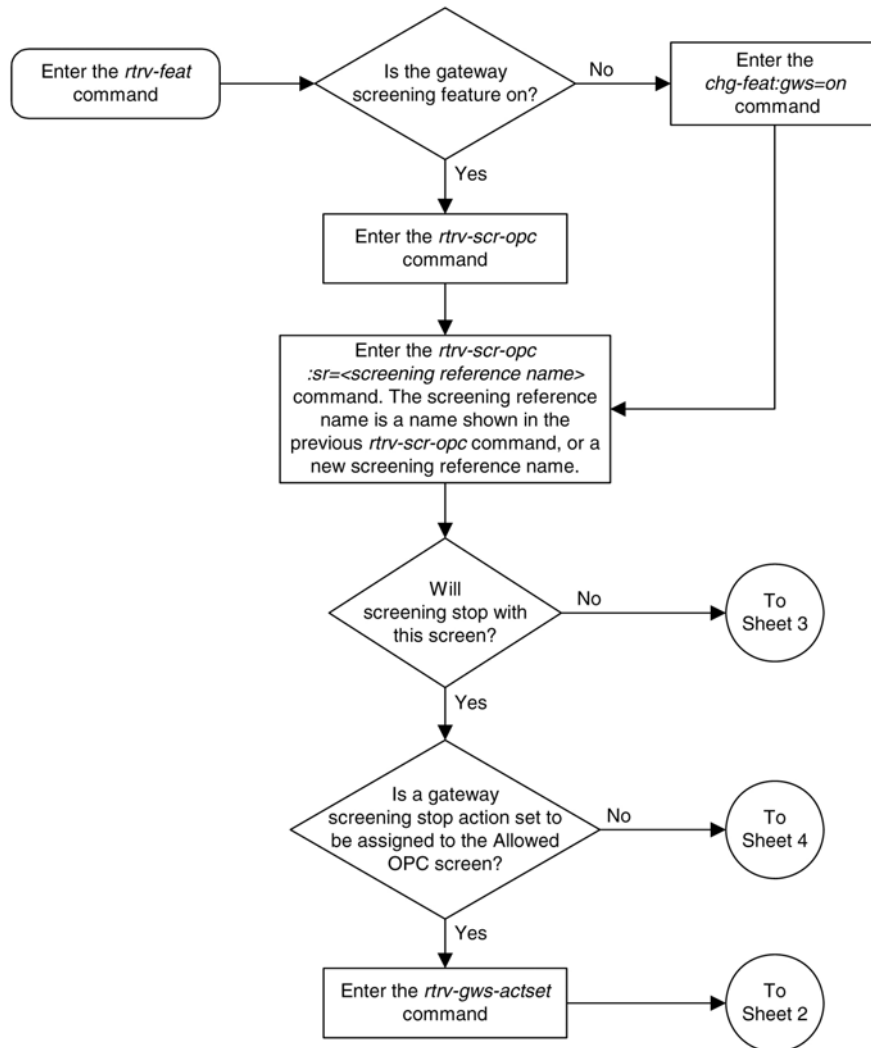

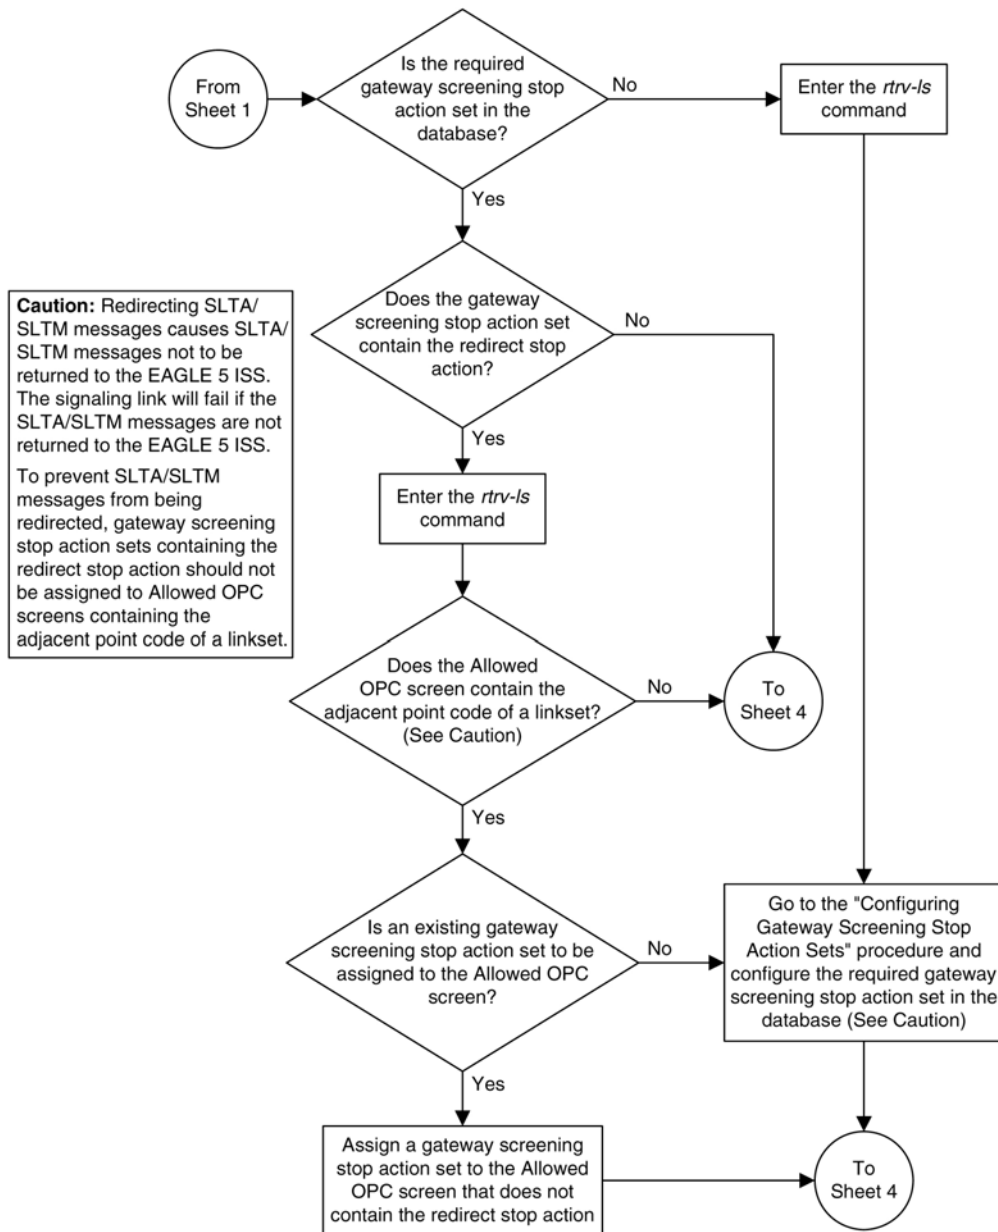

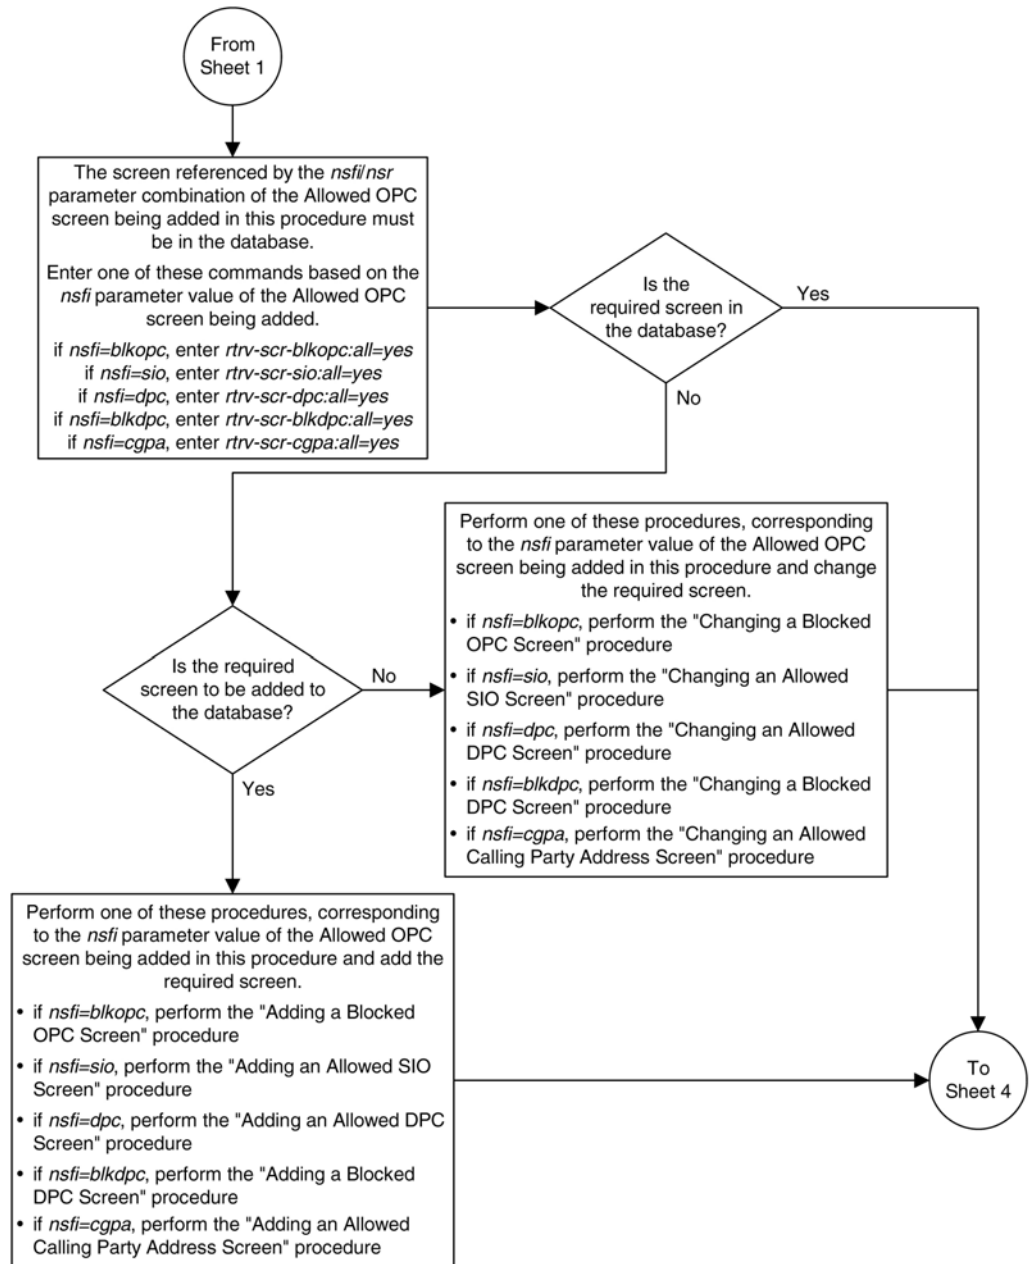

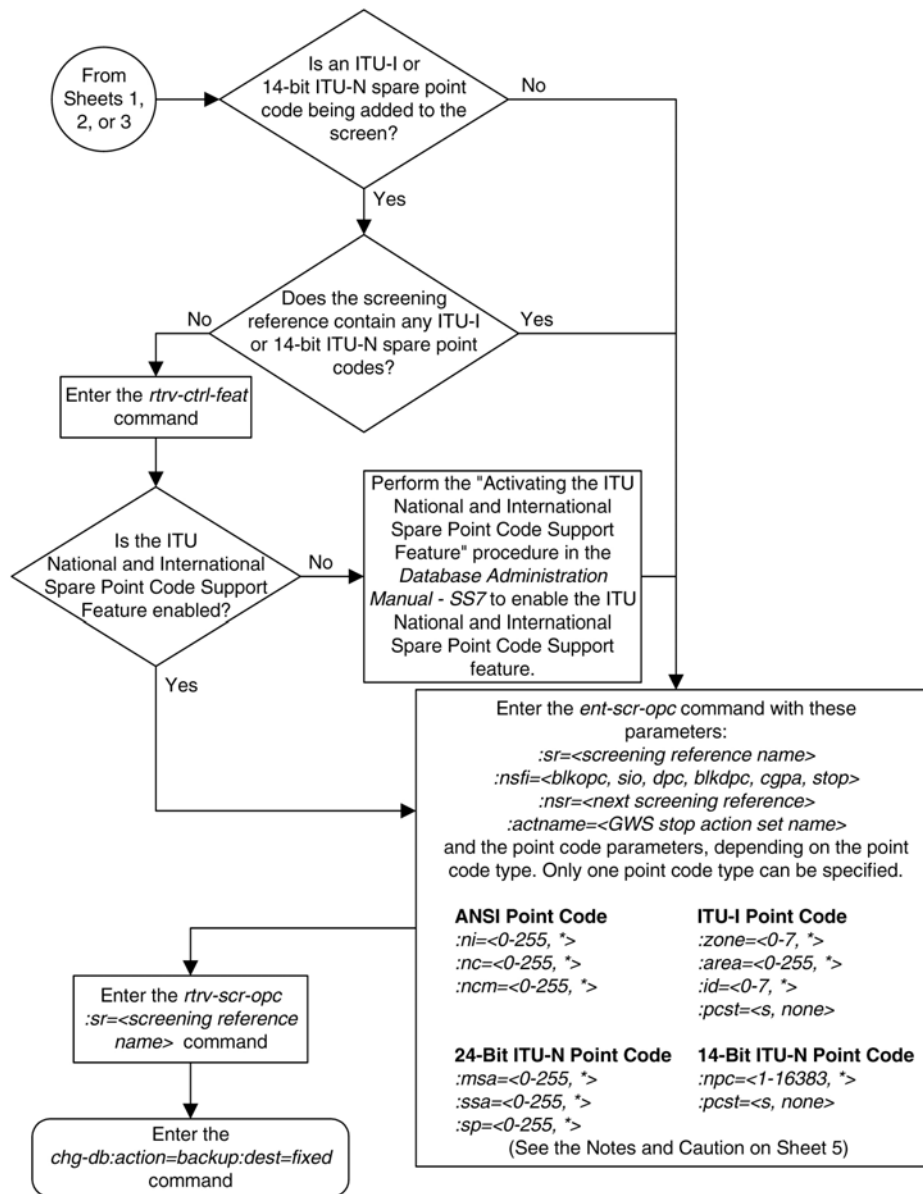

Notes:

1. A range of values can be specified for the *ni*, *nc*, or *ncm* parameters by inserting double ampersands (&&) between the parameter values defining the range. For example, to specify the range 025 to 200 for the *ni* parameter, enter 025&&200 for the *ni* parameter value.
2. The asterisk (*) specifies the entire range of values for that parameter.
For more information about specifying a range of values and about using the asterisk, see the "Gateway Screening Attributes" section in Chapter 2 and the "Specifying a Range of Values" section in this procedure.
3. The *nsr* parameter can be specified only, and must be specified, if the *nsfi* parameter value is either *blkopc*, *sio*, *dpc*, *blkdpc*, or *cgpa*.
4. The *actname* parameter is optional and can be specified only with the *nsfi=stop* parameter. If the *actname* parameter is specified, the *actname* parameter value is one of the gateway screening stop action set names shown in the *rtrv-gws-actset* output on Sheet 1.
5. To add a non-spare point code, the *pcst* parameter does not have to be specified. If the *pcst* parameter is specified for a screen containing an ITU-1 or 14-bit ITU-N non-spare point code, the value must be *none*.
6. To add a spare point code, the *pcst=s* parameter must be specified.

Caution: Redirecting SLTA/SLTM messages causes SLTA/SLTM messages not to be returned to the EAGLE 5 ISS. The signaling link will fail if the SLTA/SLTM messages are not returned to the EAGLE 5 ISS.

To prevent SLTA/SLTM messages from being redirected, gateway screening stop action sets containing the redirect stop action should not be assigned to Allowed OPC screens containing the adjacent point code of a linkset.

Removing an Allowed OPC Screen

This procedure is used to remove an allowed originating point code (OPC) screen from the database using the `dlt-scr-opc` command. The parameters used by the `dlt-scr-opc` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure removes the allowed OPC screen `gws4` from the database.

Note: If you using multiple-part ITU national point codes with gateway screening, see the [14-Bit ITU National Point Code Formats](#) on page 34 section.

The allowed OPC screen can only be referenced by a screen set.

Enter the `rtrv-scrset:nsfi=opc` command to verify that none of the screen sets reference the allowed OPC screen being removed from the database.

To change the NSFI of any of the screen sets, perform the [Changing a Screen Set](#) on page 409 procedure.

1. Display the allowed OPC screens in the database using the `rtrv-scr-opc` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED OPC

SR      REF  RULES
GWS4   YES    1
IEC    YES    6
```

```
ISP1  YES    1
TUP1  YES    1
WRD2  YES    1
WRD4  YES    9
```

From the `rtrv-scr-opc` output, display the allowed OPC screen you wish to remove using the `rtrv-scr-opc` command with the screening reference name. For this example, enter this command.

```
rtrv-scr-opc:sr=gws4
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT  EAGLE5 36.0.0
SCREEN = ALLOWED OPC
SR  NI      NC      NCM      NSF1      NSR/ACT
GWS4 001      001      001      BLKOPC    GWS7
```

2. Enter the `rtrv-scrset:nsfi=opc` command to verify that none of the screen sets reference the allowed OPC screen being removed from the database.

To change the NSF1 of any of the screen sets, perform the [Changing a Screen Set](#) on page 409 procedure.

3. Remove the allowed OPC screen from the database using the `dlt-scr-opc` command with the screening reference name shown in the `rtrv-scr-opc` output in step 1 and with the point code parameter values (`ni`, `nc`, `ncm`, or `zone`, `area`, `id`, or `npc`, or `msa`, `ssa`, `sp`) of the screen being removed from the database. The values for these parameters must be entered exactly as shown in the `rtrv-scr-opc` output.

To remove an entry containing either an ITU-I or a 14-bit ITU-N spare point code, the `pcst=s` parameter must be specified with the `dlt-scr-opc` command.

To remove an entry containing either an ITU-I or a 14-bit ITU-N non-spare point code, the `pcst` parameter does not have to be specified with the `dlt-scr-opc` command. If the `pcst` parameter is specified, the value must be none.

For this example, enter this command.

```
dlt-scr-opc:sr=gws4:ni=001:nc=001:ncm=001
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:26:30 GMT  EAGLE5 36.0.0
DLT-SCR-OPC: SCREEN SET AFFECTED - GWS4 0% FULL
DLT-SCR-OPC: MASP A - COMPLTD
```

4. Verify the changes using the `rtrv-scr-opc` command with the screening reference name used in step 3.

For this example, enter this command.

```
rtrv-scr-opc:sr=gws4
```

The following is an example of the possible output.

```
E2573 Cmd Rej: SR or NSR does not reference an existing SR
```

This message shows that the specified screening reference name is not in the database and the action of the `dlt-scr-opc` command in step 3 was successful. If the specified screening reference name contained more than one entry when the `dlt-scr-opc` command was executed


in step 3, the `rtrv-scr-opc:sr=` command output would show the remaining entries in the screening reference instead of error message E2573.

- Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 67: Removing an Allowed OPC Screen

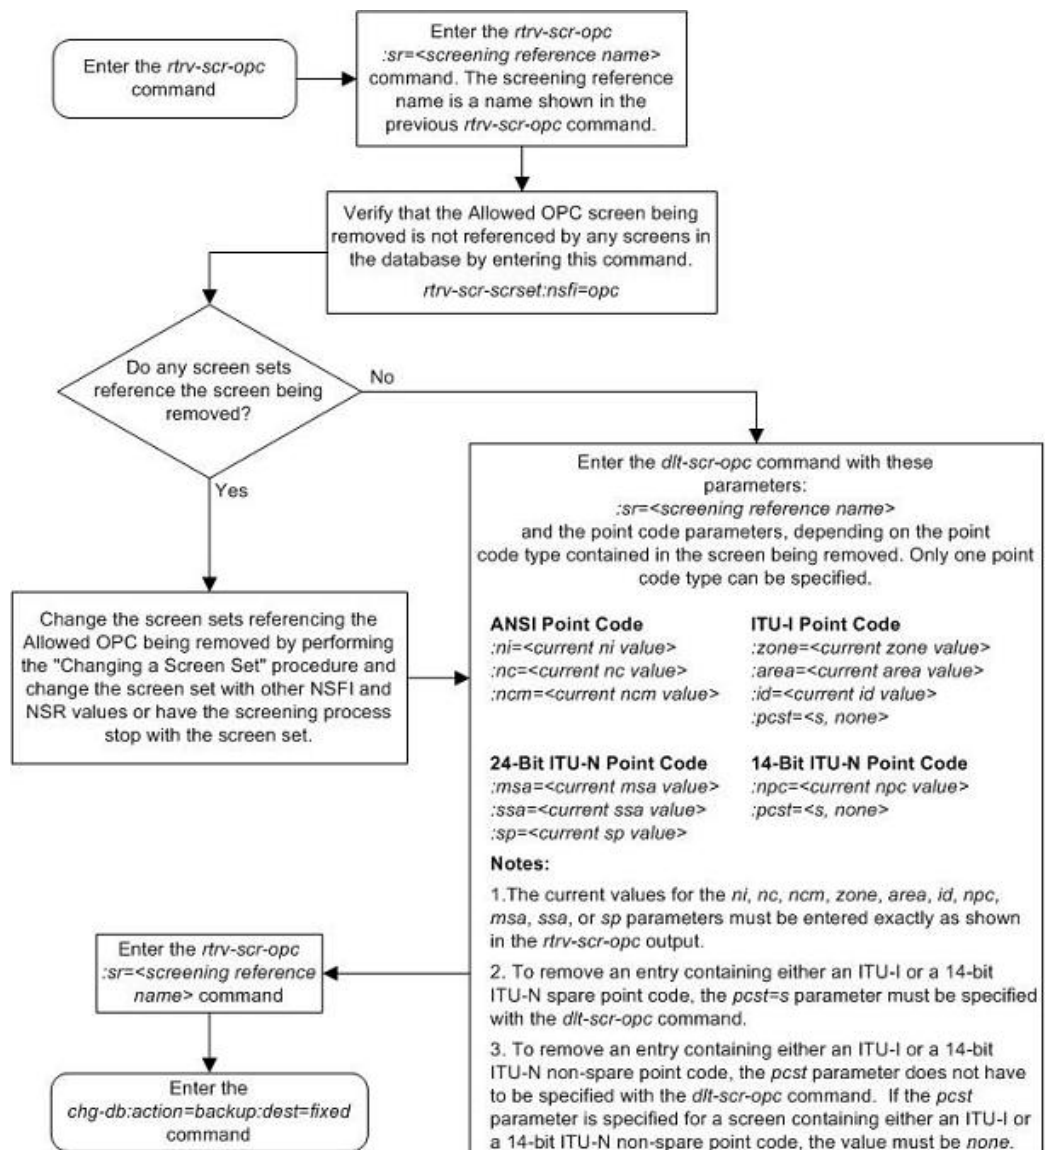

Changing an Allowed OPC Screen

This procedure is used to change the attributes of an allowed originating point code (OPC) screen in the database using the `chg-scr-opc` command. The parameters used by the `chg-scr-opc` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure is used to change the point code for the allowed OPC screen `wrd2` to 230-230-230, the NSFI to `blkopc`, and the NSR to `wrd6`.

Note: If you using multiple-part ITU national point codes with gateway screening, see the [14-Bit ITU National Point Code Formats](#) on page 34 section.

The allowed OPC screen can reference one of the following screens.

- Blocked OPC
- Allowed SIO
- Allowed DPC
- Blocked DPC
- Allowed CGPA

Verifying the Gateway Screening Configuration

Enter the following commands to verify that these screens are in the database.

- `rtrv-scr-blkopc:all=yes`
- `rtrv-scr-sio:all=yes`
- `rtrv-scr-dpc:all=yes`
- `rtrv-scr-blkdpc:all=yes`
- `rtrv-scr-cgpa:all=yes`

Gateway Screening Configuration Procedures

If the desired screen is not in the database, perform one of these procedures to add the desired screen to the database or change an existing screen in the database.

- [Adding a Blocked OPC Screen](#) on page 336
- [Adding an Allowed SIO Screen](#) on page 311
- [Adding an Allowed DPC Screen](#) on page 276
- [Adding a Blocked DPC Screen](#) on page 242
- [Adding an Allowed Calling Party Address Screen](#) on page 184
- [Changing a Blocked OPC Screen](#) on page 353
- [Changing an Allowed SIO Screen](#) on page 323
- [Changing an Allowed DPC Screen](#) on page 292
- [Changing a Blocked DPC Screen](#) on page 258
- [Changing an Allowed Calling Party Address Screen](#) on page 198

Specifying a Range of Values

A range of values can be specified for the point code parameters `ni`, `nc`, or `ncm`.

If a range of values is specified for any of these parameters, and the value of the other parameters match existing values for the screening reference name, the range of values for the point code parameter cannot include any values for that parameter that are currently provisioned for the screening reference name.

For example, screening reference name `scr1` contains these entries:

SR	NI	NC	NCM	NSFI	NSR/ACT
SCR1	240	001	010	CGPA	-----
SCR1	241	010	020	STOP	-----

Another entry for screening reference `scr1` with the `ni` value of 240 and the `nc` value of 001 cannot be specified if the range of values for the `ncm` parameter includes the value 010.

The ANSI point code parameter values can be specified as a single value, a range of values, or with an asterisk (*). The asterisk specifies all possible values for the `ni`, `nc`, and `ncm` parameters. [Table 76: Valid Value Combinations for ANSI Point Code Parameters](#) on page 387 shows the valid combinations of these parameter values.

Table 76: Valid Value Combinations for ANSI Point Code Parameters

NI	NC	NCM
Single Value	Single Value	Single Value
Single Value	Single Value	Range of Values
Single Value	Single Value	Asterisk
Single Value	Range of Values	Asterisk
Single Value	Asterisk	Asterisk
Range of Values	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

A range of values can also be specified for an ITU-I or 24-bit ITU-N point code parameter using a combination of asterisks (*) and single values for the point code parameters. [Table 77: Valid Value Combinations for ITU-I Point Code Parameters](#) on page 387 shows the valid combinations of the ITU-I parameter values. [Table 78: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters](#) on page 388 shows the valid combinations of the 24-bit ITU-N parameter values.

Table 77: Valid Value Combinations for ITU-I Point Code Parameters

ZONE	AREA	ID
Single Value	Single Value	Single Value

ZONE	AREA	ID
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

Table 78: Valid Value Combinations for 24-Bit ITU-N Point Code Parameters

MSA	SSA	SP
Single Value	Single Value	Single Value
Single Value	Single Value	Asterisk
Single Value	Asterisk	Asterisk
Asterisk	Asterisk	Asterisk

1. Display the allowed OPC screens in the database using the `rtrv-scr-opc` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED DPC
SR    REF  RULES
GWS4  YES   1
IEC   YES   6
ISP1  YES   1
TUP1  YES   1
WRD2  YES   1
WRD4  YES   9
```

From the `rtrv-scr-opc` output, display the allowed OPC screen you wish to remove using the `rtrv-scr-opc` command with the screening reference name. For this example, enter this command.

```
rtrv-scr-opc:sr=wr2
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED OPC
SR  NI    NC    NCM    NSF1    NSR/ACT
WRD2 243    015    001    STOP    -----
```

If a gateway screening stop action set is to be assigned to the allowed OPC screen being changed in the database, go to step 2.

Step 2 verifies the gateway screening stop action set names in the database. The gateway screening stop action set names are assigned only if the NSF1 of the screen being changed in

this procedure is STOP. If the NSFI of the screen will be changed to STOP, but a gateway screening stop action set name will not be assigned to the screen, skip steps 2, 3, and 4 and go to step 5. If the NSFI of the screen will not be STOP, skip step 2 and 3, and go to step 4.

2. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
ACT ACT ACT ACT ACT ACT ACT ACT ACT ACT ACT
ID NAME 1 2 3 4 5 6 7 8 9 10
---
1 copy copy
2 rdct rdct
3 cr copy rdct
4 cncf cncf
5 cpcncf copy cncf
6 cncfrd cncf rdct
7 cpcfrd copy cncf rdct
```

GWS action set table is (7 of 16) 44% full

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to configure the required gateway screening stop action set.

Note: If the gateway screening stop action set being assigned to the Allowed OPC screen does not contain the redirect stop action, skip step 3 and go to step 4.

3. Verify the point codes of adjacent nodes by entering the `rtrv-ls` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 36.0.0
                                L3T SLT
LSN          APCA (SS7) SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
ele2         001-207-000 none 1 1 no B 6 off off off no off
ls1305      000-005-000 none 1 1 no A 1 off off off no off
ls1307      000-007-000 none 1 1 no A 1 off off off no off
elm1s1      001-001-001 none 1 1 no A 7 off off off no off
elm1s2      001-001-002 none 1 1 no A 7 off off off no off
```

```
                                L3T SLT
LSN          APCI (SS7) SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
ele2i       1-207-0 none 1 1 no B 4 off off off --- on
ls1315      0-015-0 none 1 1 no A 1 off off off --- off
ls1317      0-017-0 none 1 1 no A 1 off off off --- on
elm2s1      1-011-1 none 1 1 no A 7 off off off --- off
elm2s2      1-011-2 none 1 1 no A 7 off off off --- off
```

Link set table is (10 of 1024) 1% full.



CAUTION: Redirecting SLTA/SLTM messages prevents SLTA/SLTM messages from being returned to the EAGLE 5 ISS. The signaling link carrying these messages will fail if these messages are not returned to the EAGLE 5 ISS. To prevent SLTA/SLTM messages from being redirected, gateway screening stop action sets containing the redirect stop action should not be assigned to Allowed OPC screens containing the adjacent point code of a linkset.

Note: If the NSFI of the screen being changed in this procedure will be STOP, or if the NSFI of the screen is not being changed, skip step 4 and go to step 5.

4. Enter the commands in the *Verifying the Gateway Screening Configuration* on page 386 section to verify that the screen that will be specified by the NSFI/NSR parameter combination in step 6 is in the database.

If the desired screen is not in the database, perform one of the procedures shown in the *Gateway Screening Configuration Procedures* on page 386 section to add the desired screen to the database or change an existing screen in the database.

Note: If any of these conditions apply to this procedure, skip this step and go to step 6:

- The point code in the screen is not being changed.
 - The screen being changed contains either an ANSI or 24-bit ITU-N point code.
 - The ITU-I or 14-bit ITU-N non-spare point code in the screen is not being changed to an ITU-I or 14-bit ITU-N spare point code.
 - The point code in the screen is an ITU-I or 14-bit ITU-N spare point code or the screening reference contains other screens with ITU-I or 14-bit ITU-N spare point codes.
5. Display the status of the ITU National and International Spare Point Code Support feature by entering the `rtrv-ctrl-feat` command with the ITU National and International Spare Point Code Support feature part number.

Enter this command.

```
rtrv-ctrl-feat:partnum=893013601
```

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name          Partnum  Status  Quantity
Spare Point Code Support  893013601 on      ----

The following features have been temporarily enabled:

Feature Name          Partnum  Status  Quantity  Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name          Partnum
Zero entries found.
```

If the ITU National and International Spare Point Code Support feature is enabled, go to step 6.

If the ITU National and International Spare Point Code Support feature is not enabled, perform the “Activating the ITU National and International Spare Point Code Support Feature” procedure in the *Database Administration Manual - SS7* to enable the ITU National and International Spare Point Code Support feature as required. After the feature has been enabled, go to step 6.

6. Change the attributes for the allowed OPC using the `chg-scr-opc` command.

If a gateway screening stop action is to be assigned to the allowed OPC screen being changed, enter the `chg-scr-opc` command with the `nsfi=stop` parameter and the `actname` parameter

with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 2.

**CAUTION**

CAUTION: Redirecting SLTA/SLTM messages prevents SLTA/SLTM messages from being returned to the EAGLE 5 ISS. The signaling link carrying these messages will fail if these messages are not returned to the EAGLE 5 ISS. To prevent SLTA/SLTM messages from being redirected, gateway screening stop action sets containing the redirect stop action should not be assigned to Allowed OPC screens containing the adjacent point code of a linkset, shown in step 3.

The current values for the `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `npc`, `msa`, `ssa`, and `sp` parameters must be entered exactly as shown in the `rtrv-scr-opc` output in step 1.

The following list contains the values for the `nni`, `nnc`, `nncm`, `nzone`, `narea`, `nid`, and `nnpc` parameters:

- `nni` – 0 - 255 or an asterisk (*)
- `nnc` – 0 - 255 or an asterisk (*)
- `nncm` – 0 - 255 or an asterisk (*)
- `nzone` – 0 - 7 or an asterisk (*)
- `narea` – 0 - 255 or an asterisk (*)
- `nid` – 0 - 7 or an asterisk (*)
- `nnpc` – 1 - 16383 or an asterisk (*)
- `nmsa` – 0 - 255 or an asterisk (*)
- `nssa` – 0 - 255 or an asterisk (*)
- `nsp` – 0 - 255 or an asterisk (*)

A range of values can be specified for the `nni`, `nnc`, and `nncm` parameters. See the [“Specifying a Range of Values”](#) on page 386 section for more information on how the asterisk and a range of values are used for the `nni`, `nnc`, and `nncm` parameters.

To change an ITU-I or 14-bit ITU-N spare point code to a non-spare point code, both the `pcst=s` and `npcst=none` parameters must be specified with the `chg-scr-opc` command.

To change an ITU-I or 14-bit ITU-N non-spare point code to a spare point code, the `npcst=s` parameter must be specified with the `chg-scr-opc` command. The `pcst` parameter does not have to be specified.

If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N spare point code, the `pcst=s` parameter must be specified with the `chg-scr-opc` command.

If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N non-spare point code, the `pcst` parameter does not have to be specified with the `chg-scr-opc` command. If the `pcst` parameter is specified for a screen containing either an ITU-I or 14-bit ITU-N non-spare point code, the `pcst` parameter value must be none.

For this example, enter this command.

```
chg-scr-opc:sr=wrđ2:ni=243:nc=015:ncm=001:nni=230:nc=230
:nnc=230:nsfi=blkopc:nsr=wrđ6
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
CHG-SCR-OPC: SCREEN SET AFFECTED - WRD2 1% FULL
CHG-SCR-OPC: MASP A - COMPLTD
```

- Verify the changes using the `rtrv-scr-opc` command with the screening reference name used in step 6.

For this example, enter this command.

```
rtrv-scr-opc:sr=wrld2
```

The following is an example of the possible output.


```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED OPC
SR      NI      NC      NCM      NSFI      NSR/ACT
WRD2   230     230     230     BLKOPC   WRD6
```


- Backup the new changes using the `chg-db:action=backup:dest=fixed` command.


The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```


Figure 68: Changing an Allowed OPC Screen

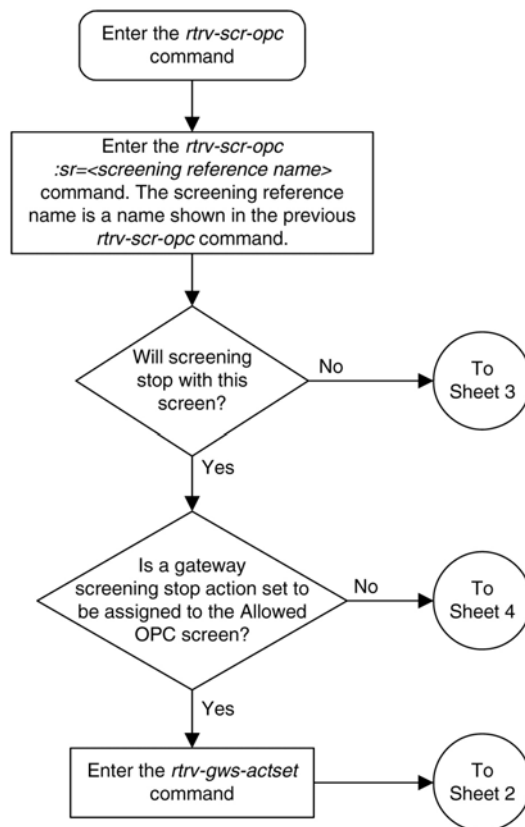

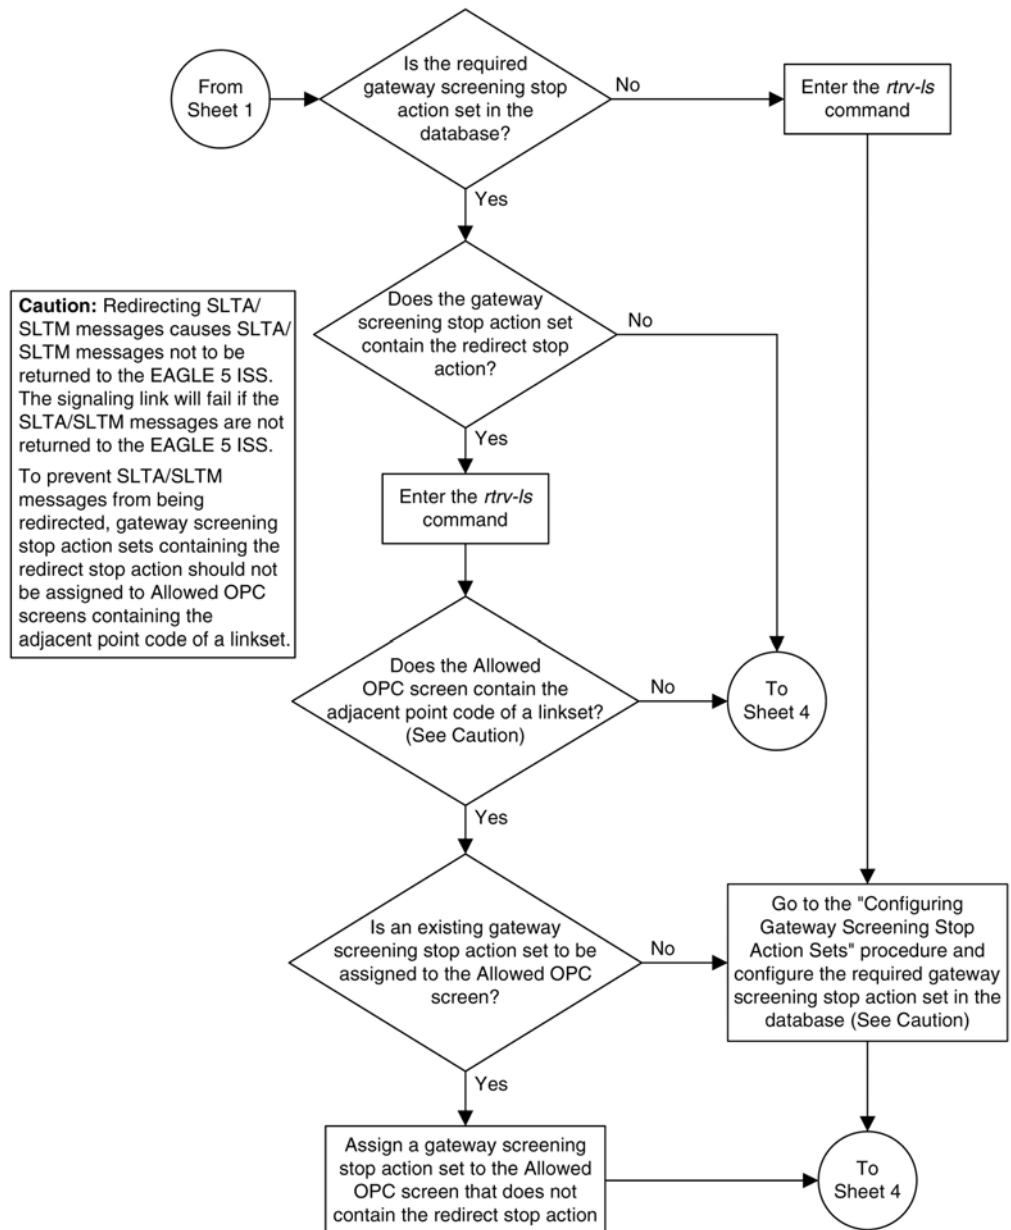

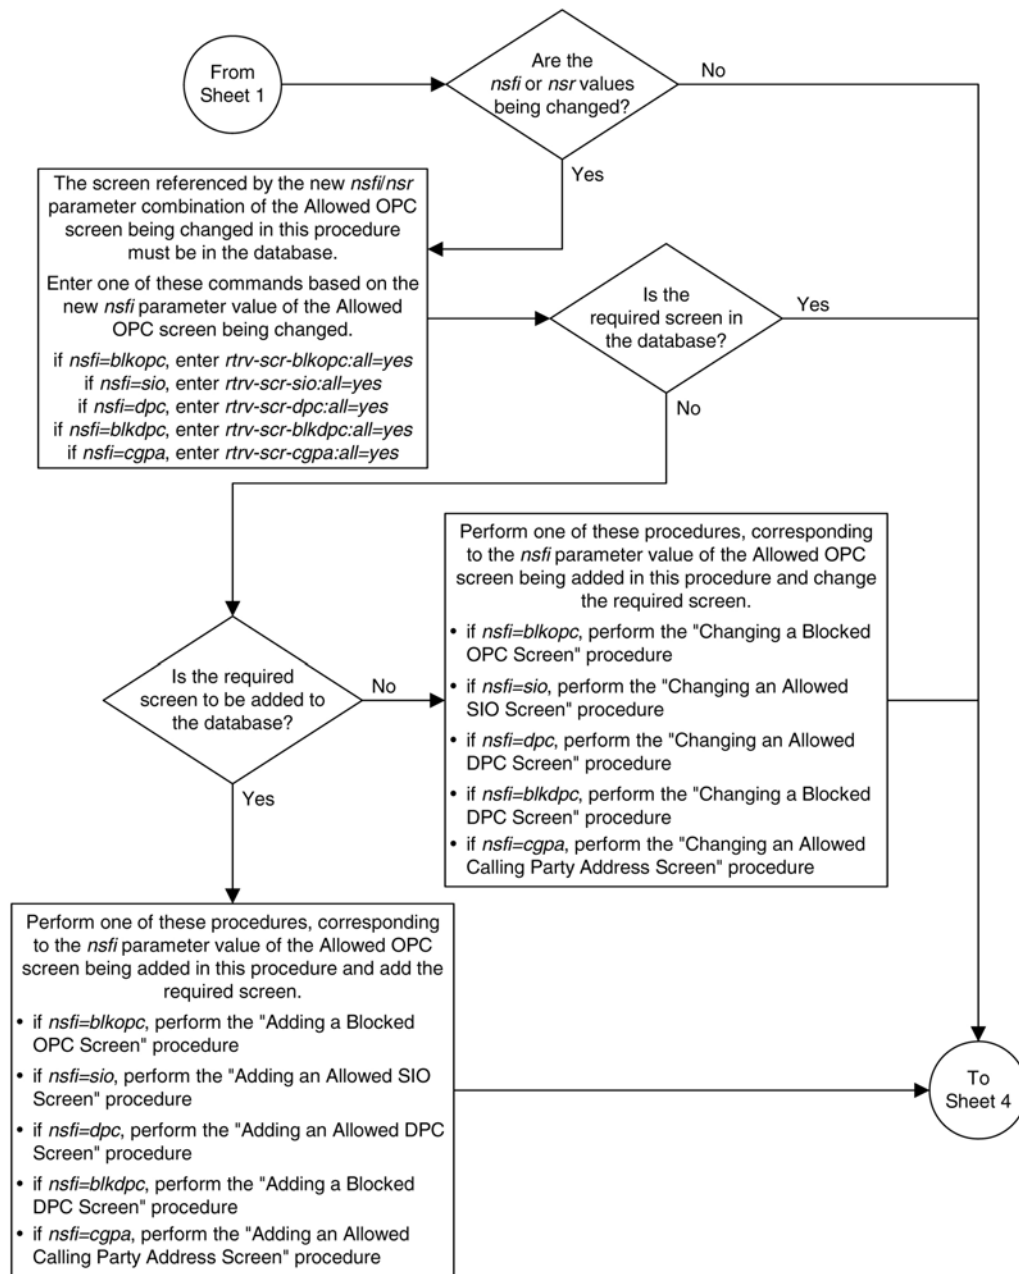

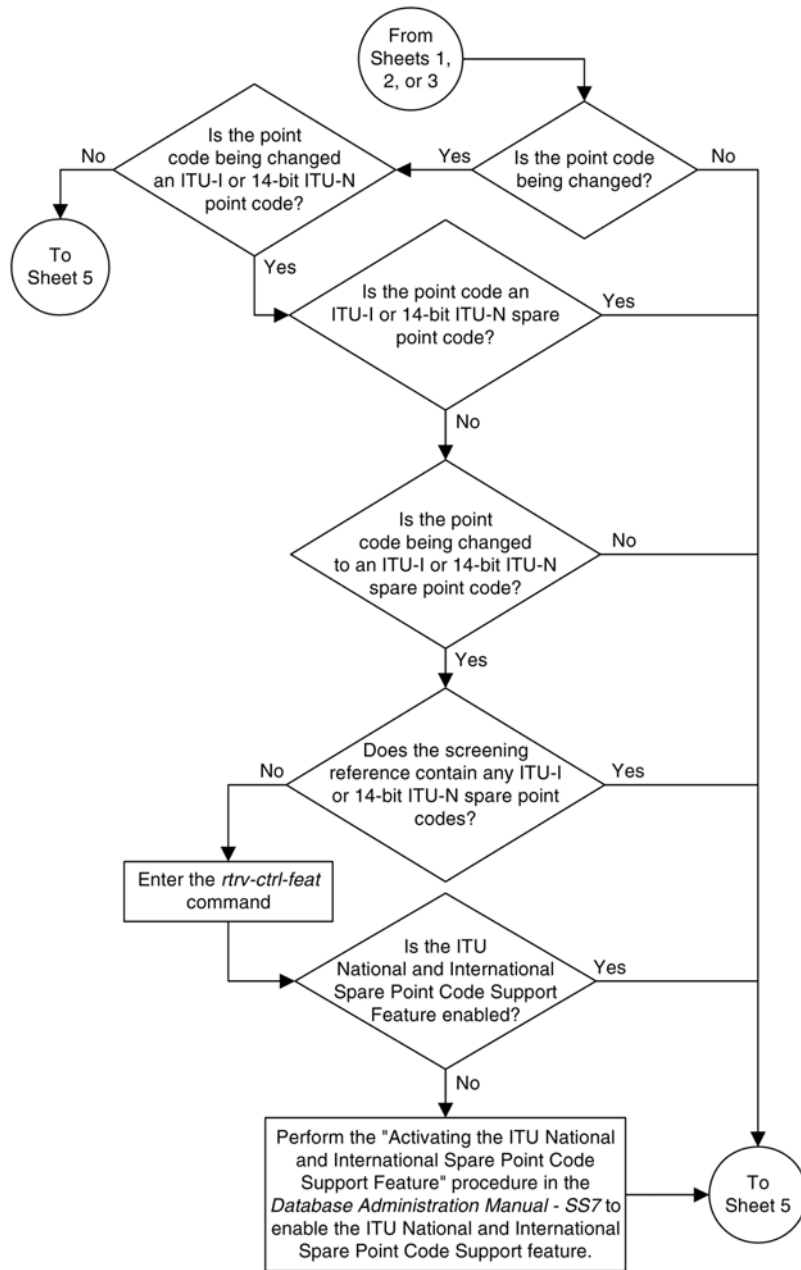

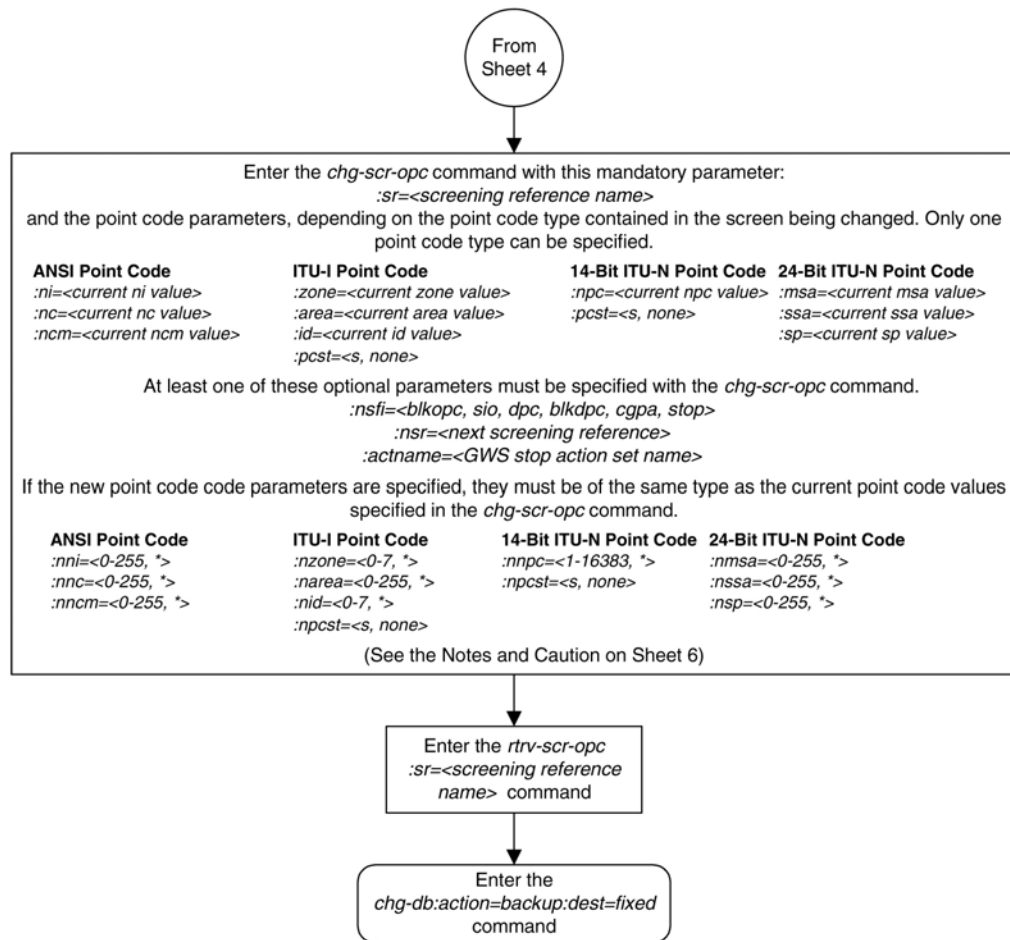

Notes:

1. A range of values can be specified for the *ni*, *nc*, or *ncm* parameters by inserting double ampersands (&&) between the parameter values defining the range. For example, to specify the range 025 to 200 for the *ni* parameter, enter 025&&200 for the *ni* parameter value.

2. The asterisk (*) specifies the entire range of values for that parameter.

For more information about specifying a range of values and about using the asterisk, see the "Gateway Screening Attributes" section in Chapter 2 and the "Specifying a Range of Values" section in this procedure.

3. The *nsr* parameter can be specified, and must be specified, if the *nsfi* parameter value is either *blkopc*, *sio*, *dpc*, *blkdpc*, or *cgpa*.

4. The *actname* parameter is optional and can be specified only with the *nsfi=stop* parameter. If the *actname* parameter is specified, the *actname* parameter value is one of the gateway screening stop action set names shown in the *rtrv-gws-actset* output on Sheet 1.

5. To change an ITU-I or 14-bit ITU-N spare point code to a non-spare point code, both the *pcst=s* and *npcst=none* parameters must be specified with the *chg-scr-opc* command.

6. To change an ITU-I or 14-bit ITU-N non-spare point code to a spare point code, the *npcst=s* parameter must be specified with the *chg-scr-opc* command. The *pcst* parameter does not have to be specified.

7. If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N spare point code, the *pcst=s* parameter must be specified with the *chg-scr-opc* command.

8. If the current point code in the screen being changed is either an ITU-I or 14-bit ITU-N non-spare point code, the *pcst* parameter does not have to be specified with the *chg-scr-opc* command. If the *pcst* parameter is specified for a screen containing either an ITU-I or 14-bit ITU-N non-spare point code, the *pcst* parameter value must be *none*.

Caution: Redirecting SLTA/SLTM messages causes SLTA/SLTM messages not to be returned to the EAGLE 5 ISS. The signaling link will fail if the SLTA/STM messages are not returned to the EAGLE 5 ISS.

To prevent SLTA/SLTM messages from being redirected, gateway screening stop action sets containing redirect stop action should not be assigned to Allowed OPC screens containing the adjacent point code of a linkset.

Chapter 13

Screen Set Configuration

Topics:

- [Introduction Page 400](#)
- [Automatic Destination Field Screening Page 400](#)
- [Adding a Screen Set Page 400](#)
- [Removing a Screen Set Page 407](#)
- [Changing a Screen Set Page 409](#)

Chapter 13, Screen Set Configuration, contains the procedures necessary to configure screen sets.

Introduction

A screen set is a gateway screening table containing a list of rules, or screening references. The screening references indicate the screening action that is to be performed on a message in a specific linkset. These screening references are configured in [Allowed Affected Point Code \(AFTPC\) Screen Configuration](#) on page 97 through [Allowed Originating Point Code \(OPC\) Screen Configuration](#) on page 365. The screen set is assigned to a linkset. When the `gwsa=on` linkset parameter is specified for a specific linkset, all the messages on that linkset will be screened by the gateway screening feature based on the screening references contained in the screen set. For more information of the linkset parameters used for the gateway screening feature, go to the [Gateway Screening States](#) on page 19 section, or to the `ent-ls` or `chg-ls` command descriptions in the *Commands Manual*.

Automatic Destination Field Screening

Network management messages can be screened automatically by gateway screening without configuring an Allowed Affected Destination Field screen. The `destfld=yes` parameter specified with the `ent-scrset` or `chg-scrset` commands turns on automatic screening of the affected destination point code (see [Figure 40: Allowed Affected Destination Field Screening Function](#) on page 215) in the network management messages. Network management messages contain the value 0 in the service indicator field of the SIO. The network management messages are screened against the routing table, the EAGLE 5 ISS's point code, and capability point codes. If the affected destination point code matches the EAGLE 5 ISS's point code, capability point codes, or point codes in the routing table, the message is allowed into the EAGLE 5 ISS. The automatic screening is applied after the last screen in the screening process, containing the `nsfi=stop` parameter, for that screen set.

These network management messages are automatically screened by gateway screening: TFP, TFA, TFR, TFC, UPU, SRST (RSP, RSR). All other network management messages are allowed into the EAGLE 5 ISS.

Adding a Screen Set

This procedure is used to add a screen set to the database using the `ent-scrset` command. The parameters used by the `ent-scrset` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

A maximum of 255 screen sets can be configured in the database. If the database contains 255 screen sets, any attempt to add another screen set with the `ent-scrset` command will be rejected. If the database contains 255 screen sets, and you wish to add another screen set, a current screen set must be removed or changed. To remove a screen set, perform the [Removing a Screen Set](#) on page 407 procedure. To change an existing screen set, perform the [Changing a Screen Set](#) on page 409 procedure.

The examples in this procedure are used to add the screen set data shown in [Table 79: Example Gateway Screening Screen Set Configuration Table](#) on page 401 and based on the example configurations shown in [Figure 5: Gateway Screening Configuration - Example 1](#) on page 42 through [Figure 11: Gateway Screening Configuration - Example 7](#) on page 51.

Table 79: Example Gateway Screening Screen Set Configuration Table

Screen Set Name	Next Screening Function Identifier	Next Screening Reference	DESTFLD
gws1	opc	gws4	No
gws2	blkopc	gws5	No
ls01	sio	ls02	Yes
wrd1	dpc	iec	Yes
fld1	opc	fld2	No
isp1	opc	isp1	No
tup1	opc	tup1	No

The screen set can reference one of the following screens.

- Allowed OPC
- Blocked OPC
- Allowed SIO
- Allowed DPC
- Blocked DPC

Verifying the Gateway Screening Configuration

Enter the following commands to verify that these screens are in the database.

- `rtrv-scr-opc:all=yes`
- `rtrv-scr-blkopc:all=yes`
- `rtrv-scr-sio:all=yes`
- `rtrv-scr-dpc:all=yes`
- `rtrv-scr-blkdpc:all=yes`

Gateway Screening Configuration Procedures

If the desired screen is not in the database, perform one of these procedures to add the desired screen to the database or change an existing screen in the database.

- [Adding an Allowed OPC Screen](#) on page 370
- [Adding a Blocked OPC Screen](#) on page 336
- [Adding an Allowed SIO Screen](#) on page 311
- [Adding an Allowed DPC Screen](#) on page 276
- [Adding a Blocked DPC Screen](#) on page 242
- [Changing an Allowed OPC Screen](#) on page 386
- [Changing a Blocked OPC Screen](#) on page 353
- [Changing an Allowed SIO Screen](#) on page 323

- [Changing an Allowed DPC Screen](#) on page 292
- [Changing a Blocked DPC Screen](#) on page 258

1. Verify that the gateway screening feature is on, by entering the `rtrv-feat` command.

If the gateway screening feature is on, the `GWS` field is set to `on`.

Note: The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

If the gateway screening feature is on, shown by the entry `GWS = on` in the `rtrv-feat` command output, skip step 2, and go to step 3.

2. Turn the gateway screening feature on by entering this command.

```
chg-feat:gws=on
```

Note: Once the gateway screening feature is turned on with the `chg-feat` command, it cannot be turned off.

The gateway screening feature must be purchased before you turn this feature on with the `chg-feat` command. If you are not sure if you have purchased the gateway screening feature, contact your Tekelec Sales Representative or Account Representative.

When the `chg-feat` has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 11:43:04 GMT EAGLE5 36.0.0
CHG-FEAT: MASP A - COMPLTD
```

3. Display all the screen sets in the database using the `rtrv-scrset` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
ENTIRE GWS DATABASE IS 1% FULL
CDPA + AFTPC TABLES ARE 1% FULL
THERE ARE 248 SCREEN SETS AVAILABLE

THE FOLLOWING ARE OVER 80% FULL:
SCRN  NSFI      NSR/ACT  FULL  RULES  TABLES  DESTFLD
SCRN  NSFI      NSR/ACT  FULL  RULES  TABLES  DESTFLD
ss01  OPC       opc1     51%   2075   22       YES
ss02  OPC       opc2      2%     75     22       YES
ss03  OPC       opc3      2%     75     22       YES
ss04  OPC       opc1     51%   2075   22       NO
ss07  OPC       opc1     51%   2075   22       YES
ss09  OPC       opc1     51%   2075   22       NO
ss28  OPC       opc1     51%   2075   22       YES
```

If a gateway screening stop action set is to be assigned to the screen set being added to the database, go to step 4.

Step 4 verifies the gateway screening stop action set names in the database. The gateway screening stop action set names are assigned only if the NSFI of the screen set being added in this procedure is `STOP`. If the NSFI of the new screen set will be `STOP`, but a gateway screening stop action set name will not be assigned to the new screen set, skip steps 4 and 5 and go to step 6. If the NSFI of the new screen set is not `STOP`, skip step 4 and go to step 5.

4. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
ACT ACT ACT ACT ACT ACT ACT ACT ACT ACT ACT
ID NAME 1 2 3 4 5 6 7 8 9 10
--
1 copy copy
2 rdct rdct
3 cr copy rdct
4 cncf cncf
5 cpcncf copy cncf
6 cncfrd cncf rdct
7 cpcf rd copy cncf rdct
GWS action set table is (7 of 16) 44% full
```

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to configure the required gateway screening stop action set.

Note: If the NSFI of the screen set being added in this procedure is STOP, skip step 5 and go to step 6.

5. Enter the commands in the [Verifying the Gateway Screening Configuration](#) on page 401 section to verify that the screen that will be specified by the NSFI/NSR parameter combination in step 6 is in the database.

If the desired screen is not in the database, perform one of the procedures shown in the [Gateway Screening Configuration Procedures](#) on page 401 section to add the desired screen to the database or change an existing screen in the database.

6. Add a new screen set to the database using the `ent-scrset` command.

If a gateway screening stop action is to be assigned to the screen set being added, enter the `ent-scrset` command with the `nsfi=stop` parameter and the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 4.

For this example, enter these commands.

```
ent-scrset:scrn=gws1:nsfi=opc:nsr=gws4:destfld=no
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
ENT-SCRSET: SCREEN SET AFFECTED - GWS1 1% FULL
ENT-SCRSET: MASP A - COMPLTD
```

```
ent-scrset:scrn=gws2:nsfi=blkopc:nsr=gws5:destfld=no
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0
ENT-SCRSET: SCREEN SET AFFECTED - GWS2 1% FULL
ENT-SCRSET: MASP A - COMPLTD
```

```
ent-scrset:scrn=ls01:nsfi=sio:nsr=ls02:destfld=yes
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0
ENT-SCRSET: SCREEN SET AFFECTED - LS01 1% FULL
ENT-SCRSET: MASP A - COMPLTD
```

```
ent-scrset:scrn=wrld1:nsfi=dpc:nsr=iec:destfld=yes
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
ENT-SCRSET: SCREEN SET AFFECTED - WRD1 1% FULL
ENT-SCRSET: MASP A - COMPLTD
```

```
ent-scrset:scrn=fld1:nsfi=opc:nsr=fld2:destfld=no
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:31:30 GMT EAGLE5 36.0.0
ENT-SCRSET: SCREEN SET AFFECTED - FLD1 1% FULL
ENT-SCRSET: MASP A - COMPLTD
```

```
ent-scrset:scrn=ispl:nsfi=opc:nsr=ispl:destfld=no
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:31:30 GMT EAGLE5 36.0.0
ENT-SCRSET: SCREEN SET AFFECTED - ISP1 1% FULL
ENT-SCRSET: MASP A - COMPLTD
```

```
ent-scrset:scrn=tup1:nsfi=opc:nsr=tup1:destfld=no
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:31:30 GMT EAGLE5 36.0.0
ENT-SCRSET: SCREEN SET AFFECTED - TUP1 1% FULL
ENT-SCRSET: MASP A - COMPLTD
```

7. Verify the changes using the `rtrv-scrset` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:32:30 GMT EAGLE5 36.0.0
ENTIRE GWS DATABASE IS 1% FULL
CDPA + AFTPC TABLES ARE 1% FULL
THERE ARE 242 SCREEN SETS AVAILABLE

THE FOLLOWING ARE OVER 80% FULL:
SCRN  NSFI      NSR/ACT  FULL  RULES  TABLES  DESTFLD
SCRN  NSFI      NSR/ACT  FULL  RULES  TABLES  DESTFLD
fld1  OPC       fld2     1%    5      4        NO
gws1  OPC       gws4     1%    9      7        NO
gws2  BLKOPC   gws5     1%    5      4        NO
isp1  OPC       isp1     1%    6      4        NO
ls01  SIO      ls02     1%    3      3        YES
ss01  OPC       opc1     51%   2075   22       YES
ss02  OPC       opc2     2%    75     22       YES
ss03  OPC       opc3     2%    75     22       YES
ss04  OPC       opc1     51%   2075   22       NO
ss07  OPC       opc1     51%   2075   22       YES
ss09  OPC       opc1     51%   2075   22       NO
```

ss28	OPC	opc1	51%	2075	22	YES
tup1	OPC	tup1	1%	8	5	NO
wrd1	DPC	iec	1%	6	5	YES


- Backup the new changes using the `chg-db:action=backup:dest=fixed` command.


The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```

BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
    
```

Figure 69: Adding a Screen Set

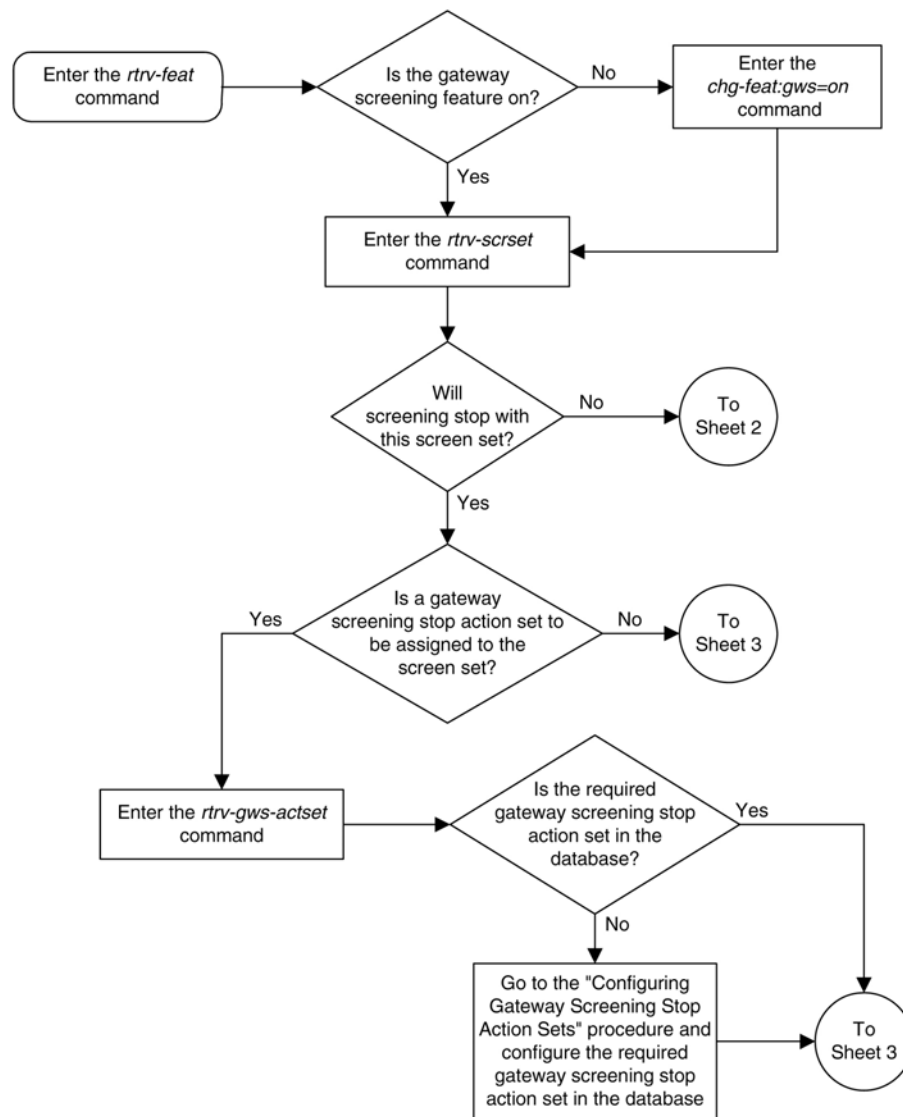

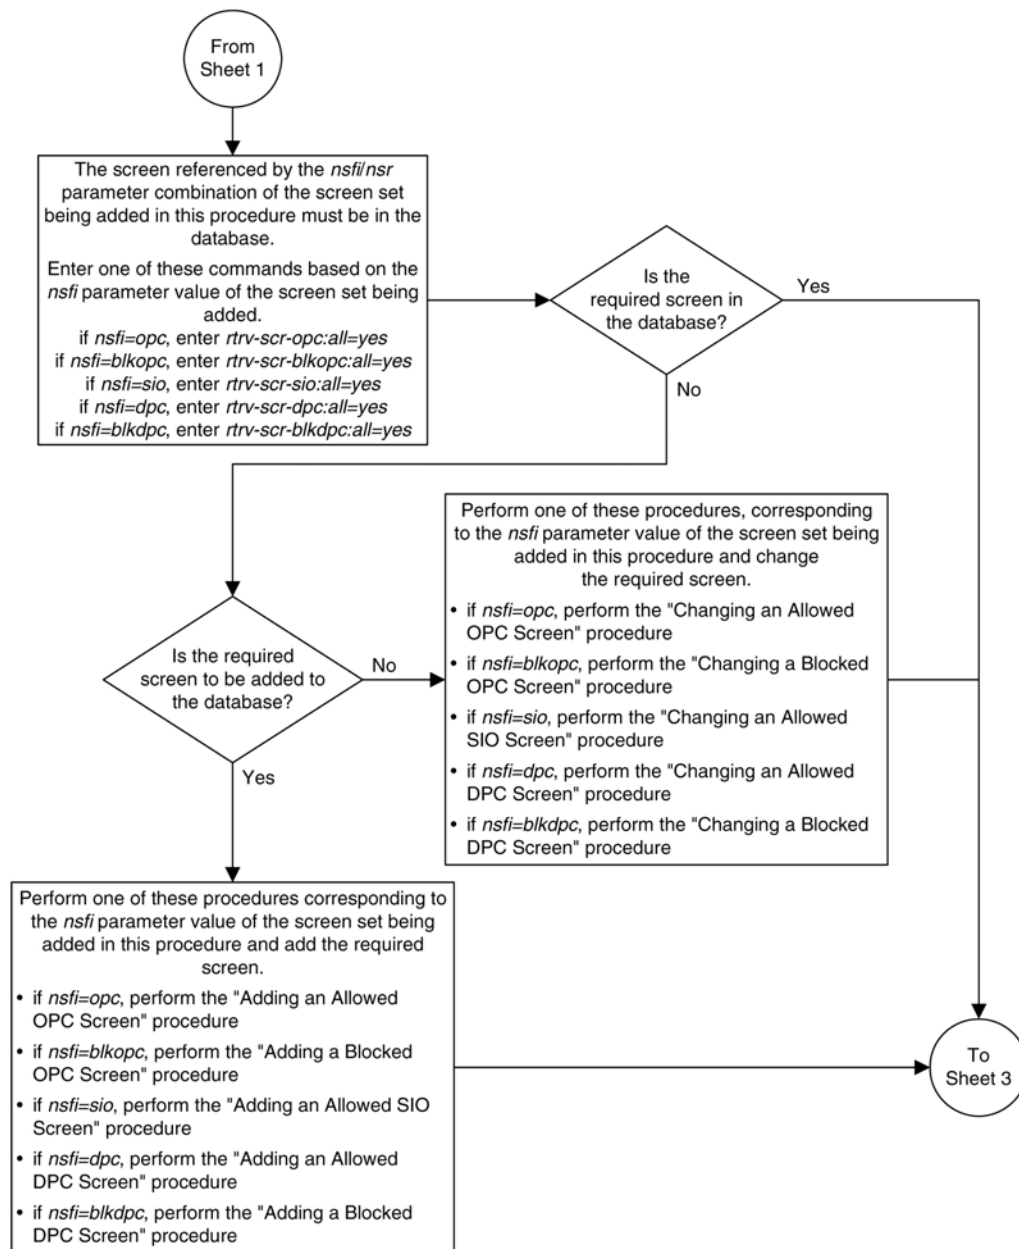

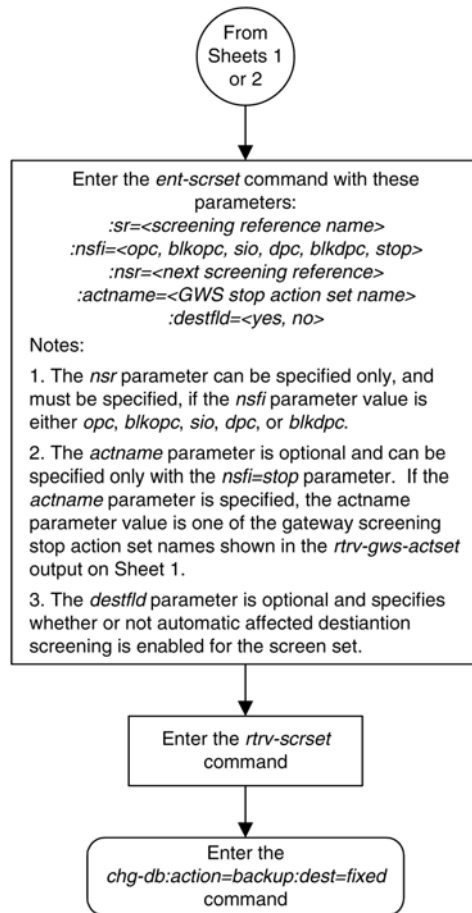

Removing a Screen Set

This procedure is used to remove a screen set from the database using the `dlt-scrset` command. The parameters used by the `dlt-scrset` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure removes the screen set `gws1` from the database.

1. Display all screen sets in the database using the `rtrv-scrset` command.

The following is an example of the possible output.

```

rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
ENTIRE GWS DATABASE IS 1% FULL
CDPA + AFTPC TABLES ARE 1% FULL
THERE ARE 242 SCREEN SETS AVAILABLE

THE FOLLOWING ARE OVER 80% FULL:
SCRN  NSFI      NSR/ACT  FULL  RULES  TABLES  DESTFLD
SCRN  NSFI      NSR/ACT  FULL  RULES  TABLES  DESTFLD
  
```

fld1	OPC	fld2	1%	5	4	NO
gws1	OPC	gws4	1%	9	7	NO
gws2	BLKOPC	gws5	1%	5	4	NO
isp1	OPC	isp1	1%	6	4	NO
ls01	SIO	ls02	1%	3	3	YES
ss01	OPC	opc1	51%	2075	22	YES
ss02	OPC	opc2	2%	75	22	YES
ss03	OPC	opc3	2%	75	22	YES
ss04	OPC	opc1	51%	2075	22	NO
ss07	OPC	opc1	51%	2075	22	YES
ss09	OPC	opc1	51%	2075	22	NO
ss28	OPC	opc1	51%	2075	22	YES
tup1	OPC	tup1	1%	8	5	NO
wrd1	DPC	iec	1%	6	5	YES

- The screen set to be removed cannot be referenced by a linkset.

To verify this, enter the `rtrv-ls` command. If the output shows a reference to the screen set to be removed, perform the Changing an SS7 Linkset procedure in the *Database Administration Manual – SS7* or the “Changing an X.25 Linkset” procedure in the *Database Administration Manual – Features* and change the `scrn` parameter to reference another screen set, or to none to remove the reference to the screen set.

- Remove the screen set from the database using the `dlt-scrset` command.

For this example, enter this command.

```
dlt-scrset:scrn=gws1
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
DLT-SCRSET: SCREEN SET AFFECTED - GWS1 0% FULL
DLT-SCRSET: MASP A - COMPLTD
```

- Verify the changes using the `rtrv-scrset` command with the screen set name used in step 3.

For this example, enter this command.

```
rtrv-scrset:scrn=gws1
```

The following is an example of the possible output.

```
E2573 Cmd Rej: SR or NSR does not reference an existing SR
```


This message shows that the specified screen set name is not in the database and the action of the `dlt-scrset` command in step 3 was successful.

- Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 70: Removing a Screen Set

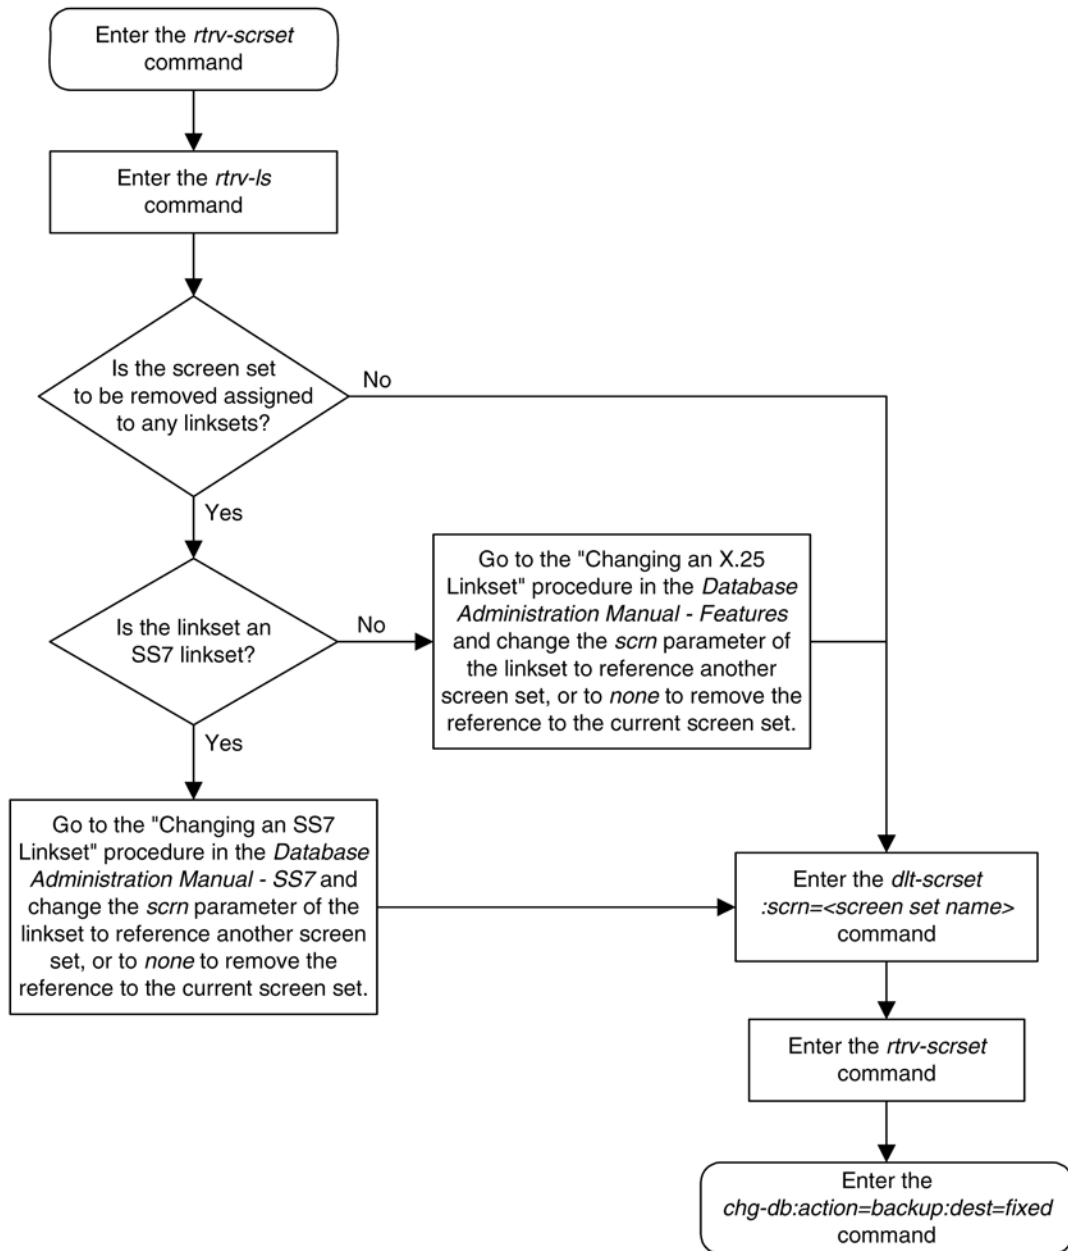

Changing a Screen Set

This procedure is used to change the attributes of a screen set in the database using the `chg-scrset` command. The parameters used by the `chg-scrset` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure is used to change screen set `ls01` to screen set `ls05` with the `nsfi=blkopc` and `nsr=ls08`.

If the screen set name is being changed, the new screen set name cannot already exist in the database.

The screen set can reference one of the following screens.

- Allowed OPC
- Blocked OPC
- Allowed SIO
- Allowed DPC
- Blocked DPC

Verifying the Gateway Screening Configuration

Enter the following commands to verify that these screens are in the database.

- `rtrv-scr-opc:all=yes`
- `rtrv-scr-blkopc:all=yes`
- `rtrv-scr-sio:all=yes`
- `rtrv-scr-dpc:all=yes`
- `rtrv-scr-blkdpc:all=yes`

Gateway Screening Configuration Procedures

If the desired screen is not in the database, perform one of the following procedures to add the desired screen to the database or change an existing screen in the database.

- [Adding an Allowed OPC Screen](#) on page 370
- [Adding a Blocked OPC Screen](#) on page 336
- [Adding an Allowed SIO Screen](#) on page 311
- [Adding an Allowed DPC Screen](#) on page 276
- [Adding a Blocked DPC Screen](#) on page 242
- [Changing an Allowed OPC Screen](#) on page 386
- [Changing a Blocked OPC Screen](#) on page 353
- [Changing an Allowed SIO Screen](#) on page 323
- [Changing an Allowed DPC Screen](#) on page 292
- [Changing a Blocked DPC Screen](#) on page 258

1. Display all screen sets in the database using the `rtrv-scrset` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
ENTIRE GWS DATABASE IS 1% FULL
CDPA + AFTPC TABLES ARE 1% FULL
THERE ARE 242 SCREEN SETS AVAILABLE

THE FOLLOWING ARE OVER 80% FULL:
SCRN  NSFI      NSR/ACT  FULL  RULES  TABLES  DESTFLD
SCRN  NSFI      NSR/ACT  FULL  RULES  TABLES  DESTFLD
fld1  OPC       fld2     1%    5      4        NO
gws1  OPC       gws4     1%    9      7        NO
gws2  BLKOPC   gws5     1%    5      4        NO
isp1  OPC       isp1     1%    6      4        NO
ls01  SIO      ls02     1%    3      3        YES
ss01  OPC      opc1     51%   2075   22       YES
ss02  OPC      opc2     2%    75     22       YES
```


ss03	OPC	opc3	2%	75	22	YES
ss04	OPC	opc1	51%	2075	22	NO
ss07	OPC	opc1	51%	2075	22	YES
ss09	OPC	opc1	51%	2075	22	NO
ss28	OPC	opc1	51%	2075	22	YES
tup1	OPC	tup1	1%	8	5	NO
wrd1	DPC	iec	1%	6	5	YES

- The screen set being changed cannot be referenced by a linkset.

To verify this, enter the `rtrv-ls` command. If the output shows a reference to the screen set to be removed, perform the Changing an SS7 Linkset procedure in the *Database Administration Manual – SS7* or the “Changing an X.25 Linkset” procedure in the *Database Administration Manual – Features* and change the `scrn` parameter to reference another screen set, or to none to remove the reference to the screen set.

Note: If a new gateway screening stop action set will not be assigned to the screen set being changed, skip step 3 and go to step 4.

- Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```

rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
ACT  ACT      ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME      1    2    3    4    5    6    7    8    9    10
---  ---
1    copy      copy
2    rdct      rdct
3    cr        copy rdct
4    cncf      cncf
5    cpcncf    copy cncf
6    cncfrd    cncf rdct
7    cpcfcd    copy cncf rdct

GWS action set table is (7 of 16) 44% full

```

If the required gateway screening stop action set is not in the database, go to the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure and configure the required gateway screening stop action set.

Note: If the NSFI of the screen set being changed in this procedure will be STOP, or if the NSFI of the screen set is not being changed, skip step 4 and go to step 5.

- Enter the commands in the [Verifying the Gateway Screening Configuration](#) on page 410 section to verify that the screen that will be specified by the NSFI/NSR parameter combination in step 5 is in the database.

If the desired screen is not in the database, perform one of the procedures shown in the [Gateway Screening Configuration Procedures](#) on page 410 section to add the desired screen to the database or change an existing screen in the database.

- Change the attributes of a screen set using the `chg-scrset` command.

If a gateway screening stop action is to be assigned to the screen set being changed, enter the `chg-scrset` command with the `nsfi=stop` parameter and the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 2.

For this example, enter this command.

```
chg-scrset:scrn=ls01:nscrn=ls05:nsfi=blkopc:nsr=ls08
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
CHG-SCRSET: SCREEN SET AFFECTED - LS01 1% FULL
CHG-SCRSET: MASP A - COMPLTD
```

- Verify the changes using the `rtrv-scrset` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0
ENTIRE GWS DATABASE IS 1% FULL
CDPA + AFTPC TABLES ARE 1% FULL
THERE ARE 242 SCREEN SETS AVAILABLE


THE FOLLOWING ARE OVER 80% FULL:
SCRN  NSFI      NSR/ACT  FULL  RULES  TABLES  DESTFLD
-----
fld1  OPC        fld2     1%    5      4        NO
gws1  OPC        gws4     1%    9      7        NO
gws2  BLKOPC    gws5     1%    5      4        NO
isp1  OPC        isp1     1%    6      4        NO
ls05  BLKOPC    ls08     3%    45     14       YES
ss01  OPC        opc1     51%   2075   22       YES
ss02  OPC        opc2     2%    75     22       YES
ss03  OPC        opc3     2%    75     22       YES
ss04  OPC        opc1     51%   2075   22       NO
ss07  OPC        opc1     51%   2075   22       YES
ss09  OPC        opc1     51%   2075   22       NO
ss28  OPC        opc1     51%   2075   22       YES
tup1  OPC        tup1     1%    8      5        NO
wrld1 DPC        iec      1%    6      5        YES
```


- Backup the new changes using the `chg-db:action=backup:dest=fixed` command.


The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 71: Changing a Screen Set

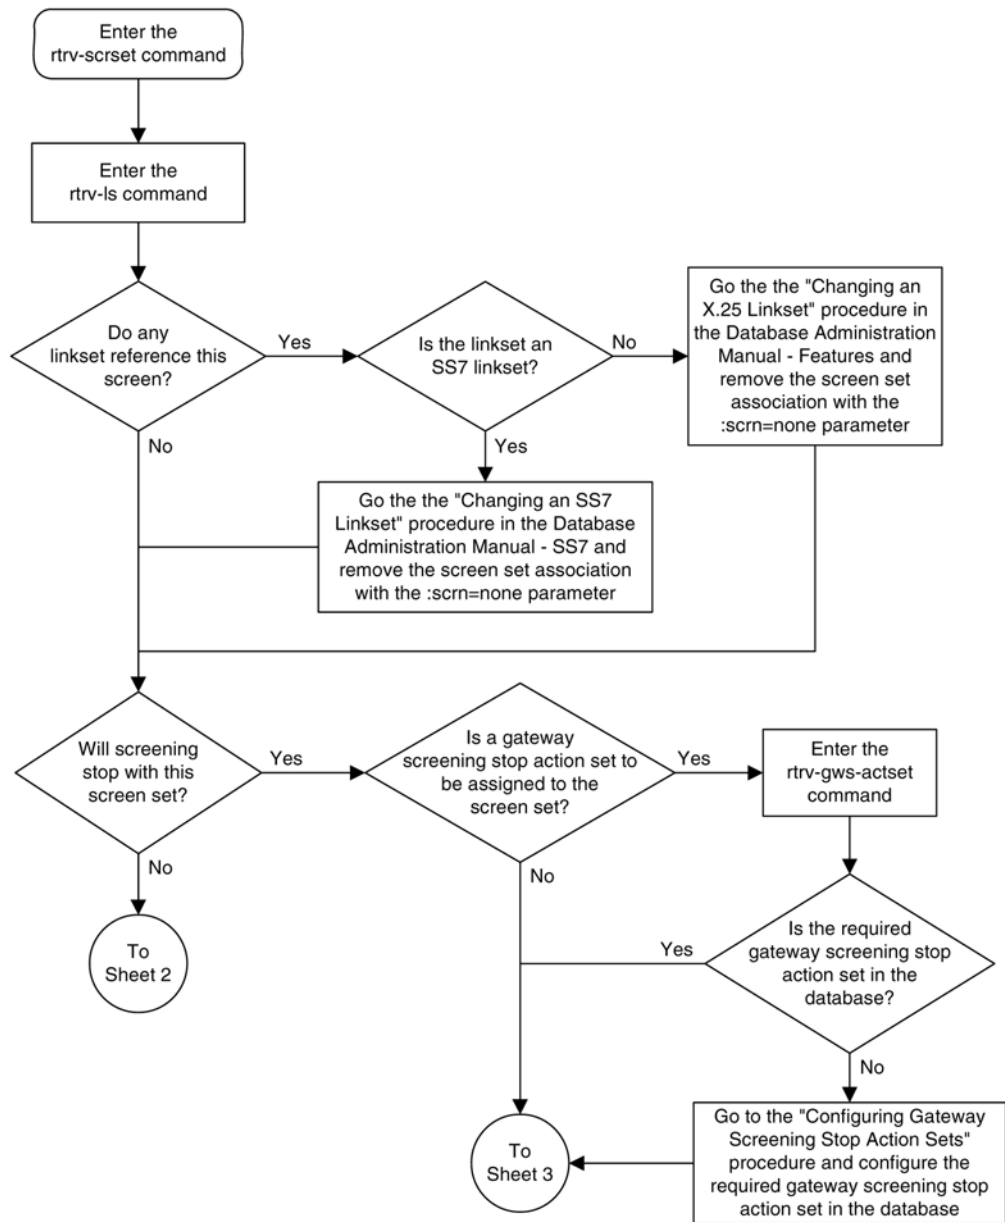

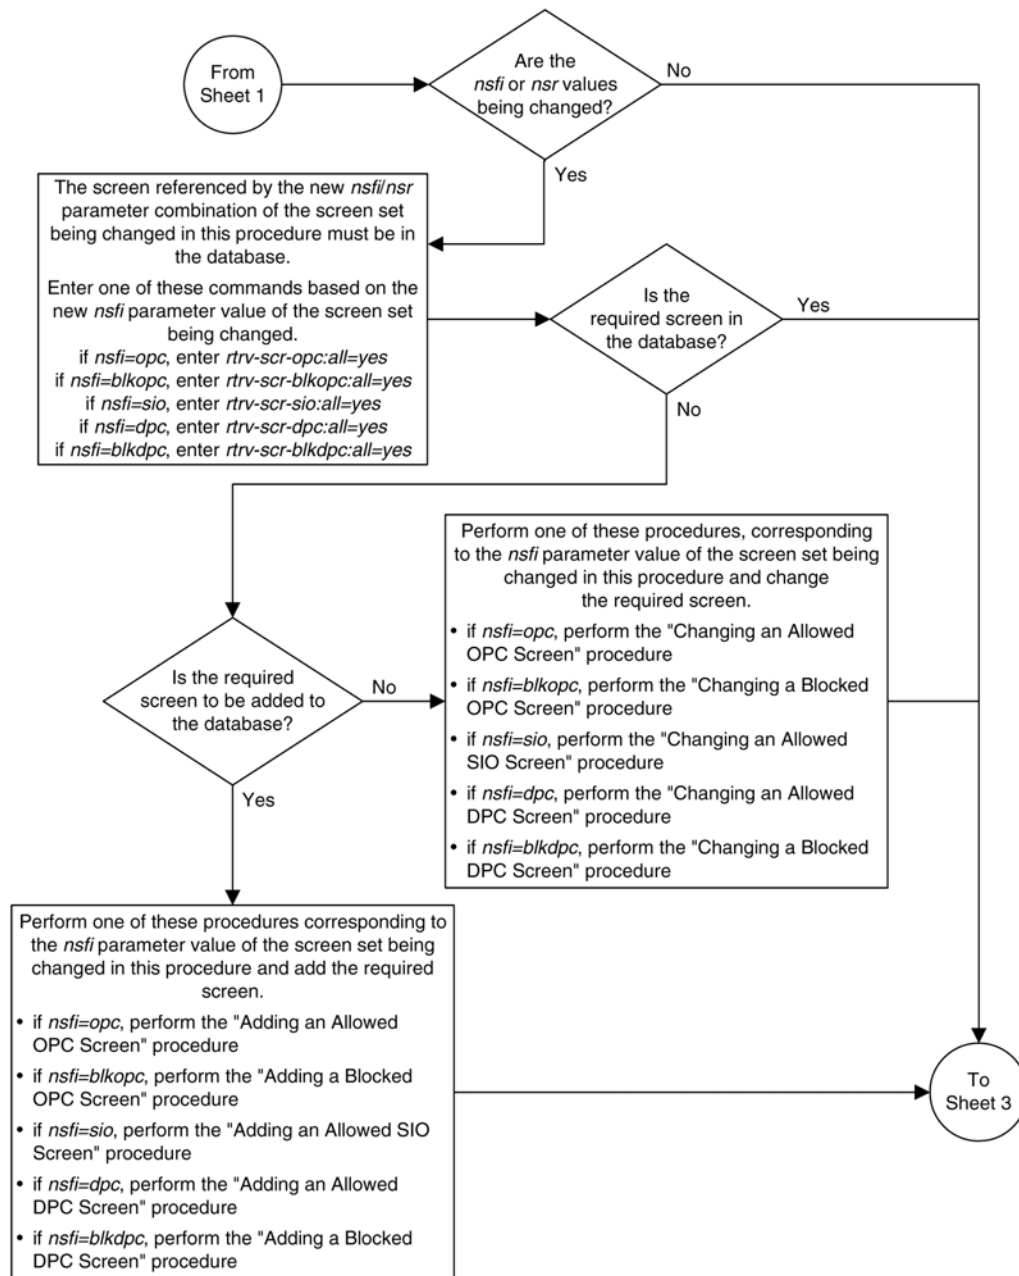

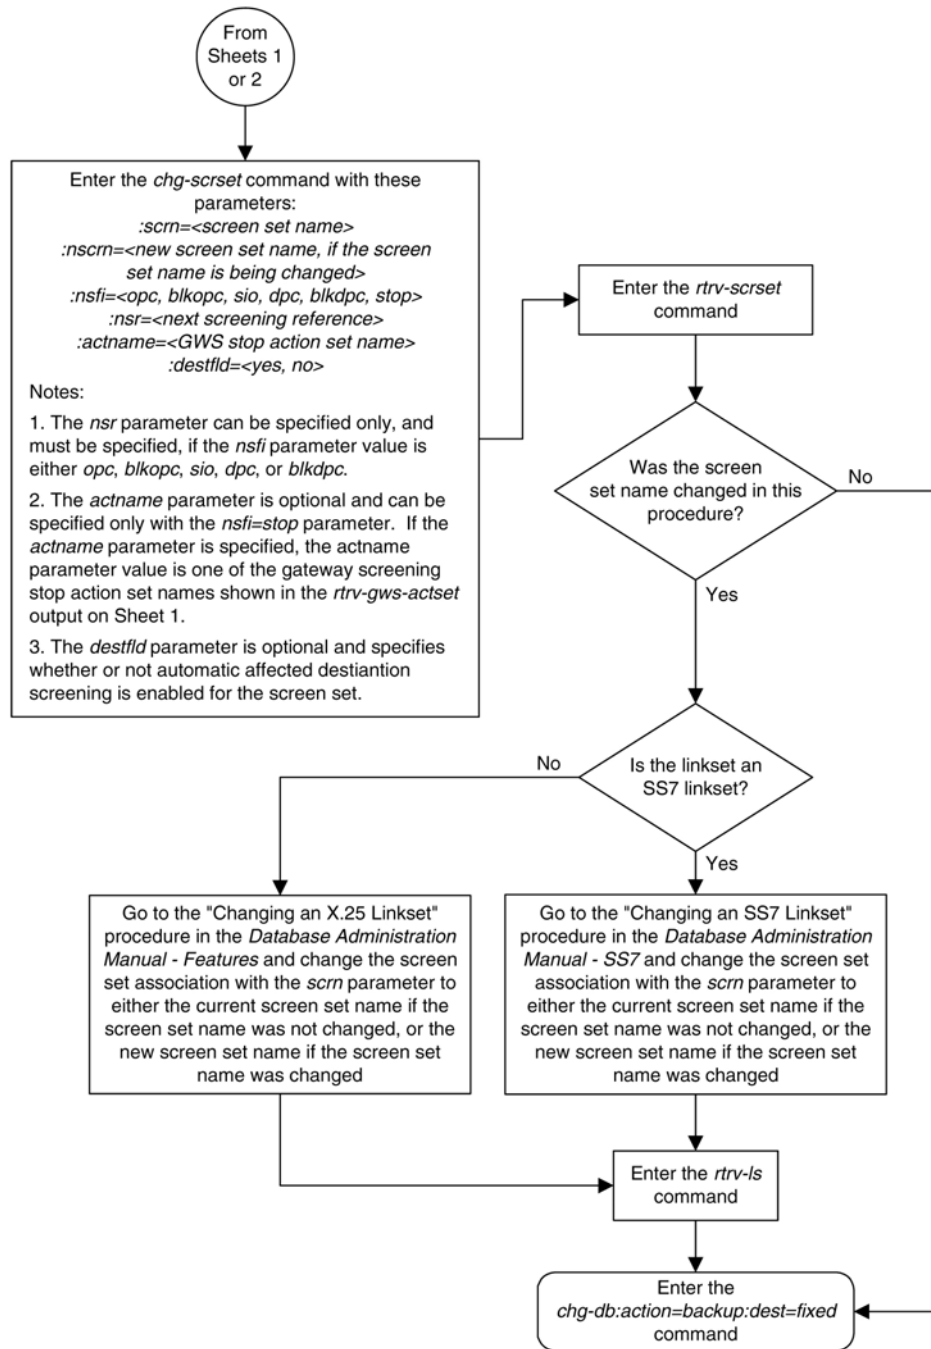

Chapter 14

Calling Name Conversion Facility (CNCF) Configuration

Topics:

- [Introduction Page 418](#)
- [Configuring the EAGLE 5 ISS for the CNCF Feature Page 420](#)

Chapter 14, Calling Name Conversion Facility (CNCF) Configuration, contains a description of the Calling Name Conversion Facility feature the procedure necessary to configure this feature.

Introduction

This feature provides a conversion of ISUP IAM messages using two versions of calling name identification presentation (CNIP) for calling name information delivery. One version of the CNIP uses the non-standard proprietary ISUP party information (PIP) parameter. The other version uses the ANSI standard ISUP generic name (GN) parameter. The conversion will either replace the PIP parameter with the GN parameter or the GN parameter with the PIP parameter in the ISUP IAM message.

The gateway screening feature is used to select the ISUP messages that are converted. The incoming messages are selected based on the OPC and DPC in the routing label of the message, and the message type in the service information octet. The message type is defined by the value of the service indicator (SI) field of the SIO. ISUP messages contain the value 5 in the service indicator field of the SIO. Screening rules for Allowed OPC, Allowed DPC, and the Allowed SIO entities must be configured in the database for this feature.

This feature is an optional feature and must be turned on with the `chg-feat` command and the `cncf=on` parameter. The `rtvr-feat` command can be used to verify if this feature is on or not. This feature applies to only ANSI networks.

[Figure 72: PIP/GN Parameter Conversion](#) on page 418 shows an example network which contains these two separate ISUP versions. Based on this example, [Table 80: ISUP IAM Message Conversion Examples](#) on page 419 shows when the ISUP IAM message conversion by the CNCF feature occurs.

Figure 72: PIP/GN Parameter Conversion

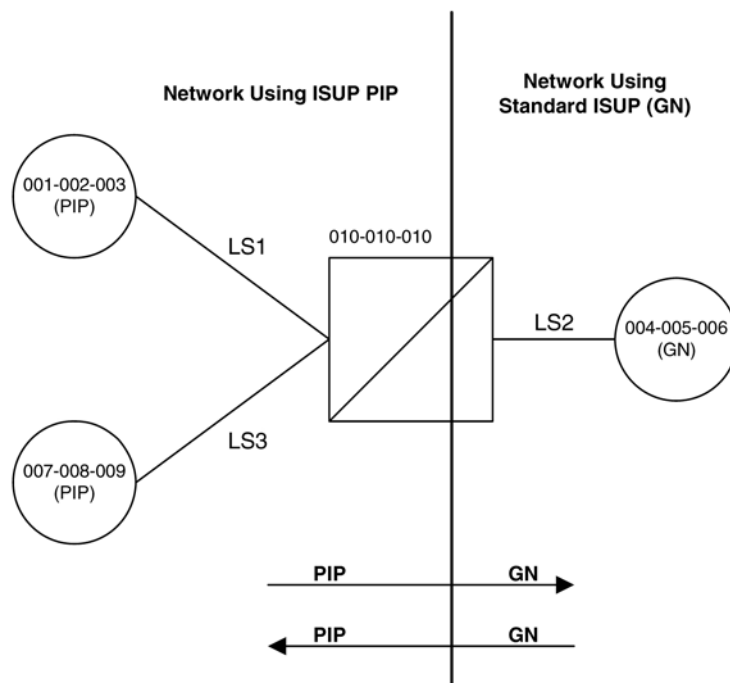


Table 80: ISUP IAM Message Conversion Examples

Origination Point Code	Destination Point Code	ISUP IAM Message Conversion
001-002-003	004-005-006	Yes
001-002-003	007-008-009	No
004-005-006	001-002-003	Yes
004-005-006	007-008-009	Yes
007-008-009	001-002-003	No
007-008-009	004-005-006	Yes

Great care must be taken when configuring the gateway screening rules for this feature. The CNCF feature has no way to validate the gateway screening rules to detect errors in converting messages between compatible networks. For example, using the example network in [Figure 72: PIP/GN Parameter Conversion](#) on page 418, the ISUP IAM message traffic from node 001-002-003 to node 007-008-009 does not need to be converted because they are using the same calling name delivery parameter, PIP. If the gateway screening rules are not carefully configured, these messages could be converted when they do not need to be.

No measurements are collected showing the number of MSUs converted by this feature.

If both the COPY and CNCF gateway screening stop actions are specified as the stop actions for the gateway screening process, the MSU is converted by the CNCF feature, then copied for the STPLAN feature.

If both the RDCT and CNCF gateway screening stop actions are specified as the stop actions for the gateway screening process, the MSU is converted by the CNCF feature, then redirected for the DTA feature.

If there are multiple PIP parameters or GN parameters with calling name information within a single ISUP IAM, only the first occurrence of the parameter in the ISUP IAM message is converted.

Messages on X.25 linksets cannot be converted with the CNCF feature.

Only GN IAM messages containing calling name information (Type of Name = Calling Name, Presentation = Allowed, Parameter Length >1) are converted to PIP IAM messages.

Only PIP IAM messages containing Calling Name Information (Sub-Parameter Code = Name Information, Name Element Indicator = Calling Party) are converted to GN IAM messages.

If the received IAM message contains both a GN and a PIP parameter with calling name information, the GN parameter is retransmitted and the PIP parameter is deleted.

Any MSU that is not converted is simply retransmitted. These MSUs include non-ISUP MSUs, non-IAM MSUs, and any IAM MSU received that doesn't contain either a GN or PIP parameter.

If the PIP parameter contains other information in addition to the calling party name information, only a GN parameter containing calling party name information is generated.

The linkset being screened for this feature should not contain C links (1st=c parameter of the ent-1s and chg-1s commands). This would result in the double conversion of the ISUP IAM messages.

Configuring the EAGLE 5 ISS for the CNCF Feature

To configure the EAGLE 5 ISS for the CNCF feature, gateway screening rules for Allowed OPC, Allowed DPC, and the Allowed SIO entities must be configured in the database for this feature. The last entity in the screening process (`nsfi=stop`) must have a gateway screening stop action set containing the CNCF gateway screening stop action.

The allowed OPC screening rules must contain the OPCs that the ISUP IAM messages are being sent from.

The allowed DPC screening rules must contain the DPCs that the ISUP IAM messages are being sent to.

The allowed SIO screening rules must contain the ISUP message type, defined by the `si=5` parameter.

The CNCF feature must be turned on. Before the CNCF feature can be turned on, the gateway screening feature must be on. This can be verified with the `rtrv-feat` command.

The examples in this procedure are based on [Figure 73: CNCF Gateway Screening Configuration - Example 1](#) on page 420, [Figure 74: CNCF Gateway Screening Configuration - Example 2](#) on page 421, [Figure 75: CNCF Gateway Screening Configuration - Example 3](#) on page 422, [Figure 76: CNCF Gateway Screening Configuration - Example 4](#) on page 423, [Table 80: ISUP IAM Message Conversion Examples](#) on page 419, [Table 81: Example Gateway Screening Allowed DPC Configuration Table for the CNCF Feature](#) on page 426, [Table 82: Example Gateway Screening Allowed SIO Configuration Table for the CNCF Feature](#) on page 427, [Table 83: Example Gateway Screening Allowed OPC Configuration Table for the CNCF Feature](#) on page 428, [Table 84: Example Gateway Screening Screen Set Configuration Table for the CNCF Feature](#) on page 429, and [Table 85: Linkset Configuration Table for the CNCF Feature](#) on page 430.

Figure 73: CNCF Gateway Screening Configuration - Example 1

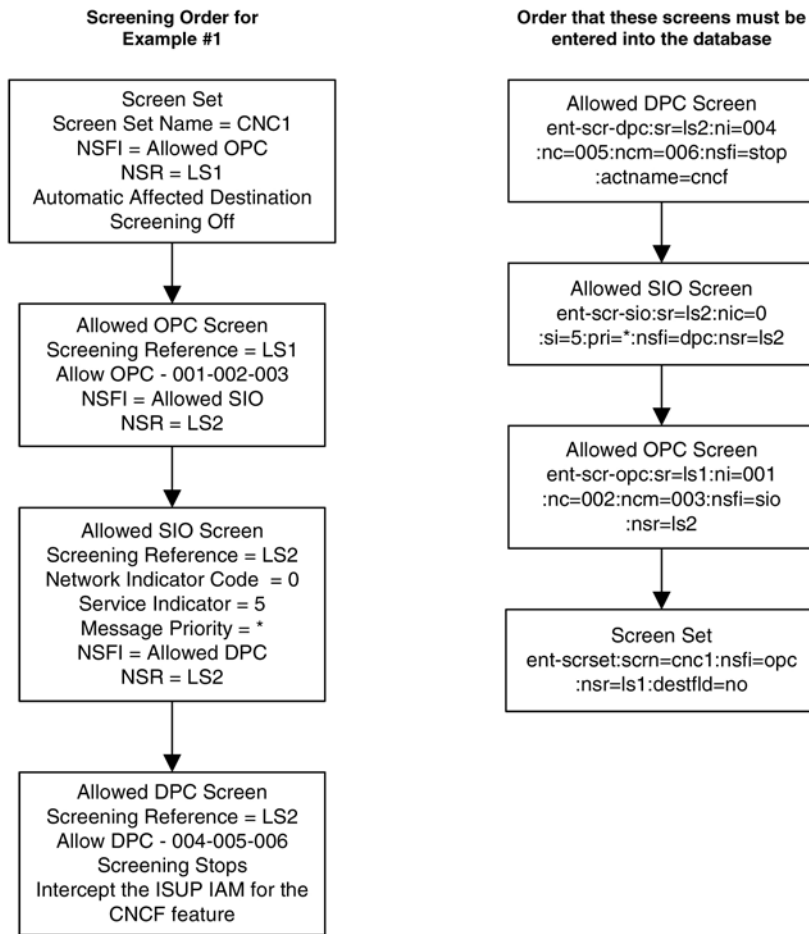


Figure 74: CNCF Gateway Screening Configuration - Example 2

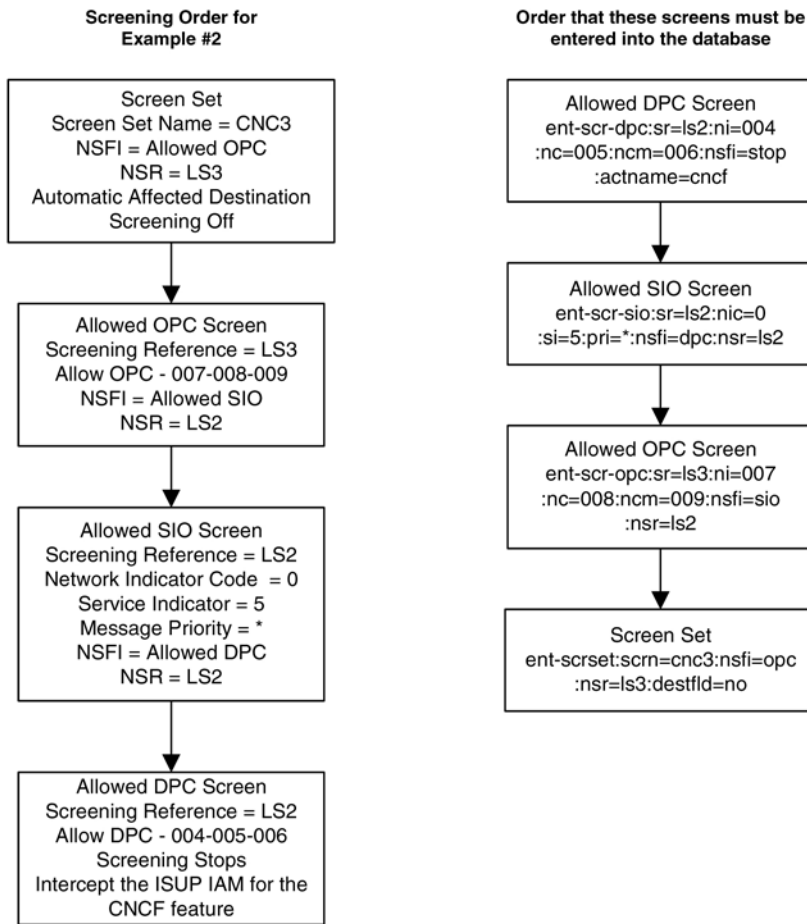


Figure 75: CNCF Gateway Screening Configuration - Example 3


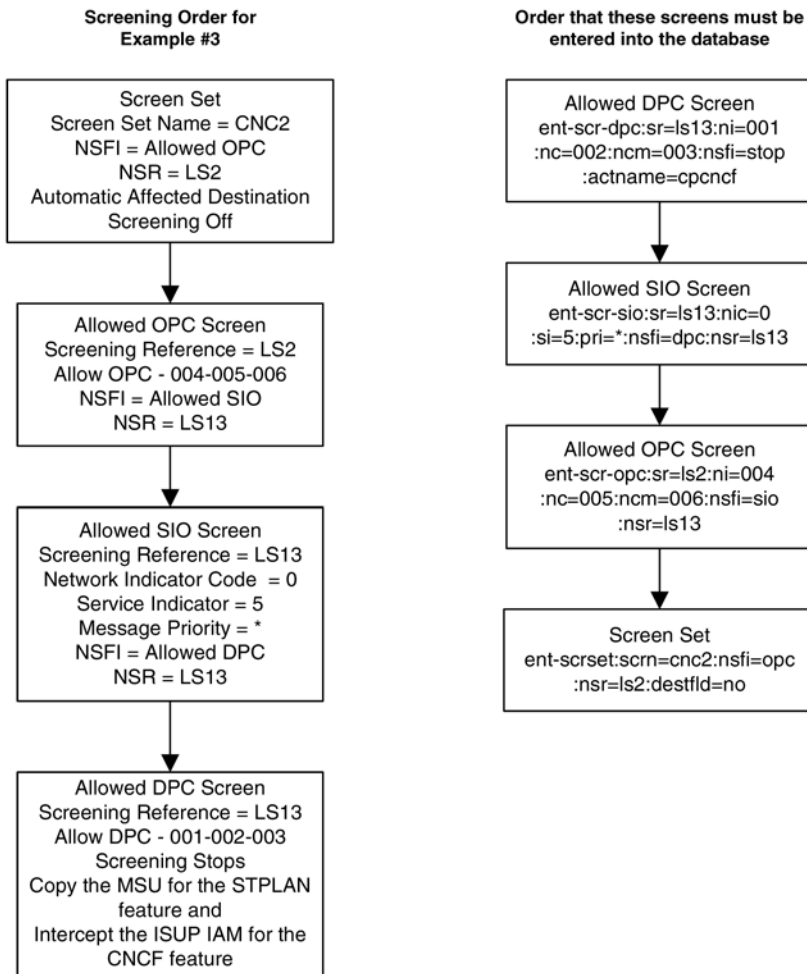


Figure 76: CNCF Gateway Screening Configuration - Example 4

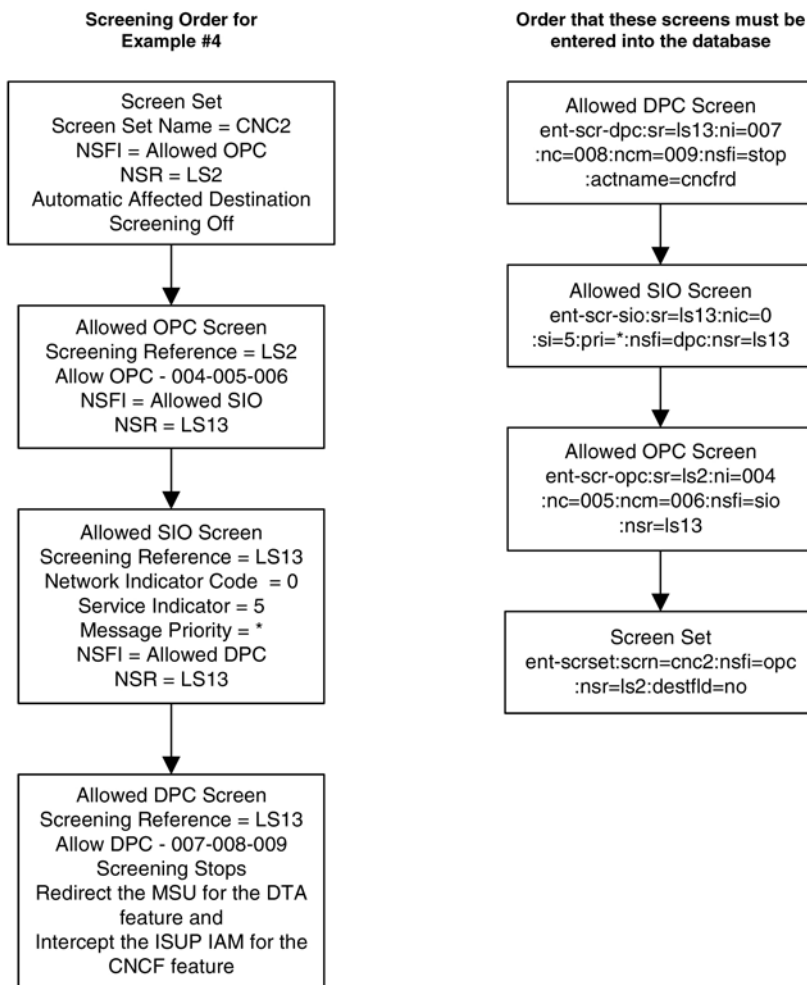

Canceling the RTRV-LS Command

Because the `rtrv-ls` command used in this procedure can output information for a long period of time, the `rtrv-ls` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-ls` command can be canceled.

- Press the F9 function key on the keyboard at the terminal where the `rtrv-ls` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-ls` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-ls` command was entered, from another terminal other than the terminal where the `rtrv-ls` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Verify that the gateway screening and the calling name conversion facility features are on, by entering the `rtrv-feat` command.

If the gateway screening feature is on, the `GWS` field should be set to `on`. If the calling name conversion facility feature is on, the `CNCF` field should be set to `on`. For this example, the gateway screening and the calling name conversion facility features are off.

Note: The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

If both features are on, go to step 4. If the gateway screening feature is on, but the calling name conversion facility feature is off, go to step 3. If the gateway screening feature is off, go to step 2.

2. If the gateway screening feature is not on, shown by the `GWS = off` entry in the `rtrv-feat` command output in step 1, turn the gateway screening feature on by entering this command.

```
chg-feat:gws=on
```

Note: Once the gateway screening feature is turned on with the `chg-feat` command, it cannot be turned off.

When the `chg-feat` has successfully completed, this message should appear.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
CHG-FEAT: MASP A - COMPLTD
```

3. If the calling name conversion facility feature is not on, shown by the `CNCF = off` entry in the `rtrv-feat` command output in step 1, turn the calling name conversion facility feature on by entering this command.

```
chg-feat:cncf=on
```

Note: Once the calling name conversion facility feature is turned on with the `chg-feat` command, it cannot be turned off.

When the `chg-feat` has successfully completed, this message should appear.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
CHG-FEAT: MASP A - COMPLTD
```

4. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0
ACT  ACT      ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME      1    2    3    4    5    6    7    8    9    10
---  ---
1    copy      copy
2    rdct      rdct
3    cr        copy rdct
4    cncf      cncf
5    cpcncf    copy cncf
6    cncfrd    cncf rdct
7    cpcfrd    copy cncf rdct
```

```
GWS action set table is (7 of 16) 44% full
```

If the `cncf` gateway screening stop action is not shown in the `rtrv-gws-actset` command output, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to create a new gateway screening stop action set containing the `cncf` gateway screening stop action, or change an existing gateway screening stop action set to contain the `cncf` gateway screening stop action.

5. Display all allowed DPC screens in the database using the `rtrv-scr-dpc` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED DPC
SR  REF  RULES
IEC  YES   2
WRD2 YES   1
WRD4 YES   9
```

If the necessary screening reference name is shown in the `rtrv-scr-dpc` command output, make sure the screening data you wish to enter is not already in the database by entering the `rtrv-scr-dpc` command with the screening reference name. For example, enter the `rtrv-scr-dpc:sr=iec` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED DPC
SR  NI      NC      NCM      NSF1     NSR/ACT
IEC  240      001     010     STOP     -----
IEC  241      010     *       CGPA     cg04
SR   NPC
IEC  00235
IEC  00240
SR   ZONE   AREA   ID      NSF1     NSR/ACT
IEC  1       003    4       BLKDPC  blk1
IEC  1       003    5       STOP     -----
```

6. If the required screen is not in the database, perform the [Adding an Allowed DPC Screen](#) on page 276 procedure to add the required allowed DPC screen.

For this example, enter the screening information in [Table 81: Example Gateway Screening Allowed DPC Configuration Table for the CNCF Feature](#) on page 426.

Table 81: Example Gateway Screening Allowed DPC Configuration Table for the CNCF Feature

Screening Reference	NI	NC	NCM	NSFI	ACTNAME*
ls2	004	005	006	Stop	CNCF
ls13	001	002	003	Stop	CPCNCF
ls13	007	008	009	Stop	CNCFRD

Screening Reference	NI	NC	NCM	NSFI	ACTNAME*
* The value of the actname parameter is shown in the <code>rtrv-gws-actset</code> command output example shown in step 4.					

If you wish to change an existing allowed DPC screen, instead of adding a new allowed DPC screen, perform the [Changing an Allowed DPC Screen](#) on page 292 procedure to change an existing allowed DPC screen. For this example, change the screens with the screening information in [Table 81: Example Gateway Screening Allowed DPC Configuration Table for the CNCF Feature](#) on page 426.

7. Display all allowed SIO screens in the database using the `rtrv-scr-sio` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:31:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED SIO
SR   REF  RULES
IEC  YES   2
WRD2 YES   1
WRD4 YES   9
```

If the necessary screening reference name is shown in the `rtrv-scr-sio` command output, make sure the screening data you wish to enter is not already in the database by entering the `rtrv-scr-sio` command with the screening reference name. For example, enter the `rtrv-scr-sio:sr=iec` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:32:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED SIO
SR  NIC  PRI  SI  H0  H1  NSFI  NSR/ACT
IEC  2    0&&3  0   0   0   BLKDPC  WDB2
IEC  2    0&&2  0   1   1   DPC     WDB3
IEC  2    0&&1  0   2   2   STOP    -----
IEC  2    0&&3  4   --  --   STOP    -----
IEC  2    0&&2  1   *   *   DPC     WDB3
```

8. If the required screen is not in the database, perform the [Adding an Allowed SIO Screen](#) on page 311 procedure to add the required allowed SIO screen.

For this example, enter the screening information in [Table 82: Example Gateway Screening Allowed SIO Configuration Table for the CNCF Feature](#) on page 427.

Table 82: Example Gateway Screening Allowed SIO Configuration Table for the CNCF Feature

Screening Reference	NIC	SI	H0	H1	PRI	NSFI	NSR
ls2	0	5	--	--	*	dpc	ls2
ls13	0	5	--	--	*	dpc	ls13

If you wish to change an existing allowed SIO screen, instead of adding a new allowed SIO screen, perform the [Changing an Allowed SIO Screen](#) on page 323 procedure to change an existing allowed SIO screen. For this example, change the screens with the screening information in [Table 82: Example Gateway Screening Allowed SIO Configuration Table for the CNCF Feature](#) on page 427.

9. Display all allowed OPC screens in the database using the `rtrv-scr-opc` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:33:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED OPC
SR      REF  RULES
IEC     YES   2
WRD2    YES   1
WRD4    YES   9
```

If the necessary screening reference name is shown in the `rtrv-scr-opc` command output, make sure the screening data you wish to enter is not already in the database by entering the `rtrv-scr-opc` command with the screening reference name. For example, enter the `rtrv-scr-opc:sr=iec` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:34:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED OPC
SR      NI      NC      NCM      NSFI      NSR/ACT
IEC     240     001     010     STOP     -----
IEC     241     010     *       CGPA     cg04
SR      NPC
IEC     00235
IEC     00240
SR      ZONE   AREA   ID      NSFI     NSR/ACT
IEC     1       003   4       BLKOPC  blk1
IEC     1       003   5       STOP     -----
```

10. If the required screen is not in the database, perform the [Adding an Allowed OPC Screen](#) on page 370 procedure to add the required allowed OPC screen.

For this example, enter the screening information in [Table 83: Example Gateway Screening Allowed OPC Configuration Table for the CNCF Feature](#) on page 428.

Table 83: Example Gateway Screening Allowed OPC Configuration Table for the CNCF Feature

Screening Reference	NI	NC	NCM	NSFI	NSR
ls1	001	002	003	sio	ls2
ls2	004	005	006	sio	ls13
ls3	007	008	009	sio	ls2

If you wish to change an existing allowed OPC screen, instead of adding a new allowed OPC screen, perform the [Changing an Allowed OPC Screen](#) on page 386 procedure to change an existing allowed OPC screen. For this example, change the screens with the screening information in [Table 83: Example Gateway Screening Allowed OPC Configuration Table for the CNCF Feature](#) on page 428.

11. Display all the screen sets in the database using the `rtrv-scrset` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:35:30 GMT EAGLE5 36.0.0
ENTIRE GWS DATABASE IS 1% FULL
CDPA + AFTPC TABLES ARE 1% FULL
THERE ARE 248 SCREEN SETS AVAILABLE

THE FOLLOWING ARE OVER 80% FULL:
SCRN  NSFI      NSR/ACT  FULL  RULES  TABLES  DESTFLD
-----
SCRN  NSFI      NSR/ACT  FULL  RULES  TABLES  DESTFLD
ss01  OPC       opc1     51%   2075   22       YES
ss02  OPC       opc2     2%    75     22       YES
ss03  OPC       opc3     2%    75     22       YES
ss04  OPC       opc1     51%   2075   22       NO
ss07  OPC       opc1     51%   2075   22       YES
ss09  OPC       opc1     51%   2075   22       NO
ss28  OPC       opc1     51%   2075   22       YES
```

12. If the required screen set is not in the database, perform the [Adding a Screen Set](#) on page 400 procedure to add the required screen set.

For this example, enter the screening information in [Table 84: Example Gateway Screening Screen Set Configuration Table for the CNCF Feature](#) on page 429.

Table 84: Example Gateway Screening Screen Set Configuration Table for the CNCF Feature

Screen Set Name	Next Screening Function Identifier	Next Screening Reference	DESTFLD
cnc1	opc	ls1	No
cnc2	opc	ls2	No
cnc3	opc	ls3	No

If you wish to change an existing screen set, instead of adding a new screen set, perform the [Changing a Screen Set](#) on page 409 procedure to change an existing screen set. For this example, change the screen sets with the screening information in [Table 84: Example Gateway Screening Screen Set Configuration Table for the CNCF Feature](#) on page 429.

13. Display the current linkset configuration using the `rtrv-ls` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:36:30 GMT EAGLE5 36.0.0
L3T SLT GWS GWS GWS
```

```

LSN          APCA   (SS7)  SCRNL3T SLT          GWS GWS GWS
lsa1         240-020-000 scr1  1  1  yes A  1  off off off ---  off
lsa2         240-030-000 scr2  1  2  no  C  3  on  on  on  yes  off
lsa3         240-040-000 scr3  1  3  yes C  5  off off off  yes  off

LSN          APCA   (X25)  SCRNL3T SLT          GWS GWS GWS
ls6          244-010-004 scr4  1  4  no  A  6  off off off ---  off
ls7          244-012-005 scr5  1  5  no  C  3  on  on  on  ---  off
ls8          244-012-006 scr6  1  6  no  C  8  off off off ---  off

LSN          APCI   (SS7)  SCRNL3T SLT          GWS GWS GWS
lsi1         1-111-1   scr1  1  1  yes A  1  off off off ---  ---
lsi2         1-111-2   scr2  1  2  no  C  3  on  on  on  ---  ---
lsi3         1-111-3   scr3  1  3  yes C  5  off off off ---  ---

LSN          APCN   (SS7)  SCRNL3T SLT          GWS GWS GWS
lsn1         11111   scr1  1  1  yes A  1  off off off ---  off
lsn2         11112   scr2  1  2  no  C  3  on  on  on  ---  off
lsn3         11113   scr3  1  3  yes C  5  off off off ---  off

Link set table is ( 12 of 1024) 1% full

```

14. If the required linkset is not in the database, perform the Adding an SS7 Linkset in the Database Administration Manual – SS7 to add the required linkset.

For this example, enter the linkset information in [Table 85: Linkset Configuration Table for the CNCF Feature](#) on page 430.

Table 85: Linkset Configuration Table for the CNCF Feature

Linkset Name	Linkset APC	# LINKS	LST	GWSA	GWSM	SCRN
ls1	001-002-003	2	B	on	off	cnc1
ls2	004-005-006	2	B	on	off	cnc2
ls3	007-008-009	2	B	on	off	cnc3

If you wish to change an existing linkset, instead of adding a new linkset, perform the Changing an SS7 Linkset procedure in the Database Administration Manual – SS7 to change an existing linkset. For this example, change the linksets with the information in [Table 85: Linkset Configuration Table for the CNCF Feature](#) on page 430.

15. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```


BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.


```


BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.

Figure 77: Calling Name Conversion Facility Configuration

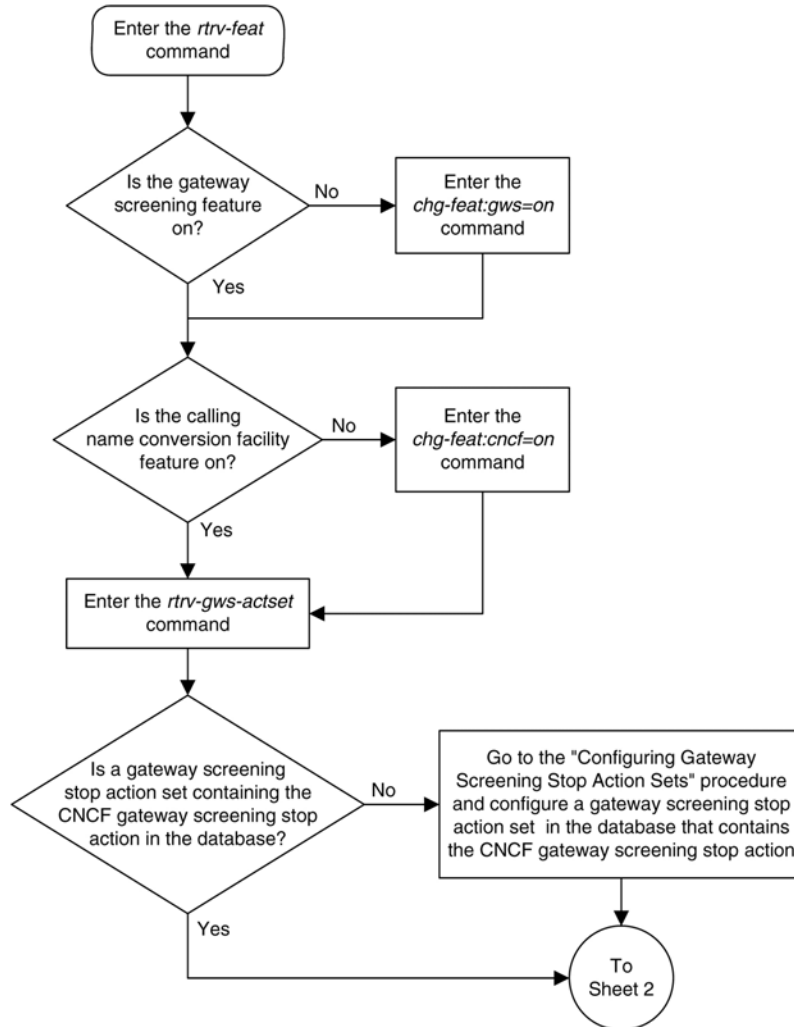

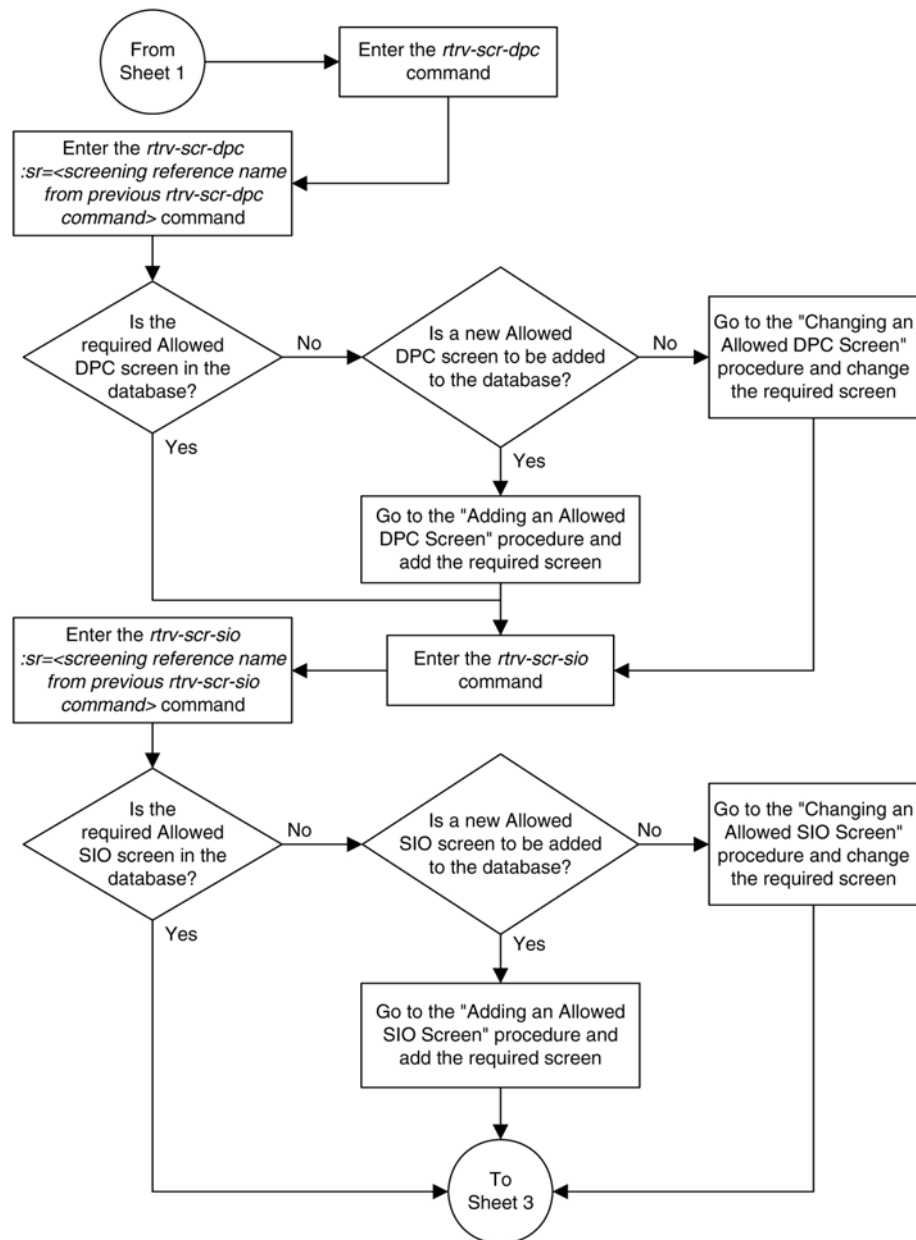

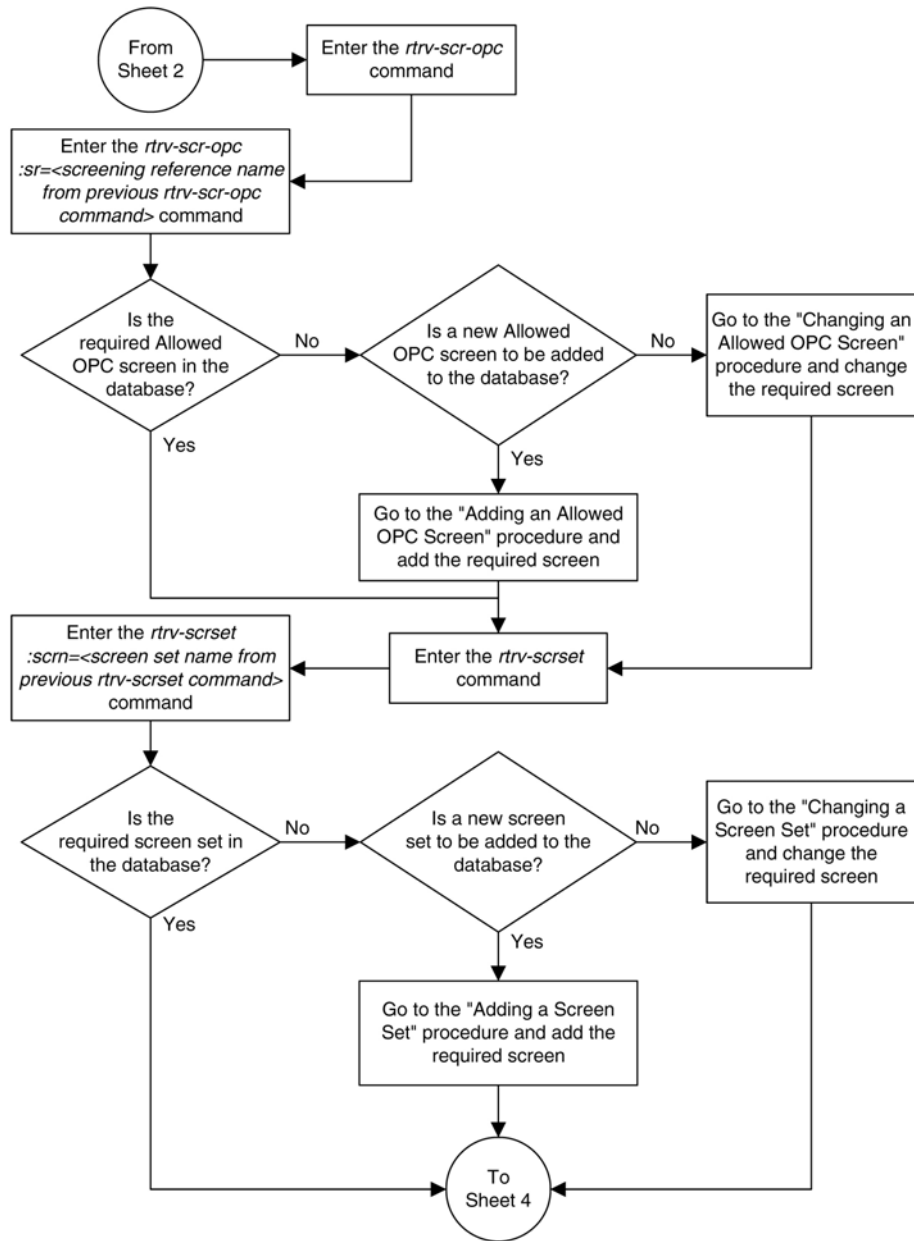

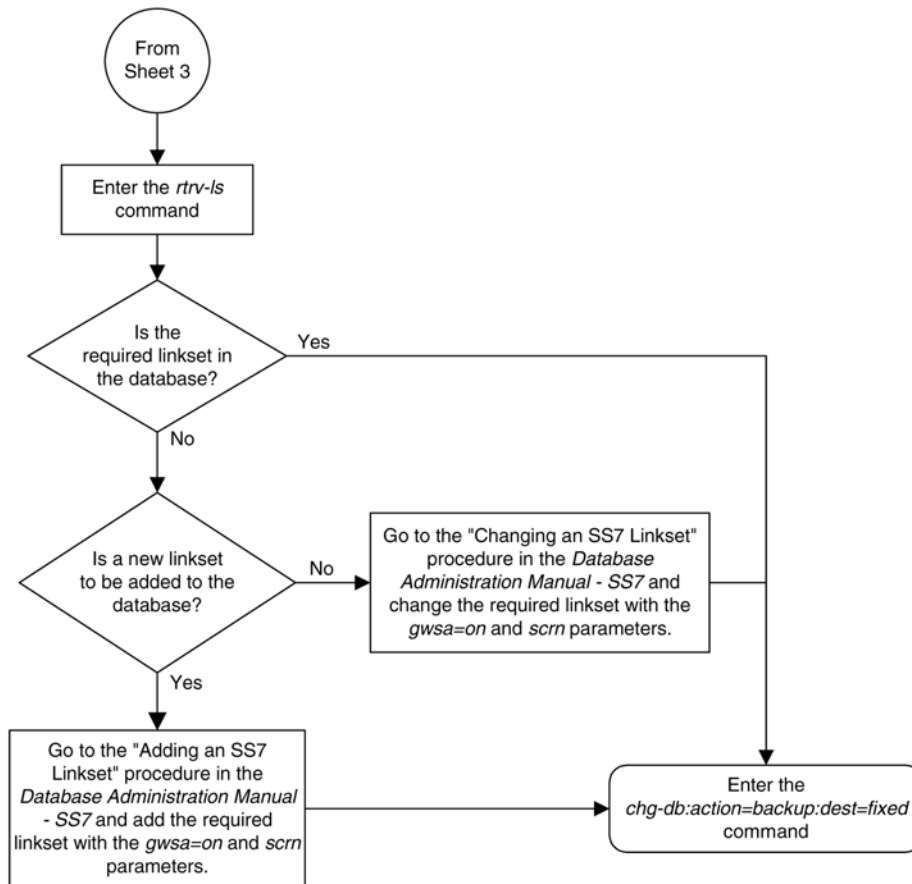

Chapter 15

Allowed ISUP Message Type Screen Configuration

Topics:

- [Introduction Page 436](#)
- [Adding an Allowed ISUP Message Type Screen Page 441](#)
- [Removing an Allowed ISUP Message Type Screen Page 447](#)
- [Changing an Allowed ISUP Message Type Screen Page 450](#)

Chapter 15, Allowed ISUP Message Type Screen Configuration, contains the procedures necessary to configure allowed ISUP message type screens.

Introduction

The ISUP Message Type screen identifies which ISUP messages, using the ISUP message type, that are allowed into the EAGLE 5 ISS. The gray shaded areas in [Figure 79: Allowed ISUP Message Type Screening Function](#) on page 440 shows the fields of the SS7 message that are checked by the ISUP Message Type screening function.

Gateway Screening Actions

The Gateway Screening process stops with this screen. The `nsfi` parameter value can only be `stop`.

If a match is not found, the message is discarded.

If a match is found, the message is processed. If a gateway screening stop action set is specified with the screen, shown by the `actname` parameter value, the message is processed according to the gateway screening stop actions that are assigned to the gateway screening stop action set.

- If the `copy` gateway screening stop action is specified, the message is processed and a copy of the message is sent by the STPLAN feature to an external application.
- If the `rdct` (redirect) gateway screening stop action is specified, the message is diverted from the original destination and sent to another destination with the Database Transport Access feature, specified by global title translation, for further processing.
- If the `cncf` gateway screening stop action is specified, the PIP parameter in the incoming ISUP IAM message is converted to the GN parameter. The GN parameter in the incoming ISUP IAM message is converted to the PIP parameter. The message is then sent to the node specified by the DPC in the routing label in the message. For more information on the Calling Name Conversion Facility feature, see [Calling Name Conversion Facility \(CNCF\) Configuration](#) on page 417.
- If the `tlnp` gateway screening stop action is specified, ISUP IAMs that pass gateway screening are processed either by the ISUP NP with EPAP feature (if the ISUP NP with EPAP feature is enabled and turned on) or by the Triggerless LNP feature (if the Triggerless LNP feature is turned on). The ISUP NP with EPAP feature is discussed in more detail in the *Feature Manual - G-Port*. The Triggerless LNP feature is discussed in more detail in the *LNP Feature Activation Guide*.
- If the `tinp` gateway screening stop action is specified, ISUP IAMs that pass gateway screening are intercepted by the Triggerless ISUP based Number Portability (TINP) feature and converted to include the routing number (RN) if the call is to a ported number. The TINP feature is discussed in more detail in the *Feature Manual - G-Port*.
- If the `tif`, `tif2`, or `tif3` gateway screening stop actions are specified, TIF processing is applied to the message.

TUP Message Screening

TUP messages are screened using the Allowed ISUP Message Type screen. The TUP protocol is an obsolete predecessor to the ISUP protocol that remains in use in some areas. To screen for TUP messages, a screen set must be defined to screen for messages containing the service indicator value of 4. This is accomplished by defining an allowed SIO screen in the screen set containing the `si=4` parameter.

Since both ISUP and TUP messages are screened using the allowed ISUP message type screen, it is recommended that the screen set contain an allowed SIO screen to screen for ISUP messages, messages containing the service indicator value of 5. Each of these entries in the allowed SIO screen should have separate next screening functions. This allows the screening rules after the allowed SIO screen to have two separate streams, one that ends with screening ISUP messages, the other that ends with screening TUP messages.

The TUP messages can be screened for point codes before the allowed SIO screen with the allowed and blocked OPC screens, and after the SIO screen with the allowed and blocked DPC screens. However, if the screen set does not contain an allowed SIO screen that screens for TUP messages (messages with the service indicator value of 4), the message will be treated by the allowed ISUP message type screen as an ISUP message.

The following commands show how a screen set can be provisioned to screen for TUP and ISUP messages.

```
ent-scr-isup:sr=is01:isupmt=10:nsfi=stop
ent-scr-isup:sr=tu01:tupmt=1:nsfi=stop
ent-scr-dpc:sr=dpc4:ni=1:nc=2:ncm=3:nsfi=isup:nsr=tu01
ent-scr-dpc:sr=dpc5:ni=7:nc=1:ncm=0:nsfi=isup:nsr=is01
ent-scr-sio:sr=si02:nic=2:pri=0:si=4:nsfi=dpc:nsr=dpc4
ent-scr-sio:sr=si02:nic=2:pri=0:si=5:nsfi=dpc:nsr=dpc5
ent-scrset:scrn=ist2:nsr=si02:nsfi=sio
```


In this example screen set configuration, messages are screened by the allowed SIO screen `si02` for either ISUP or TUP messages. ISUP messages are further screened by the allowed DPC screen `dpc5` and TUP messages are screened by the allowed DPC screen `dpc4`. The ISUP messages containing the ANSI point code 001-002-003 are passed onto the allowed ISUP screen `is01`. The TUP messages containing the ANSI point code 007-001-000 are passed onto the allowed ISUP screen `tu01`.


Note: The gateway screening rules are entered in reverse of the order that the screening process takes place.

Allowed ISUP Message Type Screening Actions

Figure 78: Allowed ISUP Message Type Screening Actions on page 437 shows the screening actions of the allowed ISUP message type screen.

Figure 78: Allowed ISUP Message Type Screening Actions

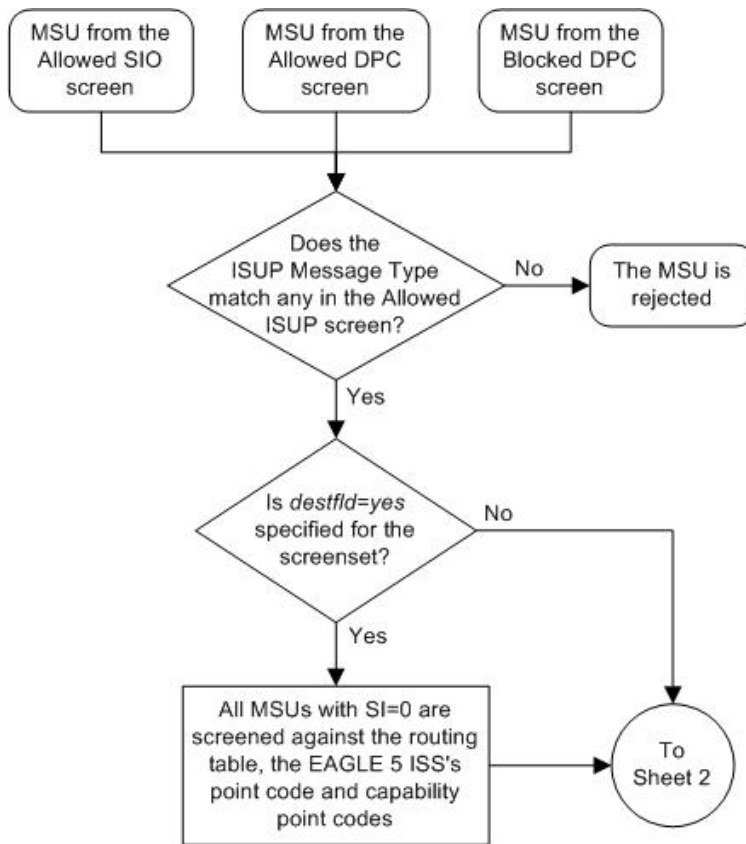

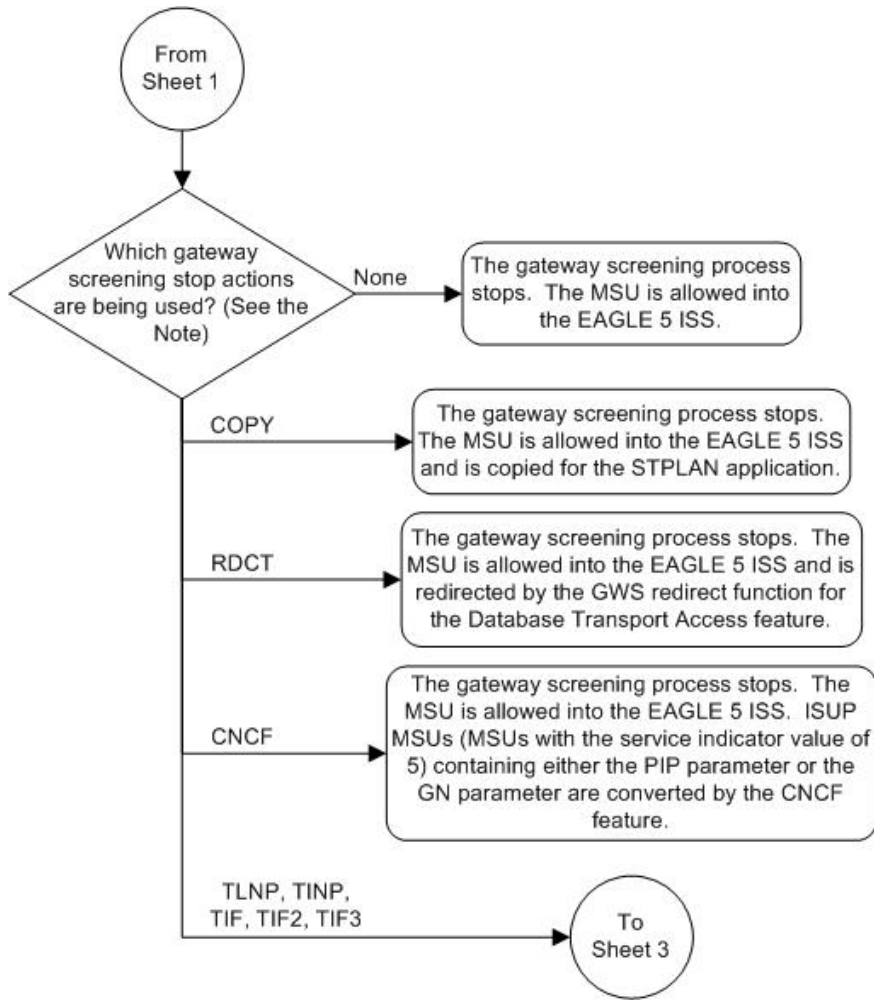

Note: Combinations of the gateway screening stop actions shown on Sheets 2 and 3 may be assigned to a gateway screening stop action set. Refer to the Configuring Gateway Screening Stop Action Sets and the Configuring TLNP Gateway Screening Stop Action Sets procedures in Chapter 2 of this manual for the combinations that can be used.

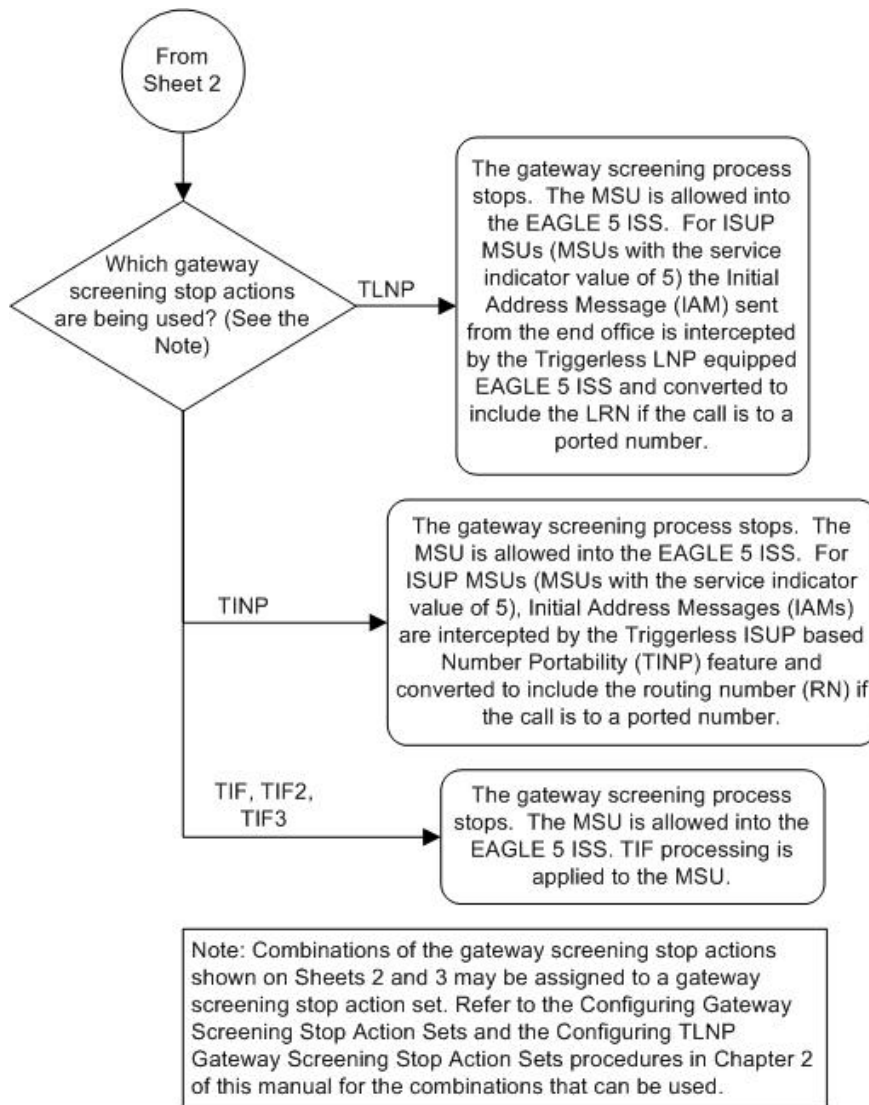


Figure 79: Allowed ISUP Message Type Screening Function

ANSI MSU (ANSI Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF					
		DPC NCM NC NI		Routing Label OPC NCM NC NI		SLS xx	CIC Code

ITU-I MSU (ITU International Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF					
		DPC ID AREA ZONE		Routing Label OPC ID AREA ZONE		SLS xx	CIC Code

14-Bit ITU-N MSU (14-Bit ITU National Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF					
		DPC NPC		Routing Label OPC NPC		SLS xx	CIC Code

24-Bit ITU-N MSU (24-Bit ITU National Message Signal Unit)

BSN FSN LI	SIO xx xx xxxx NIC PRI SI	SIF					
		DPC SP SSA MSA		Routing Label OPC SP SSA MSA		SLS xx	CIC Code

Adding an Allowed ISUP Message Type Screen

This procedure is used to add an allowed ISUP message type (ISUP) screen to the database using the `ent-scr-isup` command. The parameters used by the `ent-scr-isup` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

Since both ISUP and TUP messages are screened by the allowed ISUP message type screen, the `ent-scr-isup` command contains a parameter for the ISUP message type (`isupmt`) and a parameter for the TUP message type (`tupmt`). Only one of these parameters can be specified for the allowed ISUP screen being entered into the database. The `isupmt` parameter should be specified in screen sets that contain allowed SIO screens that are screening messages for the service indicator value of 5 (SI=5). The `tupmt` parameter should be specified in screen sets that contain allowed SIO screens that are screening messages for the service indicator value of 4 (SI=4). If you wish to screen for TUP messages, make sure that the screen set being configured contains an allowed SIO screen that screens messages for the service indicator value of 4 (SI=4). If you do not do this, the EAGLE 5 ISS will treat the message as an ISUP message, even if the message contains the service indicator value of 4.

The examples in this procedure are used to add the allowed ISUP screen data shown in [Table 86: Example Gateway Screening Allowed ISUP Configuration Table](#) on page 442 and based on the example

configuration shown in *Figure 10: Gateway Screening Configuration - Example 6* on page 50 and *Figure 11: Gateway Screening Configuration - Example 7* on page 51.

Table 86: Example Gateway Screening Allowed ISUP Configuration Table

Screening Reference	ISUPMT	NSFI	ACTNAME
isp1	135	stop	CR
isp2	139	stop	CR
Screening Reference	TUPMT	NSFI	ACTNAME
tup1	100	stop	CR

1. Verify that the gateway screening feature is on, by entering the `rtrv-feat` command.

If the gateway screening feature is on, the `GWS` field is set to `on`.

Note: The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

If the gateway screening feature is on, shown by the entry `GWS = on` in the `rtrv-feat` command output, skip step 2, and go to step 3.

2. Turn the gateway screening feature on by entering this command.

```
chg-feat:gws=on
```

Note: Once the gateway screening feature is turned on with the `chg-feat` command, it cannot be turned off.

The gateway screening feature must be purchased before you turn this feature on with the `chg-feat` command. If you are not sure if you have purchased the gateway screening feature, contact your Tekelec Sales Representative or Account Representative.

When the `chg-feat` has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 11:43:04 GMT EAGLE5 36.0.0
CHG-FEAT: MASP A - COMPLTD
```

3. Display all allowed ISUP screens in the database using the `rtrv-scr-isup` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED ISUP
SR   REF  RULES
IEC  YES   2
WRD2 YES   1
WRD4 YES   1
```

If the screening reference names that you wish to add with this procedure are not shown in the `rtrv-scr-isup` command output, go to step 4. For this example, the screening reference names are not shown. If these screening reference names are shown in the `rtrv-scr-isup`

command output, make sure the screening data you wish to enter is not already in the database by entering the `rtrv-scr-isup` command with the screening reference name. For example, enter the `rtrv-scr-isup:sr=iec` command. The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED ISUP
SR   ISUPMT/   NSFI   NSR/ACT
     TUPMT
iec  100       STOP   cr
iec  197       STOP   cr
```

If a gateway screening stop action set is to be assigned to the allowed ISUP screen being added to the database, go to step 4. Otherwise, go to step 5.

4. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:28:30 GMT EAGLE5 36.0.0
ACT  ACT      ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME      1    2    3    4    5    6    7    8    9    10
-----
1    copy      copy
2    rdct      rdct
3    cr        copy rdct
4    cnf       cnf
5    cpcnf     copy cnf
6    cnfprd   cnf rdct
7    cpcprd   copy cnf rdct

GWS action set table is (7 of 16) 44% full
```

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to configure the required gateway screening stop action set.

5. Add a new allowed ISUP screen to the database using the `ent-scr-isup` command.

For this example, enter this command.

```
ent-scr-isup:sr=isp1:isupmt=135:nsfi=stop:actname=cr
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0
ENT-SCR-ISUP: SCREEN SET AFFECTED - ISP1 1% FULL
ENT-SCR-ISUP: MASP A - COMPLTD
```

```
ent-scr-isup:sr=isp2:isupmt=139:nsfi=stop:actname=cr
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0
ENT-SCR-ISUP: SCREEN SET AFFECTED - ISP2 1% FULL
ENT-SCR-ISUP: MASP A - COMPLTD
```

```
ent-scr-isup:sr=tup1:tupmt=100:nsfi=stop:actname=cr
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:29:30 GMT EAGLE5 36.0.0
ENT-SCR-ISUP: SCREEN SET AFFECTED - TUP1 1% FULL
ENT-SCR-ISUP: MASP A - COMPLTD
```

If a gateway screening stop action is to be assigned to the allowed ISUP screen being changed, enter the `ent-scr-isup` command with the `nsfi=stop` parameter and the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 4. The `isupmt` or `tupmt` parameters can have these values: 0 - 255, or an asterisk (*). A range of ISUP or TUP message types can be specified with the `ent-scr-isup` command. If a range of ISUP message types is specified, the range of ISUP message types cannot include any ISUP message types that are currently provisioned for the screening reference name. If a range of TUP message types is specified, the range of TUP message types cannot include any TUP message types that are currently provisioned for the screening reference name. For example, screening reference name `scr1` contains these entries:

SR	ISUPMT/ TUPMT	NSFI	NSR/ACT
scr1	115	STOP	cr
scr1	203	STOP	cr

Another entry for screening reference `scr1` cannot be specified if the range of ISUP message types includes the values 115 and 203.

6. Verify the changes using the `rtrv-scr-isup` command with the screening reference name used in step 5.

For this example, enter this command.

```
rtrv-scr-isup:sr=isp1
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED ISUP
SR ISUPMT/ NSFI NSR/ACT
   TUPMT
isp1 135     STOP  cr
```

```
rtrv-scr-isup:sr=isp2
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED ISUP
SR ISUPMT/ NSFI NSR/ACT
   TUPMT
isp2 139     STOP  cr
```

```
rtrv-scr-isup:sr=tup1
```

The following is an example of the possible output.


```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED ISUP
SR ISUPMT/ NSFI NSR/ACT
   TUPMT
tup1 100     STOP  cr
```


- Backup the new changes using the `chg-db:action=backup:dest=fixed` command.


The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 80: Adding an Allowed ISUP Message Type Screen

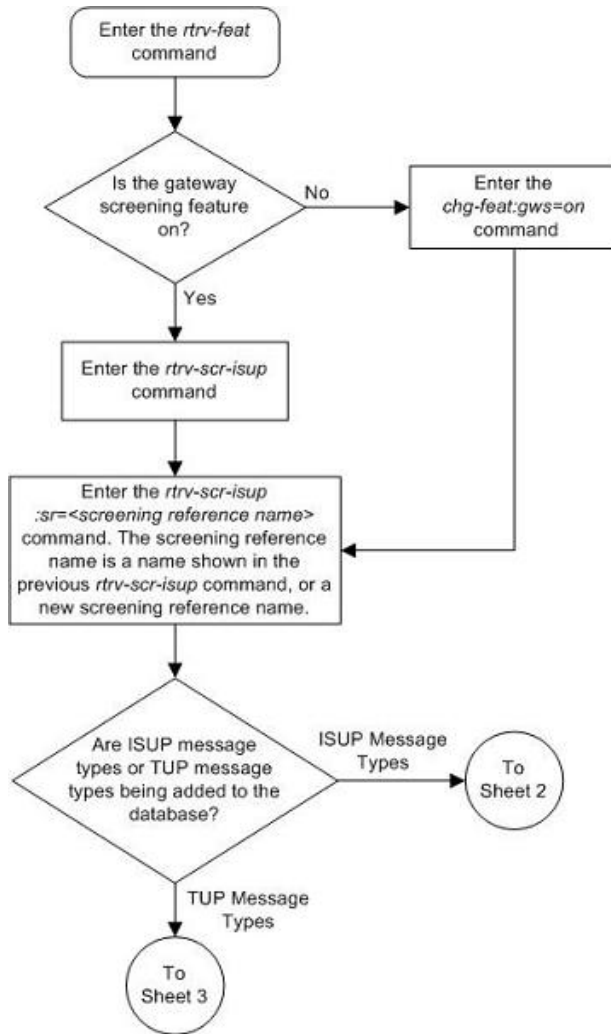

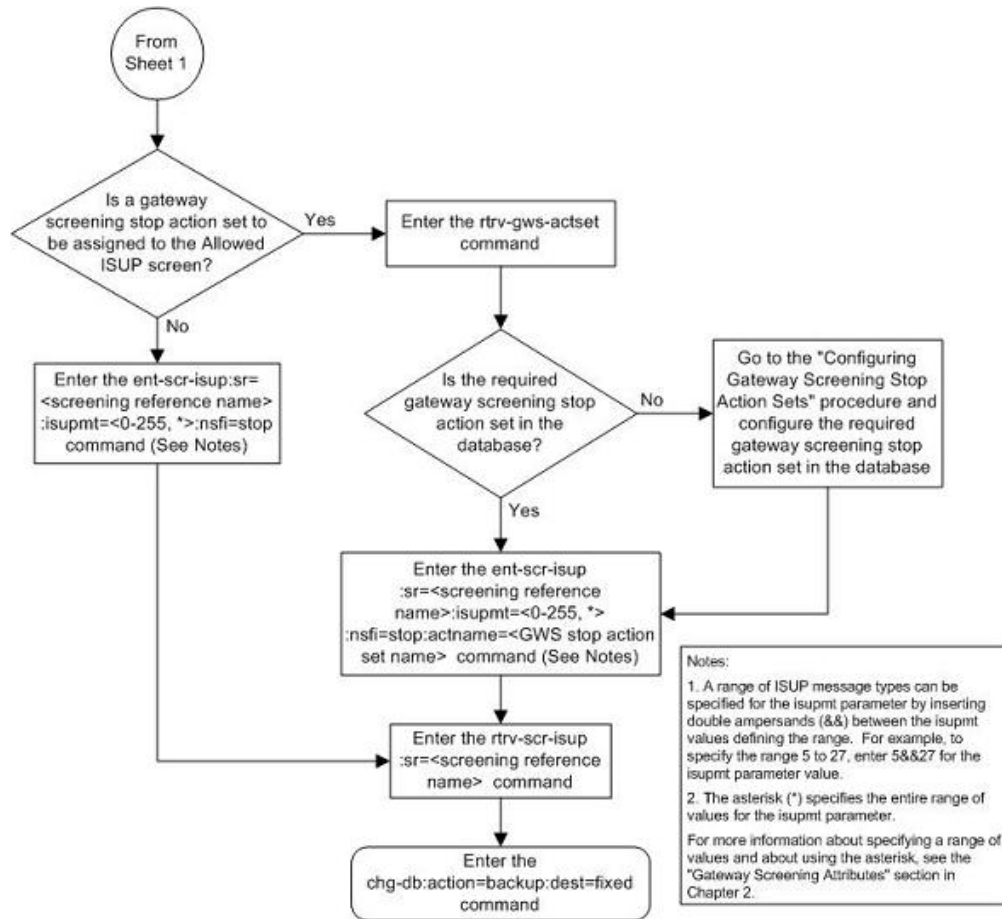

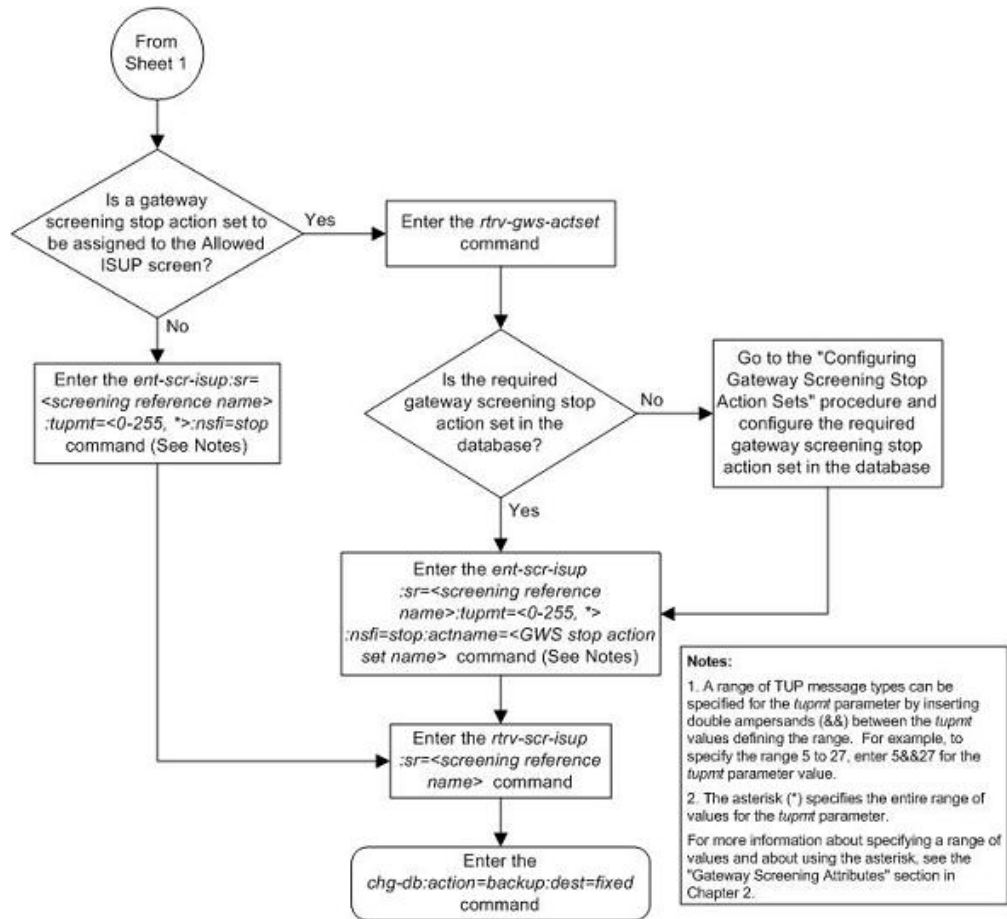

Removing an Allowed ISUP Message Type Screen

This procedure is used to remove an allowed ISUP message type (ISUP) screen from the database using the `dlt-scr-isup` command. The parameters used by the `dlt-scr-isup` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

Since both ISUP and TUP messages are screened by the allowed ISUP message type screen, the `dlt-scr-isup` command contains a parameter for the ISUP message type (`isupmt`) and a parameter for the TUP message type (`tupmt`). Only one of these parameters can be specified for the allowed ISUP screen being removed from the database.

The example in this procedure removes the allowed ISUP screen `isp2` from the database.

The allowed ISUP screen can be referenced by one of the following screens.

- Allowed SIO
- Allowed DPC
- Blocked DPC

Verifying the Gateway Screening Configuration

Enter the following commands to verify that none of these screens reference the allowed ISUP screen being removed from the database.

- `rtrv-scr-sio:nsfi=isup`
- `rtrv-scr-dpc:nsfi=isup`
- `rtrv-scr-blkdpc:nsfi=isup`

Gateway Screening Configuration Procedures

To change the NSFI of any of these screens, perform to one of these procedures.

- [Changing an Allowed SIO Screen](#) on page 323
- [Changing an Allowed DPC Screen](#) on page 292
- [Changing a Blocked DPC Screen](#) on page 258

1. Display the allowed ISUP screens in the database using the `rtrv-scr-isup` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED ISUP
SR      REF  RULES
IEC     YES   2
ISP1    YES   1
ISP2    YES   2
TUP1    YES   1
WRD2    YES   1
WRD4    YES   1
```

From the `rtrv-scr-isup` output, display the allowed ISUP screen you wish to remove using the `rtrv-scr-isup` command with the screening reference name. For this example, enter this command.

```
rtrv-scr-isup:sr=isp2
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED ISUP
SR  ISUPMT/  NSFI  NSR/ACT
    TUPMT
isp2 055      STOP  cr
```

2. Enter the commands in the [Verifying the Gateway Screening Configuration](#) on page 448 section to verify that the screen being removed is not referenced by other screens in the database.

If the screen being removed is referenced by other screens, perform the procedures shown in the [Gateway Screening Configuration Procedures](#) on page 448 section to change the NSFI of those screens to reference other screens or change the NSFI of these screens to STOP.

3. Remove the allowed ISUP screen from the database using the `dlt-scr-isup` command.

The current value of the `isupmt` parameter must be entered exactly as shown in the `rtrv-scr-isup` output in step 1. For this example, enter this command.

```
dlt-scr-isup:sr=isp2:isupmt=055
```

A message similar to the following should appear.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0  
DLT-SCR-ISUP: SCREEN SET AFFECTED - FLD5 0% FULL  
DLT-SCR-ISUP: MASP A - COMPLTD
```

4. Verify the changes using the `rtrv-scr-isup` command with the screening reference name used in step 3.

For this example, enter this command.

```
rtrv-scr-isup:sr=isp2
```

The following is an example of the possible output.

```
E2573 Cmd Rej: SR or NSR does not reference an existing SR
```


This message shows that the specified screening reference name is not in the database and the action of the `dlt-scr-isup` command in step 3 was successful. If the specified screening reference name contained more than one entry when the `dlt-scr-isup` command was executed in step 3, the `rtrv-scr-isup:sr=` command output would show the remaining entries in the screening reference instead of error message E2573.

5. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.  
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.  
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.  
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 81: Removing an Allowed ISUP Message Type Screen

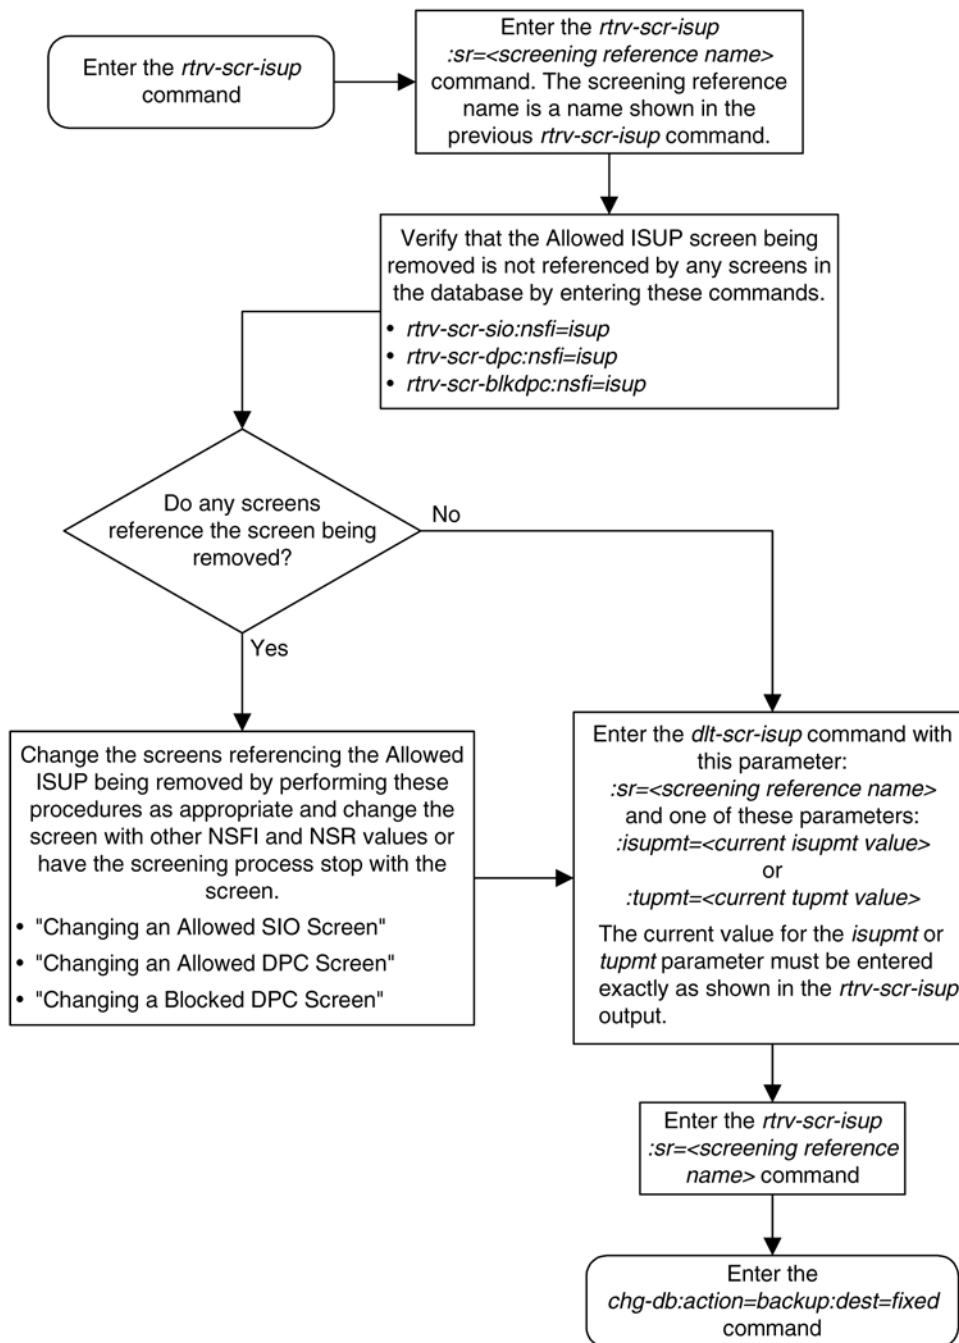

Changing an Allowed ISUP Message Type Screen

This procedure is used to change the attributes of an allowed ISUP message type (ISUP) screen in the database using the `chg-scr-isup` command. The parameters used by the `chg-scr-isup` command are shown in the [Gateway Screening Attributes](#) on page 20 section. The general rules that

apply to configuring gateway screening entities are shown in the [Gateway Screening Configuration](#) on page 37 section.

The example in this procedure is used to change the ISUP message type 135 for the allowed ISUP screen `isp1` to 075 and to redirect the MSU for the DTA feature.

1. Display the allowed ISUP screens in the database using the `rtrv-scr-isup` command.

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:25:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED ISUP
SR   REF  RULES
IEC  YES   2
ISP1 YES   3
ISP2 YES   2
TUP1 YES   1
WRD2 YES   1
WRD4 YES   1
```

From the `rtrv-scr-isup` output, display the allowed ISUP screen you wish to remove using the `rtrv-scr-isup` command with the screening reference name. For this example, enter this command.

```
rtrv-scr-isup:sr=isp1
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED ISUP
SR   ISUPMT/  NSFI   NSR/ACT
      TUPMT
isp1 002      STOP   copy
isp1 089      STOP   -----
isp1 135      STOP   cr
```

If a gateway screening stop action set is to be assigned to the allowed ISUP screen being changed in the database, go to step 2.

Step 2 verifies the gateway screening stop action set names in the database. If a gateway screening stop action set name will not be assigned to the screen, skip step 2 and go to step 3.

2. Display the gateway screening stop action sets in the database with the `rtrv-gws-actset` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-25 15:26:30 GMT EAGLE5 36.0.0
ACT  ACT   ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME  1    2    3    4    5    6    7    8    9    10
---  ---
1    copy   copy
2    rdct   rdct
3    cr     copy rdct
4    cncf   cncf
5    cpncf  copy cncf
6    cncfrd cncf rdct
7    cpcfrd copy cncf rdct
```

```
GWS action set table is (7 of 16) 44% full
```

If the required gateway screening stop action set is not in the database, perform the [Configuring Gateway Screening Stop Action Sets](#) on page 63 procedure to configure the required gateway screening stop action set.

3. Change the attributes of an allowed ISUP screen using the `chg-scr-isup` command.

If a gateway screening stop action is to be assigned to the allowed ISUP screen being changed, enter the `chg-scr-isup` command with the `nsfi=stop` parameter and the `actname` parameter with the name of a gateway screening stop action set shown in the output of the `rtrv-gws-actset` command executed in step 2.

The value of the `isupmt` or `tupmt` parameter must be entered exactly as shown in the `rtrv-scr-isup` output in step 1.

The `nisupmt` or `ntupmt` parameter can have these values: 0 - 255, or an asterisk (*).

A range of ISUP or TUP message types can be specified with the `chg-scr-isup` command. If a range of ISUP message types is specified, the range of ISUP message types cannot include any ISUP message types that are currently provisioned for the screening reference name. If a range of TUP message types is specified, the range of TUP message types cannot include any TUP message types that are currently provisioned for the screening reference name.

For example, screening reference name `scr1` contains these entries:

SR	ISUPMT/ TUPMT	NSFI	NSR/ACT
scr1	115	STOP	cr
scr1	203	STOP	cr

Another entry for screening reference `scr1` cannot be specified if the range of ISUP message types includes the values 115 and 203. For this example, enter this command.

```
chg-scr-isup:sr=ispl:isupmt=135:nisupmt=075:actname=rdct
```

The following messages appear.

```
rlghncxa03w 06-10-25 15:27:30 GMT EAGLE5 36.0.0
CHG-SCR-ISUP: SCREEN SET AFFECTED - ISPL 1% FULL
CHG-SCR-ISUP: MASP A - COMPLTD
```

4. Verify the changes using the `rtrv-scr-isup` command with screening reference name used in step 3.

For this example, enter this command.

```
rtrv-scr-isup:sr=ispl
```

The following is an example of the possible output.


```
rlghncxa03w 06-10-25 15:30:30 GMT EAGLE5 36.0.0
SCREEN = ALLOWED ISUP
SR  ISUPMT/  NSFI  NSR/ACT
    TUPMT
isp1 002      STOP  copy
isp1 075      STOP  rdct
isp1 089      STOP  -----
```


5. Backup the new changes using the `chg-db:action=backup:dest=fixed` command.

The following messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 82: Changing an Allowed ISUP Message Type Screen

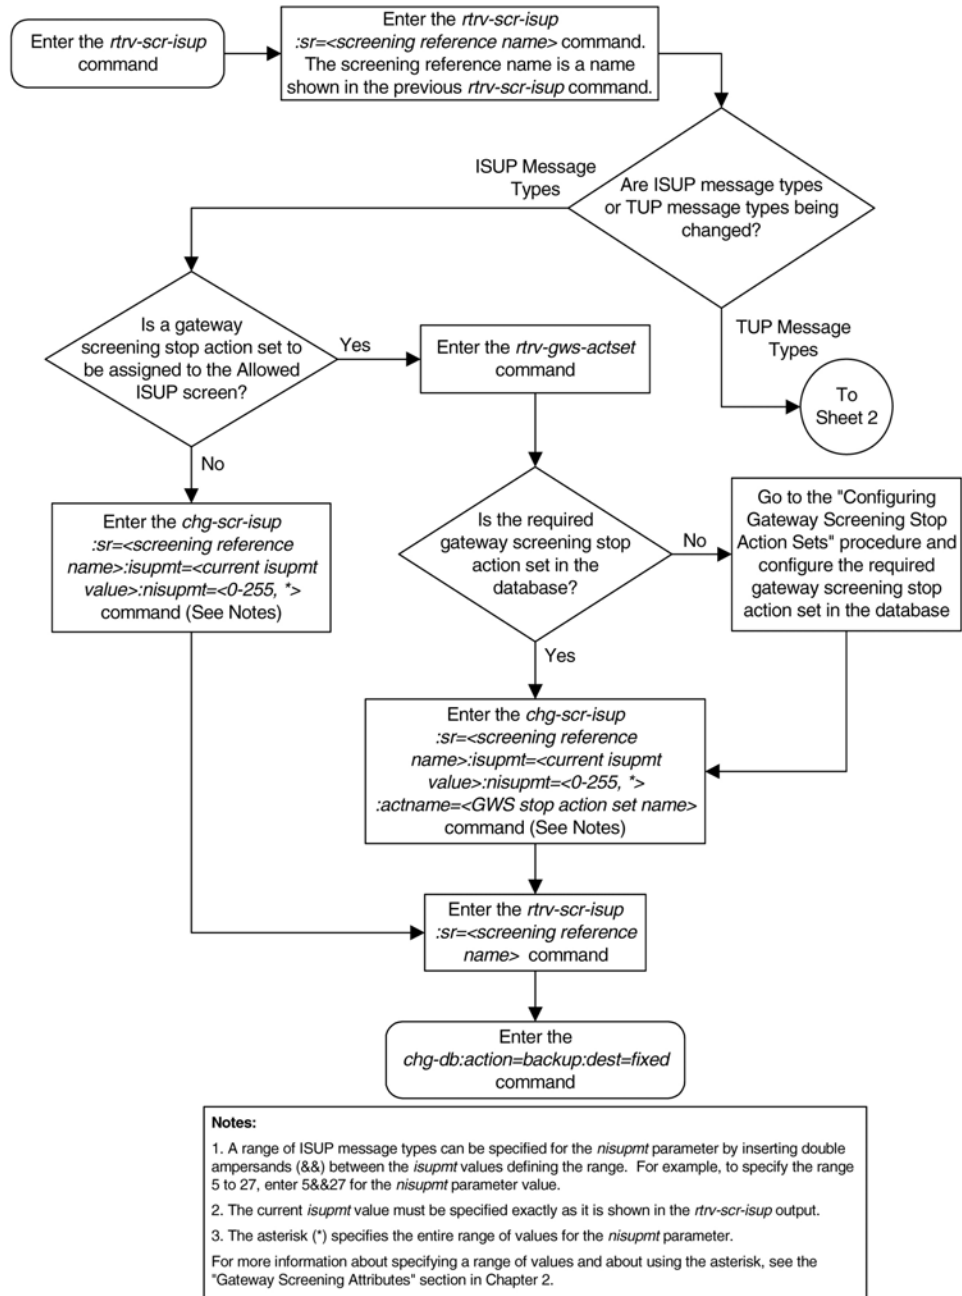

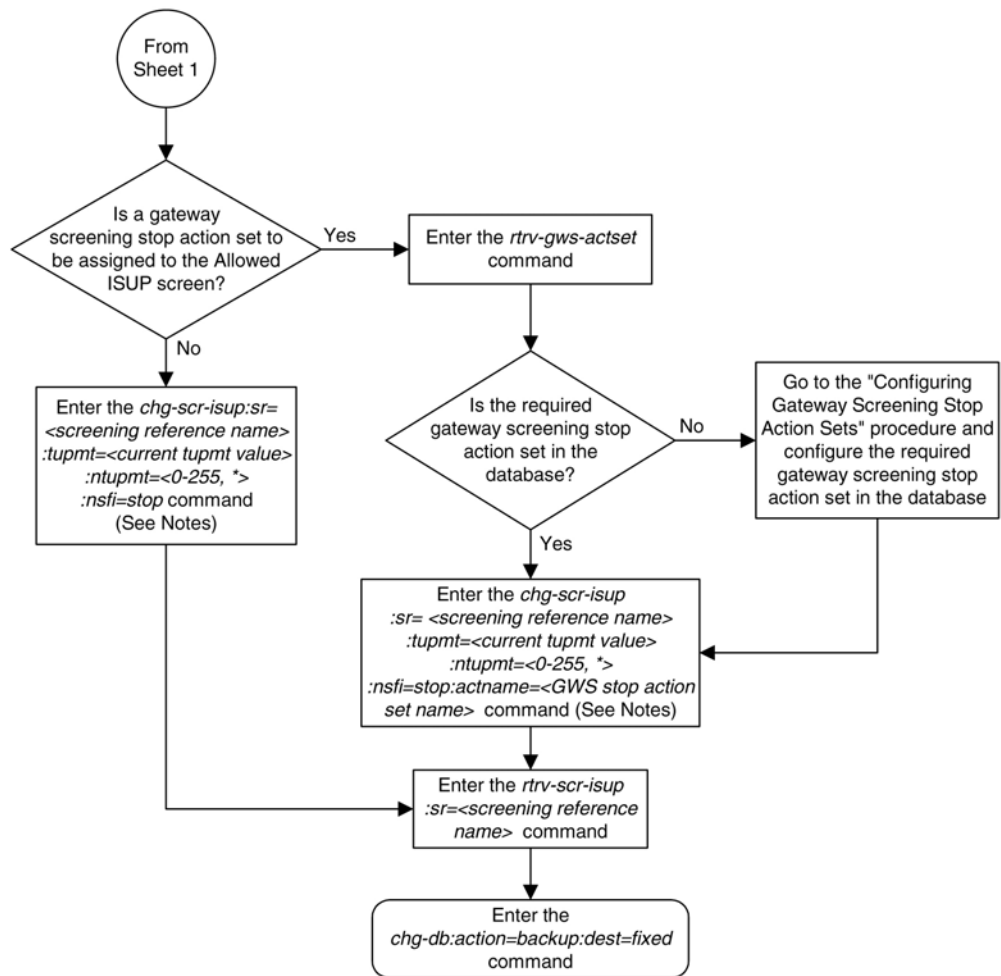

Notes:

1. A range of TUP message types can be specified for the *ntupmt* parameter by inserting double ampersands (&&) between the *tupmt* values defining the range. For example, to specify the range 5 to 27, enter 5&&27 for the *ntupmt* parameter value.
2. The current *tupmt* value must be specified exactly as it is shown in the *rtrv-scr-isup* output.
3. The asterisk (*) specifies the entire range of values for the *ntupmt* parameter.

For more information about specifying a range of values and about using the asterisk, see the "Gateway Screening Attributes" section in Chapter 2.

Glossary

A

ACT	Activate
AFTPC	Affected Point Code The point code in subsystem-prohibited (SSP), subsystem-status-test (SST), and subsystem-allowed (SSA) SCCP management messages used by gateway screening to determine if the messages containing these point codes are allowed in to the network. This point code is in the SCMG Data (SCCP Management) portion of the signaling information field in the MSU.
Allowed Affected Destination Field	The gateway screening entity that identifies the point code in the affected destination field (the concerned signaling point code) of incoming MTP network management messages from another network that are allowed into the EAGLE 5 ISS. Messages containing the specified point code are allowed into the network.
Allowed AFTPC	The gateway screening entity that identifies the messages containing a specific affected point code. Messages containing the specified affected point code are allowed into the network.
Allowed DPC	The gateway screening entity that identifies the destination point codes that are allowed to receive SS7 messages from the EAGLE 5 ISS. Messages containing the specified destination point codes

A

go on to the next step in the gateway screening process, or are allowed into the network if the gateway screening process stops with this entity.

Allowed ISUP

The gateway screening entity that identifies the ISUP or TUP message types that are allowed into the network.

Allowed OPC

The gateway screening entity that identifies the originating point codes that are allowed to send SS7 messages into the network. Messages containing the specified originating point codes go on to the next step in the gateway screening process, or are allowed into the network if the gateway screening process stops with this entity.

Allowed SIO

The gateway screening entity that identifies the type of MSUs (ISUP, TUP, TCAP, and so forth) that are allowed into the network. The message type is determined by the network indicator code (NIC), priority (PRI), and service indicator (SI) fields of the signaling information octet (SIO) field in the MSU, and the H0 and H1 heading codes of the signaling information field of the MSU. Messages containing the specified message type go on to the next step in the gateway screening process, or are allowed into the network if the gateway screening process stops with this entity.

Allowed TT

The gateway screening entity that identifies the SCCP messages that have a specified translation type

A

value in the called party address. SCCP messages containing specified translation type in the called party address go on to the next step in the gateway screening process, or are allowed into the network if the gateway screening process stops with this entity.

ANSI

American National Standards Institute

An organization that administers and coordinates the U.S. voluntary standardization and conformity assessment system. ANSI develops and publishes standards. ANSI is a non-commercial, non-government organization which is funded by more than 1000 corporations, professional bodies, and enterprises.

APC

Adjacent Point Code

The point code that identifies a node adjacent to the EAGLE 5 ISS. This term is used in link sets and routes.

B

BLKDPC

Blocked Destination Point Code

The point code that the gateway screening uses to keep MSUs bound for a specific point code out of the network where the EAGLE 5 ISS is located. This point code is in the routing label portion of the signaling information field in the MSU. Messages that do not contain the specified destination point code go on to the next step in the gateway screening process, or are allowed into the network if the

B

gateway screening process stops with this entity.

BLKOPC

Blocked Originating Point Code

The point code that gateway screening uses to keep MSUs coming from a specific point code out of the network where the EAGLE 5 ISS is located. This point code is in the routing label portion of the signaling information field in the MSU. Messages that do not contain the specified originating point code go on to the next step in the gateway screening process, or are allowed into the network if the gateway screening process stops with this entity.

C

CNCF

Calling Name Conversion Facility

CNCF provides a conversion of ISUP IAM messages using calling name identification presentation (CNIP) for calling name information delivery. CNIP uses either non-standard proprietary ISUP party information (PIP) parameter or ANSI standard ISUP generic name (GN) parameter.

CNIP

Calling Name Identification
Presentation

control cards

Cards that occupy slots 1113 through 1118 of the control shelf on an EAGLE 5 ISS and perform OAM, TDM, and database functions for the EAGLE 5 ISS. The legacy set consists of the single-slot GPSM-II card running the OAM application and EOAM GPL, the single-slot TDM card,

C

and the dual-slot MDAL card.
The E5-based set consists of the dual-slot E5-MASP card (the E5-MCAP module and the E5-TDM module) and the dual-slot E5-MDAL card.

CR

Cluster Routing
Connection Request

credit card drive

Flash memory credit card-shaped drive used in the flush-mounted USB port on an E5-MCAP card for upgrade; it could be used for disaster recovery.

D

Database

All data that can be administered by the user, including cards, destination point codes, gateway screening tables, global title translation tables, links, LNP services, LNP service providers, location routing numbers, routes, shelves, subsystem applications, and 10 digit telephone numbers.

DESTFLD

The point code in the affected destination field (the concerned signaling point code) of incoming MTP network management messages from another network that are allowed into the EAGLE 5 ISS.

Destination

The node to which the signaling link traffic is routed. This destination is identified by a point code, either a full point code or a cluster point code.

DPC

Destination Point Code

D

DPC refers to the scheme in SS7 signaling to identify the receiving signaling point. In the SS7 network, the point codes are numeric addresses which uniquely identify each signaling point. This point code can be adjacent to the EAGLE 5 ISS, but does not have to be.

DTA

Database Transport Access

A feature in the EAGLE 5 ISS that encapsulates specific MSUs into the data portion of SCCP within a new SS7 MSU and sends the new MSU to the destination using global title translation. The EAGLE 5 ISS uses gateway screening to determine which MSUs are used by the DTA feature.

E

E5-MASP card

E5-based dual-slot card that consists of the E5-MCAP module (occupies slot 1113 and slot 1115) and the E5-TDM module (occupies slot 1114 and slot 1116) in an EAGLE 5 ISS control shelf. Used when the E5-MDAL card is used.

E5-MCAP card

The module contains the Communications Processor and Applications Processor and provides connections to the IMT bus. Controls the maintenance and database administration activity and performs both application and communication processing. Runs the OAM application and OAMHC GPL. Occupies slot 1113 and slot 1115 in an EAGLE 5 ISS control shelf. Used when the E5-MDAL card is used. Contains two USB ports.

E

E5-MDAL card	The E5 MDAL card processes alarm requests, provides general purpose relays, and provides fan control. Occupies slots 1117 and 1118 in an EAGLE 5 ISS Control Shelf. Used with E5-MASP cards. Does NOT contain a drive for removable cartridges.
E5-TDM card	The E5-TDM card provides the EAGLE 5 ISS with 16 ports for user terminals, contains fixed disk storage and distributes Composite Clocks and High Speed Master clocks throughout the EAGLE 5 ISS. Occupies slot 1114 and slot 1116 in an EAGLE 5 ISS Control Shelf. Used when the E5-MDAL card is used.
EPAP	EAGLE Provisioning Application Processor

F

fixed disk drive	Hard drive on the TDM card and the E5-TDM card.
flush-mounted USB port	USB port on the E5-MCAP card; used with credit card flash memory drives for installation and backup of customer data.

FR	Family of Requirement
----	-----------------------

G

GLS	Generic Loading Services An application that is used by the TSM cards for downloading gateway screening to LIM cards.
-----	--

G

GN	Generic Name
GPL	Generic Program Load Software that allows the various features in the system to work. GPLs and applications are not the same software.
G-Port	GSM Mobile Number Portability A feature that provides mobile subscribers the ability to change the GSM subscription network within a portability cluster, while retaining their original MSISDN(s).
GPSM-II card	General Purpose Service Module II Contains the communications processor and applications processor and provides connections to the Interprocessor Message Transport (IMT) bus. The GPSM-II card can run on the OAM, IPS, or MCP applications. This card runs various GPLs and applications in the EAGLE 5 ISS. As a control card, it runs the OAM application and EOAM GPL. Used when the legacy TDM cad and MDAL card are used.
GT	Global Title Routing Indicator
GWS	Gateway Screening Used at gateway STPs to limit access into the network to authorized users. A gateway STP performs inter-network routing and gateway screening functions. GWS controls access to nonhome SS7 networks. Only an MSU that

G

matches predefined criteria in the EAGLE 5 ISS's database is allowed to enter the EAGLE 5 ISS.

GWSA

Gateway Screening Action
Gateway Screening Application

GWSD

Gateway Screening Message
Discard

GWSM

Gateway Screening Messages
Gateway Screening Mode

H

HC-MIM

High Capacity Multi-Channel
Interface Module

A card that provides access to eight E1/T1 ports residing on backplane connectors A and B. Each data stream consists of 24 T1 or 31 E1 DS0 signaling links assigned in a time-division multiplex (TDM) manner. Each channel occupies a unique timeslot in the data stream and can be selected as a local signaling link on the interface card. Each card has 8 E1 or 8 T1 port interfaces with a maximum of 64 signaling links provisioned among the 8 E1/T1 ports.

HIPR

High-Speed IMT Packet Router

A card that provides increased system throughput and traffic capacity. HIPR moves EAGLE from an intra-shelf ring topology to an intra-shelf switch topology. HIPR acts as a gateway between the intra-shelf IMT BUS, running at 125Mbps, and the inter-shelf operating at 1.0625Gbps. The HIPR

H

card will seat in the same slot as an HMUX card (slots xx09 & xx10 of each shelf).

I

IAM	Initial Address Message
ID	Identity, identifier
IEC	International Escape Code
ISS	Integrated Signaling System
ISUP	ISDN User Part
ITU	International Telecommunications Union

L

latched USB port	On the E5-MCAP card, a USB port with a lockable latch. Used with removable media (flash memory "thumb" drives) to install and back up customer data.
LIM	<p>Link Interface Module</p> <p>Provides access to remote SS7, X.25, IP and other network elements, such as a Signaling Control Point (SCP) through a variety of signaling interfaces (V.35, OCU, DS0, MPL, E1/T1 MIM, LIM-ATM, E1-ATM, IPLIMx, IPGWx). The LIMs consist of a main assembly and possibly, an interface appliqué board. These appliqués provide level one and some level two functionality on SS7 signaling links.</p>

L

Link	Signaling Link
LNP	Local Number Portability
LST	Link Set Type

M

MAS	<p>Maintenance and Administration Subsystem</p> <p>A set of cards located in the Control Shelf, used to provide a central management point for the EAGLE 5 ISS. The MAS provides user interface, maintenance communication, peripheral services, alarm processing, system disk interface, and measurements using the following three subassemblies: GPSM-II, TDM, and MDAL.</p>
MASP	<p>Maintenance and Administration Subsystem Processor</p> <p>The Maintenance and Administration Subsystem Processor (MASP) function is a logical pairing of the GPSM-II card and the TDM card. The GPSM-II card is connected to the TDM card by means of an Extended Bus Interface (EBI) local bus.</p> <p>The MDAL card contains the removable cartridge drive and alarm logic. There is only one MDAL card in the Maintenance and Administration Subsystem (MAS) and it is shared between the two MASPs.</p>
MSA	<p>Metropolitan Statistical Areas</p> <p>Main Signaling Area</p>

M

MSU

Message Signaling Unit

The SS7 message that is sent between signaling points in the SS7 network with the necessary information to get the message to its destination and allow the signaling points in the network to set up either a voice or data connection between themselves.

The message contains the following information:

- The forward and backward sequence numbers assigned to the message which indicate the position of the message in the traffic stream in relation to the other messages.
- The length indicator which indicates the number of bytes the message contains.
- The type of message and the priority of the message in the signaling information octet of the message.
- The routing information for the message, shown in the routing label of the message, with the identification of the node that sent message (originating point code), the identification of the node receiving the message (destination point code), and the signaling link selector which the EAGLE 5 ISS uses to pick which link set and signaling link to use to route the message.

MTP

The levels 1, 2, and 3 of the SS7 protocol that control all the functions necessary to route an SS7 MSU through the network.

N

N

NC	Network Cluster Network Code
NCM	Network Cluster Member
NI	Network Indicator
NIC	Network Identifier Code Network Information Center Network Interface Card Computer hardware that enables computers to communicate with one another over a computer network. Also called a network card or a network adapter.
NP	Number Plan
NPC	National Point Code
NSR	Next Screening Reference

O

OPC	Originating Point Code
-----	------------------------

P

PIP	Party Information Parameter
PRI	Primary Rate Interface Primary Rate ISDN Priority

R

R

removable cartridge	MO cartridge used in the drive on the legacy MDAL card.
removable cartridge drive	Media drive for removable MO cartridges on the legacy MDAL card.
removable media	Flash memory or “thumb” drives used in the latched USB port on an E5-MCAP card for installation and backup of customer data.

RI Routing Indicator

RN Routing Number

RSP Routeset Prohibited Test (Msg)

RSR Reset Request

S

SCCP Signaling Connection Control Part

SCP Service Control Point
Service Control Points (SCP) are network intelligence centers where databases or call processing information is stored. The primary function of SCPs is to respond to queries from other SPs by retrieving the requested information from the appropriate database, and sending it back to the originator of the request.

Secure Copy

Screen Set A gateway screening table containing a list of rules, or

S

screening references. The screening references indicate the screening action that is to be performed on a message in a specific linkset.

Screening Reference

The name of each entry in the gateway screening tables. Combined with the next screening function identifier (NSFI), it uniquely defines a screening table. This field is used with all screening functions except the screen set screening function.

SCRN

Screen Set Name

SEAS

Signaling Engineering and Administration System

An interface defined by Bellcore and used by the Regional Bell Operating Companies (RBOCs), as well as other Bellcore Client Companies (BCCs), to remotely administer and monitor the signaling points in their network from a central location.

SIF

Service Information Field

MTP Service Information Field is the payload field of an SS7 MSU header. The first byte of the SIF is the start of the MTP3 routing label. For MTP3-variant networks, the maximum SIF size is 272 bytes. For MTP3b-variant networks, the maximum SIF size is 4095 bytes.

SI

Service Indicator

SIO

Service Information Octet.

S

	<p>The network indicator code (NIC), priority (PRI), and service indicator (SI) in the SIO field in the message signaling unit (MSU). This information identifies the type of MSU (ISUP, TCAP, and so forth) that is allowed in the network where the EAGLE 5 ISS is located.</p>
SLTA	Signaling Link Test Acknowledgment
SLTM	Signal Link Test Message
SP	Service Provider Signaling Point
Spare Point Code	<p>The EAGLE ITU International/National Spare Point Code feature allows a network operator to use the same Point Codes across two networks (either ITU-I or ITU-N). The feature also enables National and National Spare traffic to be routed over the same linkset. The EAGLE uses the MSU Network Indicator (NI) to differentiate the same point code of one network from the other. In accordance with the SS7 standard, unique Network Indicator values are defined for Point Code types ITU-I, ITU-N, ITU-I Spare, and ITU-N Spare.</p>
SR	Screening Reference
SS7	Signaling System #7
SSA	Subsystem Allowed

S

SSN

Subsystem Number

The subsystem number of a given point code. The subsystem number identifies the SCP application that should receive the message or the subsystem number of the destination point code to be assigned to an X.25 address or the LNP subsystem of the EAGLE 5 ISS.

A value of the routing indicator portion of the global title translation data commands indicating that no further global title translation is required for the specified entry.

SSP

Subsystem Prohibited network management message.

Subsystem Prohibited SCCP (SCMG) management message. (CER)

SST

Secondary State

The secondary state of the specified entity.

Subsystem Status Test network management message.

STPLAN

Signaling Transfer Point Local Area Network

The generic program load and application used by the ACM card to support the STP LAN application. This GPL does not support 24-bit ITU-N point codes.

T

TCAP

Transaction Capabilities Application Part

T

TDM	Terminal Disk Module Time Division Multiplexing
TFA	TransFer Allowed (Msg)
TFC	Transfer Control TransFer Controlled (Msg)
TFR	Transfer Restricted
TFP	TransFer Prohibited (Msg) A procedure included in the signaling route management (functionality) used to inform a signaling point of the unavailability of a signaling route.
TLNP	Triggerless LNP
Triggerless LNP	A feature that gives service providers a method to route calls to ported numbers without having to upgrade their signaling switch (end office or mobile switching center) software. This feature uses the gateway screening stop action TLNP to intercept through-switched ISUP messages on the LIM.
TSM	Translation Services Module Provides SCCP functionality or GLS functionality for Local Number Portability (LNP)/SCCP (GTT). The SCCP software allows the TSM to be used as a memory board for Global Title Translation (GTT).

T

TT Translation Type.
Resides in the Called Party Address (CdPA) field of the MSU and determines which service database is to receive query messages. The translation type indicates which Global Title Translation table determines the routing to a particular service database.

TUP Telephone User Part

U

UAM Unsolicited Alarm Message.

UDT Unit Data Transfer

UDTS Unitdata Service message

UIM Unsolicited Information Message

UPU User Part Unavailable

USB port Receptacle for flash memory drives on personal computers. On the E5-MDAL card, a flush-mounted USB port used with credit card flash memory drives for upgrade. On the E5-MCAP card, a latched USB port for use with flash memory "thumb" drives for installation and backup of customer data.

X

XUDT Extended User Data

X

XUDTS

Extended Unitdata Service
message

Database Administration Manual

- Gateway Screening

Index

14-bit ITU national spare point code 20, 24, 34, 105, 107, 111, 116, 117, 118, 132, 134, 140, 146, 148, 187, 189, 195, 202, 204, 219, 220, 225, 230, 243, 246, 247, 248, 256, 259, 262, 263, 281, 282, 290, 297, 298, 338, 341, 342, 351, 354, 356, 358, 375, 377, 384, 390, 391

A

admonishments, documentation 3
Allowed Affected Destination Field 16
Allowed Affected Point Code 16
Allowed Called Party Address 16
Allowed Calling Party Address 16
Allowed Destination Point Code 16
Allowed ISUP Message Type 16
Allowed Originating Point Code 16
Allowed Signaling Information Octet 16
Allowed Translation Type 16
availability, documentation 7

B

Blocked Destination Point Code 16
Blocked Originating Point Code 16

C

card
E5-MCAP 9
E5-MDAL 9
E5-TDM 9
General Purpose Service Module II (GPSM-II) 8
MDAL 8
TDM 8
Terminal Disk Module (TDM) 8
cards
control 8
E5-MASP 8
MASP 8
cartridge, removable 8
CAUTION admonishment 3
control cards
E5-based 8
EAGLE 5 ISS 8
legacy 8
credit card flash drive 9
CSR, See Customer Service Request (CSR)
Customer Care Center
contact information 4
emergency response 6

Customer Service Request (CSR) 4
Customer Support site
how to access 13

D

DANGER admonishment 3
documentation 3, 7, 13
availability, packaging, and updates 7
Documentation Bulletins 7
electronic files 7
locate on Customer Support site 13
printed 7
Related Publications 7
Release Notice 7
drive
credit card flash 9
E5-TDM fixed SATA 9
removable media flash 9
TDM fixed 8

E

E5-based control cards 8
E5-MASP cards 8
E5-MCAP card 9
USB ports 9
E5-MDAL card 9
E5-TDM card 9
electronic files, documentation 7
emergency response, Customer Care Center 6

F

fixed drive
E5-TDM 9
TDM 8

G

General Purpose Service Module II 8
GPSM-II card 8

I

ITU international spare point code 20, 24, 34, 105, 107, 111, 116, 117, 118, 132, 134, 140, 146, 148, 187, 189, 195, 202, 204, 219, 220, 225, 230, 243, 246, 247, 248, 256, 259, 262, 263, 281, 282, 290, 297, 298, 338, 341, 342, 351, 354, 356, 358, 375, 377, 384, 390, 391

L

legacy control cards 8
locate documentation on Customer Support site 13

M

Maintenance and Administration Subsystem (MAS) 8
Maintenance and Administration Subsystem Processor (MASP) 8
Maintenance Communication Application Processor (MCAP) 9
Maintenance Disk and Alarm (MDAL) 8, 9
MAS 8
MASP 8
MASP cards 8
MDAL card 8
MTP Screening 16

N

npcst parameter 24, 117, 118, 148, 204, 259, 263, 298, 354, 358, 391

P

packaging, documentation 7
pcst parameter 20, 24, 34, 107, 111, 117, 118, 134, 140, 148, 189, 195, 204, 220, 225, 243, 246, 247, 248, 256, 259, 262, 263, 282, 290, 298, 338, 342, 351, 354, 358, 377, 384, 391
printed documentation 7

R

Related Publications 7
Release Notice 7

removable cartridge 8
removable media 9

S

SATA fixed drive, E5-TDM 9
SCCP Screening 16
Spare point code
 14-bit ITU national 20, 24, 34, 105, 107, 111, 116, 117, 118, 132, 134, 140, 146, 148, 187, 189, 195, 202, 204, 219, 220, 225, 230, 243, 246, 247, 248, 256, 259, 262, 263, 281, 282, 290, 297, 298, 338, 341, 342, 351, 354, 356, 358, 375, 377, 384, 390, 391
 ITU international 20, 24, 34, 105, 107, 111, 116, 117, 118, 132, 134, 140, 146, 148, 187, 189, 195, 202, 204, 219, 220, 225, 230, 243, 246, 247, 248, 256, 259, 262, 263, 281, 282, 290, 297, 298, 338, 341, 342, 351, 354, 356, 358, 375, 377, 384, 390, 391

T

TAC Regional Support Office 4
TDM card 8
Terminal Disk Module (TDM) 9
TOPPLE admonishment 3

U

updates, documentation 7
USB port
 flush-mounted 9
 latched 9

W

WARNING admonishment 3