

Oracle® Communications
Diameter Signaling Router
DSR Cloud Disaster Recovery Guide
Release 7.0.1
E64815 Revision 01

June 2015

ORACLE®

Copyright ©2015 Oracle and/or its affiliates. All rights reserved.

This software or hardware and documentation may provide access to or information on content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services..

U.S. GOVERNMENT END USERS: Oracle programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, delivered to U.S. Government end users are "commercial computer software" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, use, duplication, disclosure, modification, and adaptation of the programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, shall be subject to license terms and license restrictions applicable to the programs. No other rights are granted to the U.S. Government.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information on content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services.

My Oracle Support (MOS) (<https://support.oracle.com>) is your initial point of contact for all product support and training needs. A representative at Customer Access Support (CAS) can assist you with MOS registration.

Call the CAS main number at 1-800-223-1711 (toll-free in the US), or call the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html>.

See more information on MOS in the Appendix section

Table of Contents

Table of Contents.....	3
List of Procedures.....	5
List of Tables.....	5
List of Figures.....	5
1.0 Introduction.....	6
1.1 Purpose and Scope.....	6
1.2 References.....	6
1.3 Acronyms.....	7
1.4 Terminology.....	8
1.5 Optional Features.....	9
2.0 General Description.....	10
2.1 Complete Server Outage (All Servers).....	11
2.2 Partial server outage with one NOAM server intact and both SOAMs failed.....	11
2.3 Partial server outage with both NOAM servers failed and one SOAM server intact.....	11
2.4 Partial server outage with NOAM and one SOAM server intact.....	11
2.5 Partial Service outage with corrupt database.....	11
3.0 Procedure Overview.....	12
3.1 Required Materials.....	12
3.2 Disaster Recovery Strategy.....	13
4.0 Procedure Preparation.....	14
5.0 Disaster Recovery Procedure.....	15
5.1 Recovering and Restoring System Configuration.....	16
5.1.1 Recovery Scenario 1 (Complete Server Outage).....	16
5.1.2 Recovery Scenario 2 (Partial Server Outage with one NOAM server intact and both SOAMs failed).....	44
5.1.3 Recovery Scenario 3 (Partial Server Outage with all NOAM servers failed and one SOAM server intact).....	66
5.1.4 Recovery Scenario 4 (Partial Server Outage with one NOAM server and one SOAM server intact).....	83
5.1.5 Recovery Scenario 5 (Database Recovery).....	99
6.0 Resolving User Credential Issues after Database Restore.....	103
6.1 Restoring a Deleted User.....	103
6.2 Keeping a Restored user.....	104
6.3 Removing a Restored User.....	106
6.4 Restoring a Modified User.....	108

6.5 Restoring an Archive that does not contain a Current User.....	108
7.0 IDIH Disaster Recovery.....	112
Appendix A. DSR Database Backup.....	115
Appendix B. Inhibit A and B Level Replication on C-Level Servers.....	119
Appendix C. Un-Inhibit A and B Level Replication on C-Level Servers.....	121
Appendix D. Workarounds for Issues not fixed in this Release.....	123
Appendix E. My Oracle Support (MOS)	125

List of Procedures

Table 1: Acronyms	7
Table 2: Terminology	8
Table 3: Optional Features.....	9
Table 4: Recovery Scenarios	14
Procedure 1: Recovery Scenario 1	16
Procedure 2: Recovery Scenario 2	45
Procedure 3: Recovery Scenario 3	67
Procedure 4: Recovery Scenario 4	84
Procedure 5: Recovery Scenario 5 (Case 1).....	99
Procedure 6: Recovery Scenario 5 (Case 2).....	101
Procedure 7: Keep Restored User	104
Procedure 8: Remove the Restored User	106
Procedure 9: Restoring an Archive that does not Contain a Current User.....	108
Procedure 10: IDIH Disaster Recovery Preparation.....	112
Procedure 11: IDIH Disaster Recovery (Re-Install Mediation and Application Servers)	114
Procedure 12: Restoring an Archive that does not Contain a Current User	115
Procedure 13: Inhibit A and B Level Replication on C-Level Servers	119
Procedure 14: Un-Inhibit A and B Level Replication on C-Level Servers.....	121

List of Tables

Table 1: Acronyms	7
Table 2: Terminology	8
Table 3: Optional Features.....	9
Table 4: Recovery Scenarios	14

List of Figures

Figure 1. Determining Recovery Scenario	13
---	----

1.0 Introduction

1.1 Purpose and Scope

This document is a guide to describe procedures used to execute disaster recovery for DSR 7.0.1 (3-tier deployments). This includes recovery of partial or a complete loss of one or more DSR servers. The audience for this document includes GPS groups such as Software Engineering, Product Verification, Documentation, and Customer Service including Software Operations and First Office Application. This document can also be executed by Oracle customers, as long as Oracle Customer Service personnel are involved and/or consulted. This document provides step-by-step instructions to execute disaster recovery for DSR 7.0.1. Executing this procedure also involves referring to and executing procedures in existing support documents.

Note that components dependent on DSR might need to be recovered as well, for example SDS and IDIH.

1.2 References

- [1] TPD Initial Product Manufacture, E54521-01
- [2] DSR 7.0 PCA Configuration, E58667cd
- [3] DSR Mediation Feature Activation Procedure, E58661
- [4] DSR FABR Feature Activation Procedure, E58664
- [5] DSR RBAR Feature Activation Procedure, E58665
- [6] DSR MAP-Diameter IWF Feature Activation Procedure, E58666
- [7] SDS 5.0.1 Cloud Disaster Recovery Guide, E64817-01
- [8] DSR 7.0.1 Cloud Installation Guide, E64814-01
- [9] Integrated Diameter Intelligence Hub 7.0 Disaster Recovery Procedure, E56375

1.3 Acronyms

Table 1: Acronyms

Acronym	Definition
BIOS	Basic Input Output System
CD	Compact Disk
DSR	Diameter Signaling Router
ESXi	Elastic Sky X Integrated
FABR	Full Address Based Resolution
iDIH	Integrated Diameter Intelligence Hub
IPFE	IP Front End
IWF	Inter Working Function
NAPD	Network Architecture Planning Diagram
OS	Operating System
OVA	Open Virtualization Appliance
PDRA	Policy Diameter Routing Agent
PCA	Policy and Charging Application
RBAR	Range Based Address Resolution
SAN	Storage Area Network
SFTP	Secure File Transfer Protocol
SNMP	Simple Network Management Protocol
TPD	Tekelec Platform Distribution
VM	Virtual Machine

1.4 Terminology

Table 2: Terminology

Base software	Base software includes deploying the VM image.
Failed server	A failed server in disaster recovery context refers to a server that has suffered partial or complete software failure to the extent that it cannot restart or be returned to normal operation and requires intrusive activities to re-install the software.
Software Centric	The business practice of delivering an Oracle software product, while relying upon the customer to procure the requisite hardware components. Oracle provides the hardware specifications, but does not provide the hardware or hardware firmware, and is not responsible for hardware installation, configuration, or maintenance.
Enablement	The business practice of providing support services (hardware, software, documentation, etc) that enable a 3rd party entity to install, configuration, and maintain Oracle products for Oracle customers.

1.5 Optional Features

Further configuration and/or installation steps will need to be taken for optional features that may be present in this deployment. Please refer to these documents for disaster recovery steps needed for their components

Table 3: Optional Features

Feature	Document
Diameter Mediation	DSR Meta Administration Feature Activation Procedure, E58661
Full Address Based Resolution (FABR)	DSR FABR Feature Activation Procedure, E58664
Range Based Address Resolution (RBAR)	DSR RBAR Feature Activation Procedure, E58665
Map-Diameter Interworking (MAP-IWF) –	DSR MAP-Diameter IWF Feature Activation Procedure, E58666
Policy and Charging Application (PCA)	DSR 7.0 PCA Activation and Configuration Procedure, E58667

2.0 General Description

The DSR disaster recovery procedure falls into five basic categories. It is primarily dependent on the state of the NOAM servers and SOAM servers:

Recovery of the entire network from a total outage	<ul style="list-style-type: none">• All NOAM servers failed• All SOAM servers failed• 1 or more MP servers failed
Recovery of one or more servers with at least one NOAM server intact	<ul style="list-style-type: none">• 1 or more NOAM servers intact• 1 or more SOAM or MP servers failed
Recovery of the NOAM pair with one or more SOAM servers intact	<ul style="list-style-type: none">• All NOAM servers failed• 1 or more SOAM servers intact
Recovery of one or more server with at least one NOAM and one SOAM server intact.	<ul style="list-style-type: none">• 1 or more NOAM servers intact• 1 or more SOAM servers intact• 1 SOAM or 1 or more MP servers failed
Recovery of one or more server with corrupt databases that cannot be restored via replication from the active parent node.	

2.1 Complete Server Outage (All Servers)

This is the worst case scenario where all the servers in the network have suffered complete software failure. The servers are recovered using OVA images then restoring database backups to the active NOAM and SOAM servers.

Database backups will be taken from customer offsite backup storage locations (assuming these were performed and stored offsite prior to the outage). If no backup files are available, the only option is to rebuild the entire network from scratch. The network data must be reconstructed from whatever sources are available, including entering all data manually.

2.2 Partial server outage with one NOAM server intact and both SOAMs failed

This case assumes that at least one NOAM servers intact. All SOAM servers have failed and are recovered using OVA images. Database is restored on the SOAM server and replication will recover the database of the remaining servers.

2.3 Partial server outage with both NOAM servers failed and one SOAM server intact

Database is restored on the NOAM and replication will recover the database of the remaining servers.

2.4 Partial server outage with NOAM and one SOAM server intact

The simplest case of disaster recovery is with at least one NOAM and at least one SOAM servers intact. All servers are recovered using base recovery of software. Database replication from the active NOAM and SOAM servers will recover the database to all servers.

2.5 Partial Service outage with corrupt database

Case 1: Database is corrupted, replication channel is inhibited (either manually or because of comcol upgrade barrier) and database backup is available

Case 2: Database is corrupted but replication channel is active

3.0 Procedure Overview

This section lists the materials required to perform disaster recovery procedures and a general overview (disaster recovery strategy) of the procedure executed.

3.1 Required Materials

The following items are needed for disaster recovery:

1. A hardcopy of this document (E57520-02) and hardcopies of all documents in the reference list
2. Hardcopy of all NAPD performed at the initial installation and network configuration of this customer's site. If the NAPD cannot be found, escalate this issue within My Oracle Support (MOS) until the NAPD documents can be located.
3. DSR recent backup files: electronic backup file (preferred) or hardcopy of all DSR configuration and provisioning data.
4. Latest Network Element report: Electronic file or hardcopy of Network Element report.
5. The network element XML file used for the VMs initial configuration.

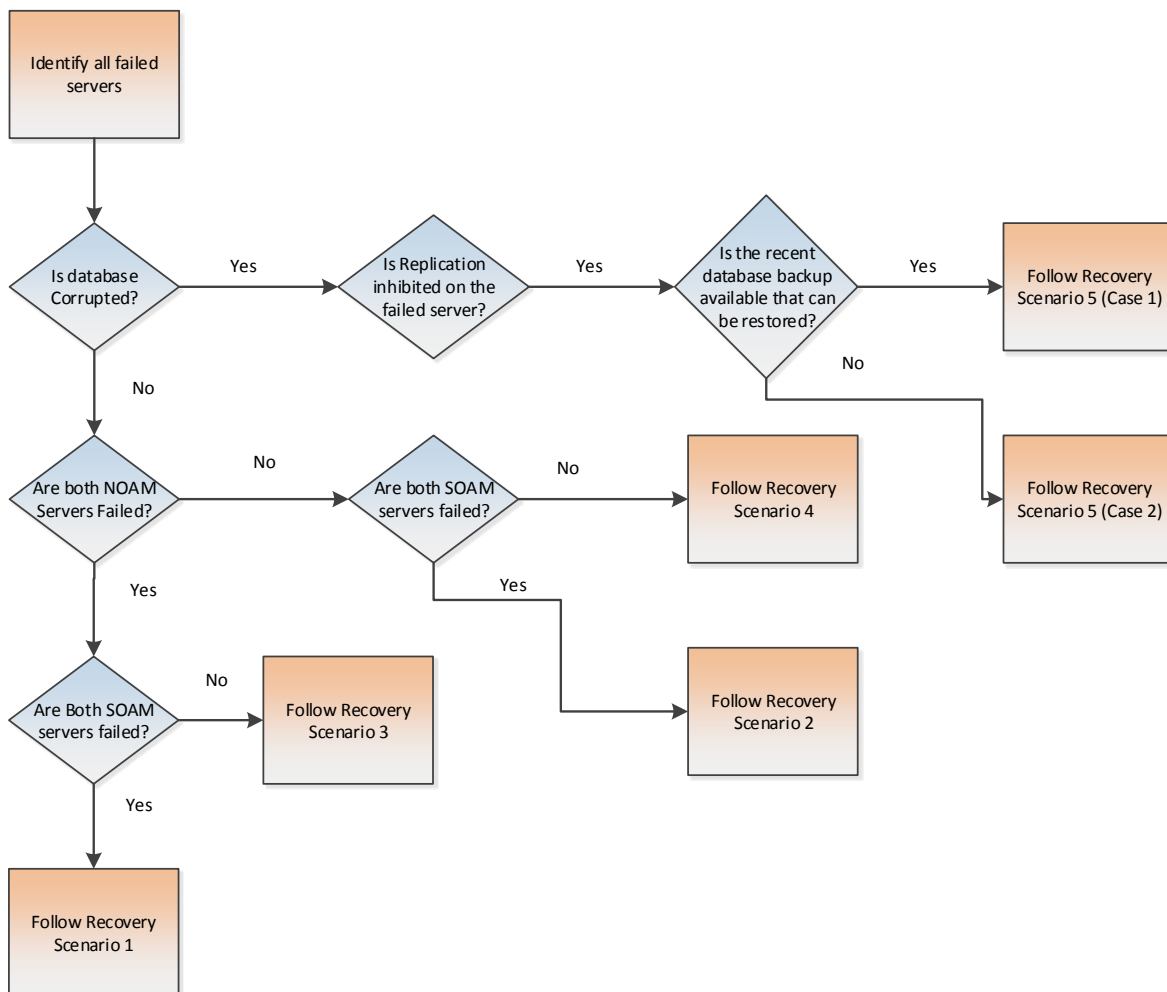
Note: For all Disaster Recovery scenarios, we assume that the NOAM Database backup and the SOAM database backup were performed around the same time, and that no synchronization issues exist among them.

3.2 Disaster Recovery Strategy

Disaster recovery procedure execution is performed as part of a disaster recovery strategy with the basic steps listed below:

1. Evaluate failure conditions in the network and determine that normal operations cannot continue without disaster recovery procedures. This means the failure conditions in the network match one of the failure scenarios described in **section 2.0**.
2. Read and review the content in this document.
3. Gather required materials in **section 3.1** Required Materials
4. From the failure conditions, determine the Recovery Scenario and procedure to follow (using Figure 1. Determining Recovery Scenario).
5. Execute appropriate recovery procedures (listed in section 5.0).

Figure 1. Determining Recovery Scenario



4.0 Procedure Preparation

Disaster recovery procedure execution is dependent on the failure conditions in the network. The severity of the failure determines the recovery scenario for the network. Use Table 4: Recovery Scenarios below to evaluate the correct recovery scenario and follow the procedure(s) listed to restore operations.

Note: A failed server in disaster recovery context refers to a server that has suffered partial or complete software failure to the extent that it cannot restart or be returned to normal operation and requires intrusive activities to re-deploy base software.

Table 4: Recovery Scenarios

Recovery Scenario	Failure Condition	Section
1	<ul style="list-style-type: none"> All NOAM servers failed. All SOAM servers failed. MP servers may or may not be failed. 	Section 5.1.1 Recovery Scenario 1 (Complete Server Outage)
2	<ul style="list-style-type: none"> At least 1 NOAM server is intact and available. All SOAM servers failed. MP servers may or may not be failed. 	Section 0
3	<ul style="list-style-type: none"> All NOAM servers failed. At least 1 SOAM server out of Active, StandBy, Spare is intact and available. MP servers may or may not be failed. 	Section 5.1.3 Recovery Scenario 3 (Partial Server Outage with all NOAM servers failed and one SOAM server intact)
4	<ul style="list-style-type: none"> At least 1 NOAM server is intact and available. At least 1 SOAM server out of Active, StandBy, Spare is intact and available. 1 or more MP servers have failed. 	Section 5.1.4 Recovery Scenario 4 (Partial Server Outage with one NOAM server and one SOAM server intact)
5	<ul style="list-style-type: none"> Server is intact Database gets corrupted on the server Latest Database backup of the corrupt server is present Replication is inhibited (either manually or because of comcol upgrade barrier) 	Section 5.1.5 Recovery Scenario 5 (Database Recovery)

5: Case 1	<ul style="list-style-type: none"> • Server is intact • Database gets corrupted on the server • Replication is occurring to the server with corrupted database 	Section 5.1.5.1 Recovery Scenario 5: Case 1
5: Case 2	<ul style="list-style-type: none"> • Server is intact • Database gets corrupted on the server • Latest Database backup of the corrupt server is NOT present • Replication is inhibited (either manually or because of comcol upgrade barrier) 	Section 5.1.5.2 Recovery Scenario 5: Case 2

5.0 Disaster Recovery Procedure

Call the CAS main number at **1-800-223-1711** (toll-free in the United States), or call the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html> prior to executing this procedure to ensure that the proper recovery planning is performed.

Before disaster recovery, users must properly evaluate the outage scenario. This check ensures that the correct procedures are executed for the recovery.

****** WARNING *******

****** WARNING *******

Note: *Disaster recovery is an exercise that requires collaboration of multiple groups and is expected to be coordinated by the TAC prime. Based on TAC's assessment of Disaster, it may be necessary to deviate from the documented process.*

5.1 Recovering and Restoring System Configuration

Disaster recovery requires configuring the system as it was before the disaster and restoration of operational information. There are 7 distinct procedures to choose from depending on the type of recovery needed. Only one of these should be followed (not all).

5.1.1 Recovery Scenario 1 (Complete Server Outage)

For a complete server outage, NOAM servers are recovered using recovery procedures for software and then executing a database restore to the active NOAM server. All other servers are recovered using recovery procedures for software.

Database replication from the active NOAM server will recover the database on these servers. The major activities are summarized in the list below. Use this list to understand the recovery procedure summary. Do not use this list to execute the procedure. The actual detailed steps are in . The major activities are summarized as follows:

Recover Base software for all VMs:

- Recover the Virtual Machines hosting the NOAMs and SOAMs
- Recover the **Active NOAM** server by recovering the NOAMs base software
- Recover the NOAM database
- Reconfigure the application

Recover the **Standby NOAM** server by recovering base software, for a Non-HA deployment this can be skipped.

- Reconfigure the DSR Application

Recover all SOAM and MP servers by recovering software, In a Non-HA deployment the Standby/Spare SOAM servers can be skipped.

- Recover the SOAM database
- Reconfigure the DSR Application
- Reconfigure the signaling interface and routes on the MPs, the DSR software will automatically reconfigure the signaling interface from the recovered database.

Restart process and re-enable provisioning replication

Note: Any other applications DR recovery actions (SDS and IDIH) may occur in parallel. These actions can/should be worked simultaneously; doing so would allow faster recovery of the complete solution (i.e. stale DB on DP servers will not receive updates until SDS-SOAM servers are recovered).

Procedure 1: Recovery Scenario 1

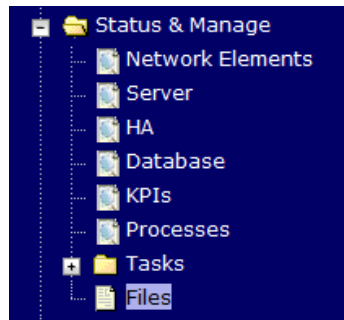
S T E P #	<p>This procedure performs recovery if both NOAM servers are failed and all SOAM servers are failed. This procedure also caters the C-Level Sever failure</p> <p>Check off (√) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, contact Appendix E. My Oracle Support (MOS), and ask for assistance.</p>	
1. <input type="checkbox"/>	Workarounds	Refer to Appendix D. Workarounds for Issues not fixed in this Release to understand any workarounds required during this procedure.
2. <input type="checkbox"/>	Gather Required Materials	Gather the documents and required materials listed in Section 3.1 Required Materials
3. <input type="checkbox"/>	Recover the Failed Software	<ol style="list-style-type: none"> 1. For NOAMPs execute the following procedures from reference [8]: <ol style="list-style-type: none"> a. Procedure 1 "Import DSR OVA" b. Procedure 2 "Configure NOAM guests role based on resource profile" 2. For SOAMPs execute the following procedures from reference [8]: <ol style="list-style-type: none"> c. Procedure 1 "Import DSR OVA" d. Procedure 3 "Configure Remaining DSR guests role based on resource profile" 3. For failed MPs execute the following procedures from reference [8]: <ol style="list-style-type: none"> e. Procedure 1 "Import DSR OVA" f. Procedure 3 "Configure Remaining DSR guests role based on resource profile"
4. <input type="checkbox"/>	Obtain Latest Database Backup and Network Configuration Data.	<p>Obtain the most recent database backup file from external backup sources (ex. file servers) or tape backup sources.</p> <p>From required materials list in Section 3.1 Required Materials; use site survey documents and Network Element report (if available), to determine network configuration data.</p>
5. <input type="checkbox"/>	Execute DSR Installation Procedure for the First NOAM	<p>Verify the networking data for Network Elements</p> <p>Note: Use the backup copy of network configuration data and site surveys (Step 2)</p> <p>Execute installation procedures for the first NOAM server from reference [8]:</p> <p>Procedure 4 "Configure the First NOAMP NE and Server" and</p> <p>Procedure 5 "Configure the NOAMP Server Group".</p>

6. <input type="checkbox"/>	NOAM GUI: Login	<p>Login to the NOAM GUI as the <i>guiadmin</i> user:</p> <p style="text-align: center;">ORACLE®</p> <p>Oracle System Login Fri Mar 20 12:29:52 2015 EDT</p> <div style="border: 1px solid gray; padding: 10px; width: fit-content; margin: 20px auto;"><p style="text-align: center;">Log In</p><p style="text-align: center;">Enter your username and password to log in</p><p>Username: <input type="text" value="guiadmin"/></p><p>Password: <input type="password" value="••••••"/></p><p><input type="checkbox"/> Change password</p><p style="text-align: center;"><input type="button" value="Log In"/></p></div> <p style="text-align: center;">Welcome to the Oracle System Login.</p> <p style="text-align: center;">Unauthorized access is prohibited. This Oracle system requires the use of Microsoft Internet Explorer 8.0, 9.0, or 10.0 with support for JavaScript and cookies.</p> <hr/> <p style="text-align: center;"><small>Oracle and Java are registered trademarks of Oracle Corporation and/or its affiliates. Other names may be trademarks of their respective owners.</small></p>
--------------------------------	---------------------------	---

7.
□

NOAM GUI:
Upload the
Backed up
Database File

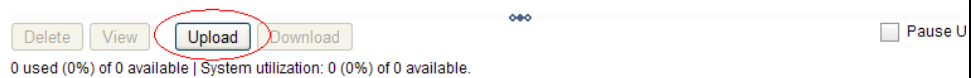
Browse to **Main Menu->Status & Manage->Files**



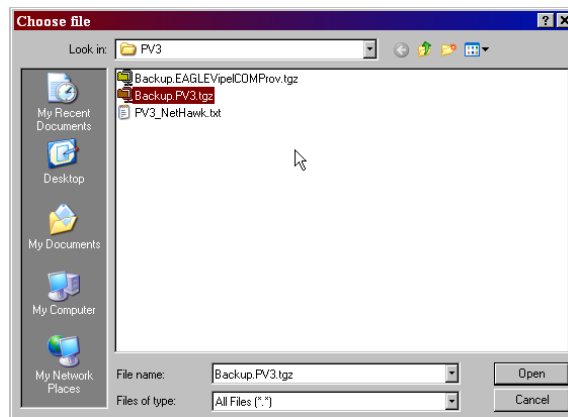
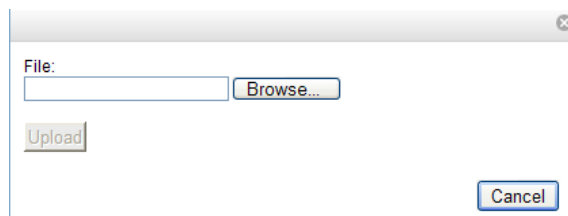
Select the Active NOAM server. The following screen will appear:

File Name	Size	Type	Timestamp
Backup.dsr.Cpa1-NO.Configuration.NETWORK_OAMP.20120321_021501.AUTO.tar	720 KB	tar	2012-03-21 06:15:02 UTC

Click on **Upload** as shown below and select the file *“NO Provisioning and Configuration:”* file backed up after initial installation and provisioning.



Click on **Browse** and locate the backup file and click on Open as shown below.



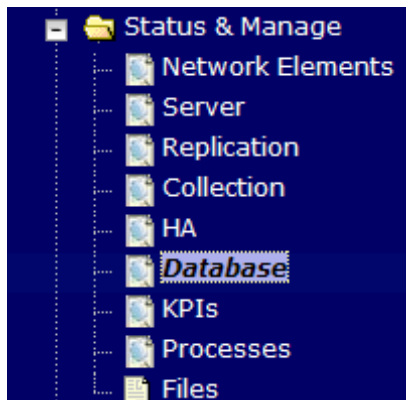
Click on the **Upload** button. The file will take a few seconds to upload depending on the size of the backup data. The file will be visible on the list of entries after the upload is complete.

8.

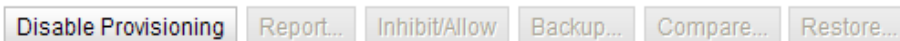


NOAM GUI:
Disable
Provisioning

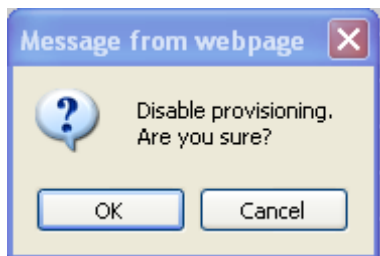
Click on **Main Menu->Status & Manage->Database**



Disable Provisioning by clicking on **Disable Provisioning** button at the bottom of the screen as shown below.



A confirmation window will appear, press **OK** to disable Provisioning.

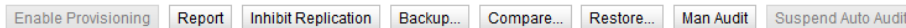


The message *“Warning Code 002”* will appear.

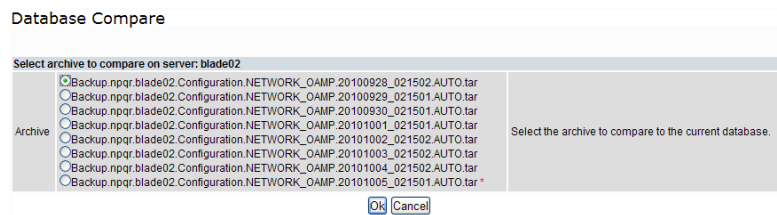
9.
□

NOAM GUI:
Verify the
Archive
Contents and
Database
Compatibility

Select the **Active NOAM** server and click on the **Compare**.

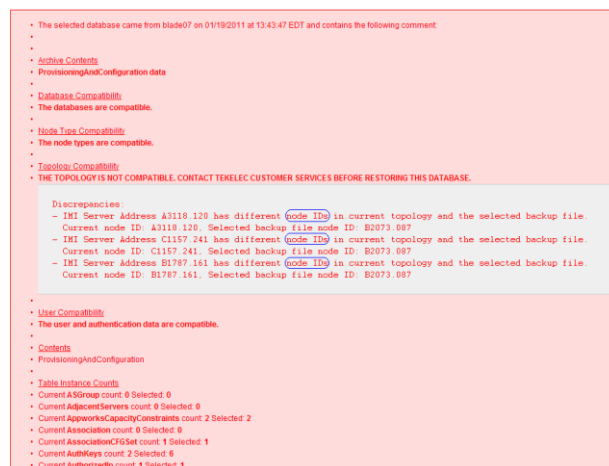


The following screen is displayed; click the button for the restored database file that was uploaded as a part of **Step 13** of this procedure.



Verify that the output window matches the screen below.

Note: You will get a database mismatch regarding the NodeIDs of the VMs. That is expected. If that is the only mismatch, proceed, otherwise stop and contact Appendix E. My Oracle Support (MOS).



Note: Archive Contents and Database Compatibilities must be the following:

- Archive Contents:** Configuration data
- Database Compatibility:** The databases are compatible.

Note: The following is expected Output for Topology Compatibility Check since we are restoring from existing backed up data base to database with just one NOAM:

Topology Compatibility
THE TOPOLOGY SHOULD BE COMPATIBLE MINUS THE NODEID.

Note: We are trying to restore a backed up database onto an empty NOAM database. This is an expected text in Topology Compatibility.

If the verification is successful, Click **BACK** button and continue to **next step** in this procedure.

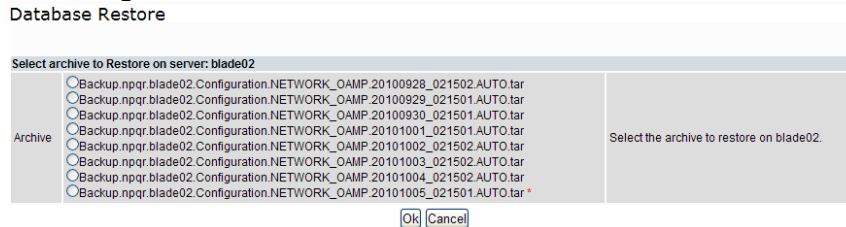
10.

ACTIVE NOAM:
Restore the
Database

Click on **Main Menu->Status & Manage->Database**

Select the **Active NOAM** server, and click on **Restore** as shown below.

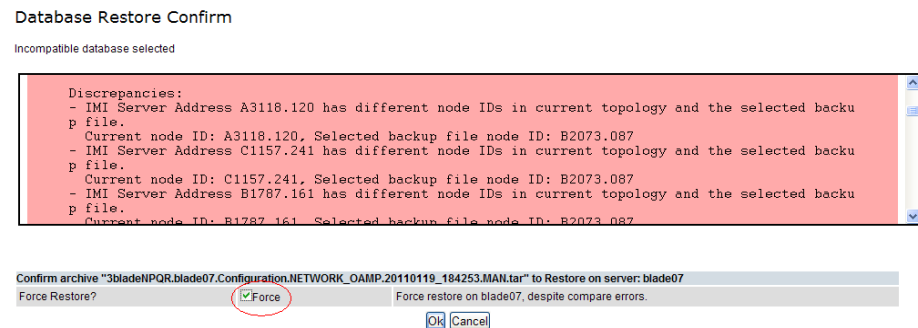
The following screen will be displayed. Select the proper back up provisioning and configuration file.




Click **OK** Button. The following confirmation screen will be displayed.


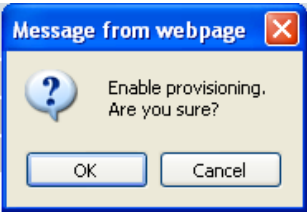
Note: You will get a database mismatch regarding the NodeIDs of the servers. That is expected. If that is the only mismatch, proceed, otherwise stop and contact Appendix E. My Oracle Support (MOS).



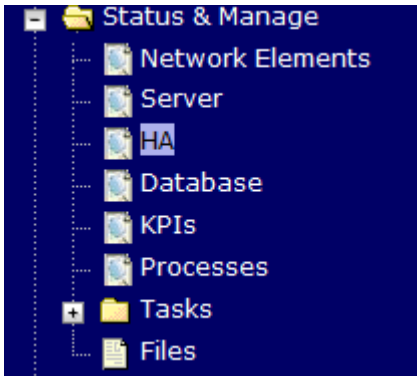
Select the **Force** checkbox as shown above and Click **OK** to proceed with the DB restore.

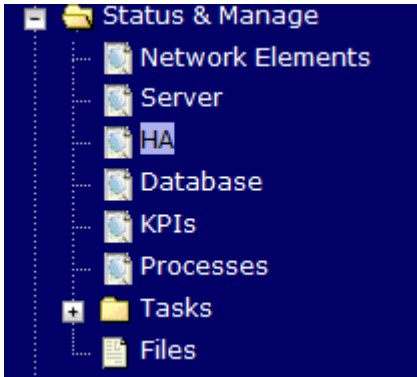
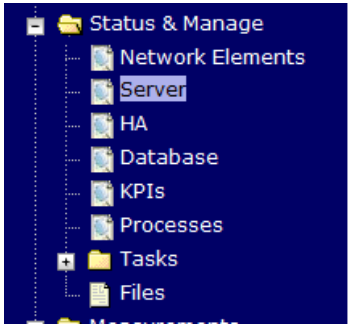
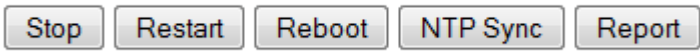


Note: After the restore has started, the user will be logged out of XMI NO GUI since the restored Topology is old data.

<p>11.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Login</p>	<p>Establish a GUI session on the NOAM server by using the VIP IP address of the NOAM server. Open the web browser and enter a URL of:</p> <div style="border: 1px solid black; padding: 2px; width: fit-content; margin: 10px auto;"> <p><code>http://<Primary_NOAM_VIP_IP_Address></code></p> </div> <p>Login as the guiadmin user:</p> <div style="text-align: center;">  <p>The screenshot shows the Oracle System Login interface. At the top is the Oracle logo. Below it is the text 'Oracle System Login' and a timestamp 'Fri Mar 20 12:29:52 2015 EDT'. A central box titled 'Log In' contains the instruction 'Enter your username and password to log in'. There are two input fields: 'Username: guiadmin' and 'Password: ●●●●●●'. Below the password field is a checkbox for 'Change password' and a 'Log In' button. At the bottom of the screenshot, it says 'Welcome to the Oracle System Login.' and a disclaimer: 'Unauthorized access is prohibited. This Oracle system requires the use of Microsoft Internet Explorer 8.0, 9.0, or 10.0 with support for JavaScript and cookies. Oracle and Java are registered trademarks of Oracle Corporation and/or its affiliates. Other names may be trademarks of their respective owners.'</p> </div>
<p>12.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Monitor and Confirm database restoral</p>	<p>Wait for 5-10 minutes for the System to stabilize with the new topology:</p> <p>Monitor the Info tab for “Success”. This will indicate that the backup is complete and the system is stabilized.</p> <p>Following alarms must be ignored for NOAM and MP Servers until all the Servers are configured:</p> <p>Alarms with Type Column as “REPL” , “COLL” , “HA” (with mate NOAM), “DB” (about Provisioning Manually Disabled)</p> <p>Note: Do not pay attention to alarms until all the servers in the system are completely restored.</p> <p>Note: The Configuration and Maintenance information will be in the same state it was backed up during initial backup.</p>
<p>13.</p> <p><input type="checkbox"/></p>	<p>ACTIVE NOAM: Login</p>	<p>Login to the recovered Active NOAM via SSH terminal as admusr user.</p>

14. <input type="checkbox"/>	ACTIVE NOAM: Restore /etc/hosts/ File of the Active NOAM	Execute the following command: <pre>\$ sudo AppWorks AppWorks_AppWorks updateServerAliases <NOAM Host Name></pre>
15. <input type="checkbox"/>	NOAM VIP GUI: Re-enable Provisioning	Navigate to Main Menu->Status & Manage->Database  Click on the Enable Provisioning . A pop-up window will appear to confirm as shown below, press OK . 
16. <input type="checkbox"/>	NOAM VIP GUI: Recover Standby NOAM (OPTIONAL) for Non-HA sites.	NOTE: For Non-HA sites SKIP this step. Install the second NOAM server by executing procedures from reference [8]: Procedure 6 “Configure the Second NOAMP Server” steps 1, 3-7 Procedure 7 “Complete Configuring the NOAMP Server Group” Step 5 Note: If Topology or nodeld alarms are persistent after the database restore, refer to Appendix D. Workarounds for Issues not fixed in this Release or the next step below.
17. <input type="checkbox"/>	ACTIVE NOAM: Topology and nodeld alarm workaround	Get the clusterID of the NO using the following command: <pre>\$ top.myrole myNodeId=A3603.215 myMasterCapable=true</pre> Then update the clusterId field in RecognizedAuthority table to have the same clusterid: <pre>\$ ivi RecognizedAuthority e.g. iload -ha -xU -frecNum -fclusterId -ftimestamp RecognizedAuthority \ <<'!!!!' 0 A1878 1436913769646 !!!!</pre>

<p>18.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Stop Replication to the C-Level Servers of this Site.</p>	<p>Inhibit Replication to the working C Level Servers which belong to the same site as of the failed SOAM servers, as the recovery of Active SOAM will cause the database wipeout in the C level servers because of the replication</p> <p style="text-align: center;">  Execute Appendix B. Inhibit A and B Level  </p> <p>Replication on C-Level Servers</p>
<p>19.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Set HA on Recovery Active SOAM Server</p>	<p>Navigate to Status & Manage -> HA</p>  <p>Click on Edit at the bottom of the screen</p> <p>Set Max Allowed HA Role to Standby</p> <p>Press OK</p>
<p>20.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Recovered Active SOAM Server</p>	<p>Install the SOAM servers by executing procedure from reference [8]:</p> <p>Procedure 9 “Configure the SOAM Servers”, steps 1, 3- 6</p> <p>NOTE: Wait for server to reboot before continuing.</p>

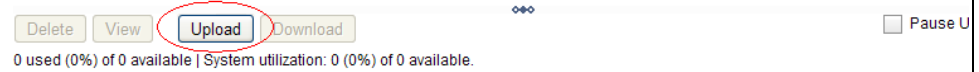
<p>21.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Set HA on Recovered Active SOAM Server</p>	<p>Navigate to Status & Manage -> HA</p>  <p>Click on Edit at the bottom of the screen</p> <p>Set Max Allowed HA Role to Active</p> <p>Press OK</p>
<p>22.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Restart DSR application on Recovered Active SOAM Server</p>	<p>Navigate to Main Menu->Status & Manage->Server,</p>  <p>Select the recovered server and click on Restart.</p> 

23.

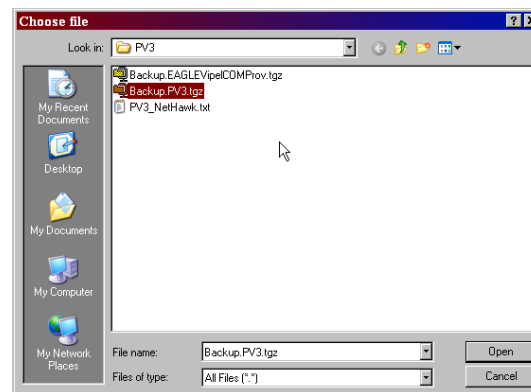
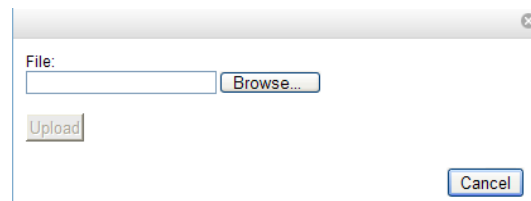
NOAM VIP GUI:
Upload the backed up SOAM Database file

Navigate to **Main Menu->Status & Manage->Files**

Select the **Active SOAM server**. The following screen will appear. Click on Upload as shown below and select the file *“SO Provisioning and Configuration:”* file backed up after initial installation and provisioning.



Click on Browse and Locate the backup file and click on Open as shown below.



Click on the **Upload** button. The file will take a few seconds to upload depending on the size of the backup data. The file will be visible on the list of entries after the upload is complete.

24.

Recovered SOAM GUI:
Login



Establish a GUI session on the recovered SOAM server.
Open the web browser and enter a URL of:

`http://<Recovered_SOAM_IP_Address>`

Login as the *guiadmin* user:



Oracle System Login

Fri Mar 20 12:29:52 2015 EDT

Log In
Enter your username and password to log in

Username:

Password:

Change password

Welcome to the Oracle System Login.

Unauthorized access is prohibited. This Oracle system requires the use of Microsoft Internet Explorer 8.0, 9.0, or 10.0 with support for JavaScript and cookies.

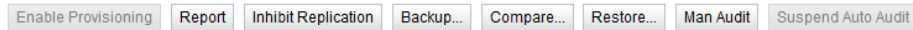
*Oracle and Java are registered trademarks of Oracle Corporation and/or its affiliates.
Other names may be trademarks of their respective owners.*

25.

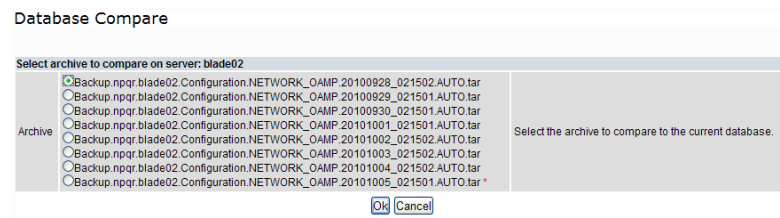
Recovered SOAM GUI:
Verify the Archive Contents and Database Compatibility

Navigate to **Main Menu->Status & Manage->Database**

Select the **Active SOAM** server and click on the **Compare**.

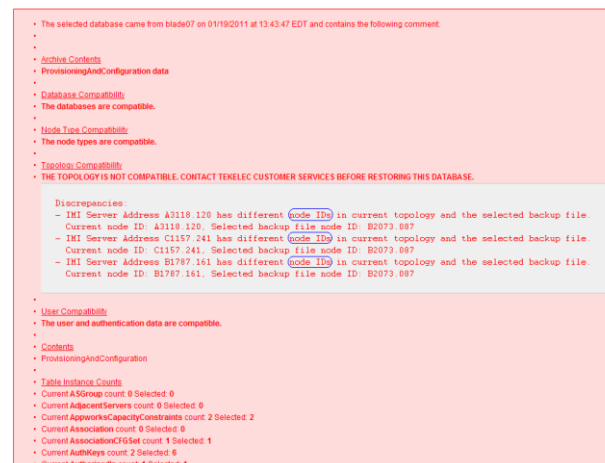


The following screen is displayed; click the button for the restored database file that was uploaded as a part of **Step 13** of this procedure.



Verify that the output window matches the screen below.

Note: You will get a database mismatch regarding the NodeIDs of the VMs. That is expected. If that is the only mismatch, proceed, otherwise stop and contact **Appendix E. My Oracle Support (MOS)**



Note: Archive Contents and Database Compatibilities must be the following:

Archive Contents: Configuration data

Database Compatibility: The databases are compatible.

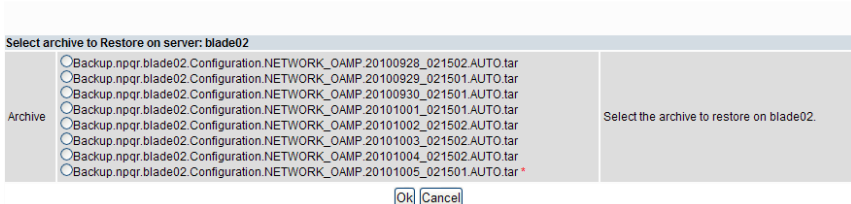
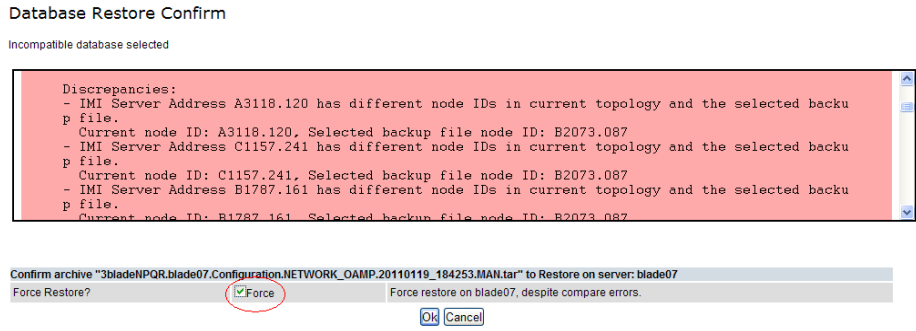
Note: The following is expected Output for Topology Compatibility Check since we are restoring from existing backed up data base to database with just one SOAM:

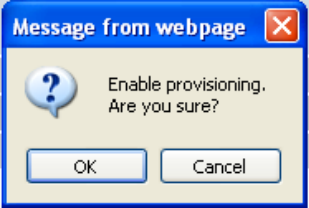

Topology Compatibility

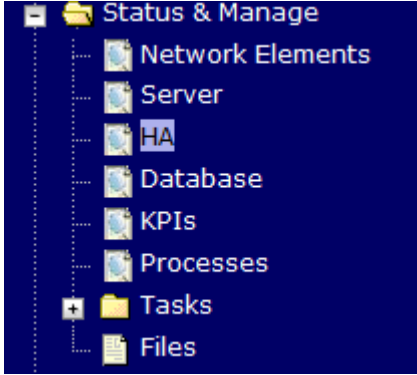
THE TOPOLOGY SHOULD BE COMPATIBLE MINUS THE NODEID.

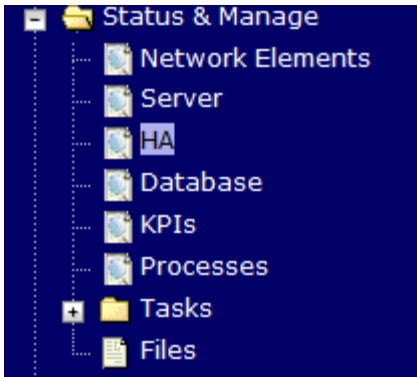
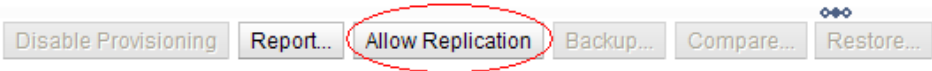
Note: We are trying to restore a backed up database onto an empty SOAM database. This is an expected text in Topology Compatibility.

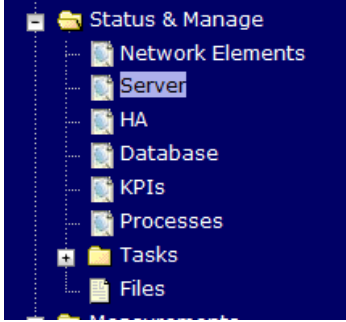
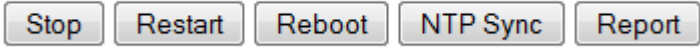
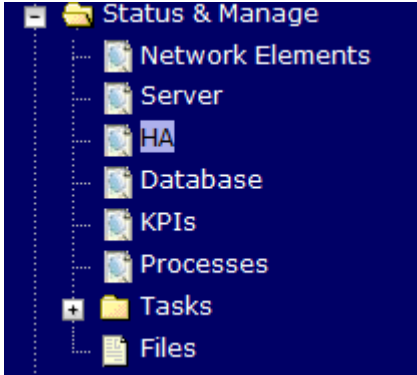
If the verification is successful, Click **BACK** button and continue to **next step** in this procedure.

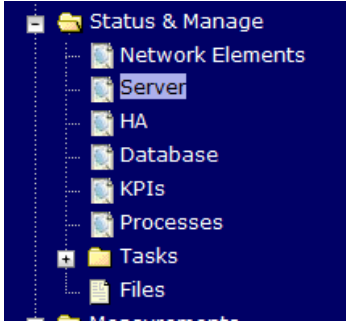
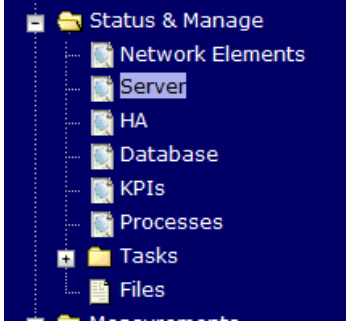
<p>26.</p> <p><input type="checkbox"/></p>	<p>Recovered SOAM GUI: Restore the Database</p>	<p>Click on Main Menu->Status & Manage->Database</p> <p>Select the Active SOAM server, and click on Restore as shown below.</p> <p>The following screen will be displayed. Select the proper back up provisioning and configuration file.</p>  <p>Click OK Button. The following confirmation screen will be displayed.</p> <p>Note: You will get a database mismatch regarding the NodeIDs of the servers. That is expected. If that is the only mismatch, proceed, otherwise stop and contact Appendix E. My Oracle Support (MOS).</p> <p>Select the Force checkbox as shown above and Click OK to proceed with the DB restore.</p>  <p>Note: After the restore has started, the user will be logged out of XMI SOAM GUI since the restored Topology is old data.</p>
<p>27.</p> <p><input type="checkbox"/></p>	<p>Recovered SOAM GUI: Monitor and Confirm database restoral</p>	<p>Wait for 5-10 minutes for the System to stabilize with the new topology:</p> <p>Monitor the Info tab for “Success”. This will indicate that the backup is complete and the system is stabilized.</p> <p>Note: Do not pay attention to alarms until all the servers in the system are completely restored.</p> <p>Note: The Configuration and Maintenance information will be in the same state it was backed up during initial backup.</p>

<p>28.</p> <p><input type="checkbox"/></p>	<p>SOAM VIP GUI: Re-enable Provisioning</p>	<p>Navigate to Main Menu->Status & Manage->Database</p> <p><input type="button" value="Enable Site Provisioning"/> <input type="button" value="Report"/> <input type="button" value="Inhibit/Allow Replication"/> <input type="button" value="Backup..."/> <input type="button" value="C"/></p> <p>Click on the Enable Provisioning. A pop-up window will appear to confirm as shown below, press OK.</p> 
<p>29.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Login</p>	<p>Establish a GUI session on the NOAM server by using the VIP IP address of the NOAM server. Open the web browser and enter a URL of:</p> <p><input type="text" value="http://<Primary_NOAM_VIP_IP_Address>"/></p> <p>Login as the guiadmin user:</p> 

<p>30.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Set HA on remaining SOAM Server(s) (OPTIONAL) for Non-HA sites</p>	<p>NOTE: For Non-HA sites SKIP this step.</p> <p>Navigate to Status & Manage -> HA</p>  <p>Click on Edit at the bottom of the screen</p> <p>Set Max Allowed HA Role to Standby if not already</p> <p>Press OK</p>
<p>31.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Recover remaining SOAM Server (OPTIONAL) for Non-HA sites</p>	<p>NOTE: For Non-HA sites SKIP this step.</p> <p>Install the SOAM servers by executing procedure from reference [8]:</p> <p>Procedure 9 “Configure the SOAM Servers”, steps 1, 3- 6</p> <p>NOTE: Wait for server to reboot before continuing.</p>

<p>32.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Set HA on Recovered Active SOAM Server (OPTIONAL) for Non-HA sites</p>	<p>NOTE: For Non-HA sites SKIP this step.</p> <p>Navigate to Status & Manage -> HA</p>  <p>Click on Edit at the bottom of the screen</p> <p>Set Max Allowed HA Role to Active</p> <p>Press OK</p>
<p>33.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Start Replication on Working C-Level Servers</p>	<p>Un-Inhibit (<i>Start</i>) Replication to the working C-Level Servers which belong to the same site as of the failed SOAM servers.</p> <p>Execute Appendix C. Un-Inhibit A and B Level Replication on C-Level Servers</p> <p>Navigate to Main Menu->Status & Manage->Database</p> <p>If the “<i>Repl Status</i>” is set to “Inhibited”, click on the Allow Replication button as shown below using the following order, otherwise if none of the servers are inhibited, skip this step and continue with the next step:</p> <ul style="list-style-type: none"> • Active NOAM Server • Standby NOAM Server • Active SOAM Server • Standby SOAM Server • Spare SOAM Server (<i>if applicable</i>) • MP/IPFE Servers (<i>if MPs are configured as Active/Standby, start with the Active MP, otherwise the order of the MPs does not matter</i>) • SBRS (<i>if SBR servers are configured, start with the active SBR, then standby, then spare</i>) <p>Verify that the replication on all the working servers is allowed. This can be done by clicking on each server and checking that the button below shows “Inhibit Replication”, and NOT “Allow Replication”.</p> 

<p>34. <input type="checkbox"/></p>	<p>NOAM VIP GUI: Restart DSR application on remaining SOAM Server(s) (OPTIONAL) for Non-HA sites</p>	<p>NOTE: For Non-HA sites SKIP this step.</p> <p>Navigate to Main Menu->Status & Manage->Server,</p>  <p>Select the recovered server and click on Restart.</p> 
<p>35. <input type="checkbox"/></p>	<p>NOAM VIP GUI: Set HA on the Recovered C-Level Server</p>	<p>Navigate to Status & Manage -> HA</p>  <p>Click on Edit at the bottom of the screen</p> <p>Set Max Allowed HA Role to Standby</p> <p>Press OK</p>
<p>36. <input type="checkbox"/></p>	<p>NOAM VIP GUI: Recover the C-Level Server (DA-MP, SBRs, IPFE, SS7-MP)</p>	<p>Execute the following procedures from [8] FOR EACH server that has been recovered:</p> <p>NOTE: Set shared memory to unlimited before continuing. From the console of the recovered C-Level server run “suset -m0”</p> <p>NOTE: The ipfeNetUpdate.sh script needs to be executed if the C-Level server is an IPFE.</p> <p>Procedure 12 “Configure the MP Virtual Machines”, Steps 1, 4-11.</p>

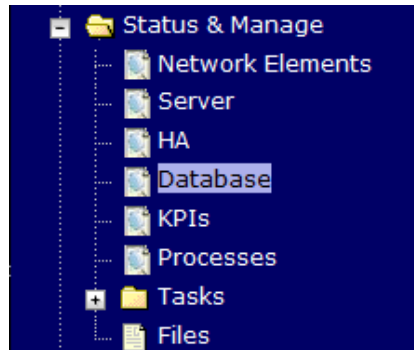
<p>37.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Restart DSR application for Recovered C-Level Server</p>	<p>Navigate to Main Menu->Status & Manage->Server,</p>  <p>Select the recovered server and click on Restart.</p> <p> <input type="button" value="Stop"/> <input type="button" value="Restart"/> <input type="button" value="Reboot"/> <input type="button" value="NTP Sync"/> <input type="button" value="Report"/> </p>
<p>38.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Re-Sync NTP</p>	<p>Navigate to Status & Manage -> Server</p>  <p>Select each server that has been recovered and click NTP Sync.</p> <p> <input type="button" value="Stop"/> <input type="button" value="Restart"/> <input type="button" value="Reboot"/> <input type="button" value="NTP Sync"/> <input type="button" value="Report"/> </p>

39.

NOAM VIP GUI:
Start Replication
on all C-Level
Servers

Un-Inhibit (*Start*) Replication to the **ALL** C-Level Servers

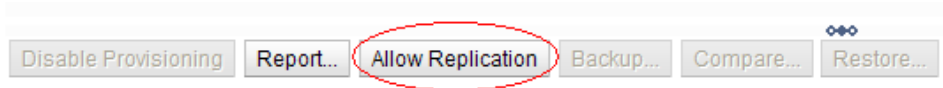
Navigate to **Status & Manage -> Database**

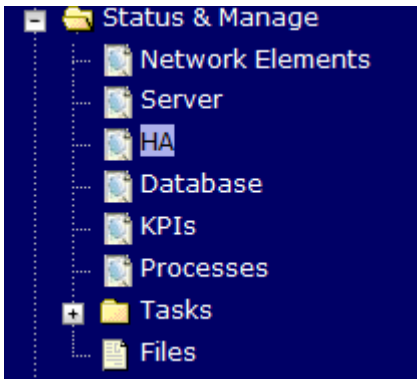


If the “*Repl Status*” is set to “Inhibited”, click on the Allow Replication button as shown below using the following order:

- Active NOAM Server
- Standby NOAM Server
- Active SOAM Server
- Standby SOAM Server
- Spare SOAM Server (*if applicable*)
- MP/IPFE Servers (*if MPs are configured as Active/Standby, start with the Active MP, otherwise the order of the MPs does not matter*)

Verify that the replication on all servers is allowed. This can be done by clicking on each server and checking that the button below shows “Inhibit Replication”, and **NOT** “Allow Replication”.



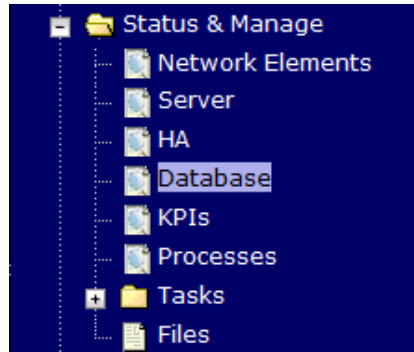
<p>40.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Set HA on all C-Level Servers</p>	<p>Navigate to Status & Manage -> HA</p>  <p>Click on Edit at the bottom of the screen</p> <p>For each server whose Max Allowed HA Role is set to Standby, set it to Active</p> <p>Press OK</p>
<p>41.</p> <p><input type="checkbox"/></p>	<p>Active SOAM: Prepare recovered SOAM for optional feature activation</p>	<p>Establish an SSH session to the Active SOAM, login as admusr.</p> <p>Execute the following command:</p> <pre>\$ irem DsrApplication where "name in ('RBAR', 'FABR', 'PCA', 'MD-IWF', 'DM-IWF', 'CPA', 'GLA')"</pre>
<p>42.</p> <p><input type="checkbox"/></p>	<p>Active SOAM: Verify Preparation</p>	<p>If DSR 7.1, skip this step</p> <p>Execute the following command to verify preparation of optional feature activation:</p> <pre>\$ iqt -z -h -p -fname DsrApplication where "name in ('RBAR', 'FABR', 'PCA', 'MD-IWF', 'DM-IWF', 'CPA', 'GLA')"</pre> <p>Note: There should be no output of this command, if there is, verify the correct entry of the command in step 35.</p>
<p>43.</p> <p><input type="checkbox"/></p>	<p>ACTIVE NOAM: Perform key exchange between the active-NOAM and recovered servers.</p>	<p>Establish an SSH session to the Active NOAM, login as admusr.</p> <p>Execute the following command to perform a keyexchange from the active NOAM to each recovered server:</p> <pre>\$ keyexchange admusr@<Recovered Server Hostname></pre> <p>Note: If an export server is configured, perform this step.</p>
<p>44.</p> <p><input type="checkbox"/></p>	<p>ACTIVE NOAM: Activate Optional Features</p>	<p>Establish an SSH session to the active NOAM, login as admusr.</p> <p>Refer to section 1.5 Optional Features to activate any features that were previously activated.</p>

45.



NOAM VIP GUI:
Fetch and Store
the database
Report for the
Newly Restored
Data and Save it

Navigate to **Main Menu->Status & Manage->Database**



Select the **active** NOAM server and click on the **Report** button at the bottom of the page. The following screen is displayed:

Main Menu: Status & Manage -> Database [Report]

Tue Oct 05 15:13:38 2010 UTC

```

-----
N P Q R Database Status Report
-----
Report Generated: Tue Oct 05 15:13:38 2010 UTC
From: Active Network OAM&P on host blade07
Report Version: 3.0.13-3.0.0_10.13.0
User: guidadmin
-----

General
-----
Hostname           : blade07
Appworks Database Version : 3.0
Application Database Version :

Capacities and Utilization
-----
Disk Utilization  0.6%: 249M used of 40G total, 38G available
Memory Utilization 0.6%: 136M used of 23975M total, 23839M available

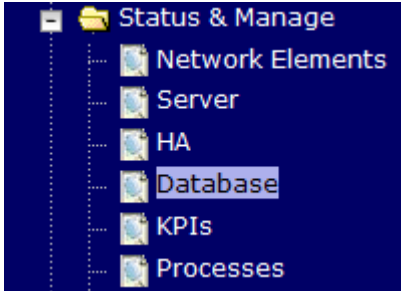
Alarms
-----
None

Maintenance in Progress
-----
Restore operation success

Service Information
-----
Part: A_NpqrProvPart
-----
Table Name      Row Size  Num      Memory      Disk
Schema  Avg  Max  Rows  Used / Alloc  Used / Alloc
-----
CgPa          44          1    44 B    44 B    44 B
CgPaGta       52          0     0 B     0 B     0 B
CgPaInfo      64          1    64 B    64 B    64 B
CgPaOpc       36          0     0 B     0 B     0 B
CountryCode   24          306  7344 B  7344 B  7344 B
GTConfig      52          2   104 B   104 B   104 B
McMmc         40          0     0 B     0 B     0 B
Msidn         52          0     0 B     0 B     0 B
Msrn          68          0     0 B     0 B     0 B
NpqrNeOptions 276          0     0 B     0 B     0 B
-----

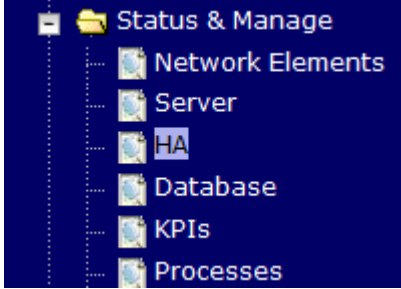
```

Click on **Save** and save the report to your local machine.

<p>46.</p> <p><input type="checkbox"/></p>	<p>ACTIVE NOAM: Verify Replication Between Servers.</p>	<p>Login to the Active NOAM via SSH terminal as admusr user. Execute the following command:</p> <pre>\$ sudo irepstat -m</pre> <p>Output like below shall be generated:</p> <pre>-- Policy 0 ActStb [DbReplication] ----- ----- RDU06-MP1 -- Stby BC From RDU06-SO1 Active 0 0.50 ^0.17%cpu 42B/s A=none CC From RDU06-MP2 Active 0 0.10 ^0.17 0.88%cpu 32B/s A=none RDU06-MP2 -- Active BC From RDU06-SO1 Active 0 0.50 ^0.10%cpu 33B/s A=none CC To RDU06-MP1 Active 0 0.10 0.08%cpu 20B/s A=none RDU06-NO1 -- Active AB To RDU06-SO1 Active 0 0.50 1%R 0.03%cpu 21B/s RDU06-SO1 -- Active AB From RDU06-NO1 Active 0 0.50 ^0.04%cpu 24B/s BC To RDU06-MP1 Active 0 0.50 1%R 0.04%cpu 21B/s BC To RDU06-MP2 Active 0 0.50 1%R 0.07%cpu 21B/s</pre>																																																																																								
<p>47.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Verify the Database states</p>	<p>Click on Main Menu->Status and Manager->Database</p>  <p>Verify that the “OAM Max HA Role” is either “Active” or “Standby” for NOAM and SOAM and “Application Max HA Role” for MPs is “Active”, and that the status is “Normal” as shown below:</p> <table border="1" data-bbox="488 1394 1438 1593"> <thead> <tr> <th>Network Element</th> <th>Server</th> <th>Role</th> <th>OAM Max HA Role</th> <th>Application Max HA Role</th> <th>Status</th> <th>DB Level</th> <th>OAM Repl Status</th> <th>SIG Repl Status</th> <th>Repl Status</th> <th>Repl Audit Status</th> </tr> </thead> <tbody> <tr> <td>NO_10303</td> <td>NO2</td> <td>Network OAM&P</td> <td>Active</td> <td>OOS</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>NotApplicabl</td> <td>Allowed</td> <td>AutoInProg</td> </tr> <tr> <td>SO_10303</td> <td>PSBR</td> <td>MP</td> <td>Active</td> <td>Active</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>Normal</td> <td>Allowed</td> <td>AutoInProg</td> </tr> <tr> <td>SO_10303</td> <td>MP2</td> <td>MP</td> <td>Active</td> <td>Active</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>Normal</td> <td>Allowed</td> <td>AutoInProg</td> </tr> <tr> <td>SO_10303</td> <td>SO1</td> <td>System OAM</td> <td>Standby</td> <td>OOS</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>NotApplicabl</td> <td>Allowed</td> <td>AutoInProg</td> </tr> <tr> <td>NO_10303</td> <td>NO1</td> <td>Network OAM&P</td> <td>Standby</td> <td>OOS</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>NotApplicabl</td> <td>Allowed</td> <td>AutoInProg</td> </tr> <tr> <td>SO_10303</td> <td>IPFE</td> <td>MP</td> <td>Active</td> <td>OOS</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>Normal</td> <td>Allowed</td> <td>AutoInProg</td> </tr> <tr> <td>SO_10303</td> <td>SO2</td> <td>System OAM</td> <td>Active</td> <td>OOS</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>NotApplicabl</td> <td>Allowed</td> <td>AutoInProg</td> </tr> </tbody> </table>	Network Element	Server	Role	OAM Max HA Role	Application Max HA Role	Status	DB Level	OAM Repl Status	SIG Repl Status	Repl Status	Repl Audit Status	NO_10303	NO2	Network OAM&P	Active	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg	SO_10303	PSBR	MP	Active	Active	Normal	0	Normal	Normal	Allowed	AutoInProg	SO_10303	MP2	MP	Active	Active	Normal	0	Normal	Normal	Allowed	AutoInProg	SO_10303	SO1	System OAM	Standby	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg	NO_10303	NO1	Network OAM&P	Standby	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg	SO_10303	IPFE	MP	Active	OOS	Normal	0	Normal	Normal	Allowed	AutoInProg	SO_10303	SO2	System OAM	Active	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg
Network Element	Server	Role	OAM Max HA Role	Application Max HA Role	Status	DB Level	OAM Repl Status	SIG Repl Status	Repl Status	Repl Audit Status																																																																																
NO_10303	NO2	Network OAM&P	Active	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg																																																																																
SO_10303	PSBR	MP	Active	Active	Normal	0	Normal	Normal	Allowed	AutoInProg																																																																																
SO_10303	MP2	MP	Active	Active	Normal	0	Normal	Normal	Allowed	AutoInProg																																																																																
SO_10303	SO1	System OAM	Standby	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg																																																																																
NO_10303	NO1	Network OAM&P	Standby	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg																																																																																
SO_10303	IPFE	MP	Active	OOS	Normal	0	Normal	Normal	Allowed	AutoInProg																																																																																
SO_10303	SO2	System OAM	Active	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg																																																																																

48. **NOAM VIP GUI:** Verify the HA Status

Click on **Main Menu->Status and Manage->HA**

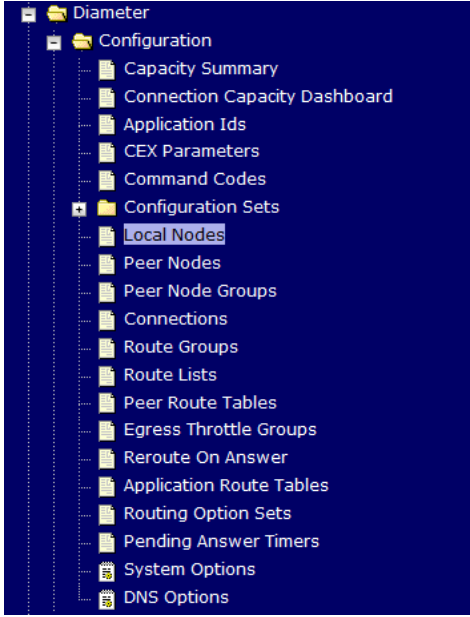


Select the row for all of the servers
Verify that the “HA Role” is either “Active” or “Standby”.

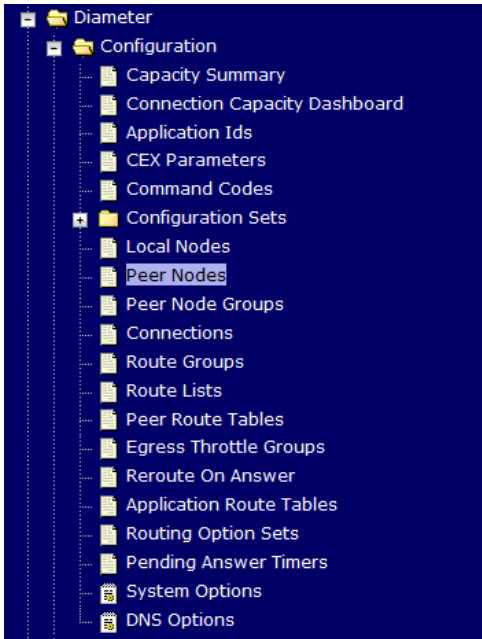
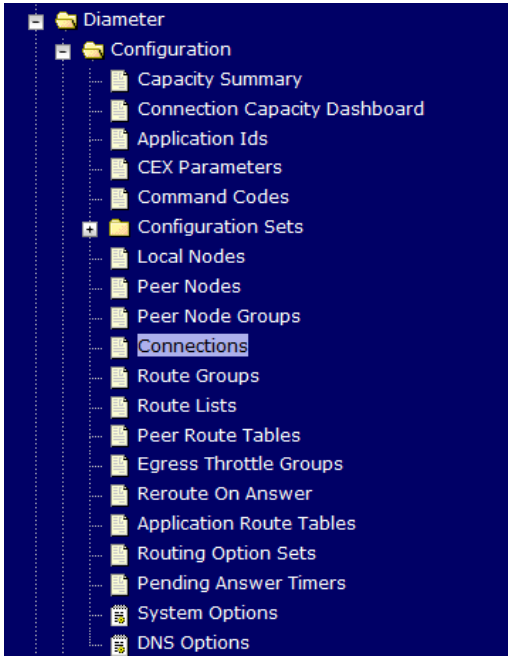
Hostname	OAM Max HA Role	Application Max HA Role	Max Allowed HA Role	Mate Hostname List	Network Element	Server Role	Active VIPs
NO2	Active	OOS	Active	NO1	NO_10303	Network OAM&P	10.240.70.132
SO1	Standby	OOS	Active	SO2	SO_10303	System OAM	
SO2	Active	OOS	Active	SO1	SO_10303	System OAM	10.240.70.133
MP1	Standby	Active	Active	MP2	SO_10303	MP	
MP2	Active	Active	Active	MP1	SO_10303	MP	
IPFE	Active	OOS	Active		SO_10303	MP	

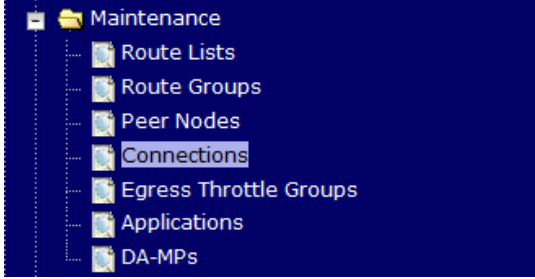
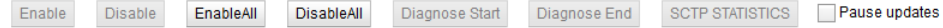
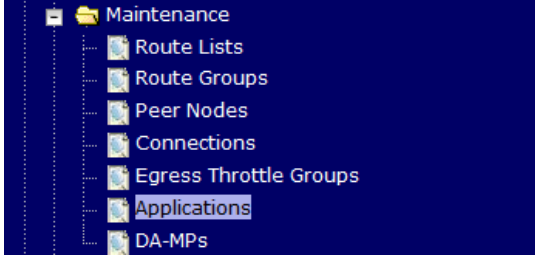
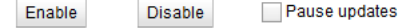
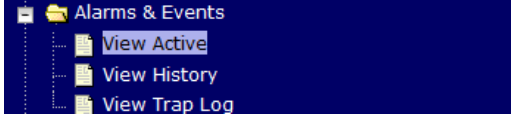
49. **SOAM VIP GUI:** Verify the Local Node Info

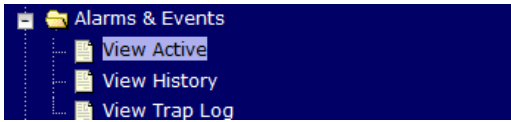
Navigate to **Main Menu->Diameter->Configuration->Local Node**



Verify that all the local nodes are shown.

<p>50.</p> <p><input type="checkbox"/></p>	<p>SOAM VIP GUI: Verify the Peer Node Info</p>	<p>Navigate to Main Menu->Diameter->Configuration->Peer Node</p>  <p>Verify that all the peer nodes are shown.</p>
<p>51.</p> <p><input type="checkbox"/></p>	<p>SOAM VIP GUI: Verify the Connections Info</p>	<p>Navigate to Main Menu->Diameter->Configuration->Connections</p>  <p>Verify that all the connections are shown.</p>

<p>52.</p> <p><input type="checkbox"/></p>	<p>SOAM VIP GUI: Enable Connections if needed</p>	<p>Navigate to Main Menu->Diameter->Maintenance->Connections</p>  <p>Select each connection and click on the Enable button. Alternatively you can enable all the connections by selecting the EnableAll button.</p>  <p>Verify that the Operational State is Available.</p>
<p>53.</p> <p><input type="checkbox"/></p>	<p>SOAM VIP GUI: Enable Optional Features</p>	<p>Navigate to Main Menu -> Diameter -> Maintenance -> Applications</p>  <p>Select the optional feature application configured in step 42.</p> <p>Click the Enable button.</p> 
<p>54.</p> <p><input type="checkbox"/></p>	<p>SOAM VIP GUI: Examine All Alarms</p>	<p>Navigate to Main Menu->Alarms & Events->View Active</p>  <p>Examine all active alarms and refer to the on-line help on how to address them.</p> <p>If needed contact Appendix E. My Oracle Support (MOS).</p>

<p>55.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Examine All Alarms</p>	<p>Login to the NOAM VIP if not already logged in.</p> <p>Navigate to Main Menu->Alarms & Events->View Active</p>  <p>Examine all active alarms and refer to the on-line help on how to address them.</p> <p>If needed contact Appendix E. My Oracle Support (MOS).</p>
<p>56.</p> <p><input type="checkbox"/></p>	<p>Restore GUI Usernames and Passwords</p>	<p>If applicable, Execute steps in Section 6.0 to recover the user and group information restored.</p>
<p>57.</p> <p><input type="checkbox"/></p>	<p>Backup and Archive All the Databases from the Recovered System</p>	<p>Execute Appendix A. DSR Database Backup to back up the Configuration databases:</p>

5.1.2 Recovery Scenario 2 (Partial Server Outage with one NOAM server intact and both SOAMs failed)

For a partial server outage with an NOAM server intact and available; SOAM servers are recovered using recovery procedures for software and then executing a database restore to the active SOAM server using a database backup file obtained from the SOAM servers. All other servers are recovered using recovery procedures for software. Database replication from the active NOAM server will recover the database on these servers. The major activities are summarized in the list below. Use this list to understand the recovery procedure summary. Do not use this list to execute the procedure. The actual procedures' detailed steps are in **Procedure 2**. The major activities are summarized as follows:

Recover **Standby NOAM** server (*if needed*) by recovering software and the database.

- Recover the software.


Recover **Active SOAM** server by recovering software.

- Recover the software.
- Recover the Database.

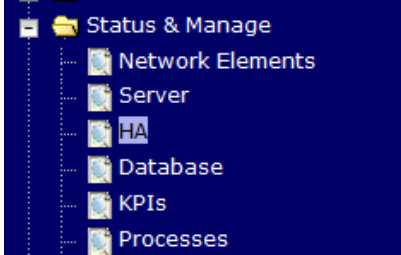
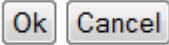
Recover any failed **SOAM and MP** servers by recovering software.

- Recover the software.
- The database has already been restored at the active SOAM server and does not require restoration at the SO and MP servers.


Procedure 2: Recovery Scenario 2

<p>S T E P #</p>	<p>This procedure performs recovery if at least 1 NOAM server is available but all SOAM servers in a site have failed. This includes any SOAM server that is in another location.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, contact Appendix E. My Oracle Support (MOS), and ask for assistance.</p>	
<p>1. <input type="checkbox"/></p>	<p>Workarounds</p>	<p>Refer to Appendix D. Workarounds for Issues not fixed in this Release to understand any workarounds required during this procedure.</p>
<p>2. <input type="checkbox"/></p>	<p>Gather Required Materials</p>	<p>Gather the documents and required materials listed in Section 3.1 Required Materials</p>
<p>3. <input type="checkbox"/></p>	<p>NOAM VIP GUI: Login</p>	<p>Establish a GUI session on the NOAM server by using the VIP IP address of the NOAM server. Open the web browser and enter a URL of:</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p><code>http://<Primary_NOAM_VIP_IP_Address></code></p> </div> <p>Login as the <i>guiadmin</i> user:</p> <div style="text-align: center; margin: 20px 0;">  </div> <div style="text-align: center;"> <p>Oracle System Login Fri Mar 20 12:29:52 2015 EDT</p> <hr style="width: 50%; margin: 0 auto;"/> <div style="border: 1px solid gray; padding: 10px; width: fit-content; margin: 10px auto;"> <p style="text-align: center;">Log In</p> <p style="text-align: center;">Enter your username and password to log in</p> <p>Username: <input type="text" value="guiadmin"/></p> <p>Password: <input type="password" value="••••••"/></p> <p style="text-align: center;"><input type="checkbox"/> Change password</p> <p style="text-align: center;"><input type="button" value="Log In"/></p> </div> <p style="text-align: center; font-size: small;">Welcome to the Oracle System Login.</p> <p style="text-align: center; font-size: x-small;">Unauthorized access is prohibited. This Oracle system requires the use of Microsoft Internet Explorer 8.0, 9.0, or 10.0 with support for JavaScript and cookies.</p> <hr style="width: 50%; margin: 0 auto;"/> <p style="text-align: center; font-size: x-small;">Oracle and Java are registered trademarks of Oracle Corporation and/or its affiliates. Other names may be trademarks of their respective owners.</p> </div>



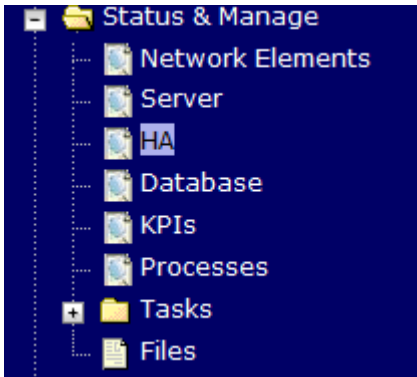
Procedure 2: Recovery Scenario 2

<p>4. <input type="checkbox"/></p>	<p>Active NOAM: Set Failed Servers to Standby</p>	<p>Navigate to Main Menu -> Status & Manage -> HA</p>  <p>Select Edit</p> <p>Set the Max Allowed HA Role drop down box to Standby for the failed servers.</p> <p>Select Ok</p> 
<p>5. <input type="checkbox"/></p>	<p>Create VMs Recover the Failed Software</p>	<ol style="list-style-type: none"> 1. For NOAMPs execute the following procedures from reference [8]: <ol style="list-style-type: none"> a. Procedure 1 "Import DSR OVA" b. Procedure 2 "Configure NOAM guests role based on resource profile" 2. For SOAMPs execute the following procedures from reference [8]: <ol style="list-style-type: none"> c. Procedure 1 "Import DSR OVA" d. Procedure 3 "Configure Remaining DSR guests role based on resource profile"
<p>6. <input type="checkbox"/></p>	<p>Repeat for Remaining Failed Servers</p>	<p>If necessary, repeat step 5 for all remaining failed servers.</p>

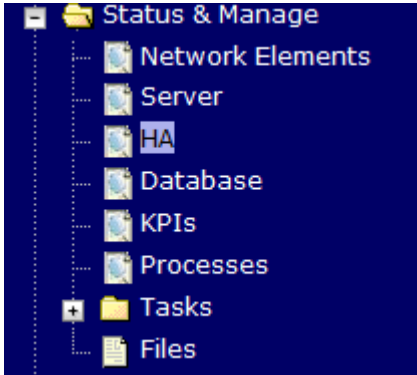
Procedure 2: Recovery Scenario 2

<p>7.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Login</p>	<p>Establish a GUI session on the NOAM server by using the VIP IP address of the NOAM server. Open the web browser and enter a URL of:</p> <div style="border: 1px solid black; padding: 2px; margin: 10px 0;"> <p><code>http://<Primary_NOAM_VIP_IP_Address></code></p> </div> <p>Login as the <i>guiadmin</i> user:</p> 
<p>8.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Recover Standby NOAM</p>	<p>Install the second NOAM server by executing procedures from reference [8]:</p> <p>Procedure 6 “Configure the Second NOAMP Server” steps 1, 3-7</p> <p>Procedure 7 “Complete Configuring the NOAMP Server Group” Step 5</p> <p>Note: If Topology or nodeld alarms are persistent after the database restore, refer to Appendix D. Workarounds for Issues not fixed in this Release or the next step below.</p>

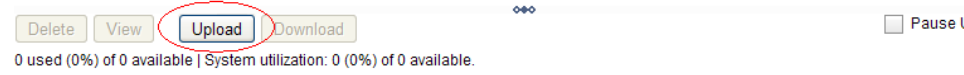
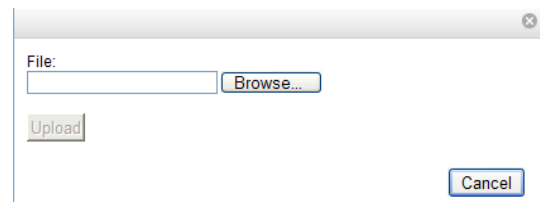
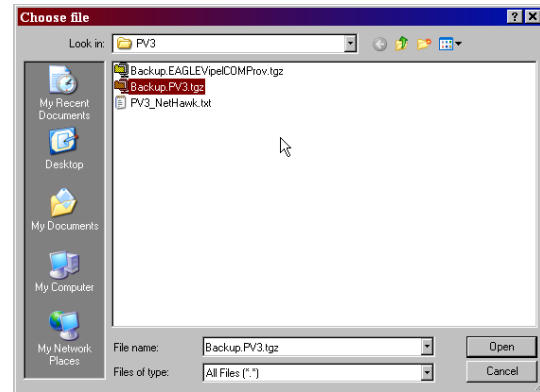
Procedure 2: Recovery Scenario 2

<p>9.</p> <p><input type="checkbox"/></p>	<p>ACTIVE NOAM: Topology and nodeId alarm workaround</p>	<p>Get the clusterID of the NO using the following command:</p> <pre style="border: 1px solid black; padding: 5px;">\$ top.myrole myNodeId=A3603.215 myMasterCapable=true</pre> <p>Then update the clusterId field in RecognizedAuthority table to have the same clusterid:</p> <pre style="border: 1px solid black; padding: 5px;">\$ ivi RecognizedAuthority e.g. iload -ha -xU -frecNum -fclusterId -ftimestamp RecognizedAuthority \ <<'!!!!'</pre> <pre style="border: 1px solid black; padding: 5px;">0 A1878 1436913769646 !!!!</pre>
<p>10.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Stop Replication to the C-Level Servers of this Site.</p>	<p>Inhibit Replication to the working C Level Servers which belong to the same site as the failed SOAM servers, as the recovery of Active SOAM will cause the database wipeout in the C level servers because of the replication</p> <p style="text-align: center;"> Execute Appendix B. Inhibit A and B Level</p> <p style="text-align: center;">Replication on C-Level Servers </p>
<p>11.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Set HA on Recovery Active SOAM Server</p>	<p>Navigate to Status & Manage -> HA</p>  <p>Click on Edit at the bottom of the screen</p> <p>Set Max Allowed HA Role to Standby</p> <p>Press OK</p>

Procedure 2: Recovery Scenario 2

12. <input type="checkbox"/>	NOAM VIP GUI: Recovered Active SOAM Server	Install the SOAM servers by executing procedure from reference [8]: Procedure 9 “Configure the SOAM Servers”, steps 1, 3- 6 NOTE: Wait for server to reboot before continuing.
13. <input type="checkbox"/>	NOAM VIP GUI: Set HA on Recovered Active SOAM Server	Navigate to Status & Manage -> HA  Click on Edit at the bottom of the screen Set Max Allowed HA Role to Active Press OK

Procedure 2: Recovery Scenario 2

<p>14. <input type="checkbox"/></p>	<p>NOAM VIP GUI: Upload the backed up SOAM Database file</p>	<p>Navigate to Main Menu->Status & Manage->Files</p> <p>Select the Active SOAM server. The following screen will appear. Click on Upload as shown below and select the file “SO Provisioning and Configuration:” file backed up after initial installation and provisioning.</p>  <p>Click on Browse and Locate the backup file and click on Open as shown below.</p>   <p>Click on the Upload button.</p> <p>The file will take a few seconds to upload depending on the size of the backup data. The file will be visible on the list of entries after the upload is complete.</p>
-------------------------------------	---	---

Procedure 2: Recovery Scenario 2

15.

Recovered SOAM GUI:
Login

Establish a GUI session on the recovered SOAM server.
Open the web browser and enter a URL of:

`http://<Recovered_SOAM_IP_Address>`

Login as the *guiadmin* user:



Oracle System Login

Fri Mar 20 12:29:52 2015 EDT

Log In
Enter your username and password to log in

Username:

Password:

Change password

Welcome to the Oracle System Login.

Unauthorized access is prohibited. This Oracle system requires the use of Microsoft Internet Explorer 8.0, 9.0, or 10.0 with support for JavaScript and cookies.

*Oracle and Java are registered trademarks of Oracle Corporation and/or its affiliates.
Other names may be trademarks of their respective owners.*

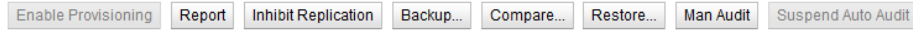
Procedure 2: Recovery Scenario 2

16.

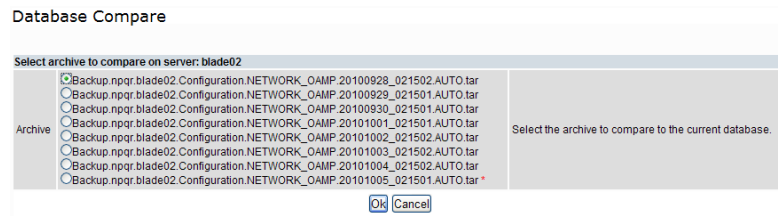
Recovered SOAM GUI:
Verify the Archive Contents and Database Compatibility

Navigate to **Main Menu->Status & Manage->Database**

Select the **Active SOAM** server and click on the **Compare**.

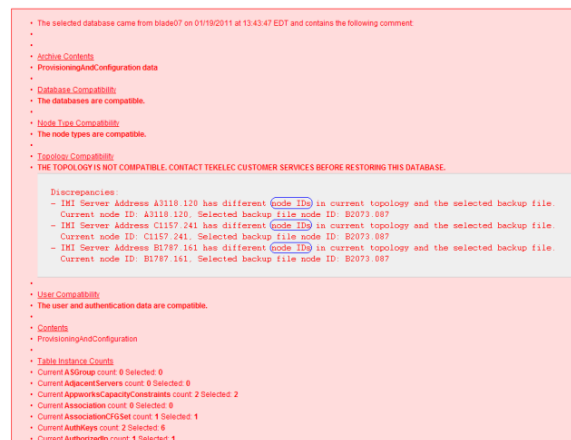


The following screen is displayed; click the button for the restored database file that was uploaded as a part of **Step 19** of this procedure.



Verify that the output window matches the screen below.

Note: You will get a database mismatch regarding the NodeIDs of the VMs. That is expected. If that is the only mismatch, proceed, otherwise stop and contact **Appendix E. My Oracle Support (MOS)**



Note: Archive Contents and Database Compatibilities must be the following:

Archive Contents: Configuration data

Database Compatibility: The databases are compatible.

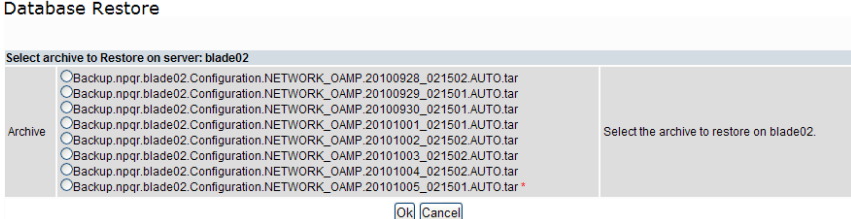
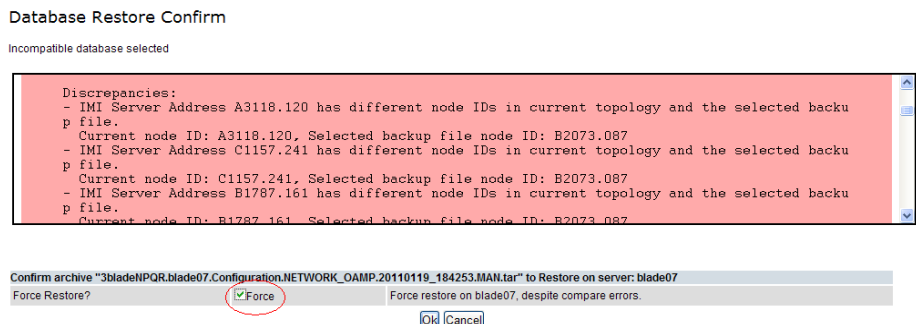
Note: The following is expected Output for Topology Compatibility Check since we are restoring from existing backed up data base to database with just one SOAM:


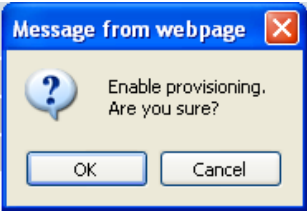
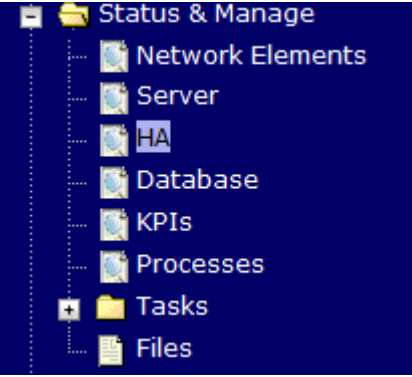
Topology Compatibility

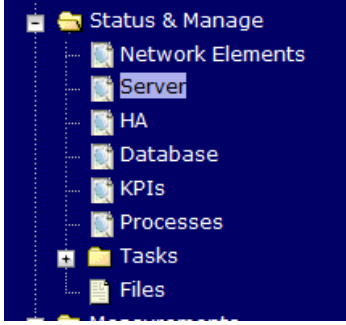
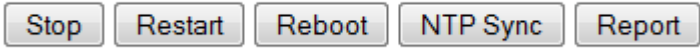
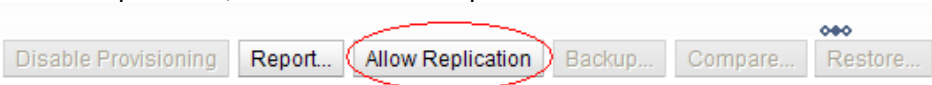
THE TOPOLOGY SHOULD BE COMPATIBLE MINUS THE NODEID.

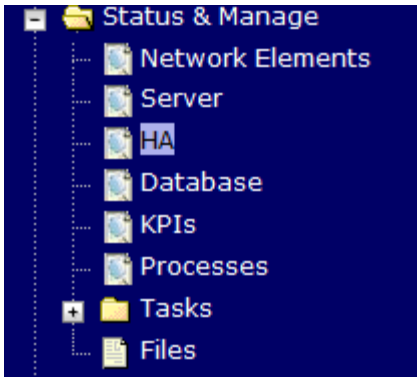
Note: We are trying to restore a backed up database onto an empty SOAM database. This is an expected text in Topology Compatibility. If the verification is successful, Click **BACK** button and continue to **next step** in this procedure.

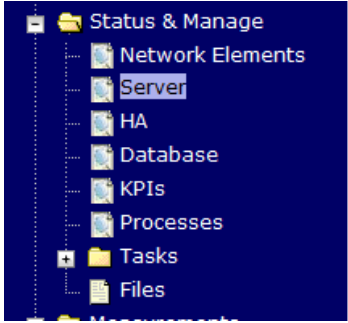
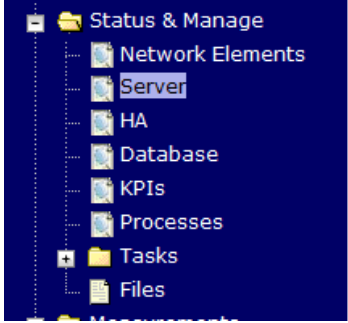
Procedure 2: Recovery Scenario 2

<p>17.</p> <p><input type="checkbox"/></p>	<p>Recovered SOAM GUI: Restore the Database</p>	<p>Click on Main Menu->Status & Manage->Database</p> <p>Select the Active SOAM server, and click on Restore as shown below.</p> <p>The following screen will be displayed. Select the proper back up provisioning and configuration file.</p>  <p>Click OK Button. The following confirmation screen will be displayed.</p> <p>Note: You will get a database mismatch regarding the NodeIDs of the servers. That is expected. If that is the only mismatch, proceed, otherwise stop and contact Appendix E. My Oracle Support (MOS).</p> <p>Select the Force checkbox as shown above and Click OK to proceed with the DB restore.</p>  <p>Note: After the restore has started, the user will be logged out of XMI SOAM GUI since the restored Topology is old data.</p>
<p>18.</p> <p><input type="checkbox"/></p>	<p>Recovered SOAM GUI: Monitor and Confirm database restoral</p>	<p>Wait for 5-10 minutes for the System to stabilize with the new topology:</p> <p>Monitor the Info tab for “Success”. This will indicate that the backup is complete and the system is stabilized.</p> <p>Note: Do not pay attention to alarms until all the servers in the system are completely restored.</p> <p>Note: The Configuration and Maintenance information will be in the same state it was backed up during initial backup.</p>

<p>19.</p> <p><input type="checkbox"/></p>	<p>SOAM VIP GUI: Re-enable Provisioning</p>	<p>Navigate to Main Menu->Status & Manage->Database</p>  <p>Click on the Enable Provisioning. A pop-up window will appear to confirm as shown below, press OK.</p> 
<p>20.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Set HA on remaining SOAM Server (OPTIONAL) for Non-HA sites</p>	<p>NOTE: For Non-HA sites SKIP this step.</p> <p>Navigate to Status & Manage -> HA</p>  <p>Click on Edit at the bottom of the screen</p> <p>Set Max Allowed HA Role to Standby if not already</p> <p>Press OK</p>
<p>21.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Recover remaining SOAM Server (OPTIONAL) for Non-HA sites</p>	<p>NOTE: For Non-HA sites SKIP this step</p> <p>Install the SOAM servers by executing procedure from reference [8]:</p> <p>Procedure 9 “Configure the SOAM Servers”, steps 1, 3- 6</p> <p>NOTE: Wait for server to reboot before continuing.</p>

<p>22.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Restart DSR application (OPTIONAL) for Non-HA sites</p>	<p>NOTE: For Non-HA sites SKIP this step</p> <p>Navigate to Main Menu->Status & Manage->Server,</p>  <p>Select the recovered server and click on Restart.</p> 
<p>23.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Start Replication on working C-Level Servers</p>	<p>Un-Inhibit (<i>Start</i>) Replication to the working C-Level Servers which belong to the same site as of the failed SOAM servers.</p> <p>Execute Appendix C. Un-Inhibit A and B Level Replication on C-Level Servers</p> <p>Navigate to Main Menu->Status & Manage->Database</p> <p>If the “<i>Repl Status</i>” is set to “Inhibited”, click on the Allow Replication button as shown below using the following order, otherwise if none of the servers are inhibited, skip this step and continue with the next step:</p> <ul style="list-style-type: none"> • Active NOAM Server • Standby NOAM Server • Active SOAM Server • Standby SOAM Server • Spare SOAM Server (<i>if applicable</i>) • MP/IPFE Servers (<i>if MPs are configured as Active/Standby, start with the Active MP, otherwise the order of the MPs does not matter</i>) • SBRs (<i>if SBR servers are configured, start with the active SBR, then standby, then spare</i>) <p>Verify that the replication on all the working servers is allowed. This can be done by clicking on each server and checking that the button below shows “Inhibit Replication”, and NOT “Allow Replication”.</p> 

<p>24. <input type="checkbox"/></p>	<p>NOAM VIP GUI: Set HA on the Recovered C-Level Server (OPTIONAL) for active only sites</p>	<p>NOTE: For Non-HA sites SKIP this step</p> <p>Navigate to Status & Manage -> HA</p>  <p>Click on Edit at the bottom of the screen</p> <p>Set Max Allowed HA Role to Standby</p> <p>Press OK</p>
<p>25. <input type="checkbox"/></p>	<p>NOAM VIP GUI: Recover the C-Level Server (DA-MP, SBRs, IPFE, SS7-MP)</p>	<p>Establish a SSH session to the C Level server being recovered, login as admusr.</p> <p>Execute following command to set shared memory to unlimited:</p> <pre>\$ sudo sh1.set -m 0</pre> <p>Execute following command ONLY when the recovered C-Level server is of type IPFE:</p> <pre>\$ sudo ipfeNetUpdate.sh</pre> <p>Execute the following procedures from [8] FOR EACH server that has been recovered:</p> <p>Procedure 12 “Configure the MP Virtual Machines”, Steps 1, 4-11.</p>

<p>26.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Restart DSR application for Recovered C-Level Server</p>	<p>Navigate to Main Menu->Status & Manage->Server,</p>  <p>Select the recovered server and click on Restart.</p> <p> <input type="button" value="Stop"/> <input type="button" value="Restart"/> <input type="button" value="Reboot"/> <input type="button" value="NTP Sync"/> <input type="button" value="Report"/> </p>
<p>27.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Re-Sync NTP</p>	<p>Navigate to Status & Manage -> Server</p>  <p>Select each server that has been recovered and click NTP Sync.</p> <p> <input type="button" value="Stop"/> <input type="button" value="Restart"/> <input type="button" value="Reboot"/> <input type="button" value="NTP Sync"/> <input type="button" value="Report"/> </p>

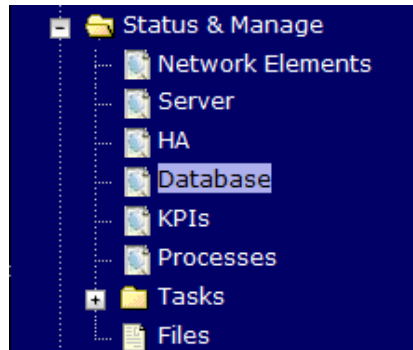
28.



NOAM VIP GUI:
Start replication
on ALL C-Level
Servers

Un-Inhibit (*Start*) Replication to the **ALL** C-Level Servers

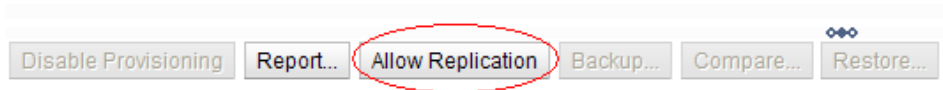
Navigate to **Status & Manage -> Database**

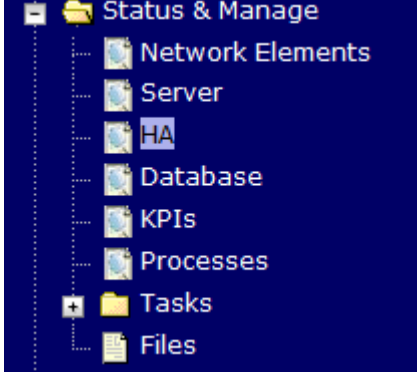


If the "*Repl Status*" is set to "Inhibited", click on the Allow Replication button as shown below using the following order:

- Active NOAMP Server
- Standby NOAMP Server
- Active SOAM Server
- Standby SOAM Server
- Spare SOAM Server (*if applicable*)
- MP/IPFE Servers (*if MPs are configured as Active/Standby, start with the Active MP, otherwise the order of the MPs does not matter*)

Verify that the replication on all servers is allowed. This can be done by clicking on each server and checking that the button below shows "Inhibit Replication", and **NOT** "Allow Replication".



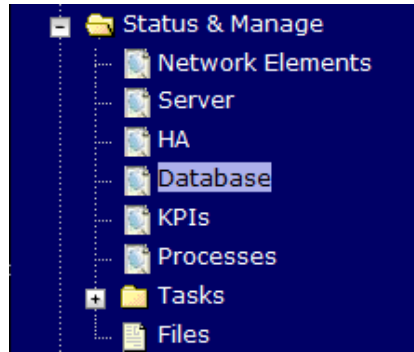
<p>29.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Set HA on all C-Level Servers</p>	<p>Navigate to Status & Manage -> HA</p>  <p>Click on Edit at the bottom of the screen</p> <p>For each server whose Max Allowed HA Role is set to Standby, set it to Active</p> <p>Press OK</p>
<p>30.</p> <p><input type="checkbox"/></p>	<p>Active SOAM: Prepare recovered SOAM for optional feature activation</p>	<p>If DSR 7.1, skip this step</p> <p>Establish an SSH session to the Active SOAM, login as admusr.</p> <p>Execute the following command:</p> <pre style="border: 1px solid black; padding: 5px;">\$ irem DsrApplication where "name in ('RBAR', 'FABR', 'PCA', 'MD-IWF', 'DM-IWF', 'CPA', 'GLA')"</pre>
<p>31.</p> <p><input type="checkbox"/></p>	<p>Active SOAM: Verify Preparation</p>	<p>If DSR 7.1, skip this step</p> <p>Execute the following command to verify preparation of optional feature activation:</p> <pre style="border: 1px solid black; padding: 5px;">\$ iqt -z -h -p -fname DsrApplication where "name in ('RBAR', 'FABR', 'PCA', 'MD-IWF', 'DM-IWF', 'CPA', 'GLA')"</pre> <p>Note: There should be no output of this command, if there is, verify the correct entry of the command in step 35.</p>
<p>32.</p> <p><input type="checkbox"/></p>	<p>ACTIVE NOAM: Perform key exchange between the active-NOAM and recovered servers.</p>	<p>Establish an SSH session to the Active NOAM, login as admusr.</p> <p>Execute the following command to perform a keyexchange from the active NOAM to each recovered server:</p> <pre style="border: 1px solid black; padding: 5px;">\$ keyexchange admusr@<Recovered Server Hostname></pre> <p>Note: If an export server is configured, perform this step.</p>
<p>33.</p> <p><input type="checkbox"/></p>	<p>ACTIVE NOAM: Activate Optional Features</p>	<p>Establish an SSH session to the active NOAM, login as admusr.</p> <p>Refer to section 1.5 Optional Features to activate any features that were previously activated.</p>

34.



NOAM VIP GUI:
Fetch and Store
the database
Report for the
Newly Restored
Data and Save it

Navigate to **Main Menu->Status & Manage->Database**



Select the **active** NOAM server and click on the **Report** button at the bottom of the page. The following screen is displayed:

Main Menu: Status & Manage -> Database [Report]

Tue Oct 05 15:13:38 2010 UTC

```

-----
N P Q R Database Status Report
-----
Report Generated: Tue Oct 05 15:13:38 2010 UTC
From: Active Network OAM&P on host blade07
Report Version: 3.0.13-3.0.0_10.13.0
User: guidadmin
-----

General
-----
Hostname           : blade07
Appworks Database Version : 3.0
Application Database Version :

Capacities and Utilization
-----
Disk Utilization  0.6%: 249M used of 40G total, 38G available
Memory Utilization 0.6%: 136M used of 23975M total, 23839M available

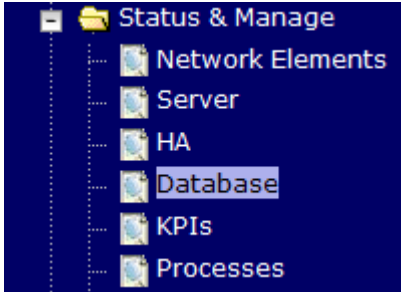
Alarms
-----
None

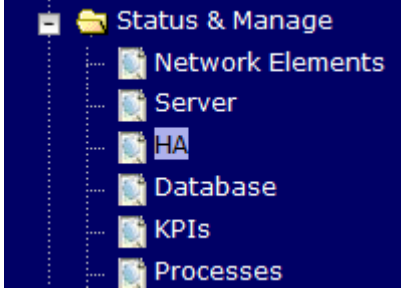
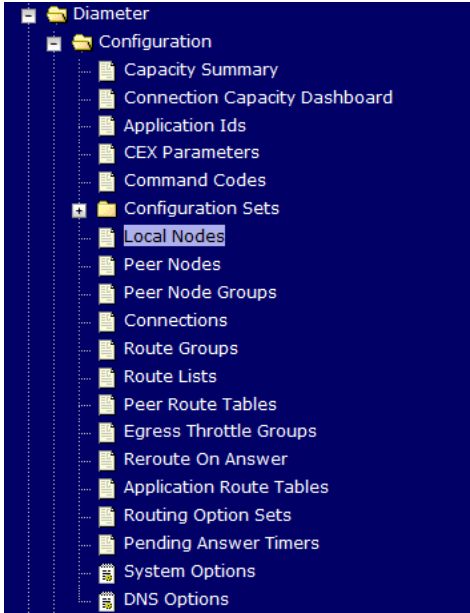
Maintenance in Progress
-----
Restore operation success

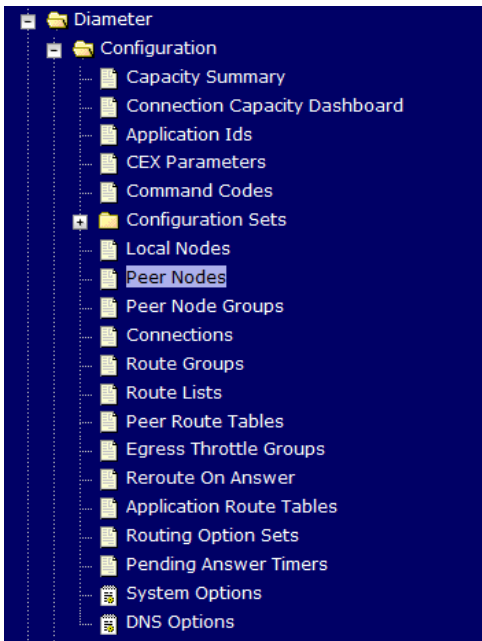
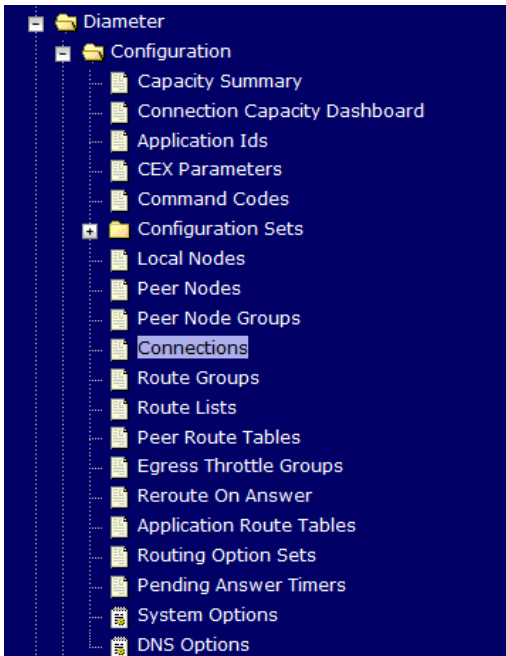
Service Information
-----
Part: A_NpqrProvPart
-----
Table Name      Row Size  Num      Memory      Disk
Schema  Avg  Max  Rows  Used / Alloc  Used / Alloc
-----
CgPa          44          1    44 B    44 B    44 B
CgPaGta       52          0     0 B     0 B     0 B
CgPaInfo      64          1    64 B    64 B    64 B
CgPaOpc       36          0     0 B     0 B     0 B
CountryCode   24          306  7344 B  7344 B  7344 B
GTConfig      52          2   104 B   104 B   104 B
McMmc         40          0     0 B     0 B     0 B
Msidn         52          0     0 B     0 B     0 B
Msrn          68          0     0 B     0 B     0 B
NpqrNeOptions 276          0     0 B     0 B     0 B
-----

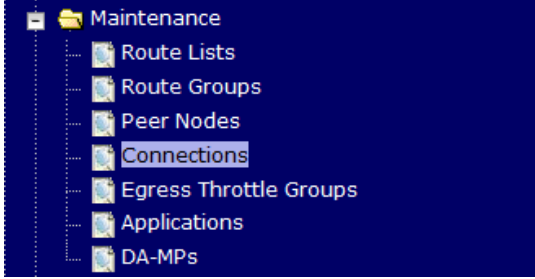
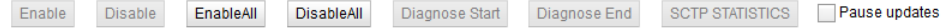
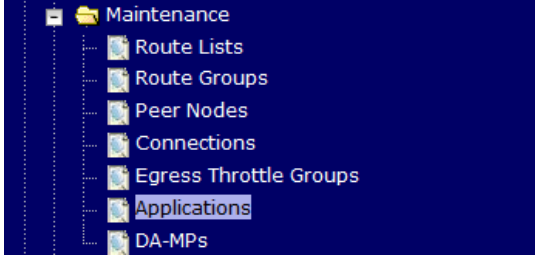
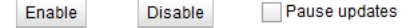
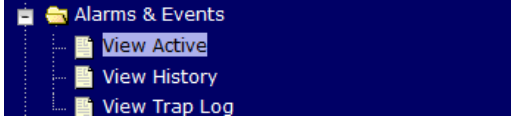
```

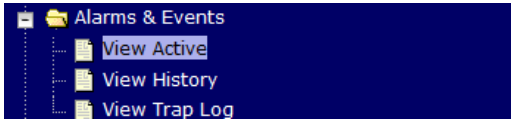
Click on **Save** and save the report to your local machine.

<p>35.</p> <p><input type="checkbox"/></p>	<p>ACTIVE NOAM: Verify Replication Between Servers.</p>	<p>Login to the Active NOAM via SSH terminal as admusr user. Execute the following command:</p> <pre>\$ sudo irepstat -m</pre> <p>Output like below shall be generated:</p> <pre>-- Policy 0 ActStb [DbReplication] ----- ----- RDU06-MP1 -- Stby BC From RDU06-SO1 Active 0 0.50 ^0.17%cpu 42B/s A=none CC From RDU06-MP2 Active 0 0.10 ^0.17 0.88%cpu 32B/s A=none RDU06-MP2 -- Active BC From RDU06-SO1 Active 0 0.50 ^0.10%cpu 33B/s A=none CC To RDU06-MP1 Active 0 0.10 0.08%cpu 20B/s A=none RDU06-NO1 -- Active AB To RDU06-SO1 Active 0 0.50 1%R 0.03%cpu 21B/s RDU06-SO1 -- Active AB From RDU06-NO1 Active 0 0.50 ^0.04%cpu 24B/s BC To RDU06-MP1 Active 0 0.50 1%R 0.04%cpu 21B/s BC To RDU06-MP2 Active 0 0.50 1%R 0.07%cpu 21B/s</pre>																																																																																								
<p>36.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Verify the Database states</p>	<p>Click on Main Menu->Status and Manager->Database</p>  <p>Verify that the “OAM Max HA Role” is either “Active” or “Standby” for NOAM and SOAM and “Application Max HA Role” for MPs is “Active”, and that the status is “Normal” as shown below:</p> <table border="1"> <thead> <tr> <th>Network Element</th> <th>Server</th> <th>Role</th> <th>OAM Max HA Role</th> <th>Application Max HA Role</th> <th>Status</th> <th>DB Level</th> <th>OAM Repl Status</th> <th>SIG Repl Status</th> <th>Repl Status</th> <th>Repl Audit Status</th> </tr> </thead> <tbody> <tr> <td>NO_10303</td> <td>NO2</td> <td>Network OAM&P</td> <td>Active</td> <td>OOS</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>NotApplicabl</td> <td>Allowed</td> <td>AutolnProg</td> </tr> <tr> <td>SO_10303</td> <td>PSBR</td> <td>MP</td> <td>Active</td> <td>Active</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>Normal</td> <td>Allowed</td> <td>AutolnProg</td> </tr> <tr> <td>SO_10303</td> <td>MP2</td> <td>MP</td> <td>Active</td> <td>Active</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>Normal</td> <td>Allowed</td> <td>AutolnProg</td> </tr> <tr> <td>SO_10303</td> <td>SO1</td> <td>System OAM</td> <td>Standby</td> <td>OOS</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>NotApplicabl</td> <td>Allowed</td> <td>AutolnProg</td> </tr> <tr> <td>NO_10303</td> <td>NO1</td> <td>Network OAM&P</td> <td>Standby</td> <td>OOS</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>NotApplicabl</td> <td>Allowed</td> <td>AutolnProg</td> </tr> <tr> <td>SO_10303</td> <td>IPFE</td> <td>MP</td> <td>Active</td> <td>OOS</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>Normal</td> <td>Allowed</td> <td>AutolnProg</td> </tr> <tr> <td>SO_10303</td> <td>SO2</td> <td>System OAM</td> <td>Active</td> <td>OOS</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>NotApplicabl</td> <td>Allowed</td> <td>AutolnProg</td> </tr> </tbody> </table>	Network Element	Server	Role	OAM Max HA Role	Application Max HA Role	Status	DB Level	OAM Repl Status	SIG Repl Status	Repl Status	Repl Audit Status	NO_10303	NO2	Network OAM&P	Active	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutolnProg	SO_10303	PSBR	MP	Active	Active	Normal	0	Normal	Normal	Allowed	AutolnProg	SO_10303	MP2	MP	Active	Active	Normal	0	Normal	Normal	Allowed	AutolnProg	SO_10303	SO1	System OAM	Standby	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutolnProg	NO_10303	NO1	Network OAM&P	Standby	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutolnProg	SO_10303	IPFE	MP	Active	OOS	Normal	0	Normal	Normal	Allowed	AutolnProg	SO_10303	SO2	System OAM	Active	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutolnProg
Network Element	Server	Role	OAM Max HA Role	Application Max HA Role	Status	DB Level	OAM Repl Status	SIG Repl Status	Repl Status	Repl Audit Status																																																																																
NO_10303	NO2	Network OAM&P	Active	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutolnProg																																																																																
SO_10303	PSBR	MP	Active	Active	Normal	0	Normal	Normal	Allowed	AutolnProg																																																																																
SO_10303	MP2	MP	Active	Active	Normal	0	Normal	Normal	Allowed	AutolnProg																																																																																
SO_10303	SO1	System OAM	Standby	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutolnProg																																																																																
NO_10303	NO1	Network OAM&P	Standby	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutolnProg																																																																																
SO_10303	IPFE	MP	Active	OOS	Normal	0	Normal	Normal	Allowed	AutolnProg																																																																																
SO_10303	SO2	System OAM	Active	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutolnProg																																																																																

<p>37.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Verify the HA Status</p>	<p>Click on Main Menu->Status and Manage->HA</p>  <p>Select the row for all of the servers Verify that the “HA Role” is either “Active” or “Standby”.</p> <table border="1" data-bbox="488 661 1443 835"> <thead> <tr> <th>Hostname</th> <th>OAM Max HA Role</th> <th>Application Max HA Role</th> <th>Max Allowed HA Role</th> <th>Mate Hostname List</th> <th>Network Element</th> <th>Server Role</th> <th>Active VIPs</th> </tr> </thead> <tbody> <tr> <td>NO2</td> <td>Active</td> <td>OOS</td> <td>Active</td> <td>NO1</td> <td>NO_10303</td> <td>Network OAM&P</td> <td>10.240.70.132</td> </tr> <tr> <td>SO1</td> <td>Standby</td> <td>OOS</td> <td>Active</td> <td>SO2</td> <td>SO_10303</td> <td>System OAM</td> <td></td> </tr> <tr> <td>SO2</td> <td>Active</td> <td>OOS</td> <td>Active</td> <td>SO1</td> <td>SO_10303</td> <td>System OAM</td> <td>10.240.70.133</td> </tr> <tr> <td>MP1</td> <td>Standby</td> <td>Active</td> <td>Active</td> <td>MP2</td> <td>SO_10303</td> <td>MP</td> <td></td> </tr> <tr> <td>MP2</td> <td>Active</td> <td>Active</td> <td>Active</td> <td>MP1</td> <td>SO_10303</td> <td>MP</td> <td></td> </tr> <tr> <td>IPFE</td> <td>Active</td> <td>OOS</td> <td>Active</td> <td></td> <td>SO_10303</td> <td>MP</td> <td></td> </tr> </tbody> </table>	Hostname	OAM Max HA Role	Application Max HA Role	Max Allowed HA Role	Mate Hostname List	Network Element	Server Role	Active VIPs	NO2	Active	OOS	Active	NO1	NO_10303	Network OAM&P	10.240.70.132	SO1	Standby	OOS	Active	SO2	SO_10303	System OAM		SO2	Active	OOS	Active	SO1	SO_10303	System OAM	10.240.70.133	MP1	Standby	Active	Active	MP2	SO_10303	MP		MP2	Active	Active	Active	MP1	SO_10303	MP		IPFE	Active	OOS	Active		SO_10303	MP	
Hostname	OAM Max HA Role	Application Max HA Role	Max Allowed HA Role	Mate Hostname List	Network Element	Server Role	Active VIPs																																																			
NO2	Active	OOS	Active	NO1	NO_10303	Network OAM&P	10.240.70.132																																																			
SO1	Standby	OOS	Active	SO2	SO_10303	System OAM																																																				
SO2	Active	OOS	Active	SO1	SO_10303	System OAM	10.240.70.133																																																			
MP1	Standby	Active	Active	MP2	SO_10303	MP																																																				
MP2	Active	Active	Active	MP1	SO_10303	MP																																																				
IPFE	Active	OOS	Active		SO_10303	MP																																																				
<p>38.</p> <p><input type="checkbox"/></p>	<p>SOAM VIP GUI: Verify the Local Node Info</p>	<p>Navigate to Main Menu->Diameter->Configuration->Local Node</p>  <p>Verify that all the local nodes are shown.</p>																																																								

<p>39.</p> <p><input type="checkbox"/></p>	<p>SOAM VIP GUI: Verify the Peer Node Info</p>	<p>Navigate to Main Menu->Diameter->Configuration->Peer Node</p>  <p>Verify that all the peer nodes are shown.</p>
<p>40.</p> <p><input type="checkbox"/></p>	<p>SOAM VIP GUI: Verify the Connections Info</p>	<p>Navigate to Main Menu->Diameter->Configuration->Connections</p>  <p>Verify that all the connections are shown.</p>

<p>41. <input type="checkbox"/></p>	<p>SOAM VIP GUI: Enable Connections if needed</p>	<p>Navigate to Main Menu->Diameter->Maintenance->Connections</p>  <p>Select each connection and click on the Enable button. Alternatively you can enable all the connections by selecting the EnableAll button.</p>  <p>Verify that the Operational State is Available.</p>
<p>42. <input type="checkbox"/></p>	<p>SOAM VIP GUI: Enable Optional Features</p>	<p>Navigate to Main Menu -> Diameter -> Maintenance -> Applications</p>  <p>Select the optional feature application configured in step 29.</p> <p>Click the Enable button.</p> 
<p>43. <input type="checkbox"/></p>	<p>SOAM VIP GUI: Examine All Alarms</p>	<p>Navigate to Main Menu->Alarms & Events->View Active</p>  <p>Examine all active alarms and refer to the on-line help on how to address them.</p> <p>If needed contact Appendix E. My Oracle Support (MOS).</p>

<p>44.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Examine All Alarms</p>	<p>Login to the NOAM VIP if not already logged in.</p> <p>Navigate to Main Menu->Alarms & Events->View Active</p>  <p>Examine all active alarms and refer to the on-line help on how to address them.</p> <p>If needed contact Appendix E. My Oracle Support (MOS).</p>
<p>45.</p> <p><input type="checkbox"/></p>	<p>Backup and Archive All the Databases from the Recovered System</p>	<p>Execute Appendix A. DSR Database Backup to back up the Configuration databases:</p>

5.1.3 Recovery Scenario 3 (Partial Server Outage with all NOAM servers failed and one SOAM server intact)

For a partial server outage with an SOAM server intact and available; NOAM servers are recovered using recovery procedures for software and then executing a database restore to the active NOAM server using a NOAM database backup file obtained from external backup sources such as customer servers. All other servers are recovered using recovery procedures for software. Database replication from the active NOAM/active SOAM server will recover the database on these servers. The major activities are summarized in the list below. Use this list to understand the recovery procedure summary. Do not use this list to execute the procedure. The actual procedures' detailed steps are in **Procedure 3**. The major activities are summarized as follows:

Recover **Active NOAM** server by recovering software and the database.

- Recover the software.
- Recover the database

Recover **Standby NOAM servers** by recovering software.

- Recover the software.

Recover any failed **SOAM and MP servers** by recovering software.

- Recover the software.
- Database is already intact at one SOAM server and does not require restoration at the other SOAM and MP servers.

Procedure 3: Recovery Scenario 3

S T E P #	<p>This procedure performs recovery if ALL NOAM servers are failed but 1 or more SOAM servers are intact. This includes any SOAM server that is in another location (spare SOAM server).</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, contact Appendix E. My Oracle Support (MOS), and ask for assistance.</p>	
1. <input type="checkbox"/>	Workarounds	Refer to Appendix D . Workarounds for Issues not fixed in this Release to understand any workarounds required during this procedure.
1. <input type="checkbox"/>	Gather Required Materials	Gather the documents and required materials listed in Section 3.1 Required Materials
2. <input type="checkbox"/>	Recover the Failed Software	<ol style="list-style-type: none"> 1. For NOAMPs execute the following procedures from reference [8]: <ol style="list-style-type: none"> a. Procedure 1 "Import DSR OVA" b. Procedure 2 "Configure NOAM guests role based on resource profile" 2. For SOAMPs execute the following procedures from reference [8]: <ol style="list-style-type: none"> c. Procedure 1 "Import DSR OVA" d. Procedure 3 "Configure Remaining DSR guests role based on resource profile" 3. For failed MPs execute the following procedures from reference [8]: <ol style="list-style-type: none"> e. Procedure 1 "Import DSR OVA" f. Procedure 3 "Configure Remaining DSR guests role based on resource profile"
3. <input type="checkbox"/>	Obtain Latest Database Backup and Network Configuration Data.	<p>Obtain the most recent database backup file from external backup sources (ex. file servers) or tape backup sources.</p> <p>From required materials list in Section 3.1 Required Materials; use site survey documents and Network Element report (if available), to determine network configuration data.</p>
4. <input type="checkbox"/>	Execute DSR Installation Procedure for the First NOAM	<p>Verify the networking data for Network Elements</p> <p>Note: Use the backup copy of network configuration data and site surveys (Step 2)</p> <p>Execute installation procedures for the first NOAM server from reference [8]:</p> <p>Procedure 4 "Configure the First NOAMP NE and Server" and</p> <p>Procedure 5 "Configure the NOAMP Server Group".</p>

Procedure 3: Recovery Scenario 3

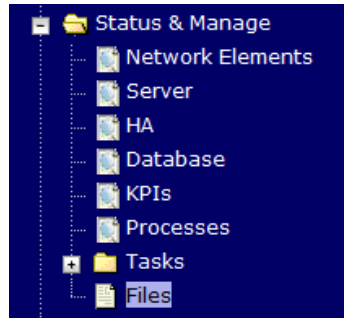
<p>5. □</p>	<p>NOAM GUI: Login</p>	<p>Login to the NOAM GUI as the <i>guiadmin</i> user:</p> <div data-bbox="786 310 1138 365"></div> <p>Oracle System Login Fri Mar 20 12:29:52 2015 EDT</p> <div data-bbox="711 485 1203 743" style="border: 1px solid gray; padding: 10px; width: fit-content; margin: 20px auto;"><p style="text-align: center;">Log In Enter your username and password to log in</p><p>Username: <input type="text" value="guiadmin"/></p><p>Password: <input type="password" value="••••••"/></p><p><input type="checkbox"/> Change password</p><p style="text-align: center;"><input type="button" value="Log In"/></p></div> <p style="text-align: center;">Welcome to the Oracle System Login.</p> <p style="text-align: center;">Unauthorized access is prohibited. This Oracle system requires the use of Microsoft Internet Explorer 8.0, 9.0, or 10.0 with support for JavaScript and cookies.</p> <hr/> <p style="text-align: center;"><small>Oracle and Java are registered trademarks of Oracle Corporation and/or its affiliates. Other names may be trademarks of their respective owners.</small></p>
-----------------	-----------------------------------	---

Procedure 3: Recovery Scenario 3

6.
□

NOAM GUI:
Upload the
Backed up
Database File

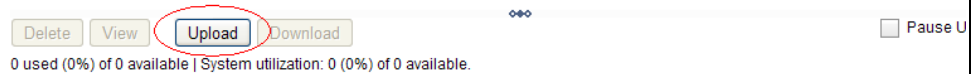
Browse to **Main Menu->Status & Manage->Files**



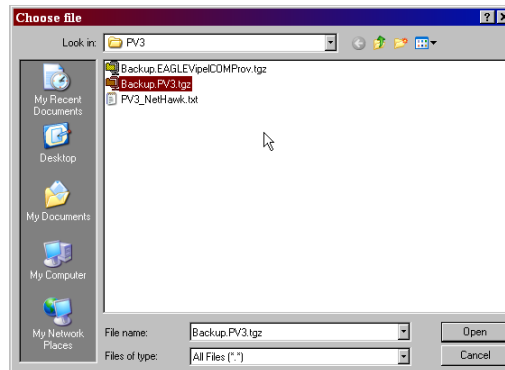
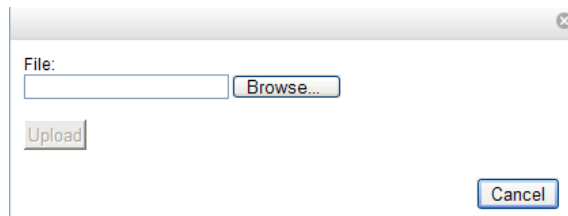
Select the Active NOAM server. The following screen will appear:

File Name	Size	Type	Timestamp
Backup.dsr.Cpa1-NO.Configuration.NETWORK_OAMP.20120321_021501.AUTO.tar	720 KB	tar	2012-03-21 06:15:02 UTC

Click on **Upload** as shown below and select the file *“NO Provisioning and Configuration:”* file backed up after initial installation and provisioning.



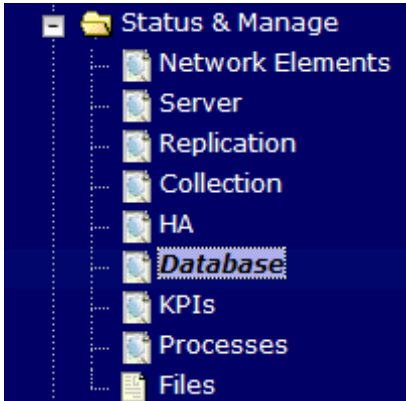

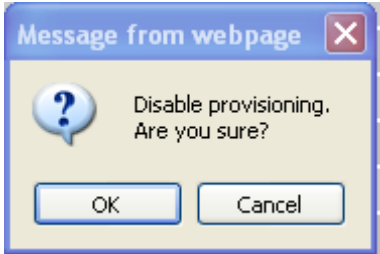
Click on **Browse** and locate the backup file and click on Open as shown below.



Click on the **Upload** button.

The file will take a few seconds to upload depending on the size of the backup data. The file will be visible on the list of entries after the upload is complete.

Procedure 3: Recovery Scenario 3

<p>7.</p> <p><input type="checkbox"/></p>	<p>NOAM GUI: Disable Provisioning</p>	<p>Click on Main Menu->Status & Manage->Database</p>  <p>Disable Provisioning by clicking on Disable Provisioning button at the bottom of the screen as shown below.</p>  <p>A confirmation window will appear, press OK to disable Provisioning.</p>  <p>The message <i>"Warning Code 002"</i> will appear.</p>
---	--	--

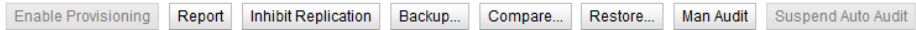
Procedure 3: Recovery Scenario 3

8.

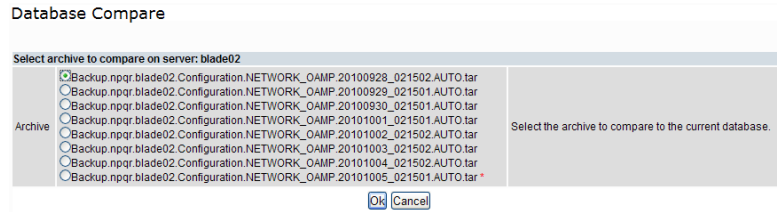


NOAM GUI:
Verify the Archive Contents and Database Compatibility

Select the **Active NOAM** server and click on the **Compare**.

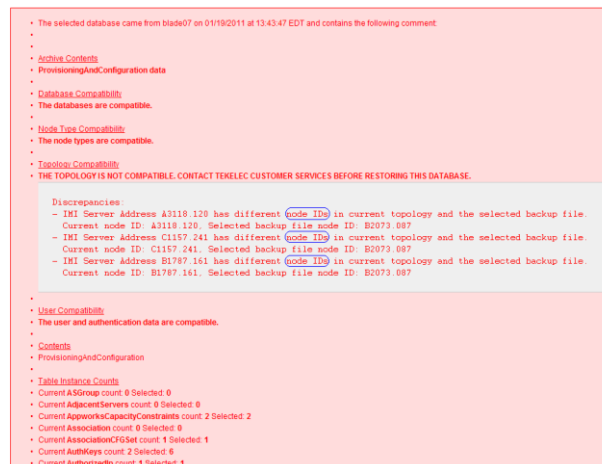


The following screen is displayed; click the button for the restored database file that was uploaded as a part of **Step 13** of this procedure.



Verify that the output window matches the screen below.

Note: You will get a database mismatch regarding the NodeIDs of the VMs. That is expected. If that is the only mismatch, proceed, otherwise stop and contact **Appendix E. My Oracle Support (MOS)**



Note: Archive Contents and Database Compatibilities must be the following:

Archive Contents: Configuration data

Database Compatibility: The databases are compatible.

Note: The following is expected Output for Topology Compatibility Check since we are restoring from existing backed up data base to database with just one NOAM:

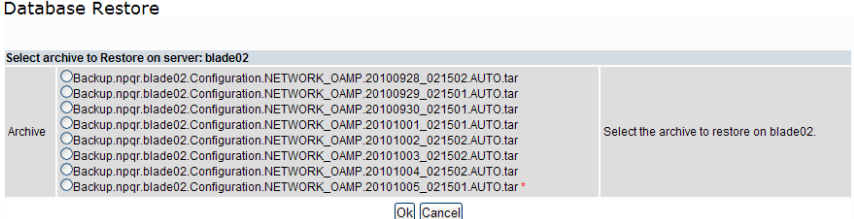
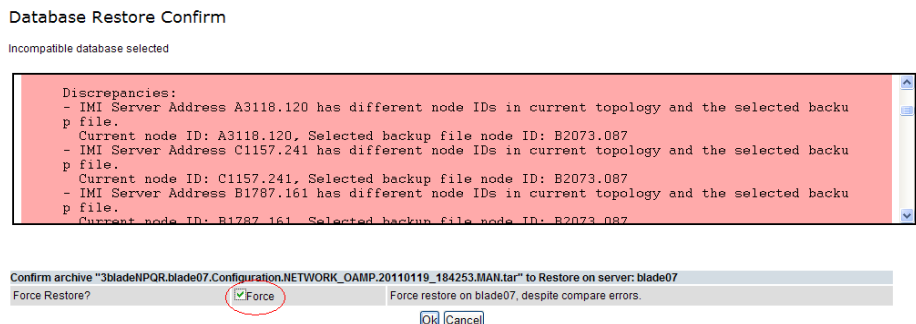
Topology Compatibility

THE TOPOLOGY SHOULD BE COMPATIBLE MINUS THE NODEID.

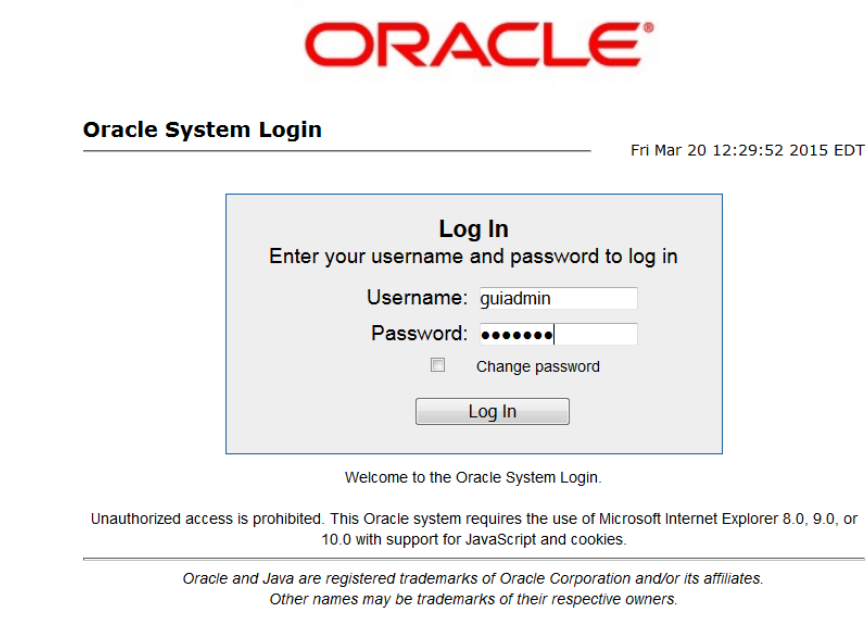
Note: We are trying to restore a backed up database onto an empty NOAM database. This is an expected text in Topology Compatibility.

If the verification is successful, Click **BACK** button and continue to **next step** in this procedure.

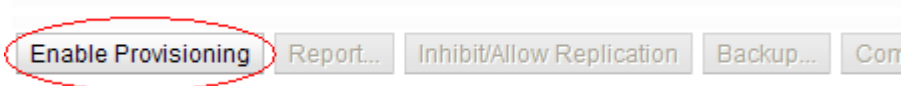
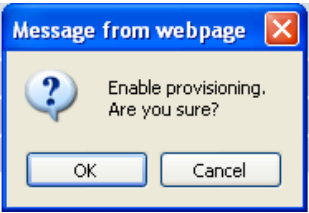
Procedure 3: Recovery Scenario 3

<p>9.</p> <p><input type="checkbox"/></p>	<p>ACTIVE NOAM: Restore the Database</p>	<p>Click on Main Menu->Status & Manage->Database</p> <p>Select the Active NOAM server, and click on Restore as shown below.</p> <p>The following screen will be displayed. Select the proper back up provisioning and configuration file.</p>  <p>Click OK Button. The following confirmation screen will be displayed.</p> <p>Note: You will get a database mismatch regarding the NodeIDs of the servers. That is expected. If that is the only mismatch, proceed, otherwise stop and contact Appendix E. My Oracle Support (MOS).</p> <p>Select the Force checkbox as shown above and Click OK to proceed with the DB restore.</p>  <p>Note: After the restore has started, the user will be logged out of XMI NO GUI since the restored Topology is old data.</p>
---	---	--

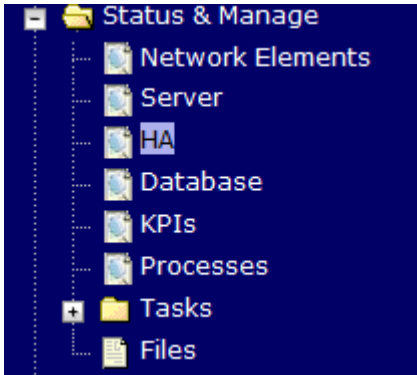
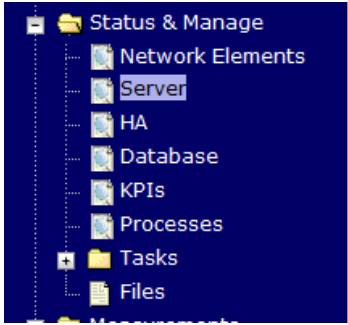
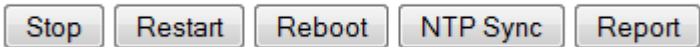
Procedure 3: Recovery Scenario 3

<p>10.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Login</p>	<p>Establish a GUI session on the NOAM server by using the VIP IP address of the NOAM server. Open the web browser and enter a URL of:</p> <div style="border: 1px solid black; padding: 2px; margin: 10px 0;"> <p><code>http://<Primary_NOAM_VIP_IP_Address></code></p> </div> <p>Login as the <i>guiadmin</i> user:</p> 
<p>11.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Monitor and Confirm database restoral</p>	<p>Wait for 5-10 minutes for the System to stabilize with the new topology:</p> <p>Monitor the Info tab for “Success”. This will indicate that the backup is complete and the system is stabilized.</p> <p>Following alarms must be ignored for NOAM and MP Servers until all the Servers are configured:</p> <p>Alarms with Type Column as “REPL”, “COLL”, “HA” (with mate NOAM), “DB” (about Provisioning Manually Disabled)</p> <p>Note: Do not pay attention to alarms until all the servers in the system are completely restored.</p> <p>Note: The Configuration and Maintenance information will be in the same state it was backed up during initial backup.</p>
<p>12.</p> <p><input type="checkbox"/></p>	<p>ACTIVE NOAM: Login</p>	<p>Login to the recovered Active NOAM via SSH terminal as <i>admusr</i> user.</p>

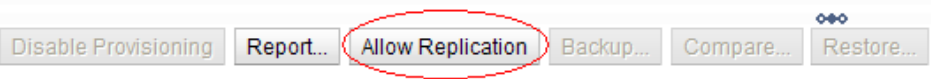
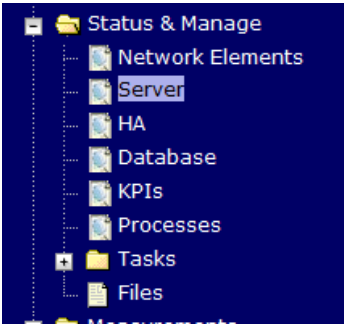
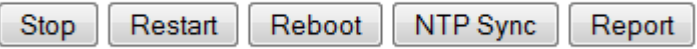
Procedure 3: Recovery Scenario 3

<p>13. <input type="checkbox"/></p>	<p>ACTIVE NOAM: Restore /etc/hosts/ File of the Active NOAM</p>	<p>IF DSR 7.1, SKIP THIS STEP</p> <p>Execute the following command:</p> <pre>\$ sudo AppWorks AppWorks_AppWorks updateServerAliases <NOAM Host Name></pre>
<p>14. <input type="checkbox"/></p>	<p>NOAM VIP GUI: Re-enable Provisioning</p>	<p>Navigate to Main Menu->Status & Manage->Database</p>  <p>Click on the Enable Provisioning. A pop-up window will appear to confirm as shown below, press OK.</p> 
<p>15. <input type="checkbox"/></p>	<p>NOAM VIP GUI: Recover Standby NOAM</p>	<p>Install the second NOAM server by executing procedures from reference [8]:</p> <p>Procedure 6 “Configure the Second NOAMP Server” steps 1, 3-7</p> <p>Procedure 7 “Complete Configuring the NOAMP Server Group” Step 5</p> <p>Note: If Topology or nodeld alarms are persistent after the database restore, refer to Appendix D. Workarounds for Issues not fixed in this Release or the next step below.</p>
<p>16. <input type="checkbox"/></p>	<p>ACTIVE NOAM: Topology and nodeld alarm workaround</p>	<p>Get the clusterID of the NO using the following command:</p> <pre>\$ top.myrole myNodeId=A3603.215 myMasterCapable=true</pre> <p>Then update the clusterId field in RecognizedAuthority table to have the same clusterid:</p> <pre>\$ ivi RecognizedAuthority e.g. iload -ha -xU -frecNum -fclusterId -ftimestamp RecognizedAuthority \ <<'!!!!'</pre> <pre>0 A1878 1436913769646 !!!!</pre>

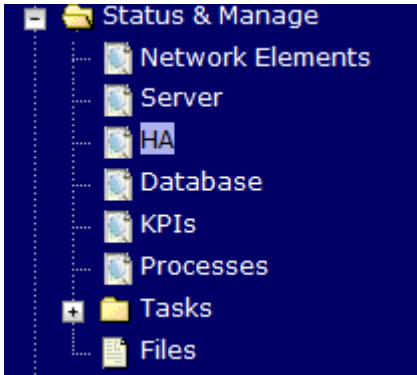
Procedure 3: Recovery Scenario 3

<p>17. <input type="checkbox"/></p>	<p>NOAM VIP GUI: Set HA on remaining SOAM Server(s)</p>	<p>Navigate to Status & Manage -> HA</p>  <p>Click on Edit at the bottom of the screen</p> <p>Set Max Allowed HA Role to Standby if not already</p> <p>Press OK</p>
<p>18. <input type="checkbox"/></p>	<p>NOAM VIP GUI: Recover remaining SOAM Server</p>	<p>Install the SOAM servers by executing procedure from reference [8]:</p> <p>Procedure 9 “Configure the SOAM Servers”, steps 1, 3- 6</p> <p>NOTE: Wait for server to reboot before continuing.</p>
<p>19. <input type="checkbox"/></p>	<p>NOAM VIP GUI: Restart DSR application</p>	<p>Navigate to Main Menu->Status & Manage->Server,</p>  <p>Select the recovered server and click on Restart.</p> 

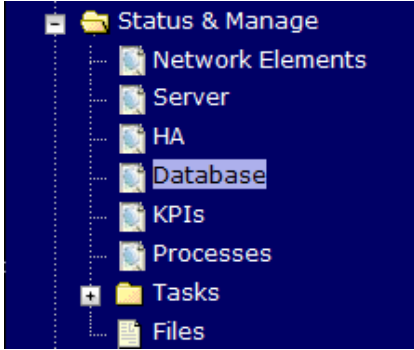
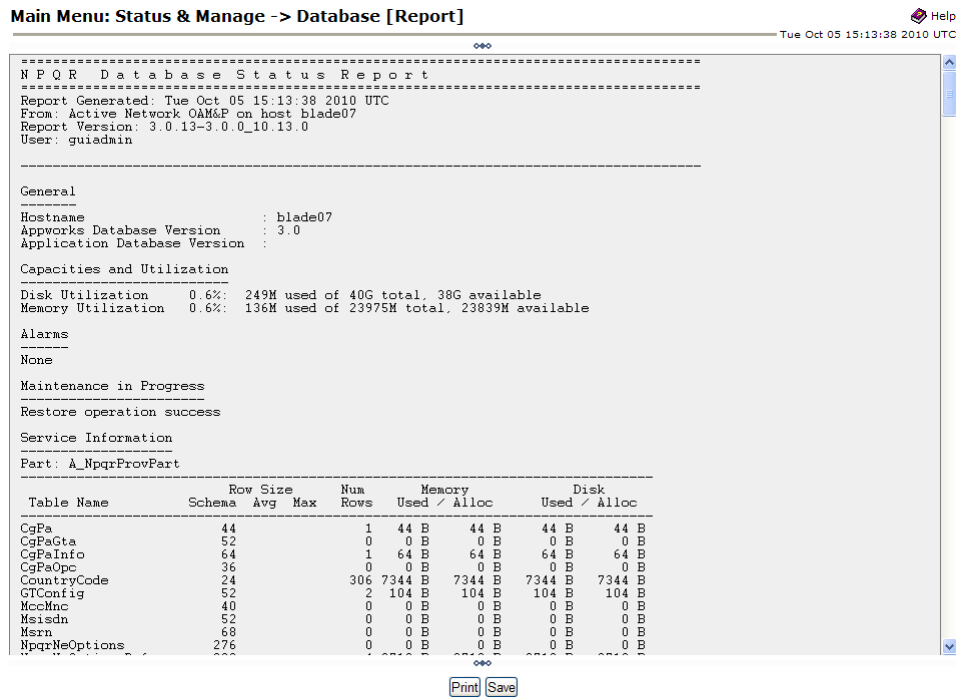
Procedure 3: Recovery Scenario 3

<p>20.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Start Replication on working C-Level Servers</p>	<p>Un-Inhibit (<i>Start</i>) Replication to the working C-Level Servers which belong to the same site as of the failed SOAM servers.</p> <p>Execute Appendix C. Un-Inhibit A and B Level Replication on C-Level Servers</p> <p>Navigate to Main Menu->Status & Manage->Database</p> <p>If the “<i>Repl Status</i>” is set to “Inhibited”, click on the Allow Replication button as shown below using the following order, otherwise if none of the servers are inhibited, skip this step and continue with the next step:</p> <ul style="list-style-type: none"> • Active NOAM Server • Standby NOAM Server • Active SOAM Server • Standby SOAM Server • Spare SOAM Server (<i>if applicable</i>) • MP/IPFE Servers (<i>if MPs are configured as Active/Standby, start with the Active MP, otherwise the order of the MPs does not matter</i>) • SBRs (<i>if SBR servers are configured, start with the active SBR, then standby, then spare</i>) <p>Verify that the replication on all the working servers is allowed. This can be done by clicking on each server and checking that the button below shows “Inhibit Replication”, and NOT “Allow Replication”.</p> 
<p>21.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Re-Sync NTP</p>	<p>Navigate to Status & Manage -> Server</p>  <p>Select each server that has been recovered and click NTP Sync.</p> 

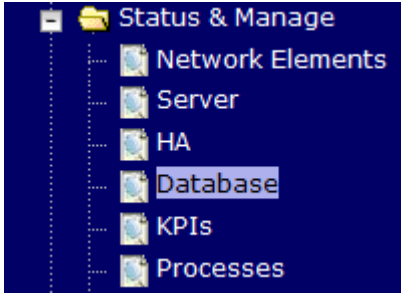
Procedure 3: Recovery Scenario 3

<p>22.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Set HA on all C-Level Servers</p>	<p>Navigate to Status & Manage -> HA</p>  <p>Click on Edit at the bottom of the screen</p> <p>For each server whose Max Allowed HA Role is set to Standby, set it to Active</p> <p>Press OK</p>
<p>23.</p> <p><input type="checkbox"/></p>	<p>Active SOAM: Prepare recovered SOAM for optional feature activation</p>	<p>If DSR 7.1, skip this step.</p> <p>Establish an SSH session to the Active SOAM, login as admusr.</p> <p>Execute the following command:</p> <pre style="border: 1px solid black; padding: 5px;">\$ irem DsrApplication where "name in ('RBAR', 'FABR', 'PCA', 'MD-IWF', 'DM-IWF', 'CPA', 'GLA')"</pre>
<p>24.</p> <p><input type="checkbox"/></p>	<p>Active SOAM: Verify Preparation</p>	<p>If DSR 7.1, skip this step</p> <p>Execute the following command to verify preparation of optional feature activation:</p> <pre style="border: 1px solid black; padding: 5px;">\$ iqt -z -h -p -fname DsrApplication where "name in ('RBAR', 'FABR', 'PCA', 'MD-IWF', 'DM-IWF', 'CPA', 'GLA')"</pre> <p>Note: There should be no output of this command, if there is, verify the correct entry of the command in step 24.</p>
<p>25.</p> <p><input type="checkbox"/></p>	<p>ACTIVE NOAM: Perform key exchange between the active-NOAM and recovered servers.</p>	<p>Establish an SSH session to the Active NOAM, login as admusr.</p> <p>Execute the following command to perform a keyexchange from the active NOAM to each recovered server:</p> <pre style="border: 1px solid black; padding: 5px;">\$ keyexchange admusr@<Recovered Server Hostname></pre> <p>Note: If an export server is configured, perform this step.</p>

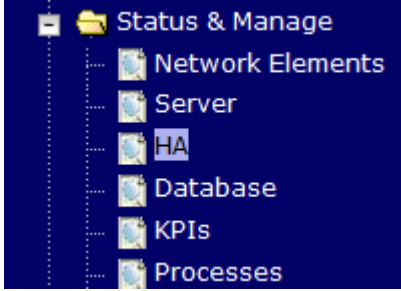
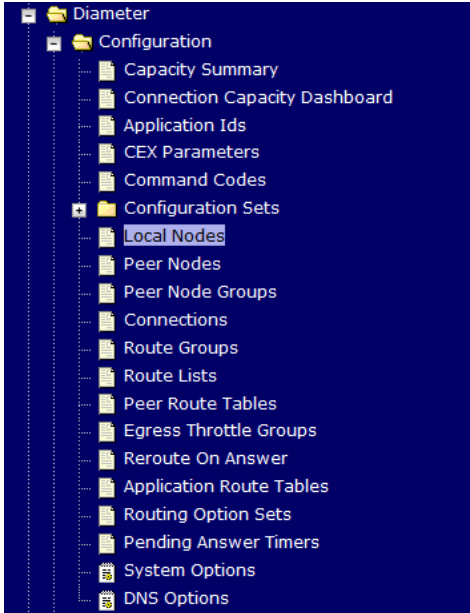
Procedure 3: Recovery Scenario 3

<p>26.</p> <p><input type="checkbox"/></p>	<p>ACTIVE NOAM: Activate Optional Features</p>	<p>Establish an SSH session to the active NOAM, login as admusr.</p> <p>Refer to section 1.5 Optional Features to activate any features that were previously activated.</p>
<p>27.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Fetch and Store the database Report for the Newly Restored Data and Save it</p>	<p>Navigate to Main Menu->Status & Manage->Database</p>  <p>Select the active NOAM server and click on the Report button at the bottom of the page. The following screen is displayed:</p>  <p>Click on Save and save the report to your local machine.</p>

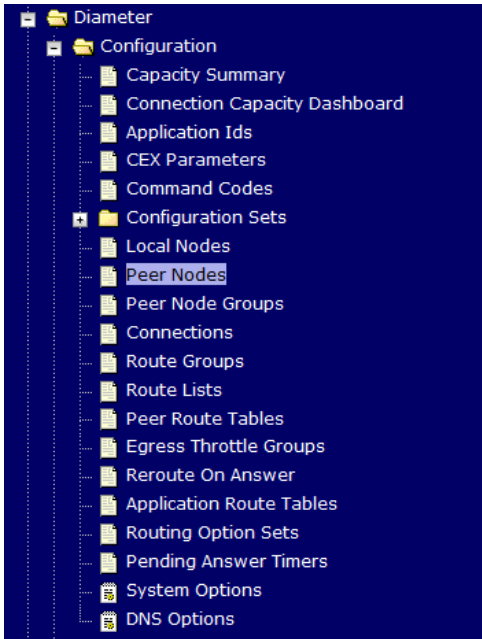
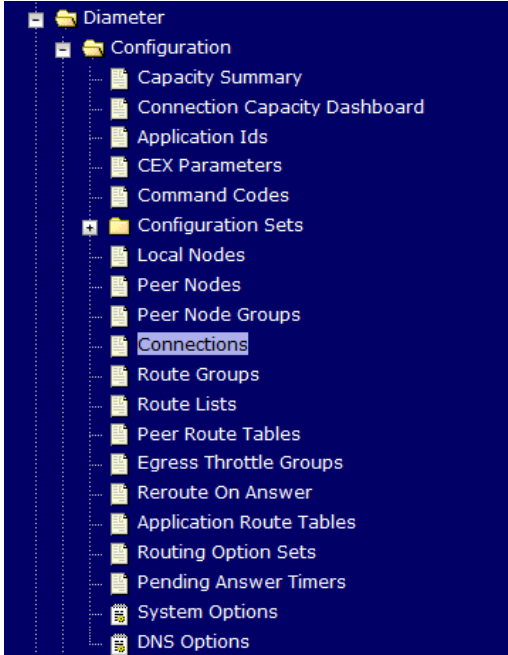
Procedure 3: Recovery Scenario 3

<p>28.</p> <p><input type="checkbox"/></p>	<p>ACTIVE NOAM: Verify Replication Between Servers.</p>	<p>Login to the Active NOAM via SSH terminal as <i>admusr</i> user. Execute the following command:</p> <pre>\$ sudo irepstat -m</pre> <p>Output like below shall be generated:</p> <pre>-- Policy 0 ActStb [DbReplication] ----- ----- RDU06-MP1 -- Stby BC From RDU06-S01 Active 0 0.50 ^0.17%cpu 42B/s A=none CC From RDU06-MP2 Active 0 0.10 ^0.17 0.88%cpu 32B/s A=none RDU06-MP2 -- Active BC From RDU06-S01 Active 0 0.50 ^0.10%cpu 33B/s A=none CC To RDU06-MP1 Active 0 0.10 0.08%cpu 20B/s A=none RDU06-N01 -- Active AB To RDU06-S01 Active 0 0.50 1%R 0.03%cpu 21B/s RDU06-S01 -- Active AB From RDU06-N01 Active 0 0.50 ^0.04%cpu 24B/s BC To RDU06-MP1 Active 0 0.50 1%R 0.04%cpu 21B/s BC To RDU06-MP2 Active 0 0.50 1%R 0.07%cpu 21B/s</pre>																																																																																								
<p>29.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Verify the Database states</p>	<p>Click on Main Menu->Status and Manager->Database</p>  <p>Verify that the “OAM Max HA Role” is either “Active” or “Standby” for NOAM and SOAM and “Application Max HA Role” for MPs is “Active”, and that the status is “Normal” as shown below:</p> <table border="1"> <thead> <tr> <th>Network Element</th> <th>Server</th> <th>Role</th> <th>OAM Max HA Role</th> <th>Application Max HA Role</th> <th>Status</th> <th>DB Level</th> <th>OAM Repl Status</th> <th>SIG Repl Status</th> <th>Repl Status</th> <th>Repl Audit Status</th> </tr> </thead> <tbody> <tr> <td>NO_10303</td> <td>NO2</td> <td>Network OAM&P</td> <td>Active</td> <td>OOS</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>NotApplicabl</td> <td>Allowed</td> <td>AutoInProg</td> </tr> <tr> <td>SO_10303</td> <td>PSBR</td> <td>MP</td> <td>Active</td> <td>Active</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>Normal</td> <td>Allowed</td> <td>AutoInProg</td> </tr> <tr> <td>SO_10303</td> <td>MP2</td> <td>MP</td> <td>Active</td> <td>Active</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>Normal</td> <td>Allowed</td> <td>AutoInProg</td> </tr> <tr> <td>SO_10303</td> <td>S01</td> <td>System OAM</td> <td>Standby</td> <td>OOS</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>NotApplicabl</td> <td>Allowed</td> <td>AutoInProg</td> </tr> <tr> <td>NO_10303</td> <td>NO1</td> <td>Network OAM&P</td> <td>Standby</td> <td>OOS</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>NotApplicabl</td> <td>Allowed</td> <td>AutoInProg</td> </tr> <tr> <td>SO_10303</td> <td>IPFE</td> <td>MP</td> <td>Active</td> <td>OOS</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>Normal</td> <td>Allowed</td> <td>AutoInProg</td> </tr> <tr> <td>SO_10303</td> <td>S02</td> <td>System OAM</td> <td>Active</td> <td>OOS</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>NotApplicabl</td> <td>Allowed</td> <td>AutoInProg</td> </tr> </tbody> </table>	Network Element	Server	Role	OAM Max HA Role	Application Max HA Role	Status	DB Level	OAM Repl Status	SIG Repl Status	Repl Status	Repl Audit Status	NO_10303	NO2	Network OAM&P	Active	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg	SO_10303	PSBR	MP	Active	Active	Normal	0	Normal	Normal	Allowed	AutoInProg	SO_10303	MP2	MP	Active	Active	Normal	0	Normal	Normal	Allowed	AutoInProg	SO_10303	S01	System OAM	Standby	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg	NO_10303	NO1	Network OAM&P	Standby	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg	SO_10303	IPFE	MP	Active	OOS	Normal	0	Normal	Normal	Allowed	AutoInProg	SO_10303	S02	System OAM	Active	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg
Network Element	Server	Role	OAM Max HA Role	Application Max HA Role	Status	DB Level	OAM Repl Status	SIG Repl Status	Repl Status	Repl Audit Status																																																																																
NO_10303	NO2	Network OAM&P	Active	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg																																																																																
SO_10303	PSBR	MP	Active	Active	Normal	0	Normal	Normal	Allowed	AutoInProg																																																																																
SO_10303	MP2	MP	Active	Active	Normal	0	Normal	Normal	Allowed	AutoInProg																																																																																
SO_10303	S01	System OAM	Standby	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg																																																																																
NO_10303	NO1	Network OAM&P	Standby	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg																																																																																
SO_10303	IPFE	MP	Active	OOS	Normal	0	Normal	Normal	Allowed	AutoInProg																																																																																
SO_10303	S02	System OAM	Active	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg																																																																																

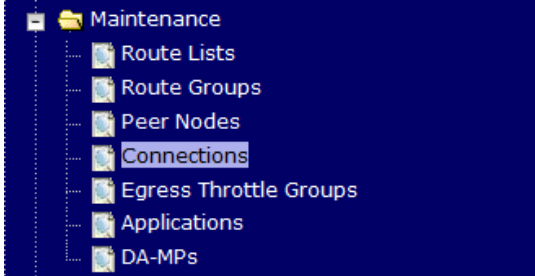

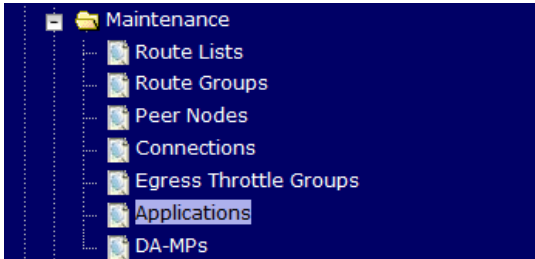

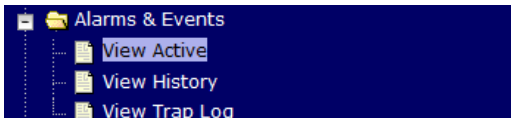
Procedure 3: Recovery Scenario 3

<p>30.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Verify the HA Status</p>	<p>Click on Main Menu->Status and Manage->HA</p>  <p>Select the row for all of the servers Verify that the “HA Role” is either “Active” or “Standby”.</p> <table border="1" data-bbox="488 716 1438 892"> <thead> <tr> <th>Hostname</th> <th>OAM Max HA Role</th> <th>Application Max HA Role</th> <th>Max Allowed HA Role</th> <th>Mate Hostname List</th> <th>Network Element</th> <th>Server Role</th> <th>Active VIPs</th> </tr> </thead> <tbody> <tr> <td>NO2</td> <td>Active</td> <td>OOS</td> <td>Active</td> <td>NO1</td> <td>NO_10303</td> <td>Network OAM&P</td> <td>10.240.70.132</td> </tr> <tr> <td>SO1</td> <td>Standby</td> <td>OOS</td> <td>Active</td> <td>SO2</td> <td>SO_10303</td> <td>System OAM</td> <td></td> </tr> <tr> <td>SO2</td> <td>Active</td> <td>OOS</td> <td>Active</td> <td>SO1</td> <td>SO_10303</td> <td>System OAM</td> <td>10.240.70.133</td> </tr> <tr> <td>MP1</td> <td>Standby</td> <td>Active</td> <td>Active</td> <td>MP2</td> <td>SO_10303</td> <td>MP</td> <td></td> </tr> <tr> <td>MP2</td> <td>Active</td> <td>Active</td> <td>Active</td> <td>MP1</td> <td>SO_10303</td> <td>MP</td> <td></td> </tr> <tr> <td>IPFE</td> <td>Active</td> <td>OOS</td> <td>Active</td> <td></td> <td>SO_10303</td> <td>MP</td> <td></td> </tr> </tbody> </table>	Hostname	OAM Max HA Role	Application Max HA Role	Max Allowed HA Role	Mate Hostname List	Network Element	Server Role	Active VIPs	NO2	Active	OOS	Active	NO1	NO_10303	Network OAM&P	10.240.70.132	SO1	Standby	OOS	Active	SO2	SO_10303	System OAM		SO2	Active	OOS	Active	SO1	SO_10303	System OAM	10.240.70.133	MP1	Standby	Active	Active	MP2	SO_10303	MP		MP2	Active	Active	Active	MP1	SO_10303	MP		IPFE	Active	OOS	Active		SO_10303	MP	
Hostname	OAM Max HA Role	Application Max HA Role	Max Allowed HA Role	Mate Hostname List	Network Element	Server Role	Active VIPs																																																			
NO2	Active	OOS	Active	NO1	NO_10303	Network OAM&P	10.240.70.132																																																			
SO1	Standby	OOS	Active	SO2	SO_10303	System OAM																																																				
SO2	Active	OOS	Active	SO1	SO_10303	System OAM	10.240.70.133																																																			
MP1	Standby	Active	Active	MP2	SO_10303	MP																																																				
MP2	Active	Active	Active	MP1	SO_10303	MP																																																				
IPFE	Active	OOS	Active		SO_10303	MP																																																				
<p>31.</p> <p><input type="checkbox"/></p>	<p>SOAM VIP GUI: Verify the Local Node Info</p>	<p>Navigate to Main Menu->Diameter->Configuration->Local Node</p>  <p>Verify that all the local nodes are shown.</p>																																																								

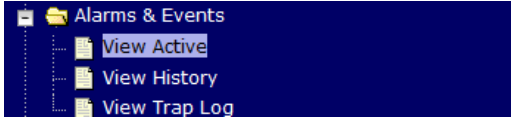
Procedure 3: Recovery Scenario 3

<p>32.</p> <p><input type="checkbox"/></p>	<p>SOAM VIP GUI: Verify the Peer Node Info</p>	<p>Navigate to Main Menu->Diameter->Configuration->Peer Node</p>  <p>Verify that all the peer nodes are shown.</p>
<p>33.</p> <p><input type="checkbox"/></p>	<p>SOAM VIP GUI: Verify the Connections Info</p>	<p>Navigate to Main Menu->Diameter->Configuration->Connections</p>  <p>Verify that all the connections are shown.</p>

Procedure 3: Recovery Scenario 3

<p>34. <input type="checkbox"/></p>	<p>SOAM VIP GUI: Enable Connections if needed</p>	<p>Navigate to Main Menu->Diameter->Maintenance->Connections</p>  <p>Select each connection and click on the Enable button. Alternatively you can enable all the connections by selecting the EnableAll button.</p>  <p>Verify that the Operational State is Available.</p>
<p>35. <input type="checkbox"/></p>	<p>SOAM VIP GUI: Enable Optional Features</p>	<p>Navigate to Main Menu -> Diameter -> Maintenance -> Applications</p>  <p>Select the optional feature application configured in step 31.</p> <p>Click the Enable button.</p> 
<p>36. <input type="checkbox"/></p>	<p>SOAM VIP GUI: Examine All Alarms</p>	<p>Navigate to Main Menu->Alarms & Events->View Active</p>  <p>Examine all active alarms and refer to the on-line help on how to address them.</p> <p>If needed contact Appendix E. My Oracle Support (MOS).</p>

Procedure 3: Recovery Scenario 3

<p>37. <input type="checkbox"/></p>	<p>NOAM VIP GUI: Examine All Alarms</p>	<p>Login to the NOAM VIP if not already logged in.</p> <p>Navigate to Main Menu->Alarms & Events->View Active</p>  <p>Examine all active alarms and refer to the on-line help on how to address them.</p> <p>If needed contact Appendix E. My Oracle Support (MOS).</p>
<p>38. <input type="checkbox"/></p>	<p>Restore GUI Usernames and Passwords</p>	<p>If applicable, Execute steps in Section 6.0 to recover the user and group information restored.</p>
<p>39. <input type="checkbox"/></p>	<p>Backup and Archive All the Databases from the Recovered System</p>	<p>Execute Appendix A. DSR Database Backup to back up the Configuration databases:</p>

5.1.4 Recovery Scenario 4 (Partial Server Outage with one NOAM server and one SOAM server intact)

For a partial outage with an NOAM server and an SOAM server intact and available, only base recovery of software is needed. The intact NO and SOAM servers are capable of restoring the database via replication to all servers. The major activities are summarized in the list below. Use this list to understand the recovery procedure summary. Do not use this list to execute the procedure. The actual procedures' detailed steps are in Procedure 4. The major activities are summarized as follows:

Recover Standby NOAM server by recovering software.

- Recover the software.


The database is intact at the active NOAM server and does not require restoration at the standby NOAM server.

- Recover any failed SO and MP servers by recovering software.
- Recover the software.

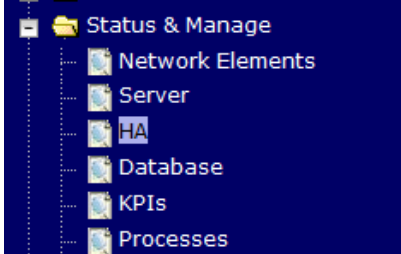
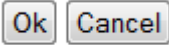
The database is intact at the active NOAM server and does not require restoration at the SO and MP servers.

- Re-apply signaling networks configuration if the failed VM is an MP.


Procedure 4: Recovery Scenario 4

<p>S T E P #</p>	<p>This procedure performs recovery if at least 1 NOAM server is intact and available and 1 SOAM server is intact and available.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, contact Appendix E. My Oracle Support (MOS), and ask for assistance.</p>	
<p>1. <input type="checkbox"/></p>	<p>Workarounds</p>	<p>Refer to Appendix D. Workarounds for Issues not fixed in this Release to understand any workarounds required during this procedure.</p>
<p>2. <input type="checkbox"/></p>	<p>Gather Required Materials</p>	<p>Gather the documents and required materials listed in Section 3.1 Required Materials</p>
<p>3. <input type="checkbox"/></p>	<p>NOAM VIP GUI: Login</p>	<p>Establish a GUI session on the NOAM server by using the VIP IP address of the NOAM server. Open the web browser and enter a URL of:</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p><code>http://<Primary_NOAM_VIP_IP_Address></code></p> </div> <p>Login as the <i>guiadmin</i> user:</p> <div style="text-align: center; margin: 20px 0;">  </div> <div style="text-align: center; margin: 10px 0;"> <p>Oracle System Login Fri Mar 20 12:29:52 2015 EDT</p> <hr style="width: 60%; margin: 0 auto;"/> </div> <div style="text-align: center; margin: 20px 0;"> <div style="border: 1px solid gray; padding: 10px; width: fit-content; margin: 0 auto;"> <p>Log In Enter your username and password to log in</p> <p>Username: <input type="text" value="guiadmin"/></p> <p>Password: <input type="password" value="••••••"/></p> <p><input type="checkbox"/> Change password</p> <p><input type="button" value="Log In"/></p> </div> </div> <p style="text-align: center; font-size: small;">Welcome to the Oracle System Login.</p> <p style="text-align: center; font-size: x-small;">Unauthorized access is prohibited. This Oracle system requires the use of Microsoft Internet Explorer 8.0, 9.0, or 10.0 with support for JavaScript and cookies.</p> <hr style="width: 60%; margin: 0 auto;"/> <p style="text-align: center; font-size: x-small;">Oracle and Java are registered trademarks of Oracle Corporation and/or its affiliates. Other names may be trademarks of their respective owners.</p>

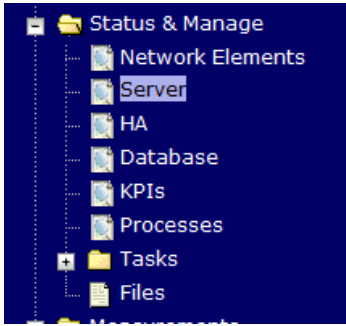
Procedure 4: Recovery Scenario 4

<p>4. <input type="checkbox"/></p>	<p>Active NOAM: Set Failed Servers to Standby</p>	<p>Navigate to Main Menu -> Status & Manage -> HA</p>  <p>Select Edit</p> <p>Set the Max Allowed HA Role drop down box to Standby for the failed servers.</p> <p>Select Ok</p> 
<p>5. <input type="checkbox"/></p>	<p>Recover the Failed Software</p>	<ol style="list-style-type: none"> 1. For NOAMPs execute the following procedures from reference [8]: <ol style="list-style-type: none"> a. Procedure 1 "Import DSR OVA" b. Procedure 2 "Configure NOAM guests role based on resource profile" 2. For SOAMPs execute the following procedures from reference [8]: <ol style="list-style-type: none"> c. Procedure 1 "Import DSR OVA" d. Procedure 3 "Configure Remaining DSR guests role based on resource profile" 3. For failed MPs execute the following procedures from reference [8]: <ol style="list-style-type: none"> e. Procedure 1 "Import DSR OVA" f. Procedure 3 "Configure Remaining DSR guests role based on resource profile"
<p>6. <input type="checkbox"/></p>	<p>Repeat for Remaining Failed Servers</p>	<p>If necessary, repeat 5 for all remaining failed servers.</p>

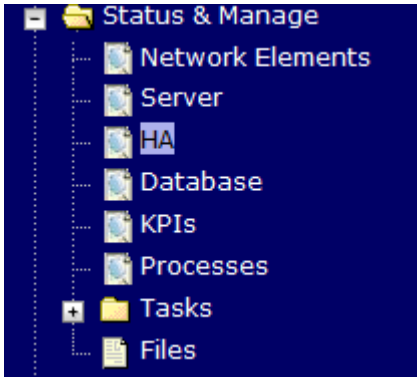
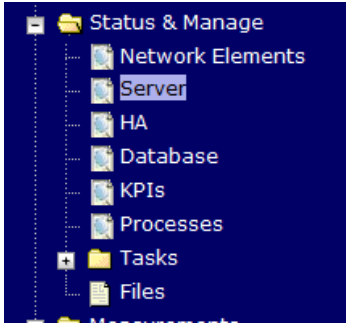
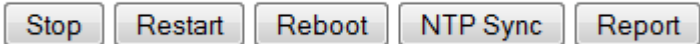
Procedure 4: Recovery Scenario 4

<p>7. <input type="checkbox"/></p>	<p>NOAM VIP GUI: Login</p>	<p>Establish a GUI session on the NOAM server by using the VIP IP address of the NOAM server. Open the web browser and enter a URL of:</p> <div style="border: 1px solid black; padding: 2px; margin: 10px 0;"> <p><code>http://<Primary_NOAM_VIP_IP_Address></code></p> </div> <p>Login as the guiadmin user:</p> 
<p>8. <input type="checkbox"/></p>	<p>NOAM VIP GUI: Recover Standby NOAM if needed</p>	<p>Install the second NOAM server by executing procedures from reference [8]:</p> <p>Procedure 6 “Configure the Second NOAMP Server” steps 1, 3-7</p> <p>Procedure 7 “Complete Configuring the NOAMP Server Group” Step 5</p> <p>Note: If Topology or nodeld alarms are persistent after the database restore, refer to Appendix D. Workarounds for Issues not fixed in this Release, or the next step below.</p>

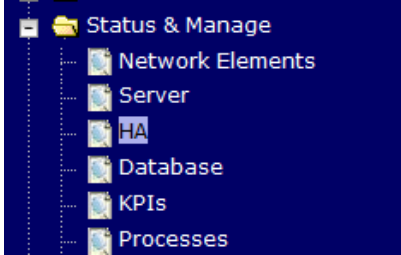
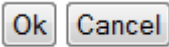
Procedure 4: Recovery Scenario 4

<p>9.</p> <p><input type="checkbox"/></p>	<p>(OPTIONAL) ACTIVE NOAM: Topology and nodeld alarm workaround</p>	<p>Get the clusterID of the NO using the following command:</p> <pre style="border: 1px solid black; padding: 5px;">\$ top.myrole myNodeId=A3603.215 myMasterCapable=true</pre> <p>Then update the clusterId field in RecognizedAuthority table to have the same clusterid:</p> <pre style="border: 1px solid black; padding: 5px;">\$ ivi RecognizedAuthority e.g. iload -ha -xU -frecNum -fclusterId -ftimestamp RecognizedAuthority \ <<'!!!!'</pre> <pre style="border: 1px solid black; padding: 5px;">0 A1878 1436913769646 !!!!</pre>
<p>10.</p> <p><input type="checkbox"/></p>	<p>(OPTIONAL) NOAM VIP GUI: Recover the Failed SOAM Servers if needed</p>	<p>Recover the remaining SOAM servers (standby, spare) by repeating the following steps for each SOAM server from reference [8]:</p> <p>Procedure 9 “Configure the SOAM Servers”, steps 1, 3- 6</p> <p>NOTE: Wait for server to reboot before continuing.</p>
<p>11.</p> <p><input type="checkbox"/></p>	<p>(OPTIONAL) NOAM VIP GUI: Restart DSR application</p>	<p>Navigate to Main Menu->Status & Manage->Server,</p>  <p>Select the recovered server and click on Restart.</p> <div style="display: flex; justify-content: center; gap: 10px;"> Stop Restart Reboot NTP Sync Report </div>

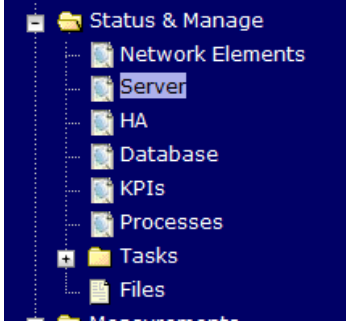
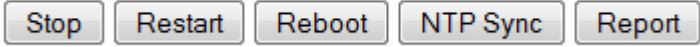
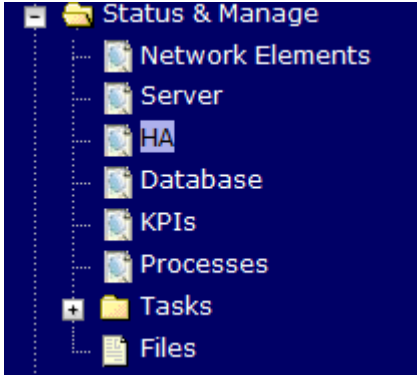
Procedure 4: Recovery Scenario 4

<p>12.</p> <p><input type="checkbox"/></p>	<p>(OPTIONAL) NOAM VIP GUI: Set HA on Recovered Servers</p>	<p>Navigate to Status & Manage -> HA</p>  <p>Click on Edit at the bottom of the screen</p> <p>For each server whose Max Allowed HA Role is set to Standby, set it to Active</p> <p>Press OK</p>
<p>13.</p> <p><input type="checkbox"/></p>	<p>(OPTIONAL) NOAM VIP GUI: Re-Sync NTP</p>	<p>Navigate to Status & Manage -> Server</p>  <p>Select each server that has been recovered and click NTP Sync.</p> 

Procedure 4: Recovery Scenario 4

<p>14.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Set HA on Failed C-Level Servers</p>	<p>Navigate to Main Menu -> Status & Manage -> HA</p>  <p>Select Edit</p> <p>Set the Max Allowed HA Role drop down box to Standby for the failed servers.</p> <p>Select Ok</p> 
<p>15.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Recover the C-Level Server (DA-MP, SBRs, IPFE, SS7-MP)</p>	<p>Establish a SSH session to the C Level server being recovered, login as admusr.</p> <p>Execute following command to set shared memory to unlimited:</p> <pre>\$ sudo sh1.set -m 0</pre> <p>Execute following command ONLY when the recovered C-Level server is of type IPFE:</p> <pre>\$ sudo ipfeNetUpdate.sh</pre> <p>Execute the following procedures from [8] FOR EACH server that has been recovered:</p> <p>Procedure 12 “Configure the MP Virtual Machines”, Steps 1, 4-11.</p>

Procedure 4: Recovery Scenario 4

<p>16. <input type="checkbox"/></p>	<p>NOAM VIP GUI: Restart DSR Application on recovered C-Level Servers.</p>	<p>Navigate to Main Menu->Status & Manage->Server</p>  <p>Select the recovered servers and click on Restart.</p> 
<p>17. <input type="checkbox"/></p>	<p>NOAM VIP GUI: Set HA on all C-Level Servers</p>	<p>Navigate to Status & Manage -> HA</p>  <p>Click on Edit at the bottom of the screen</p> <p>For each server whose Max Allowed HA Role is set to Standby, set it to Active</p> <p>Press OK</p>
<p>18. <input type="checkbox"/></p>	<p>ACTIVE NOAM: Login</p>	<p>Login to the recovered Active NOAM via SSH terminal as admusr user.</p>
<p>19. <input type="checkbox"/></p>	<p>Active SOAM: Prepare recovered SOAM for optional feature activation</p>	<p>If DSR 7.1, skip this step</p> <p>Establish an SSH session to the Active SOAM, login as admusr.</p> <p>Execute the following command:</p> <pre style="border: 1px solid black; padding: 5px;">\$ irem DsrApplication where "name in ('RBAR', 'FABR', 'PCA', 'MD-IWF', 'DM-IWF', 'CPA', 'GLA')"</pre>

Procedure 4: Recovery Scenario 4

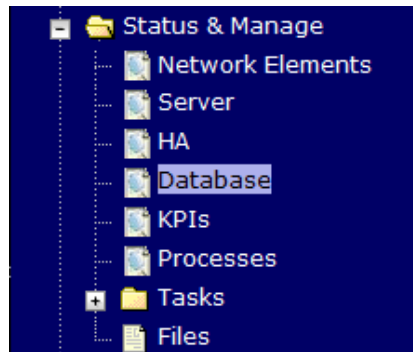
<p>20.</p> <p><input type="checkbox"/></p>	<p>Active SOAM: Verify Preparation</p>	<p>If DSR 7.1, skip this step.</p> <p>Execute the following command to verify preparation of optional feature activation:</p> <pre style="border: 1px solid black; padding: 5px;">\$ iqt -z -h -p -fname DsrApplication where "name in ('RBAR', 'FABR', 'PCA', 'MD-IWF', 'DM-IWF', 'CPA', 'GLA')"</pre> <p>Note: There should be no output of this command, if there is, verify the correct entry of the command in step 22.</p>
<p>21.</p> <p><input type="checkbox"/></p>	<p>ACTIVE NOAM: Perform key exchange between the active-NOAM and recovered servers.</p>	<p>Establish an SSH session to the Active NOAM, login as admusr.</p> <p>Execute the following command to perform a keyexchange from the active NOAM to each recovered server:</p> <pre style="border: 1px solid black; padding: 5px;">\$ keyexchange admusr@<Recovered Server Hostname></pre>
<p>22.</p> <p><input type="checkbox"/></p>	<p>ACTIVE NOAM: Activate Optional Features</p>	<p>Establish an SSH session to the active NOAM, login as admusr.</p> <p>Refer to section 1.5 Optional Features to activate any features that were previously activated.</p>

Procedure 4: Recovery Scenario 4

23.

NOAM VIP GUI:
Fetch and Store
the database
Report for the
Newly Restored
Data and Save it

Navigate to **Main Menu->Status & Manage->Database**



Select the **active** NOAM server and click on the **Report** button at the bottom of the page. The following screen is displayed:

Main Menu: Status & Manage -> Database [Report] Help

Tue Oct 05 15:13:38 2010 UTC

```

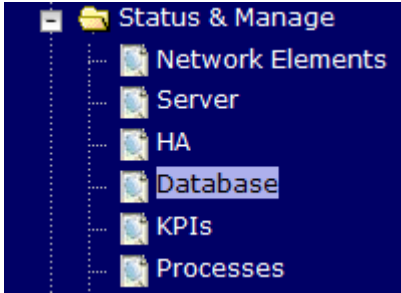
=====
N P Q R Database Status Report
-----
Report Generated: Tue Oct 05 15:13:38 2010 UTC
From: Active Network OAM&P on host blade07
Report Version: 3.0.13-3.0.0_10.13.0
User: guadmin
=====
General
-----
Hostname           : blade07
Appworks Database Version : 3.0
Application Database Version :
Capacities and Utilization
-----
Disk Utilization   0.6%: 249M used of 40G total, 38G available
Memory Utilization 0.6%: 136M used of 23975M total, 23839M available
Alarms
-----
None
Maintenance in Progress
-----
Restore operation success
Service Information
-----
Part: A_NpqrProvPart
=====
Table Name      Row Size  Num  Memory  Disk
Schema  Avg  Max  Rows  Used / Alloc  Used / Alloc
-----
CgPa           44          1  44 B   44 B   44 B
CgPaGta        52          0    0 B    0 B    0 B
CgPaInfo       64          1  64 B   64 B   64 B
CgPaOpc        36          0    0 B    0 B    0 B
CountryCode    24          306 7344 B 7344 B 7344 B
GTConfig       52          2  104 B  104 B  104 B
MccMnc         40          0    0 B    0 B    0 B
Msisdn         52          0    0 B    0 B    0 B
Msrn           68          0    0 B    0 B    0 B
NpqrMeOptions  276         0    0 B    0 B    0 B
=====

```

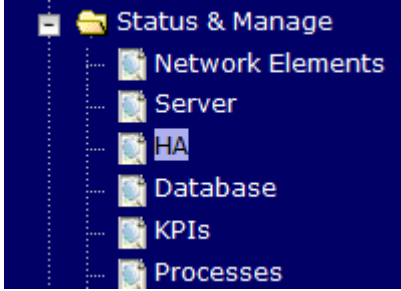
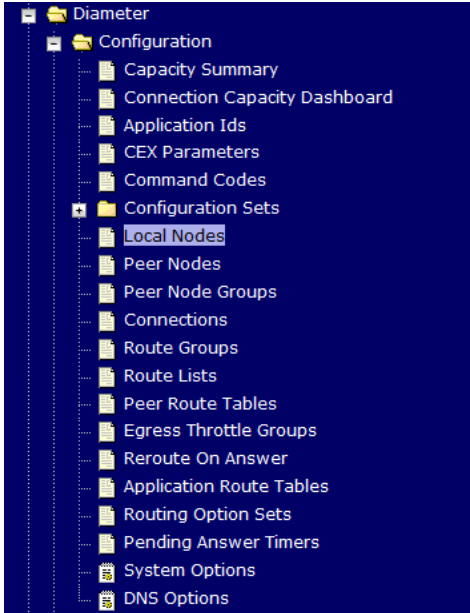
Print Save

Click on **Save** and save the report to your local machine.

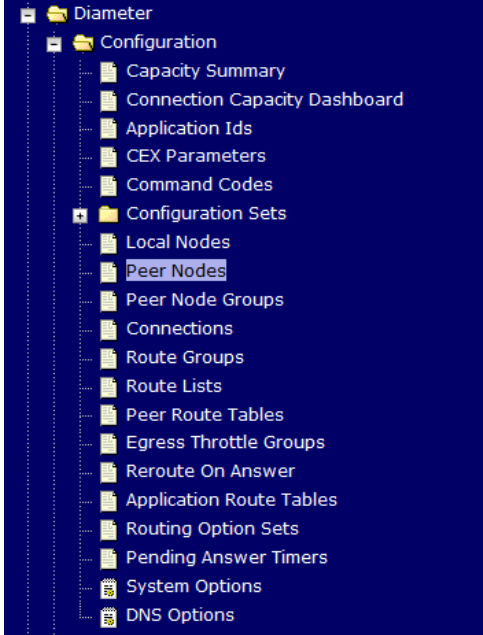
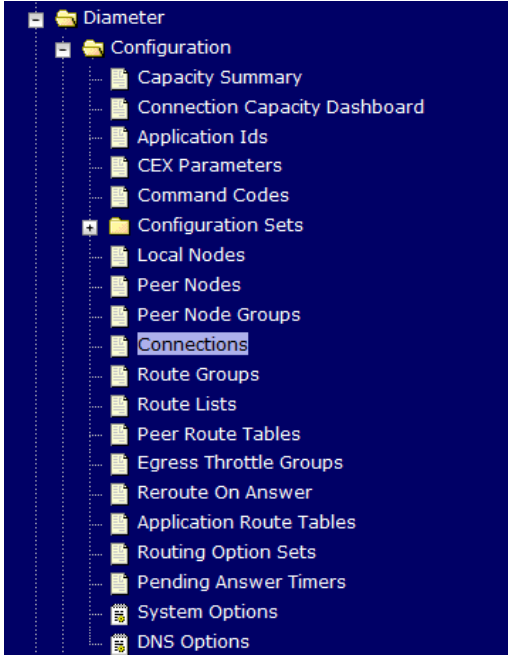
Procedure 4: Recovery Scenario 4

<p>24.</p> <p><input type="checkbox"/></p>	<p>ACTIVE NOAM: Verify Replication Between Servers.</p>	<p>Login to the Active NOAM via SSH terminal as admusr user. Execute the following command:</p> <pre>\$ sudo irepstat -m</pre> <p>Output like below shall be generated:</p> <pre>-- Policy 0 ActStb [DbReplication] ----- ----- RDU06-MP1 -- Stby BC From RDU06-S01 Active 0 0.50 ^0.17%cpu 42B/s A=none CC From RDU06-MP2 Active 0 0.10 ^0.17 0.88%cpu 32B/s A=none RDU06-MP2 -- Active BC From RDU06-S01 Active 0 0.50 ^0.10%cpu 33B/s A=none CC To RDU06-MP1 Active 0 0.10 0.08%cpu 20B/s A=none RDU06-N01 -- Active AB To RDU06-S01 Active 0 0.50 1%R 0.03%cpu 21B/s RDU06-S01 -- Active AB From RDU06-N01 Active 0 0.50 ^0.04%cpu 24B/s BC To RDU06-MP1 Active 0 0.50 1%R 0.04%cpu 21B/s BC To RDU06-MP2 Active 0 0.50 1%R 0.07%cpu 21B/s</pre>																																																																																								
<p>25.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Verify the Database states</p>	<p>Click on Main Menu->Status and Manager->Database</p>  <p>Verify that the “OAM Max HA Role” is either “Active” or “Standby” for NOAM and SOAM and “Application Max HA Role” for MPs is “Active”, and that the status is “Normal” as shown below:</p> <table border="1" data-bbox="488 1478 1430 1682"> <thead> <tr> <th>Network Element</th> <th>Server</th> <th>Role</th> <th>OAM Max HA Role</th> <th>Application Max HA Role</th> <th>Status</th> <th>DB Level</th> <th>OAM Repl Status</th> <th>SIG Repl Status</th> <th>Repl Status</th> <th>Repl Audit Status</th> </tr> </thead> <tbody> <tr> <td>NO_10303</td> <td>NO2</td> <td>Network OAM&P</td> <td>Active</td> <td>OOS</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>NotApplicabl</td> <td>Allowed</td> <td>AutoInProg</td> </tr> <tr> <td>SO_10303</td> <td>PSBR</td> <td>MP</td> <td>Active</td> <td>Active</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>Normal</td> <td>Allowed</td> <td>AutoInProg</td> </tr> <tr> <td>SO_10303</td> <td>MP2</td> <td>MP</td> <td>Active</td> <td>Active</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>Normal</td> <td>Allowed</td> <td>AutoInProg</td> </tr> <tr> <td>SO_10303</td> <td>S01</td> <td>System OAM</td> <td>Standby</td> <td>OOS</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>NotApplicabl</td> <td>Allowed</td> <td>AutoInProg</td> </tr> <tr> <td>NO_10303</td> <td>NO1</td> <td>Network OAM&P</td> <td>Standby</td> <td>OOS</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>NotApplicabl</td> <td>Allowed</td> <td>AutoInProg</td> </tr> <tr> <td>SO_10303</td> <td>IPFE</td> <td>MP</td> <td>Active</td> <td>OOS</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>Normal</td> <td>Allowed</td> <td>AutoInProg</td> </tr> <tr> <td>SO_10303</td> <td>S02</td> <td>System OAM</td> <td>Active</td> <td>OOS</td> <td>Normal</td> <td>0</td> <td>Normal</td> <td>NotApplicabl</td> <td>Allowed</td> <td>AutoInProg</td> </tr> </tbody> </table>	Network Element	Server	Role	OAM Max HA Role	Application Max HA Role	Status	DB Level	OAM Repl Status	SIG Repl Status	Repl Status	Repl Audit Status	NO_10303	NO2	Network OAM&P	Active	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg	SO_10303	PSBR	MP	Active	Active	Normal	0	Normal	Normal	Allowed	AutoInProg	SO_10303	MP2	MP	Active	Active	Normal	0	Normal	Normal	Allowed	AutoInProg	SO_10303	S01	System OAM	Standby	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg	NO_10303	NO1	Network OAM&P	Standby	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg	SO_10303	IPFE	MP	Active	OOS	Normal	0	Normal	Normal	Allowed	AutoInProg	SO_10303	S02	System OAM	Active	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg
Network Element	Server	Role	OAM Max HA Role	Application Max HA Role	Status	DB Level	OAM Repl Status	SIG Repl Status	Repl Status	Repl Audit Status																																																																																
NO_10303	NO2	Network OAM&P	Active	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg																																																																																
SO_10303	PSBR	MP	Active	Active	Normal	0	Normal	Normal	Allowed	AutoInProg																																																																																
SO_10303	MP2	MP	Active	Active	Normal	0	Normal	Normal	Allowed	AutoInProg																																																																																
SO_10303	S01	System OAM	Standby	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg																																																																																
NO_10303	NO1	Network OAM&P	Standby	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg																																																																																
SO_10303	IPFE	MP	Active	OOS	Normal	0	Normal	Normal	Allowed	AutoInProg																																																																																
SO_10303	S02	System OAM	Active	OOS	Normal	0	Normal	NotApplicabl	Allowed	AutoInProg																																																																																

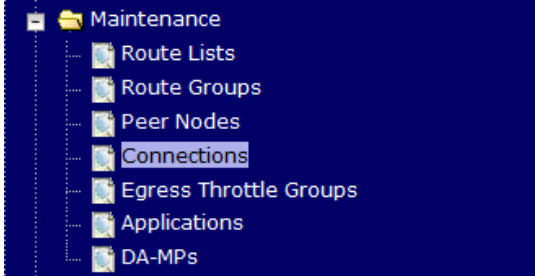
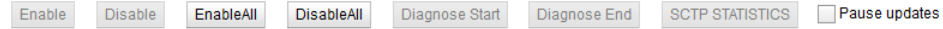
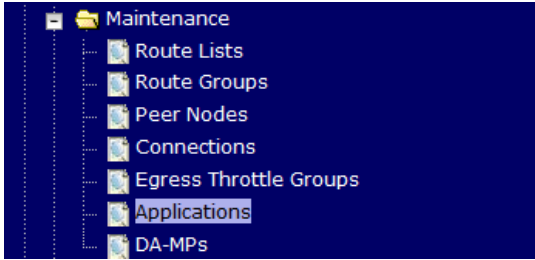

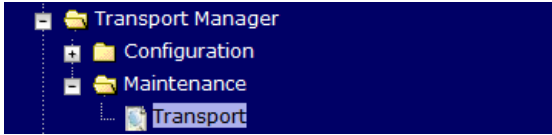
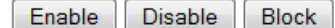
Procedure 4: Recovery Scenario 4

<p>26.</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Verify the HA Status</p>	<p>Click on Main Menu->Status and Manage->HA</p>  <p>Select the row for all of the servers Verify that the “HA Role” is either “Active” or “Standby”.</p> <table border="1" data-bbox="488 716 1438 892"> <thead> <tr> <th>Hostname</th> <th>OAM Max HA Role</th> <th>Application Max HA Role</th> <th>Max Allowed HA Role</th> <th>Mate Hostname List</th> <th>Network Element</th> <th>Server Role</th> <th>Active VIPs</th> </tr> </thead> <tbody> <tr> <td>NO2</td> <td>Active</td> <td>OOS</td> <td>Active</td> <td>NO1</td> <td>NO_10303</td> <td>Network OAM&P</td> <td>10.240.70.132</td> </tr> <tr> <td>SO1</td> <td>Standby</td> <td>OOS</td> <td>Active</td> <td>SO2</td> <td>SO_10303</td> <td>System OAM</td> <td></td> </tr> <tr> <td>SO2</td> <td>Active</td> <td>OOS</td> <td>Active</td> <td>SO1</td> <td>SO_10303</td> <td>System OAM</td> <td>10.240.70.133</td> </tr> <tr> <td>MP1</td> <td>Standby</td> <td>Active</td> <td>Active</td> <td>MP2</td> <td>SO_10303</td> <td>MP</td> <td></td> </tr> <tr> <td>MP2</td> <td>Active</td> <td>Active</td> <td>Active</td> <td>MP1</td> <td>SO_10303</td> <td>MP</td> <td></td> </tr> <tr> <td>IPFE</td> <td>Active</td> <td>OOS</td> <td>Active</td> <td></td> <td>SO_10303</td> <td>MP</td> <td></td> </tr> </tbody> </table>	Hostname	OAM Max HA Role	Application Max HA Role	Max Allowed HA Role	Mate Hostname List	Network Element	Server Role	Active VIPs	NO2	Active	OOS	Active	NO1	NO_10303	Network OAM&P	10.240.70.132	SO1	Standby	OOS	Active	SO2	SO_10303	System OAM		SO2	Active	OOS	Active	SO1	SO_10303	System OAM	10.240.70.133	MP1	Standby	Active	Active	MP2	SO_10303	MP		MP2	Active	Active	Active	MP1	SO_10303	MP		IPFE	Active	OOS	Active		SO_10303	MP	
Hostname	OAM Max HA Role	Application Max HA Role	Max Allowed HA Role	Mate Hostname List	Network Element	Server Role	Active VIPs																																																			
NO2	Active	OOS	Active	NO1	NO_10303	Network OAM&P	10.240.70.132																																																			
SO1	Standby	OOS	Active	SO2	SO_10303	System OAM																																																				
SO2	Active	OOS	Active	SO1	SO_10303	System OAM	10.240.70.133																																																			
MP1	Standby	Active	Active	MP2	SO_10303	MP																																																				
MP2	Active	Active	Active	MP1	SO_10303	MP																																																				
IPFE	Active	OOS	Active		SO_10303	MP																																																				
<p>27.</p> <p><input type="checkbox"/></p>	<p>SOAM VIP GUI: Verify the Local Node Info</p>	<p>Navigate to Main Menu->Diameter->Configuration->Local Node</p>  <p>Verify that all the local nodes are shown.</p>																																																								

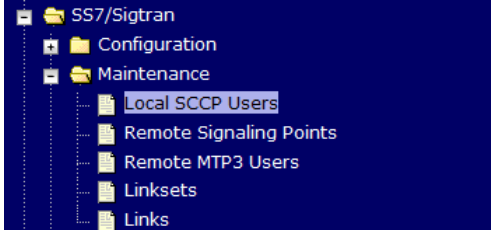

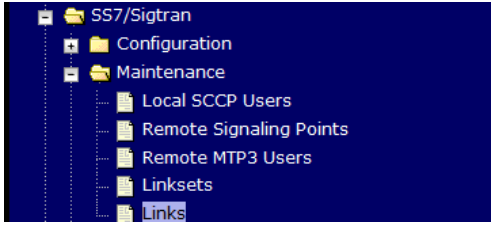

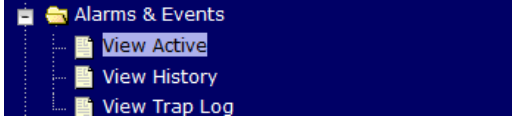
Procedure 4: Recovery Scenario 4

<p>28.</p> <p><input type="checkbox"/></p>	<p>SOAM VIP GUI: Verify the Peer Node Info</p>	<p>Navigate to Main Menu->Diameter->Configuration->Peer Node</p>  <p>Verify that all the peer nodes are shown.</p>
<p>29.</p> <p><input type="checkbox"/></p>	<p>SOAM VIP GUI: Verify the Connections Info</p>	<p>Navigate to Main Menu->Diameter->Configuration->Connections</p>  <p>Verify that all the connections are shown.</p>

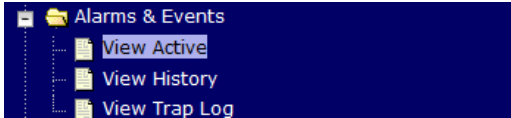
Procedure 4: Recovery Scenario 4

<p>30. <input type="checkbox"/></p>	<p>SOAM VIP GUI: Enable Connections if needed</p>	<p>Navigate to Main Menu->Diameter->Maintenance->Connections</p>  <p>Select each connection and click on the Enable button.</p> <p>Alternatively you can enable all the connections by selecting the EnableAll button.</p>  <p>Verify that the Operational State is Available.</p>
<p>31. <input type="checkbox"/></p>	<p>SOAM VIP GUI: Enable Optional Features</p>	<p>Navigate to Main Menu -> Diameter -> Maintenance -> Applications</p>  <p>Select the optional feature application configured in step 22.</p> <p>Click the Enable button.</p> 
<p>32. <input type="checkbox"/></p>	<p>SOAM VIP GUI: Re-enable Transports if Needed</p>	<p>Navigate to Main Menu->Transport Manager -> Maintenance -> Transport</p>  <p>Select each transport and click on the Enable button</p>  <p>Verify that the Operational Status for each transport is Up.</p>

Procedure 4: Recovery Scenario 4

<p>33. <input type="checkbox"/></p>	<p>SOAM VIP GUI: Re-enable MAPIWF application if needed</p>	<p>Navigate to Main Menu->SS7/Sigtran->Maintenance->Local SCCP Users</p>  <p>Click on the Enable button corresponding to MAPIWF Application Name.</p>  <p>Verify that the SSN Status is Enabled.</p>
<p>34. <input type="checkbox"/></p>	<p>SOAM VIP GUI: Re-enable links if needed</p>	<p>Navigate to Main Menu->SS7/Sigtran->Maintenance->Links</p>  <p>Click on Enable button for each link.</p>  <p>Verify that the Operational Status for each link is Up.</p>
<p>35. <input type="checkbox"/></p>	<p>SOAM VIP GUI: Examine All Alarms</p>	<p>Navigate to Main Menu->Alarms & Events->View Active</p>  <p>Examine all active alarms and refer to the on-line help on how to address them.</p> <p>If needed contact Appendix E. My Oracle Support (MOS).</p>

Procedure 4: Recovery Scenario 4

<p>36. <input type="checkbox"/></p>	<p>NOAM VIP GUI: Examine All Alarms</p>	<p>Login to the NOAM VIP if not already logged in.</p> <p>Navigate to Main Menu->Alarms & Events->View Active</p>  <p>Examine all active alarms and refer to the on-line help on how to address them.</p> <p>If needed contact Appendix E. My Oracle Support (MOS).</p>
<p>37. <input type="checkbox"/></p>	<p>Restart oampAgent if Needed</p>	<p>Note: If alarm “10012: The responder for a monitored table failed to respond to a table change” is raised, the oampAgent needs to be restarted.</p> <p>Establish an SSH session to each server that has the alarm. Login as admusr</p> <p>Execute the following commands:</p> <pre data-bbox="488 884 992 978">\$ sudo pm.set off oampAgent \$ sudo pm.set on oampAgent</pre>
<p>38. <input type="checkbox"/></p>	<p>Backup and Archive All the Databases from the Recovered System</p>	<p>Execute Appendix A. DSR Database Backup to back up the Configuration databases:</p>

5.1.5 Recovery Scenario 5 (Database Recovery)

5.1.5.1 Recovery Scenario 5: Case 1

For a partial outage with

- Server having a corrupted database
- Replication channel from parent is inhibited because of upgrade activity or
- Server is in a different release then that of its Active parent because of upgrade activity.
- Verify that the Server Runtime backup files, performed at the start of the upgrade, are present in /var/TKLC/db/filemgmt area in the following format
 - Backup.DSR.HPC02-NO2.FullDBParts.NETWORK_OAMP.20140524_223507.UPG.tar.bz2
 - Backup.DSR.HPC02-NO2.FullRunEnv.NETWORK_OAMP.20140524_223507.UPG.tar.bz2

Note: During recovery, the corrupted Database will get replaced by the sever Runtime backup. Any configuration done after taking the backup will not be visible post recovery.

Procedure 5: Recovery Scenario 5 (Case 1)

S T E P #	This procedure performs recovery if database is corrupted in the system	
	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
	If this procedure fails, contact Appendix E. My Oracle Support (MOS), and ask for assistance.	
1. <input type="checkbox"/>	Workarounds	Refer to Appendix D . Workarounds for Issues not fixed in this Release to understand any workarounds required during this procedure.
2. <input type="checkbox"/>	Server in Question: Login	Establish an SSH session to the server in question. Login as admusr user.
3. <input type="checkbox"/>	Server in Question: Change runlevel to 3	Execute the following command to bring the system to runlevel 3. <pre>\$ sudo init 3</pre>
4. <input type="checkbox"/>	Server in Question: Recover System	Execute the following command and follow the instructions appearing the console prompt <pre>\$ sudo /usr/TKLC/appworks/sbin/backout_restore</pre>
5. <input type="checkbox"/>	Server in Question: Change runlevel to 4	Execute the following command to bring the system back to runlevel 4. <pre>\$ sudo init 6</pre>

Procedure 5: Recovery Scenario 5 (Case 1)

6. <input type="checkbox"/>	Server in Question: Verify the server	Execute the following command to verify if the processes are up and running <pre>\$ sudo pm.getprocs</pre>
7. <input type="checkbox"/>	Backup and Archive All the Databases from the Recovered System	Execute Appendix A. DSR Database Backup to back up the Configuration databases:

5.1.5.2 Recovery Scenario 5: Case 2

For a partial outage with

- Server having a corrupted database
- Replication channel is not inhibited or
- Server has the same release as that of its Active parent

Procedure 6: Recovery Scenario 5 (Case 2)

S T E P #	<p>This procedure performs recovery if database got corrupted in the system and system is in the state to get replicated</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, contact Appendix E. My Oracle Support (MOS), and ask for assistance.</p>	
1. <input type="checkbox"/>	Workarounds	Refer to Appendix D. Workarounds for Issues not fixed in this Release to understand any workarounds required during this procedure.
2. <input type="checkbox"/>	Server in Question: Login	Establish an SSH session to the server in question. Login as admusr user.
3. <input type="checkbox"/>	Server in Question: Take Server out of Service	<p>Execute the following command to take the server out of service.</p> <pre>\$ sudo bash -l \$ sudo prod.clobber</pre>
4. <input type="checkbox"/>	Server in Question: Take Server to DbUp State and Start the Application	<p>Execute the following commands to take the server to Dbup and start the DSR application:</p> <pre>\$ sudo bash -l \$ sudo prod.start</pre>
5. <input type="checkbox"/>	Server in Question: Verify the Server State	<p>Execute the following commands to verify the processes are up and running:</p> <pre>\$ sudo pm.getprocs</pre> <p>Execute the following command to verify if replication channels are up and running:</p> <pre>\$ sudo irepstat</pre> <p>Execute the following command to verify if merging channels are up and running:</p> <pre>\$ sudo inetmstat</pre>

Procedure 6: Recovery Scenario 5 (Case 2)

6. <input type="checkbox"/>	Backup and Archive All the Databases from the Recovered System	Execute Appendix A. DSR Database Backup to back up the Configuration databases:
--------------------------------	---	--

6.0 Resolving User Credential Issues after Database Restore

User incompatibilities may introduce security holes or prevent access to the network by administrators. User incompatibilities are not dangerous to the database, however. Review each user difference carefully to ensure that the restoration will not impact security or accessibility.


6.1 Restoring a Deleted User

<p>- User 'testuser' exists in the selected backup file but not in the current database.</p>
--

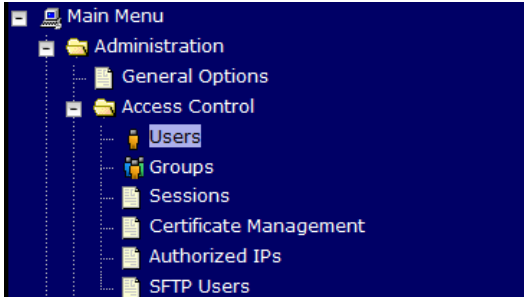

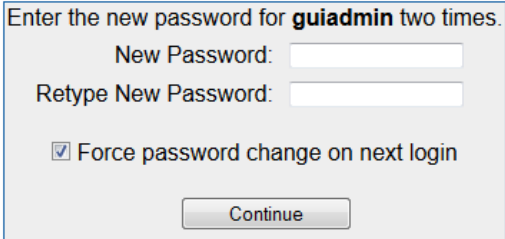
These users were removed prior to creation of the backup and archive file. They will be reintroduced by system restoration of that file.

6.2 Keeping a Restored user

Procedure 7: Keep Restored User


S T E P #	<p>Perform this procedure to keep users that will be restored by system restoration.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, contact Appendix E. My Oracle Support (MOS), and ask for assistance.</p>	
1. <input type="checkbox"/>	<p>Before Restoration: Notify Affected Users Before Restoration</p>	<p>Contact each user that is affected before the restoration and notify them that you will reset their password during this maintenance operation.</p>
2. <input type="checkbox"/>	<p>After Restoration: Login to the NOAM VIP</p>	<p>Establish a GUI session on the NOAM server by using the VIP IP address of the NOAM server. Open the web browser and enter a URL of:</p> <div style="border: 1px solid black; padding: 2px; margin: 5px 0;"> <p><code>http://<Primary_NOAM_VIP_IP_Address></code></p> </div> <p>Login as the guiadmin user:</p> <div style="text-align: center;">  </div>

Procedure 7: Keep Restored User

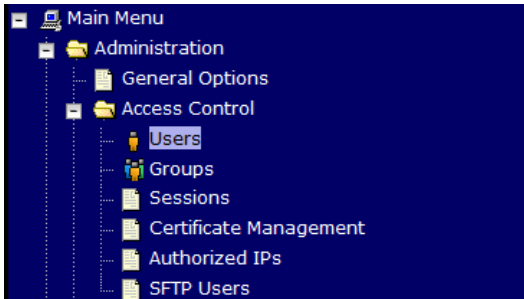

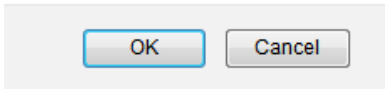
<p>3.</p> <p><input type="checkbox"/></p>	<p>After Restoration: Reset User Passwords</p>	<p>Navigate to Administration -> Access Control -> Users</p>  <p>Select the user</p> <p>Click the Change Password button</p>  <p>Enter a new password</p>  <p>Click the Continue button</p>
---	---	---

6.3 Removing a Restored User

Procedure 8: Remove the Restored User

S T E P #	<p>Perform this procedure to remove users that will be restored by system restoration</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, contact Appendix E. My Oracle Support (MOS), and ask for assistance.</p>	
<p>1.</p> <p><input type="checkbox"/></p>	<p>After Restoration: Login to the NOAM VIP</p>	<p>Establish a GUI session on the NOAM server by using the VIP IP address of the NOAM server. Open the web browser and enter a URL of:</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p><code>http://<Primary_NOAM_VIP_IP_Address></code></p> </div> <p>Login as the guiadmin user:</p> <div style="text-align: center;">  </div>

Procedure 8: Remove the Restored User

<p>2.</p> <p><input type="checkbox"/></p>	<p>After Restoration: Reset User Passwords</p>	<p>Navigate to Administration -> Access Control -> Users</p>  <p>Select the user</p> <p>Click the Delete button</p>  <p>Delete selected users?</p>  <p>Click the OK button to confirm.</p>
---	---	--

6.4 Restoring a Modified User

These users have had a password change prior to creation of the backup and archive file. They will be reverted by system restoration of that file.

- The password for user 'testuser' differs between the selected backup file and the current database.

Before Restoration:

Verify that you have access to a user with administrator permissions that is not affected.

Contact each user that is affected and notify them that you will reset their password during this maintenance operation.

After Restoration:

Log in and reset the passwords for all users in this category. See the steps in Appendix E. My Oracle Support (MOS) for resetting passwords for a user.

6.5 Restoring an Archive that does not contain a Current User

These users have been created after the creation of the backup and archive file. They will be deleted by system restoration of that file.


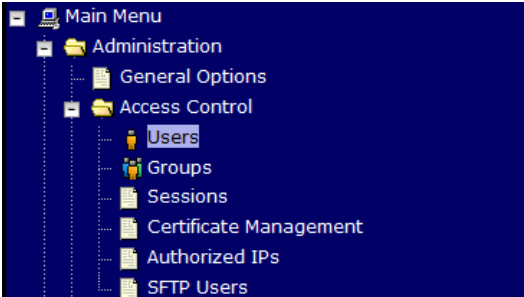
- User 'testuser' exists in current database but not in the selected backup file.

If the user is no longer desired, do not perform any additional steps. The user is permanently removed.


Procedure 9: Restoring an Archive that does not Contain a Current User

S T E P #	Perform this procedure to remove users that will be restored by system restoration	
	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
	If this procedure fails, contact Appendix E. My Oracle Support (MOS), and ask for assistance.	
1. <input type="checkbox"/>	Before Restoration: Notify Affected Users Before Restoration	Contact each user that is affected before the restoration and notify them that you will reset their password during this maintenance operation.

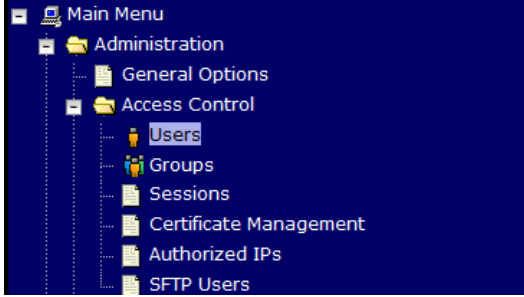
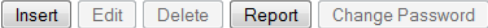

Procedure 9: Restoring an Archive that does not Contain a Current User

<p>2.</p> <p><input type="checkbox"/></p>	<p>Before Restoration: Login to the NOAM VIP</p>	<p>Establish a GUI session on the NOAM server by using the VIP IP address of the NOAM server. Open the web browser and enter a URL of:</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px auto;"> <p><code>http://<Primary_NOAM_VIP_IP_Address></code></p> </div> <p>Login as the <i>guiadmin</i> user:</p> <div style="text-align: center;">  <p>The image shows the Oracle System Login web page. At the top is the Oracle logo in red. Below it is the text 'Oracle System Login' and the date 'Fri Mar 20 12:29:52 2015 EDT'. In the center is a 'Log In' box with the instruction 'Enter your username and password to log in'. It contains fields for 'Username: guiadmin' and 'Password: ●●●●●●', a 'Change password' checkbox, and a 'Log In' button. Below the box is a 'Welcome to the Oracle System Login.' message and a disclaimer: 'Unauthorized access is prohibited. This Oracle system requires the use of Microsoft Internet Explorer 8.0, 9.0, or 10.0 with support for JavaScript and cookies.' At the bottom, it states 'Oracle and Java are registered trademarks of Oracle Corporation and/or its affiliates. Other names may be trademarks of their respective owners.'</p> </div>
<p>3.</p> <p><input type="checkbox"/></p>	<p>Before Restoration: Record user settings</p>	<p>Navigate to Administration -> Access Control -> Users</p> <div style="text-align: center;">  <p>The image is a screenshot of the Oracle Administration console. It shows a tree view under 'Main Menu' with 'Administration' expanded to 'Access Control', which is further expanded to 'Users'. Other items in the tree include 'General Options', 'Groups', 'Sessions', 'Certificate Management', 'Authorized IPs', and 'SFTP Users'.</p> </div> <p>Under each affected user, record the following:</p> <ul style="list-style-type: none"> • Username, • Account status • Remote Auth • Local Auth • Concurrent Logins Allowed • Inactivity Limit • Comment • Groups

Procedure 9: Restoring an Archive that does not Contain a Current User

4. <input type="checkbox"/>	After Restoration: Login	<p>Establish a GUI session on the NOAM server by using the VIP IP address of the NOAM server. Open the web browser and enter a URL of:</p> <div data-bbox="492 331 1349 373" style="border: 1px solid black; padding: 2px;"><code>http://<Primary_NOAM_VIP_IP_Address></code></div> <p>Login as the <i>guiadmin</i> user:</p> <div data-bbox="565 468 1349 1056" style="text-align: center;"></div>
--------------------------------	------------------------------------	--

Procedure 9: Restoring an Archive that does not Contain a Current User

<p>5.</p> <p><input type="checkbox"/></p>	<p>After Restoration: Recreate affected user</p>	<p>Navigate to Administration -> Access Control -> Users</p>  <p>Click Insert</p>  <p>Recreate the user using the data collected in Step 3.</p> <table border="1" data-bbox="488 800 1008 1220"> <tr> <td>Username</td> <td><input type="text" value=""/></td> </tr> <tr> <td>Group</td> <td>admin</td> </tr> <tr> <td>Authentication Options</td> <td> <input type="checkbox"/> Allow Remote Auth <input checked="" type="checkbox"/> Allow Local Auth </td> </tr> <tr> <td>Access Allowed</td> <td><input checked="" type="checkbox"/> Account Enabled</td> </tr> <tr> <td>Maximum Concurrent Logins</td> <td><input type="text" value="0"/></td> </tr> <tr> <td>Session Inactivity Limit</td> <td><input type="text" value="120"/></td> </tr> <tr> <td>Comment</td> <td><input type="text" value=""/></td> </tr> </table> <p>Click Ok</p> 	Username	<input type="text" value=""/>	Group	admin	Authentication Options	<input type="checkbox"/> Allow Remote Auth <input checked="" type="checkbox"/> Allow Local Auth	Access Allowed	<input checked="" type="checkbox"/> Account Enabled	Maximum Concurrent Logins	<input type="text" value="0"/>	Session Inactivity Limit	<input type="text" value="120"/>	Comment	<input type="text" value=""/>
Username	<input type="text" value=""/>															
Group	admin															
Authentication Options	<input type="checkbox"/> Allow Remote Auth <input checked="" type="checkbox"/> Allow Local Auth															
Access Allowed	<input checked="" type="checkbox"/> Account Enabled															
Maximum Concurrent Logins	<input type="text" value="0"/>															
Session Inactivity Limit	<input type="text" value="120"/>															
Comment	<input type="text" value=""/>															
<p>6.</p> <p><input type="checkbox"/></p>	<p>After Restoration: Repeat for Additional Users</p>	<p>Repeat Step 5 to recreate additional users.</p>														
<p>7.</p> <p><input type="checkbox"/></p>	<p>After Restoration: Reset the Passwords</p>	<p>See Appendix E. My Oracle Support (MOS) for resetting passwords for a user.</p>														

7.0 IDIH Disaster Recovery

Procedure 10: IDIH Disaster Recovery Preparation

S T E P #	<p>This procedure performs disaster recovery preparation steps for the IDIH.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, contact Appendix E. My Oracle Support (MOS), and ask for assistance.</p>	
1. <input type="checkbox"/>	Oracle Guest: Login	Establish an SSH session to the Oracle guest, login as <i>admusr</i> .
2. <input type="checkbox"/>	Oracle Guest: Perform Database Health check	<p>Execute the following command to perform a database health check:</p> <div style="border: 1px solid black; padding: 2px; margin: 5px 0;"> <pre>\$ sudo /usr/TKLC/xIH/plat/bin/analyze_server.sh -i</pre> </div> <p>Output:</p> <pre>[admusr@cmo214-ora ~]\$ sudo /usr/TKLC/xIH/plat/bin/analyze_server.sh -i 10:26:27: STARTING HEALTHCHECK PROCEDURE 10:26:27: date: 07-07-15, hostname: cmo214-ora 10:26:27: TPD VERSION: 6.7.1.0.0-84.28.0 10:26:27: ----- 10:26:27: Checking disk free space 10:26:27: No disk space issues found 10:26:27: Checking syscheck - this can take a while 10:26:30: No errors in syscheck modules 10:26:30: Checking Alarm Manager alarmStatus 10:26:31: No alarms found 10:26:31: Checking statefiles 10:26:31: Statefiles do not exist 10:26:31: Checking runlevel 10:26:31: Runlevel is OK (N 4) 10:26:31: Checking upgrade log 10:26:31: Install logs are free of errors 10:26:31: Analyzing date 10:26:31: NTP daemon is running 10:26:31: Server is synchronized with ntp server 10:26:31: Checking NTP status 10:26:31: >>> Warning: tvoc-host is not integrated 10:26:31: >>> Suggestion: Verify ntp IP address and firewall ntp port settings 10:26:31: Checking server entries in host file. 10:26:31: oracle is present in /etc/hosts 10:26:31: mediation is present in /etc/hosts 10:26:31: appserver is present in /etc/hosts 10:26:31: Ping server entries in host file. 10:26:31: Ping server oracle 10:26:31: Ping server mediation 10:26:31: Ping server appserver 10:26:31: Check oracle Server 10:26:33: Oracle server and resources online 10:26:33: All tests passed! 10:26:33: ENDING HEALTHCHECK PROCEDURE WITH CODE 0 [admusr@cmo214-ora ~]\$</pre> <p>NOTE: if this step fails a re-installation is necessary by following procedure 23 - 27 from reference [8]</p>

Procedure 11: IDIH Disaster Recovery (Re-Install Mediation and Application Servers)

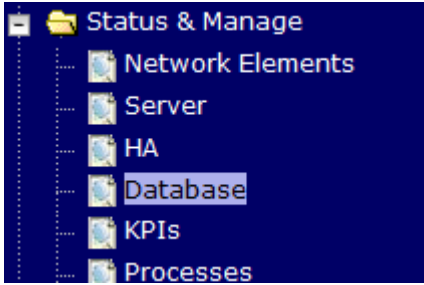
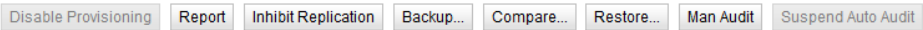
S T E P #	<p>This procedure performs disaster recovery for the IDIH by re-installing the mediation and application servers.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, contact Appendix E. My Oracle Support (MOS), and ask for assistance.</p>	
1. <input type="checkbox"/>	Create iDIH Application & Mediation VMs	<p>Execute the following procedure from [8] to recover the Application and Mediation VMs:</p> <p>Procedure 23 “Create iDIH Oracle, Mediation and Application VMs”</p>
2. <input type="checkbox"/>	Configure iDIH VM Networks	<p>Execute the following procedure from [8] to configure the VM networks on the Application and Mediation VMs only:</p> <p>Procedure 24 “Configure iDIH VM Networks”</p>
3. <input type="checkbox"/>	Configure VMs	<p>Execute the following procedure from [8]:</p> <p>Procedure 25 “Run Post Installation scripts on iDIH VMs”, steps 3 - 9</p>
4. <input type="checkbox"/>	Integrate into DSR (Optional)	<p>If integration is needed execute the following procedure from [8]:</p> <p>Procedure 26. Integrate iDIH into DSR</p>
5. <input type="checkbox"/>	iDIH Application Final configuration	<p>Execute the following procedure from [8]:</p> <p>Procedure 27. iDIH Application final configuration</p>

Appendix A. DSR Database Backup

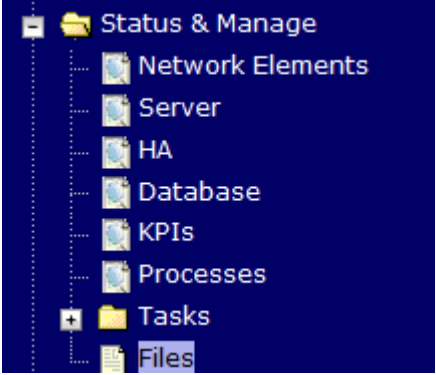
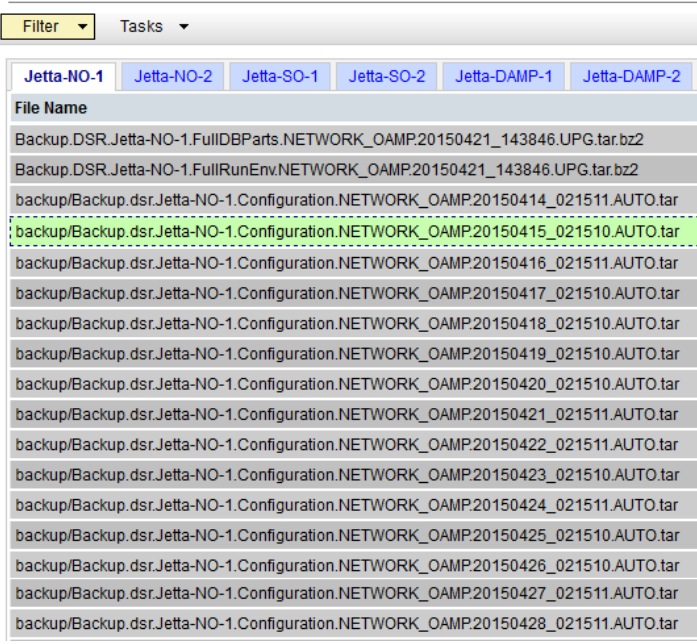
Procedure 12: Restoring an Archive that does not Contain a Current User

<p>S T E P #</p>	<p>The intent of this procedure is to back up the provision and configuration information from an NOAM or SOAM server after the disaster recovery is complete</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, contact Appendix E. My Oracle Support (MOS), and ask for assistance.</p>	
<p>1. <input type="checkbox"/></p>	<p>NOAM/SOAM VIP: Login</p>	<p>Establish a GUI session on the NOAM or SOAM server by using the VIP IP address of the NOAM or SOAM server.</p> <p>Open the web browser and enter a URL of:</p> <div style="border: 1px solid black; padding: 2px; width: fit-content; margin: 5px auto;"> <p><code>http://<Primary_NOAM/SOAM_VIP_IP_Address></code></p> </div> <p>Login as the <i>guiadmin</i> user:</p> 

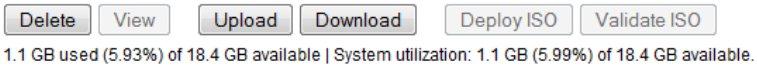
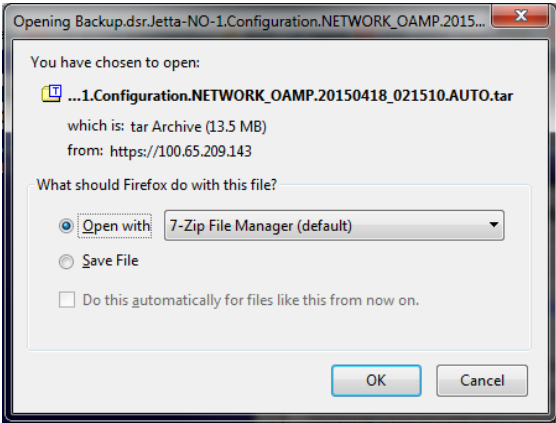
Procedure 12: Restoring an Archive that does not Contain a Current User

<p>2.</p> <p><input type="checkbox"/></p>	<p>NOAM/SOAM VIP: Backup Configuration Data for the System</p>	<p>Navigate to Main Menu -> Status & Manage -> Database</p>  <p>Select the Active NOAM Server and Click on Backup button</p>  <p>Make sure that the checkboxes next to "Configuration" is checked.</p> <p>Database Backup</p> <table border="1"> <thead> <tr> <th>Field</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td colspan="2">Server: Jetta-NO-1</td> </tr> <tr> <td>Select data for backup</td> <td><input type="checkbox"/> Provisioning <input checked="" type="checkbox"/> Configuration</td> </tr> <tr> <td>Compression</td> <td><input type="radio"/> gzip <input checked="" type="radio"/> bzip2 <input type="radio"/> none *</td> </tr> <tr> <td>Archive Name</td> <td>Backup.dsr.Jetta-NO-1.Configuration.NETWORK_OAMP.20150428_093111.*</td> </tr> <tr> <td>Comment</td> <td><input type="text"/></td> </tr> </tbody> </table> <p style="text-align: right;"><input type="button" value="Ok"/> <input type="button" value="Cancel"/></p> <p>Enter a filename for the backup and press OK</p>	Field	Value	Server: Jetta-NO-1		Select data for backup	<input type="checkbox"/> Provisioning <input checked="" type="checkbox"/> Configuration	Compression	<input type="radio"/> gzip <input checked="" type="radio"/> bzip2 <input type="radio"/> none *	Archive Name	Backup.dsr.Jetta-NO-1.Configuration.NETWORK_OAMP.20150428_093111.*	Comment	<input type="text"/>
Field	Value													
Server: Jetta-NO-1														
Select data for backup	<input type="checkbox"/> Provisioning <input checked="" type="checkbox"/> Configuration													
Compression	<input type="radio"/> gzip <input checked="" type="radio"/> bzip2 <input type="radio"/> none *													
Archive Name	Backup.dsr.Jetta-NO-1.Configuration.NETWORK_OAMP.20150428_093111.*													
Comment	<input type="text"/>													

Procedure 12: Restoring an Archive that does not Contain a Current User

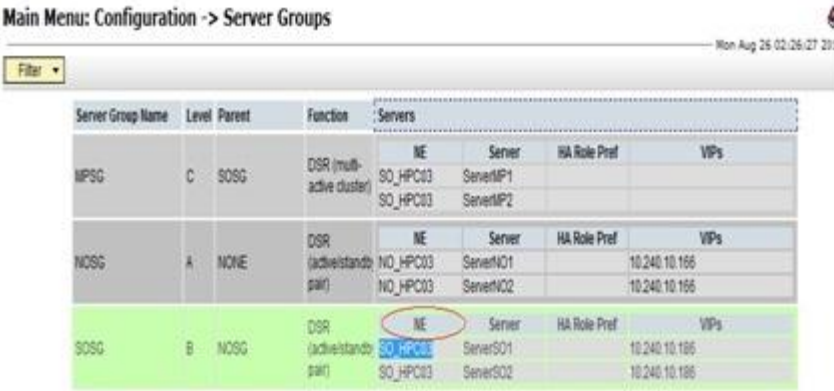
<p>3. <input type="checkbox"/></p>	<p>NOAM/SOAM VIP: Verify the backup file existence.</p>	<p>Navigate to Main Menu -> Status & Manage -> Files</p>  <p>Main Menu: Status & Manage -> Files</p>  <p>Select the Active NOAM or SOAM tab.</p> <p>The files on this server will be displayed. Verify the existence of the backup file.</p>
------------------------------------	--	---

Procedure 12: Restoring an Archive that does not Contain a Current User

<p>4. <input type="checkbox"/></p>	<p>NOAM/SOAM VIP: Download the file to a local machine.</p>	<p>From the previous step, choose the backup file.</p> <p>Select the Download button</p>  <p>Select OK to confirm the download.</p> 
<p>5. <input type="checkbox"/></p>	<p>Upload the Image to Secure Location</p>	<p>Transfer the backed up image saved in the previous step to a secure location where the Server Backup files are fetched in case of system disaster recovery.</p>
<p>6. <input type="checkbox"/></p>	<p>Backup Active SOAM</p>	<p>Repeat Steps 2 through 5 to back up the Active SOAM</p>

Appendix B. Inhibit A and B Level Replication on C-Level Servers

Procedure 13: Inhibit A and B Level Replication on C-Level Servers

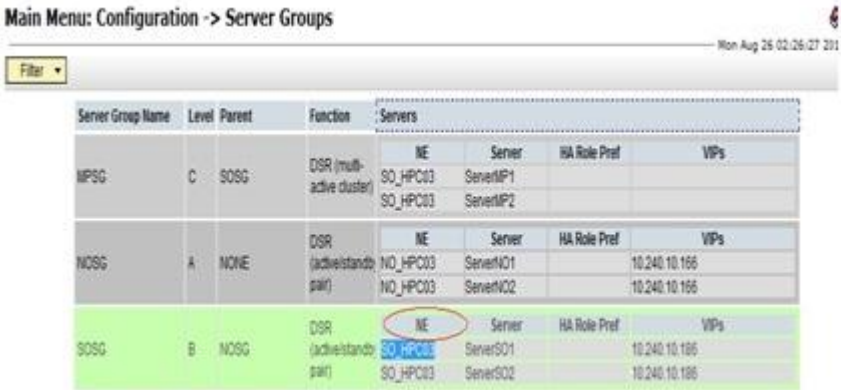
S T E P #	<p>The intent of this procedure is to inhibit A and B level replication on all C Level servers of this site</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, contact Appendix E. My Oracle Support (MOS), and ask for assistance.</p>																																													
1. <input type="checkbox"/>	Active NOAM: Login	<p>Login to the Active NOAM server via SSH as admusr user.</p>																																												
2. <input type="checkbox"/>	Active NOAM: Inhibit replication on all C level Servers	<p>Execute the following command:</p> <pre style="border: 1px solid black; padding: 5px;">\$ for i in \$(iqt -p -z -h -fhostName NodeInfo where "nodeId like 'C*' and siteId='<NE name of the site>'); do iset -finhibitRepPlans='A B' NodeInfo where "nodeName='\$i'; done</pre> <p>Note: NE name of the site can be found out by logging into the Active NOAM GUI and going to Configuration->Server Groups screen.</p> <p>Please see the snapshot below for more details. E.g. if ServerSO1 belong to the site which is being recovered then siteId will be SO_HPC03.</p> <p>Main Menu: Configuration -> Server Groups</p>  <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Server Group Name</th> <th>Level</th> <th>Parent</th> <th>Function</th> <th>NE</th> <th>Server</th> <th>HA Role Pref</th> <th>VIPs</th> </tr> </thead> <tbody> <tr> <td rowspan="2">MPDG</td> <td rowspan="2">C</td> <td rowspan="2">SOSG</td> <td rowspan="2">DSR (multi-active cluster)</td> <td>SO_HPC03</td> <td>ServerMP1</td> <td></td> <td></td> </tr> <tr> <td>SO_HPC03</td> <td>ServerMP2</td> <td></td> <td></td> </tr> <tr> <td rowspan="2">NOGG</td> <td rowspan="2">A</td> <td rowspan="2">NONE</td> <td rowspan="2">DSR (active/standby pair)</td> <td>NO_HPC03</td> <td>ServerNO1</td> <td></td> <td>10.240.10.166</td> </tr> <tr> <td>NO_HPC03</td> <td>ServerNO2</td> <td></td> <td>10.240.10.166</td> </tr> <tr> <td rowspan="2">SOSG</td> <td rowspan="2">B</td> <td rowspan="2">NOGG</td> <td rowspan="2">DSR (active/standby pair)</td> <td>SO_HPC03</td> <td>ServerSO1</td> <td></td> <td>10.240.10.186</td> </tr> <tr> <td>SO_HPC03</td> <td>ServerSO2</td> <td></td> <td>10.240.10.186</td> </tr> </tbody> </table>	Server Group Name	Level	Parent	Function	NE	Server	HA Role Pref	VIPs	MPDG	C	SOSG	DSR (multi-active cluster)	SO_HPC03	ServerMP1			SO_HPC03	ServerMP2			NOGG	A	NONE	DSR (active/standby pair)	NO_HPC03	ServerNO1		10.240.10.166	NO_HPC03	ServerNO2		10.240.10.166	SOSG	B	NOGG	DSR (active/standby pair)	SO_HPC03	ServerSO1		10.240.10.186	SO_HPC03	ServerSO2		10.240.10.186
Server Group Name	Level	Parent	Function	NE	Server	HA Role Pref	VIPs																																							
MPDG	C	SOSG	DSR (multi-active cluster)	SO_HPC03	ServerMP1																																									
				SO_HPC03	ServerMP2																																									
NOGG	A	NONE	DSR (active/standby pair)	NO_HPC03	ServerNO1		10.240.10.166																																							
				NO_HPC03	ServerNO2		10.240.10.166																																							
SOSG	B	NOGG	DSR (active/standby pair)	SO_HPC03	ServerSO1		10.240.10.186																																							
				SO_HPC03	ServerSO2		10.240.10.186																																							

Procedure 13: Inhibit A and B Level Replication on C-Level Servers

3 <input type="checkbox"/>	Active NOAM: Verify Replication has been Inhibited.	<p>After executing above steps to inhibit replication on MP(s), no alarms on GUI would be raised informing that replication on MP is disabled.</p> <p>Verification of replication inhibition on MPs can be done by analyzing NodeInfo output. InhibitRepPlans field for all the MP servers for the selected site e.g. Site SO_HPC03 shall be set as 'A B':</p> <p>Perform the following command:</p> <pre>\$ sudo iqt NodeInfo</pre> <p>Expected output:</p> <table border="1"><thead><tr><th>nodeId</th><th>nodeName</th><th>hostName</th><th>nodeCapability</th><th>inhibitRepPlans</th><th>siteId</th></tr></thead><tbody><tr><td>excludeTables</td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>A1386.099</td><td>NO1</td><td>NO1</td><td>Active</td><td></td><td>NO_HPC03</td></tr><tr><td>B1754.109</td><td>SO1</td><td>SO1</td><td>Active</td><td></td><td>SO_HPC03</td></tr><tr><td>C2254.131</td><td>MP2</td><td>MP2</td><td>Active</td><td>A B</td><td>SO_HPC03</td></tr><tr><td>C2254.233</td><td>MP1</td><td>MP1</td><td>Active</td><td>A B</td><td>SO_HPC03</td></tr></tbody></table>	nodeId	nodeName	hostName	nodeCapability	inhibitRepPlans	siteId	excludeTables						A1386.099	NO1	NO1	Active		NO_HPC03	B1754.109	SO1	SO1	Active		SO_HPC03	C2254.131	MP2	MP2	Active	A B	SO_HPC03	C2254.233	MP1	MP1	Active	A B	SO_HPC03
nodeId	nodeName	hostName	nodeCapability	inhibitRepPlans	siteId																																	
excludeTables																																						
A1386.099	NO1	NO1	Active		NO_HPC03																																	
B1754.109	SO1	SO1	Active		SO_HPC03																																	
C2254.131	MP2	MP2	Active	A B	SO_HPC03																																	
C2254.233	MP1	MP1	Active	A B	SO_HPC03																																	

Appendix C. Un-Inhibit A and B Level Replication on C-Level Servers

Procedure 14: Un-Inhibit A and B Level Replication on C-Level Servers

S T E P #	<p>The intent of this procedure is to Un-inhibit A and B level replication on all C Level servers of this site</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, contact Appendix E. My Oracle Support (MOS), and ask for assistance.</p>																																												
1. <input type="checkbox"/>	Active NOAM: Login Login to the Active NOAM server via SSH as admusr user.																																												
2. <input type="checkbox"/>	Active NOAM: Un-Inhibit replication on all C level Servers <pre> \$ for i in \$(iqt -p -z -h -fhostName NodeInfo where "nodeId like 'C*' and siteId='<NE name of the site>'); do iset -finhibitRepPlans=' NodeInfo where "nodeName='\$i'"; done </pre> <p>Note: NE name of the site can be found out by logging into the Active NOAM GUI and going to Configuration->Server Groups screen.</p> <p>Please see the snapshot below for more details. E.g. if ServerSO1 belong to the site which is being recovered then siteId will be SO_HPC03.</p>  <table border="1" data-bbox="565 1247 1289 1537"> <thead> <tr> <th>Server Group Name</th> <th>Level</th> <th>Parent</th> <th>Function</th> <th>NE</th> <th>Server</th> <th>HA Role Pref</th> <th>VIPs</th> </tr> </thead> <tbody> <tr> <td rowspan="2">NPSG</td> <td rowspan="2">C</td> <td rowspan="2">SOSG</td> <td rowspan="2">DSR (multi-active cluster)</td> <td>SO_HPC03</td> <td>ServerMP1</td> <td></td> <td></td> </tr> <tr> <td>SO_HPC03</td> <td>ServerMP2</td> <td></td> <td></td> </tr> <tr> <td rowspan="2">NOSG</td> <td rowspan="2">A</td> <td rowspan="2">NONE</td> <td rowspan="2">DSR (active/standby pair)</td> <td>NO_HPC03</td> <td>ServerNO1</td> <td></td> <td>10.240.10.186</td> </tr> <tr> <td>NO_HPC03</td> <td>ServerNO2</td> <td></td> <td>10.240.10.186</td> </tr> <tr> <td rowspan="2">SOSG</td> <td rowspan="2">B</td> <td rowspan="2">NOSG</td> <td rowspan="2">DSR (active/standby pair)</td> <td>SO_HPC03</td> <td>ServerSO1</td> <td></td> <td>10.240.10.186</td> </tr> <tr> <td>SO_HPC03</td> <td>ServerSO2</td> <td></td> <td>10.240.10.186</td> </tr> </tbody> </table>	Server Group Name	Level	Parent	Function	NE	Server	HA Role Pref	VIPs	NPSG	C	SOSG	DSR (multi-active cluster)	SO_HPC03	ServerMP1			SO_HPC03	ServerMP2			NOSG	A	NONE	DSR (active/standby pair)	NO_HPC03	ServerNO1		10.240.10.186	NO_HPC03	ServerNO2		10.240.10.186	SOSG	B	NOSG	DSR (active/standby pair)	SO_HPC03	ServerSO1		10.240.10.186	SO_HPC03	ServerSO2		10.240.10.186
Server Group Name	Level	Parent	Function	NE	Server	HA Role Pref	VIPs																																						
NPSG	C	SOSG	DSR (multi-active cluster)	SO_HPC03	ServerMP1																																								
				SO_HPC03	ServerMP2																																								
NOSG	A	NONE	DSR (active/standby pair)	NO_HPC03	ServerNO1		10.240.10.186																																						
				NO_HPC03	ServerNO2		10.240.10.186																																						
SOSG	B	NOSG	DSR (active/standby pair)	SO_HPC03	ServerSO1		10.240.10.186																																						
				SO_HPC03	ServerSO2		10.240.10.186																																						

Procedure 14: Un-Inhibit A and B Level Replication on C-Level Servers

3. <input type="checkbox"/>	Active NOAM: Verify Replication has been Inhibited.	<p>After executing above steps to un-inhibit replication on MP(s), no alarms on GUI would be raised informing that replication on MP is disabled.</p> <p>Verification of replication un-inhibition on MPs can be done by analyzing NodeInfo output. InhibitRepPlans field for all the MP servers for the selected site e.g. Site SO_HPC03 shall be set as 'A B':</p> <p>Perform the following command:</p> <pre>\$ sudo iqt NodeInfo</pre> <p>Expected output:</p> <table border="1"><thead><tr><th>nodeId</th><th>nodeName</th><th>hostName</th><th>nodeCapability</th><th>inhibitRepPlans</th><th>siteId</th><th>excludeTables</th></tr></thead><tbody><tr><td>A1386.099</td><td>NO1</td><td>NO1</td><td>Active</td><td></td><td>NO_HPC03</td><td></td></tr><tr><td>B1754.109</td><td>SO1</td><td>SO1</td><td>Active</td><td></td><td>SO_HPC03</td><td></td></tr><tr><td>C2254.131</td><td>MP2</td><td>MP2</td><td>Active</td><td></td><td>SO_HPC03</td><td></td></tr><tr><td>C2254.233</td><td>MP1</td><td>MP1</td><td>Active</td><td></td><td>SO_HPC03</td><td></td></tr></tbody></table>	nodeId	nodeName	hostName	nodeCapability	inhibitRepPlans	siteId	excludeTables	A1386.099	NO1	NO1	Active		NO_HPC03		B1754.109	SO1	SO1	Active		SO_HPC03		C2254.131	MP2	MP2	Active		SO_HPC03		C2254.233	MP1	MP1	Active		SO_HPC03	
nodeId	nodeName	hostName	nodeCapability	inhibitRepPlans	siteId	excludeTables																															
A1386.099	NO1	NO1	Active		NO_HPC03																																
B1754.109	SO1	SO1	Active		SO_HPC03																																
C2254.131	MP2	MP2	Active		SO_HPC03																																
C2254.233	MP1	MP1	Active		SO_HPC03																																

Appendix D. Workarounds for Issues not fixed in this Release

Issue	Associated PR	Workaround
Inetmerge alarm after force restore	222826	Get the clusterID of the NO using the following command: <pre data-bbox="951 426 1425 531"> \$ top.myrole myNodeId=A3603.215 myMasterCapable=true </pre>
Incorrect NodeID		Then update the clusterId field in RecognizedAuthority table to have the same clusterid: <pre data-bbox="951 684 1425 905"> \$ ivi RecognizedAuthority e.g. iload -ha -xU -frecNum -fclusterId -ftimestamp RecognizedAuthority \ <<'!!!!' 0 A1878 1436913769646 !!!! </pre>
Inetsync alarms after performing disaster recovery	222828	Restart the Inetsync service on all affected servers using the following commands: <pre data-bbox="951 1062 1425 1136"> \$ pm.set off inetsync \$ pm.set on inetsync </pre>
Active NO /etc/hosts file does not contain server aliases after force restore done.	222829,234357	From the recovered NOAM server command line, execute: <pre data-bbox="951 1325 1425 1419"> \$ AppWorks AppWorks_AppWorks updateServerAliases <NO Host Name> </pre>
Active NO cannot communicate with other Servers		

<p>SOAM VIP reports no servers at the Status & Manage Server screen.</p>	<p>Bug 20045979</p>	<p>Perform the following command to see the 'db' directory permission:</p> <pre>\$ ls -ltr drwx---523 root root 20480 Nov 11 22:44 db <-- Not Correct</pre> <p>Perform the following command to change the directory permissions:</p> <pre>\$ sudo chmod 777 db</pre> <p>Verify the directory permissions are correct:</p> <pre>\$ ls -ltr drwxrwxrwx 523 root root 20480 Nov 11 22:44 db <-- Correct</pre>
--	---------------------	---

Appendix E. My Oracle Support (MOS)

MOS (<https://support.oracle.com>) is your initial point of contact for all product support and training needs. A representative at Customer Access Support (CAS) can assist you with MOS registration.

Call the CAS main number at **1-800-223-1711** (toll-free in the US), or call the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html>.

When calling, there are multiple layers of menu selections. Make the selections in the sequence shown below on the Support telephone menu:

1. For the first set of menu options, select 2, "New Service Request". You will hear another set of menu options.
2. In this set of menu options, select 3, "Hardware, Networking and Solaris Operating System Support". A third set of menu options begins.
3. In the third set of options, select 2, "Non-technical issue". Then you will be connected to a live agent who can assist you with MOS registration and provide Support Identifiers. Simply mention you are a Tekelec Customer new to MOS.