

Diameter Signaling Router

Diameter Mediation

Release 8.2

E89001

January 2018

Copyright © 2011, 2018, Oracle and/or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, then the following notice is applicable:

U.S. GOVERNMENT END USERS: Oracle programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, delivered to U.S. Government end users are "commercial computer software" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, use, duplication, disclosure, modification, and adaptation of the programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, shall be subject to license terms and license restrictions applicable to the programs. No other rights are granted to the U.S. Government.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information about content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services unless otherwise set forth in an applicable agreement between you and Oracle. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services, except as set forth in an applicable agreement between you and Oracle.

This documentation is in preproduction status and is intended for demonstration and preliminary use only. It may not be specific to the hardware on which you are using the software. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to this documentation and will not be responsible for any loss, costs, or damages incurred due to the use of this documentation.

The information contained in this document is for informational sharing purposes only and should be considered in your capacity as a customer advisory board member or pursuant to your beta trial agreement only. It is not a commitment to deliver any material, code, or functionality, and should not be relied upon in making purchasing decisions. The development, release, and timing of any features or functionality described in this document remains at the sole discretion of Oracle.

This document in any form, software or printed matter, contains proprietary information that is the exclusive property of Oracle. Your access to and use of this confidential material is subject to the terms and conditions of your Oracle Master Agreement, Oracle License and Services Agreement, Oracle PartnerNetwork Agreement, Oracle distribution agreement, or other license agreement which has been executed by you and Oracle and with which you agree to comply. This document and information contained herein may not be disclosed, copied, reproduced, or distributed to anyone outside Oracle without prior written consent of Oracle. This document is not part of your license agreement nor can it be incorporated into any contractual agreement with Oracle or its subsidiaries or affiliates.

Contents

1 Introduction

Revision History	1-1
Overview	1-1
Scope and Audience	1-1
Manual Organization	1-1
Documentation Admonishments	1-2
Locate Product Documentation on the Oracle Help Center Site	1-2
Customer Training	1-3
My Oracle Support (MOS).....	1-3
Emergency Response.....	1-3

2 User Interface Introduction

User Interface Organization	2-1
User Interface Elements	2-2
Main Menu Options	2-5
Missing Main Menu options	2-11
Common Graphical User Interface Widgets	2-11
Supported Browsers.....	2-11
System Login Page	2-12
Main Menu Icons	2-13
Work Area Displays	2-14
Customizing the Splash Page Welcome Message	2-17
Column Headers (Sorting)	2-17
Page Controls	2-17
Clear Field Control.....	2-18
Optional Layout Element Toolbar.....	2-18
Filters.....	2-20
Pause Updates.....	2-22
Max Records Per Page Controls	2-22

3 Diameter Mediation

Mediation overview	3-1
--------------------------	-----

Rule Templates	3-3
Impact of Adding Rule Templates	3-6
Rule Template elements.....	3-9
Adding a Rule Template.....	3-41
Adding online help to a Rule Template	3-42
Copying a Rule Template	3-43
Changing a Rule Template	3-44
Importing a Rule Template	3-44
Exporting a Rule Template.....	3-45
Deleting a Rule Template	3-46
Formatting Value Wizard.....	3-46
Formatting String Wizard elements.....	3-47
Enumerations	3-67
Mediation Enumerations elements	3-68
Adding an Enumeration.....	3-68
Editing an Enumeration	3-69
Deleting an Enumeration	3-69
Triggers.....	3-69
Mediation Triggers elements	3-72
Associating a Rule Set with a Trigger.....	3-74
Removing the Association of a Rule Set with a Trigger.....	3-75
State and Properties.....	3-75
Mediation State and Properties elements	3-76
Importing a Rule Template	3-77
Editing State and Properties	3-78
Deleting a Rule Template	3-78
Internal Variables	3-78
Mediation Internal Variables elements.....	3-79
Adding an Internal Variable	3-80
Editing an Internal Variable	3-81
Deleting an Internal Variable	3-81
Measurements	3-81
Mediation Measurements elements.....	3-82
Adding a Measurement.....	3-82
Editing a Measurement.....	3-82
Deleting a Measurement	3-83
Rule Sets	3-83
Rule Sets elements - View page	3-85
Rule Sets elements - Insert and Edit Pages	3-86
Adding a Rule to a Rule Set	3-88
Deleting All Rules from a Rule Set	3-89
Changing a Rule in a Rule Set	3-89
Deleting One Rule from a Rule Set	3-89

Export/Import Rules	3-90
---------------------------	------

List of Figures

2-1	Oracle System Login.....	2-12
2-2	Paginated Table.....	2-15
2-3	Scrollable Table.....	2-15
2-4	Form Page.....	2-16
2-5	Tabbed Pages.....	2-16
2-6	Tabbed Pages.....	2-16
2-7	Report Output.....	2-17
2-8	Sorting a Table by Column Header.....	2-17
2-9	Clear Field Control X.....	2-18
2-10	Optional Layout Element Toolbar.....	2-19
2-11	Automatic Error Notification.....	2-19
2-12	Examples of Filter Styles.....	2-20
3-1	Top Command Example Output.....	3-8

List of Tables

1-1	Admonishments.....	1-2
2-1	User Interface Elements.....	2-3
2-2	Main Menu Options.....	2-6
2-3	Main Menu Icons.....	2-13
2-4	Example Action Buttons.....	2-18
2-5	Submit Buttons.....	2-18
2-6	Filter Control Elements.....	2-20
3-1	Mediation Task Classifications.....	3-6
3-2	Settings.....	3-9
3-3	Conditions.....	3-10
3-4	Condition Set.....	3-13
3-5	Actions.....	3-14
3-6	Actions Performed on the Diameter Header.....	3-14
3-7	Actions Performed on the Diameter Payload (AVPs).....	3-16
3-8	Actions that Modify an AVP.....	3-23
3-9	Rule Template Condition Operators.....	3-38
3-10	Rule Template Condition Conversion Rules.....	3-40
3-11	Rule Templates Help Elements.....	3-43
3-12	Formatting String Wizard Elements.....	3-47
3-13	Formatting Value Wizard Specifiers.....	3-47
3-14	From the Current Messages Being Processed.....	3-51
3-15	Trigger Point for Message Data.....	3-53
3-16	From the Request During the Answer Processing.....	3-54
3-17	Trigger Point for Request Data.....	3-56
3-18	Linking-AVP x1-Formatted Value.....	3-58
3-19	Explicit Casting.....	3-65
3-20	Mediation Enumeration Elements.....	3-68
3-21	Diameter Mediation Routing Layer Triggers.....	3-70
3-22	Diameter Mediation Connection Layer Triggers.....	3-70
3-23	Diameter Mediation Application Triggers.....	3-72
3-24	Mediation Triggers Elements.....	3-73
3-25	Adding Triggers Elements.....	3-73
3-26	Mediation State & Properties Elements.....	3-76
3-27	Mediation Internal Variables Elements.....	3-79
3-28	Mediation Measurements Elements.....	3-82
3-29	Example of Default Ordering of Rules in a Rule Set.....	3-84
3-30	Rule Sets Elements - View Page.....	3-85
3-31	Maximum Allowed Rule Sets and Rules.....	3-86
3-32	Rule Sets Elements - Insert and Edit Pages.....	3-87
3-33	Conditions Correlated by the Condition Name.....	3-90
3-34	Actions are Correlated by their Type and Order.....	3-91

Introduction

This chapter contains an overview of *Diameter Mediation*. The contents include sections on the scope, audience, and organization of the documentation, and how to contact Oracle for assistance.

Revision History

Date	Description
June 2016	Accessibility changes throughout.
January 2017	A Performance impact section added The maximum number of provisioned rules is 2000 when set as fast search.

Overview

The *Diameter Mediation* manual provides information about how to use the Mediation GUI.

The manual provides the following types of information:

- Creation and modification of Rule Templates
- Provision rules and data in Rule Sets

Scope and Audience

The Diameter Mediation feature can make the routable decisions to end the reply, drop the message or set the destination-realm.

This manual contains procedures for performing the creation and modification of Rule Templates tasks using the Mediation GUI.

Diameter Mediation helps to solve interoperability issues by using rules to manipulate header parts and Attribute-Value Pairs (AVPs) in an incoming routable message and peer to peer messages, when data in the message matches some specified conditions at a specified point of message processing.

The Administrator privileges can be deactivated later, so that the Rule Templates folder does not appear under the Mediation folder. This prevents unauthorized modification of the created Rule Templates in the system.

Manual Organization




This document is organized into the following chapters:

- [Introduction](#) contains general information about the Mediation help documentation, the organization of this manual, and how to get technical assistance.
- [User Interface Introduction](#) describes the organization and usage of the application user interface. In it you can find information about how the interface options are organized, how to use widgets and buttons, and how filtering and other page display options work.
- [Diameter Mediation](#) contains information about how to use Diameter Mediation to solve interoperability problems by creating rules to manipulate header parts and Attribute-Value Pairs (AVPs) in incoming routed messages.

Documentation Admonishments

Admonishments are icons and text throughout this manual that alert the reader to assure personal safety, to minimize possible service interruptions, and to warn of the potential for equipment damage.

Table 1-1 Admonishments

Icon	Description
 DANGER	Danger: (This icon and text indicate the possibility of personal injury.)
 WARNING	Warning: (This icon and text indicate the possibility of equipment damage.)
 CAUTION	Caution: (This icon and text indicate the possibility of service interruption.)

Locate Product Documentation on the Oracle Help Center Site

Oracle Communications customer documentation is available on the web at the Oracle Help Center (OHC) site, <http://docs.oracle.com>. You do not have to register to access these documents. Viewing these files requires Adobe Acrobat Reader, which can be downloaded at <http://www.adobe.com>.

1. Access the Oracle Help Center site at <http://docs.oracle.com>.
2. Click **Industries**.
3. Under the Oracle Communications subheading, click the **Oracle Communications documentation** link.

The Communications Documentation page displays. Most products covered by these documentation sets display under the headings "Network Session Delivery and Control Infrastructure" and "Platforms."

4. Click on your Product and then the Release Number.

A list of the entire documentation set for the selected product and release displays.

5. To download a file to your location, right-click the PDF link, select **Save target as** (or similar command based on your browser), and save to a local folder.

Customer Training

Oracle University offers training for service providers and enterprises. Visit our web site to view, and register for, Oracle Communications training at <http://education.oracle.com/communication>

To obtain contact phone numbers for countries or regions, visit the Oracle University Education web site at www.oracle.com/education/contacts

My Oracle Support (MOS)

MOS (<https://support.oracle.com>) is your initial point of contact for all product support and training needs. A representative at Customer Access Support (CAS) can assist you with MOS registration.

Call the CAS main number at 1-800-223-1711 (toll-free in the US), or call the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html>. When calling, make the selections in the sequence shown below on the Support telephone menu:

1. Select 2 for New Service Request
2. Select 3 for Hardware, Networking and Solaris Operating System Support
3. Select one of the following options:
 - For Technical issues such as creating a new Service Request (SR), Select 1
 - For Non-technical issues such as registration or assistance with MOS, Select 2

You are connected to a live agent who can assist you with MOS registration and opening a support ticket.

MOS is available 24 hours a day, 7 days a week, 365 days a year.

Emergency Response

In the event of a critical service situation, emergency response is offered by the Customer Access Support (CAS) main number at 1-800-223-1711 (toll-free in the US), or by calling the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html>. The emergency response provides immediate coverage, automatic escalation, and other features to ensure that the critical situation is resolved as rapidly as possible.

A critical situation is defined as a problem with the installed equipment that severely affects service, traffic, or maintenance capabilities, and requires immediate corrective action. Critical situations affect service and/or system operation resulting in one or several of these situations:

- A total system failure that results in loss of all transaction processing capability
- Significant reduction in system capacity or traffic handling capability
- Loss of the system's ability to perform automatic system reconfiguration

- Inability to restart a processor or the system
- Corruption of system databases that requires service affecting corrective actions
- Loss of access for maintenance or recovery operations
- Loss of the system ability to provide any required critical or major trouble notification

Any other problem severely affecting service, capacity/traffic, billing, and maintenance capabilities may be defined as critical by prior discussion and agreement with Oracle.

User Interface Introduction

This section describes the organization and usage of the application's user interface. In it you can find information about how the interface options are organized, how to use widgets and buttons, and how filtering and other page display options work.

User Interface Organization

The user interface is the central point of user interaction within an application. It is a Web-based graphical user interface (GUI) that enables remote user access over the network to an application and its functions.

The core framework presents a common set of Main Menu options that serve various applications. The common Main Menu options are:

- Administration
- Configuration
- Alarms and Events
- Security Log
- Status and Manage
- Measurements
- Help
- Legal Notices
- Logout

Applications build upon this framework to present features and functions. Depending on your application, some or all of the following Main Menu options may display on the Network Operation, Administration, and Maintenance (**NOAM**) GUI:

- Communication Agent
- Diameter Common
- Diameter
- **UDR** (User Data Repository)
- MAP-Diameter IWF
- **RADIUS** (Remote Authentication Dial-In User Service)
- **SBR** (Session Binding Repository)

- Policy and Charging
- **DCA** (DOIC Capabilities Announcement) Framework

The DSR System OAM GUI may present even more Main Menu options as listed below. The end result is a flexible menu structure that changes according to the application needs and features activated.

- Transport Manager
- SS7/Sigtran
- RBAR (Range Based Address Resolution)
- FABR (Full Address Based Resolution)
- **GLA** (Gateway Location Application)
- MAP-Diameter IWF
- RADIUS
- SBR
- Mediation
- Policy and Charging
- DCA Framework
- IPFE (IP Front End)

Note that the System OAM (SOAM) Main Menu options differ from the Network OAM (NOAM) options. Some Main Menu options are configurable from the NOAM server and view-only from the SOAM (**SOAM**) server. This remains true for other applications.

User Interface Elements

[Table 2-1](#) describes elements of the user interface.

Table 2-1 User Interface Elements

Element	Location	Function
Identification Banner	Top bar across the web page	<p>The left side of the banner provides the following information:</p> <ul style="list-style-type: none">• Displays the company name,• product name and version, and• the alarm panel. <p>The right side of the banner:</p> <ul style="list-style-type: none">• Allows you to pause any software updates.• Links to the online help for all software.• Shows the user name of the currently logged-in user.• Provides a link to log out of the GUI.
Main Menu	Left side of screen, under banners	<p>A tree-structured menu of all operations that can be performed through the user interface. The plus character (+) indicates a menu item contains subfolders.</p> <ul style="list-style-type: none">• To display submenu items, click the plus character, the folder, or anywhere on the same line.• To select a menu item that does not have submenu items, click on the menu item text or its associated symbol.

Table 2-1 (Cont.) User Interface Elements

Element	Location	Function
Work Area	Right side of panel under status	<p>Consists of three sections: Page Title Area, Page Control Area (optional), and Page Area.</p> <ul style="list-style-type: none">• Page Title Area: Occupies the top of the work area. It displays the title of the current page being displayed, date and time, and includes a link to context-sensitive help.• Page Control Area: Located below the Page Title Area, this area shows controls for the Page Area (this area is optional). When available as an option, filter controls display in this area. The Page Control Area contains the optional layout element toolbar, which displays different elements depending on which GUI page is selected. For more information, see Optional Layout Element Toolbar.• Page Area: Occupies the bottom of the work area. This area is used for all types of operations. It displays all options, status, data, file, and query screens. Information or error messages are displayed in a message box at the top of this section. A horizontal and/or vertical scroll bar is provided when the displayed information exceeds the page area of the screen. When a user first logs in, this area displays the application

Table 2-1 (Cont.) User Interface Elements

Element	Location	Function
		user interface page. The page displays a user-defined welcome message. To customize the message, see Customizing the Login Message .
Session Banner	Across the bottom of the web page	<p>The left side of the banner provides the following session information:</p> <ul style="list-style-type: none">• The name of the machine to which the user is connected, and whether the user is connected via the VIP or directly to the machine.• The HA state of the machine to which the user is connected.• The role of the machine to which the user is connected. <p>The right side of the banner shows the alarm panel.</p>

Main Menu Options

[Table 2-2](#) describes all main menu user interface options.

Note: The menu options can differ according to the permissions assigned to a user's login account. For example, the Administration menu options do not display on the screen of a user who does not have administrative privileges.
Note: Some menu items are configurable only on the Network OAM and view-only on the System OAM; and some menu options are configurable only on the System OAM.
Note: Some features do not display in the main menu until the features are activated.

Table 2-2 Main Menu Options

Menu Item	Function
Administration	<p>The Administration menu allows the user to:</p> <ul style="list-style-type: none">• General Options. Configure options such as password history and expiration, login message, welcome message, and the number of failed login attempts before an account is disabled• Set up and manage user accounts• Configure group permissions• View session information• Manage sign-on certificates• Authorize IP addresses to access the user interface• Configure SFTP user information• View the software versions report• Upgrade management including backup and reporting• Authenticate LDAP servers• Configure SNMP trapping services• Configure an export server• Configure DNS elements
Configuration	<p>On the NOAM, allows the user to configure:</p> <ul style="list-style-type: none">• Network Elements• Network Devices• Network Routes• Services• Servers• Server Groups• Resource Domains• Places• Place Associations• Interface and Port DSCP
Alarms and Events	<p>Allows the user to view:</p> <ul style="list-style-type: none">• Active alarms and events• Alarm and event history• Trap log
Security Log	<p>Allows the user to view, export, and generate reports from security log history.</p>
Status and Manage	<p>Allows the user to monitor the individual and collective status of Network Elements, Servers, HA functions, Databases, KPIs, system Processes, and Tasks. The user can perform actions required for server maintenance, database management, data, and ISO file management.</p>
Measurements	<p>Allows the user to view and export measurement data.</p>

Table 2-2 (Cont.) Main Menu Options

Menu Item	Function
Transport Manager (optional)	On the SOAM, allows the user to configure adjacent nodes, configuration sets, or transports. A maintenance option allows the user to perform enable, disable, and block actions on the transport entries. This option only displays with the DSR application.
Communication Agent (optional)	Allows the user to configure Remote Servers, Connection Groups, and Routed Services. The user can perform actions to enable, disable, and block connections. Also allows the user to monitor the status of Connections, Routed Services, and HA Services.
SS7/Sigtran (optional)	On the SOAM, allows the user to configure various users, groups, remote signaling points, links, and other items associated with SS7/Sigtran; perform maintenance and troubleshooting activities; and provides a command line interface for bulk loading SS7 configuration data. This option only displays with the DSR application.
Diameter Common (optional)	<p>Allows the user to view or configure:</p> <ul style="list-style-type: none"> • Dashboard, configure on the NOAM; view on both OAMs • Network Identifiers on the SOAM - MCC Ranges • Network Identifiers on the NOAM - MCCMNC and MCCMNC Mapping • MPs (on the SOAM) - editable Profile parameters and Profile Assignments <p>The DSR Bulk Import and Export functions are available on both OAMs for the data configured on that OAM.</p>
Diameter (optional)	<p>Allows the user to configure, modify, and monitor Diameter routing:</p> <ul style="list-style-type: none"> • On the NOAMP, Diameter Topology Hiding and Egress Throttle List configuration • On the SOAM, Diameter Configuration, Maintenance, Reports, Troubleshooting with IDIH, AVP Dictionary, and Diameter Mediation configuration
UDR (User Data Repository) (optional)	Allows the user to add, edit, store, and manage subscriber and pool data. The user can also monitor the import, export, and subscribing client status. This option only displays with the UDR application.

Table 2-2 (Cont.) Main Menu Options

Menu Item	Function
RBAR (Range-Based Address Resolution) (optional)	<p>Allows the user to configure the following Range-Based Address Resolution (RBAR) settings:</p> <ul style="list-style-type: none">• Applications• Exceptions• Destinations• Address Tables• Addresses• Address Resolutions• System Options <p>This is accessible from the SOAM only. This option only displays with the DSR application.</p>
FABR (Full Address Based Resolution) (optional)	<p>Allows the user to configure the following Full Address Based Resolution (FABR) settings:</p> <ul style="list-style-type: none">• Applications• Exceptions• Default Destinations• Address Resolutions• System Options <p>This is accessible from the SOAM only. This option is only available with the DSR application.</p>
Gateway Location Application (optional)	<p>On the SOAM, allows the user to perform configuration tasks, edit options, and view elements for:</p> <ul style="list-style-type: none">• Exceptions• Options <p>GLA can deploy with Policy DRA (in the same DA-MP or a separate DA-MP). This option only displays with the DSR application.</p>
MAP-Diameter Interworking (optional)	<p>On the SOAM, allows the user to perform configuration tasks, edit options, and view elements for the DM-IWF DSR Application:</p> <ul style="list-style-type: none">• DM-IWF Options• Diameter Exception <p>On the NOAMP, allows the user to perform configuration tasks, edit options, and view elements for the MD-IWF SS7 Application:</p> <ul style="list-style-type: none">• MD-IWF Options• Diameter Realm• Diameter Identity GTA• GTA Range to PC• MAP Exception• CCNDC Mapping <p>This option only displays with the DSR application.</p>

Table 2-2 (Cont.) Main Menu Options

Menu Item	Function
RADIUS (Remote Authentication Dial-In User Service) (optional)	<p>Allows the user to perform configuration tasks, edit system options, and view elements for:</p> <ul style="list-style-type: none"> • Network Options • Message Authenticator Configuration Sets • Shared Secret Configuration Sets • Ingress Status Server Configuration Sets • Message Conversion Configuration Sets • NAS Node <p>This option only displays with the DSR application.</p>
SBR (Session Binding Repository) (optional)	<p>Allows the user to perform configuration tasks, edit system options, and view elements for:</p> <ul style="list-style-type: none"> • SBR Databases • SBR Database Resizing Plans • SBR Data Migration Plans • Database Options <p>Additionally, on the NOAMP, users are allowed to perform maintenance tasks, edit options, and view elements for:</p> <ul style="list-style-type: none"> • Maintenance <ul style="list-style-type: none"> – SBR Database Status – SBR Status – SBR Database Reconfiguration Status <p>This option only displays with the DSR application.</p>
Mediation	<p>Allows the user to make routable decisions to end the reply, drop the message, or set the destination realm.</p>

Table 2-2 (Cont.) Main Menu Options

Menu Item	Function
Policy and Charging (optional)	<p>On the NOAMP, allows the user to perform configuration tasks, edit options, and view elements for:</p> <ul style="list-style-type: none"> • General Options • Access Point Names • Policy DRA <ul style="list-style-type: none"> – PCRF Pools – PCRF Sub-Pool Selection Rules – Network-Wide Options • Online Charging DRA <ul style="list-style-type: none"> – OCS Session State – Realms – Network-Wide Options • Alarm Settings • Congestion Options <p>Additionally on the NOAMP, users are allowed to perform maintenance tasks, edit options, and view elements for:</p> <ul style="list-style-type: none"> • Maintenance <ul style="list-style-type: none"> – SBR Database Status – SBR Status – SBR Database Reconfiguration Status – Policy Database Query <p>On the SOAM, allows the user to perform configuration tasks, edit options, and view elements for:</p> <ul style="list-style-type: none"> • General Options • Access Point Names • Policy DRA <ul style="list-style-type: none"> – PCRFs – Binding Key Priority – PCRF Pools – PCRF Pool to PRT Mapping – PCRF Sub-Pool Selection Rules – Policy Clients – Suspect Binding Removal Rules – Site Options • Online Charging DRA <ul style="list-style-type: none"> – OCSs – CTFs – OCS Session State – Realms • Error Codes • Alarm Settings • Congestion Options <p>This option only displays with the DSR application.</p>

Table 2-2 (Cont.) Main Menu Options

Menu Item	Function
DCA Framework (optional)	Allows the user to perform configuration tasks, edit system options, and view elements for DCA applications: <ul style="list-style-type: none"> • Custom MEALs (Measurements, Events, Alarms, and Logs) • General Options • Trial MPs assignment • Application Control • System Options
IPFE (optional)	Allows the user to configure IP Front End (IPFE) options and IP List TSAs . This is accessible from the SOAM server only. This option only displays with the DSR application.
Help	Launches the Help system for the user interface
Legal Notices	Product Disclaimers and Notices
Logout	Allows the user to log out of the user interface

Missing Main Menu options

Permissions determine which Main Menu options are visible to users. Permissions are defined through the Group Administration page. The default group, admin, is permitted access to all GUI options and functionality. Additionally, members of the admin group set permissions for other users.

Main Menu options vary according to the group permissions assigned to a user's account. Depending on your user permissions, some menu options may be missing from the Main Menu. For example, Administration menu options do not display on your screen if you do not have administrative permissions. For more information about user permissions, see *Group Administration* in the OAM section of the online help, or contact your system administrator.

Common Graphical User Interface Widgets

Common controls allow you to easily navigate through the system. The location of the controls remains static for all pages that use the controls. For example, after you become familiar with the location of the display filter, you no longer need to search for the control on subsequent pages because the location is static.

Supported Browsers

This application supports the use of Microsoft® Internet Explorer 8.0, 9.0, or 10.0.

is designed to work with most modern HTML5 compliant browsers and uses both JavaScript and cookies. Please refer to the [Oracle Software Web Browser Support Policy](#) for details

System Login Page

Access to the user interface begins at the System Login page. The System Login page allows users to log in with a username and password and provides the option of changing the password upon login. The System Login page also features a date and time stamp reflecting the time the page was last refreshed. Additionally, a customizable login message displays just below the **Log In** button.

The user interface is accessed via HTTPS, a secure form of the HTTP protocol. When accessing a server for the first time, HTTPS examines a web certificate to verify the identity of the server. The configuration of the user interface uses a self-signed web certificate to verify the identity of the server. When the server is first accessed, the supported browser warns the user that the server is using a self-signed certificate. The browser requests confirmation that the server can be trusted. The user is required to confirm the browser request to gain access.

Customizing the Login Message

Before logging in, the System Login page displays. You can create a login message that displays just below the **Log In** button on the System Login page.

Figure 2-1 Oracle System Login



ORACLE®

Oracle System Login Wed Jul 8 14:20:00 2015 EDT

Log In

Enter your username and password to log in

Username:

Password:

☐ Change password

Log In

Welcome to the Oracle System Login.

Unauthorized access is prohibited. This Oracle system requires the use of Microsoft Internet Explorer 8.0, 9.0, or 10.0 with support for JavaScript and cookies.

Oracle and Java are registered trademarks of Oracle Corporation and/or its affiliates.
Other names may be trademarks of their respective owners.

Copyright © 2010, 2015, [Oracle](#) and/or its affiliates. All rights reserved.

1. From the **Main Menu**, click **Administration > General Options**.
2. Locate **LoginMessage** in the **Variable** column.
3. Enter the login message text in the **Value** column.

4. Click **OK** or **Apply** to submit the information.

A status message displays at the top of the Configuration Administration page to inform you if the operation was successful.

The next time you log into the user interface, the login message text displays.

Accessing the DSR Graphical User Interface

In DSR, some configuration is done at the **NOAM** server, while some is done at the **SOAM** server. Because of this, you need to access the DSR graphical user interface (GUI) from two servers. Certificate Management (Single Sign-On) can be configured to simplify accessing the DSR GUI on the NOAM and the SOAM.

For information on configuring Single Sign-On certificates, see **OAM > Administration > Access Control > Certificate Management** in the DSR online help.

After the certificates have been configured, you can log into the DSR GUI on any NOAM or SOAM, and access the DSR GUI on other servers (NOAM or other SOAMs) without having to re-enter your login credentials.

1. In the browser URL field, enter the fully qualified hostname of the NOAM server, for example `https://dsr-no.yourcompany.com`.

When using Single Sign-On, you cannot use the IP address of the server.

2. When prompted by the browser, confirm that the server can be trusted.

The System Login page displays.

3. Enter the Username and Password for your account.

The DSR GUI for the NOAM displays.

4. To access the DSR GUI for the SOAM, open another browser window and enter the fully qualified hostname of the SOAM.

The DSR GUI for the SOAM displays.

You can toggle between the DSR GUI on the NOAM and the DSR GUI on the SOAM as you perform configuration tasks.

Main Menu Icons

This table describes the icons used in the Main Menu.

Table 2-3 Main Menu Icons












Icon	Name	Description
	Folder	Contains a group of operations. If the folder is expanded by clicking the plus (+) sign, all available operations and sub-folders are displayed. Clicking the minus (-) collapses the folder.

Table 2-3 (Cont.) Main Menu Icons

Icon	Name	Description
	Config File	Contains operations in an Options page.
	File with Magnifying Glass	Contains operations in a Status View page.
	File	Contains operations in a Data View page.
	Multiple Files	Contains operations in a File View page.
	File with Question Mark	Contains operations in a Query page.
	User	Contains operations related to users.
	Group	Contains operations related to groups.
	Task	Contains operations related to Tasks
	Help	Launches the Online Help.
	Logout	Logs the user out of the user interface.

Work Area Displays

In the user interface, tables, forms, tabbed pages, and reports are the most common formats.

Note: Screen shots are provided for reference only and may not exactly match a specific application's GUI.

Tables

Paginated tables describe the total number of records being displayed at the beginning and end of the table. They provide optional pagination with **First | Prev | Next | Last** links at both the beginning and end of this table type. Paginated tables also contain

action links on the beginning and end of each row. For more information on action links and other page controls, see [Page Controls](#).

Figure 2-2 Paginated Table

Displaying Records 1-1 of 1 | [First](#) | [Prev](#) | [Next](#) | [Last](#)

Action	System ID	IP Address	Permission	Action
Edit Delete	lisa	10.25.62.4	READ_WRITE	Edit Delete

Displaying Records 1-1 of 1 | [First](#) | [Prev](#) | [Next](#) | [Last](#)

Scrollable tables display all of the records on a single page. The scroll bar, located on the right side of the table, allows you to view all records in the table. Scrollable tables also provide action buttons that operate on selected rows. For more information on buttons and other page controls, see [Page Controls](#).

Figure 2-3 Scrollable Table

Sequence #	Alarm ID	Timestamp	Severity	Product	Process	NE	Server	Type	Instance	Alarm Text
3498	31201	2009-Jun-11 18:07:41.214 UTC	MAJOR	MiddleWare	procmgr	OAMPNE	teks8011006	PROC	eclipseHelp	A managed process cannot be started or has unexpectedly terminated
5445	31201	2009-Jun-11 18:07:27.137 UTC	MAJOR	MiddleWare	procmgr	SOAMP	teks8011002	PROC	eclipseHelp	A managed process cannot be started or has unexpectedly terminated
5443	31107	2009-Jun-11 18:07:24.704 UTC	MINOR	MiddleWare	inetmerge	SOAMP	teks8011002	COLL	teks8011004	DB merging from a child Source Node has failed
5444	31107	2009-Jun-11 18:07:24.704 UTC	MINOR	MiddleWare	inetmerge	SOAMP	teks8011002	COLL	teks8011003	DB merging from a child Source Node has failed
5441	31209	2009-Jun-11 18:07:22.640 UTC	MINOR	MiddleWare	re.portmap	SOAMP	teks8011002	SWV	teks8011003	Unable to resolve a hostname specified in the NodeInfo table.
										Unable to resolve a hostname specified in the NodeInfo table.

[Export](#)

Note: Multiple rows can be selected in a scrollable table. Add rows one at a time using CTRL-click. Add a span of rows using SHIFT-click.

Forms

Forms are pages on which data can be entered. Forms are typically used for configuration. Forms contain fields and may also contain a combination of lists, buttons, and links.

Figure 2-4 Form Page

Username: (5-16 characters)

Group:

Time Zone:

Maximum Concurrent Logins: Maximum concurrent logins for a user (0=no limit).
[Default = 1; Range = 0-50]

Session Inactivity Limit: Time (in minutes) after which login sessions expire (0 = never).
[Default = 120; Range = 0-120]

Comment: (max 64 characters)

Temporary Password: (8-16 characters)

Re-type Password: (8-16 characters)

Tabbed pages

Tabbed pages provide collections of data in selectable tabs. Click on a tab to see the relevant data on that tab. Tabbed pages also group Retrieve, Add, Update, and Delete options on one page. Click on the relevant tab for the task you want to perform and the appropriate fields populate on the page. Retrieve is always the default for tabbed pages.

Figure 2-5 Tabbed Pages

Entire Network	*	System.CPU_CoreUtilPct_Average	System.CPU_CoreUtilPct_Peak			
NOAMP						
SOAM						
Timestamp		System CPU UtilPct Average	System CPU UtilPct Peak	System Disk UtilPct Average	System Disk UtilPct Peak	System RAM UtilPct Average
10/22/2009 19:45		6.764068	44	0.520000	1	7.939407
10/22/2009 20:00		7.143644	25	0.520000	1	8.523822

Figure 2-6 Tabbed Pages

Retrieve

Fields marked with a red asterisk (*) require a value.

Field	Value	Description
Network Entity	<input type="text"/>	* Numeric identifier for the Network Entity 1-15 DIGITS

Reports

Reports provide a formatted display of information. Reports are generated from data tables by clicking **Report**. Reports can be viewed directly on the user interface, or they can be printed. Reports can also be saved to a text file.

Figure 2-7 Report Output

```

=====
User Account Usage Report
=====

Report Generated: Fri Jun 19 19:30:55 2009 UTC
From: Unknown Network OAM&P on host teks5001701
Report Version: 1.0
User: guiadmin

-----
Username           Date of Last Login   Days Since Last Login   Account Status
-----
guiadmin           2009-06-19 19:00:17   0                       enabled
-----

End of User Account Usage Report
=====

```

Customizing the Splash Page Welcome Message

When you first log into the user interface, the splash page displays. Located in the center of the main work area is a customizable welcome message. Use this procedure to create a message suitable for your needs.

1. From the **Main Menu**, click **Administration > General Options**.
2. Locate **Welcome Message** in the **Variable** column.
3. Enter the desired welcome message text in the **Value** column.
4. Click **OK** to save the change or **Cancel** to undo the change and return the field to the previously saved value.

A status message displays at the top of the page to inform you if the operation was successful.

The next time you log into the user interface, the new welcome message text displays.

Column Headers (Sorting)

You can sort a table by a column by clicking the column header. However, sorting is not necessarily available on every column. Sorting does not affect filtering.

When you click the header of a column in a table that can be sorted, an indicator displays in the column header showing the direction of the sort. See [Figure 2-8](#). Clicking the column header again reverses the direction of the sort.

Figure 2-8 Sorting a Table by Column Header

Local Node Name ▼	Realm	FQDN	SCTP Listen Port	TCP Listen Port	Connection Configuration Set	CEX Configuration Set
-------------------	-------	------	------------------	-----------------	------------------------------	-----------------------

Page Controls

User interface pages contain controls, such as buttons and links, that perform specified functions. The functions are described by the text of the links and buttons.

Note: Disabled buttons are grayed out. Buttons that are irrelevant to the selection or current system state, or which represent unauthorized actions as defined in Group Administration, are disabled. For example, **Delete** is disabled for users without Global Data Delete permission. Buttons are also disabled if, for example, multiple servers are selected for an action that can only be performed on a single server at a time.

Table 2-4 contains examples of Action buttons.

Table 2-4 Example Action Buttons

Action Button	Function
Insert	Inserts data into a table.
Edit	Edits data within a table.
Delete	Deletes data from table.
Change	Changes the status of a managed object.

Some Action buttons take you to another page.

Submit buttons, described in Table 2-5, are used to submit information to the server. The buttons are located in the page area and accompanied by a table in which you can enter information. The Submit buttons, except for **Cancel**, are disabled until you enter some data or select a value for all mandatory fields.

Table 2-5 Submit Buttons


Submit Button	Function
OK	Submits the information to the server, and if successful, returns to the View page for that table.
Apply	Submits the information to the server, and if successful, remains on the current page so that you can enter additional data.
Cancel	Returns to the View page for the table without submitting any information to the server.

Clear Field Control

The clear field control allows you to clear the value from a list. The clear field control is available only on some lists.

Click the X next to a list to clear the field.

Figure 2-9 Clear Field Control X

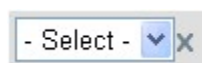

Optional Layout Element Toolbar

The optional layout element toolbar displays in the Page Control Area of the GUI.


Figure 2-10 Optional Layout Element Toolbar

The toolbar displays different elements depending on which GUI page is selected. The elements of the toolbar that can display include:

- Filter – Allows you to filter data in a table.
- Errors – Displays errors associated with the work area.
- Info – Displays information messages associated with the work area.
- Status – Displays short status updates associated with the main work area.
- Warning – Displays warnings associated with the work area.

Notifications

Some messages require immediate attention, such as errors and status items. When new errors occur, the Errors element opens automatically with information about the error. Similarly, when new status items are added, the Status element opens. If you close an automatically opened element, the element stays closed until a new, unacknowledged item is added.

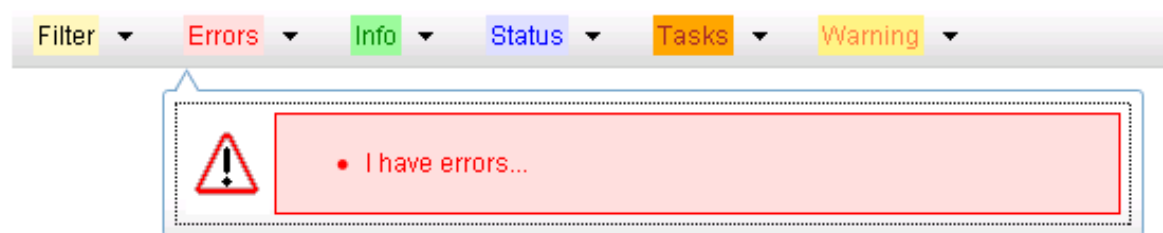Figure 2-11 Automatic Error Notification

Note: Viewing and closing an error does not clear the Errors element. If you reopen the Errors element, previously viewed errors are still in the list.

When new messages are added to Warning or Info, the styling of the element changes to indicate new messages are available. The styling of the Task element changes when a task changes state (such as, a task begins or ends).

Opening an Element in the Toolbar

Use this procedure to open an element in the optional layout element toolbar.

1. Click the text of the element or the triangle icon to open an element.
The selected element opens and overlays the work area.
2. Click X to close the element display.

Filters

Filters are part of the optional layout element toolbar and appear throughout the GUI in the Page Control Area. For more information about optional layout element toolbar functionality, see [Optional Layout Element Toolbar](#).

Filters allow you to limit the data presented in a table and can specify multiple filter criteria. By default, table rows appear unfiltered. Three types of filters are supported, however, not all filtering options are available on every page. The types of filters supported include:

- Network Element – When enabled, the Network Element filter limits the data viewed to a single Network Element.

Note: Once enabled, the Network Element filter affect all pages that list or display data relating to the Network Element.

- Collection Interval – When enabled, the collection interval filter limits the data to entries collected in a specified time range.
- Display Filter – The display filter limits the data viewed to data matching the specified criteria.

Once a field is selected, it cannot be selected again. All specified criteria must be met in order for a row to be displayed.

The style or format of filters may vary depending on which GUI pages the filters are displayed. Regardless of appearance, filters of the same type function the same.

Figure 2-12 Examples of Filter Styles

Filter Control Elements

This table describes filter control elements of the user interface.

Table 2-6 Filter Control Elements

Operator	Description
=	Displays an exact match.
!=	Displays all records that do not match the specified filter parameter value.
>	Displays all records with a parameter value that is greater than the specified value.

Table 2-6 (Cont.) Filter Control Elements

Operator	Description
>=	Displays all records with a parameter value that is greater than or equal to the specified value.
<	Displays all records with a parameter value that is less than the specified value.
<=	Displays all records with a parameter value that is less than or equal to the specified value.
Like	Enables you to use an asterisk (*) as a wildcard as part of the filter parameter value.
Is Null	Displays all records that have a value of Is Null in the specified field.

Note: Not all filterable fields support all operators. Only the supported operators are available for you to select.

Filtering on the Network Element

The global Network Element filter is a special filter that is enabled on a per-user basis. The global Network Element filter allows a user to limit the data viewed to a single Network Element. Once enabled, the global Network Element filter affects all sub-screens that display data related to Network Elements. This filtering option may not be available on all pages.

1. Click **Filter** in the optional layout element toolbar.
2. Select a Network Element from the **Network Element** list.
3. Click **Go** to filter on the selection or click **Reset** to clear the selection.
4. For data tables that support compound filtering, click **Add** to add another filter condition and repeat steps 2 through 4.

Multiple filter conditions are joined by an AND operator.

Records are displayed according to the specified criteria.

Filtering on Collection Interval

The Collection Interval filter allows a user to limit the data viewed to a specified time interval. This filtering option may not be available on all pages.

1. Click **Filter** in the optional layout element toolbar.
2. Enter a duration for the **Collection Interval** filter.

The duration must be a numeric value.

3. Select a unit of time from the list.

The unit of time can be seconds, minutes, hours, or days.

4. Select **Beginning** or **Ending** from the list.
5. Click **Go** to filter on the selection, or click **Reset** to clear the selection.

Records are displayed according to the specified criteria.

Filtering Using the Display Filter

Use this procedure to perform a filtering operation. This procedure assumes you have a data table displayed on your screen with the Display Filter field. This process is the same for all data tables. However, all filtering operations are not available for all tables.

Note: Display Filter does not support compound filtering. For example, you cannot filter on both severity and a server name. Try to filter on a single filter criteria, such as the server hostname for server-scoped metric cells; or the application name for St- and NE-scoped metric cells. You can also sort by congestion level (descending) to help improve your filter.

1. Click **Filter** in the optional layout element toolbar.
2. Select a field name from the **Display Filter** list.

This selection specifies the field in the table that you want to filter on. The default is **None**, which indicates that you want all available data displayed.

3. Select an operator from the operation selector list.
4. Enter a value in the value field.

This value specifies the data that you want to filter on. For example, if you specify Filter=Severity with the equals (=) operator and a value of MINOR, the table would show only records where Severity=MINOR.

5. Click **Go** to filter on the selection, or click **Reset** to clear the selection.

Records are displayed according to the specified criteria.

Note: PCA was known as PDRA and may still be seen in some filtering.

Pause Updates

Some pages refresh automatically. Updates to these pages can be paused by selecting the **Pause updates** checkbox. Uncheck the **Pause updates** checkbox to resume automatic updates. The **Pause updates** checkbox is available only on some pages.

Max Records Per Page Controls

Max Records Per Page is used to control the maximum number of records displayed in the page area. If a page uses pagination, the value of Max Records Per Page is used. Use this procedure to change the Max Records Per Page.

1. From the **Main Menu**, click **Administration > General Options**.
2. Change the value of the **MaxRecordsPerPage** variable.

Note: **Maximum Records Per Page** has a range of values from 10 to 100 records. The default value is 20.

3. Click **OK** or **Apply**.

OK saves the change and returns to the previous page.

Apply saves the change and remains on the same page.

The maximum number of records displayed is changed.

Diameter Mediation

The **Diameter > Mediation** pages on the **SOAM** allow you to manage the **Mediation** feature.

Diameter Mediation helps to solve interoperability issues. Mediation uses rules to manipulate header parts and Attribute-Value Pairs (**AVPs**) in an incoming routable message. When data in the message matches some specified conditions at a specified point of message processing, then actions are applied to modify the message routing decisions.

Mediation overview

Diameter Mediation helps to solve interoperability issues. Mediation software uses rules to manipulate the header and Attribute-Value Pairs (**AVP**) in an incoming routable message. When data in the message matches specified condition(s) at a specified point in the message header, then rules are enacted to reroute the message..

Note: When activated, the Mediation folder and a Rules Template sub-folder appear under Diameter in the left-hand GUI menu. For more information on how to activate the feature, see the *Mediation Feature Activation Procedure*.

A rule template defines the conditions that must match in a message and the actions applied to reroute the message.

- A condition defines the part of the message used in the comparison, an operator for the type of comparison, and a type that must match in the message part. Up to five (5) conditions in the same rule template are collectively referred to as a **Condition Set**. The Condition Set can use AND, OR, or it can apply user specified Complex Expression for comparison.
- An action can add, alter, or delete AVPs; and modify the message header Version, Command-Code, or Application-ID Diameter components. Two or more Actions in a Rule Template are collectively referred to as an Action Set.

A Rule Set is generated by moving the rule template to a test or active status (conditions and the actions can be provisioned in one or more rules in the rule set as described in [Rule Sets](#)).

Rule sets can be associated with pre-defined Request or Answer **Trigger Points** in the message processing logic. When a message reaches a Trigger point and the Condition Set in an associated Rule Set is met, the Action set for that Rule Set is applied to the message. The changes to the message content can result in modifying the message behavior and routing decision at that Trigger point. The available Diameter Mediation Triggers Points are described in [Triggers](#).

A designed Meta-Administrator can use the Rules Template and other GUI pages to perform the following tasks:

- Create, modify, delete, copy, import, and export Rule Sets as described in [Rules Template](#).
- Add help text to a Rule Template; the help text is available for the Rule Set generated from the Rule Template as described in [Rules Template](#).
- Change the state of a Rule Template as described in [State and Properties](#):
- Set the Action Error Handling property of a Rule Set as described in [State and Properties](#).
- Enable the Status of Rule Counters to display the Rule Counters as described in [State and Properties](#).
- Import previously exported Rule Templates as described in [State and Properties](#).
- Add, edit, and delete a rule to a Rule Set and provision the actual data used by the rule in the message matching process as described in [Rule Sets](#).
- Import/Export Rules provisioned in the rule templates in the Test or Active State as described in [Rule Sets](#).
- Associate Rule Sets with Triggers and remove Rule Set associations with Triggers as described in [Triggers](#).
- View, create, edit, and delete the **Internal Variables** used in the rules as described in [Internal Variables](#).
- View, create, edit, and delete the Enumeration types used in the rules as described in [Enumerations](#).
- View, create, edit, and delete the Vendors-specific AVPs used in Rule Templates as described in the *Diameter User's Guide*.
- Test a Rule Set.

The designed Rule Set Administrator can perform the following tasks:

- Add a rule to a Rule Set, and provision the actual data that used by the rule in the message matching process as described in [Rule Sets](#).
- Edit and delete rules in Rule Sets as described in [Rule Sets](#).
- Delete Rule Sets as described in [Rule Sets](#).
- Change the state of a Rule Template as described in [Rules Template](#).
- Set the Action Error Handling property of a Rule Set as described in [Rule Sets](#).
- Test a Rule Set.

A Diagnostics Tool is available at the **SOAM** that allows one to test Mediation rules before exposing the Mediation rules to live traffic. . The Diagnostics Tool logs the rules applied, Actions taken, and other diagnostics information when a test message is processed into the system. The tool generates traffic and sends Diameter messages on a test connection. As a test message traverses the system, the application logic generates diagnostics messages at Trigger points. View the

diagnostics log reports in the **Diameter > Reports > Diagnostics Tool** page as described in the *Diameter User's Guide*.

- Associate Rule Sets with Triggers, and remove Rule Set associations with Triggers, as described in [Triggers](#).
- Import previously exported Rule Templates as described in [State and Properties](#).
- View the Internal Variables used in the rules as described in [Internal Variables](#).
- View the Enumeration types in the rules as described in [Enumerations](#).
- View the Vendors used in Rule Templates as described in [Rules Template](#).

Rule Templates

All Rule Templates are listed on the **Diameter > Mediation > Rule Templates** page with check boxes by each row. To automatically check all the rule templates, check the box by the rule template Name.

Rule templates are created by:

- Formulating the Conditions against which to match incoming requests or responses.
- Defining the Actions that are applied to the message when the conditions match.

A Rule template is created by configuring Settings, Conditions, and Actions sections.

Settings

- The Rule Template Name is placeholder for meaningful text to describe the purpose of the rule template and rule set.
- The Message Type Support is automatically determined depending upon the configured conditions and actions for the Rule Template.

Conditions

One or more (up to 5) matching conditions can be defined in the rule template. The expressions are combined into one logical expression using ANDed, ORed, or Complex Expression operators.

Each matching expression consists of a left-hand value or operand, an operator, and a right-hand value or operand.

- The Left-hand value or operand allows accessing any part of a message, any information stored by the previous rule template, and any information the application resolves runtime.
- The Operator allows comparison of the Left-hand and Right-hand values.
- The Right-hand value or operand allows performing the syntax check for the entered data on the generated Rule Sets page.
- The Condition Set is used to form one logical expression by combining all the Conditions of that Rule Template.

Conditions can be configured to cause Mediation to use fast database look-ups of the rule data. For information on fast search see [Fast Search](#).

Actions

One or more (up to 5) actions indicate what to do when the conditions match (such as modify the part of a message, forward a message, send a reply, insert or remove AVP headers, or set attributes for further processing). Actions implement the mediation of a message.

When the message processing reaches a selected triggering point, the conditions of the rule template are examined for the message. If the conditions match, actions are applied to the message. The actions allow manipulation of some particular part of the message, adding or deleting information in the message, forwarding the message to a specific destination, or triggering of diameter message copy to send a copy of the message to a Diameter Application Server (**DAS**).

The rule template defines the actions to take when a Mediation operation is triggered and its condition set is matched that form an action set. A list of actions available are in the [Rule Template elements](#).

On the **Diameter > Mediation > Rule Templates** page, you can perform the following actions:

- Filter the list of rule template Names to display only the desired rule templates.
- Add a new rule template and its values on the **Diameter > Mediation > Rule Templates [Insert]** page. For information on adding a rule template see [Adding a Rule Template](#). If the maximum number of rule templates (100) already exists in the system, the Rule Templates [Insert] page does not open, and an error message displays.
- Import a rule template from a location outside the Diameter system, to which the rule template was previously exported from Mediation on the **Diameter > Mediation > Rule Templates [Import]** page. For information on importing a rule template see [Importing a Rule Template](#). If the maximum number of rule templates (100) already exists in the system, the Rule Templates [Import] page does not open, and an error message displays.
- Copy a rule template to create a new rule template on the **Diameter > Mediation > Rule Templates [Copy]** page. For information on copying a rule template see [Copying a Rule Template](#). If the maximum number of rule templates (100) already exists in the system, the Rule Templates [Copy] page does not open, and an error message displays.
- Edit the selected rule template on the **Diameter > Mediation > Rule Templates [Edit]** page. For information on changing a rule template see [Changing a Rule Template](#).
- Delete a selected rule template. For information on deleting a rule template see [Deleting a Rule Template](#).
- Export one or more rule template(s) to a location outside of the Diameter system on the **Diameter > Mediation > Rule Templates [Export]** page. For information on exporting a rules template see [Exporting a Rule Template](#).
- Set Help creates online help for the selected rule template on the **Diameter > Mediation > Rule Templates [Set Help]** page. For information on adding online help to a rule template see [Adding online help to a Rule Template](#).

Fast Search versus slow search

The mediation templates can be fast search or slow search. The fast-search templates include only the conditions that can be looked up using the fast search algorithm. This algorithm is more efficient and allows having more templates in the system and more provisioned rules. The slow search template is a template that includes at least one slow search condition. It is allowed to have up to 2000 rules for the fast-search template and 250 only for the slow search template. Even if the template is a slow search template, there are still some recommendations to improve the performance:

- Optimize the template when it is possible. Try to make the template conditions to be fast search when possible.
- Move fast search conditions to the top when possible.
- Try to avoid usage of regular expressions when possible.

Fast search or slow search depends on the content of the condition, the condition evaluation order, and the condition grouping method in the following order:

1. Fast search dependency on the operator, right value type and the default value:
 - "yes" sign if one of the operators "=", "<^<^", "<=^", "is within", "exists", "does not exist", "is true", "is false" is selected and the right hand operand type is not "xl-value".
 - "yes sign" if the default value is fixed regardless of the selected operator and the right value type.
 - "no" sign for other cases
2. Fast search dependency on the condition evaluation order and condition grouping method:
 - Conditions that are ANDed:
 - "yes" sign if the condition is the first on the condition set layout or all the conditions above also have "yes" sign under the fast search label.
 - "no" sign for other case.
 - Conditions that are ORed:
 - "no" sign for all conditions
 - Conditions that form a complex expression that use a mix of AND and OR operations:
 - "yes" sign if the condition is the first condition evaluated in the expression or all the conditions before the expression also have the "yes" sign under the fast search label + the condition is simply ANDed to the rest of expression
 - "no" sign if the condition is ORed
 - "no" sign for other cases

For example assume, that A, B, C and D are fast-search based on 1.

- The specified complex expression is (C OR D) AND A AND B:

- First (C OR D) is evaluated. Since C, D are ORed conditions, they are non fast-search. A, B conditions are evaluated after the non-fast search conditions; hence they are also non fast-search.
- This expression can be optimized by changing the order to A AND B AND (C OR D). Where A, B conditions are evaluated first and they are fast search.

Another example assume that A,B,C are fast-search based on 1.

- The specified complex expression is (A AND B) OR (C AND A):
 - None of the conditions is simply ANDed to the rest of expression hence none of the conditions has fast-search.
 - This expression can be optimized by changing the order to A AND (B OR C). Where A is evaluated first and it is simply ANDed to the rest of expression hence it has the fast search.

Performance

Table 3-1 describes the performance impact of the DSR in specific scenarios. The Simple, Medium, and Complex categories define the maximum percentage of degradation while meeting the existing message latency and reliability and currently measured CPU utilization.

Table 3-1 Mediation Task Classifications

Percentage of Degradation	Number of Conditions	Types of Operators used in Conditions	Number of Rules in the Rule Set
Simple <= 1%	1-2	exist, does not exist, equals ("="), begins with ("=^")	1-50
Medium <=5%	3-4	Greater than (">"), Greater than or Equal to (">="), Less than ("<"), Less than or Equal to("<="), Hash Value hash(<string>,<range>)	51-150
Complex <=10%	5	Pattern matches	151-250

Impact of Adding Rule Templates

Using the mediation framework to manipulate messages can result in increased CPU usage. The CPU increase is dependent on the several factors including the type and number of searches as well as the number and types of changes being performed to the messages. For example, a simple numeric search or an action such as deleting an AVP may not result in increased CPU usage, but a search and replace based on complex pattern matching likely results in increased CPU usage.

The Mediation framework supports a large number of conditions, operators and actions and it is not practical to quantify the CPU increase for every possible combination of conditions and actions. For network planners and operations teams planning to use Mediation, this document provides guidance on the impact of given Mediation template and its associated rules.

While the system allows a maximum of 64 active templates, operators should be cautious about activating templates as it may impact performance. [Assessing a Rule Template for Safe Use](#) provides steps an operator can use to ensure that DSR can continue to support the capacity it has been deployed for, along with the planned mediation templates/rules.

Note: Operators on DSR releases 7.1.x to 7.x.x releases are required to run an additional MOP to unlock the number of templates that can be activated. [Raising the Limit of Active Rule Templates](#) provides steps to increase the number of templates.

Note: There is no performance impact to the DSR for having templates in the Development or Test state or for having an template in the Active state but not assigned to a trigger point.

The Diameter Routing Layer (DRL) request task (DRLRequestTask) and the DRL answer task (DRLAnswerTask) are processes that run on the DSR and are the work horses in the routing layer. These tasks are also responsible for all mediation related activities. Specifically, the DRLRequestTask, among other things, is responsible for any mediation performed on Request messages and therefore the performance impact of using a template at one of the Request Trigger Points is reflected in the %CPU usage of the DrlRequestTask processes.

Similarly, the DRLAnswerTask is responsible for any mediation performed on the Answer messages and the corresponding performance impact is reflected in %CPU usage or the DrlAnswerTask processes. It should be noted that on any given system, there are multiple instances of the DRLRequestTask and DRLAnswerTask processes.

[Assessing a Rule Template for Safe Use](#) the steps to monitor these processes and the permissible limits under which they should remain to ensure that the DSR can support the traffic it was engineered for.

Assessing a Rule Template for Safe Use

Follow this procedure to assess if it is safe to use a mediation template. Perform this procedure first during low traffic periods, and then repeat it during both moderate and peak load periods. Running this procedure does not impact the performance of the system.

1. Use **SSH** to access the DA-MP where the rule template is activated.
2. Activate the template and assign rules to the template.

Note: Do not assign the template to a trigger point at this time. Assigning the template to a trigger point impacts the performance of the system.

3. Run the `top` command to show the **CPU** usage of the DrlRequestTask DrlAnswerTask processes:

```
top -H -p `pidof dsr`
```

Figure 3-1 Top Command Example Output

PID	USER	PR	NI	VIRT	RES	SHR	S	%CPU	%MEM	TIME+
COMMAND										
31841	root	10	-10	6521m	3.2g	279m	S	13.7	13.7	89:36.28
DrlRequestTask										
31837	root	10	-10	6521m	3.2g	279m	S	13.0	13.7	89:40.01
DrlRequestTask										
31839	root	10	-10	6521m	3.2g	279m	S	13.0	13.7	89:35.54
DrlRequestTask										
31835	root	10	-10	6521m	3.2g	279m	R	12.7	13.7	89:46.33
DrlRequestTask										
31847	root	10	-10	6521m	3.2g	279m	S	6.3	13.7	40:55.98
DrlAnswerTask										
31845	root	10	-10	6521m	3.2g	279m	R	6.0	13.7	41:00.14
DrlAnswerTask										
31849	root	10	-10	6521m	3.2g	279m	S	6.0	13.7	40:57.99
DrlAnswerTask										
31803	root	10	-10	6521m	3.2g	279m	S	3.0	13.7	22:49.83
CslRx										

Note: The top command continues to run showing real time updates to CPU usage until it is explicitly terminated

4. Monitor the "%CPU" usage of the respective threads.
 - a. If the template is assigned to a Request Trigger point, monitor the "%CPU" value associated with the DrlRequestTask process.
 - b. If the template is assigned to a Answer Trigger point, monitor the "%CPU" value associated with the DrlAnswerTask process.
5. Assign the template to the appropriate trigger point
6. Continue to monitor the "%CPU" usage of the respective threads as performed in [4](#)

In a geo-redundant setup (where traffic from the mate site can double in case of the mate site failure), operators can add templates or rules as long as the "%CPU" value on any of the DrlRequestTask or DrlAnswerTask processes does not exceed 40%.

When deployed in a non-geo-redundant setup, operators can add templates or rules as long as the "%CPU" value on any of the DrlRequestTask or DrlAnswerTask processes does not exceed 80%.

Raising the Limit of Active Rule Templates

Use this procedure to raise the maximum number of active rule templates to 64. Repeat these steps on every **SOAM**.

1. Use **SSH** to access the active **SOAM**.

2. Verify the current limit value using these commands:

```
iqt -L CapmOptions where "varId='CAPM_MaxActiveTasks'"
iqt -L CapmOptions where "varId='CAPM_MaxAssignedActiveTasks'"
```

3. Execute these commands to set new limits, replacing <NUMBER> with the desired value:

```
iset -fvalue=<NUMBER> CapmOptions where "varId='CAPM_MaxActiveTasks'"
iset -fvalue=<NUMBER> CapmOptions where "varId='CAPM_MaxAssignedActiveTasks'"
```

4. Verify the limits have been increased using the same commands from step 2:

```
iqt -L CapmOptions where "varId='CAPM_MaxActiveTasks'"
iqt -L CapmOptions where "varId='CAPM_MaxAssignedActiveTasks'"
```

Rule Template elements

A Rule Template is created by configuring [Table 3-2](#), [Table 3-3](#), [Table 3-4](#), and [Table 3-5](#).

Settings

The Settings are the main Rule Template properties.

Table 3-2 Settings

Element	Description	Data Input Notes
Rule Template Name	Name used to label this Rule Template in this application. This field is required.	Format: a-z, A-Z, 0-9, -, ., @, and _ (Unset cannot be used as a Rule Template Name.) Range: 1-255 characters
Message type support	Indicates the type of message processing that is supported by the Rule Template (Request, Answer, or both). The Message Support Type depends on the selected conditions and actions.	Format: Check marks Range: Request, Answer, or both are checked. Default: Both are checked This field cannot be edited.

Conditions

The Conditions define a set of one to five matching expressions.

All conditions are supported by both requests and replies. Each condition is marked with a letter in the alphabetical order (A, B, C, D, E, and so on). Use the up and down arrows to move the conditions within the Condition Set; however, the letters that label the conditions stay in alphabetical order.

Table 3-3 Conditions

Element	Description	Data Input Notes
Fast Search	<p>If check marked, fast database lookup is used. Otherwise, the values of the specified field are checked one-by-one until the first match is found. See Fast Search.</p> <p>All Conditions with the Fast Search option checked must precede the others to maintain the Fast Search.</p> <p>When the Default value is Fixed, Fast Search is enabled regardless of the selected Operator and right value type.</p>	<p>Format: check mark or not sign; not editable</p> <p>Range: checked or unchecked</p> <p>Default: checked</p>
* Name	<p>The name for the left value to display for a Condition on the Rule Set page.</p> <p>This field is required.</p>	<p>Format: field</p> <p>Range: 1 to 64 characters</p>
Description	<p>The description that appears for a Condition on the Rule Sets page. If possible, provide information such as the format to be used (such as text string or telephone number format) and the range of values (such as 1 to 255 characters).</p>	<p>Format: field</p> <p>Range: 1 to 255 characters string</p>
* Left value	<p>The left value in a Condition. The left value typically refers to a regular or grouped AVP component (AVP header parts or value) or a Diameter Header component. The grouped AVP can be up to 8 levels deep. Grouped AVPs that have a depth of one are supported (one or more AVPs at the same level within an AVP).</p> <p>This field is required.</p> <p>The value can be defined using the Formatting String Wizard Specifiers.</p>	<p>Format: field</p> <p>Range: See Formatting String Wizard Specifiers</p>

Table 3-3 (Cont.) Conditions

Element	Description	Data Input Notes
Operator	<p>Operator is used to compare left value and right value in a Condition.</p> <p>Exist and not exist operators are used to check the presence of the specified left value.</p> <p>Is true and is not true operators are used to verify whether the specified left value is not 0 or equals 0 (is empty in the case of a string type).</p>	<p>Format: list</p> <p>Range: See Table 3-9</p> <p>Default: equals (==)</p>
Case Sensitive	<p>The checkbox is enabled for the UTF8String right value.</p> <p>Case-sensitive search is possible only together with Fast Search. Without Fast Search, the lookup is always case-insensitive.</p>	<p>Format: checkbox</p> <p>Range: checked or not checked</p> <p>Default: not checked (not case-sensitive)</p>

Table 3-3 (Cont.) Conditions

Element	Description	Data Input Notes
Right Value	<p>The type of data that is compared to the field in the message (specified by the left value) in a Condition to determine if there is a match and Mediation should be performed.</p> <p>The right value can be:</p> <ul style="list-style-type: none"> • Empty - the optional checkbox is checked (it can be left empty in the rule provisioning in a Rule Set), or the right value is not used by the selected Operator (such as exists). • One of the right value types shown in the Range list. Actual data of the specified type is entered in a rule in the Rule Set that is generated from the Rule Template, to use in the comparison. • An actual data value of the selected right value type, provisioned in the Default value field of the Condition in the Rule Template. 	<p>Format: list</p> <p>Range: Right value types are:</p> <ul style="list-style-type: none"> • Integer32 • Integer64 • Unsigned32 • Unsigned64 • Float32 • Float64 • Address (IPv4 or IPv6 IP address) • Time (number of seconds since 0h on 1 January 1900) • UTF8string • DiameterIdentity (FQDN or Realm) • DiameterURI • IP/Netmask (IPv4 or IPv6 Netmask) • Enumerated (available Enum values; prefaced by enum:) • OctetString • xl-value (references to AVPs, LAVPs, or parts of the Diameter message) • Regular expression (Perl 5 regular expression) • Unsigned64Range enter two numbers (the lower and upper limit of the range inclusive) that fit into Unsigned64, separated by a dash (-). • Connection provisioned connection • Peer provisioned peer nodes <p>Default: Integer32</p> <p>All previously provisioned Enumerated Types are listed prefixed with enum:. For example: enum: xyz.</p>

Table 3-3 (Cont.) Conditions

Element	Description	Data Input Notes
Default value	An actual data value to display for the right value of a Condition on the Rule Set page. When the Default value is Fixed, Fast Search is enabled regardless of the selected Operator and right value type.	Format: Text Range: Data value that is valid for selected right value type. When OctetString or UTF8String is selected, any human-readable character is valid. When the xl-value type is selected, all Default value entries must be xl-values.
Optional	The Optional checkbox can be checked so that the right value data could be deleted or left empty in the Rule Set rule, or unchecked indicating that the right value data must be entered and can be changed in the Rule Set rule.	Format: checkbox Range: Check mark or no check mark Default: Checked
Fixed	Indicates that the right value data that is entered in the Default value in the Rule Template Condition is actual data, and cannot be changed in the Rule Set rule.	Format: checkbox Range: Check mark or no check mark Default: Not checked

Condition Set

The Condition Set specifies whether the conditions are logically ANDed, ORed or they form a Complex Expression.

Table 3-4 Condition Set

Element	Description	Data Input Notes
Condition Set	The defined matching expressions (Conditions) are combined in one logical expression (Condition Set) and can be AND, OR or represent Complex Expression operators, so the set matches on the message if all the expressions are true. If no matching expression is defined, the message unconditionally matches.	Format: Options Range: ANDed, ORed or Complex Expression.

Actions

The Actions specify the possible settings for each action to be taken for this Rule Template.

Use the up or down arrows to move the order of the Actions.

Table 3-5 Actions

Action	Description	Data Input Notes
New Action	Add a new Action to the list that is applied when the conditions of the Rule Template match on the message.	Format: list Range: Actions listed in this section of this table.

The [Table 3-6](#) allows the Diameter Header and Set Command Flags to be modified.

Table 3-6 Actions Performed on the Diameter Header

Action	Description	Data Input Notes
Modify Diameter Header Parts	Allows modifying or overwriting of the Version, Command Code, and Application ID components of the Diameter Header. Note: Modifying values in the Diameter Header can result in incompatibility with the standard defined in IETF RFC3588bis (draft-ietf_dime_rfc3588bis-26.txt) <i>Diameter Base Protocol</i> .	Header Part - the component to modify Format: list Range: Version, Command Code, Application ID Default: Version Overwrite to - the new value of the component Format: Integer Range: New value; 8-bit, 24-bit, or 32-bit unsigned integer Optional Format: Checkbox Range: Check mark or no check mark

Table 3-6 (Cont.) Actions Performed on the Diameter Header

Action	Description	Data Input Notes
Set Command Flags	<p>Allows modifying of one or more Command Flags in the processed message, including the reserved flags:</p> <ul style="list-style-type: none"> • Set Command Flag • Clear Command Flag • Keep Original value <p>Flags R, P, E, and T are supported; r4, r5, r6, and r7 are reserved for future use:</p> <ul style="list-style-type: none"> • R - Request; shows whether the message is a Request or a Response. • P - Proxiable; shows if the message can be proxied, relayed, or redirected, or it must be locally processed. • E - Error; shows if the message contains protocol or semantic errors. • T - Shows that a message can potentially be a retransmitted message after a link fail-over, or is used to aid removal of duplicate messages. 	<p>Set Command Flag:</p> <p>Clear Command Flag:</p> <p>Keep original:</p> <p>Default: Keep original</p> <p>Format: Options</p> <p>Range: R, P, E, T, r4, r5, r6, r7</p> <p>Optional</p> <p>is not available</p>

The Actions performed on the Diameter Payload (AVPs) can be applied to a regular AVP, to a Grouped AVP, or to an AVP within the Grouped AVP.

To perform the action on a regular or Grouped AVP, the supported AVP definition from the dictionary and the instance number or value must be specified. The value is valid only for some of the actions.

For actions that are performed on an AVP within a Grouped AVP, the parent AVP and its instance number must be specified.

If an AVP is not present in the dictionary, it is unknown by the Mediation feature and must be defined in the dictionary before the specified action can be performed.

Many of the actions allow xl-values, which can be defined using the [Formatting String Wizard Specifiers](#).

[Table 3-7](#) describes available Diameter Payload actions.

Table 3-7 Actions Performed on the Diameter Payload (AVPs)

Action	Description	Data Input Notes
Add AVP	<p>This action can support up to 8 levels deep AVPs.</p> <hr/> <p>Note: The action fails, if the specified instance of the parent AVP is also added but the previous instances of this AVP do not exist in the message.</p> <hr/> <p>The Flags and the Value must be set for the new AVP. For Grouped AVPs,</p> <ul style="list-style-type: none"> • If the AVP is added within a Grouped AVP, the Parent AVP and its Instance must be specified. • A Parent AVP can be added if it not present in the message; Flags for the added Parent AVP must be set. • If the Parent AVP is not found in the message and it is not added to the message, the action fails. <p>Flags V, M and P are supported; r3, r4, r5, r6 and r7 are reserved for future use.</p> <ul style="list-style-type: none"> • V - Vendor-Specific; indicates whether the optional Vendor-ID field is present in the AVP header. When set, the AVP Code belongs to the specific vendor code address space. • M - Mandatory; indicates whether support of the AVP is required. If an AVP with the M bit set is received by a Diameter client, server, proxy, or translation agent and either the AVP or its value is unrecognized, the message MUST be rejected. Diameter Relay and Redirect Agents 	<p>Add parent AVP if it is not present:</p> <p>Format: Checkbox</p> <p>Range: Check mark or no check mark</p> <p>Default: No check mark</p> <p>AVP:</p> <p>Format: list</p> <p>Range: Available AVPs</p> <p>Instance:</p> <p>Format: list</p> <p>Range: First, Second, Third, Fourth, Fifth, all internal variables of Integer32, Integer64, Unsigned32, Unsigned64 type.</p> <p>Set Flags:</p> <p>Format: checkbox for each flag</p> <p>Range: V, M, P, r3, r4, r5, r6, r7</p> <p>Set Value:</p> <p>Format: Specify the AVP value in Formatting String Wizard Specifiers.</p> <p>Optional</p> <p>Format: Checkbox</p> <p>Range: Check mark or no check mark</p>

Table 3-7 (Cont.) Actions Performed on the Diameter Payload (AVPs)

Action	Description	Data Input Notes
	<p>MUST NOT reject messages with unrecognized AVPs. AVPs with the M bit cleared are informational only. A receiver of a message with an AVP that is not supported, or whose value is not supported, can simply ignore the AVP.</p> <ul style="list-style-type: none">• P - Indicates the need for encryption for end-to-end security. Diameter base protocol specifies which AVPs must be protected by end-to-end security measures (encryption) if the message is to pass through a Diameter agent. If a message includes any of those AVPs, the message must not be sent unless there is end-to-end security between the originator and the recipient of the message.	

Table 3-7 (Cont.) Actions Performed on the Diameter Payload (AVPs)

Action	Description	Data Input Notes
Set/Add AVP	<p>The action allows changing the value of an AVP if it is found in the message or adding an AVP if it is not found in the message.</p> <p>This action can support up to 8 levels deep AVPs.</p> <p>It searches for the specific instance of an AVP in the message, overwriting its value when this AVP is found or appending this AVP (adding it as a last instance) when it's not present.</p> <p>The AVP can be looked up in the message either by the instance number or by the value.</p> <p>If the AVP is not found in the message it can be appended, which requires setting the Flags and specifying the Value of the AVP that is to be added.</p> <p>If a non-existing AVP that was looked up in the message by the specific instance number is about to be added to the message with the different instance number, the action fails.</p>	<p>AVP:</p> <p>Format: list</p> <p>Range: Available AVPs</p> <p>Instance</p> <p>Format: list</p> <p>Range: First, Second, Third, Fourth, Fifth, all internal variables of Integer32, Integer64, Unsigned32, Unsigned64 type.</p> <p>Default: First</p> <p>Set Flags</p> <p>Flag definitions in Add AVP:</p> <ul style="list-style-type: none"> • If the flag must be set, the flag is checked and disabled. • If the flag must not be set, the flag is unchecked and disabled. • If the flag can be set, the checkbox is available to be changed. <p>Format: checkboxes for the flags</p> <p>Range: V, M, P, r3, r4, r5, r6, r7</p> <p>If the AVP is found, set its value (all specified flags are ignored)</p> <p>Format: Options</p> <p>Range: Search by the instance or Search by the value</p> <p>Else append the AVP to the message (all specified flags are considered). Add parent AVP if it is not present</p> <p>Format: checkbox</p> <p>Range: Checked or unchecked</p> <p>Set/Add Value</p> <p>Format: Value entered</p> <p>Range: Specify the AVP value in Formatting String Wizard Specifiers</p> <p>Optional</p> <p>Format: Checkbox</p> <p>Range: Check mark or no check mark</p>

Table 3-7 (Cont.) Actions Performed on the Diameter Payload (AVPs)

Action	Description	Data Input Notes
Delete AVP	<p>Delete a specified AVP in the message.</p> <p>This action can support up to 8 levels deep AVPs.</p> <p>If the Instance of the specified AVP is All, the action is applied to all instances of the AVP or Grouped AVP in the message.</p> <p>If the specified AVP is within a Grouped AVP, the Parent AVP and its Instance must be specified.</p> <p>If the specified AVP is the last AVP within the Grouped AVP, the action can be defined to delete the Parent AVP.</p> <p>If the specified AVP is a Grouped AVP, the Grouped AVP and all of the AVPs within the group are deleted.</p> <p>If the deleted AVP has been the last AVP within the Grouped AVP, then Delete parent AVP if it is empty can be checked to delete the Parent AVP as well.</p> <p>If the specified AVP is not found in the message, the Delete AVP action is considered successful.</p>	<p>Delete parent AVP if it is empty:</p> <p>Format: Checkbox</p> <p>Range: Check mark or no check mark</p> <p>Default: Checked</p> <p>AVP:</p> <p>Format: list</p> <p>Range: Available AVPs</p> <p>Instance:</p> <p>Format: list</p> <p>Range: First, Second, Third, Fourth, Fifth, all internal variables of Integer32, Integer64, Unsigned32, Unsigned64 type.</p> <p>With the value:</p> <p>Specify the AVP value in Formatting String Wizard Specifiers</p> <p>Format: Checkbox</p> <p>Optional</p> <p>Format: Checkbox</p> <p>Range: Check mark or no check mark</p>

Table 3-7 (Cont.) Actions Performed on the Diameter Payload (AVPs)

Action	Description	Data Input Notes
Save AVP	<p>A saved AVP is stored in the buffer as long as the transaction exists.</p> <p>Saved AVPs can be accessed through the Formatting String Wizard Specifiers as corresponding Linking-AVPs with the same AVP and instance number.</p> <p>If the Instance of the specified AVP is All, the action saves all instances of the AVP in the message.</p> <hr/> <p>Note: A grouped AVP can be saved and restored, but sub-AVPs within the stored or restored grouped AVP cannot be retrieved (such as with @msg.avp["name"][index].avp["name"][index]), modified, or removed.</p> <hr/> <p>If the same AVP is saved multiple times (the action is applied multiple times), the saved value is overwritten each time the AVP is saved.</p> <p>If the specified AVP is not found in the message, the Save AVP action is considered to have failed.</p>	<p>Save AVP:</p> <p>Format: list</p> <p>Range: Available AVPs</p> <p>Instance:</p> <p>First, Second, Third, Fourth, Fifth, All, all internal variables of integer32, integer64, unsigned32, unsigned64 type.</p> <p>With the value:</p> <p>Specify the AVP value in Formatting String Wizard Specifiers</p> <p>Format: checkbox</p> <p>Optional</p> <p>Format: checkbox</p> <p>Range: Check mark or no check mark</p>

Table 3-7 (Cont.) Actions Performed on the Diameter Payload (AVPs)

Action	Description	Data Input Notes
Restore AVP	<p>AVPs can be restored in the message by either appending each AVP to the message or by replacing all of the same existing AVPs.</p> <p>The instance number of the saved AVP must be specified, to find the appropriate Linking-AVP (LAVP) that was stored.</p> <hr/> <p>Note: A Grouped AVP can be saved and restored, but sub-AVPs within the stored or restored Grouped AVP cannot be retrieved (such as with @msg.avp["name"][index].avp["name"][index]), modified, or removed.</p> <hr/>	<p>Delete before restore:</p> <p>Format: checkbox</p> <p>Range: Checked, unchecked; default is unchecked.</p> <p>Restore AVP:</p> <p>Format: list</p> <p>Range: Available AVPs</p> <p>Instance:</p> <p>Format: list</p> <p>Range: First, Second, Third, Fourth, Fifth, All, all internal variables of integer32, integer64, unsigned32, unsigned64 type.</p> <p>Optional</p> <p>Format: Checkbox</p> <p>Range: Check mark or no check mark</p>

Table 3-7 (Cont.) Actions Performed on the Diameter Payload (AVPs)

Action	Description	Data Input Notes
Set LAVP	<p>Allows constructing a top-level non-Grouped AVP by setting the Flags and specifying the value, and placing it into the buffer associated with the Diameter transaction. The AVP can be accessed as a Linking-AVP through the Formatting String Wizard Specifiers.</p> <p>The value is stored in the buffer as long as the transaction exists. The LAVP can be used for the Restore AVP action.</p> <ul style="list-style-type: none"> Instance - Specify the instance number of the AVP within the buffer of the transaction. The new AVP specification always overwrites the existing if there is already one with the same instance number. Set Value <ul style="list-style-type: none"> The Input field is available when the selected LAVP has a data format other than Enumerated. The list is available when the selected LAVP has the data format Enumerated. An error message appears if the entered value of the Input field is not an x1-value and does not correspond to the data format required by the selected AVP. Delete: Click to delete an existing Linking-AVP. 	<p>Set LAVP</p> <p>Format: list</p> <p>Range: All non-Grouped AVPs from the dictionary</p> <p>Default: First non-Grouped AVP definition from the dictionary</p> <p>Instance</p> <p>Format: list</p> <p>Range: First, Second, Third, Fourth, Fifth, all internal variables of integer32, integer64, unsigned32, unsigned64 type.</p> <p>Default: First</p> <p>Set Flags</p> <p>Flag definitions in Add AVP:</p> <ul style="list-style-type: none"> If the flag must be set, the flag is checked and disabled. If the flag must not be set, the flag is unchecked and disabled. If the flag can be set, the checkbox is available to be changed. <p>Format: checkboxes for the flags</p> <p>Range: V, M, P, r3, r4, r5, r6, r7</p> <p>Default: From the dictionary</p> <p>Set Value:</p> <p>Specify the AVP value in Formatting String Wizard Specifiers</p> <p>Optional</p> <p>Format: Checkbox</p> <p>Range: Check mark or no check mark</p>

Actions that modify an AVP

If the specified AVP is not found in the message, the action is considered to have failed. [Table 3-8](#) describes Modify AVP actions.

Table 3-8 Actions that Modify an AVP

Action	Description	Data Input Notes
Change AVP Code	<p>Replace an AVP definition with a new one, keeping the original AVP value and flag that are not strictly defined in the dictionary (that can be set).</p> <p>This action can support up to 8 levels deep AVPs.</p> <p>Allows changing the Code of the specified AVP and modifying its Flags.</p>	<p>Parent AVP:</p> <p>Format: list</p> <p>Range: Available AVPs</p> <p>Instance:</p> <p>Format: list</p> <p>Range: First, Second, Third, Fourth, Fifth, all internal variables of integer32, integer64, unsigned32, unsigned64 type.</p> <p>AVP:</p> <p>Format: list</p> <p>Range: Available AVPs</p> <p>Instance: First, Second, Third, Fourth, Fifth, all internal variables of integer32, integer64, unsigned32, unsigned64 type</p> <p>With the value:</p> <p>Specify the AVP value in Formatting String Wizard Specifiers</p> <p>Format: Checkbox</p> <p>New AVP</p> <p>Format: list</p> <p>Range: Available AVPs</p> <p>Optional</p> <p>Format: Checkbox</p> <p>Range: Check mark or no check mark</p>

Table 3-8 (Cont.) Actions that Modify an AVP

Action	Description	Data Input Notes
Change AVP Flags	<p>Allows setting, clearing, and keeping the original value of AVP flags.</p> <p>This action can support up to 8 levels deep AVPs.</p> <p>Flags V, M and P are supported; r3, r4, r5, r6 and r7 are reserved for future use.</p> <ul style="list-style-type: none"> • V - Vendor-Specific; indicates whether the optional Vendor-ID field is present in the AVP header. When set, the AVP Code belongs to the specific vendor code address space. • M - Mandatory; indicates whether support of the AVP is required. If an AVP with the M bit set is received by a Diameter client, server, proxy, or translation agent and either the AVP or its value is unrecognized, the message MUST be rejected. Diameter Relay and Redirect Agents MUST NOT reject messages with unrecognized AVPs. AVPs with the M bit cleared are informational only. A receiver of a message with an AVP that is not supported, or whose value is not supported, can simply ignore the AVP. • P - Indicates the need for encryption for end-to-end security. Diameter base protocol specifies which AVPs must be protected by end-to-end security measures (encryption) if the message is to pass through a Diameter agent. If a message includes any of those AVPs, the 	<p>Parent AVP</p> <p>Format: list</p> <p>Range: Available AVPs</p> <p>Instance:</p> <p>Format: list</p> <p>Range: First, Second, Third, Fourth, Fifth, all internal variables of integer32, integer64, unsigned32, unsigned64 type.</p> <p>AVP:</p> <p>Format: list.</p> <p>Range: Available AVPs</p> <p>With the value:</p> <p>Specify the AVP value in Formatting String Wizard Specifiers</p> <p>Format: Checkbox</p> <p>Set Command Flag:</p> <p>Clear Command Flag:</p> <p>Keep original:</p> <p>Default: Keep original</p> <p>Format: Options</p> <p>Range: R, P, E, T, r4, r5, r6, r7</p> <p>Optional</p> <p>Format: Checkbox</p> <p>Range: Check mark or no check mark</p>

Table 3-8 (Cont.) Actions that Modify an AVP

Action	Description	Data Input Notes
	message must not be sent unless there is end-to-end security between the originator and the recipient of the message.	
Set AVP Value	<p>Allows overwriting of the value of an AVP.</p> <p>This action can support up to 8 levels deep AVPs.</p>	<p>Parent AVP: Format: list Range: Available AVPs</p> <p>Instance: Format: list Range: First, Second, Third, Fourth, Fifth, all internal variables of integer32, integer64, unsigned32, unsigned64 type.</p> <p>AVP: Format: list. Range: Available AVPs</p> <p>Instance: Format: list Range: First, Second, Third, Fourth, Fifth, all internal variables of integer32, integer64, unsigned32, unsigned64 type.</p> <p>With the value: Specify the AVP value in Formatting String Wizard Specifiers Format: Checkbox</p> <p>Set Value: Specify the AVP value in Formatting String Wizard Specifiers</p> <p>Optional Format: Checkbox Range: Check mark or no check mark</p>

Table 3-8 (Cont.) Actions that Modify an AVP

Action	Description	Data Input Notes
Strip from AVP Value	<p>Strips the defined number of characters from either the beginning or the ending of the AVP value. This action can be used in combination with the Prefix/Suffix to AVP Value action.</p> <p>This action can support up to 8 levels deep AVPs.</p>	<p>Parent AVP: Format: list Range: Available AVPs</p> <p>Instance: Format: list Range: First, Second, Third, Fourth, Fifth, all internal variables of integer32, integer64, unsigned32, unsigned64 type</p> <p>AVP: Format: list Range: Available AVPs Instance: First, Second, Third, Fourth, Fifth, all internal variables of integer32, integer64, unsigned32, unsigned64 type.</p> <p>With the value: Specify the AVP value in Formatting String Wizard Specifiers Format: Checkbox</p> <p>Strip from: Format: Options Range: Beginning of the value or End of the AVP value in Formatting String Wizard Specifiers</p> <p>Optional Format: Checkbox Range: Check mark or no check mark</p>

Table 3-8 (Cont.) Actions that Modify an AVP

Action	Description	Data Input Notes
Prefix/Suffix to AVP Value	<p>Add the defined data as a prefix or suffix to the AVP value. This action can be used in combination with the Strip for AVP Value action.</p> <p>This action can support up to 8 levels deep AVPs.</p>	<p>Parent AVP:</p> <p>Format: list</p> <p>Range: Available AVPs</p> <p>Instance:</p> <p>Format: list</p> <p>Range: First, Second, Third Fourth, Fifth, all internal variables of integer32, integer64, unsigned32, unsigned64 type</p> <p>AVP:</p> <p>Format: list</p> <p>Range: Available AVPs</p> <p>Instance: First, Second, Third, Fourth, Fifth, all internal variables of integer32, integer64, unsigned32, unsigned64 type.</p> <p>With the value:</p> <p>Specify the AVP value in Formatting String Wizard Specifiers</p> <p>Format: Checkbox</p> <p>Options: Prefix to the value, Suffix to the value</p> <p>Prefix to the value or Suffix to the value:</p> <p>Specify the AVP value in Formatting String Wizard Specifiers</p> <p>Optional</p> <p>Format: Checkbox</p> <p>Range: Check mark or no check mark</p>

Table 3-8 (Cont.) Actions that Modify an AVP

Action	Description	Data Input Notes
Substitute in AVP Value	<p>Use a defined pattern to locate a field in the AVP value, and replace the data in the field with the specified new data.</p> <p>This action can support up to 8 levels deep AVPs.</p>	<p>Parent AVP: Format: list Range: Available AVPs</p> <p>Instance: Format: list Range: First, Second, Third Fourth, Fifth, all internal variables of integer32, integer64, unsigned32, unsigned64 type</p> <p>AVP: Instance: First, Second, Third, Fourth, Fifth, all internal variables of integer32, integer64, unsigned32, unsigned64 type.</p> <p>With the value: Specify the AVP value in Formatting String Wizard Specifiers Format: Checkbox</p> <p>Pattern: Format: Text Range: Pattern to locate the field</p> <p>Replacement: Format: Text Range: Specify the AVP value in Formatting String Wizard Specifiers</p> <p>Optional Format: Checkbox Range: Check mark or no check mark</p>

Table 3-8 (Cont.) Actions that Modify an AVP

Action	Description	Data Input Notes
Bit Set/Reset	Allows setting/resetting the specified bit of the AVP. This action can support up to 8 levels deep AVPs.	<p>Parent AVP: Format: list Range: Available AVPs</p> <p>Instance: Format: list Range: First, Second, Third Fourth, Fifth and all internal variables of integer32, integer64, unsigned32, unsigned64 type. Default: First non-Grouped AVP definition from the dictionary</p> <p>Bit Position:</p> <hr/> <p>Note: Disabled unless the AVP is selected.</p> <hr/> <p>Format: list Range: Bit indexes between 0-31 or 0-63 depending on the format of an AVP. Default: First non-Grouped AVP definition from the dictionary Range: First, Second, Third Fourth, Fifth and all internal variables of integer32, integer64, unsigned32, unsigned64 type.</p> <p>Set/Reset Value:</p> <hr/> <p>Note: Disabled unless the AVP is selected.</p> <hr/> <p>Format: list Range: 1 or 0 - Default a 1</p> <hr/> <p>Note: If the name of the selected AVP is too long and does not fit on the page, the hint message is available; it displays the entire name.</p> <hr/> <p>Optional Format: Checkbox Range: Check mark or no check mark</p>

Table 3-8 (Cont.) Actions that Modify an AVP

Action	Description	Data Input Notes
Set internal variable	Allows setting the value for an internal variable that is valid for the entire duration of a transaction.	Internal Variable Format: list Range: Available configured Internal Variables. Set Value Specify the AVP value in Formatting String Wizard Specifiers Optional Format: Checkbox Range: Check mark or no check mark
Message Copy	Trigger Diameter Message Copy for the message, based on the values in the Message Copy Configuration Set that is specified for the Action. See Configuration in the Diameter User's Guide.	Select Message Copy Configuration Set Format: list Range: Default or Message Copy Default: Blank Optional Format: Checkbox Range: Check mark or no check mark
Set Request Priority	Allows setting the Priority of a Request to Max Normal Request Priority, which can be used by congestion controls. The action is not applicable for Answer messages.	Request Priority Format: list Range: 0 - Max Normal Request Priority as configured on the Options > Diameter Configuration > Systems Options page. <hr/> Note: Set Request Priority is mutually exclusive with this action. <hr/> Optional Format: Checkbox Range: Check mark or no check mark

Table 3-8 (Cont.) Actions that Modify an AVP

Action	Description	Data Input Notes
Set Route List	<p>Allows setting the Route List to bypass the PRT. This is used when the Request has to be routed based on AVPs that are beyond the ones accessible via the Peer Route Tables. The action can also enforce skipping the Application Route Tables matching. The action is applicable only at Diameter request message received from connection trigger point and is ignored at all other trigger points.</p> <hr/> <p>Note: If the ART is not skipped, then it is possible that an application can specify a PRT, which can result in the overwriting of the Route List specified by mediation.</p> <hr/>	<p>Set Route List Format: list Range: Pre-defined route list based on the list in Diameter > Configuration > Route Lists. Skip Application Route Tables Format: Checkbox Range: Check mark or no check mark</p> <hr/> <p>Note: Abandon Message and Send Answer are mutually exclusive with this action.</p> <hr/> <p>Optional Format: Checkbox Range: Check mark or no check mark</p>
Peg Counter	<p>Allows the user to peg the pre-defined measurements from the list in Diameter > Mediation > Measurements. A report is generated from Measurements > Report.</p>	<p>Measurement Format: list Range: Pre-defined measurements based on the list in Diameter > Mediation > Measurements. Optional Format: Checkbox Range: Check mark or no check mark</p>

Table 3-8 (Cont.) Actions that Modify an AVP

Action	Description	Data Input Notes
Send Answer	<p>Allows answering the request with a configurable Result-Code. The action enables specifying the Result-Code or Experimental-Result-Code and Vendor-ID.</p> <p>The action is supported by Requests only</p>	<p>Answer Result-Code Value Format: Options</p> <p>Vendor-ID Format: Text Range: 1 - 4294967295</p> <p>Answer Error Message Format: Text Range: N/A or specify the message placed in the Error-Message AVP in Answer message.</p> <hr/> <p>Note: Abandon Message and Send Answer are mutually exclusive with this action.</p> <hr/> <p>Exit from Execution Trigger Bypasses any subsequent Rule Template in it. Optional is not available for this Action.</p>
Abandon Message	<p>Allows to silently drop the request. The action is supported by Requests and Answers at the DCL trigger points. The DRL answer triggers (ATP1, ATP4, ATP6 and ATP10) ignore this action.</p>	<p>Format: Blank Range: Blank</p> <hr/> <p>Note: Send Answer and Set Route List are mutually exclusive with this action.</p> <hr/> <p>Exit from Execution Trigger Bypasses any subsequent Rule Template in it. Optional is not available for this Action.</p>

Table 3-8 (Cont.) Actions that Modify an AVP

Action	Description	Data Input Notes
Set Destination-Realm	This action populates Destination-Realm AVP based on the IMSI value present in the Request.	Format: Blank Range: Blank <hr/> Note: Process Decorated NAI is mutually exclusive with this action. <hr/> Exit from Execution Trigger Bypasses any subsequent Rule Template in it. Optional is not available for this Action.
Process Decorated NAI	Performs the following actions: <ul style="list-style-type: none"> Inspects the User-Name AVP for the presence of Decorated NAI, if not present, then the action stops. The request continues processing. If present, extracts the realm value from the Decorated NAI and populates the Destination-Realm AVP. For more information see RFC 5729 and RFC 4282. The action also modifies the User-Name AVP value. For more information, see RFC 4282. If Destination-Realm is deleted/absent during request processing, the action adds it back.	Format: Blank Range: Blank <hr/> Note: Set Destination-Realm is mutually exclusive with this action. <hr/> Optional is not available for this Action.

Table 3-8 (Cont.) Actions that Modify an AVP

Action	Description	Data Input Notes
Redirect Request-Host	<p>This action generates an Answer message with a Result-Code value of 3006 and the (E(rror)) E bit set.</p> <p>The user can specify one of the following options for the Redirect-Host AVP:</p> <ul style="list-style-type: none"> Do not include the Redirect-Host AVP The Redirect-Host AVP is prefixed with an aaa:// and set to the value of Destination-Host AVP from the request or populated manually. If the Destination-Host AVP is not present in the request, the Redirect-Host AVP is not included in the 3006 response Include the Redirect-Host AVP with a user provisioned value (String Wizard available) <p>Two additional redirect types can be added to the generated Answer message by checking Add:</p> <ul style="list-style-type: none"> Redirect-Host-Usage - if the user selects any non-zero value for this AVP the redirection should be cached (zero = DONT_CACHE) Redirect-Max-Cache-Time - number of seconds to cache the redirection (if Redirect-Host-Usage equals zero, then it recommended that this AVP be zero). 	<p>Do not include Redirect-Host AVP</p> <p>Format: Option</p> <p>Range: No Range available</p> <p>Include Redirect-Host AVP with the value of Destination-Host from the request with the aaa:// prefix</p> <p>Format: Option</p> <p>Range: No Range available</p> <p>Include Redirect-Host AVP with the value:</p> <p>Format: Option</p> <p>Range: Specify the AVP value in Formatting String Wizard Specifiers.</p> <p>Add</p> <p>Specify if the extra AVPs have to be added to 3006 response.</p> <p>Format: Checkbox</p> <p>Range: Check to disable or no check mark</p> <p>Default: Unchecked</p> <p>Redirect-Host-Usage AVP</p> <p>Format: list</p> <p>Range: DONT_CACHE, ALL_SESSION, ALL_REALM, REALM AND APPLICATION, ALL_APPLICATION, ALL_HOST, AND ALL_USER</p> <p>Default: DONT_CACHE</p> <p>Redirect-Max-Cache-Time AVP</p> <p>Format: Text</p> <p>Range: Specify the AVP value in Formatting String Wizard Specifiers</p> <p>Default: 0</p> <p>Exit from Execution Trigger</p> <p>Bypasses any subsequent Rule Template in it.</p> <p>Optional is not available for this Action.</p>
<p>Note: If either of the Additional AVPs exist, then both AVPs must exist.</p>		

Table 3-8 (Cont.) Actions that Modify an AVP

Action	Description	Data Input Notes
	<div><div></div><div>Note: If the Redirect-Host is not included in the response, then the Redirect-Host-Usage and Redirect-Max-Cache-Time is not included</div></div>	
	<div><div></div><div>Note: If Do not include Redirect-Host is selected, then the Add checkbox is disabled.</div></div>	

Table 3-8 (Cont.) Actions that Modify an AVP

Action	Description	Data Input Notes
Redirect Request-Realm	<p>This action generates an Answer message with a Result-Code value of 3011 and the (E(rror)) E bit set.</p> <p>The user can specify one of the following options for the Redirect-Realm AVP:</p> <ul style="list-style-type: none"> Do not include the "Redirect-Realm" AVP Include the "Redirect-Realm" AVP with the value of "Destination-Realm" AVP from the Request or populated manually. If the "Destination-Realm" AVP is not present in the request, the "Redirect-Realm" AVP is not included in the 3011 response. Include the Redirect-Realm AVP with a user provisioned value (String Wizard available) <p>Two additional redirect avps can be added to the generated Answer message by checking the Add box:</p> <ul style="list-style-type: none"> Redirect-Realm-Usage - if the user selects any non-zero value for this AVP the redirection should be cached (zero = DONT_CACHE) Redirect-Max-Cache-Time - number of seconds to cache the redirection (if Redirect-Realm-Usage equals zero, then it recommended that this AVP be zero). <hr/> <p>Note: If either of the Additional AVPs exist, then both AVPs must exist.</p> <hr/>	<p>Do not include "Redirect-Realm" AVP</p> <p>Format: Option</p> <p>Range: No Range available</p> <p>Include "Redirect-Realm" AVP with the value of "Destination-Realm" from the request</p> <p>Format: Option</p> <p>Range: No Range available</p> <p>Include "Redirect-Realm" AVP with the value:</p> <p>Format: Option</p> <p>Range: Specify the AVP value in Formatting String Wizard Specifiers</p> <p>Add</p> <p>Specify if the extra AVPs have to be added to 3011 response.</p> <p>Format: checkbox</p> <p>Range: Check to disable or no check mark</p> <p>Default: Unchecked</p> <p>"Redirect-Realm-Usage" AVP</p> <p>Format: list</p> <p>Range: DONT_CACHE, ALL_SESSION, ALL_REALM, REALM AND APPLICATION, ALL_APPLICATION, ALL_HOST, AND ALL_USER</p> <p>Default: REALM AND APPLICATION</p> <p>"Redirect-Max-Cache-Time" AVP</p> <p>Format: checkbox</p> <p>Range: Specify the AVP value in Formatting String Wizard Specifiers</p> <p>Default: 3600</p> <p>Exit from Execution Trigger</p> <p>Bypasses any subsequent Rule Template init.</p> <p>Optional</p> <p>Format: Checkbox</p> <p>Range: Check mark or no check mark</p>

Table 3-8 (Cont.) Actions that Modify an AVP

Action	Description	Data Input Notes
	<p>Note: If the Redirect-Realm is not included in the response, then the Redirect-Realm-Usage and Redirect-Max-Cache-Time is not included</p> <p>Note: If Do not include Redirect-Realm is selected, then the Add checkbox is disabled.</p>	
Assert Alarm/ Event	<p>Define the severity of the alarm at template action.</p> <p>Allows the user to cause an Alarm or Event based on the Condition.</p> <p>The alarm instance value is automatically set to the Template-ID: Rule-ID.</p> <p>The alarms are throttled and auto cleared after 300 seconds.</p>	<p>Alarm/Event</p> <p>Format: list</p> <p>Range: Mediation Generic Event, Mediation Generic Alarm - Minor, Mediation Generic Alarm - Major, Mediation Generic Alarm - Critical</p> <p>Additional info</p> <p>- Write a short explanation to distinguish between different problems. Type in the text box or use the Wizard to write xl-expressions, which are resolved at the run time.</p> <p>Optional</p> <p>Format: Checkbox</p> <p>Range: Check mark or no check mark</p>
Execute Rule template	<p>The value needs to be set at the time the new Rule Template is defined.</p> <p>Only Rule Templates in Test or Active state are listed.</p> <p>This field is displayed on the Diameter Mediation Rule Template Insert and Edit pages, but not on the View page.</p>	<p>Format: list</p> <p>Range: Available Rule Templates in Test and Active states.</p> <p>Optional is not available for this Action.</p>
Exit from Execution Trigger	<p>Exits from the Execution Trigger, bypassing any subsequent Rule Set associated with it.</p>	<p>Optional is not available for this Action.</p>

Table 3-8 (Cont.) Actions that Modify an AVP

Action	Description	Data Input Notes
Execute Perl subroutine	The Execute perl subroutine can query the Diameter message headers and AVPs and change the Diameter message content, for example add, delete, change AVPs and get and set Internal Variables or Linking AVPs.	Script Format: Text Range: Name of the perl script Subroutine Format: Text Range: Specify the subroutine to execute. Optional is not available for this Action.

Rule Template Condition Operators

The [Rule Template Condition Operators](#) describes the operator that allows a comparison of the left-hand operand and the right-hand operand in a condition. The value can be an AVP, another part of a Diameter message, a constant, or an internal variable.

Table 3-9 Rule Template Condition Operators

Operator	Operator Type	Returns true when...
		Example of use
equals (==)	Generic	Value exists AND equals... @msg.command.code==316
does not equal (!=)	Generic	Value does not exist OR does not equal... @msg.command.code!=316
begins with (longest match) (=^^)	String	Value exists AND begins with (longest match)... @msg.avp["Destination-Realm"]=^^test
begins with (=^)	String	Value exists AND begins with... @msg.avp["Destination-Realm"]=^testlb
does not begin with (!=^)	String	Value does not exist OR does not begin with... @msg.avp["Destination-Realm"]!=^testlb
ends with (longest match) (=\$\$)	String	Value exists AND ends with (longest match) @msg.avp["Origin-Host"][1]=\$\$entity.com
ends with (=\$)	String	Value exists AND ends with... @msg.avp["Origin-Host"][1]=\$entity.com
does not end with (!=\$)	String	Value does not exist OR does not end with... @msg.avp["Origin-Host"][1]!=\$entity.com

Table 3-9 (Cont.) Rule Template Condition Operators

Operator	Operator Type	Returns true when...
		Example of use
regular expression match (=~)	String	Value exists AND matches the regular expression... @msg.avp[Session-Id]! =~.*\example\..*
regular expression does not match (!=~)	String	Value does not exist OR does not match the regular expression... @msg.avp["Session-Id"]! =~.*\example\..*
less than (<)	Numeric	Value exists AND is less than... @msg.avp["Validity-Time"]<30
greater than (>)	Numeric	Value exists AND is greater than... @msg.avp["Validity-Time"]>30
less than or equal to (<=)	Numeric	Value exists AND is less than or equal to... @msg.avp["Validity-Time"]<=30
greater than or equal to (>=)	Numeric	Value exists AND is greater than or equal to... @msg.avp["Validity-Time"]>=30
is within	Subnet	Value exists AND is within... @msg.avp["Served-Party-IP-Address"] is within 192.168.0.0/24
is not within	Subnet	Value does not exist OR is not within... @msg.avp["Served-Party-IP-Address"] is not within 192.168.0.0/24
exists		AVP specified as Left value exists... @msg.avp["Vendor-Specific-Application"] exists
does not exist		AVP specified as Left value does not exist... @msg.avp["Vendor-Specific-Application"] does not exist
is true		AVP specified as Left value exists AND it is not empty/non-zero... @msg.avp["Disconnect-Cause"] is true
is false		AVP specified as Left value does not exist OR it is empty/0... @msg.avp["Disconnect-Cause"] is false

The is true and is false work only on numbers (Integer32, Integer32, Unsigned32, Unsigned64, Float32, Float64, Enumerated, Time) and strings (OctetString, UTF8String, DiameterIdentity, DiameterURI).

For an IP Address, is true always succeeds; the address can be converted to a string that is never empty.

If the condition cannot be evaluated (for example, the AVP does not exist or the xl-value is incompatible), then is true fails and is false succeeds.

Rule Template Condition Conversion Rules

Based on the type of operator selected, the left and right values are converted according to the rules in [Table 3-10](#).

Table 3-10 Rule Template Condition Conversion Rules

Left value Type	Operator Type	Right Value Type	Conversion
-	String	-	Convert left value and right value to strings.
-	Numeric	-	Convert left value and right value to numbers.
-	Subnet	-	Convert left value to an IP address. Convert right value to a subnet
String	Generic	String	No conversion is needed.
Numeric	Generic	Numeric	No conversion is needed.
IP address	Generic	IP address	No conversion is needed.
String	Generic	Numeric	Convert left value to a number.
Numeric	Generic	String	Convert right value to a number.
IP address	Generic	String	Convert right value to an IP address.
String	Generic	IP address	Convert left value to an IP address.
None of these cases			Conversion cannot be done.
Operators by Type (see also Table 3-9)			
String	=~ , !=~, ^=, =^^, !=^, =\$\$, =\$, !=\$		
Numeric	<, >, <=, >=		
Subset	is within, is not within		
Generic	==, !=		

The conversion fails if the input value is reasonably not convertible to the new format (such as the numeric input cannot be converted to an IP Address).

If the conversion is impossible or fails, the condition is evaluated to false unless the operator is negated (begins with !, or is not within).

For float to string conversion, the double argument is rounded and converted to decimal notation in the style [-]ddd.dddddd, with 6 characters of precision. If the conversion does not fit into 21 characters, then it fails.

For IPv6 to string conversion, the following rules apply:

- Leading zeros are ignored (01->1)
- Lowercase to uppercase (ffff->FFFF)

- 1:0:0:0:0:0:0->1:0:0:0:0:0:0
- 1::2->1:0:0:0:0:0:0:2
- ::ffff->0:0:0:0:0:0:0:FFFF
- ffff::->FFFF:0:0:0:0:0:0:
- ::->0:0:0:0:0:0:0:0

Adding a Rule Template

Meta-Administrator and Rule Set Administrator use this procedure to define a new Rule Template.

There are three sections of the **Diameter > Mediation > Rule Templates [Insert]** page: **Settings**, **Conditions**, and **Actions**. For a detailed description of each section, see [Rule Templates](#). For a list of Rule Template elements and their definitions, see [Rule Template elements](#).

1. If Mediation - Triggered Message Copy is used (the Message Copy Action is selected in one or more Rule Templates), then the following **Diameter > Configuration** is required before configuring the actions:
 - Configure one or more **Route Groups** that used for one or more **Route Lists** for the Message Copy **DAS**.
 - Configure one or more **Route Lists** for the **DAS**.
 - Configure one or more **Configuration Sets > Message Copy** that can be assigned to one or more Message Copy Actions.
2. Verify the required **Enumeration** types, **Internal Variables**, **Measurements**, **AVP Dictionary entries**, and **Vendors** have been defined in the system.

Use the following GUI pages to view the entries, and to access the GUI pages to enter, change, or delete entries as needed:

- [Internal Variables](#)
- [Enumerations](#)
- [Measurements](#)
- All-AVP Dictionary in the *Diameter User's Guide*
- Vendors in the *Diameter User's Guide*

3. Click **Diameter > Mediation > Rule Templates**.

4. Click **Insert**.

If the maximum number of Rule Templates (100) already exists in the system, the Rule Templates [Insert] page does not open, and an error message displays.

5. Enter the **Rule Template Name** in the Settings section. **Settings** values for the Rule Template. For a description of the setting elements, see [Table 3-2](#).

The **Message type support** depends on the selected conditions and actions.

6. Enter the **Conditions** values.

You can define up to five Conditions in the Rule Template. The grouped AVPs can be up to 8 levels deep. The rule template with no conditions is unconditionally matched for all processed messages.

Note: Enable the fast search option for as many conditions as possible as described in [Fast Search](#). For information on how fast search impacts the performance of DSR, see [Performance](#).

The order the conditions are in alphabetical order. To change the order use up and down arrows.

A check mark in **Optional** indicates a matching expression is optional. This means you can leave this condition's **Value** field blank on the **Diameter > Mediation > Rule Sets** page, and the condition is not used during message processing. For a description of the conditions elements, see [Table 3-3](#).

7. Select the **Condition Set** options as defined in [Table 3-4](#).

Note: The maximum number of provisioned rules per template/rule set depends on the template type. For slow-search templates, which have at least one slow-search condition, the maximum number of provisioned rules is 250. For fast-search templates, the maximum number of provisioned rules is 2000. To determine if the template is a fast-search reference [Fast Search versus slow search](#).

8. Select the **Actions** value as defined in [Table 3-5](#).

When any defined Conditions are met, the Actions specified in this section of the page are taken. At least one Action must be specified for a Rule Template.

9. When the Rule Template definition is complete, click:

- **OK** and change the state of the rule template in **Diameter > Mediation > State & Properties**
- **Apply**
- **Cancel**

10. If you want to add online help to describe this Rule Template in its generated Rule Set, perform the [Adding online help to a Rule Template](#) procedure.

11. If one or more Rule Template Actions for Message Copy have been configured, then go to the **Diameter > Configuration > System Options** page, select the **Message Copy Options** tab, and select the **Enabled** option for the **Message Copy Feature** element.

Adding online help to a Rule Template

When a **Rule Template** is created, online help can be added to the Rule Template to describe it in its generated **Rule Set**.

After online help is added, when the user clicks the context-sensitive help icon in the upper right corner of the associated **Diameter > Mediation > Rule Sets > {name}**

page, this online help explains how to use the **Diameter > Mediation > Rule Sets > {name}** page to configure the Rule Set.

This help is standalone, and is not part of the online help provided by Customer Care Center as part of the Mediation feature.

Use this procedure to add context-sensitive online help to an existing Rule Template:

1. Click **Diameter > Mediation > Rule Templates**.
2. Select the **Rule Template Name** to which online help will be added.
3. Click **Set Help**.
4. Change the contents of the **Title** box to an appropriate title for this help.

The Rule Template Name appears in the **Title** box as the default.

5. In the **Text** field, add specific details on how to configure a rule using this Rule Set, such as a procedure and result. You can also add detail on how the various fields interrelate, and provide any cautions to prevent loss of data.
6. To see how the help text you have entered looks from the Rule Set page, click **Preview**.

A separate window opens and displays the help text. Close the preview window when you are finished previewing the help text.

7. Click **OK**, **Apply** or **Cancel**.

The new help text is now available from the help icon on the **Diameter > Mediation > Rule Sets > {name}** page for this Rule Template.

Rule Templates Help elements

When **Set Help** is clicked for an existing Rule Template on the Diameter Mediation Rule Templates page, the information in [Table 3-11](#) appears.

Table 3-11 Rule Templates Help Elements

Element	Description	Data Input Notes
Title	Title to appear at the top of the Help page. This field is required when providing Help.	Format: field Range: 1-64 characters
Text	Detailed explanation of this Rule Set: how to use it and description of any interrelated features.	Format: field (HTML tags allowed) Range: 1 - 1500 characters
Path	Generated and used by software	

Copying a Rule Template

Use this procedure to copy an existing Rule Template and save it as a new Rule Template. For a list of Rule Template elements and their definitions, see [Rule Template elements](#).

1. Click **Diameter > Mediation > Rule Templates**.
2. Select the **Rule Template** you want to copy.
3. Click **Copy**.

If the maximum number of Rule Templates (100) already exists in the system, the Rule Templates [Copy] page does not open, and an error message displays.

4. Enter a different **Rule Template Name** for the new Rule Template.
5. Make any changes as needed.
6. Click **OK**, **Apply** or **Cancel**.

Changing a Rule Template

Use this procedure to change values for an existing **Rule Template** (for a list of Rule Template elements and their definitions, see [Rule Template elements](#)).

When a Rule Template is in the development state, all elements can be changed.

After the Rule Template state has been changed to test or active, only the following elements can be changed:

- Rule Template Name
- Name of the Conditions
- Default value of the Conditions (except when the Fixed box has been checked)
- Description of the Condition
- Default value of the Actions (except for the value of the Execute Rule Template)

The Rule Template state must be set back to development to change any other elements (all provisioning of rules for the Rule Template are lost when the state is changed back to development), as defined in [State and Properties](#).

1. Click **Diameter > Mediation > Rule Templates**.
2. Click **Edit** on the Rule Template row to be changed.
3. Change **Conditions** and **Actions** as needed.
4. Click **OK**, **Apply** or **Cancel**.

Importing a Rule Template

A Rule Template can be imported into the system using the **Import** function on the **Diameter > Mediation > Rule Templates** page.

Existing Rule Templates can be imported. Existing Rule Templates are previously defined Rule Templates that have been exported from Diameter Mediation using the **Export** function.

The Mediation version in the file selected for importing must be compatible with the system release into which the file is imported.

A successfully imported Rule Template file appears in the list on the **Diameter > Mediation > Rule Templates** page, the **Diameter > Mediation > State & Properties**

page, and as a Rule Set in the **Diameter > Mediation > Rule Sets** menu folder (no Rule Set is generated if the only Action is Execute Rule Template).

The imported Rule Template is automatically set to the Test state.

The Enumeration types used in the Rule Template are imported, if they do not already exist in the system.

If the selected Rule Template references another Rule Template (as an Execute Rule Template action) that is not already present in the system, the referenced Rule Template is also imported, unless there is already a Rule Template with the same Name but a different definition.

Use the following procedure to import an existing Rule Template located outside of the file system:

1. Click **Diameter > Mediation > Rule Templates**.

2. Click **Import**.

If the maximum number of Rule Templates (100) already exists in the system, the **Diameter > Mediation > Rule Templates [Import]** page does not open, and an error message displays.

3. Click **Browse** to open the Choose File popup window.

4. Locate of the Rule Template file you want to import, and select the file.

5. With the Rule Template filename displayed in the **File name** field, click **Open**.

6. Click **Import File**.

Exporting a Rule Template

Use this procedure to export a Rule Template from within the system to an external location.

The saved .xml file contains the following information:

- The **Rule Template** without any provisioned data
- All of the **Enumeration** type definitions with the possible values to which the Rule Template refers
- Mediation version number
- Help pages related to the Rule Template

Note: **Export** is not available (grayed out) for the Rule Set in the Development state (see [State and Properties](#)).

1. Click **Diameter > Mediation > Rule Templates**.

2. Select the **Rule Template Name** row(s) for the Rule Template to be exported by checking the check boxes beside each Rule Template Name.

3. Click **Export**.

A File Download popup window appears.

4. Click **Browse** to open the Choose File window.
5. Locate where you want to export the Rule Template.
6. Click **Export File**.

Deleting a Rule Template

When a Rule Template is deleted, it is removed from the entire system, including the **Diameter > Mediation > State and Properties** page, the **Diameter > Mediation > Triggers** page, and the **Diameter > Mediation > Rule Sets** page.

Any **Rule Sets** generated from this **Rule Template** are also deleted automatically.

If a Rule Set belonging to the selected Rule Template is enabled for live traffic (**Active** state on the State and Properties page), an error message appears indicating the Rule Template cannot be deleted as long as it is being used by the system for live traffic.

Use this procedure to delete an existing Rule Template.

1. Click **Diameter > Mediation > Rule Templates**.
2. Select the **Rule Template Name** of the Rule Template to be removed.
3. Click **Delete**.

Note: A popup window appears to confirm the delete when the selected Rule Template is in the development state or the test state (see the State and Properties page).

4. Click **OK** or **Cancel**

Note: If the selected Rule Template has any data provisioned, another confirmation popup window appears indicating all of the provisioned data that belongs to any Rule Set generated from the Rule Template will be deleted.

5. Click **OK** or **Cancel**

Formatting Value Wizard

The Formatting Value **Wizard** is a popup window available from both the **Diameter > Mediation > Rule Templates > [Insert], [Edit], and Copy** pages and the **Diameter > Mediation > Rule Sets > [Insert] and [Edit]** pages. The wizard simplifies entry of xl-formatted strings, which require specific syntax coding.

An xl-formatted string can contain references to the state of the server, or to the message being processed. For example, `%@ruri.user` refers to the user part of the Request URI within an xl-formatted string. The references are replaced with their actual values during a condition validation or an action execution.

Accessing request content during an Answer processing feature provides a read only access to all AVPs in the request message while processing an answer message to all answer trigger points.

Formatting String Wizard elements

[Table 3-12](#) describe the elements shown when **[wizard]** is clicked, from the **Diameter > Mediation > Rule Templates [Insert]** page.

Table 3-12 Formatting String Wizard Elements

Element	Description
Value	<p>The value of the variable in xl-format.</p> <p>The components of this value can be entered manually by clicking on one or more specifiers, or both.</p>
Specifiers	<p>List of elements that can be part of an xl-formatted string.</p> <p>A specifier is either a single item or a group of items forming a sub-list. Every specifier selected is put into the Value field where the cursor is currently located.</p> <p>The specifiers are described in Formatting String Wizard Specifiers.</p>
Preview	The readable description of the xl-formatted string in the Value field.

Formatting String Wizard Specifiers

[Table 3-13](#) describe the variables in the **Value** field in the Formatting String Wizard page.

Note: [Index] that is either a [<number>] or [any] can be excluded from all of the expressions that refer to the first instance of the **AVP**.

The instance number any can be present in the Left value of the Condition only once.

The instance number any can be present in the Right value of the Condition only once.

Table 3-13 Formatting Value Wizard Specifiers

Specifier	Description		
New Line	Sub-Items	xl-formatted Value	Preview Value
		\r\n	This causes a line break on the GUI page.
String Constant	Type the string constant	"string constant"	{"string constant" }
Diameter Header	Sub-Items	xl-formatted Value	Preview Value
		From the current messages being processed	
	Version	@msg.version	{Msg Version}
	Message Length	@msg.length	{Message Length}

Table 3-13 Formatting Value Wizard Specifiers

Specifier	Description	
Command Flags: R	@msg.command.flags .R	{Msg R Command Flag}
Command Flags: P	@msg.command.flags .P	{Msg P Command Flag}
Command Flags: E	@msg.command.flags .E	{Msg E Command Flag}
Command Flags: T	@msg.command.flags .T	{Msg T Command Flag}
Command Flags: r4	@msg.command.flags .r4	{Msg r4 Command Flag}
Command Flags: r5	@msg.command.flags .r5	{Msg r5 Command Flag}
Command Flags: r6	@msg.command.flags .r6	{Msg r6 Command Flag}
Command Flags: r7	@msg.command.flags .r7	{Msg r7 Command Flag}
Command Code	@msg.command.code	{Msg Command Code}
Application ID	@msg.application_id	{Msg Application ID}
Hop-by-Hop Identifier	@msg.hbh_id	{Msg Hop-to-Hop Identifier}
End-to-End Identifier	@msg.e2e_id	{Msg End-to-End Identifier}
From the request during the answer processing		
Version	@req.version	{Req Version}
Message Length	@req.length	{Request Length}
Command Flags: R	@req.command.flags .R	{Req R Command Flag}
Command Flags: P	@req.command.flags .P	{Req P Command Flag}
Command Flags: E	@req.command.flags .E	{Req E Command Flag}
Command Flags: T	@req.command.flags .T	{Req T Command Flag}
Command Flags: r4	@req.command.flags .r4	{Req r4 Command Flag}

Table 3-13 Formatting Value Wizard Specifiers

Specifier	Description		
	Command Flags: r5	@req.command.flags.r5	{Req r5 Command Flag}
	Command Flags: r6	@req.command.flags.r6	{Req r6 Command Flag}
	Command Flags: r7	@req.command.flags.r7	{Req r7 Command Flag}
	Command Code	@req.command.code	{Req Command Code}
	Application ID	@req.application_id	{Req Application ID}
	Hop-by-Hop Identifier	@req.hbh_id	{Req Hop-to-Hop Identifier}
	End-to-End Identifier	@req.e2e_id	{Req End-to-End Identifier}
	AVP	Sub-Items	
AVP			
List containing all AVP definitions from the base and custom dictionaries. If the AVP selected is of Type Group, then the list contains only those AVPs belonging to the ParentAVP.			
AVP Component			
List containing the following components:			
<ul style="list-style-type: none">• <i>Data</i>• <i>Data_Length</i>• <i>AVP Code</i>• <i>Flag V</i>• <i>Flag M</i>• <i>Flag P</i>• <i>Flag r3</i>• <i>Flag r4</i>• <i>Flag r5</i>• <i>Flag r6</i>• <i>Flag r7</i>• <i>Vendor-ID</i>			
Flags V, M, and P are supported; flags r3, r4, r5, r6, and r7 are reserved for future use.			
AVP Instance number			
List the indexes of AVP (<i>First, Second, Third, Fourth, Fifth, Any</i>). If <i>Any</i> is selected in the AVP instance number list, then the Store matched instance into list appears. It contains all provisioned internal variables that are of <i>integer32</i> , <i>integer64</i> , <i>unsigned32</i> , and <i>unsigned64</i> type.			

Table 3-13 Formatting Value Wizard Specifiers

Specifier	Description
	<p>Sub-type</p> <p>Specifically used with AVP Visited-PLMN-Id</p> <p>List containing types:</p> <ul style="list-style-type: none"> • <i>mccmnc</i> • <i>mcc</i> • <i>mnc</i> <p>Sub-type</p> <p>Specifically used with AVP User-Name</p> <p>List containing types:</p> <ul style="list-style-type: none"> • <i>realm</i> • <i>user</i> • <i>realm_decoration</i> • <i>user_decoration</i> • <i>stripped_decoration</i> • <i>proper_user</i> • <i>imsi</i> • <i>imsi.mccmnc</i> • <i>imsi.mcc</i> • <i>imsi.mnc</i> <p>Store matched instance into</p> <p>The matching instance value can be saved into any if the <i>integer types, signed/unsigned 32/64 bit</i>.</p>

Table 3-13 Formatting Value Wizard Specifiers

Specifier	Description
Table 3-14 From the Current Messages Being Processed	
xl-Formatted Value	Preview Value
@msg.avp["name"] [index].data	{Msg AVP:avp["Name"] [Index].Data}
@msg.avp["name"] [index].data_length	{Msg AVP:avp["Name"] [Index].Data_Length}
@msg.avp["name"] [index].code	{Msg AVP:avp["Name"] [Index].Code}
@msg.avp["name"] [index].flags.V	{Msg AVP:avp["Name"] [Index].Flag V}
@msg.avp["name"] [index].flags.M	{Msg AVP:avp["Name"] [Index].Flag M}
@msg.avp ["name"] [index].flags.P	{Msg AVP:avp["Name"] [Index].Flag P}
@msg.avp ["name"] [index].flags.r3	{Msg AVP:avp["Name"] [Index].Flag r3}
@msg.avp ["name"] [index].flags.r4	{Msg AVP:avp["Name"] [Index].Flag r4}
@msg.avp ["name"] [index].flags.r5	{Msg AVP:avp["Name"] [Index].Flag r5}
@msg.avp ["name"] [index].flags.r6	{Msg AVP:avp["Name"] [Index].Flag r6}
@msg.avp ["name"] [index].flags.r7	{Msg AVP:avp["Name"] [Index].Flag r7}
@msg.avp ["name"] [index].vendor_id	{Msg AVP:avp["Name"] [Index].Vendor-ID}
@msg.avp["name"] [index].avp["name"] [index].data	{Msg AVP:avp["ParentAVP Name"][Index].avp["AVP Name"][Index].Data}
@msg.avp["name"] [index].avp["name"] [index].data_length	{Msg AVP:avp["ParentAVP Name"][Index].avp["AVP Name"] [Index].Data_Length}

Table 3-13 Formatting Value Wizard Specifiers

Specifier	Description
Table 3-14 From the Current Messages Being Processed	
xl-Formatted Value	Preview Value
@msg.avp["name"]	{Msg AVP:avp["ParentAVP
[index].avp["name"]	Name"] [Index].avp["AVP
[index].code	Name"] [Index].Code}
@msg.avp["name"]	{Msg AVP:avp["ParentAVP
[index].avp["name"]	Name"] [Index].avp["AVP
[index].flags.V	Name"] [Index].Flag V}
@msg.avp["name"]	{Msg AVP:avp["ParentAVP
[index].avp["name"]	Name"] [Index].avp["AVP
[index].flags.M	Name"] [Index].Flag M}
@msg.avp["name"]	{Msg AVP:avp["ParentAVP
[index].avp["name"]	Name"] [Index].avp["AVP
[index].flags.P	Name"] [Index].Flag P}
@msg.avp["name"]	{Msg AVP:avp["ParentAVP
[index].avp["name"]	Name"] [Index].avp["AVP
[index].flags.r3	Name"] [Index].Flag r3}
@msg.avp["name"]	{Msg AVP:avp["ParentAVP
[index].avp["name"]	Name"] [Index].avp["AVP
[index].flags.r4	Name"] [Index].Flag r4}
@msg.avp["name"]	{Msg AVP:avp["ParentAVP
[index].avp["name"]	Name"] [Index].avp["AVP
[index].flags.r5	Name"] [Index].Flag r5}
@msg.avp["name"]	{Msg AVP:avp["ParentAVP
[index].avp["name"]	Name"] [Index].avp["AVP
[index].flags.r6	Name"] [Index].Flag r6}
@msg.avp["name"]	{Msg AVP:avp["ParentAVP
[index].avp["name"]	Name"] [Index].avp["AVP
[index].flags.r7	Name"] [Index].Flag r7}
@msg.avp["name"]	{Msg AVP:avp["ParentAVP
[index].avp["name"]	Name"] [Index].avp["AVP
[index].vendor_id	Name"] [Index].Vendor-ID}

Table 3-13 Formatting Value Wizard Specifiers

Specifier	Description
	Depending on the trigger point, when the processed message being retrieved by the @msg xl-formatted values, the following message data is accessible:
Table 3-15 Trigger Point for Message Data	
Trigger Points	What is Returned by the Select @msg
RTP1	Header/AVP components from the previously modified (at RTP1) incoming request.
RTP4	Header/AVP components from the previously modified request before the application invocation.
RTP6	Header/AVP components from the previously modified request after the application invocation. (If an application, for ex. MAP-Diameter IWF generates request) Header/AVP component from the request generated by the application.
RTP10	Header/AVP components from the previously modified request that is ready to be forwarded by the system.
RTP11	Header/AVP components from the previously modified re-routed request that is ready to be forwarded by the system.
ATP1	Header/AVP components from the previously modified(at ATP1) incoming answer.
ATP4	Header/AVP components from the previously modified answer before the application invocation.
ATP6	Header/AVP components from the previously modified answer after the application invocation. (If the application, for ex. Map-Diameter IWF generates answer)Header/AVP component from the answer generated by the application.
ATP10	Header/AVP components from the modified answer ready to be forwarded by the system.
DCL triggers	Header/AVP components from the system request/answer being processed.

Table 3-13 Formatting Value Wizard Specifiers

Specifier	Description
Table 3-16 From the Request During the Answer Processing	
xl-formatted Value	Preview Value
@req.avp["name"] [index].data	{Req AVP:avp["Name"] [Index].Data}
@req.avp["name"] [index].data_length	{Req AVP:avp["Name"] [Index].Data_Length}
@req.avp["name"] [index].code	{Req AVP:avp["Name"] [Index].Code}
@req.avp["name"] [index].flags.V	{Req AVP:avp["Name"] [Index].Flag V}
@req.avp["name"] [index].flags.M	{Req AVP:avp["Name"] [Index].Flag M}
@req.avp["name"] [index].flags.P	{Req AVP:avp["Name"] [Index].Flag P}
@req.avp["name"] [index].flags.r3	{Req AVP:avp["Name"] [Index].Flag r3}
@req.avp["name"] [index].flags.r4	{Req AVP:avp["Name"] [Index].Flag r4}
@req.avp["name"] [index].flags.r5	{Req AVP:avp["Name"] [Index].Flag r5}
@req.avp["name"] [index].flags.r6	{Req AVP:avp["Name"] [Index].Flag r6}
@req.avp["name"] [index].flags.r7	{Req AVP:avp["Name"] [Index].Flag r7}
@req.avp["name"] [index].vendor_id	{Req AVP:avp["Name"] [Index].Vendor-ID}
@req.avp["name"] [index].avp["name"] [index].data	{Req AVP:avp["ParentAVP Name"][Index].avp[AVP Name"][Index].Data}
@req.avp["name"] [index].avp["name"] [index].data_length	{Req AVP:avp["ParentAVP Name"][Index].avp[AVP Name"] [Index].Data_Length}

Table 3-13 Formatting Value Wizard Specifiers

Specifier	Description
-----------	-------------

Table 3-16 From the Request During the Answer Processing	
xl-formatted Value	Preview Value
@req.avp["name"] [index].avp["name"] [index].code	{Req AVP:avp["ParentAVP Name"][Index].avp[AVP Name"][Index].Code }
@req.avp["name"] [index].avp["name"] [index].flags.V	{Req AVP:avp["ParentAVP Name"][Index].avp[AVP Name"][Index].Flag V }
@req.avp["name"] [index].avp["name"] [index].flags.M	{Req AVP:avp["ParentAVP Name"][Index].avp[AVP Name"][Index].Flag M }
@req.avp["name"] [index].avp["name"] [index].flags.P	{Req AVP:avp["ParentAVP Name"][Index].avp[AVP Name"][Index].Flag P }
@req.avp["name"] [index].avp["name"] [index].flags.r3	{Req AVP:avp["ParentAVP Name"][Index].avp[AVP Name"][Index].Flag r3 }
@req.avp["name"] [index].avp["name"] [index].flags.r4	{Req AVP:avp["ParentAVP Name"][Index].avp[AVP Name"][Index].Flag r4 }
@req.avp["name"] [index].avp["name"] [index].flags.r5	{Req AVP:avp["ParentAVP Name"][Index].avp[AVP Name"][Index].Flag r5 }
@req.avp["name"] [index].avp["name"] [index].flags.r6	{Req AVP:avp["ParentAVP Name"][Index].avp[AVP Name"][Index].Flag r6 }
@req.avp["name"] [index].avp["name"] [index].flags.r7	{Req AVP:avp["ParentAVP Name"][Index].avp[AVP Name"][Index].Flag r7 }
@req.avp["name"] [index].avp["name"] [index].vendor_id	{Req AVP:avp["ParentAVP Name"][Index].avp[AVP Name"][Index].Vendor-ID }

Table 3-13 Formatting Value Wizard Specifiers

Specifier	Description	
	Depending on the trigger point, when the request is retrieved by using the "@req" xl-formatted values and based on the origin of the answer message, the following request data is accessible:	
Table 3-17 Trigger Point for Request Data		
Trigger Points	Answer is Received	Answer is Generated
RTP1		N/A
RTP4		N/A
RTP6		N/A
RTP10		N/A
RTP11		N/A
ATP1	Header/AVP components from the modified request forwarded by the system	N/A
ATP4	Header/AVP components from the modified request forwarded by the system	N/A or Header/AVP components from the modified request.
ATP6	Header/AVP components from the modified request forwarded by the system	N/A or Header/AVP components from the modified request.
ATP10	Header/AVP components from the modified request forwarded by the system	Header/AVP components from the modified request.
DCL triggers		N/A
Note: A condition/action fails at the DCL triggers when using @req xl-formatted values in the conditions and actions.		
Linking AVP	Sub-Items	

Table 3-13 Formatting Value Wizard Specifiers

Specifier	Description
	<p>Linking-AVP</p> <p>List containing all AVP definitions from the dictionary (except for the case where the selected Parent AVP is grouped, then only those AVPs that belong to the group are available).</p> <hr/> <p>Note: Sub-LAVPs within a grouped LAVP cannot be retrieved (such as with <code>@store.avp["name"][index].avp["name"][index]</code>), modified, or removed.</p> <hr/> <p>Linking-AVP Instance number</p> <p>List containing the indexes of the ParentAVP (<i>First, Second, Third, Fourth, Fifth, Any</i>).</p> <p>Linking-AVP Component</p> <p>List containing the following components:</p> <ul style="list-style-type: none"> • <i>Data</i> • <i>Data Length</i> • <i>AVP Code</i> • <i>Flag V</i> • <i>Flag M</i> • <i>Flag P</i> • <i>Flag r3</i> • <i>Flag r4</i> • <i>Flag r5</i> • <i>Flag r6</i> • <i>Flag r7</i> • <i>Vendor ID</i> <p>Flags V, M, and P are supported; flags r3, r4, r5, r6, and r7 are reserved flags.</p>

Table 3-13 Formatting Value Wizard Specifiers

Specifier	Description
Table 3-18 Linking-AVP xI-Formatted Value	
xI-Formatted Value	Preview Value
@store.avp["name"] [index].data	{LAVP:avp["Name"] [Index].Data}
@store.avp["name"] [index].data_length	{LAVP:avp["Name"] [Index].Data_Length}
@store.avp["name"] [index].code	{LAVP:avp["Name"] [Index].code}
@store.avp["name"] [index].flags.V	{LAVP:avp["Name"] [Index].Flag V}
@store.avp["name"] [index].flags.M	{LAVP:avp["Name"] [Index].Flag M}
@store.avp["name"] [index].flags.P	{LAVP:avp["Name"] [Index].Flag P}
@store.avp["name"] [index].flags.r3	{LAVP:avp["Name"] [Index].Flag r3}
@store.avp["name"] [index].flags.r4	{LAVP:avp["Name"] [Index].Flag r4}
@store.avp["name"] [index].flags.r5	{LAVP:avp["Name"] [Index].Flag r5}
@store.avp["name"] [index].flags.r6	{LAVP:avp["Name"] [Index].Flag r6}
@store.avp["name"] [index].flags.r7	{LAVP:avp["Name"] [Index].Flag r7}
@store.avp["name"] [index].vendor_id	{LAVP:avp["Name"] [Index].Vendor-ID}
@store.avp["name"] [index].avp["name"] [index].data	{LAVP:avp["ParentLAVP Name"] [Index].avp["LAVP Name"] [Index].Data}
@store.avp["name"] [index].avp["name"] [index].data_length	{LAVP:avp["ParentLAVP Name"] [Index].avp["LAVP Name"] [Index].Data_Length}

Table 3-13 Formatting Value Wizard Specifiers

Specifier	Description
Table 3-18 Linking-AVP xl-Formatted Value	
xl-Formatted Value	Preview Value
@store.avp["name"] [index].avp["name"] [index].code	{ LAVP: avp["ParentLAVP Name"] [Index].avp["LAVP Name"] [Index].Code }
@store.avp["name"] [index].avp["name"] [index].flags.V	{ LAVP: avp["ParentLAVP Name"] [Index].avp["LAVP Name"] [Index].Flags.V }
@store.avp["name"] [index].avp["name"] [index].flags.M	{ LAVP: avp["ParentLAVP Name"] [Index].avp["LAVP Name"] [Index].Flags.M }
@store.avp["name"] [index].avp["name"] [index].flags.P	{ LAVP: avp["ParentLAVP Name"] [Index].avp["LAVP Name"] [Index].Flags.P }
@store.avp["name"] [index].avp["name"] [index].flags.r3	{ LAVP: avp["ParentLAVP Name"] [Index].avp["LAVP Name"] [Index].Flags.r3 }
@store.avp["name"] [index].avp["name"] [index].flags.r4	{ LAVP: avp["ParentLAVP Name"] [Index].avp["LAVP Name"] [Index].Flags.r4 }
@store.avp["name"] [index].avp["name"] [index].flags.r5	{ LAVP: avp["ParentLAVP Name"] [Index].avp["LAVP Name"] [Index].Flags.r5 }
@store.avp["name"] [index].avp["name"] [index].flags.r6	{ LAVP: avp["ParentLAVP Name"] [Index].avp["LAVP Name"] [Index].Flags.r6 }
@store.avp["name"] [index].avp["name"] [index].flags.r7	{ LAVP: avp["ParentLAVP Name"] [Index].avp["LAVP Name"] [Index].Flags.r7 }
@store.avp["name"] [index].avp["name"] [index].vendor-id	{ LAVP: avp["ParentLAVP Name"] [Index].avp["LAVP Name"] [Index].Vendor-ID }
Functions	Sub-Items xl-Formatted Value Preview Value
	Length of strlen(STRING) { Length of

Table 3-13 Formatting Value Wizard Specifiers

Specifier	Description	
	<p>Used to determine the length of a number and if additional digits should be added or removed.</p> <p>For example, if a 7-digit number is received, then a default area code might have to be added to the number.</p> <p>Length of always works on string types. If the parameter happens to be a number, then it is automatically treated as a string by these functions. Hence, <code>strlen(123)</code> works the same as <code>strlen(123)</code>, and returns 3.</p> <p>The input of the function string might include other xl-values such as constants, Diameter Header parts, AVP, LAVP parts, or other functions.</p>	
Hash	<code>hash (STRING, RANGE)</code>	<code>{Hash (STRING, RANGE) }</code>
	<p>Used for making a routing decision based on the hash generated on the session-id AVP. This AVP is present in charging messages such as ACR and CCR.</p> <p>For example, if session-id hashes to 1, then set dest-host to host1; if it hashes to 2, then set dest-host to host2.</p> <p>Because all messages in a session need to go to the same host and they all have the same session-id, the mechanism can be used to send them to the same host without maintaining state.</p> <p>The input of the function string might include other xl-values such as contents, Diameter Header parts, AVP or LAVP parts, or other functions.</p>	
Substring	<code>substr (STRING, POSITION, LENGTH)</code> Position can be negative, (counted from the end).	<code>Substring (STRING, POSITION, LENGTH) }</code>
	<p>Used to inspect a part of a string or number and make changes if needed.</p> <p>For example, if the first 4 characters match +011, then delete the characters.</p> <p>Substring works always on string types.</p> <p>The input of the function position specifies the position(character) at which the counting of the substring begins. Position 0 indicates the first character of the string. -1 indicates the last character of the string.</p> <p>The input of the function length specifies the number of characters to include in the substring.</p> <p>The specified substring is extracted.</p> <p>For example: <code>substr(@msg.avp[APN-OI-Replacement][1],0,5)</code></p>	
X hours	<code>hour2sec (HOURS)</code>	<code>{HOURS hours }</code>
Y minutes	<code>min2sec (MINUTES)</code>	<code>{MINUTES minutes }</code>
GMT	<code>time ()</code>	<code>{GMT time }</code>

Table 3-13 Formatting Value Wizard Specifiers

Specifier	Description	
	<p>Can be used to perform time of day routing.</p> <p>Certain AVPs carry time, which can be compared against a specified hour and minute to perform time of day routing.</p> <p>The inputs hours or minutes might include other xl-values.</p>	
TBCD_decode	TBCD_decode (OCTETSTRING)	{TBCD_decode (OCTETSTRING)}
TBCD_encode	TBCD_encode (STRING)	TBCD_encode (STRING)}
	<p>TBCD (Telephony Binary Decimal String) is used to represent the digits from 0 to 9, *,#, a,b,c. TBCD is of an octet string type, includes two digits per octet, each digit encoded between 0000 to 1001(0-9), 1010(*), 1011(#), 1100(a), 1101(b) or 1110 (c); 1111 is used as a filler in case of an odd number of digits.</p> <p>The bits 8765 of octet n are encoding digits 2n</p> <p>The bits 4321 of octet n are encoding digits 2(n-1) +1</p> <p>TBCD_decode function(TBCD_decode(octetstring)): Decode digits(0-9) and specific telephony characters(*, #, a,b,c) from a TBCD-string and return an UTF8String.</p> <p>The input of the function octetstring includes AVP or LAVP xl-values.</p> <p>TBCD_encode function(TBCD_encode(string)): Encode digits(0-9) and specific telephony characters(*, #,a,b,c) to a TBCD-string and return an octet string.</p> <p>The input of the function string includes other xl-values (constants, Diameter header parts, AVP or LAVP parts, other functions, and so on).</p>	
Position	Position Integer32 (value)	{Position (SUBSTRING, STRING)}
	<p>Position function(position(substring,string)) is used to search for a substring in a string and return the position of the first occurrence of a substring.</p> <p>Position works always on string and octet string types.</p> <p>The input of the function substring and string includes other xl-values (constants, Diameter header parts, AVP or LAVP parts, other functions, and so on).</p> <p>The corresponding position is returned. Position 0 indicates the first character of the string.</p> <p>Example: position(om,Thomas) returns 2.</p>	
Get Bit	getBit (AVP,position)	{Get Bit (AVP, Position)}

Table 3-13 Formatting Value Wizard Specifiers

Specifier	Description	
	<p>Get Bit function (getBit (AVP, Position)): The function allows retrieving a particular bit from the AVP value in the rule condition part.</p> <p>The input of the function includes an AVP value and the position index of the bit.</p> <p>The function works only with the AVPs of Unsigned32 ,Unsigned64, Integer32, Integer64 data types.</p>	
Convert to Integer32	Integer32 (<value>)	{Convert to Integer32 (<value>) }
Convert to Integer64	Integer64 (<value>)	{Convert to Integer64 (<value>) }
Convert to Unsigned32	Unsigned32 (<value>)	{Convert to Unsigned32 (<value>) }
Convert to Unsigned64	Unsigned64 (<value>)	{Convert to Unsigned64 (<value>) }
Convert to Float32	Float32 (<value>)	{Convert to Float32 (<value>) }
Convert to Float64	Float64 (<value>)	{Convert to Float64 (<value>) }
Convert to String	String (<value>)	{Convert to String (<value>) }
Convert to OctetString	OctetString (<value>)	{Convert to OctetString (<value>) }
Convert to Address	Address (<value>)	{Convert to Address (<value>) }

Table 3-13 Formatting Value Wizard Specifiers

Specifier	Description		
	<p>Usually the entered xl -formatted values are cast automatically. In some cases, the Administrator might need to enforce the certain interpretation for the entered xl-data. The purpose for Explicit casting is to enable the conversion of an xl-value to the certain DIAMETER protocol format (type), the Administrator enters Type, where Type is one of the DIAMETER data types in front of the entered data.</p> <p>Example: String (@msg.avp["Value-Digits"][1].data)</p> <p>The conversion is not possible when the value is reasonably non convertible to some specific format, for example, an integer cannot be converted to an IP address. See no scenarios in Explicit Casting.</p> <p>The conversion might be possible if the certain conditions are met. For example, an OctetString can be converted to any other format in case, the encoded data fits into the specified enforced format. See Explicit Casting.</p> <p>While converting intereger64 to integer32, (the same for unsigned integer 32/64, float32/64) the check is performed to verify if the data loss occurs. In such case the conversion fails.</p>		
	Call Perl Subroutine	<code>perlsub (script, subroutine)</code>	<code>{Call Perl Subroutine(script, subroutine, \$)}</code>
	<p>The script is used in the left or right side of the conditions or in the actions and executes an existing perl subroutine in a Condition (See Table 3-3) or Action (See Execute Perl Subroutine in the Actions that modify an AVP.)</p>		
Operators	Provide the ability to perform mathematical operations on the AVP. <ul style="list-style-type: none">• Plus• Minus	<ul style="list-style-type: none">• +• -	<ul style="list-style-type: none">• +• - <p>The connection is on which the request was received.</p>
Connections	DSR Ingress Connection is the connection id on which the request was received.	<code>@dsr.ingress.connection</code>	<code>{DSR Ingress Connection}</code>
	DSR Egress Connection is the connection ID from which the request is sent.	<code>@dsr.egress.connection</code>	<code>{DSR Egress Connection}</code>
	DSR Ingress Connection-Name is the connection name (UTF8String) on which the request was received.	<code>@dsr.ingress.connection.name</code>	<code>{DSR Ingress Connection-Name}</code>

Table 3-13 Formatting Value Wizard Specifiers

Specifier	Description		
Peers	DSR Egress Connection-Name is the connection name (UTF8String) from which the request is sent.	@dsr.egress. connection.name	{DSR Egress Connection- Name}
	DSR Ingress Peer is the peer node id from which the request was received.	@dsr.ingress. peer	{DSR Ingress Peer}
	DSR Egress Peer is the peer node ID to which the request is sent.	@dsr.egress.peer	{DSR Egress Peer}
	DSR Ingress Peer-Name is the peer node name (UTF8String) from which the request was received.	@dsr.ingress. peer.name	{DSR Ingress Peer-Name}
	DSR Egress Peer-Name is the peer node name (UTF8String) to which the request is sent.	@dsr.egress. peer.name	{DSR Egress Peer-Name}
Internal Variables	List containing all internal variables specified in the system on the page	<i>\$name</i>	{Internal Variable: <i>name</i> }
Message	Message Priority is the corresponding priority is returned, if the specified xl-value contains the function	@msg.priority	{Message Priority}
Back Reference	Number of occurrence of the back reference: input field for one digit; default is 0.	\< <i>number</i> >	\< <i>number</i> >
Because Back Reference can be part of only a replacement string, this specifier is presented only for the Substitute in AVP Value Action.			

Table 3-19 contains conversion values for explicit casting.

Table 3-19 Explicit Casting

Convert to	Yes	Maybe	No
Integer32 to Integer32			x
Integer32 to Unsigned32	x		
Integer32 to Integer64	x		
Integer32 to Unsigned64	x		
Integer32 to Float32	x		
Integer32 to Float64	x		
Integer32 to String	x		
Integer32 to OctetString	x		
Integer32 to Address			x
Unsigned32 to Integer32	x		
Unsigned32 to Unsigned32			x
Unsigned32 to Integer64	x		
Unsigned32 to Unsigned64	x		
Unsigned32 to Float32	x		
Unsigned32 to Float64	x		
Unsigned32 to String	x		
Unsigned32 to OctetString	x		
Unsigned32 to Address			x
Integer64 to Integer32		x	
Integer64 to Unsigned32		x	
Integer64 to Integer64			x
Integer64 to Unsigned64	x		
Integer64 to Float32	x		
Integer64 to Float64	x		
Integer64 to String	x		
Integer64 to OctetString	x		
Integer64 to Address			x
Unsigned64 to Integer32		x	
Unsigned64 to Unsigned32		x	
Unsigned64 to Integer64	x		
Unsigned64 to Unsigned64			x
Unsigned64 to Float32	x		

Table 3-19 (Cont.) Explicit Casting

Convert to	Yes	Maybe	No
Unsigned64 to Float64	x		
Unsigned64 to String	x		
Unsigned64 to OctetString	x		
Unsigned64 to Address			x
Float32 to Integer32		x	
Float32 to Unsigned32		x	
Float32 to Integer64		x	
Float32 to Unsigned64		x	
Float32 to Float32			x
Float32 to Float64	x		
Float32 to String		x	
Float32 to OctetString	x		
Float32 to Address			x
Float64 to Integer32		x	
Float64 to Unsigned32		x	
Float64 to Integer64		x	
Float64 to Unsigned64		x	
Float64 to Float32		x	
Float64 to Float64			x
Float64 to String		x	
Float64 to OctetString	x		
Float64 to Address			x
String to Integer32		x	
String to Unsigned32		x	
String to Integer64		x	
String to Unsigned64		x	
String to Float32		x	
String to Float64		x	
String to String			x
String to OctetString	x		
String to Address		x	
OctetString to Integer32		x	

Table 3-19 (Cont.) Explicit Casting

Convert to	Yes	Maybe	No
OctetString to Unsigned32		x	
OctetString to Integer64		x	
OctetString to Unsigned64		x	
OctetString to Float32		x	
OctetString to Float64		x	
OctetString to String		x	
OctetString to OctetString			x
OctetString to Address		x	
Address to Integer32			x
Address to Unsigned32			x
Address to Unsigned64			x
Address to Integer64			x
Address to Float32			x
Address to Float64			x
Address to String	x		
Address to OctetString	x		
Address to Address			x

Enumerations

An Enumeration Type (Enum Type) consists of a name and a set of values. The purpose of the **Enum** Type is to define the possible values of a data input field.

The allowed values are either comma separated integers32 or in the form of <label>:<value>, where value is an integer32. If an item does not contain a colon, then the value and label are the same.

Pre-defined Enum Types are provided with the Diameter Mediation feature. New Enum Types can be defined with their possible values. When a new Enum Type is created, it automatically appears in the **Conditions** section of the **Diameter > Mediation > Rule Templates > [Insert] and [Edit] Insert, Copy, and Edit** pages, within the list of Right value types. The Enum Type must be created before a Rule template Condition or Action can use it. The values of the Enum Type (Integer32 type) used by the Mediation Rule Set can be modified after the Rule Template has been created.

When a Right value of a Rule Template Condition is set to an Enum Type, the actual value can be set in a rule only to one of the valid values of the specified Enum Type. This is enforced by presenting a list instead of an input field on the **Diameter > Mediation > Rule Sets [Insert] and [Edit]** pages.

On the **Diameter > Mediation > Enumerations** page, you can perform the following actions:

- **Insert** new Enumeration Type and its values, as defined in [Adding an Enumeration](#)

If the maximum number of Enumeration Types (64) already exist in the system, the **Diameter > Mediation > Enumerations [Insert]** page does not open and an error message displays.

- **Edit** the name of an Enumeration, as defined in [Editing an Enumeration](#).
- **Delete** an Enumeration Type, as defined in [Deleting an Enumeration](#).

Mediation Enumerations elements

[Mediation Enumeration elements](#) describe the fields on the insert, edit, and view pages. Data input notes apply only to the insert and edit pages; the view pages.

Table 3-20 *Mediation Enumeration Elements*

Element	Description	Data Input Notes
Name	Name used to label this Enumeration Type in the system. A unique value is required in this field.	Format: field Range: 1-64 characters
Values	Comma separated list of possible values as an integer32 (1, 2, 3, and so on) or in the form of <label>: <value> (a:1, b:2,c:3, and so on.) Note: Either in form of <value>, <value>, <value>, and so on or in the form of <label>: <value>, <label>: <value>, and so on; where value is Integer32.	Format: field Range: up to 2048 characters string Default: none

Adding an Enumeration

The following procedure can be used to configure a new **Enumeration** type.

A new Enumeration type can be used when defining **Rule Template Conditions** and **Linking-AVPs**.

The fields are described in [Mediation Enumerations elements](#).

1. Click **Diameter > Mediation > Enumerations**.
2. Click **Insert**.
3. Enter **Name**.
4. Enter one or more **Values** using a comma to separate multiple values.

Note: Either in the form of <value>, <value>, <value>, and so on or <label> :<value>, <label> :<value>, and so on, where value is Integer32.

5. Click **OK**, **Apply**, or **Cancel**

Editing an Enumeration

Use this procedure to change the Enumeration.

An item cannot be removed from the comma-separated list of values that is already used by the configured data of a Rule Template or by the Rule Template.

The fields are described in [Mediation Enumerations elements](#).

1. Click **Diameter > Mediation > Enumerations**.
2. Select the row containing the Enumeration to be changed.
3. Click **Edit**.
4. Change the **Name** or **Values**, or both, associated with the selected Enumeration.

Note: Either in the form of <value>, <value>, <value>, and so on or <label> :<value>, <label> :<value>, and so on; where value is Integer32.

5. Click **OK**, **Apply**, or **Cancel**

Deleting an Enumeration

Use the following procedure to delete an Enumeration.

An Enumeration type cannot be deleted if any Rule Templates refer to the **Enumeration** type.

1. Click **Diameter > Mediation > Enumerations**.
2. Select the **Name** of the Enumeration type to be deleted.
3. Click **Delete**.

A popup window appears to confirm the delete.

4. Click **OK** or **Cancel**.

Triggers

An execution trigger defines a **Triggering Point** within the message processing logic. When the triggering point is reached, the mediation operations (Rule Sets) associated with that triggering point are executed. The type of the Trigger defines whether the triggering point is part of the request or the answer processing. The Rule Set can be defined to be executed as a part of the Actions of another Rule Set, or it can be triggered at some specific point of the message processing. A Trigger is executed during an ingress and egress message.

Associations of a Trigger with new Rule Sets can be added, existing associations can be removed, and the sequence of the Rule Set Name list can be changed to modify the MP

behavior based on the Rule Set execution. The behavior of an MP is the same with and without a Trigger if no Rule Set is associated with the Trigger.

Rule Sets associated with a Trigger are executed in the sequence in which they are listed under the Trigger name on the **Diameter > Mediation > Triggers** page.

A Trigger is created by setting a specific point at the Diameter Routing Layer (DRL), Diameter Connection Layer (DCL) or Diameter Application Layer (DAL).

Diameter Routing Layer (DRL) Triggers

Diameter Routing Layer (DRL) Triggers, which enable request and answer messaging using **RTP1**, **RTP10**, **ATP1**, **ATP10** and **RTP11** trigger points. The Triggers described in [Diameter Routing Layer \(DRL\) Triggers](#) are available for Diameter Mediation.

[Table 3-21](#) lists the routing layer execution trigger names and related information.

Table 3-21 Diameter Mediation Routing Layer Triggers

Execution Trigger Name	Message Type	Triggering Point
Diameter request message received from connection	Request	Request Trigger Point 1; occurs upon receipt of a request (RTP1)
Diameter request message ready to be forwarded to connection	Request	Request Trigger Point 10; occurs just before forwarding the request upstream (RTP10)
Diameter answer message received from connection	Response	Answer Trigger Point 1; occurs upon receipt of an answer (ATP1)
Diameter answer message ready to be forwarded to connection	Response	Answer Trigger Point 10; occurs just before forwarding the answer downstream (ATP10)
Diameter request message attempted for re-route	Request	Request Trigger Point 11 (RTP11); occurs just prior to re-routing the request upstream.

Diameter Connection Layer (DCL)

Diameter Connection Layer (DCL) Triggers enable peer-to-peer messaging using CEx, DWx, DPx trigger points.

The data stored as an `Internal Variable` or a `linking AVP` at one of the DCL triggers is valid only inside of the current trigger and can not be accessed by other triggers. The Triggers described in [Diameter Mediation Connection Triggers](#) are available for Diameter Mediation.

[Table 3-22](#) lists the connection layer execution trigger names and related information.

Table 3-22 Diameter Mediation Connection Layer Triggers

Execution Trigger Name	Message Type	Triggering Point
CER message received from connection	Request	Capabilities - Exchange-Request Trigger Point 1; occurs upon receipt of a CER message (CER1)
CER message ready to be sent	Request	Capabilities - Exchange-Request Trigger Point 10; occurs just prior to sending the CER message (CER10)

Table 3-22 (Cont.) Diameter Mediation Connection Layer Triggers

Execution Trigger Name	Message Type	Triggering Point
CEA message received from connection	Response	Capabilities - Exchange-Answer Trigger Point 1; occurs upon receipt of a CEA message (CEA1)
CEA message ready to be sent	Response	Capabilities - Exchange-Answer Trigger Point 10; occurs just prior to sending the CEA message(CEA10)
DWR message received from connection	Request	Device-Watchdog-Request Trigger Point 1; occurs upon receipt of a DWR message (DWR1)
DWR message ready to be sent	Request	Device-Watchdog-Request Trigger Point 10; occurs just prior to sending the DWR message (DWR10)
DWA message received from connection	Response	Device-Watchdog-Answer Trigger Point 1; occurs upon receipt of a DWA message (DWA1)
DWA message ready to be sent	Response	Device-Watchdog-Answer Trigger Point 10; occurs just prior to sending the DWA message (DWA10)
DPR message received from connection	Request	Disconnect-Peer-Request Trigger Point 1; occurs upon receipt of a DPR message (DPR1)
DPR message ready to be sent	Request	Disconnect-Peer-Request Trigger Point 10; occurs just prior to sending the DPR message (DPR10)
DPA message received from connection	Response	Disconnect-Peer-Answer Trigger Point 1; occurs upon receipt of a DPA message (DPA1)
DPA message ready to be sent	Response	Disconnect-Peer-Answer Trigger Point 10; occurs just prior to sending the DPA message(DPA10)

Diameter Application Layer (DAL)

Diameter Application Layer (DAL) Triggers can modify the requests and answers based on the condition of the message forwarded to an application or in case the message exits an application. The application can be verified before the template or rule set's execution when the trigger points are assigned. The **Diameter > Mediation > Triggers [Insert]** page provides an association between the template (rule set) and the application, with the options to:

- Execute the template (rule set), if the involved application is name of the application.

- Execute the template (rule set) unconditionally, in other words, for all involved applications.

The Triggers described in [Diameter Mediation Application Triggers](#) are available for Diameter Mediation. [Table 3-23](#) lists the application trigger names and related information.

Table 3-23 Diameter Mediation Application Triggers

Execution Trigger Name	Message Type	Triggering Point
Diameter request message ready to be forwarded to application	Request	Request Trigger Point 4; occurs just prior to the invocation of an application (RTP4)
Diameter request message received from application	Request	Request Trigger Point 6; occurs immediately after exiting an application (RTP6)
Diameter answer message ready to be forwarded to application	Response	Answer Trigger Point 4; occurs just prior to the invocation of an application (ATP4)
Diameter answer message received from application	Response	Answer Trigger Point 6; occurs immediately after exiting an application (ATP6)

Templates are not executed if:

- A template (rule set) is assigned to a specific application and the application is disabled, the associated templates (rule sets) are not executed.
- An application generates an Answer, templates at RTP6 and ATP4 are not executed.
- An application generates a Request, templates at RTP4 and ATP6 are not executed.
- An application does not stay in the loop for answer processing, templates at ATP4 or ATP6 are not executed.

Rule Sets associated with a Trigger are executed in the sequence in which they are listed under the Trigger name and you can perform the following actions:

- **Insert** a Trigger for the associated Rule Set, as defined in [Associating a Rule Set with a Trigger](#).
- **Remove** a selected Rule Set Name in the list under a Trigger name as defined in [Removing the Association of a Rule Set with a Trigger](#)
- Click **Up** and **Down** buttons to alter the sequence of execution of the Rule Sets associated with a Trigger.

Mediation Triggers elements

[Table 3-24](#) and [Table 3-25](#) describes the fields on the **Diameter > Mediation > Triggers** and **Diameter > Mediation > Triggers [Insert]** pages. The Triggers page is read-only.

Table 3-24 Mediation Triggers Elements

Element	Description
Rule Set Name	The name of each Rule Set that is associated with a Trigger and executed by the triggering point.
Live	A yes sign (check mark) indicates that the Rule Set has been set to the "Active" state (enabled for the live traffic).
DSR Application	The DSR application is present when an application Trigger is selected.
Request	The Request list is present when RTP1, RTP4, RTP6, RTP10 or RTP11 is selected on the Triggers Insert page. If a non-request trigger is selected, then the Request list is not present.
Scope	The Scope allows activating a template (Rule Set) on either all MPs or a specific MP(s) under the SO.

Insert Triggers elements**Table 3-25 Adding Triggers Elements**

Element	Description	Data Input Notes
Rule Set Name	Name of the Rule Set that is to be executed by the triggering point.	Format: list Range: The Rule Sets (supported by the Trigger and in the Active or Test state) are listed in the Rule Set Name list. Default: First Rule Set that is supported by the Trigger and is in the Active or Test state.
Request	The Request list is present when RTP1, RTP10, RTP11, RTP4, or RTP6 is selected on the Triggers Insert page. If a non-request trigger is selected, then the Request list is not present. See Diameter Mediation Routing Layer Triggers and Diameter Mediation Application Triggers .	Format: list Range: Normal Request, Redirected Request, All Default: Normal Request
DSR Application	The DSR Application is present when an application Trigger is selected. See Diameter Mediation Application Triggers	Format: list Range: All enabled DSR Applications Default: All

Table 3-25 (Cont.) Adding Triggers Elements

Element	Description	Data Input Notes
Scope	The Scope allows activating a template (Rule Set) on either all MPs or a specific MP(s) under the SO.	<p>Enable on all MPs</p> <p>Format: Check box</p> <p>Range: Checked or not checked</p> <p>Available MPs</p> <p>Format: Drag and drop with >> to move the available MPs to Enable Rule Set on MP(s).</p> <p>Range: Available MPs</p> <p>Enable Rule Set on MP(s)</p> <p>Format: Drag and drop with << to move the available MPs to Available MPs.</p> <p>Range: Enable Rule Set on MP(s)</p>

Associating a Rule Set with a Trigger

Use this procedure to associate a Rule Set with a Trigger.

Only Rule Sets with Rule Templates in Test or Active state can be associated with a Trigger.

The fields are described in [Mediation Triggers elements](#)

1. Click **Diameter > Mediation > Triggers**.
2. The newly assigned Rule Set appears at the bottom of the list of Rule Sets for the Trigger. If the Rule Set sequence needs to be changed, use the **Up** and **Down** buttons to move the Rule Sets to different positions in the list.

Click a Rule Set and the **Up** and **Down** buttons to move the selected Rule Set up or down one position on the list.

The **Live** column shows a check mark if the Rule Template for the newly associated Rule Set is in the **Active** state for use with live traffic (see [State and Properties](#)).

3. Click **Insert** under the Trigger with which the new Rule Set is to be associated.

The **Diameter > Mediation > Triggers [Insert]** page does not open and an error message appears if any of the following conditions exist:

- There are no Rule Sets that support the Trigger and that are in the Active or Test state
- Associating another Rule Set to the Trigger would cause the total allowed number of associated Test Rule Sets (10) or Active Rule Sets (64) to be exceeded

4. Select the **Rule Set Name** from the list.

The default is the first Rule Set in the list.

5. Select the **Request** type from the list.

6. Select the **Scope** of the Rule Set.
7. Click **OK** or **Apply**

Removing the Association of a Rule Set with a Trigger

Use the following procedure to remove the association of a **Rule Set** with a **Trigger** and delete the **Rule Set Name** from the list for the Trigger.

1. Click **Diameter > Mediation > Triggers**.
2. Select the **Rule Set Name** in the list under the Trigger name.
3. Click **Remove** below the **Rule Set Name** list for the Trigger.

A popup window appears to confirm the removal.

4. Click **OK** or **Cancel**

State and Properties

The **Diameter > Mediation > State & Properties** page lists all of the Rule Templates that are configured in the system, and shows the **State**, **Action Error Handling** and **Status of Rule Counters** settings for each Rule Template.

Each Rule Template is in one of the following **States** at any point of time:

- Development
- Test
- Active

The **Action Error Handling** defines the error handling strategy to be used if any Action in the Rule Template fails.

The **Status of Rule Counters**, when enabled, analyze the rules and track the number of times each rule successfully matches all the conditions in the template. The Rule Template must be in a Test or Active state.

Each Rule Template starts in the development state when it is being created. Rule Templates in the Development state cannot be assigned to Triggers, until it changes to a test state.

After all of the necessary **Conditions** and **Actions** are added, the Rule Template must be set to the test state, to indicate that the Rule Template is complete. A Rule Set entry is generated in the Rule Sets left-hand menu folder; the Rule Set can be provisioned with actual data in one or more rules, and can be associated with a Trigger. In the Test state, only limited changes can be made to the contents of the Rule Template, as define in [Rules Template](#).)

The Rule Template state can be set back to development only when the Administrator privileges are activated for the Diameter Mediation feature. All provisioned data for the Rule Template is lost if the state is set back to Development.

The Rule Template state can be set to test or the association between the Rule Set and a Trigger can be removed to disable the Rule Set for live traffic.

In the Test state a Mediation Rule Set does not affect the live traffic, but the operator can test the newly created, imported, or modified Rule Set that was generated from the Rule Template. The Diagnostics Tool can be used to exercise and test the Rule

Templates in the Test state, along with Rule Templates in the Active state. See Maintenance in the Diameter User's Guide and Reports in the *Diameter User's Guide*.

When the state of a Rule Template is set to Active, the Rule Set associated with the Rule Template begins to participate in processing of real traffic messages.

The Import function from the **Diameter > Mediation > Rule Templates** page is duplicated on the **Diameter > Mediation > State & Properties** page for use when the Administrator privileges are not activated and the **Diameter > Mediation > Rule Templates** page cannot be accessed. An imported Rule Template is set to Test state.

On the **Diameter > Mediation > State & Properties** page, you can perform the following actions:

- **Import Rule Template** to import a previously exported Rule Template from a location outside of the system, as defined in [Importing a Rule Template](#).
If importing a Rule Template would cause the maximum number of Rule Templates (100) in the system to be exceeded, the Rule Template is not imported and an error message appears.
- **Edit** a Rule Template Name in the list, and click . You can change the State, Action Error Handling and enable or disable Status of Rule Counters for the selected Rule Template, as defined in [Editing State and Properties](#).

When the Administrator privileges are not activated for the Diameter Mediation feature, the state of a Rule Template cannot be changed back to Development.

- **Delete a Rule Template Name**, as defined in [Deleting a Rule Template](#).

When a Rule Template is deleted from the **Diameter > Mediation > State & Properties** page, it is deleted from all other pages at the same time.

Mediation State and Properties elements

[Table 3-26](#) describes the fields on the view and edit pages. Data Input Notes apply only to the edit page.

Table 3-26 Mediation State & Properties Elements

Element	Description	Data Input Notes
Rule Template Name	The name of a configured Rule Template.	Format: field
State	<p>The state of the Rule Template.</p> <p>Development - the Rule Template is disabled for any live or test traffic; it is under development.</p> <p>Test - the Rule Sets entry is generated and the Rule Set is enabled only for the special test messages.</p> <p>Active - the Rule Template and Rule Set are enabled for any kind of traffic.</p>	<p>Format: list</p> <p>Range: Development (only for creating and modifying Rule Templates), Test, Active</p> <p>Default: Development</p>

Table 3-26 (Cont.) Mediation State & Properties Elements

Element	Description	Data Input Notes
Action Error Handling	Specifies the type of error handling to be used if an Action in a Rule Template fails.	Format: list Range: Ignore the error, Immediately exit from the rule template, Immediately exit from the trigger point Default: Ignore the error
Status of Rule Counters	Enables or disables the rule counters for a specific rule template. In the view only screen, the status of rule counters column is set to active or stopped respectively to the checked or unchecked box. Active status means the Rule Set counter started counting the number of matches per rule, which allows you to view the rule counters from the enabled Show Counters button on the Rule Set page. Stopped status means the counter is disabled.	Format: checkbox Range: N/A

Importing a Rule Template

A Rule Template can be imported into the system using the **Import Rule Template** action on the **Diameter > Mediation > State & Properties** page.

Existing Rule Templates can be imported. Existing Rule Templates are previously-generated Rule Templates that have been exported from Diameter Mediation using the **Export** action on the **Diameter > Mediation > Rule Templates** page.

Use the following procedure to import a Rule Template located outside of the file system:

1. Click **Diameter > Mediation > State & Properties**.
2. Click **Import Rule Template**.
3. Click **Browse** to open the Choose File popup window.
4. Navigate to the location of the Rule Template file that you want to import.
5. With the Rule Template filename displayed in the **File name** field, click **Open**.

The filename appears in the **Choose a file to import** field.

6. Click **Import File**.

The selected Rule Template file is imported and appears in the **Rule Template Name** list on the **Diameter > Mediation > State & Properties** page.

Editing State and Properties

Meta-Administrator and Rule Set Administrator use this procedure to change the State and Properties associated with a Rule Template.

The state of a Rule Template can be changed to or from the development state only when an Administrator privileges are activated for the Diameter Mediation feature.

A Rule Template state cannot be changed from Test to Development for a Rule Template that is referenced by another instance such as another Rule Template or the Execution Trigger.

When a Rule Template state is changed back to development, any associated Rule Sets are deleted from the **Rule Sets** folder.

[Table 3-26](#) provides definitions of each field.

1. Click **Diameter > Mediation > State & Properties**.
2. Select the Rule Template to change.
3. Click **Edit**.
4. Change the **State** and **Action Error Handling** according to the [Table 3-26](#) guidelines.
5. Check or uncheck the **Status of Rule Counters**.

Checking this box, with the Rule Template Test or Active, sets the **Status of Rule Counters** column to **Active** on the **State & Properties** page.

6. Click **OK**, **Apply**, or **Cancel**

Deleting a Rule Template

Use the following procedure to delete a Rule Template from the **Diameter > Mediation > State & Properties** list.

When a Rule Template is deleted from the **Diameter > Mediation > State & Properties** page, it is deleted from all other pages at the same time.

1. Click **Diameter > Mediation > State & Properties**.
2. Select the **Rule Template Name** to be deleted.
3. Click **Delete**.

A popup window appears to confirm the delete.

4. Click **OK** or **Cancel**

Internal Variables

The **Diameter > Mediation > Internal Variables** page lists all of the Internal Variables that are configured in the system, and shows the Variable Name, Type, Default Value, and Description available for each Rule Template. Internal variables represent buffers distinguished by the names and can store data of the specified format. The data stored in the buffers can be used both in the conditions and actions (via the Formatting Value Wizard page) and it is accessible during the whole transaction.

Internal Variables are created by:

- Setting the unique name.
- Selecting the type for enabling syntax checks of the stored values.
- Setting default value (optional). The default value is used in case the user does not provision/assign a new value to the variable.

Note: It is also possible to leave the internal variable empty.

- Writing a short description (optional) to explain the purpose of the variable and how it is used in the templates/rules.

After the new variable is created it becomes accessible on the [Formatting Value Wizard](#). The user can provision/assign the value of the internal variable by means of newly introduced Set Internal Variable action. The internal variable is SET when:

- The default value is provisioned and not overwritten by the action Set Internal variable.
- The action Set Internal Variable assigns a value to the internal variable.
- Any of the AVPs has matched the criteria and the option Store matched instance into has been chosen. The index number of the matched AVP is stored under the specified internal variable.

The value of the variable can be a static value, the value coming from the message, some previously stored value, and so on. The next template can contain the condition which uses the previously provisioned internal variable. All newly created variables of integer types (both signed and unsigned) are accessible as AVP instance numbers on the Formatting Value Wizard page. If the specified xl-value contains an internal variable (\$name), the value of the variable set previously is used.

Mediation Internal Variables elements

[Mediation Internal Variables elements](#) describe the fields on the view, edit, and view pages. Data input notes apply only to the insert and edit pages.

Table 3-27 Mediation Internal Variables Elements

Element	Description	Data Input Notes
* Variable Name	Name used to label this Internal Variable in the system. A unique value is required in this field.	Format: field Range: 32 character string Default: none

Table 3-27 (Cont.) Mediation Internal Variables Elements

Element	Description	Data Input Notes
* Type	The data format of the variable. A value is required in this field.	Format: list Range: <ul style="list-style-type: none">• Integer32• Integer64• Unsigned32• Unsigned64• Float32• Float64• Address• Time• UTF8String• DiameterIdentity• DiameterURI• OctetString Default: Integer32
Default Value	An optional value to initialize the variable in this field.	Format: field Range: maximum of 255 character string Default: none
Description	Short description of the variable. A value is not required in this field.	Range: maximum 255 character string. Default: none

Adding an Internal Variable

The following procedure can be used to configure a new **Internal Variables**.

A new **Internal Variables** can be used when defining **Rule Template Conditions**.

The fields are described in [Mediation Internal Variables elements](#).

1. Click **Diameter > Mediation > Internal Variables**.
2. Click **Insert**.
3. Enter the **Variable Name**.
4. Enter a **Type**.
5. Enter a **Default Value**.

When the **Type** selected is an *OctetString* and the default value does not start with 0x, it is automatically added. When the **Type** is an *OctetString* the entered default value is automatically down-cased.

6. Enter a short **Description** associate with this **Variable Name**.
7. Click **OK**, **Apply**, or **Cancel**.

Editing an Internal Variable

Use this procedure to change the Internal Variable **Default Value** and **Description** associated with an **Internal Variables**.

The fields are described in [Mediation Internal Variables elements](#).

1. Click **Diameter > Mediation > Internal Variables**.
2. Select the row containing the Internal Variable to be changed.
3. Click **Edit**.
4. Change the **Default Value** and/or **Description** associated with the selected Internal Variable.
5. Click **OK**, **Apply**, or **Cancel**.

Deleting an Internal Variable

Use the following procedure to delete an Internal Variable.

An Internal Variable Type cannot be deleted if any Rule Templates refer to the Internal Variable.

1. Click **Diameter > Mediation > Internal Variable**.
2. Select the **Name** of the Internal Variable to be deleted.
3. Click **Delete**.

A popup window appears to confirm the delete.

4. Click **OK** or **Cancel**

When **OK** is clicked and any configured Rule Templates refer to the Internal Variable that is being deleted, the Internal Variable is not deleted and an error message appears.

Measurements

The available Mediation Measurements are:

- Predefined Measurements (pegged automatically)
- Custom Measurements (that can be pegged by the special action)

The **Diameter > Mediation > Measurements** page lists up to 2000 custom measurements created by the user. Once you define the custom measurement, it can be used to set a peg counter action in the Rule Template.

Measurements are set up by:

- Setting the unique name of the measurement.
- Writing a short description (optional) explaining the purpose of the measurement.

For information about how to generate a measurement report, see *Generating a measurements report* in the *Alarms, KPIs and Measurements Reference*. The custom

measurements are listed as sub-measurements as CAPM_MediationCustomerMeasurements within the CAPM group in the reports.

Mediation Measurements elements

[Table 3-28](#) describe the fields on the insert, edit, and view pages. Data input notes apply only to the insert and edit pages.

Table 3-28 *Mediation Measurements Elements*

Element	Description	Data Input Notes
* Measurement Name	Name used to label this	Format: field
	Measurement in the system.	Range: 32 character string
	A unique value is required in this field.	Default: none
Description	Short description of the measurement.	Format: field
	A value is not required in this field.	Range: maximum of 255 character string
		Default: none

Adding a Measurement

Use this procedure to configure a new **Measurement**.

The fields are described in [Mediation Measurements elements](#).

1. Click **Diameter > Mediation > Measurements**.

Note: The view screen displays all Measurements provisioned in the system. The column entries shall be **Measurement Name** and **Description**.

The Measurement Name is in the list of Peg Counter action.

2. Click **Insert**.

Note: An error message appears if the maximum number of Mediation Measurements (2000) has already been configured in the system.

3. Enter a unique name for the **Measurement Name** being added.
4. Enter a short **Description** associated with this Measurement Name.
5. Click **OK**, **Apply**, or **Cancel**.

Editing a Measurement

Use this procedure to change the Measurement Description associated with a **Measurement**.

The fields are described in [Mediation Measurements elements](#).

1. Click **Diameter > Mediation > Measurements**.

2. Select the **Measurement Name**.
3. Click **Edit**.
4. Change the **Description** associated with the selected Measurement.
5. Click **OK**, **Apply**, or **Cancel**.

Deleting a Measurement

Use the following procedure to delete a **Measurement**.

1. Click **Diameter > Mediation > Measurements**.
2. Select the row containing the **Measurement Name** to be deleted.
3. Click **Delete**.

A popup window appears to confirm the delete.

4. Click **OK** or **Cancel**.

When **OK** is clicked and any configured Rule Templates or rules refer to the Measurement that is being deleted, the Measurement is not deleted and an error message appears.

Rule Sets

Rule Sets are rules corresponding to a Rule Template that is in a test or active status.

The **Diameter > Mediation > Rule Sets > {name}** page provides a means to provision rule(s) to the Rule Set ({name} is the name of the Rule Set).

Condition set expression and actions are displayed above the Rule Set in a form of an **IF** (Condition set expression) and **THEN** (Actions).

The **Diameter > Mediation > Rule Sets > {name}** page displays the following columns:

- **Rule Id** is a unique number from the database table that identifies each rule in the Rule Set.
- **Move the rule** is a means to move the order of the rules by using the **Up** and **Down** buttons.

Up and **Down** buttons appear in the **Move the rule** columns for a rule or rule group when the order of the rules is allowed to be changed, with the following restrictions:

- When the **Filter** function or clicking a Condition column heading is used to sort the columns, the **Move the rule** columns are not displayed. Click **Restore Order** to return the list to its original order.
- If all of the conditions in the rule support **Fast Search**, then the **Move the rule** columns are not displayed. See [Fast Search](#).
- If there is at least one condition that does not support **Fast Search**, then the **Up** and **Down** buttons are displayed according to the following rules:

- All of the rules that support **Fast Search** always appear in the list before any rules that do not support **Fast Search**.
- The rows that have exactly the same data in the conditions that support **Fast Search** form a group. Rows can be moved only within their group; the **Up** and **Down** buttons are enabled and disabled accordingly.

[Table 3-29](#) shows an example of default ordering of rules.

Table 3-29 Example of Default Ordering of Rules in a Rule Set

Fast-Search Condition A	Fast-Search Condition B	Non-Fast-Search Condition C
abc	1	-
abc	12	-
abc	-	-
abcd	1	-
abcd	1	a1
abcd	-	b1
-	1	a1
-	1	b1
-	-	-

Each row across the columns is inserted (created) in the list when a rule is provisioned. The rules on a **Diameter > Mediation > Rule Sets > {name}** are looked up in the database in the order in which they are listed on the page. By default, the rules are sorted in the list by condition as defined in [Fast Search](#).

When a Rule Set entry is selected in the **Rule Sets** folder, the **Diameter > Mediation > Rule Sets > {name}** page opens for the selected Rule Set.

On each **Diameter > Mediation > Rule Sets > {name}** page, a user can perform the following actions:

- If the **Move a rule** columns are displayed and contain **Up** and **Down** buttons, move rules up and down in the list to change the order of execution of the rules in the Rule Set.
- **Insert** to add a new rule.

Note: The maximum number of provisioned rules per template/rule set depends on the template type. For slow-search templates, which have at least one slow-search condition, the maximum number of provisioned rules is 250. For fast-search templates, the maximum number of provisioned rules is 2000. To determine if the template is a fast-search reference [Fast Search versus slow search](#).

The maximum total number of provisioned rules in the system cannot exceed 148,000, provided all the templates are of fast search type ((10 test templates + 64 active templates) * 2000)).

The rule templates with no conditions is unconditionally matched for all processed messages. The Rule Sets generated from these Rule Templates allow only one rule to be provisioned.

- **Import** to import rules from an either XML-file (Rule Template) that is in a Test or Active state.
- **Delete All Rules** to delete all of the rules that have been provisioned for this Rule Set.
- **Edit** a rule.
- **Delete** a rule from the Rule Set list.
- **Export** to export rules to create an XML-file containing the Mediation version number, Template Definition, the provisioned values of the conditions and actions for each rule.
- **Show Counters** to open the Rule Counters column of the Rule Set. A Total Pegs column displays the number of times the specific rule is matched.

If Show Counters is grayed out and the Rule Counters are not available. To enable the rules counter see [Editing State and Properties](#).

When the Rule Sets View page is expanded with the Rule Counters, the following buttons are available:

- **Hide Counters** to hide the Rule Counters column.
- **Expand Counters** expands more sub-columns under the Rule Counters for all MPs under the SO. Each sub-column is MP name and displays the counters for each.
- **Collapse Counters** to hide the MP counters.
- The **Pause Updates** box is unchecked by default. This means the counters refreshes every 30 second to provide the user a printout on the GUI page. Checking the **Pause Updates** box pauses the counters. To disable the counter, see [Editing State and Properties](#).

Rule Sets elements - View page

[Table 3-30](#) describes the fields on each view page of a rule set.

Table 3-30 Rule Sets Elements - View Page

Element	Description	Data Notes
IF	The order of conditions for the rule set separated by an AND, OR, or complex expression.	Auto generated
THEN	The actions of the rule set separated by commas	Auto generated

Table 3-30 (Cont.) Rule Sets Elements - View Page

Element	Description	Data Notes
Rule ID	A unique number from the database table that identifies each rule in the Rule Template. Each rule set is a condition set expression and actions summarized as IF (condition set expression) and THEN (actions) above the rule set.	Auto generated
A, B, C, D, E, and so on Condition [Name]	Each condition has a separate column with the letter (A, B, C, D, E, and so on) in alphabetical order as defined by the condition set in the Rule Templates. The name of the condition is below the letter.	Format, Range, and Default Value configured in the Rule Template.
All Actions defined on the Rule Template page for this Rule Set	Each action has a separate column in the order as defined by the action on the rule template and one or more sub-columns that show the attributes defined for the Action and the current values of the attributes. If the Parent AVP or AVP is indexed, then the index is displayed in the square brackets after the AVP attribute name. If an AVP is looked up in the message by its value, AVP contains the value prefixed with = (if it is a constant) or an xl-value prefixed with = (if it is an xl-value). A value can be prefixed with an appropriate indicator of its type or function (such as =, beginning, end, prefix, or suffix).	Format, Range, and Default Value vary depending on the Rule Template that was configured for the Rule Set.

Each rule in the Rule Set is a row in the list. The Values assigned to the Conditions and the Values assigned to each attribute of the Actions for a rule are shown in the row for that rule.

Rule Sets elements - Insert and Edit Pages

[Table 3-31](#) indicates the maximum number of rule sets and rules that are allowed.

Table 3-31 Maximum Allowed Rule Sets and Rules

Description	Value
Maximum number of provisioned rules in the system (provided all the templates are of fast search type)	148,000
Maximum number of provisioned rules per Rule Set (depended on slow- or fast-search template type)	250/2000

[Table 3-32](#) describe the fields on the insert, edit, and view pages. Data input notes apply only to the insert and edit pages.

Table 3-32 Rule Sets Elements - Insert and Edit Pages

Element	Description	Data Input Notes
Field: These elements are display at the top of the page: IF, condition and THEN. The condition section contains the name for the condition followed by the operator followed by Rule Template Condition Operators .		
IF	Alphabetical Condition names ANDed, ORed or both appears between each of the Conditions.	Auto generated
Condition	A letter that organizes the template layout for each condition	Format: field A, B, C, D, E, and so on. and the condition set of either ANDed, ORed or Complex Expression.
THEN	The name of each Action that was defined for the Rule Template.	Format: Name An Action cannot be deleted and a new Action cannot be defined for the rule.

Value: This element shows the fields for the condition and action data values that can be entered or changed.

For the [Insert] page, the fields are either empty or show default values.

For the [Edit] page, the fields show the currently defined or default values.

Condition expression Right value	<p>For each defined Condition in the rule, the data value for the Right value type in the Condition.</p> <p>If the Optional check box was checked in the Rule Template for this Rule Set, the Right value can be empty (not provisioned). A red asterisk appears after each data value that is required (not optional) in the rule.</p> <p>If the Fixed check box was checked in the Rule Template for this Rule Set, the Right value cannot be changed in the rules.</p> <p>If the selected Right value type was an Enumerated Type, then the Value column contains a list with the corresponding Enumerated Type values, unless the selected Operator was exists, does not exist, is true, or is false.</p>	<p>Format: text box</p> <p>Range: Varies depending on the Right value type</p> <p>Default: Varies depending on the Right value type</p> <p>See Rule Template elements.</p> <p>The Formatting Value Wizard is available to provision Condition Right values that are xl-formatted values; click the [wizard] that appears after the data value field.</p>
-------------------------------------	--	---

Table 3-32 (Cont.) Rule Sets Elements - Insert and Edit Pages

Element	Description	Data Input Notes
Action fields	The fields to use to define the data values for Action attributes.	Format: Varies for each type of attribute Range: Varies for each type of attribute See Rule Template elements . The Formatting Value Wizard is available to provision Action attributes that are xl-formatted values; click the [wizard] that appears after the data value field.
Description	The description that was defined in the Rule Template for a Condition or an Action on the Rule Sets page. The description can provide information such as the format to be used (such as text string or telephone number format) and the range of values (such as 1 to 255 characters).	Format: descriptive text Range: 1 to 255 characters string

Adding a Rule to a Rule Set

Use this procedure to define a new rule in a Rule Set.

Note: The maximum number of provisioned rules per template/rule set depends on the template type. For slow-search templates, which have at least one slow-search condition, the maximum number of provisioned rules is 250. For fast-search templates, the maximum number of provisioned rules is 2000. To determine if the template is a fast-search reference [Fast Search versus slow search](#).

There are two sections of a **Diameter > Mediation > Rule Sets > {name} [Insert]** page: **IF** (zero, one, or more Conditions and the condition set of the ANDed, ORed and/or complex expression) and **THEN** (an Action). For a list of the Rule Template elements that appear in a rule and their definitions, see [Rule Template elements](#).

When a Rule Template is in the Active or Test state, this Rule Template appears as a Rule Set in the **Diameter > Mediation > Rule Sets** menu folder. The order in which rules appear on the page determines the order in which the conditions are processed.

1. Click **Diameter > Mediation > Rule Sets > {name}**.
2. Click **Insert**.
3. Enter the value for each condition that appears under **IF** in the **Field** section for the new rule.
4. Enter the value for each attribute of the Action that appears under **THEN** in the **Field** section for the new rule.

5. When the rule definition is complete, click:
 - **OK** to save the new rule and return to the **Diameter > Mediation > Rule Sets > {name}** page. The rule name appears in the list on the page.
 - **Apply** to save the new rule and remain on the **Diameter > Mediation > Rule Sets > {name} [Insert]** page for additional changes.
 - **Cancel** to return to the **Diameter > Mediation > Rule Sets > {name}** page without saving the changes.
6. When the Rule Set definition and testing are complete, go to the **Diameter > Mediation > State & Properties** page.
 - a. Change the Rule Template **State** from Test to Active.
 - b. Set the **Action Error Handling** property, if needed.

The state can be changed to Active after the testing is successful, the Rule Set data is provisioned, the Rule Set is associated with a Trigger, and the Rule Set is ready to use in live traffic.

Deleting All Rules from a Rule Set

Use this procedure to delete all rules from a Rule Set.

1. Click **Diameter > Mediation > Rule Sets > {name}**.
2. Click **Delete All Rules**.

A popup window appears to confirm the delete.

3. Click **OK** or **Cancel**

Changing a Rule in a Rule Set

Use this procedure to change values for a rule in a Rule Set (for a list of Rule Sets elements and their definitions, see [Rule Sets elements - Insert and Edit Pages](#)):

1. Click **Diameter > Mediation > Rule Sets**.
2. Select the **Rule Set** containing the rule to be edited.
3. On the **Diameter > Mediation > Rule Sets > {name}** page, select the rule that needs to be changed.
4. Click **Edit**.
5. Change values for Conditions under **IF** and Actions under **THEN** as needed.
6. Click **OK**, **Apply** or **Cancel**.

Deleting One Rule from a Rule Set

Use this procedure to delete one rule from a Rule Set.

1. Click **Diameter > Mediation > Rule Sets > {name}**.

2. Select the row for the rule to be deleted.
3. Click **Delete**.

A popup window appears to confirm the delete.

4. Click **OK** or **Cancel**

Export/Import Rules

The Rule Template can be provisioned with up to 250 rules and data related to the template. To Export or Import rules from provisioned Rule Templates use the **Export** function on the **Diameter > Mediation > Rule Sets > {name} [Export]** or **Import** function on the **Diameter > Mediation > Rule Sets > {name} [Import]** page.

The **Export/Import** function is used to solve the following two scenarios:

1. The rules of template X are imported back to template X. Each template is uniquely identified by a UUID number. With the exported rules, the XML-file contains the UUID number as part of a template definition. If the UUID number is the same, the rules are imported back to the original template and no mapping is necessary for the conditions or actions. The rules are imported even if the user changes the name of the template, while in a **Test** or **Active** state. A new UUID number is assigned to the template when the user moves the original template to the development state and changes in conditions/actions.
2. The rules of template X are imported to template Y. In this case the UUID number of the original template does not match with the UUID number of the target template. The process is performed to import by mapping the conditions and actions as follows:
 - a. [Conditions correlated by the condition name](#) table means that if the condition name of the target template is the same as in the original template, the values from the xml-file are imported for this condition.

Table 3-33 Conditions Correlated by the Condition Name

Template X	Template Y
A: User-name	A: User-name
B: Host IP	B: Connection
C: Visited-PLMN-Id	C: Visited-PLMN-Id
D: Proxy-Host	D: Host IP

The rules mapping process for the conditions are exported from Template X are imported to Template Y as follows:

- A => A
- B => D
- C => C

The values of condition D of Template X are not used.

Condition B of template Y uses the default value defined in the template since no match was found for it. If no default value was provisioned for the mandatory condition in the template, the error message is expected.

- b. [Table 3-34](#) table means that if the values of the action from the xml--file are imported to the action of the same type and matched columns in the target template.

Table 3-34 Actions are Correlated by their Type and Order

Template X	Template Y
A: Add AVP	A: Add AVP
B: Change AVP code	B: Add AVP
C: Add AVP	C: Add AVP
D: Add AVP	D: Add AVP
E: Set Route List	E: Set AVP value
F: Set AVP value	F: Set AVP value
G: Set AVP value	G: Set Route List
H: Set AVP value	N/A

The actions are correlated as follows:

- A => A
- C => B (second Add AVP to second Add AVP)
- D => C (third Add AVP to third Add AVP)
- default values => D (there is not fourth Add AVP action in the XML file)
- F => E (first Set AVP value to first Set AVP value)
- G => F (second Set AVP value to second Set AVP value)
- E => G (first Set Route List to first Set Route List)

The failures are logged during the import process.

The Import of Rules is very similar to the Insert of Rules. The difference is the data source (xml file instead of values entered on the web page). During the Import, the same checks are performing as seen [Adding a Rule to a Rule Set](#).

Exporting Rules

Use this procedure to export Rules XML-file from within the system to an external location.

The saved .xml contains the following information:

- The Mediation version number used for compatibility check.
- Rule Template definition
- Provisioned right values of the conditions for each rule (importable back from the file)
- Provisioned values of the actions for each rule (importable back from the file)

Note: **Export** is not available (grayed out) for the Rule Set in the Development state (see [State and Properties](#)).

1. Click the **Diameter > Mediation > Rule Sets > {name}** to export.
 2. Click **Export**.
- A File Download popup window appears.
3. Click **Browse** to pop up the Choose File window.
 4. Navigate to the location to which you want to export the Rule Template.
 5. Click **Export File**.

The selected file is saved to the specified location.

Importing Rules

Use the following procedure to import existing Rules that is located outside of the file system:

1. Click **Diameter > Mediation > Rule Sets > {name}** folder.
2. Select the **Rule Set** containing the rules to be imported.
3. Click **Import**.

At the top of the page, you find an input field with this text, **Choose a file to import**, a **Browse** button, text (**No file selected**) an **Abort on First Error:** checkbox, and an **Import File** button.

4. Check the **Abort on First Error** allows the user to specify if the selected import operation should abort on the first error (when checked-in) or continue.
5. Click **Browse** to open the Choose File popup window.
6. Navigate to the location of the Rule Template file you want to import, and select the file.
7. With the Rule Template filename displayed in the **File name** field, click **Open**.

The filename appears in the **Choose a file to import** field.

8. Click **Import File**.

The process is performed to import by mapping the conditions and actions.

- a. **Conditions** are correlated by the condition name (the values for the conditions are imported in the conditions with the same name), as defined in [Conditions correlated by the condition name](#).
- b. **Actions** are correlated by their type (values of the actions are imported into the same actions) and order, as defined in [Actions are correlated by their type and order](#).