

**Diameter Signal Routing
User Data Repository
Software Upgrade Procedure
Release 14.2.0.0.0**

G43644-01

September 2025



CAUTION:

Before recovering any system, access My Oracle Support (<https://support.oracle.com>) and review any Alerts that relate to this procedure.

My Oracle Support (<https://support.oracle.com>) is your initial point of contact for all product support and training needs. A representative at Customer Access Support (CAS) can assist you with My Oracle Support registration.

Call the CAS main number at 1-800-223-1711 (toll-free in the US), or call the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html>.

See more information on My Oracle Support, see [Appendix J](#).

Copyright © 2014, 2017, 2018, 2019, 2021, 2022, 2023, 2024, 2025 Oracle and/or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, then the following notice is applicable:

U.S. GOVERNMENT END USERS: Oracle programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, delivered to U.S. Government end users are “commercial computer software” pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, use, duplication, disclosure, modification, and adaptation of the programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, shall be subject to license terms and license restrictions applicable to the programs. No other rights are granted to the U.S. Government.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information about content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services unless otherwise set forth in an applicable agreement between you and Oracle. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services, except as set forth in an applicable agreement between you and Oracle.

TABLE OF CONTENTS

| | |
|---|-----------|
| CHAPTER 1. INTRODUCTION..... | 7 |
| 1.1 Purpose and Scope | 7 |
| 1.1.1 What is Not Covered by this Document | 7 |
| 1.2 References..... | 7 |
| 1.3 Acronyms | 7 |
| 1.4 Terminology..... | 8 |
| 1.5 How to use this Document..... | 10 |
| 1.5.1 Performing Procedures | 10 |
| 1.6 Recommendations..... | 11 |
| 1.6.1 Frequency of Health Checks..... | 12 |
| 1.6.2 Logging of Upgrade Activities | 12 |
| CHAPTER 2. GENERAL DESCRIPTION | 13 |
| 2.1 Supported Upgrade Paths | 13 |
| 2.2 Traffic Management during Upgrade | 14 |
| 2.3 Provisioning during Upgrade | 14 |
| 2.4 Configurations | 14 |
| 2.4.1 Cloud Configurations..... | 14 |
| CHAPTER 3. UPGRADE PLANNING AND PRE-UPGRADE PROCEDURES | 15 |
| 3.1 Required Materials | 15 |
| 3.1.1 Application ISO Image File/Media..... | 15 |
| 3.1.2 Logins, Passwords and Site Information..... | 15 |
| 3.2 Pre-Upgrade Procedures..... | 16 |
| 3.2.1 Hardware Upgrade Preparation | 16 |
| 3.2.2 Review Release Notes | 17 |
| 3.2.3 Required Materials Check..... | 17 |
| 3.2.4 Perform Health Check (Upgrade Preparation)..... | 17 |
| 3.2.5 ISO Administration (This step is applicable only for Minor Upgrade) | 17 |
| 3.2.6 Checking the Network Adapter Settings | 21 |
| 3.3 Order of Application Upgrade | 23 |
| 3.4 Upgrade Execution Overview for Virtual machine Configurations | 23 |
| 3.4.1 Primary NOAMP/DR NOAMP Execution Overview | 23 |
| 3.5 Upgrade Acceptance Overview | 23 |
| CHAPTER 4. UPGRADE FROM UDR-14.X.X VM TO UDR-14.2.0 VM | 24 |
| 4.1 Primary NOAMP/DR NOAMP Upgrade Execution | 25 |

| | |
|---|-----------|
| 4.2 Perform Health Check (Pre Upgrade)..... | 26 |
| 4.3 Remove Additional GUI Sessions..... | 26 |
| 4.4 Full Database Backup (all servers)..... | 28 |
| 4.5 Upgrade from UDR-14.0.0 to UDR-14.2.0 and 14.0.1 to 14.2.0 & 14.0.2 to 14.2.0 (Primary NOAMP/DR NOAMP) | 31 |
| 4.5.1 Upgrade DR NOAMP NE | 31 |
| 4.5.2 Upgrade Primary NOAMP NE..... | 33 |
| 4.5.3 Accept/Backout upgrade of Upgrade | 35 |
| CHAPTER 5. SINGLE SERVER UPGRADE..... | 36 |
| 5.1 Upgrading a Single Server..... | 36 |
| CHAPTER 6. PERFORM HEALTH CHECK (POST PRIMARY NOAM/DR NOAMP UPGRADE) 40 | |
| CHAPTER 7. RECOVERY PROCEDURES | 41 |
| 7.1 Order of Backout | 41 |
| 7.2 Backout Setup | 41 |
| 7.3 Backout of DR NOAMP NE | 42 |
| 7.4 Backout of Primary NOAMP NE | 44 |
| APPENDIX A. ACCESSING THE OAM SERVER GUI (NOAMP)..... | 47 |
| APPENDIX B. HEALTH CHECK PROCEDURES | 49 |
| APPENDIX C. UPGRADE OF A SERVER | 55 |
| APPENDIX D. BACKOUT OF A SERVER | 65 |
| APPENDIX E. UPGRADE ACCEPTANCE | 73 |
| APPENDIX F. VERIFYING SERVERS ARE SYNCRONIZED | 75 |
| APPENDIX G. CONFIGURING SERVICES FOR DUAL PATH HA | 76 |
| APPENDIX H. RESIZING VM GUEST DISK FOR UPGRADE | 79 |
| APPENDIX I. MY ORACLE SUPPORT | 95 |
| APPENDIX J. LOCATE PRODUCT DOCUMENTATION ON THE ORACLE HELP CENTER SITE | 96 |

List of Figures

Figure 1: Supported Upgrade Paths..... 13

Figure 2: OL6 to OL8 upgrade diagram 24

Figure 3: OL8 to OL8 upgrade diagram.....24

List of Tables

| | |
|--|-----|
| Table 1: Acronyms..... | 7 |
| Table 2: Terminology | 9 |
| Table 3: Sample Procedure | 11 |
| Table 4: Pre-Upgrade Overview | 116 |
| Table 5: DR NOAMP Upgrade Procedures for Virtual machine Configurations | 23 |
| Table 6: Primary NOAMP Upgrade Procedures for Virtual machine Configurations | 23 |
| Table 7: Upgrade Acceptance overview | 23 |

List of Procedures

| | |
|--|-------------------------------------|
| Procedure 1: Required Materials Check | 17 |
| Procedure 2: Perform Health Check (Upgrade Preparation)..... | 17 |
| Procedure 3: ISO Administration for Upgrades | 18 |
| Procedure 4: Health Check (Pre Upgrade)..... | 25 |
| Procedure 5: Remove Additional GUI Sessions | 26 |
| Procedure 6: Full Database Backup | 28 |
| Procedure 7: Minor Upgrade DR NOAMP NE | Error! Bookmark not defined. |
| Procedure 8: Minor Upgrade Primary NOAMP NE | 33 |
| Procedure 9: Health Check (Post Primary NOAMP/DR NOAMP Upgrade)..... | 40 |
| Procedure 10: Backout of DR NOAMP NE..... | 42 |
| Procedure 11: Backout of Primary NOAMP NE..... | 44 |
| Procedure 12: Accessing the OAM Server GUI (NOAMP) | 47 |
| Procedure 13: Health Check Procedures | 49 |
| Procedure 14: Upgrade Server..... | 55 |
| Procedure 15: Backout of a Server | 65 |
| Procedure 16: Accept Upgrade | 73 |
| Procedure 17: Verifying servers are Synchronized | 75 |
| Procedure 18: Configuring Services for Dual Path HA | 76 |

Chapter 1. Introduction

1.1 Purpose and Scope

This document describes the methods utilized and the procedures performed for an upgrade from Oracle Communications User Data Repository 14.0.x.0 releases to Oracle Communications User Data Repository 14.2.0.0.0 release. The audience for this document includes Oracle customers as well as the following internal groups: Software Development, Quality Assurance, Product Verification, Information Development, and Consulting Services including NPX. This document provides step-by-step instructions to perform any Release 14.2.0.0.0 or later software upgrade. The Oracle Communications User Data Repository software includes all Oracle Tekelec Platform Distribution (TPD) software. Any TPD upgrade necessary is included automatically as part of the software upgrade. Performing this procedure assumes that the Oracle Communications User Data Repository software load (ISO file, CD-ROM, or other form of media) has been delivered or downloaded to the premises. This includes delivery of the software load to the local workstation being used to perform this upgrade.

1.1.1 What is Not Covered by this Document

- Distribution of Oracle Communications User Data Repository 14.2.0.0.0 software loads. Visit the Oracle Software Delivery Cloud here: <https://edelivery.oracle.com/osdc/faces/Home.jspx>
- Distribution of Oracle Communications User Data Repository software that goes with Oracle Communications DSR product is not covered.
- Initial installation of Oracle Communications User Data Repository 12.6.0 software. Refer [1].

1.2 References

Oracle documentation is available on the web at the Oracle Help Center (OHC) site, <http://docs.oracle.com>. You do not have to register to access these documents. Viewing these files requires Adobe Acrobat Reader, which can be downloaded at www.adobe.com.

1. Log into the Oracle Technology Network site at <http://docs.oracle.com>.
2. Select **Find a product**.
3. Enter **User Data Repository**
The CGBU Documentation page opens.
4. Select **User Data Repository** followed by version.

[1] Oracle Communications User Data Repository Cloud Installation and Configuration Guide, F88024-01, latest revision.

1.3 Acronyms

Table 1: Acronyms

| Acronym | Meaning |
|---------|-------------------------------------|
| CGBU | Communications Global Business unit |
| CD-ROM | Compact Disc Read-only Media |
| CSV | Comma-separated Values |
| DB | Database |
| DIU | Dual Image Upgrade |
| DR | Disaster Recovery |

| Acronym | Meaning |
|---------|--|
| FOA | First Office Application |
| GA | General Availability |
| GPS | Global Product Solutions |
| GUI | Graphical User Interface |
| HA | High Availability |
| IMI | Internal Management Interface |
| IP | Internet Protocol |
| IPM | Initial Product Manufacture |
| ISO | ISO 9660 file system (when used in the context of this document) |
| LA | Limited Availability |
| MOP | Method of Procedure |
| MW | Maintenance Window |
| NE | Network Element |
| NO | Network OAMP |
| NOAMP | Network OAMP |
| OA | HP Onboard Administrator |
| OAM | Operations, Administration and Maintenance |
| OAMP | Operations, Administration, Maintenance and Provisioning |
| PM&C | Platform Management and Configuration |
| RMS | Rack Mount Server |
| SPR | Subscriber Profile Repository |
| TPD | Tekelec Platform Distribution |
| TVOE | Tekelec Virtualized Operating Environment |
| UDR | User Data Repository |
| UI | User Interface |
| VIP | Virtual IP |
| VM | Virtual Machine |
| VPN | Virtual Private Network |
| XMI | External Management Interface |
| XSI | External Signaling Interface |

1.4 Terminology

This section describes terminology as it is used in this document.

Table 2: Terminology

| Term | Meaning |
|------------------------------|---|
| Upgrade | The process of converting an application from its current release on a system to a new release. |
| Major Upgrade | An upgrade from a current release to a new major release. An example of a major upgrade is: release 12.7.0 to 14.2.0 Note: UDR-14.2 onwards we do not support major upgrade. It is just to explain and differentiate between major and minor upgrade |
| Minor Upgrade | An upgrade from a current build to a new build in the same major release. The examples of a Minor upgrade are: release 14.0.1 to 14.2.0 or 14.0.2 to 14.2.0. |
| Release | Release is any particular distribution of software that is different from any other distribution. |
| Single Server Upgrade | The process of converting an Oracle Communications User Data Repository server from its current release on a single server to a new release. |
| Standalone Server Upgrade | Single server upgrade performed on a standalone server. This upgrade requires the use of the platcfg UI. |
| Software Only Upgrade | An upgrade that does not require a database schema change, only the software is changed. |
| DB Conversion Upgrade | An upgrade that requires a database schema change that is performed during an upgrade that is necessitated by new feature content or bug fixes. |
| Backout | The process of converting a single Oracle Communications User Data Repository server to a prior version. This could be performed due to failure in single server upgrade or the upgrade cannot be accepted. Backout is a user-initiated process. |
| Downgrade/Backout | The process of converting an Oracle Communications User Data Repository server from its current release to a prior release. This could be performed due to a misbehaving system. After the upgrade is accepted, servers cannot be backed out to previous release. |
| Rollback | Automatic recovery procedure that puts a server into its pre-upgrade status. This procedure occurs automatically during upgrade if there is a failure. |
| Source Release | Software release to upgrade from. |
| Target Release | Software release to upgrade to. |
| Oracle RMS | Oracle Server X5-2 or Netra X5-2 |
| Primary NOAM Network Element | The network element that contains the active and standby NOAM servers in an Oracle Communications User Data Repository. If the NOAMs are deployed on a rack-mount server (and often not co-located with any other site), that RMS is considered the primary NOAM network element. If the NOAMs are virtualized on a C-class blade that is part of one of the sites, then the primary NOAM network element and the signaling network element hosting the NOAMs are one and the same. |
| DR NOAM Network Element | Disaster Recovery NOAMs that are ready to take over as the primary Site if a disaster should occur. |
| Site | Physical location where one or more network elements reside. |

| Term | Meaning |
|-------------------|---|
| Health Check | Procedure used to determine the health and status of the network. This includes statuses displayed from the GUI. This can be observed Pre-Server Upgrade, In-Progress Server Upgrade, and Post-Server Upgrade. |
| Upgrade Ready | State that allows for graceful upgrade of a server without degradation of service. It is a state that a server is required to be in before it can be upgraded. The state is defined by the following attributes: Server is Forced Standby Server is Application Disabled (signaling servers do not process any traffic) |
| UI | User interface. platcfg UI refers specifically to the Platform Configuration Utility User Interface, which is a text-based user interface. |
| Management Server | Server deployed with HP c-class or RMS used to host PM&C application, to configure Cisco 4948 switches and to serve other configuration purposes. |
| Software Centric | The business practice of delivering an Oracle software product, while relying on the customer to procure the requisite hardware components. Oracle provides the hardware specifications, but does not provide the hardware, and is not responsible for hardware installation, configuration, or maintenance. |
| Enablement | The business practice of providing support services (hardware, software, documentation, and so on) that enable a 3rd party entity to install, configuration, and maintain Oracle products for Oracle customers. |
| NO | Network OAM for Oracle Communications User Data Repository. |

1.5 How to use this Document

When using this document, there are a few key points which help to understand the intent of the author. These points are as follows:

1. Before beginning a procedure, completely read the instructional text (immediately after the section heading for each procedure) and all associated procedural warnings or notes.
2. Before performing a step in a procedure, completely read the left and right columns including any step specific warnings or notes.
3. If a procedural step fails to run successfully or fails to receive the required output, stop and contact the CAS main number at 1-800-223-1711 (toll-free in the US), or call the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html> for assistance before attempting to continue.

1.5.1 Performing Procedures

Familiarize yourself with the structure and conventions used in these procedures before performing them. Table 1 and the details below provide an example of how procedural steps might be displayed in this document.

Column 1: Step

- Column 1 in Table 1 contains the step number and a checkbox if the step requires an action.
- Sub-steps in a Step X are referred to as Step X.Y. (See example: Step 1 has sub-steps Steps 1.1 to 1.2).
- Mark checkboxes in as steps are performed to keep track of the progress during the procedure.

Column 2: Procedure

- Column 2 in Table 1 contains a heading which indicates the server/IP being accessed as well as text instructions and/or notes. This column may also describe the operations to be performed or observed during the step.

Column 3: Result

- Column 3 in Table 1 generally displays the results of performing the instructions in column 2.
- The Result column can also display any of the following:
 - Inputs (commands or responses) required.
 - Outputs which are displayed on the terminal.
 - Illustrations or graphic figures related to the step instruction.
 - Screen captures from the product GUI related to the step instruction.

Table 3: Sample Procedure

| Step | Procedure | Result |
|--|---|---|
| 1. <input type="checkbox"/> | Active NOAMP VIP: 1. Access the command prompt. 2. Log into the server as the admusr user. | <pre>Login as: admusr Using keyboard-interactive authentication. Password: <password></pre> <p>NOTE: The password does not show on the screen as the characters are entered.</p> |
| 2. <input type="checkbox"/> | Active NOAMP VIP: Output displays as the server returns to a command prompt. | <p>*** TRUNCATED OUTPUT ***</p> <pre>VPATH=/opt/TKLCcomcol/runcm6.3:/opt/TKLCcomcol/cm6.3 PRODPATH= RELEASE=6.3 RUNID=00 VPATH=/var/TKLC/rundb:/usr/TKLC/appworks:/usr/TKLC/udr:/usr/TKLC/awpcommon:/usr/TKLC/comagent-gui:/usr/TKLC/comagent:/usr/TKLC/dpi:/usr/TKLC/capm/prod/plugins PRODPATH=/opt/comcol/prod RUNID=00 [admusr@908070109-NO-A ~]\$</pre> |
| 3. <input type="checkbox"/> | Active NOAMP VIP: Verify that the correct date and time are displayed in GMT (+/- 4 min.) | <pre>date -u Thu Apr 24 17:13:17 UTC 2014 [admusr@908070109-NO-A filemgmt]\$</pre> |
| THIS PROCEDURE HAS BEEN COMPLETED | | |

1.6 Recommendations

This section provides recommendations to consider when preparing to perform the procedures in this document.

1.6.1 Frequency of Health Checks

You can run the Perform Health Check or View Logs steps freely or repeat as many times as necessary in between procedures during the upgrade process. It is not recommended to do this in between steps in a procedure unless there is a failure to troubleshoot.

1.6.2 Logging of Upgrade Activities

It is a best practice to use a terminal session with logging enabled to capture command activities and output during the upgrade procedures. These can be used for analysis in the event of issues encountered during the activity. These logs are saved offline at the completion of the activity.

Note that GUI activities are logged in a security log, but it is also recommended to use a screen capture tool to collect a sequence of screen shots before, during, and after the upgrade. This can also be useful for later analysis.

Chapter 2. General Description

This document defines the step-by-step actions performed for a software upgrade of an in-service Oracle Communications User Data Repository from the source release to the target release. A major upgrade advances the Oracle Communications User Data Repository software from 12.7.0.4 source release to 14.2.0.0.0 target release. A minor upgrade advances the Oracle Communications User Data Repository software from 14.0.0, 14.0.1 or 14.0.2 source release to 14.2.0.0.0 target release.

2.1 Supported Upgrade Paths

Figure 1 shows the supported Oracle Communications User Data Repository upgrade paths.

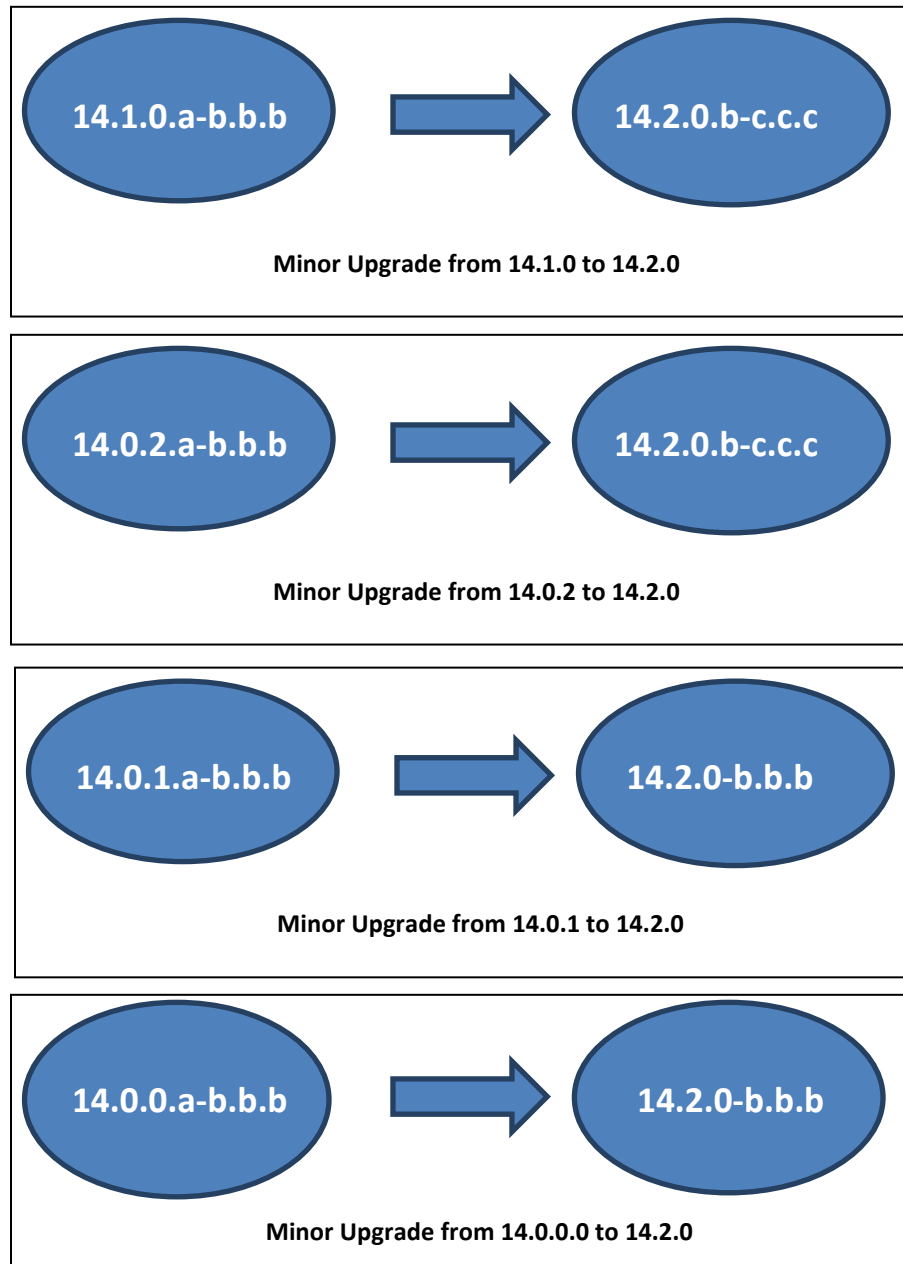


Figure 1: Supported Upgrade Paths

NOTE: Initial installation is not in the scope of this upgrade document. See [1] for initial installation requirements.

2.2 Traffic Management during Upgrade

Upgrade of NOAM servers are not expected to affect traffic-handling servers.

2.3 Provisioning during Upgrade

For Oracle Communications User Data Repository 14.2.0.0.0, provisioning (live traffic) continues while the upgrade is being performed. While the standby NOAMP is being upgraded, the active NOAMP receives provisioning requests. After the upgrade is complete, replication is turned on to the standby NOAMP to sync the most recent requests from the active NOAMP. Then the standby NOAMP becomes active to start receiving provisioning requests, while the previous active NOAMP is being upgraded.

2.4 Configurations**2.4.1 Cloud Configurations**

This includes all Oracle Communications User Data Repository software running in a cloud environment. This can be deployed either as a single site or as a geo-redundant deployment, with 1 or two 2 servers filling each role at each site. See reference [4] for full details.

| Non HA | | | | |
|-------------------|-------------------|-------------------|-------------------|----------------|
| Min number of VMs | Max number of VMs | Min number of VMs | Max number of VMs | HA config |
| 1 | 2 | 2 | 2 | Active-Standby |
| 1 | 2 | 2 | 2 | Active-Standby |
| 1 | 1 | 2 | 4 | Active-Active |

Chapter 3. Upgrade Planning and pre-upgrade procedures

This section contains all information necessary to prepare for and perform an upgrade. The materials required to perform an upgrade are described and the pre-upgrade procedures that are run to ensure the system is ready for upgrade. Then, the actual procedures for each supported upgrade path are given.

There are overview tables throughout this section that help you plan the upgrade and estimate how long it takes to perform various actions. The stated time durations for each step or group of steps are estimates only. Do not use the overview tables to perform any actions on your system. Only the procedures are used when performing upgrade actions, beginning with Procedure 1: Required Materials Check.

3.1 Required Materials

The following materials and information are needed to perform an upgrade:

- Target-release application DIU ISO image file, or target-release application media.
- GUI access to the Oracle Communications User Data Repository Network OAMP VIP with Administrator privileges.
- User logins, passwords, IP addresses and other administration information. See Section 3.1.2.
- SSH/SFTP access to the Oracle Communications User Data Repository Network OAMP XMI VIP as the admusr user.

NOTE: All logins into the Oracle Communications User Data Repository NO servers are made via the External Management (XMI) VIP unless otherwise stated.

- VPN access to the network is required if that is the only method to log into the OAM servers.
- Direct access to server IMI IP addresses from the local workstation is preferable in the case of a backout.

NOTE: If direct access to the IMI IP addresses cannot be made available, then target server access can be made via a tandem connection through the active primary NO (that is, An SSH connection is made to the active primary NO XMI first, then from the active primary NO, a 2nd SSH connection can be made to the target IMI IP address of the server).

3.1.1 Application ISO Image File/Media

You must obtain a copy of the target release DIU ISO image file. These files are necessary to perform the upgrade. The Oracle Communications User Data Repository DIU ISO image file is in the format:

Example: `UDR-14.2.0.0.0_114.43.0-x86_64-DIU.iso`

When performing this upgrade procedure, it is assumed that the Oracle Communications User Data Repository DIU ISO image file has been delivered to the premises. The DIU ISO image file must reside on the local workstation used to perform the upgrade, and anybody performing the upgrade must have access to the application DIU ISO image. If you are at a remote location, it is assumed the application DIU ISO file is available to you before starting the upgrade procedure.

3.1.2 Logins, Passwords and Site Information

Obtain all the information requested in the following table. This ensures that the necessary administration information is available before an upgrade starts. Consider the confidential nature of the information recorded in this table. While all the information in the table is required to complete the upgrade, there may be security policies in place that require secure disposal after the upgrade completes.

| | Description | Recorded Value |
|--------------------|--------------------------------------|----------------|
| Credentials | GUI Admin Username ¹ | |
| | GUI Admin Password | |
| | Admusr Password ² | |
| | Root Password ³ | |
| VPN Access Details | Customer VPN information (if needed) | |
| NO | Primary NOAMP | |
| | DR NOAMP | |
| | XMI VIP address ⁴ | |
| | NO 1 XMI IP Address | |
| | NO 2 XMI IP Address | |
| Software | Source Release Number | |
| | Target Release Number | |
| | ISO Image (.iso) file name | |

3.2 Pre-Upgrade Procedures

The pre-upgrade procedures in Table 4 do not have an effect on the live system.

Table 4: Pre-Upgrade Overview

| Procedure Number | Procedure Title | Elapsed Time (Hours: Minutes) | |
|------------------|--|-------------------------------|-------------|
| | | This Step | Cumulative |
| 1 | Required Materials Check | 00:15 | 00:15 |
| 2 | Perform Health Check (Upgrade Preparation) | * | * |
| Appendix B | Health Check Procedures (depends on number of servers) | 0:10-1:15 | 00:25-01:30 |

***NOTE:** DIU ISO transfers to the target systems cannot be estimated because times vary significantly depending on the number of systems and the speed of the network.

The DIU ISO transfers to the target systems must be performed before the scheduled maintenance window. Schedule the required maintenance windows accordingly.

3.2.1 Hardware Upgrade Preparation

Hardware preparation is not necessary when upgrading to release 14.2.0.0.0.

¹ The user must have administrator privileges. This means the user belongs to the admin group in Group Administration.

² This is the password for the admusr login on the servers. This is not the same login as the GUI Administrator. The admusr password is required if recovery procedures are needed. If the admusr password is not the same on all other servers, then all root passwords for the servers must also be recorded; use additional space at the bottom of this table.

³ This is the password for the root login on the servers. This is not the same login as the GUI Administrator. The root password is required if recovery procedures are needed. If the root password is not the same on all other servers, then all root passwords for the servers must also be recorded; use additional space at the bottom of this table.

⁴ All logins into the NO servers are made via the External Management VIP unless otherwise stated.

3.2.2 Review Release Notes

Before starting the upgrade, review the release notes for the Oracle Communications User Data Repository 14.2.0.0.0 release to understand the functional differences and possible traffic impacts of the upgrade.

It is important to check Oracle Communications UDR-DSR compatibility before performing a major upgrade since all versions are not compatible. Release notes for this and all release are available at <https://docs.oracle.com>.

3.2.3 Required Materials Check

This procedure verifies that all required materials needed to perform an upgrade have been collected and recorded.

This procedure verifies that all required materials are present.

Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.

Procedure 1.: Required Materials Check

| Step | Procedure | Result |
|-----------------------------|---|---|
| 1. <input type="checkbox"/> | Verify all required materials are present. | Materials are listed in Section 3.1. Verify all required materials are present. |
| 2. <input type="checkbox"/> | Verify all administration data needed during upgrade. | Double-check that all information in Section 3.1.2 is filled-in and accurate. |
| 3. <input type="checkbox"/> | Contact Oracle CGBU Customer Care Center | Contact the My Oracle Support and inform them of plans to upgrade this system. See Appendix H for these instructions. |

3.2.4 Perform Health Check (Upgrade Preparation)

Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.

Procedure 2.: Perform Health Check (Upgrade Preparation)

| Step | Procedure |
|-----------------------------|--|
| 1. <input type="checkbox"/> | <p>This procedure is part of software upgrade preparation and is used to determine the health and status of the Oracle Communications User Data Repository network and servers. This may be performed multiple times but must also be performed at least once in 24 to 36 hours before the start of the upgrade procedures.</p> <ul style="list-style-type: none"> Perform Health Check procedures as specified in Appendix B. |

3.2.5 ISO Administration (This step is applicable only for Minor Upgrade)

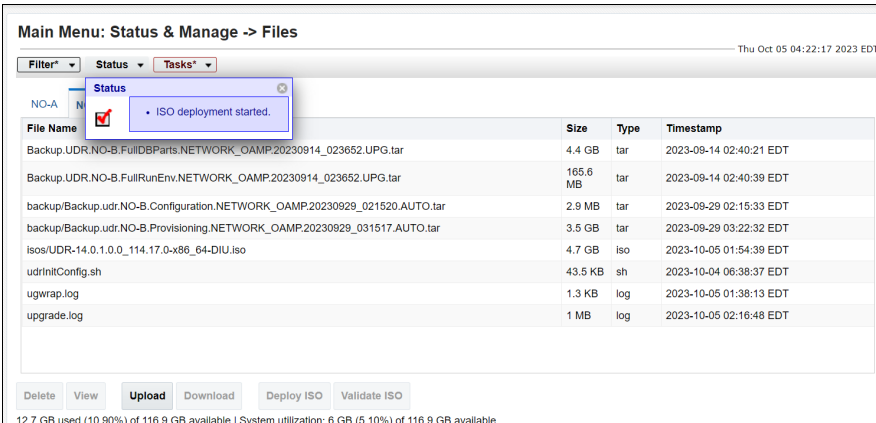
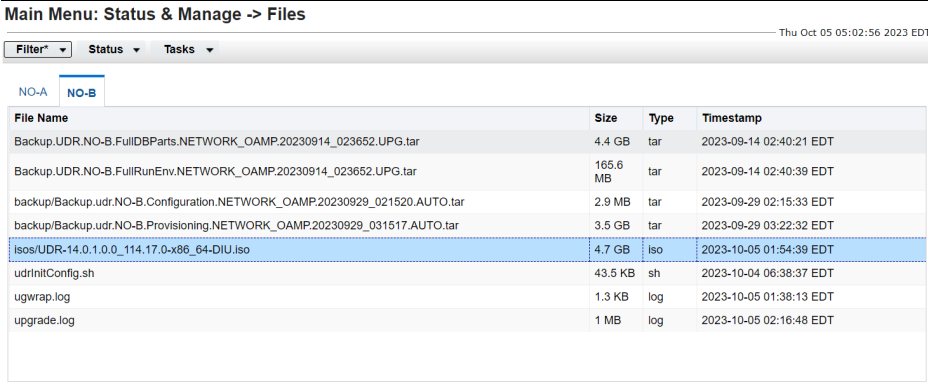
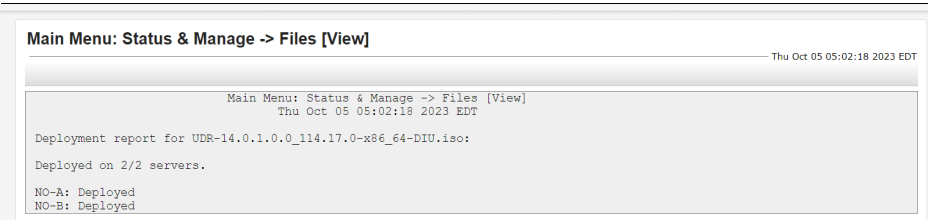
Minor Upgrade: OL8 based TPD server to OL8 based server.

Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.

Procedure 1: ISO Administration for Upgrades

| Step | Procedure | Result | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|------------------------------|--|--|-------------------------|------|------|-----------|------------------------------|--------|----|-------------------------|------------------------------|--------|----|-------------------------|---------------------------|--------|----|-------------------------|---------------------------|--------|----|-------------------------|------------------|---------|----|-------------------------|------------|--------|-----|-------------------------|-------------|----------|-----|-------------------------|
| 1. <input type="checkbox"/> | Using the VIP address, access the primary NOAMP GUI. | Access the primary NOAMP GUI as specified in Appendix A . | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2. <input type="checkbox"/> | <p>Active NOAMP VIP:</p> <p>Upload ISO file to the active NOAMP server</p> <p>1. Navigate to Main Menu → Status & Manage → Files</p> <p>2. Using the cursor, select the active NOAMP server from the list tabs.</p> <p>3. Click Upload.</p> | <div><p>Main Menu: Status & Manage -> Files</p><div><div>Filter*</div><div>Tasks</div></div><div><div>OCUDR-A</div><div>OCUDR-B</div><div>DR-OCUDR-A</div><div>DR-OCUDR-B</div></div><table><thead><tr><th>File Name</th><th>Size</th><th>Type</th><th>Timestamp</th></tr></thead><tbody><tr><td>TKLCConfigData.DR-OCUDR-A.sh</td><td>6.6 KB</td><td>sh</td><td>2018-05-09 01:08:40 EDT</td></tr><tr><td>TKLCConfigData.DR-OCUDR-B.sh</td><td>6.6 KB</td><td>sh</td><td>2018-05-09 01:08:40 EDT</td></tr><tr><td>TKLCConfigData.OCUDR-A.sh</td><td>5.8 KB</td><td>sh</td><td>2018-05-09 00:53:59 EDT</td></tr><tr><td>TKLCConfigData.OCUDR-B.sh</td><td>6.5 KB</td><td>sh</td><td>2018-05-09 01:08:40 EDT</td></tr><tr><td>udrinitConfig.sh</td><td>43.5 KB</td><td>sh</td><td>2018-01-24 11:13:33 EST</td></tr><tr><td>ugwrap.log</td><td>1.3 KB</td><td>log</td><td>2018-01-24 12:13:10 EST</td></tr><tr><td>upgrade.log</td><td>980.3 KB</td><td>log</td><td>2018-01-24 12:15:36 EST</td></tr></tbody></table><div><div>Delete</div><div>View</div><div>Upload</div><div>Download</div><div>Deploy ISO</div><div>Validate ISO</div></div></div> | File Name | Size | Type | Timestamp | TKLCConfigData.DR-OCUDR-A.sh | 6.6 KB | sh | 2018-05-09 01:08:40 EDT | TKLCConfigData.DR-OCUDR-B.sh | 6.6 KB | sh | 2018-05-09 01:08:40 EDT | TKLCConfigData.OCUDR-A.sh | 5.8 KB | sh | 2018-05-09 00:53:59 EDT | TKLCConfigData.OCUDR-B.sh | 6.5 KB | sh | 2018-05-09 01:08:40 EDT | udrinitConfig.sh | 43.5 KB | sh | 2018-01-24 11:13:33 EST | ugwrap.log | 1.3 KB | log | 2018-01-24 12:13:10 EST | upgrade.log | 980.3 KB | log | 2018-01-24 12:15:36 EST |
| File Name | Size | Type | Timestamp | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TKLCConfigData.DR-OCUDR-A.sh | 6.6 KB | sh | 2018-05-09 01:08:40 EDT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TKLCConfigData.DR-OCUDR-B.sh | 6.6 KB | sh | 2018-05-09 01:08:40 EDT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TKLCConfigData.OCUDR-A.sh | 5.8 KB | sh | 2018-05-09 00:53:59 EDT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TKLCConfigData.OCUDR-B.sh | 6.5 KB | sh | 2018-05-09 01:08:40 EDT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| udrinitConfig.sh | 43.5 KB | sh | 2018-01-24 11:13:33 EST | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ugwrap.log | 1.3 KB | log | 2018-01-24 12:13:10 EST | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| upgrade.log | 980.3 KB | log | 2018-01-24 12:15:36 EST | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3. <input type="checkbox"/> | <p>Active NOAMP VIP:</p> <p>1. Click Browse.</p> <p>2. Select the Drive and directory location of the ISO file for the target release. Select the DIU ISO file and click Open.</p> <p>3. Click Upload.</p> | <p>NOTES:</p> <ul style="list-style-type: none">It is recommended to access the DIU ISO file for the target release from a local hard drive partition as opposed to a network or flash drive location.Depending on network conditions, this upload may take an extended period of time (> 60 secs.).Alternatively, the DIU ISO file can be manually transferred to the <code>/var/TKLC/db/filemgmt</code> directory of the active NOAMP server using SFTP.The DIU ISO in the file management directory must have global read permission or the GUI ISO transfer fails, with a security log indicating the lack of read permission. If you upload the file using the GUI, the ISO has global read permission. If you have transferred the DIU ISO to the NO without global read permission, you can log in as admusr and use <code>chmod 777</code> to give it read permission.When scp files use <code>scp -p</code> command. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| Step | Procedure | Result | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|--|--|-------------------------|------|------|-----------|--|--------|-----|-------------------------|---|--------|-----|-------------------------|------------------------|------|----|-------------------------|------------------------|------|----|-------------------------|--|--------|-----|-------------------------|------------------|---------|----|-------------------------|------------|--------|-----|-------------------------|-------------|--------|-----|-------------------------|
| 4. <input type="checkbox"/> | <p>Active NOAMP VIP:</p> <p>Click the Timestamp link located on the top right of the right panel.</p> <p>A reverse-sorted list of files showing the newest files at the top displays.</p> <p>The ISO file uploaded in Step 3 of this procedure is at the top most position in the File Name column.</p> | <div><div>Main Menu: Status & Manage -> Files</div><div><div>Filter*Tasks</div><div><div>NO-A</div><div>NO-B</div></div><table><thead><tr><th>File Name</th><th>Size</th><th>Type</th><th>Timestamp</th></tr></thead><tbody><tr><td>Backup.UDR.NO-A.FullDBParts.NETWORK_OAMP.20230906_064242.UPG.tar.bz2</td><td>1.3 MB</td><td>bz2</td><td>2023-09-06 06:43:17 EDT</td></tr><tr><td>Backup.UDR.NO-A.FullRunEnv.NETWORK_OAMP.20230906_064242.UPG.tar.bz2</td><td>5.1 MB</td><td>bz2</td><td>2023-09-06 06:43:31 EDT</td></tr><tr><td>TKLCConfigData.NO-A.sh</td><td>7 KB</td><td>sh</td><td>2023-09-06 06:12:52 EDT</td></tr><tr><td>TKLCConfigData.NO-B.sh</td><td>7 KB</td><td>sh</td><td>2023-09-08 04:18:00 EDT</td></tr><tr><td>UDR-14.0.1.0.0_114.13.0-x86_64-DIU.iso</td><td>4.8 GB</td><td>iso</td><td>2023-09-08 05:19:07 EDT</td></tr><tr><td>udrinitConfig.sh</td><td>43.5 KB</td><td>sh</td><td>2023-03-27 03:56:01 EDT</td></tr><tr><td>ugwrap.log</td><td>1.2 KB</td><td>log</td><td>2023-03-30 08:15:54 EDT</td></tr><tr><td>upgrade.log</td><td>1.3 MB</td><td>log</td><td>2023-09-06 04:54:03 EDT</td></tr></tbody></table><div><div>Delete</div><div>View ISO Deployment Report</div><div>Upload</div><div>Download</div><div>Deploy ISO</div><div>Validate ISO</div></div></div></div> | File Name | Size | Type | Timestamp | Backup.UDR.NO-A.FullDBParts.NETWORK_OAMP.20230906_064242.UPG.tar.bz2 | 1.3 MB | bz2 | 2023-09-06 06:43:17 EDT | Backup.UDR.NO-A.FullRunEnv.NETWORK_OAMP.20230906_064242.UPG.tar.bz2 | 5.1 MB | bz2 | 2023-09-06 06:43:31 EDT | TKLCConfigData.NO-A.sh | 7 KB | sh | 2023-09-06 06:12:52 EDT | TKLCConfigData.NO-B.sh | 7 KB | sh | 2023-09-08 04:18:00 EDT | UDR-14.0.1.0.0_114.13.0-x86_64-DIU.iso | 4.8 GB | iso | 2023-09-08 05:19:07 EDT | udrinitConfig.sh | 43.5 KB | sh | 2023-03-27 03:56:01 EDT | ugwrap.log | 1.2 KB | log | 2023-03-30 08:15:54 EDT | upgrade.log | 1.3 MB | log | 2023-09-06 04:54:03 EDT |
| File Name | Size | Type | Timestamp | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Backup.UDR.NO-A.FullDBParts.NETWORK_OAMP.20230906_064242.UPG.tar.bz2 | 1.3 MB | bz2 | 2023-09-06 06:43:17 EDT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Backup.UDR.NO-A.FullRunEnv.NETWORK_OAMP.20230906_064242.UPG.tar.bz2 | 5.1 MB | bz2 | 2023-09-06 06:43:31 EDT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TKLCConfigData.NO-A.sh | 7 KB | sh | 2023-09-06 06:12:52 EDT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TKLCConfigData.NO-B.sh | 7 KB | sh | 2023-09-08 04:18:00 EDT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| UDR-14.0.1.0.0_114.13.0-x86_64-DIU.iso | 4.8 GB | iso | 2023-09-08 05:19:07 EDT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| udrinitConfig.sh | 43.5 KB | sh | 2023-03-27 03:56:01 EDT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ugwrap.log | 1.2 KB | log | 2023-03-30 08:15:54 EDT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| upgrade.log | 1.3 MB | log | 2023-09-06 04:54:03 EDT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5. <input type="checkbox"/> | <p>Active NOAMP VIP:</p> <p>UNDEPLOY all unneeded ISO images.</p> | <div><div>1. Select Status & Manage → Files from the left-side menu; the Files screen displays.</div><div>2. Select the DIU ISOs to be undeployed and click Undeploy ISO at the bottom of the table.</div><div>3. Click OK to confirm the ISO undeployment.</div><div>4. Verify that the ISO undeployment is successful.</div><div>NOTE: The Tasks menu message box at the top of the Files page displays the status of the undeployment for each server. In addition, an ISO Deployment report can be viewed by selecting the DIU ISO and clicking View ISO Deployment Report.</div></div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 6. <input type="checkbox"/> | <p>Active NOAMP VIP (GUI):</p> <p>Transfer ISO to all remaining servers via the GUI session.</p> <p>Select the <DIU ISO filename> and then click Deploy ISO.</p> <p>Click OK.</p> | <div><div>Main Menu: Status & Manage -> Files</div><div><div>Filter*Tasks</div><div><div>NO-A</div><div>NO-B</div></div><table><thead><tr><th>File Name</th><th>Size</th><th>Type</th><th>Timestamp</th></tr></thead><tbody><tr><td>Backup.UDR.NO-A.FullDBParts.NETWORK_OAMP.20230906_064242.UPG.tar.bz2</td><td>1.3 MB</td><td>bz2</td><td>2023-09-06 06:43:17 EDT</td></tr><tr><td>Backup.UDR.NO-A.FullRunEnv.NETWORK_OAMP.20230906_064242.UPG.tar.bz2</td><td>5.1 MB</td><td>bz2</td><td>2023-09-06 06:43:31 EDT</td></tr><tr><td>TKLCConfigData.NO-A.sh</td><td>7 KB</td><td>sh</td><td>2023-09-06 06:12:52 EDT</td></tr><tr><td>TKLCConfigData.NO-B.sh</td><td>7 KB</td><td>sh</td><td>2023-09-08 04:18:00 EDT</td></tr><tr><td>UDR-14.0.1.0.0_114.13.0-x86_64-DIU.iso</td><td>4.8 GB</td><td>iso</td><td>2023-09-08 05:19:07 EDT</td></tr><tr><td>udrinitConfig.sh</td><td>43.5 KB</td><td>sh</td><td>2023-03-27 03:56:01 EDT</td></tr><tr><td>ugwrap.log</td><td>1.2 KB</td><td>log</td><td>2023-03-30 08:15:54 EDT</td></tr><tr><td>upgrade.log</td><td>1.3 MB</td><td>log</td><td>2023-09-06 04:54:03 EDT</td></tr></tbody></table><div><div>Delete</div><div>View ISO Deployment Report</div><div>Upload</div><div>Download</div><div>Deploy ISO</div><div>Validate ISO</div></div><div>6.4 MB used (0.01%) of 121.5 GB available System utilization: 5.2 GB (4.28%) of 121.5 GB available.</div></div></div> | File Name | Size | Type | Timestamp | Backup.UDR.NO-A.FullDBParts.NETWORK_OAMP.20230906_064242.UPG.tar.bz2 | 1.3 MB | bz2 | 2023-09-06 06:43:17 EDT | Backup.UDR.NO-A.FullRunEnv.NETWORK_OAMP.20230906_064242.UPG.tar.bz2 | 5.1 MB | bz2 | 2023-09-06 06:43:31 EDT | TKLCConfigData.NO-A.sh | 7 KB | sh | 2023-09-06 06:12:52 EDT | TKLCConfigData.NO-B.sh | 7 KB | sh | 2023-09-08 04:18:00 EDT | UDR-14.0.1.0.0_114.13.0-x86_64-DIU.iso | 4.8 GB | iso | 2023-09-08 05:19:07 EDT | udrinitConfig.sh | 43.5 KB | sh | 2023-03-27 03:56:01 EDT | ugwrap.log | 1.2 KB | log | 2023-03-30 08:15:54 EDT | upgrade.log | 1.3 MB | log | 2023-09-06 04:54:03 EDT |
| File Name | Size | Type | Timestamp | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Backup.UDR.NO-A.FullDBParts.NETWORK_OAMP.20230906_064242.UPG.tar.bz2 | 1.3 MB | bz2 | 2023-09-06 06:43:17 EDT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Backup.UDR.NO-A.FullRunEnv.NETWORK_OAMP.20230906_064242.UPG.tar.bz2 | 5.1 MB | bz2 | 2023-09-06 06:43:31 EDT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TKLCConfigData.NO-A.sh | 7 KB | sh | 2023-09-06 06:12:52 EDT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TKLCConfigData.NO-B.sh | 7 KB | sh | 2023-09-08 04:18:00 EDT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| UDR-14.0.1.0.0_114.13.0-x86_64-DIU.iso | 4.8 GB | iso | 2023-09-08 05:19:07 EDT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| udrinitConfig.sh | 43.5 KB | sh | 2023-03-27 03:56:01 EDT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ugwrap.log | 1.2 KB | log | 2023-03-30 08:15:54 EDT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| upgrade.log | 1.3 MB | log | 2023-09-06 04:54:03 EDT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| Step | Procedure | Result |
|-----------------------------|---|---|
| 7. <input type="checkbox"/> | <p>Active NOAMP VIP (GUI):</p> <p>This moves the DIU ISO file to the <code>isos</code> directory and starts the secure copy of the DIU ISO to each server in the system. A status window opens as well.</p> |  |
| 8. <input type="checkbox"/> | <p>Active NOAMP VIP (GUI):</p> <p>To view the status of the deployed ISO, select the file <code>isos/<ISO filename></code> and then click View ISO Deployment Report or click the Tasks dropdown.</p> <p>NOTE: This button displays when a deployed ISO is selected. All other times, it is the View button.</p> <p>To view the <code>isos</code> directory on each server that is deployed, select the server tabs near the top of the menu.</p> <p>As an optional check (after the ISO is deployed), can click Validate ISO to ensure it is valid.</p> | <div> </div> |
| | | |

| Step | Procedure | Result |
|-----------------------------------|-----------|--------|
| THIS PROCEDURE HAS BEEN COMPLETED | | |

3.2.6 Checking the Network Adapter Settings

Perform the following procedure to check the Network Adapter settings before upgrading UDR from 12.7 to 9.1.0

Note:

- This procedure is only applicable for VMware, not for OpenStack and KVM based systems.

- If the Network Adapter settings output is in ascending order, skip this procedure.
- The output may not always be in the ascending order. Perform the following.

procedure to verify the output.

1. Run the following command to verify that the hexa decimal number shown in bold in the output is in ascending order.

```
[root@OCUDR-NOAMP-A admusr]# ls -l /sys/class/net
```

Output Example:

```
[root@OCUDR-NOAMP-A admusr]# ls -l /sys/class/net
```

```
total 0
```

```
lrwxrwxrwx 1 root root 0 Oct 31 14:50 eth0 ->
```

```
../devices/pci0000:00/0000:00:11.0/0000:02:00.0/net/eth0
```

```
lrwxrwxrwx 1 root root 0 Oct 31 14:50 eth1 ->
```

```
../devices/pci0000:00/0000:00:11.0/0000:02:01.0/net/eth1
```

```
lrwxrwxrwx 1 root root 0 Oct 31 14:50 eth2 ->
```

```
../devices/pci0000:00/0000:00:11.0/0000:02:02.0/net/eth2
```

```
lrwxrwxrwx 1 root root 0 Oct 28 02:11 lo -> ../devices/virtual/net/lo
```

```
[root@OCUDR-NOAMP-A admusr]#
```

2. To obtain the hexa decimal number in ascending order, do the following:

- a. Run the following command to verify the parameters

```
[root@OCUDR-NOAMP-A admusr]# lspci -v | grep Ethernet -A2
```

The following image displays the output of the command:

```
[root@OCUDR-NOAMP-A admusr]# lspci -v | grep Ethernet -A2
02:00.0 Ethernet controller: Intel Corporation 82545EM Gigabit Ethernet Controller
(Copper) (rev 01)
    DeviceName: Ethernet0
    Subsystem: VMware PRO/1000 MT Single Port Adapter
    Physical Slot: 32
--
02:01.0 Ethernet controller: Intel Corporation 82545EM Gigabit Ethernet Controller
(Copper) (rev 01)
```

DeviceName: Ethernet1

Subsystem: VMware PRO/1000 MT Single Port Adapter

Physical Slot: 33

--

02:02.0 Ethernet controller: Intel Corporation 82545EM Gigabit Ethernet Controller (Copper) (rev 01)

DeviceName: Ethernet2

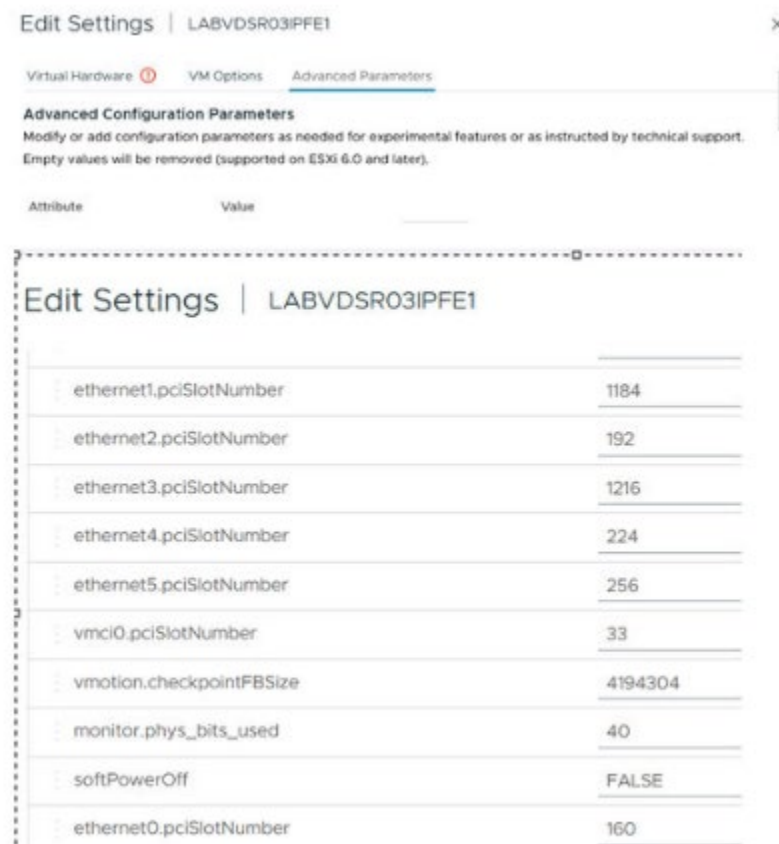
Subsystem: VMware PRO/1000 MT Single Port Adapter

Physical Slot: 34

[root@OCUDR-NOAMP-A admusr]#

3. After running the command, the user must shut down the VM, modify the parameters, and start the VM.
 - a. To modify the parameters, from the VMware GUI, navigate to VM, and Edit Settings, and then click Advanced Parameters.
 - b. Modify the pci slot number for the ascending order as shown in the output of the step 2
 - c. Modify or add the configuration parameters in the Advanced Configuration Parameters as shown in the following output:

Note: The below output for reference purpose only.



| Attribute | Value |
|--------------------------|---------|
| ethernet1.pciSlotNumber | 1184 |
| ethernet2.pciSlotNumber | 192 |
| ethernet3.pciSlotNumber | 1216 |
| ethernet4.pciSlotNumber | 224 |
| ethernet5.pciSlotNumber | 256 |
| vmci0.pciSlotNumber | 33 |
| vmotion.checkpointFBSize | 4194304 |
| monitor.phys_bits_used | 40 |
| softPowerOff | FALSE |
| ethernet0.pciSlotNumber | 160 |

3.3 Order of Application Upgrade

The following list displays the order to upgrade the servers (primary and DR sites):

1. Site 2 NOAMPs (DR spares)
2. Primary standby NOAMP
3. Primary active NOAMP

3.4 Upgrade Execution Overview for Virtual machine Configurations

3.4.1 Primary NOAMP/DR NOAMP Execution Overview

The times in Table 5 and Table 6 are the estimated times for upgrading 2 NOAMPs and 2 DR NOAMPs. The DR NOAMPs are upgraded first, followed by the primary NOAMPs.

Table 5: DR NOAMP Upgrade Procedures for Virtual machine Configurations

| Procedure Number | Procedure Title | Elapsed Time (Hours: Minutes) | |
|------------------|--|-------------------------------|------------|
| | | This Step | Cumulative |
| 5 | Remove Additional GUI Sessions | 00:05 | 00:05 |
| 6 | Full Database Backup | 00:30 | 00:35 |
| 7 or 9 | Major Upgrade DR NOAMP NE or Minor Upgrade DR NOAMP NE | 03:30 | 04:05 |

Table 6: Primary NOAMP Upgrade Procedures for Virtual machine Configurations

| Procedure Number | Procedure Title | Elapsed Time (Hours: Minutes) | |
|------------------|--|-------------------------------|------------|
| | | This Step | Cumulative |
| 8 or 10 | Major Upgrade Primary NOAMP NE or Minor Upgrade Primary NOAMP NE | 03:30 | 03:30 |

***NOTE:** Times estimates are based on a large Database.

3.5 Upgrade Acceptance Overview

Table 7: Upgrade Acceptance overview

| Procedure Number | Procedure Title | Elapsed Time (Hours: Minutes) | |
|------------------|-----------------|-------------------------------|------------|
| | | This Step | Cumulative |
| 20 | Accept Upgrade | 00:20 | 00:20 |

Chapter 4. Upgrade From UDR-14.X.X VM to UDR-14.2.0 VM

Major Upgrade:

Note: Major Upgrade from OL6 to OL8 is not supported for UDR 14.2.x.

Major upgrade is performed using Dual Image Upgrade (DIU) procedure provided by the TPD. UDR 12.7.0.6 based on OL6 TPD whereas UDR 14.1.0.0.0 is based on OL8 TPD. There are restrictions on OL to upgrade directly from OL6 to OL8. Hence DIU procedures utilize 2 hop upgrades with 1st hop from OL6 to OL7 and 2nd hop from OL7 to OL8. For the 1st hop, TPD DIU ISO is used and UDR DIU ISO would be used for 2nd hop.

Acceptance of upgrade needs to be done twice once at each hop and reject/rollback can be done at each hop. Reject/rollback at both hops will bring the server back to OL6 TPD i.e. UDR 12.7.0.6

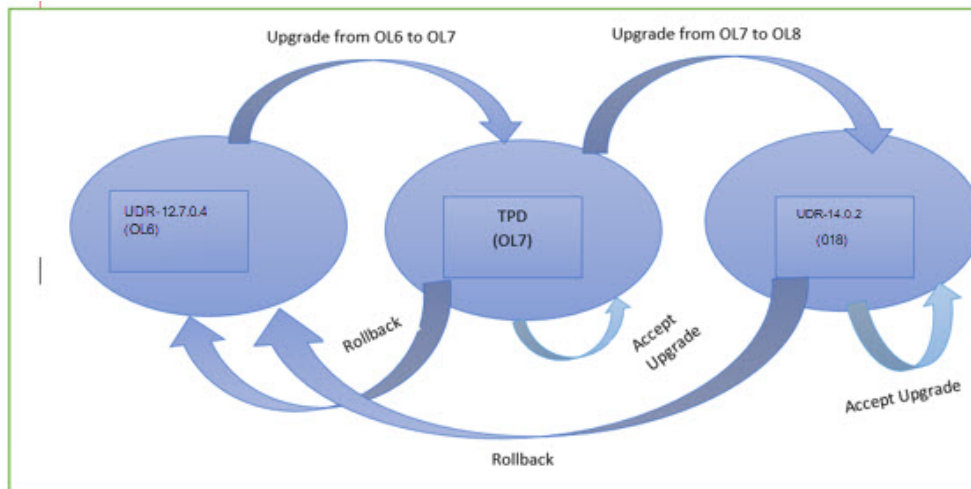


Figure 2: OL6 to OL8 upgrade diagram

Minor Upgrade:

Minor upgrade is performed using single hop upgrade procedure provided by TPD.

This procedure will upgrade the server from OL8 based TPD server to OL8 based TPD server.

Example: From UDR-14.0.0.0.0 to UDR-14.2.0.0.0

& From UDR-14.0.1.0.0 to UDR-14.2.0.0.0

& From UDR-14.0.2.0.0 to UDR-14.2.0.0.0

& From UDR-14.1.0.0.0 to UDR-14.2.0.0.0

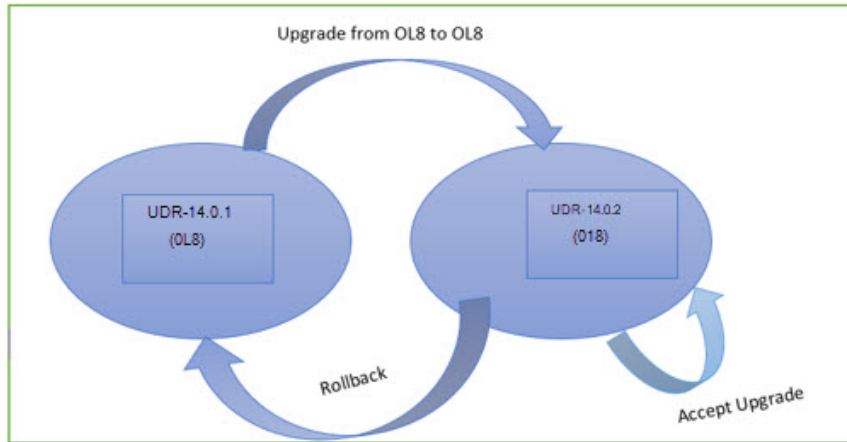


Figure 3: OL8 to OL8 upgrade diagram

4.1 Primary NOAMP/DR NOAMP Upgrade Execution

Open A Service Ticket at My Oracle Support (H) and inform them of your plans to upgrade this system before performing this upgrade.

Before upgrade, perform the system Health Check Appendix B.

This check ensures that the system to be upgraded is in an upgrade-ready state. Performing the system health check determines which alarms are present in the system and if upgrade can proceed with alarms.

**** **WARNING** ****

If there are servers in the system, which are not in the Normal state, put these servers into the Normal or the Application Disabled state before the upgrade process is started.

The sequence of upgrade is designed so that servers providing support services to other servers are upgraded first.

**** **WARNING** ****

Read the following notes on this procedure:

Procedure completion times listed in this document are estimates. Times may vary due to differences in database size, user experience, and user preparation.

Where possible, command response outputs are shown as accurately as possible. Exceptions are as follows:

- Session banner information such as time and date.
- System-specific configuration information such as hardware locations, IP addresses and hostnames.
- ANY information marked with XXXX or YYYY. Where appropriate, instructions are provided to determine what output is expected in place of XXXX or YYYY
- Aesthetic differences unrelated to functionality such as browser attributes: window size, colors, toolbars, and button layouts.

After completing each step and at each point where data is recorded from the screen, the technician performing the upgrade must mark the provided checkbox.

For procedures which are performed multiple times, a mark can be made below the checkbox (in the same column) for each additional iteration of the step.

Retention of captured data is required for future support references.

4.2 Perform Health Check (Pre Upgrade)

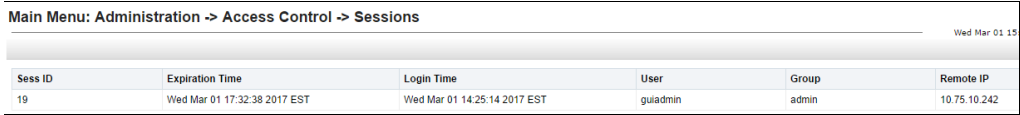
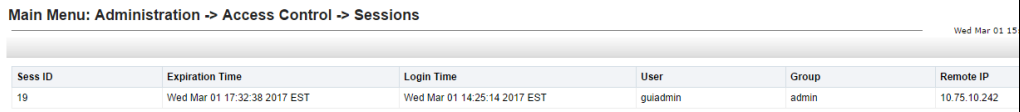
Procedure 4: Health Check (Pre Upgrade)

| | |
|-----------------------------|--|
| 1. <input type="checkbox"/> | <p>This procedure is part of software upgrade preparation and is used to determine the health and status of the Oracle Communications User Data Repository network and servers. This may be performed multiple times but must also be performed at least once 24 to 36 hours before the start of a maintenance window.</p> <p>Perform Health Check procedures as specified in Appendix B.</p> |
|-----------------------------|--|

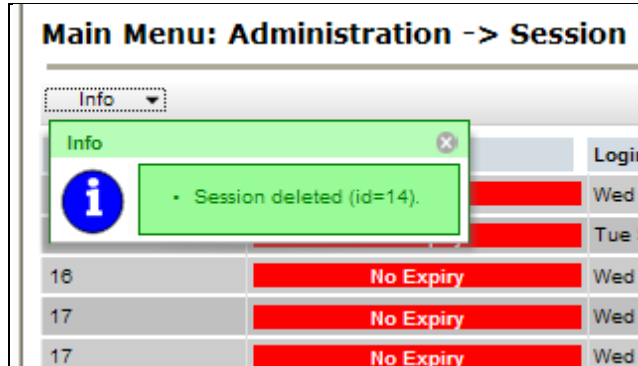
4.3 Remove Additional GUI Sessions

Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.

Procedure 5: Remove Additional GUI Sessions

| Step | Procedure | Result |
|-----------------------------|--|--|
| 1. <input type="checkbox"/> | Using the VIP address, access the primary NOAMP GUI. | Access the primary NOAMP GUI as specified in Appendix A . |
| 2. <input type="checkbox"/> | Active NOAMP VIP: Navigate to Main Menu → Administration → Access Control → Sessions |  |
| 3. <input type="checkbox"/> | Active NOAMP VIP: In the right panel, the list of active GUI sessions connected to the active NOAMP server displays. |  |

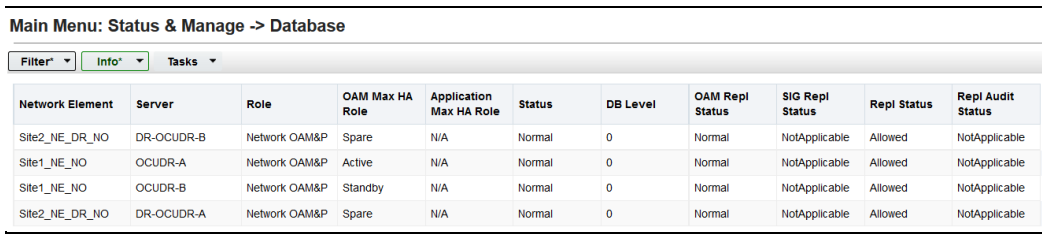
| Step | Procedure | Result | | | | | | | | | | | | |
|-----------------------------|---|--|----------|-----------------|--------------|------|-------|------------------------------|------------------------------|------------------------------|------------------------------|----------|-------|--------------|
| 4. <input type="checkbox"/> | <p>Active NOAMP VIP:</p> <p>The User ID and Remote IP address of each session are displayed as seen on the right.</p> <p>Every attempt is made to contact users not engaged in this Upgrade activity and request that they discontinue GUI access until the upgrade activity has completed.</p> | <div><div>Main Menu: Administration -> Access Control -> Sessions</div><div><div>Wed Mar 01 15:19</div><table><tr><th>Sess ID</th><th>Expiration Time</th><th>Login Time</th><th>User</th><th>Group</th><th>Remote IP</th></tr><tr><td>19</td><td>Wed Mar 01 17:32:38 2017 EST</td><td>Wed Mar 01 14:25:14 2017 EST</td><td>guiadmin</td><td>admin</td><td>10.75.10.242</td></tr></table></div></div> | Sess ID | Expiration Time | Login Time | User | Group | Remote IP | 19 | Wed Mar 01 17:32:38 2017 EST | Wed Mar 01 14:25:14 2017 EST | guiadmin | admin | 10.75.10.242 |
| Sess ID | Expiration Time | Login Time | User | Group | Remote IP | | | | | | | | | |
| 19 | Wed Mar 01 17:32:38 2017 EST | Wed Mar 01 14:25:14 2017 EST | guiadmin | admin | 10.75.10.242 | | | | | | | | | |
| 5. <input type="checkbox"/> | <p>Active NOAMP VIP:</p> <p>If unable to identify or contact the session owners, sessions not related to the upgrade activity may be selected and deleted as follows:</p> <ol style="list-style-type: none">1. Select the session for deletion with the cursor.2. In the bottom left of the right panel, click Delete.3. Click OK. | <div><div>Main Menu: Administration -> Access Control -> Sessions</div><div><div></div><table><tr><th>Sess ID</th><th>Expiration Time</th><th>Login Time</th><th>User</th></tr><tr><td>19</td><td>Wed Mar 01 17:32:38 2017 EST</td><td>Wed Mar 01 14:25:14 2017 EST</td><td>guiadmin</td></tr></table></div></div> <div><div><div>Delete</div></div></div> <div><div>10.75.183.215 says:</div><div>Delete user session(s): 19?</div><div><input type="checkbox"/> Prevent this page from creating additional dialogs.</div><div><div>OK</div><div>Cancel</div></div></div> <p>NOTE: The Session screen prevents you from deleting the session users are connected to. If attempting to do so by accident, a message may be received in the Banner area stating Logout to delete your own session (id=xx).</p> | Sess ID | Expiration Time | Login Time | User | 19 | Wed Mar 01 17:32:38 2017 EST | Wed Mar 01 14:25:14 2017 EST | guiadmin | | | | |
| Sess ID | Expiration Time | Login Time | User | | | | | | | | | | | |
| 19 | Wed Mar 01 17:32:38 2017 EST | Wed Mar 01 14:25:14 2017 EST | guiadmin | | | | | | | | | | | |

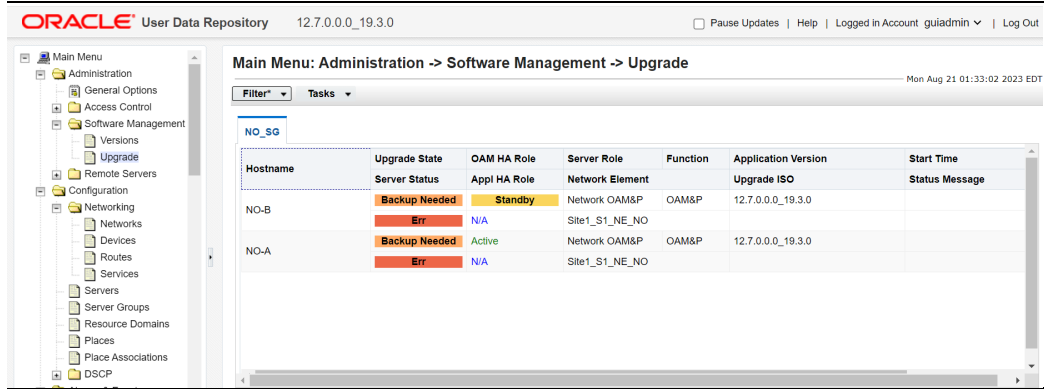
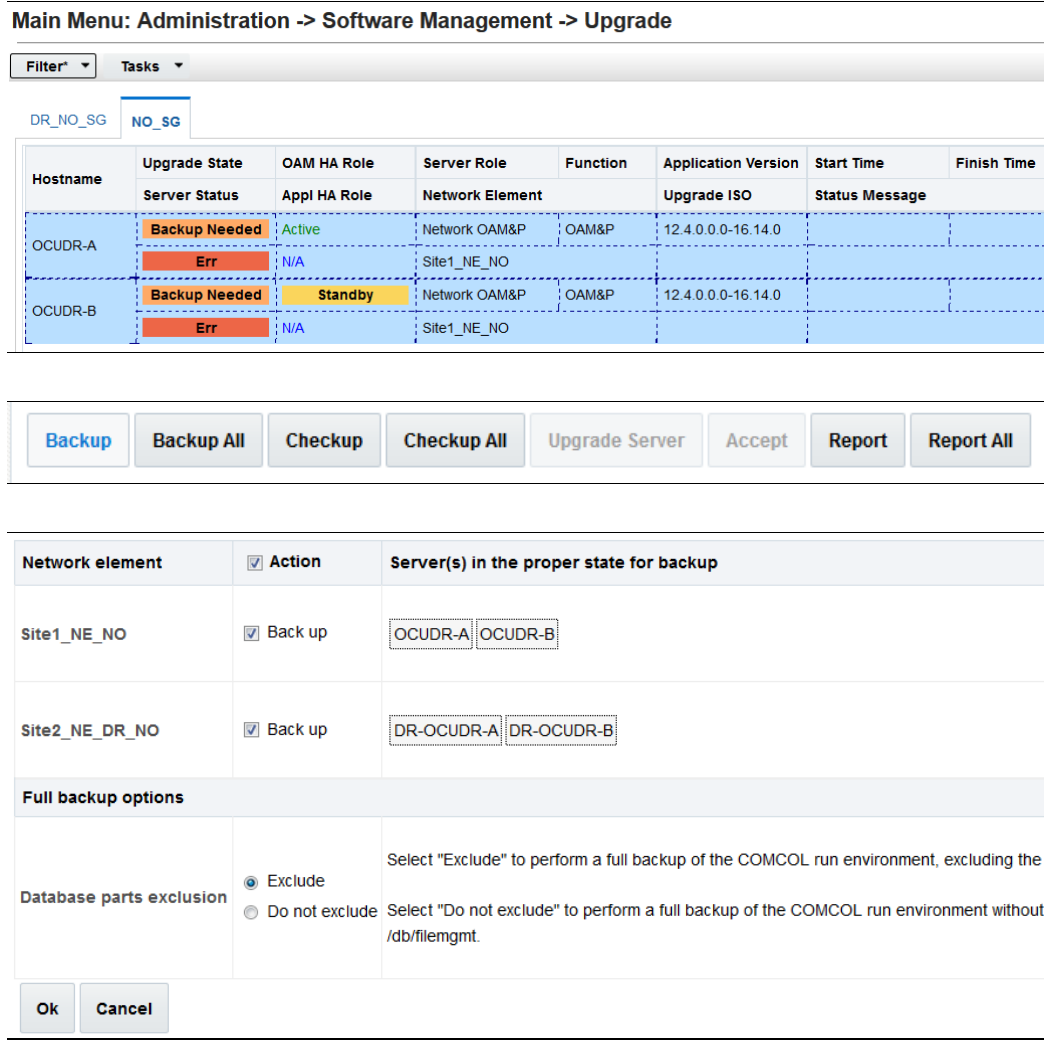
| Step | Procedure | Result |
|--|--|---|
| 6. <input type="checkbox"/> | Active NOAMP VIP: A confirmation message displays in the Info tab indicating the session ID which was deleted. |  <p>The screenshot shows the 'Main Menu: Administration -> Session' interface. An 'Info' tab is selected, displaying a green message box that says 'Session deleted (id=14)'. Below the message, there is a table with columns for session ID, expiry, and date. The table shows three rows, all with 'No Expiry' and 'Wed'.</p> |
| 7. <input type="checkbox"/> | Active NOAMP VIP: Delete any additional GUI sessions as needed. | Repeat Steps 5 and 6 of this Procedure for each additional GUI session to be deleted. |
| THIS PROCEDURE HAS BEEN COMPLETED | | |

4.4 Full Database Backup (all servers)

This procedure is part of software upgrade preparation and is used to conduct a full backup of the COMCOL run environment on every server. This backup is used in the event of a backout or rollback of the software release.

Procedure 6: Full Database Backup

| Step | Procedure | Result |
|-----------------------------|---|--|
| 1. <input type="checkbox"/> | Using the VIP address, access the primary NOAMP GUI. | Access the primary NOAMP GUI as specified in Appendix A . |
| 2. <input type="checkbox"/> | Active NOAMP VIP: Navigate to Main Menu → Status & Manage → Database |  <p>The screenshot shows the 'Main Menu: Status & Manage -> Database' interface. It includes a table with columns: Network Element, Server, Role, OAM Max HA Role, Application Max HA Role, Status, DB Level, OAM Repl Status, SIG Repl Status, Repl Status, and Repl Audit Status. The table contains four rows of data.</p> |
| 3. <input type="checkbox"/> | Active NOAMP VIP: Record the names of all servers. | Using the information provided in Section 3.1.2 (<i>Logins, Passwords and Site Information</i>) record the names of all servers. NOTE: The full backup on every server can be done from the NOAMP GUI. |

| Step | Procedure | Result |
|-----------------------------|--|---|
| 4. <input type="checkbox"/> | <p>Active NOAMP VIP: Navigate to Main Menu → Administration → Software Management → Upgrade</p> <p>Backup the COMCOL run environment</p> |  |
| 5. <input type="checkbox"/> | <p>Active NOAMP VIP: Click Backup All at left bottom of the screen; the full backups begin.</p> <p>After clicking backup, an additional screen opens.</p> <p>Default is to exclude the database parts. If the database parts are included, then the backup takes longer and produce larger backup files in /var/TKLC/db/file mgmt. They are not required for a full backup.</p> <p>Click OK to begin the backup.</p> |  |

| Step | Procedure | Result | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-----------------------------------|--|---|-------------------------|---------------------------|---------------------|------------------------|-----------------|---------------------|----------------|-------------|---|-------------------------|--------------|-------------------------|-------------------------|-------------|------------------------|-----------------|---------|-------------------------------|--------|---------------|-------|------------------|--|--|--|----------------|-----|-------------|--|--|--|--|---------|-------------------------------|---------|---------------|-------|------------------|--|--|--|----------------|-----|-------------|--|--|--|--|----|----------|------|------------|---------|----------|----|---------|-------------------------|---------|------------------------|----------------|----|------------|-------------------------|-----------|---------------------------|-----------------|----|------------|-------------------------|-----------|---------------------------|-----------------|---|---------|-------------------------|-----------|------------------------|-----------------|----|------|--------|------------|-------------|--------|----------------|----------|---|-------------------------|-----------|-------------------------|-------------------------|---|------------------------|-----------------|
| 6. <input type="checkbox"/> | <p>Active NOAMP VIP: The Server Status indicates Backup in Progress</p> <p>The progress of the full backups can be viewed in the Tasks box, as well as from the Status & Manage->Tasks->Active Tasks screen.</p> <p>As each full backup completes, its task updates to indicate its success or failure.</p> <p>When all full backup tasks finish successfully, this procedure is complete.</p> | <div><div><div><div><div><div></div><div>Filter*</div></div><div>Tasks</div></div><div><div>DR_NO_SG</div><div>NO_SG</div></div><table><thead><tr><th>Hostname</th><th>Upgrade State</th><th>OAM HA Role</th><th>Server Role</th><th>Function</th><th>Application Version</th><th>Start Time</th><th>Finish Time</th></tr><tr><th></th><th>Server Status</th><th>Appl HA Role</th><th>Network Element</th><th></th><th>Upgrade ISO</th><th>Status Message</th><th></th></tr></thead><tbody><tr><td>OCUDR-A</td><td><div>Backup In Progress</div></td><td>Active</td><td>Network OAM&P</td><td>OAM&P</td><td>12.4.0.0-16.14.0</td><td></td><td></td></tr><tr><td></td><td><div>Err</div></td><td>N/A</td><td>Site1_NE_NO</td><td></td><td></td><td></td><td></td></tr><tr><td>OCUDR-B</td><td><div>Backup In Progress</div></td><td>Standby</td><td>Network OAM&P</td><td>OAM&P</td><td>12.4.0.0-16.14.0</td><td></td><td></td></tr><tr><td></td><td><div>Err</div></td><td>N/A</td><td>Site1_NE_NO</td><td></td><td></td><td></td><td></td></tr></tbody></table></div></div><div><div>Tasks</div><table><thead><tr><th>ID</th><th>Hostname</th><th>Name</th><th>Task State</th><th>Details</th><th>Progress</th></tr></thead><tbody><tr><td>47</td><td>OCUDR-B</td><td>Pre-upgrade full backup</td><td>running</td><td>Full backup on OCUDR-B</td><td><div>10%</div></td></tr><tr><td>75</td><td>DR-OCUDR-A</td><td>Pre-upgrade full backup</td><td>completed</td><td>Full backup on DR-OCUDR-A</td><td><div>100%</div></td></tr><tr><td>47</td><td>DR-OCUDR-B</td><td>Pre-upgrade full backup</td><td>completed</td><td>Full backup on DR-OCUDR-B</td><td><div>100%</div></td></tr><tr><td>0</td><td>OCUDR-A</td><td>Pre-upgrade full backup</td><td>completed</td><td>Full backup on OCUDR-A</td><td><div>100%</div></td></tr></tbody></table></div><div><div><div><div><div></div><div>Filter*</div></div><div></div></div><div><div>OCUDR-A</div><div>OCUDR-B</div><div>DR-OCUDR-A</div><div>DR-OCUDR-B</div></div><table><thead><tr><th>ID</th><th>Name</th><th>Status</th><th>Start Time</th><th>Update Time</th><th>Result</th><th>Result Details</th><th>Progress</th></tr></thead><tbody><tr><td>0</td><td>Pre-upgrade full backup</td><td>completed</td><td>2018-05-14 05:24:21 EDT</td><td>2018-05-14 05:24:38 EDT</td><td>0</td><td>Full backup on OCUDR-A</td><td><div>100%</div></td></tr></tbody></table></div><div>Mon May 14 05:26:32 2018 EDT</div></div></div> | Hostname | Upgrade State | OAM HA Role | Server Role | Function | Application Version | Start Time | Finish Time | | Server Status | Appl HA Role | Network Element | | Upgrade ISO | Status Message | | OCUDR-A | <div>Backup In Progress</div> | Active | Network OAM&P | OAM&P | 12.4.0.0-16.14.0 | | | | <div>Err</div> | N/A | Site1_NE_NO | | | | | OCUDR-B | <div>Backup In Progress</div> | Standby | Network OAM&P | OAM&P | 12.4.0.0-16.14.0 | | | | <div>Err</div> | N/A | Site1_NE_NO | | | | | ID | Hostname | Name | Task State | Details | Progress | 47 | OCUDR-B | Pre-upgrade full backup | running | Full backup on OCUDR-B | <div>10%</div> | 75 | DR-OCUDR-A | Pre-upgrade full backup | completed | Full backup on DR-OCUDR-A | <div>100%</div> | 47 | DR-OCUDR-B | Pre-upgrade full backup | completed | Full backup on DR-OCUDR-B | <div>100%</div> | 0 | OCUDR-A | Pre-upgrade full backup | completed | Full backup on OCUDR-A | <div>100%</div> | ID | Name | Status | Start Time | Update Time | Result | Result Details | Progress | 0 | Pre-upgrade full backup | completed | 2018-05-14 05:24:21 EDT | 2018-05-14 05:24:38 EDT | 0 | Full backup on OCUDR-A | <div>100%</div> |
| Hostname | Upgrade State | OAM HA Role | Server Role | Function | Application Version | Start Time | Finish Time | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Server Status | Appl HA Role | Network Element | | Upgrade ISO | Status Message | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-A | <div>Backup In Progress</div> | Active | Network OAM&P | OAM&P | 12.4.0.0-16.14.0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | <div>Err</div> | N/A | Site1_NE_NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-B | <div>Backup In Progress</div> | Standby | Network OAM&P | OAM&P | 12.4.0.0-16.14.0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | <div>Err</div> | N/A | Site1_NE_NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ID | Hostname | Name | Task State | Details | Progress | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 47 | OCUDR-B | Pre-upgrade full backup | running | Full backup on OCUDR-B | <div>10%</div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 75 | DR-OCUDR-A | Pre-upgrade full backup | completed | Full backup on DR-OCUDR-A | <div>100%</div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 47 | DR-OCUDR-B | Pre-upgrade full backup | completed | Full backup on DR-OCUDR-B | <div>100%</div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | OCUDR-A | Pre-upgrade full backup | completed | Full backup on OCUDR-A | <div>100%</div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ID | Name | Status | Start Time | Update Time | Result | Result Details | Progress | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Pre-upgrade full backup | completed | 2018-05-14 05:24:21 EDT | 2018-05-14 05:24:38 EDT | 0 | Full backup on OCUDR-A | <div>100%</div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 7. <input type="checkbox"/> | <p>Active NOAMP VIP: Navigate to Main Menu -> Administration -> Software Management -> Upgrade</p> <p>Click Tasks dropdown.</p> | <div><div><div><div><div></div><div>Filter*</div></div><div></div></div><div><div>OCUDR-A</div><div>OCUDR-B</div><div>DR-OCUDR-A</div><div>DR-OCUDR-B</div></div><table><thead><tr><th>ID</th><th>Name</th><th>Status</th><th>Start Time</th><th>Update Time</th><th>Result</th><th>Result Details</th><th>Progress</th></tr></thead><tbody><tr><td>0</td><td>Pre-upgrade full backup</td><td>completed</td><td>2018-05-14 05:24:21 EDT</td><td>2018-05-14 05:24:38 EDT</td><td>0</td><td>Full backup on OCUDR-A</td><td><div>100%</div></td></tr></tbody></table></div><div>Mon May 14 05:26:32 2018 EDT</div></div> <p>When complete, Progress should display 100%.</p> | ID | Name | Status | Start Time | Update Time | Result | Result Details | Progress | 0 | Pre-upgrade full backup | completed | 2018-05-14 05:24:21 EDT | 2018-05-14 05:24:38 EDT | 0 | Full backup on OCUDR-A | <div>100%</div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ID | Name | Status | Start Time | Update Time | Result | Result Details | Progress | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Pre-upgrade full backup | completed | 2018-05-14 05:24:21 EDT | 2018-05-14 05:24:38 EDT | 0 | Full backup on OCUDR-A | <div>100%</div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| THIS PROCEDURE HAS BEEN COMPLETED | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

4.5 Upgrade from UDR-14.0.0 to UDR-14.2.0 and 14.0.1 to 14.2.0 & 14.0.2 to 14.2.0 (Primary NOAMP/DR NOAMP)

4.5.1 Upgrade DR NOAMP NE

Upgrade: Upgrade from OL8 based TPD server to OL8 based server

Supported upgrade paths are: From 14.0.0 to 14.2.0 and

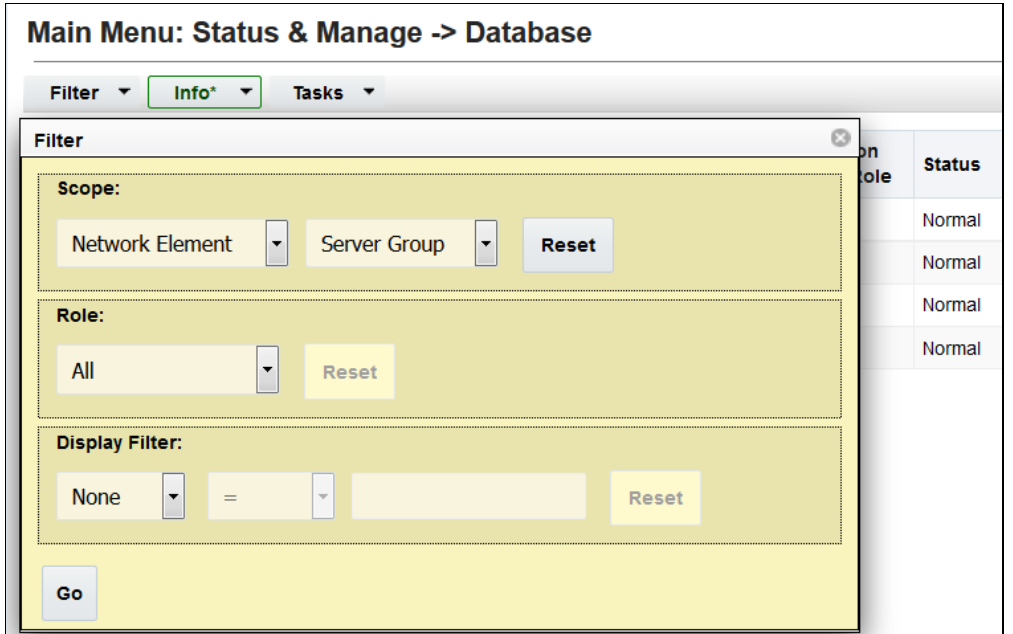
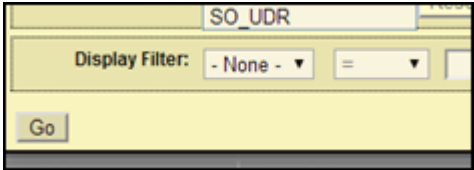
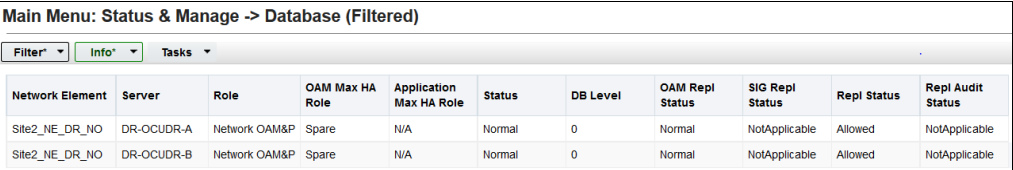
From 14.0.1 to 14.2.0 and

From 14.0.2 to 14.2.0

From 14.1.0 to 14.2.0

Procedure 7: Minor Upgrade DR NOAMP NE

| Step | Procedure | Result | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-----------------------------|---|--|-----------------|-------------------------|--------|-----------------|-------------------------|-----------------|-------------|-------------------|-----------------|-------------|-------------------|----------------|------------|---------------|-------|-----|--------|---|--------|---------------|---------|---------------|-------------|---------|---------------|--------|-----|--------|---|--------|---------------|---------|---------------|-------------|---------|---------------|---------|-----|--------|---|--------|---------------|---------|---------------|----------------|------------|---------------|-------|-----|--------|---|--------|---------------|---------|---------------|
| 1. <input type="checkbox"/> | Using the VIP address, access the primary NOAMP GUI. | Access the primary NOAMP GUI as specified in Appendix A . | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2. <input type="checkbox"/> | Active NOAMP VIP: Navigate to Main Menu → Status & Manage → Database | <div><div>Main Menu: Status & Manage -> Database</div><div><div>Filter*<div>Info*</div>Tasks</div><table><tr><th>Network Element</th><th>Server</th><th>Role</th><th>OAM Max HA Role</th><th>Application Max HA Role</th><th>Status</th><th>DB Level</th><th>OAM Repl Status</th><th>SIG Repl Status</th><th>Repl Status</th><th>Repl Audit Status</th></tr><tr><td>Site2_NE_DR_NO</td><td>DR-OCUDR-B</td><td>Network OAM&P</td><td>Spare</td><td>N/A</td><td>Normal</td><td>0</td><td>Normal</td><td>NotApplicable</td><td>Allowed</td><td>NotApplicable</td></tr><tr><td>Site1_NE_NO</td><td>OCUDR-A</td><td>Network OAM&P</td><td>Active</td><td>N/A</td><td>Normal</td><td>0</td><td>Normal</td><td>NotApplicable</td><td>Allowed</td><td>NotApplicable</td></tr><tr><td>Site1_NE_NO</td><td>OCUDR-B</td><td>Network OAM&P</td><td>Standby</td><td>N/A</td><td>Normal</td><td>0</td><td>Normal</td><td>NotApplicable</td><td>Allowed</td><td>NotApplicable</td></tr><tr><td>Site2_NE_DR_NO</td><td>DR-OCUDR-A</td><td>Network OAM&P</td><td>Spare</td><td>N/A</td><td>Normal</td><td>0</td><td>Normal</td><td>NotApplicable</td><td>Allowed</td><td>NotApplicable</td></tr></table></div></div> | Network Element | Server | Role | OAM Max HA Role | Application Max HA Role | Status | DB Level | OAM Repl Status | SIG Repl Status | Repl Status | Repl Audit Status | Site2_NE_DR_NO | DR-OCUDR-B | Network OAM&P | Spare | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable | Site1_NE_NO | OCUDR-A | Network OAM&P | Active | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable | Site1_NE_NO | OCUDR-B | Network OAM&P | Standby | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable | Site2_NE_DR_NO | DR-OCUDR-A | Network OAM&P | Spare | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable |
| Network Element | Server | Role | OAM Max HA Role | Application Max HA Role | Status | DB Level | OAM Repl Status | SIG Repl Status | Repl Status | Repl Audit Status | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Site2_NE_DR_NO | DR-OCUDR-B | Network OAM&P | Spare | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Site1_NE_NO | OCUDR-A | Network OAM&P | Active | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Site1_NE_NO | OCUDR-B | Network OAM&P | Standby | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Site2_NE_DR_NO | DR-OCUDR-A | Network OAM&P | Spare | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3. <input type="checkbox"/> | Record the name of the DR NOAMP Network Element in the space provided to the right. | Using the information provided in Section 3.1.2 (<i>Logins, Passwords and Site Information</i>) record the name of the DRNOAMP Network Element in the space provided below: DR NOAMP Network Element: _____ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| Step | Procedure | Result |
|---|--|--|
| 4. <input type="checkbox"/> | Active NOAMP VIP: From the Network Element filter list, select the NE name for the DR NOAMP. |  |
| 5. <input type="checkbox"/> | Active NOAMP VIP: Click Go. |  |
| 6. <input type="checkbox"/> | Active NOAMP VIP: The list of servers associated with DR NOAMP Network Element displays. |  <p>Identify each server and its associated Role and HA Role.</p> |
| 7. <input type="checkbox"/> | Active NOAMP VIP: Record the server names appropriately in the space provided to the right. | <p>Identify the DR NOAMP server names and record them in the space provided below:</p> <p>Spare NOAMP Server: _____</p> <p>Spare NOAMP Server: _____</p> |
| <p>NOTE: For Step 8 of this Procedure, select one spare DR NOAMP.</p> <p>*** Verify the Databases are in sync using Appendix E before upgrading each spare server.</p> | | |


| Step | Procedure | Result |
|--|--|--|
| 8. <input type="checkbox"/> | Active NOAMP VIP: Upgrade server for the first spare DR NOAMP server. | Upgrade server for the first spare DR NOAMP server (identified in Step 7 of this Procedure) as specified in Appendix C.1 Upgrade Server |
| 9. <input type="checkbox"/> | Active NOAMP VIP: Upgrade server for the second spare DR NOAMP server. | Upgrade server for the second spare DR NOAMP server (identified in Step 7 of this Procedure) as specified in Appendix C.1 Upgrade Server |
| THIS PROCEDURE HAS BEEN COMPLETED | | |

4.5.2 Upgrade Primary NOAMP NE

Procedure 8: Minor Upgrade Primary NOAMP NE

| Step | Procedure | Result | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-----------------------------|---|---|-----------------|-------------------------|--------|-----------------|-------------------------|-----------------|-------------|-------------------|-----------------|-------------|-------------------|----------------|------------|---------------|-------|-----|--------|---|--------|---------------|---------|---------------|-------------|---------|---------------|--------|-----|--------|---|--------|---------------|---------|---------------|-------------|---------|---------------|---------|-----|--------|---|--------|---------------|---------|---------------|----------------|------------|---------------|-------|-----|--------|---|--------|---------------|---------|---------------|
| 1. <input type="checkbox"/> | Using the VIP address, access the primary NOAMP GUI. | Access the primary NOAMP GUI as specified in Appendix A . | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2. <input type="checkbox"/> | Active NOAMP VIP: Navigate to Main Menu → Status & Manage → Database | <div><div>Main Menu: Status & Manage -> Database</div><div><div>Filter* Info* Tasks</div><table><thead><tr><th>Network Element</th><th>Server</th><th>Role</th><th>OAM Max HA Role</th><th>Application Max HA Role</th><th>Status</th><th>DB Level</th><th>OAM Repl Status</th><th>SIG Repl Status</th><th>Repl Status</th><th>Repl Audit Status</th></tr></thead><tbody><tr><td>Site2_NE_DR_NO</td><td>DR-OCUDR-B</td><td>Network OAM&P</td><td>Spare</td><td>N/A</td><td>Normal</td><td>0</td><td>Normal</td><td>NotApplicable</td><td>Allowed</td><td>NotApplicable</td></tr><tr><td>Site1_NE_NO</td><td>OCUDR-A</td><td>Network OAM&P</td><td>Active</td><td>N/A</td><td>Normal</td><td>0</td><td>Normal</td><td>NotApplicable</td><td>Allowed</td><td>NotApplicable</td></tr><tr><td>Site1_NE_NO</td><td>OCUDR-B</td><td>Network OAM&P</td><td>Standby</td><td>N/A</td><td>Normal</td><td>0</td><td>Normal</td><td>NotApplicable</td><td>Allowed</td><td>NotApplicable</td></tr><tr><td>Site2_NE_DR_NO</td><td>DR-OCUDR-A</td><td>Network OAM&P</td><td>Spare</td><td>N/A</td><td>Normal</td><td>0</td><td>Normal</td><td>NotApplicable</td><td>Allowed</td><td>NotApplicable</td></tr></tbody></table></div></div> | Network Element | Server | Role | OAM Max HA Role | Application Max HA Role | Status | DB Level | OAM Repl Status | SIG Repl Status | Repl Status | Repl Audit Status | Site2_NE_DR_NO | DR-OCUDR-B | Network OAM&P | Spare | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable | Site1_NE_NO | OCUDR-A | Network OAM&P | Active | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable | Site1_NE_NO | OCUDR-B | Network OAM&P | Standby | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable | Site2_NE_DR_NO | DR-OCUDR-A | Network OAM&P | Spare | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable |
| Network Element | Server | Role | OAM Max HA Role | Application Max HA Role | Status | DB Level | OAM Repl Status | SIG Repl Status | Repl Status | Repl Audit Status | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Site2_NE_DR_NO | DR-OCUDR-B | Network OAM&P | Spare | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Site1_NE_NO | OCUDR-A | Network OAM&P | Active | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Site1_NE_NO | OCUDR-B | Network OAM&P | Standby | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Site2_NE_DR_NO | DR-OCUDR-A | Network OAM&P | Spare | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3. <input type="checkbox"/> | Record the name of the primary NOAMP Network Element in the space provided to the right. | Using the information provided in Section 3.1.2 (<i>Logins, Passwords and Site Information</i>) record the name of the primary NOAMP Network Element in the space provided below: Primary NOAMP Network Element: _____ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| Step | Procedure | Result |
|---|--|--|
| 4. <input type="checkbox"/> | Active NOAMP VIP: From the Network Element filter list, select the Network Element name for the primary NOAMP. | <div><div><div><div><div><div>Filter</div><div>Info*</div><div>Tasks</div></div><div><div>Filter</div><div><div>Scope:</div><div><div>Network Element</div><div>Server Group</div><div>Reset</div></div></div><div><div>Role:</div><div><div>All</div><div>Reset</div></div></div><div><div>Display Filter:</div><div><div>None</div><div>=</div><div></div><div>Reset</div></div></div><div><div>Go</div></div></div></div></div><div><div>on</div><div>role</div><div>Status</div><div>Normal</div><div>Normal</div><div>Normal</div><div>Normal</div></div></div></div> |
| 5. <input type="checkbox"/> | Active NOAMP VIP: Click Go located on the right end of the filter bar. | <div><div>Display Filter</div><div>Go</div></div> |
| 6. <input type="checkbox"/> | Active NOAMP VIP: The list of servers associated with the primary NOAMP Network Element displays. Identify each server and its associated Role and HA Role. | <div><div><div><div><div>Filter*</div><div>Info*</div><div>Tasks</div></div><div><div>Network Element</div><div>Server</div><div>Role</div><div>OAM Max HA Role</div><div>Application Max HA Role</div><div>Status</div><div>DB Level</div><div>OAM Repl Status</div><div>SIG Repl Status</div><div>Repl Status</div><div>Repl Audit Status</div></div><div><div>Site1_NE_NO</div><div>OCUDR-A</div><div>Network OAM&P</div><div>Active</div><div>N/A</div><div>Normal</div><div>0</div><div>Normal</div><div>NotApplicable</div><div>Allowed</div><div>NotApplicable</div></div><div><div>Site1_NE_NO</div><div>OCUDR-B</div><div>Network OAM&P</div><div>Standby</div><div>N/A</div><div>Normal</div><div>0</div><div>Normal</div><div>NotApplicable</div><div>Allowed</div><div>NotApplicable</div></div></div></div></div> |
| 7. <input type="checkbox"/> | Active NOAMP VIP: Record the server names appropriately in the space provided to the right. | Identify the primary NOAMP server names and record them in the space provided below: Standby NOAMP: _____ Active NOAMP: _____ |
| NOTE: Step 8 is for the STANDBY NOAMP ONLY. | | |

| Step | Procedure | Result |
|--|--|--|
| 8. <input type="checkbox"/> | Active NOAMP VIP: Upgrade server for the standby NOAMP server. | Upgrade server for the standby NOAMP server (identified in Step 7 of this Procedure) as specified in Appendix C.1 Upgrade Server |
|  !! WARNING !! STEP 8 MUST BE COMPLETED BEFORE CONTINUING ON TO STEP 9. *** Verify the Databases are in sync using Appendix F before upgrading the active server | | |
| 9. <input type="checkbox"/> | Active NOAMP VIP: Upgrade server for the active NOAMP server. | Upgrade server for the active NOAMP server (identified in Step 7 of this Procedure) as specified in Appendix C.1 Upgrade Server. |
| THIS PROCEDURE HAS BEEN COMPLETED | | |

4.5.3 Accept/Backout upgrade of Upgrade

Prerequisite: Make sure section 4.6.1 or 4.6.2 are completed.

Please use [Appendix E](#) to accept the upgrade.

| | | |
|--|--------------|--|
|  | NOTE: | Once the upgrade is accepted for a server, that server will not be allowed to backout to previous release from which the upgrade was done |
|--|--------------|--|

Please use [chapter 7 - Recovery Procedures](#) for backout

Chapter 5. Single server upgrade

Single server configuration is used for lab setup demonstration only. This configuration does not support HA and is not intended for production network. This one server lab setup supports the ability to perform and upgrade which allows all configuration data and database records to be carried forward to the next release.

5.1 Upgrading a Single Server

| Step | Procedure | Result |
|------|--|--|
| 1. | Identify NOAMP IP Address | Identify IP Address of the single NOAMP server to be upgraded. |
| 2. | Server IMI IP (SSH): SSH to server and login as root user | Use your SSH client to connect to the server (ex. ssh, putty): <pre>ssh<server address> login as: admusr password: <enter password> Switch to root su - password: <enter password></pre> |
| 3. | Copy OL8.x Application DIU iso to "/var/TKLC/upgrade" and change the permission and then mount it in "/mnt/upgrade/" mount point | <pre># chmod 777 /var/TKLC/upgrade/UDR-14.2.0.0.0_114.43.0-x86_64-DIU.iso</pre> <pre># sudo mount /var/TKLC/upgrade/ UDR-14.2.0.0.0_114.43.0-x86_64-DIU.iso /mnt/upgrade -o loop</pre> <p>Note: Please download DIU ISO from mos and upload to server at filemgmt area using ISO Administration and then copy to path: /var/TKLC/upgrade on server to upgrade</p> |

| | | |
|----|--------------------------------|---|
| 4. | Install and then apply upgrade | <pre># alarmMgr --clear 32509;alarmMgr --clear 32500</pre> <pre># /mnt/upgrade/upgrade/diUpgrade --install --ignoreDevCheck -debug</pre> <p>Output:</p> <pre>Migrating 152 directories Migrating 845 files Migrating 1 symlinks Image install complete ##### # INSTALL COMPLETE # ##### Transitioning from 'Installing Upgrade' to 'Ready to Apply Upgrade' [root@OCUDR-DR-NOAMP-A filemgmt]#</pre> <pre># alarmMgr --clear 32509;alarmMgr --clear 32500</pre> <pre># /var/TKLC/backout/diUpgrade --apply --ignoreDevCheck -debug</pre> <p>Output:</p> <pre>[root@OCUDR-DR-NOAMP-A filemgmt]# /var/TKLC/backout/diUpgrade --apply --ignoreDevCheck -debug Resuming from state STATE_READY_TO_APPLY Transitioning from 'Ready to Apply Upgrade' to 'Applying Upgrade' ##### # APPLY INITIATED # ##### APPLY START TIME: Sat Sep 30 07:11:24 2023 EDT (11:11:24 UTC) Validating image pre-apply /mnt/upgrade/images/plat_root.gz /mnt/upgrade/images/plat_usr.gz /mnt/upgrade/images/plat_var.gz /mnt/upgrade/images/plat_var_tklc.gz</pre> <pre>Migrating 1 symlinks Enabling service upgrade... Converting from MBR to GPT Updating bootloader... Add md uuid to grub... Unmounting images... Performing reboot... Inhibiting upgrade services... Allowing upgrade services... [root@OCUDR-DR-NOAMP-A filemgmt]# login as: admusr admusr@10.75.180.18's password: Last login: Sat Sep 30 06:44:19 2023 from 10.69.110.163 OCUDR VM from OVA file ===== This system has been upgraded but the upgrade has not yet been accepted or rejected. Please accept or reject the upgrade soon. ===== [admusr@ocudr-dr-noamp-a ~]\$</pre> <p>Note: Server reboots after 'apply upgrade' finishes.</p> |
|----|--------------------------------|---|

| | | |
|----|----------------|---|
| 5. | Accept upgrade | <p>Before accepting, please make sure 'Upgrade Applied' state is shown, use below command to show the status:</p> <pre># /var/TKLC/backout/diUpgrade -status</pre> <p>Output:</p> <pre>[root@ocudr-dr-noamp-a admusr]# /var/TKLC/backout/diUpgrade --status State: Upgrade Applied Status Messages: - Performing early checks - Downloading upgrade data - Verifying image - Performing image pre-install - Configuring images - Identifying resources - Reserving image storage - Installing image - Performing image post-install - Verifying configuration sanity - Image install complete - Validating image pre-apply - Performing image pre-apply - Applying image - Performing configuration export - Performing image post-apply - Image Apply Complete [root@ocudr-dr-noamp-a admusr]#</pre> <p>Note: If we don't need to proceed further upgrade then we can reject the upgrade at this stage, using below step:</p> <pre># /var/TKLC/backout/diUpgrade -reject</pre> <p>Skip the above step if we want to continue upgrade</p> <pre># /var/TKLC/backout/diUpgrade --accept</pre> <p>Output:</p> <pre>[root@ocudr-dr-noamp-a admusr]# /var/TKLC/backout/diUpgrade --accept Resuming from state STATE_UPGRADE_APPLIED Transitioning from 'Upgrade Applied' to 'Accepting Upgrade' Enabling service rebootcheck... ##### # ACCEPT INITIATED # ##### ACCEPT START TIME: Sat Sep 30 07:21:23 2023 EDT (11:21:23 UTC) Validating image pre-accept</pre> |
|----|----------------|---|

| Step | Procedure | Result |
|-----------------------------------|-----------|---|
| | | <pre>Performing image post-accept Running postAccept() for DIUpgrade::Policy::P20TPD upgrade policy... Running postAccept() for DIUpgrade::Policy::P36APPappworks upgrade policy... Running postAccept() for DIUpgrade::Policy::P38APPawpcommon upgrade policy... Running postAccept() for DIUpgrade::Policy::P39APPdpi upgrade policy... Running postAccept() for DIUpgrade::Policy::P42APPcomagent upgrade policy... Running postAccept() for DIUpgrade::Policy::P43APPccl upgrade policy... Running postAccept() for DIUpgrade::Policy::P50APPudr upgrade policy... Creating alarm script: /tmp/vu3svF5lJl ##### # ACCEPT COMPLETE # ##### Check is rebootcheck is enabled ... Disabling service rebootcheck... Transitioning from 'Accepting Upgrade' to 'No Upgrade Available' Inhibiting upgrade services... Allowing upgrade services... Cleaning backout directory. [root@ocudr-dr-noamp-a admusr]#</pre> |
| THIS PROCEDURE HAS BEEN COMPLETED | | |

Chapter 6. Perform Health Check (Post Primary NOAM/DR NOAMP upgrade)

Procedure 9: Health Check (Post Primary NOAMP/DR NOAMP Upgrade)

| | |
|-----------------------------|---|
| 1. <input type="checkbox"/> | <p>This procedure is part of software upgrade preparation and is used to determine the health and status of the Oracle Communications User Data Repository network and servers.</p> <p>Perform Health Check procedures as specified in Appendix B.</p> |
|-----------------------------|---|

Chapter 7. Recovery Procedures

Upgrade procedure recovery issues are directed to the My Oracle Support ([Appendix I](#)). Persons performing the upgrade are familiar with these documents.

Recovery procedures are covered under the Disaster Recovery Guide. Perform this procedure only if there is a problem and it is required to revert back to the pre-upgrade version of the software.



!! WARNING !!

Do not attempt to perform these backout procedures without first contacting the My Oracle Support. Refer to Appendix J.



!! WARNING !!

Backout procedures cause traffic loss.

NOTES:

These recovery procedures are provided for the backout of an upgrade only. (that is, for the backout from a failed target release to the previously installed release).

Backout of an initial installation is not supported.

7.1 Order of Backout

The following list displays the order to backout the servers (primary and DR sites):

1. DR NOAMPs (spares)
2. Primary standby NOAMP
3. Primary active NOAMP

7.2 Backout Setup

Identify IP addresses of all servers that need to be backed out.

1. Select **Administration → Software Management → Upgrade**
2. Based on the Application Version column, identify all the hostnames that need to be backed out.
3. Select **Configuration → Servers**
4. Identify the IMI IP addresses of all the hostnames identified in step 2. These addresses are required to access the server when performing the backout.

The reason to perform a backout has a direct impact on any additional backout preparation that must be done. The backout procedure causes traffic loss.

NOTE: Verify that the two backup archive files created using the procedure in 4.4 Full Database Backup (All Servers) are present on every server that is to be backed-out.

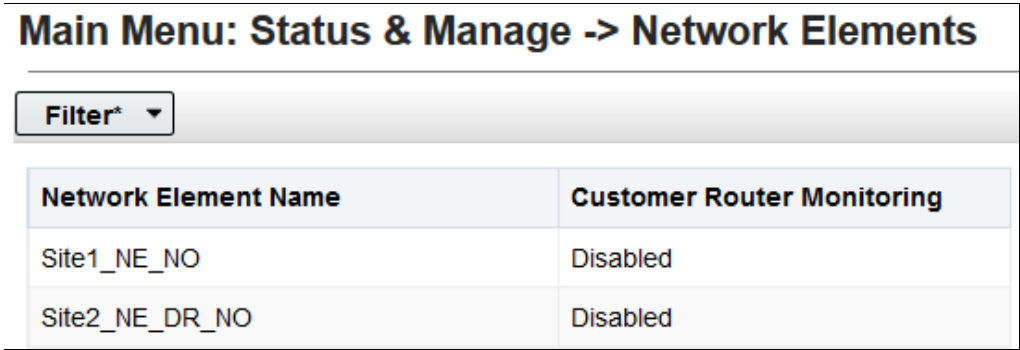
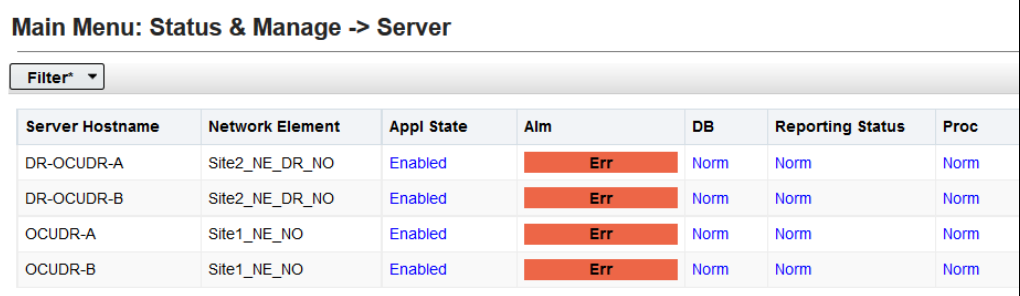
These archive files are located in the `/var/TKLC/db/filemgmt` directory and have different filenames than other database backup files.

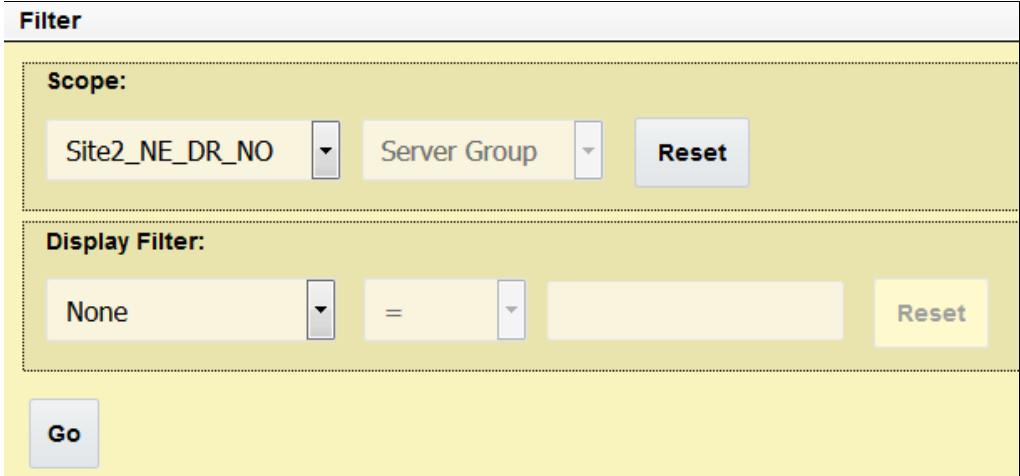
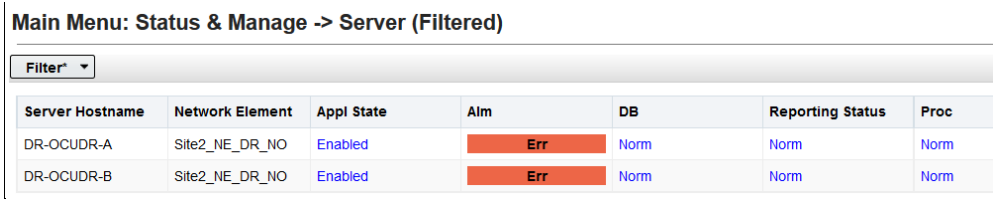
The filenames have the format:

- Backup.<application>.<server>.FullDBParts.<role>.<date_time>.UPG.tar.bz2
- Backup.<application>.<server>.FullRunEnv.<role>.<date_time>.UPG.tar.bz2

7.3 Backout of DR NOAMP NE

Procedure 10: Backout of DR NOAMP NE

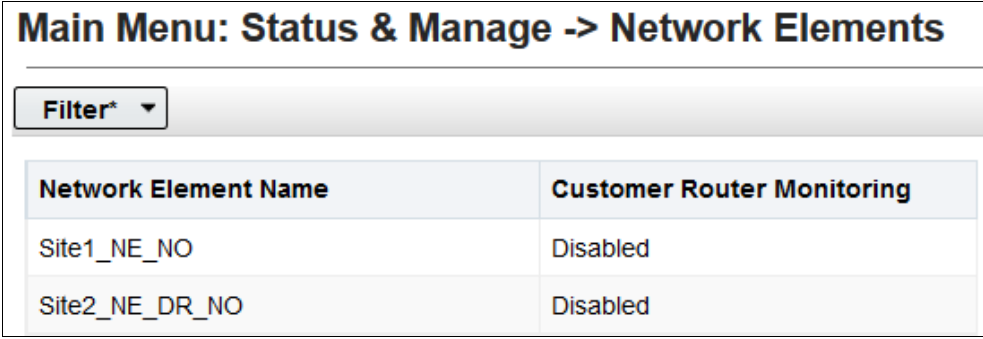
| Step | Procedure | Result |
|-----------------------------|--|--|
| 1. <input type="checkbox"/> | Using the VIP address, access the primary NOAMP GUI. | Access the primary NOAMP GUI as specified in Appendix A. |
| 2. <input type="checkbox"/> | Active NOAMP VIP: Navigate to Main Menu → Status & Manage → Network Elements |  |
| 3. <input type="checkbox"/> | Record the name of the DR NOAMP NE to be downgraded (backed out) in the space provided to the right. | Record the name of the DR NOAMP NE to be backed out. DR NOAMP NE: _____ |
| 4. <input type="checkbox"/> | Active NOAMP VIP: Navigate to Main Menu → Status & Manage → Server |  |

| Step | Procedure | Result |
|-----------------------------|--|--|
| 5. <input type="checkbox"/> | Active NOAMP VIP: 4. From the Status & Manage → Server filter list, select the name for the DR NOAMP NE. 5. Click Go . |  |
| 6. <input type="checkbox"/> | Active NOAMP VIP: The list of servers associated with the DR NOAMP NE displays. Identify each server hostname and its associated Reporting Status and Appl State. |  |
| 7. <input type="checkbox"/> | Using the list of servers associated with the DR NOAMP NE in Step 6, record the server names associated with the DR NOAMP NE. | Identify the DR NOAMP server names and record them in the space provided below: Standby DR NOAMP: _____ Active DR NOAMP: _____ |
| 8. <input type="checkbox"/> | Active NOAMP VIP: Perform Appendix D for the first spare—DR NOAMP server | Backout the target release for the spare DR NOAMP server as specified in Appendix D (Backout of a Server). |

| Step | Procedure | Result |
|--|--|--|
| 9. <input type="checkbox"/> | Active NOAMP VIP: Perform Appendix D for the second spare—DR NOAMP server. | Backout the target release for the spare DR NOAMP Server as specified in Appendix D (Backout of a Server). |
| 10. <input type="checkbox"/> | Active NOAMP VIP: Perform Health Check at this time only if all servers are backed out. Otherwise, proceed with the next backout | Perform Health Check procedures (Post Backout) as specified in Appendix B , if Backout procedures have been completed for all required servers. |
| THIS PROCEDURE HAS BEEN COMPLETED | | |

7.4 Backout of Primary NOAMP NE





Procedure 11: Backout of Primary NOAMP NE

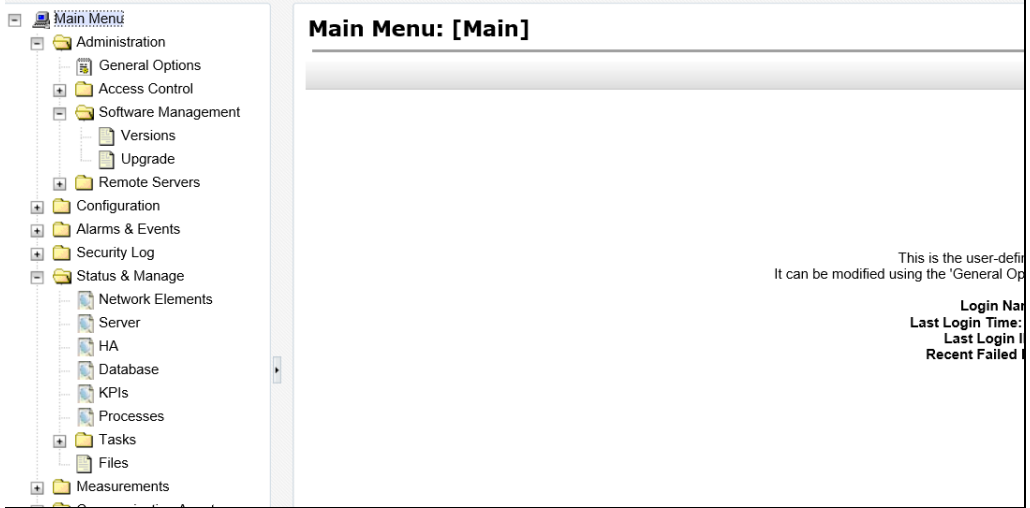
| Step | Procedure | Result |
|-----------------------------|---|---|
| 1. <input type="checkbox"/> | Using the VIP address, access the primary NOAMP GUI. | Access the primary NOAMP GUI as specified in Appendix A. |
| 2. <input type="checkbox"/> | Active NOAMP VIP: Navigate to Main Menu → Status & Manage → Network Elements |  |
| 3. <input type="checkbox"/> | Record the name of the NOAMP NE to be downgraded (backed out) in the space provided to the right. | Record the name of the primary NOAMP NE which is backed out. Primary NOAMP NE: _____ |

| Step | Procedure | Result | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-----------------------------|---|---|-----------------|-----------------|------------------|------|----|------------------|------|------------|----------------|---------|-----|------|------|------|------------|----------------|---------|-----|------|------|------|---------|-------------|---------|-----|------|------|------|---------|-------------|---------|-----|------|------|------|
| 4. <input type="checkbox"/> | Active NOAMP VIP: Navigate to Main Menu → Status & Manage → Server | <div>Main Menu: Status & Manage -> Server</div> <div><div>Filter*</div><table><tr><th>Server Hostname</th><th>Network Element</th><th>Appl State</th><th>Alm</th><th>DB</th><th>Reporting Status</th><th>Proc</th></tr><tr><td>DR-OCUDR-A</td><td>Site2_NE_DR_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr><tr><td>DR-OCUDR-B</td><td>Site2_NE_DR_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr><tr><td>OCUDR-A</td><td>Site1_NE_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr><tr><td>OCUDR-B</td><td>Site1_NE_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr></table></div> | Server Hostname | Network Element | Appl State | Alm | DB | Reporting Status | Proc | DR-OCUDR-A | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | DR-OCUDR-B | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | OCUDR-A | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm | OCUDR-B | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm |
| Server Hostname | Network Element | Appl State | Alm | DB | Reporting Status | Proc | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DR-OCUDR-A | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DR-OCUDR-B | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-A | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-B | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5. <input type="checkbox"/> | Active NOAMP VIP: 1. From the Status & Manage/ Server filter list, select the name for the primary NOAMP NE. 2. Click Go | <div><div>Filter</div><div><div>Scope:</div><div><div>Site1_NE_NO</div><div>Server Group</div><div>Reset</div></div></div><div><div>Display Filter:</div><div><div>None</div><div>=</div><div></div><div>Reset</div></div></div><div><div>Go</div></div></div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 6. <input type="checkbox"/> | Active NOAMP VIP: A list of servers associated with the primary NOAMP NE displays. Identify each server hostname and its associated Reporting Status and Appl State. | <div>Main Menu: Status & Manage -> Server (Filtered)</div> <div><div>Filter*</div><table><tr><th>Server Hostname</th><th>Network Element</th><th>Appl State</th><th>Alm</th><th>DB</th><th>Reporting Status</th><th>Proc</th></tr><tr><td>OCUDR-A</td><td>Site1_NE_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr><tr><td>OCUDR-B</td><td>Site1_NE_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr></table></div> | Server Hostname | Network Element | Appl State | Alm | DB | Reporting Status | Proc | OCUDR-A | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm | OCUDR-B | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | |
| Server Hostname | Network Element | Appl State | Alm | DB | Reporting Status | Proc | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-A | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-B | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 7. <input type="checkbox"/> | Using the list of servers associated with the primary NOAMP NE record the server names associated with the primary NOAMP NE. | Identify the primary NOAMP server names and record them in the space provided below: Standby Primary NOAMP: _____ Active Primary NOAMP: _____ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| Step | Procedure | Result |
|--|---|--|
| 8. <input type="checkbox"/> | Active NOAMP VIP: Perform Appendix D for the standby primary NOAMP server | Backout the target release for the standby primary NOAMP server as specified in Appendix D (Backout of a Server). |
| 9. <input type="checkbox"/> | Active NOAMP VIP: Perform Appendix D for the active primary NOAMP server. | Backout the target release for the active primary NOAMP server as specified in Appendix D (Backout of a Server). |
| 10. <input type="checkbox"/> | Active NOAMP VIP: Perform Health Check at this time only if all servers are backed out. | Perform Health Check procedures (Post Backout) as specified in Appendix B , if Backout procedures have been completed for all required servers. |
| THIS PROCEDURE HAS BEEN COMPLETED | | |

Appendix A. Accessing the OAM Server GUI (NOAMP)**Procedure 12: Accessing the OAM Server GUI (NOAMP)**

| Step | Procedure | Result |
|-----------------------------|--|---|
| 1. <input type="checkbox"/> | Active OAM VIP: 1. Launch Internet Explorer or other and connect to the XMI Virtual IP address (VIP) assigned to active OAM site 2. If a certificate error is received, click Proceed anyway . |  <p>There's a problem with this website's security certificate</p> <p>This might mean that someone's trying to fool you or steal any info you send to the server. You should close this site immediately.</p> <p> Go to my homepage instead</p> <p> Continue to this webpage (not recommended)</p> |
| 2. <input type="checkbox"/> | Active OAM VIP: The login screen displays. Login to the GUI using the default user and password. |  <p>The screenshot shows the Oracle System Login page. At the top is the Oracle logo. Below it is the title 'Oracle System Login' and a timestamp 'Sat Sep 30 05:00:38 2023 EDT'. The main content area is a light gray box with the heading 'Log In' and the instruction 'Enter your username and password to log in'. Below this is a message 'Failed login attempt via browser.' followed by input fields for 'Username:' and 'Password:'. There is a 'Change password' checkbox and a 'Log In' button. Below the login box, it says 'Welcome to the Oracle System Login.' and 'This application is designed to work with most modern HTML5 compliant browsers and uses both JavaScript and cookies. Please refer to the Oracle Software Web Browser Support Policy for details.' It also states 'Unauthorized access is prohibited.' At the bottom, there is a footer with trademark information and copyright notice: 'Oracle and Java are registered trademarks of Oracle Corporation and/or its affiliates. Other names may be trademarks of their respective owners. Copyright © 2010, 2023, Oracle and/or its affiliates. All rights reserved.'</p> |

| Step | Procedure | Result |
|--|--|--|
| 3. <input type="checkbox"/> | <p>Active OAM VIP: The Main Menu displays.</p> <p>Verify that the message across the top of the right panel indicates that the browser is using the VIP connected to the active OAM server.</p> |  <p>NOTE: The message may show connection to either a ACTIVE NETWORK OAMP or a SYSTEM OAM depending on the selected NE.</p> |
| THIS PROCEDURE HAS BEEN COMPLETED | | |

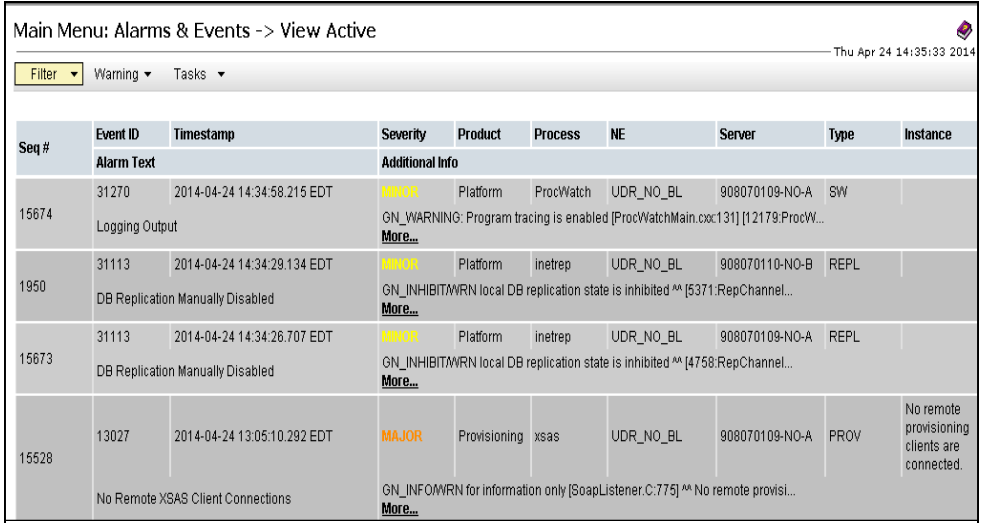
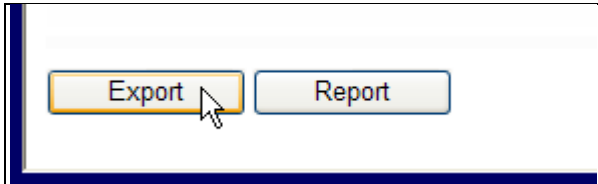
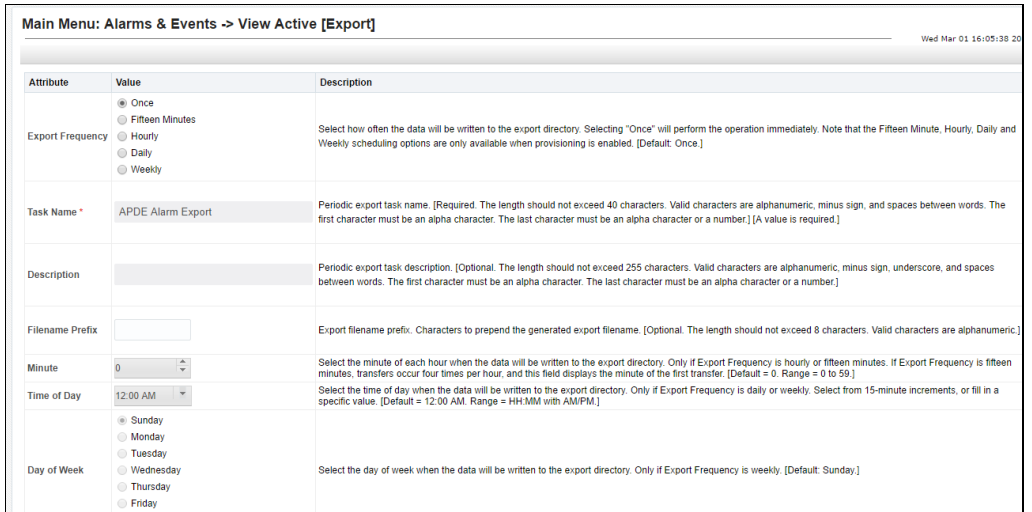
Appendix B. Health Check Procedures

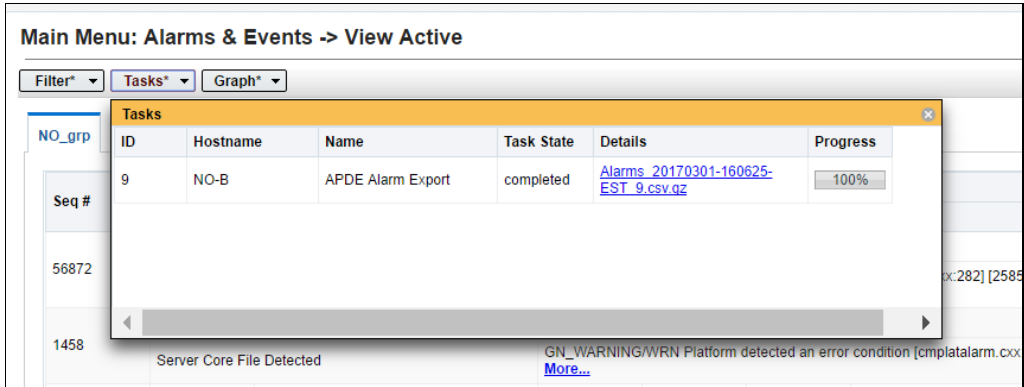
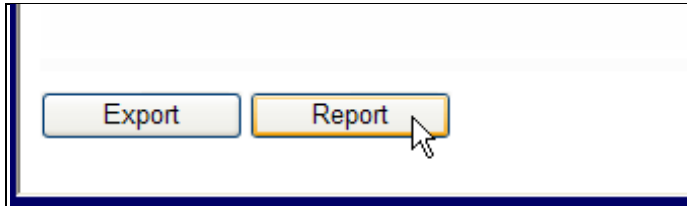
This procedure is part of software upgrade preparation and is used to determine the health and status of the Oracle Communications User Data Repository network and servers.

Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.

Procedure 13: Health Check Procedures

| Step | Procedure | Result |
|-----------------------------|---|--|
| 1. <input type="checkbox"/> | Using the VIP address, access the primary NOAMP GUI. | Access the primary NOAMP GUI as specified in Appendix A. |
| 2. <input type="checkbox"/> | Active NOAMP VIP: Navigate to Main Menu → Status & Manage → Server | <div><div><div><div><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div></div></div></div></div> |

| Step | Procedure | Result |
|-----------------------------|--|--|
| 4. <input type="checkbox"/> | Active NOAMP VIP: Navigate to Main Menu → Alarm & Events → View Active |  |
| 5. <input type="checkbox"/> | Active NOAMP VIP: Click Export . |  <p>NOTE: This step cannot be performed if global provisioning is disabled. The Export button is grayed out in that scenario.</p> |
| 6. <input type="checkbox"/> | Active NOAMP VIP: Click Ok at the bottom of the screen. Default values are fine. |  |

| Step | Procedure | Result |
|-----------------------------|---|---|
| 7. <input type="checkbox"/> | <p>Active NOAMP VIP: Click Tasks.</p> <p>The name of the exported Alarms CSV file displays in the banner at the top of the right panel.</p> |  |
| 8. <input type="checkbox"/> | <p>Active NOAMP VIP: Record the filename of Alarms CSV file generated in the space provided to the right.</p> | <p>Example: Alarms<yyyymmdd>_<hhmmss>.csv</p> <p>Alarms _____ .csv</p> |
| 9. <input type="checkbox"/> | <p>Active NOAMP VIP: Click Report.</p> |  |

| Step | Procedure | Result | | | | | | |
|------------------------------|---|--|----------------------|----------------------------|-------------|----------|----------------|----------|
| 10. <input type="checkbox"/> | Active NOAMP VIP: Active Alarms & Events Report is generated and displayed in the right panel. | <div><div>Main Menu: Alarms & Events -> View Active [Report]</div><div><div>Main Menu: Alarms & Events -> View Active [Report]</div><div>Tue May 15 07:30:21 2018 EDT</div><div><div>TIMESTAMP: 2018-05-15 06:46:56.350 EDT</div><div>NETWORK_ELEMENT: Site1_NE_NO</div><div>SERVER: OCUDR-A</div><div>SEQ_NUM: 32758</div><div>EVENT_NUMBER: 13075</div><div>SEVERITY: CRITICAL</div><div>PRODUCT: Provisioning</div><div>PROCESS: udrprov</div><div>TYPE: PROV</div><div>INSTANCE:</div><div>NAME: Provisioning Interfaces Disabled</div><div>DESCR: Provisioning Interfaces Disabled.</div><div>ERR_INFO:</div><div>GN_NOTENAB/WRN SOAP and REST interfaces are disabled</div><div>^^ [30479:ProvController.C:164]</div><div>NSECS: 1638939351337559701</div><div>ID: 0</div></div><div><div>TIMESTAMP: 2018-05-15 06:29:14.812 EDT</div><div>NETWORK_ELEMENT: Site1_NE_NO</div><div>SERVER: OCUDR-A</div><div>SEQ_NUM: 32743</div><div>EVENT_NUMBER: 32532</div><div>SEVERITY: MINOR</div><div>PRODUCT: TPD</div><div>PROCESS: cmplatalarm</div><div>TYPE: PLAT</div><div>INSTANCE:</div><div>NAME: Server Upgrade Pending Accept/Reject</div><div>DESCR: Server Upgrade Pending Accept/Reject</div><div>ERR_INFO:</div></div></div></div> | | | | | | |
| 11. <input type="checkbox"/> | Active NOAMP VIP: 1. Click Save . 2. Click Save and save to a directory. | <div><div><div><div></div></div><div>PrintSaveBack</div></div></div> | | | | | | |
| 12. <input type="checkbox"/> | Active NOAMP VIP: Navigate to Main Menu → Configuration → Network Elements | <div><div>Main Menu: Status & Manage -> Network Elements</div><div><div>Filter*</div><div><table><tr><th>Network Element Name</th><th>Customer Router Monitoring</th></tr><tr><td>Site1_NE_NO</td><td>Disabled</td></tr><tr><td>Site2_NE_DR_NO</td><td>Disabled</td></tr></table></div></div></div> | Network Element Name | Customer Router Monitoring | Site1_NE_NO | Disabled | Site2_NE_DR_NO | Disabled |
| Network Element Name | Customer Router Monitoring | | | | | | | |
| Site1_NE_NO | Disabled | | | | | | | |
| Site2_NE_DR_NO | Disabled | | | | | | | |

| Step | Procedure | Result |
|------------------------------|--|--|
| 13. <input type="checkbox"/> | Active NOAMP VIP: Navigate to Main Menu → Configuration → Server Groups | <p>Main Menu: Configuration -> Server Groups</p> |
| 14. <input type="checkbox"/> | Active NOAMP VIP: Click Report . | |
| 15. <input type="checkbox"/> | Active NOAMP VIP: A Server Group Report is generated and displayed in the right panel. | <p>Main Menu: Configuration -> Server Groups [Report]</p> |
| 16. <input type="checkbox"/> | Active NOAMP VIP: 1. Click Save 2. Click Save . | |

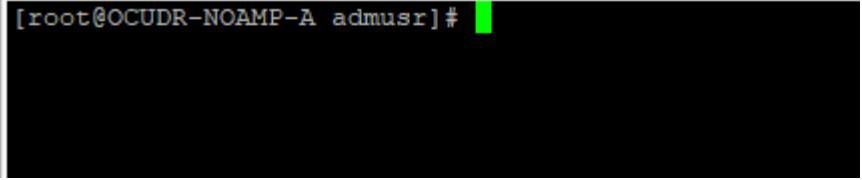
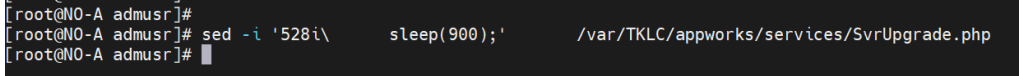
| Step | Procedure | Result | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-----------------------------------|---|--|---------------------|--------------------|---------------------|---------------------|--------------------|-----------------|-------------|-------------|---------|--------|-----|--------|---------|-------------|---------------|-----------|---------|---------|-----|--------|---------|-------------|---------------|--|------------|-------|-----|--------|------------|----------------|---------------|------------|------------|-------|-----|--------|------------|----------------|---------------|--|
| 17. <input type="checkbox"/> | Provide the saved files to the Customer Care Center for Health Check Analysis. | <p>If executing this procedure as a pre or post upgrade health check (HC1/HC2/HC3), provide the following saved files to the Customer Care Center for proper Health Check Analysis:</p> <ul style="list-style-type: none">• Active Alarms & Events Report [<i>Appendix B</i>, Step 7 and 10]• Network Elements Report [<i>Appendix B</i>, Step 12]• Server Group Report [<i>Appendix B</i>, Step 15] | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 18. <input type="checkbox"/> | Active NOAMP VIP: Navigate to Main Menu → Status & Manage → HA | <div><div>Main Menu: Status & Manage -> HA</div><div><div>Filter*</div><table><thead><tr><th>Hostname</th><th>OAM HA Role</th><th>Application HA Role</th><th>Max Allowed HA Role</th><th>Mate Hostname List</th><th>Network Element</th><th>Server Role</th><th>Active VIPs</th></tr></thead><tbody><tr><td>OCUDR-A</td><td>Active</td><td>N/A</td><td>Active</td><td>OCUDR-B</td><td>Site1_NE_NO</td><td>Network OAM&P</td><td>10.10.1.6</td></tr><tr><td>OCUDR-B</td><td>Standby</td><td>N/A</td><td>Active</td><td>OCUDR-A</td><td>Site1_NE_NO</td><td>Network OAM&P</td><td></td></tr><tr><td>DR-OCUDR-A</td><td>Spare</td><td>N/A</td><td>Active</td><td>DR-OCUDR-B</td><td>Site2_NE_DR_NO</td><td>Network OAM&P</td><td>10.10.1.39</td></tr><tr><td>DR-OCUDR-B</td><td>Spare</td><td>N/A</td><td>Active</td><td>DR-OCUDR-A</td><td>Site2_NE_DR_NO</td><td>Network OAM&P</td><td></td></tr></tbody></table></div></div> | Hostname | OAM HA Role | Application HA Role | Max Allowed HA Role | Mate Hostname List | Network Element | Server Role | Active VIPs | OCUDR-A | Active | N/A | Active | OCUDR-B | Site1_NE_NO | Network OAM&P | 10.10.1.6 | OCUDR-B | Standby | N/A | Active | OCUDR-A | Site1_NE_NO | Network OAM&P | | DR-OCUDR-A | Spare | N/A | Active | DR-OCUDR-B | Site2_NE_DR_NO | Network OAM&P | 10.10.1.39 | DR-OCUDR-B | Spare | N/A | Active | DR-OCUDR-A | Site2_NE_DR_NO | Network OAM&P | |
| Hostname | OAM HA Role | Application HA Role | Max Allowed HA Role | Mate Hostname List | Network Element | Server Role | Active VIPs | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-A | Active | N/A | Active | OCUDR-B | Site1_NE_NO | Network OAM&P | 10.10.1.6 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-B | Standby | N/A | Active | OCUDR-A | Site1_NE_NO | Network OAM&P | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DR-OCUDR-A | Spare | N/A | Active | DR-OCUDR-B | Site2_NE_DR_NO | Network OAM&P | 10.10.1.39 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DR-OCUDR-B | Spare | N/A | Active | DR-OCUDR-A | Site2_NE_DR_NO | Network OAM&P | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 19. <input type="checkbox"/> | Active NOAMP VIP: Verify that the HA Status for all servers shows either Active or Standby. | <div><div>Main Menu: Status & Manage -> HA</div><div><div>Filter*</div><table><thead><tr><th>Hostname</th><th>OAM HA Role</th><th>Application HA Role</th><th>Max Allowed HA Role</th><th>Mate Hostname List</th><th>Network Element</th><th>Server Role</th><th>Active VIPs</th></tr></thead><tbody><tr><td>OCUDR-A</td><td>Active</td><td>N/A</td><td>Active</td><td>OCUDR-B</td><td>Site1_NE_NO</td><td>Network OAM&P</td><td>10.10.1.6</td></tr><tr><td>OCUDR-B</td><td>Standby</td><td>N/A</td><td>Active</td><td>OCUDR-A</td><td>Site1_NE_NO</td><td>Network OAM&P</td><td></td></tr><tr><td>DR-OCUDR-A</td><td>Spare</td><td>N/A</td><td>Active</td><td>DR-OCUDR-B</td><td>Site2_NE_DR_NO</td><td>Network OAM&P</td><td>10.10.1.39</td></tr><tr><td>DR-OCUDR-B</td><td>Spare</td><td>N/A</td><td>Active</td><td>DR-OCUDR-A</td><td>Site2_NE_DR_NO</td><td>Network OAM&P</td><td></td></tr></tbody></table></div></div> | Hostname | OAM HA Role | Application HA Role | Max Allowed HA Role | Mate Hostname List | Network Element | Server Role | Active VIPs | OCUDR-A | Active | N/A | Active | OCUDR-B | Site1_NE_NO | Network OAM&P | 10.10.1.6 | OCUDR-B | Standby | N/A | Active | OCUDR-A | Site1_NE_NO | Network OAM&P | | DR-OCUDR-A | Spare | N/A | Active | DR-OCUDR-B | Site2_NE_DR_NO | Network OAM&P | 10.10.1.39 | DR-OCUDR-B | Spare | N/A | Active | DR-OCUDR-A | Site2_NE_DR_NO | Network OAM&P | |
| Hostname | OAM HA Role | Application HA Role | Max Allowed HA Role | Mate Hostname List | Network Element | Server Role | Active VIPs | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-A | Active | N/A | Active | OCUDR-B | Site1_NE_NO | Network OAM&P | 10.10.1.6 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-B | Standby | N/A | Active | OCUDR-A | Site1_NE_NO | Network OAM&P | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DR-OCUDR-A | Spare | N/A | Active | DR-OCUDR-B | Site2_NE_DR_NO | Network OAM&P | 10.10.1.39 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DR-OCUDR-B | Spare | N/A | Active | DR-OCUDR-A | Site2_NE_DR_NO | Network OAM&P | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 20. <input type="checkbox"/> | Active NOAMP VIP: Repeat Step 19 of this procedure until the last page of the [Main Menu: Status & Manage →HA] screen is reached. | Verify the HA Status for each page of the [Main Menu: Status & Manage →HA] screen and click Next . | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| STEP 21 IS POST-UPGRADE ONLY | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 21. <input type="checkbox"/> | Active NOAMP VIP: Determine if any errors were reported. | <p>Use an SSH client to connect to the recently upgraded servers (for example: ssh or putty):</p> <pre>ssh<server IMI IP address> login as:admusr password:<enter password> Switch to root su - password: <enter password> # verifyUpgrade</pre> <p>Examine the output of the command to determine if any errors were reported. Contact the Oracle CGBU Customer Care Center if errors occur.</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| THIS PROCEDURE HAS BEEN COMPLETED | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

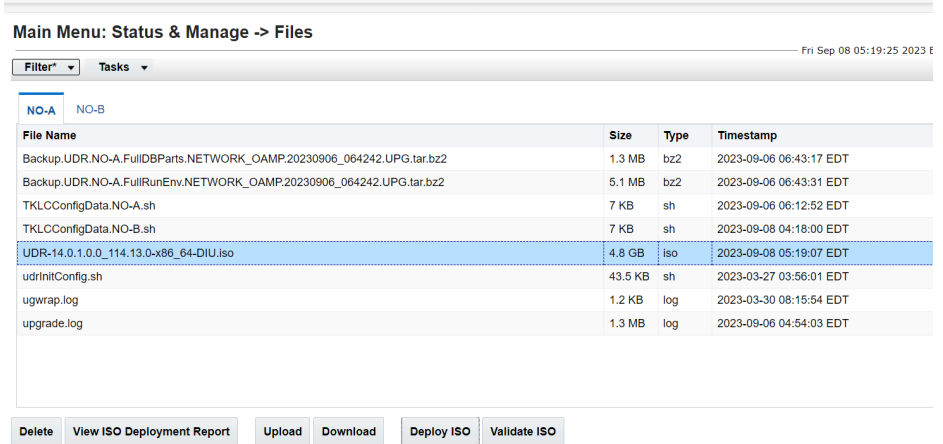
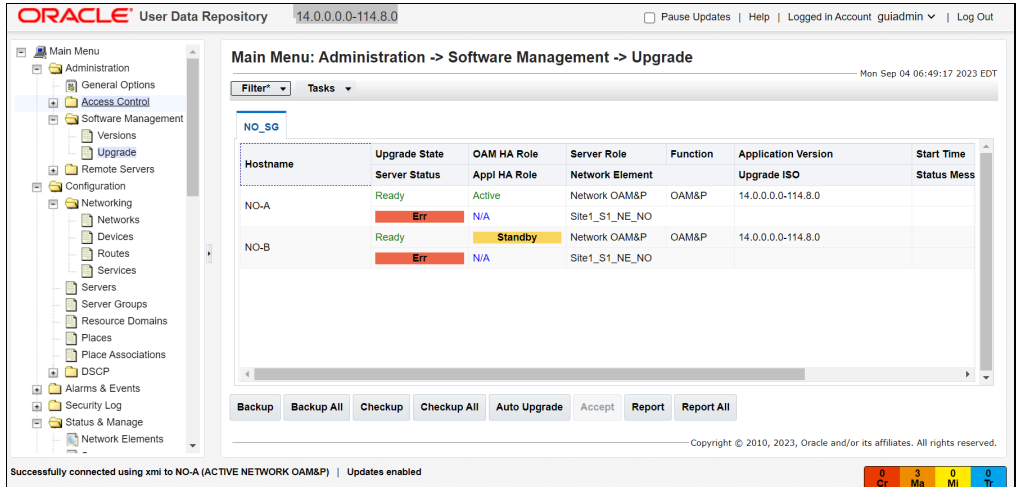
Appendix C. Upgrade of a Server

C.1 UPGRADE

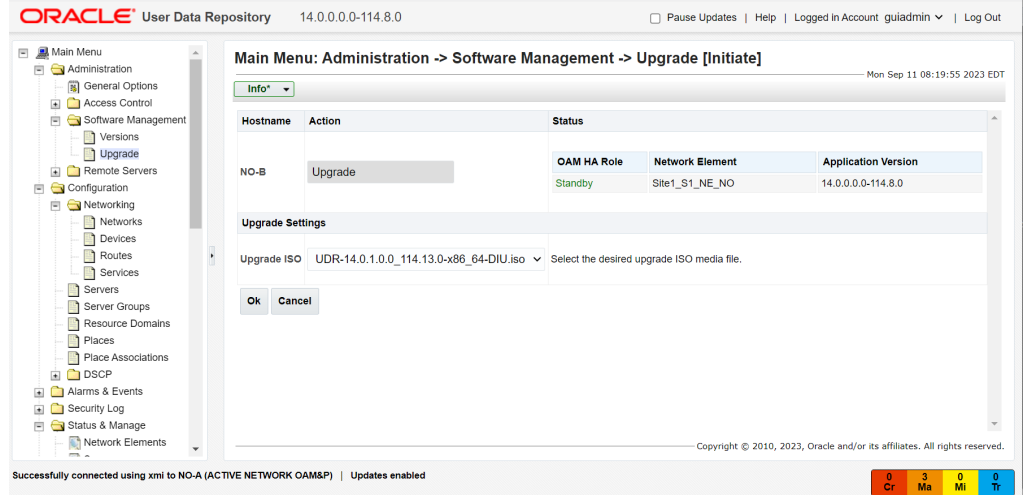
This procedure explains the steps of upgrading OL8 based TPD server to OL8 based TPD server

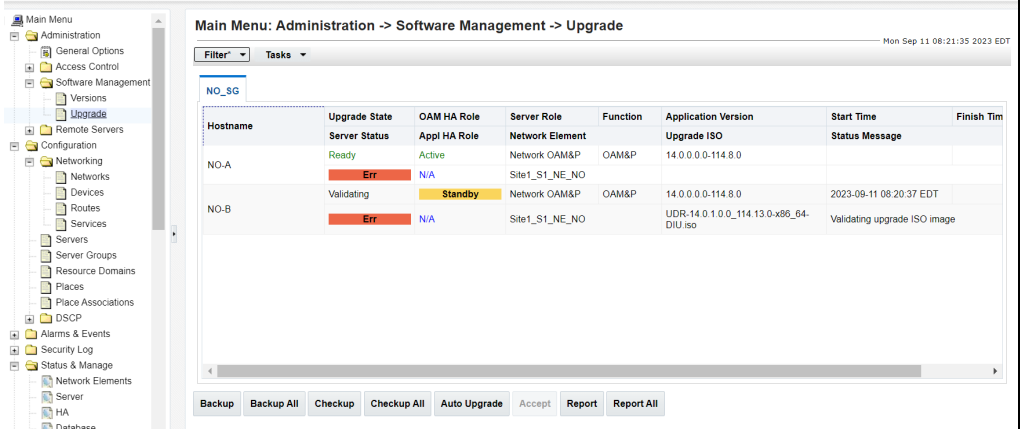
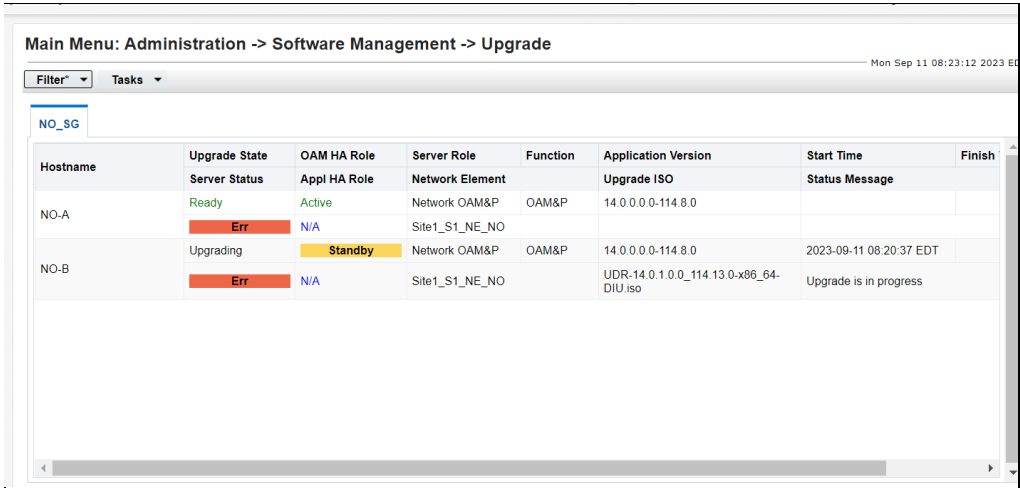
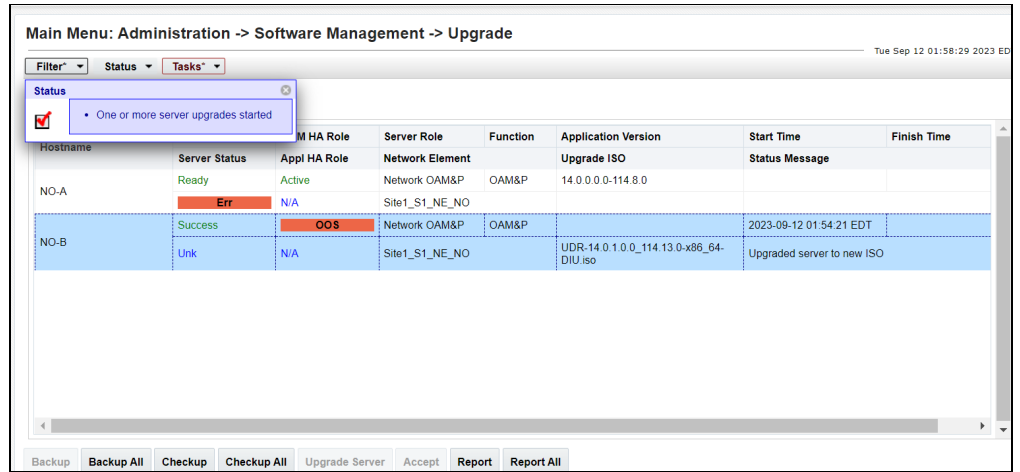
Procedure 14: Upgrade Server

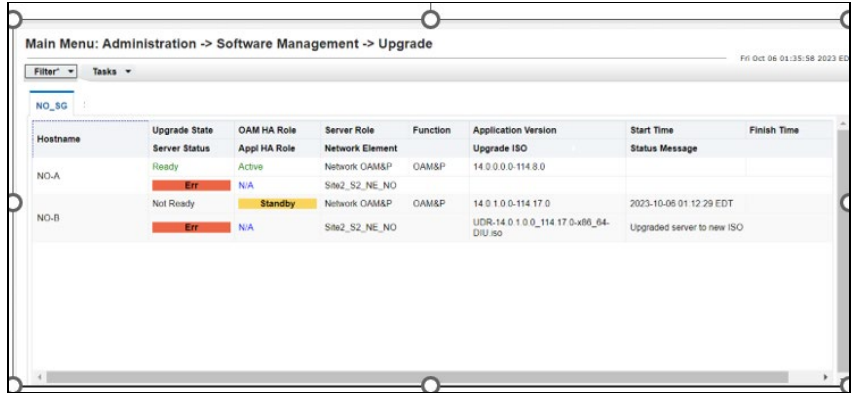
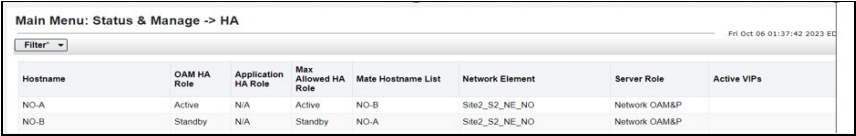
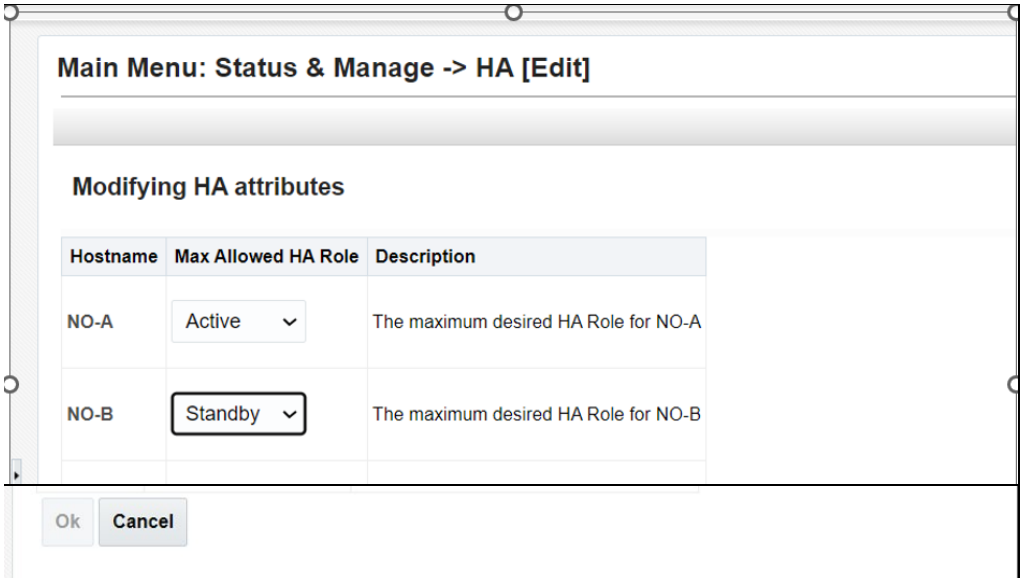
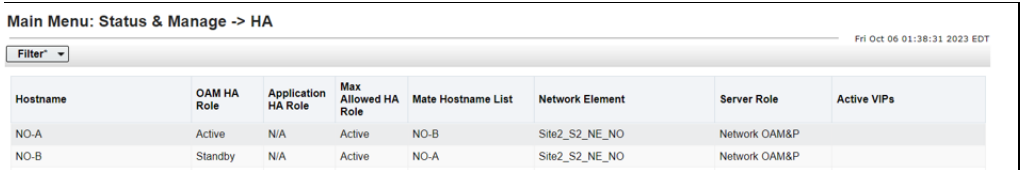
| Step | Procedure | Result |
|------|--|---|
| 1. | Login to console of active server | <p>Note1 : Vgroot should have 24GB free space to proceed an upgrade</p> <p>Note 2: if you observe any alarm related to disk space shortage ,then extend the memory to that volume to clear the alarm</p> <p>If enough memory is not available to handle both above scenarios then resize the VM with required memory with steps mentioned in Appendix.H</p> <p>Access the server using ssh and switch to root: <code>#sudo su -</code></p>  |
| 2. | Run the below command in CLI <pre>“sed -i '528i\ sleep(900);' /var/TKLC/appworks/services/SvrUpgrade.php”</pre> |  |
| 3. | Copy the DIU ISO to the filemgmt And change the file permission | <pre># cp source of DIU-ISO /var/TKLC/db/filemgmt/UDR-14.2.0.0.0_114.43.0-x86_64-DIU.iso</pre> <pre># chmod 777 /var/TKLC/db/filemgmt/UDR-14.2.0.0.0_114.43.0-x86_64-DIU.iso</pre> |

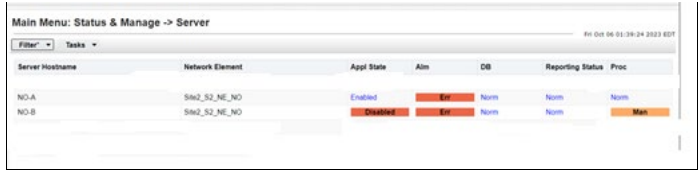
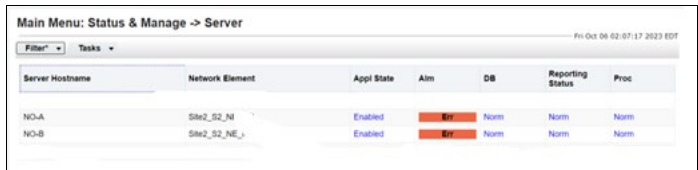
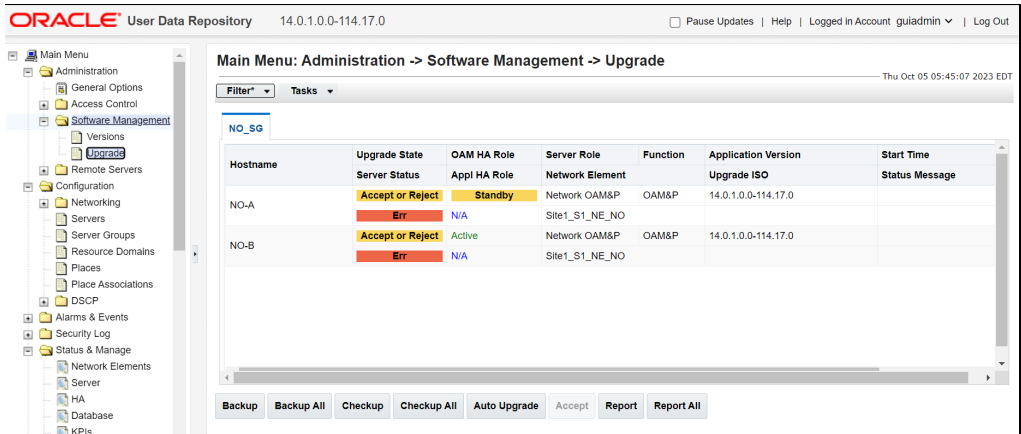
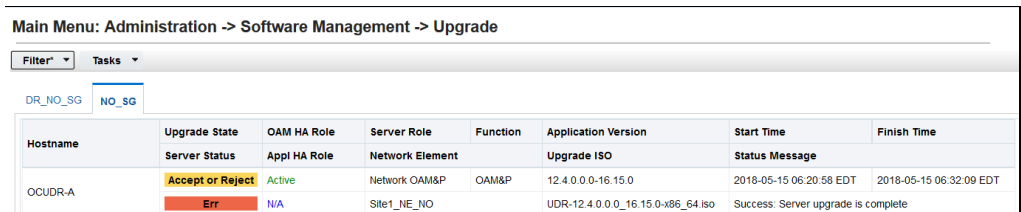
| Step | Procedure | Result |
|-----------------------------|--|--|
| 4. | Then Deploy DIU iso from Active UDR GUI |  <p>6.4 MB used (0.01%) of 121.5 GB available System utilization: 5.2 GB (4.28%) of 121.5 GB available.</p> <p>Note: Refer the section 3.2.5 for iso deployment</p> |
| 5. | | |
| 6. <input type="checkbox"/> | Using the VIP address, access the primary NOAMP GUI. | <p>Access the primary NOAMP GUI as specified in Appendix A.</p> <p>NOTE: Ensure that there are no users in the <code>/var/TKLC/db/filemgmt</code> directory on server to be upgraded</p> |
| 7. <input type="checkbox"/> | <p>Active NOAMP VIP:</p> <ol style="list-style-type: none"> Navigate to Main Menu → Administration → Software Management → Upgrade Select server group tab for servers to be upgraded. Verify that the Upgrade State shows Ready for the servers to be upgraded. Verify the Application Version value for servers is the source software release version |  <p>Successfully connected using xml to NO-A (ACTIVE NETWORK OAM&P) Updates enabled</p> |

| Step | Procedure | Result | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-----------------------------|--|--|-----------------|---------------|---------------------|----------------|----------|---------------------|------------|--|---------------|--------------|-----------------|--|-------------|----------------|------|-------|--------|---------------|-------|--------------------|--|--|-----|-----|----------------|--|--|--|------|-------|---------|---------------|-------|--------------------|--|--|-----|-----|----------------|--|--|--|----------|--------|--------|------|---------|--|--|--|---|--|--|---|
| 8. <input type="checkbox"/> | <p>Active NOAMP VIP:</p> <ol style="list-style-type: none">1. Select the server (for one server at a time)2. Ensure the Upgrade Server button is enabled.3. Click Upgrade Server | <div><p>Main Menu: Administration -> Software Management -> Upgrade</p><p>Fri Sep 08 04:49:00 2023 EDT</p><p>Filter* Tasks</p><p>NO_SG</p><table><tr><th>Hostname</th><th>Upgrade State</th><th>OAM HA Role</th><th>Server Role</th><th>Function</th><th>Application Version</th><th>Start Time</th></tr><tr><th></th><th>Server Status</th><th>Appl HA Role</th><th>Network Element</th><th></th><th>Upgrade ISO</th><th>Status Message</th></tr><tr><td>NO-A</td><td>Ready</td><td>Active</td><td>Network OAM&P</td><td>OAM&P</td><td>14.0.0.0.0-114.8.0</td><td></td></tr><tr><td></td><td>Err</td><td>N/A</td><td>Site1_S1_NE_NO</td><td></td><td></td><td></td></tr><tr><td>NO-B</td><td>Ready</td><td>Standby</td><td>Network OAM&P</td><td>OAM&P</td><td>14.0.0.0.0-114.8.0</td><td></td></tr><tr><td></td><td>Err</td><td>N/A</td><td>Site1_S1_NE_NO</td><td></td><td></td><td></td></tr></table><p>Backup Backup All Checkup Checkup All Upgrade Server Accept Report Report All</p></div> <div><p>ORACLE User Data Repository 14.0.0.0.0-114.8.0</p><p>Pause Updates Help Logged In Account: guiladmin Log Out</p><p>Main Menu: Administration -> Software Management -> Upgrade [Initiate]</p><p>Mon Sep 11 08:19:55 2023 EDT</p><p>Info*</p><table><tr><th>Hostname</th><th>Action</th><th>Status</th></tr><tr><td>NO-B</td><td>Upgrade</td><td></td></tr><tr><td></td><td></td><td>OAM HA Role Network Element Application Version</td></tr><tr><td></td><td></td><td>Standby Site1_S1_NE_NO 14.0.0.0.0-114.8.0</td></tr></table><p>Upgrade Settings</p><p>Upgrade ISO: UDR-14.0.1.0.0_114.13.0-x86_64-DIU.iso Select the desired upgrade ISO media file.</p><p>Ok Cancel</p><p>Copyright © 2010, 2023, Oracle and/or its affiliates. All rights reserved.</p><p>Successfully connected using xmi to NO-A (ACTIVE NETWORK OAM&P) Updates enabled</p><div><div>0</div><div>Cr</div><div>3</div><div>Mo</div><div>0</div><div>Mi</div><div>0</div><div>Tr</div></div></div> | Hostname | Upgrade State | OAM HA Role | Server Role | Function | Application Version | Start Time | | Server Status | Appl HA Role | Network Element | | Upgrade ISO | Status Message | NO-A | Ready | Active | Network OAM&P | OAM&P | 14.0.0.0.0-114.8.0 | | | Err | N/A | Site1_S1_NE_NO | | | | NO-B | Ready | Standby | Network OAM&P | OAM&P | 14.0.0.0.0-114.8.0 | | | Err | N/A | Site1_S1_NE_NO | | | | Hostname | Action | Status | NO-B | Upgrade | | | | OAM HA Role Network Element Application Version | | | Standby Site1_S1_NE_NO 14.0.0.0.0-114.8.0 |
| Hostname | Upgrade State | OAM HA Role | Server Role | Function | Application Version | Start Time | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Server Status | Appl HA Role | Network Element | | Upgrade ISO | Status Message | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| NO-A | Ready | Active | Network OAM&P | OAM&P | 14.0.0.0.0-114.8.0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Err | N/A | Site1_S1_NE_NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| NO-B | Ready | Standby | Network OAM&P | OAM&P | 14.0.0.0.0-114.8.0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Err | N/A | Site1_S1_NE_NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Hostname | Action | Status | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| NO-B | Upgrade | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | OAM HA Role Network Element Application Version | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | Standby Site1_S1_NE_NO 14.0.0.0.0-114.8.0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |














| Step | Procedure | Result |
|-----------------------------|---|---|
| 9. <input type="checkbox"/> | Active NOAMP VIP: 1. The Upgrade [Initiate] screen displays 2. Select the ISO to use in the server upgrade 3. Click Ok to start the upgrade |  <p>NOTE: During the upgrade you might see the following expected alarms. Not all servers have all alarms:</p> <ul style="list-style-type: none"> 31101(DB Replication to a slave DB has failed) 31106(DB Merging to a parent Merge Node has failed) 31107(DB Merging from a child source Node has failed) 31114 (DB Replication of configuration data via ...) 13071 No northbound Provisioning Connections) 10073 (Server Group Max Allowed HA Role Warning) 10075 (Application processes have been manually stopped) 32515 (Server HA Failover Inhibited) 31283 (HA Highly available server failed to receive) 31226 (The High Availability Status is degraded) |

| Step | Procedure | Result |
|------------------------------|--|---|
| 10. <input type="checkbox"/> | <p>Active NOAMP VIP: View in-progress status</p> <ol style="list-style-type: none"> Select Main Menu → Administration → Software Management → Upgrade Observe the Upgrade State of the servers of interest throughout the upgrade. <p>Status Message contains additional upgrade details which allow upgrades in progress to be monitored. The following screen shots are examples of what to expect during upgrade.</p> <p>The Progress can be viewed on the Task list</p> <ol style="list-style-type: none"> Wait for each upgrade to report Success before proceeding to the next step. Even after the status success ,it will take some time to finish upgrade.So wait till the HA role changes from OOS to Active Or Standby |    |

| Step | Procedure | Result |
|------|--|---|
| 11. | Once the HA Roll changes to Standby Then upgrade status will show Not ready And Max HA status will show as Standby |   |
| 12. | Go to “Main Menu: Status & Manage-> HA” and click on edit and change the MAX HA Role of upgraded server to Active from Standby |   |

| Step | Procedure | Result |
|------------------------------|---|--|
| 13. | Change the Appl State Disabled to Enabled under “Main Menu: Status & Manage-Server” |  <p>Select the Upgrade server and click on restart then server will move to enabled state</p>  |
| 14. <input type="checkbox"/> | Active NOAMP VIP: <ol style="list-style-type: none"> Select the appropriate tab (NO_SG) and select the row containing the hostname of the server that was upgraded. Verify that the Status Message shows Success and Upgrade State is Accept or Reject |  <p>NOTE: If the upgrade status indicates that the server could not restart the application to complete the upgrade and alarm 10134 (Server Upgrade Failed) displays; ensure that replication is up. Use <code>i repstat</code> command on active server and verify status is Active:</p> <ul style="list-style-type: none"> The Status changes to Success Alarm 10134 to clear  |

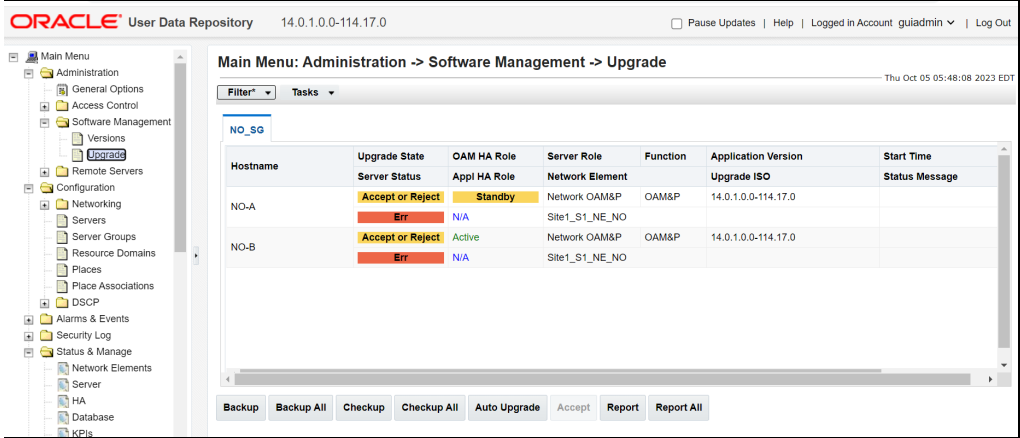
| Step | Procedure | Result | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|------------------------------|--|---|-----------------|-----------------|------------------|------|----|------------------|------|------------|----------------|---------|-----|------|------|------|------------|----------------|---------|-----|------|------|------|---------|-------------|---------|-----|------|------|------|---------|-------------|---------|-----|------|------|------|
| 15. <input type="checkbox"/> | <p>1. If upgrade status still indicates that server could not restart the application to complete the upgrade, restart the server by clicking the Restart.</p> <p>2. Verify that the Status Message shows Success and Upgrade State is Accept or Reject</p> | <p>Restart server that is being upgraded from Main Menu → Status & Manage→ Server screen</p> <div><p>Main Menu: Status & Manage -> Server</p><div><div>Filter*</div><table><tr><th>Server Hostname</th><th>Network Element</th><th>Appl State</th><th>Alm</th><th>DB</th><th>Reporting Status</th><th>Proc</th></tr><tr><td>DR-OCUDR-A</td><td>Site2_NE_DR_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr><tr><td>DR-OCUDR-B</td><td>Site2_NE_DR_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr><tr><td>OCUDR-A</td><td>Site1_NE_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr><tr><td>OCUDR-B</td><td>Site1_NE_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr></table></div></div> <div><div>Stop</div><div>Restart</div><div>Reboot</div><div>NTP Sync</div><div>Report</div></div> | Server Hostname | Network Element | Appl State | Alm | DB | Reporting Status | Proc | DR-OCUDR-A | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | DR-OCUDR-B | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | OCUDR-A | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm | OCUDR-B | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm |
| Server Hostname | Network Element | Appl State | Alm | DB | Reporting Status | Proc | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DR-OCUDR-A | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DR-OCUDR-B | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-A | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-B | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

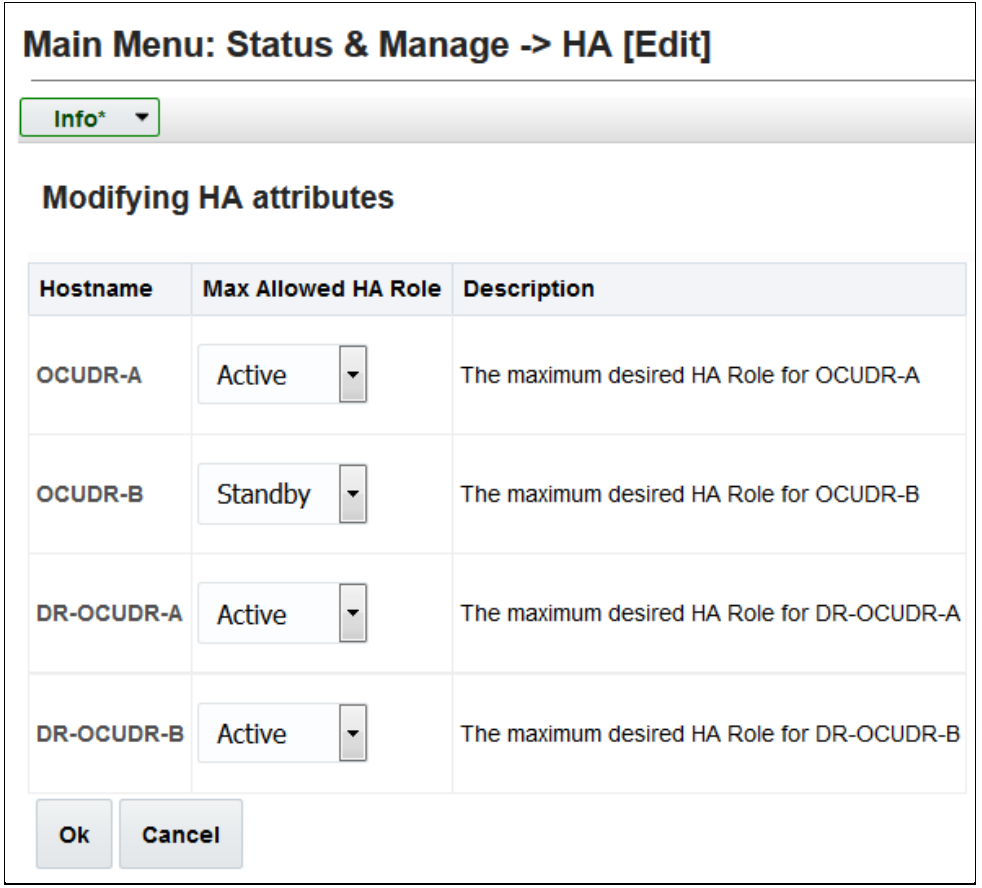
| Step | Procedure | Result | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|------------------------------|--|---|----------|---------------------|------------------|---------|--|---|---------|--|---|------------|--|--|------------|---|--|-----------------|-----------------|------------|-----|----|------------------|------|------------|----------------|---------|-----|------|------|------|------------|----------------|---------|-----|------|------|------|---------|-------------|---------|-----|------|------|------|---------|-------------|---------|-----|------|------|------|
| 16. <input type="checkbox"/> | Active NOAMP VIP: Navigate to Main Menu → Status & Manage → HA [Edit] | <p>NOTE: Only perform the following step if Upgrade State is DEGRADED.</p> <p>Change Max Allowed HA Role for server (server that was upgraded) to Active.</p> <div><h3>Main Menu: Status & Manage -> HA [Edit]</h3><div></div><h4>Modifying HA attributes</h4><table><thead><tr><th>Hostname</th><th>Max Allowed HA Role</th><th>Description</th></tr></thead><tbody><tr><td>OCUDR-A</td><td>Active </td><td>The maximum desired HA Role for OCUDR-A</td></tr><tr><td>OCUDR-B</td><td>Active </td><td>The maximum desired HA Role for OCUDR-B</td></tr><tr><td>DR-OCUDR-A</td><td>Active </td><td>The maximum desired HA Role for DR-OCUDR-A</td></tr><tr><td>DR-OCUDR-B</td><td>Active </td><td>The maximum desired HA Role for DR-OCUDR-B</td></tr></tbody></table></div> <p>Restart server from Main Menu->Status & Manage -> Server screen</p> <div><h3>Main Menu: Status & Manage -> Server</h3><div>Filter* </div><table><thead><tr><th>Server Hostname</th><th>Network Element</th><th>Appl State</th><th>Alm</th><th>DB</th><th>Reporting Status</th><th>Proc</th></tr></thead><tbody><tr><td>DR-OCUDR-A</td><td>Site2_NE_DR_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr><tr><td>DR-OCUDR-B</td><td>Site2_NE_DR_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr><tr><td>OCUDR-A</td><td>Site1_NE_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr><tr><td>OCUDR-B</td><td>Site1_NE_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr></tbody></table><div><div>StopRestartRebootNTP SyncReport</div></div></div> | Hostname | Max Allowed HA Role | Description | OCUDR-A | Active  | The maximum desired HA Role for OCUDR-A | OCUDR-B | Active  | The maximum desired HA Role for OCUDR-B | DR-OCUDR-A | Active  | The maximum desired HA Role for DR-OCUDR-A | DR-OCUDR-B | Active  | The maximum desired HA Role for DR-OCUDR-B | Server Hostname | Network Element | Appl State | Alm | DB | Reporting Status | Proc | DR-OCUDR-A | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | DR-OCUDR-B | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | OCUDR-A | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm | OCUDR-B | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm |
| Hostname | Max Allowed HA Role | Description | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-A | Active  | The maximum desired HA Role for OCUDR-A | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-B | Active  | The maximum desired HA Role for OCUDR-B | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DR-OCUDR-A | Active  | The maximum desired HA Role for DR-OCUDR-A | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DR-OCUDR-B | Active  | The maximum desired HA Role for DR-OCUDR-B | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Server Hostname | Network Element | Appl State | Alm | DB | Reporting Status | Proc | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DR-OCUDR-A | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DR-OCUDR-B | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-A | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-B | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| Step | Procedure | Result |
|--|--|--|
| 17. <input type="checkbox"/> | Active NOAMP VIP: View post-upgrade status | View post-upgrade status of the servers. The following alarms may be present. Active NO server has the following expected alarm: Alarm ID is 13071 (No Northbound Provisioning Connections) You may also see the alarm: Alarm ID is 32532 (Server Upgrade Pending Accept/Reject) You may also see this alarm due to DRNO servers Max Allowed HA Role being set to standby in Procedure 7. Alarm ID is10073 (Server Group Max Allowed HA Role Warning) |
| 18. <input type="checkbox"/> | Active NOAMP VIP: Clear browser cache | JavaScript libraries, images and other objects are often modified in the upgrade. Browsers can cause GUI problems by holding on to the old objects in the built-in cache. To prevent these problems always clear the browser cache before logging in to an NO or SO which has been upgraded: Simultaneously hold down Ctrl-Shift-Delete. Select the appropriate type of objects and delete from the cache. For Internet Explorer the relevant object type is Temporary Internet Files. Other browsers may label these objects differently. |
| THIS PROCEDURE HAS BEEN COMPLETED | | |


Appendix D. Backout of a Server

Procedure 15: Backout of a Server

| Step | Procedure | Result |
|-----------------------------|---|--|
| 1. <input type="checkbox"/> | Using the VIP address, access the primary NOAMP GUI. | Access the primary NOAMP GUI as specified in Appendix A. |
| 2. <input type="checkbox"/> | Active NOAMP VIP: Navigate to Main Menu → Administration → Software Management → Upgrade |  |
| 3. <input type="checkbox"/> | Active NOAMP VIP: 1. Select the tab containing the server to be downgraded. 2. Scroll to the row containing the hostname of the server to be backed-out. 3. Verify that the Upgrade State shows Accept or Reject. | |















| Step | Procedure | Result | | | | | | | | | | | | | | | |
|-----------------------------|--|---|----------|---------------------|-------------|---------|----------|---|---------|-----------|---|------------|----------|--|------------|----------|--|
| 4. <input type="checkbox"/> | <p>Active NOAMP VIP: Make the server ready for downgrade.</p> <ol style="list-style-type: none"> Navigate to Main Menu → Status & Manage → HA Click Edit Select the server to be downgraded and select a Max Allowed Role value of Standby or spare for DR servers. Click OK <p>NOTE: For active NOAMP only, you are logged out after this step because of the HA switchover. You must log back in to continue.</p> <p>The active server is standby</p> |  <p>Main Menu: Status & Manage -> HA [Edit]</p> <p>Info* ▼</p> <p>Modifying HA attributes</p> <table border="1"> <thead> <tr> <th>Hostname</th><th>Max Allowed HA Role</th><th>Description</th></tr> </thead> <tbody> <tr> <td>OCUDR-A</td><td>Active ▼</td><td>The maximum desired HA Role for OCUDR-A</td></tr> <tr> <td>OCUDR-B</td><td>Standby ▼</td><td>The maximum desired HA Role for OCUDR-B</td></tr> <tr> <td>DR-OCUDR-A</td><td>Active ▼</td><td>The maximum desired HA Role for DR-OCUDR-A</td></tr> <tr> <td>DR-OCUDR-B</td><td>Active ▼</td><td>The maximum desired HA Role for DR-OCUDR-B</td></tr> </tbody> </table> <p>Ok Cancel</p> | Hostname | Max Allowed HA Role | Description | OCUDR-A | Active ▼ | The maximum desired HA Role for OCUDR-A | OCUDR-B | Standby ▼ | The maximum desired HA Role for OCUDR-B | DR-OCUDR-A | Active ▼ | The maximum desired HA Role for DR-OCUDR-A | DR-OCUDR-B | Active ▼ | The maximum desired HA Role for DR-OCUDR-B |
| Hostname | Max Allowed HA Role | Description | | | | | | | | | | | | | | | |
| OCUDR-A | Active ▼ | The maximum desired HA Role for OCUDR-A | | | | | | | | | | | | | | | |
| OCUDR-B | Standby ▼ | The maximum desired HA Role for OCUDR-B | | | | | | | | | | | | | | | |
| DR-OCUDR-A | Active ▼ | The maximum desired HA Role for DR-OCUDR-A | | | | | | | | | | | | | | | |
| DR-OCUDR-B | Active ▼ | The maximum desired HA Role for DR-OCUDR-B | | | | | | | | | | | | | | | |

| Step | Procedure | Result | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-----------------------------|---|---|-----------------|-----------------|---------------------------------|-------------------------------------|-------------------------|---------------------|------------|-------------|----------------|--------------|-----------------|-------------|----------------|------|------------|----------------|------------------|--------|---------------|-------|------------------|-------------------------|-------------------------|---------|-----|-------------|------|---------------------------------|-------------------------------------|-------------|---------|---------------|---------|---------------|-------|------------------|-----------------|------------|-----|-----|------------------|------|------------|----------------|---------|-----|------|------|------|------------|----------------|---------|-----|------|------|------|---------|-------------|---------|-----|------|------|------|---------|-------------|----------|-----|------|-----|-----|
| 5. <input type="checkbox"/> | <p>Active NOAMP VIP:</p> <p>Navigate to Main Menu → Status & Manage → Server</p> <p>1. Select the server to be downgraded and click STOP</p> <p>2. Click OK to confirm the operation, then ensure the Appl State updates to Disabled.</p> | <div><p>Main Menu: Status & Manage -> Server</p><div><div>Filter*</div><table><thead><tr><th>Server Hostname</th><th>Network Element</th><th>Appl State</th><th>Alm</th><th>DB</th><th>Reporting Status</th><th>Proc</th></tr></thead><tbody><tr><td>DR-OCUDR-A</td><td>Site2_NE_DR_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr><tr><td>DR-OCUDR-B</td><td>Site2_NE_DR_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr><tr><td>OCUDR-A</td><td>Site1_NE_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr><tr><td>OCUDR-B</td><td>Site1_NE_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Man</td><td>Norm</td></tr></tbody></table></div><div><div>StopRestartRebootNTP SyncReport</div><div><p>Are you sure you wish to stop application software on the following server(s)?</p><p>OCUDR-B</p><div>OKCancel</div></div></div></div> <div><p>Main Menu: Status & Manage -> Server</p><div><div>Filter*</div><div>Info*</div><table><thead><tr><th>Server Hostname</th><th>Network Element</th><th>Appl State</th><th>Alm</th><th>DB</th><th>Reporting Status</th><th>Proc</th></tr></thead><tbody><tr><td>DR-OCUDR-A</td><td>Site2_NE_DR_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr><tr><td>DR-OCUDR-B</td><td>Site2_NE_DR_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr><tr><td>OCUDR-A</td><td>Site1_NE_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr><tr><td>OCUDR-B</td><td>Site1_NE_NO</td><td>Disabled</td><td>Err</td><td>Norm</td><td>Man</td><td>Man</td></tr></tbody></table></div></div> | Server Hostname | Network Element | Appl State | Alm | DB | Reporting Status | Proc | DR-OCUDR-A | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | DR-OCUDR-B | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | OCUDR-A | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm | OCUDR-B | Site1_NE_NO | Enabled | Err | Norm | Man | Norm | Server Hostname | Network Element | Appl State | Alm | DB | Reporting Status | Proc | DR-OCUDR-A | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | DR-OCUDR-B | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | OCUDR-A | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm | OCUDR-B | Site1_NE_NO | Disabled | Err | Norm | Man | Man |
| Server Hostname | Network Element | Appl State | Alm | DB | Reporting Status | Proc | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DR-OCUDR-A | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DR-OCUDR-B | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-A | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-B | Site1_NE_NO | Enabled | Err | Norm | Man | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Server Hostname | Network Element | Appl State | Alm | DB | Reporting Status | Proc | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DR-OCUDR-A | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DR-OCUDR-B | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-A | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-B | Site1_NE_NO | Disabled | Err | Norm | Man | Man | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 6. <input type="checkbox"/> | <p>Active NOAMP VIP:</p> <p>Navigate to Main Menu → Administration → Software Management → Upgrade</p> | <div><p>Main Menu: Administration -> Software Management -> Upgrade</p><div><div>Filter*</div><div>Tasks</div><div><div>DR_NO_SGNO_SG</div><table><thead><tr><th rowspan="2">Hostname</th><th>Upgrade State</th><th>OAM HA Role</th><th>Server Role</th><th>Function</th><th>Application Version</th><th>Start Time</th><th>Finish Time</th></tr><tr><th>Server Status</th><th>Appl HA Role</th><th>Network Element</th><th>Upgrade ISO</th><th>Status Message</th><th></th><th></th></tr></thead><tbody><tr><td rowspan="2">OCUDR-A</td><td>Accept or Reject</td><td>Active</td><td>Network OAM&P</td><td>OAM&P</td><td>12.4.0.0-16.15.0</td><td>2018-05-15 06:20:58 EDT</td><td>2018-05-15 06:32:09 EDT</td></tr><tr><td>Err</td><td>N/A</td><td>Site1_NE_NO</td><td></td><td>UDR-12.4.0.0-16.15.0-x86_64.iso</td><td>Success: Server upgrade is complete</td><td></td></tr><tr><td rowspan="2">OCUDR-B</td><td>Backout Ready</td><td>Standby</td><td>Network OAM&P</td><td>OAM&P</td><td>12.4.0.0-16.15.0</td><td></td><td></td></tr><tr><td>Err</td><td>N/A</td><td>Site1_NE_NO</td><td></td><td></td><td></td><td></td></tr></tbody></table></div></div></div> | Hostname | Upgrade State | OAM HA Role | Server Role | Function | Application Version | Start Time | Finish Time | Server Status | Appl HA Role | Network Element | Upgrade ISO | Status Message | | | OCUDR-A | Accept or Reject | Active | Network OAM&P | OAM&P | 12.4.0.0-16.15.0 | 2018-05-15 06:20:58 EDT | 2018-05-15 06:32:09 EDT | Err | N/A | Site1_NE_NO | | UDR-12.4.0.0-16.15.0-x86_64.iso | Success: Server upgrade is complete | | OCUDR-B | Backout Ready | Standby | Network OAM&P | OAM&P | 12.4.0.0-16.15.0 | | | Err | N/A | Site1_NE_NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Hostname | Upgrade State | OAM HA Role | | Server Role | Function | Application Version | Start Time | Finish Time | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Server Status | Appl HA Role | Network Element | Upgrade ISO | Status Message | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-A | Accept or Reject | Active | Network OAM&P | OAM&P | 12.4.0.0-16.15.0 | 2018-05-15 06:20:58 EDT | 2018-05-15 06:32:09 EDT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Err | N/A | Site1_NE_NO | | UDR-12.4.0.0-16.15.0-x86_64.iso | Success: Server upgrade is complete | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-B | Backout Ready | Standby | Network OAM&P | OAM&P | 12.4.0.0-16.15.0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Err | N/A | Site1_NE_NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| Step | Procedure | Result | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|------------------------------|---|---|-----------------|---------------|---------------------|----------------|-------------|---------------------|------------|-------------|--|---------------|--------------|-----------------|--|-------------|----------------|--|---------|---------------|---------|---------------|-------|--------------------|--|--|--|-----|-----|-------------|--|--|--|--|
| 7. <input type="checkbox"/> | Active NOAMP VIP: 1. Select the tab containing the server to be downgraded. 2. Scroll to the row containing the hostname of the server to be backed-out. 3. Verify that the Upgrade State shows Backout Ready. (It may take a few moments to change status) | <table><tr><th>Hostname</th><th>Upgrade State</th><th>OAM HA Role</th><th>Server Role</th><th>Function</th><th>Application Version</th><th>Start Time</th><th>Finish Time</th></tr><tr><th></th><th>Server Status</th><th>Appl HA Role</th><th>Network Element</th><th></th><th>Upgrade ISO</th><th>Status Message</th><th></th></tr><tr><td>OCUDR-B</td><td>Backout Ready</td><td>Standby</td><td>Network OAM&P</td><td>OAM&P</td><td>12.4.0.0.0-16.15.0</td><td></td><td></td></tr><tr><td></td><td>Err</td><td>N/A</td><td>Site1_NE_NO</td><td></td><td></td><td></td><td></td></tr></table> | Hostname | Upgrade State | OAM HA Role | Server Role | Function | Application Version | Start Time | Finish Time | | Server Status | Appl HA Role | Network Element | | Upgrade ISO | Status Message | | OCUDR-B | Backout Ready | Standby | Network OAM&P | OAM&P | 12.4.0.0.0-16.15.0 | | | | Err | N/A | Site1_NE_NO | | | | |
| Hostname | Upgrade State | OAM HA Role | Server Role | Function | Application Version | Start Time | Finish Time | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Server Status | Appl HA Role | Network Element | | Upgrade ISO | Status Message | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-B | Backout Ready | Standby | Network OAM&P | OAM&P | 12.4.0.0.0-16.15.0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Err | N/A | Site1_NE_NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 8. <input type="checkbox"/> | Server XMI IP (SSH): SSH to server | Use your SSH client to connect to the server (ex. ssh, putty): <pre>ssh<server address></pre> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 9. <input type="checkbox"/> | Server XMI IP (SSH): Login as admusr user | Login as admusr: <pre>login as: admusr Password: <enter password> Switch to root su - password: <enter password></pre> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 10. <input type="checkbox"/> | Server XMI IP (SSH): Perform the backout | 1. Find out the state of the server which is going to be backed out. Server is in Standby or Spare. Run the following command to find the HA state: <pre># ha.mystate</pre> <p>NOTE: If the state of the server is Active, then perform these steps to move to standby.</p> 2. Go to MAIN MENU: STATUS & MANAGE  HA 3. Click Edit 4. Switch Max Allowed HA role to standby 5. Perform the backout using the reject script: <pre># screen # sudo /var/TKLC/backout/diUpgrade --reject</pre> <p>NOTE: If backout asks if you would like to continue backout, answer y.</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 11. <input type="checkbox"/> | Server XMI IP (SSH): Backout proceeds | Informational messages come across the terminal screen as the backout proceeds. After backout is complete, the server automatically reboots. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| Step | Procedure | Result |
|------------------------------|--|--|
| 12. <input type="checkbox"/> | Server XMI IP (SSH): SSH to server and login as root user | Use your SSH client to connect to the server (ex. ssh, putty): <pre>ssh<server address> login as: admusr password: <enter password> Switch to root su - password: <enter password></pre> |
| 13. <input type="checkbox"/> | Server XMI IP (SSH): | <p>Before proceeding to run restore command please verify the status of roll back with the command "tail -f /var/TKLC/appw/logs/Process/upgrade.log" If reject is completed successfully then proceed with the restore or else wait for it complete.</p> <p>Perform the backout_restore utility to restore the full database run environment:</p> <p>1. <code>sudo /usr/TKLC/appworks/sbin/backout_restore</code></p> <p>NOTE: If asked if you would like to proceed, answer y.</p> <p>If the restore was successful, the following message is displayed:</p> <p>Success: Full restore of COMCOL run env has completed.</p> <p>Return to the backout procedure document for further instruction.</p> <p>Note: This Restore step is not required in case of rollback (Major upgrade)from OL8 based TPD server to OL6 based TPD server</p> |
| 14. <input type="checkbox"/> | | <p>Enter the following command to reboot the server. If logged in as admusr, it is necessary to use sudo.</p> <pre># init 6</pre> <p>This step takes several minutes and terminates the SSH session.</p> <p>Note: After Reboot if replication not started then restart the cmha process on upgraded server with the below commands</p> <p>"pm.set off cmha"</p> <p>then wait for 5 seconds</p> <p>"pm.set on cmha"</p> |
| 15. <input type="checkbox"/> | Server XMI IP (SSH): SSH to backed-out server and login as root user | Use your SSH client to connect to the server (ex. ssh, putty): <pre>ssh<server address> login as: admusr password: <enter password> Switch to root su - password: <enter password></pre> |

| Step | Procedure | Result | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|------------------------------|--|---|-----------------|---------------|---------------------|----------------|-------------|---------------------|------------|-------------|--|---------------|--------------|-----------------|--|-------------|----------------|--|---------|-------|--------|---------------|-------|--------------------|--|--|--|-----|-----|-------------|--|--|--|--|---------|-------|---------|---------------|-------|--------------------|--|--|--|-----|-----|-------------|--|--|--|--|
| 16. <input type="checkbox"/> | Server XMI IP (SSH): Verify services restart | <p>If this is an NOAMP server, verify httpd service is running. Run the command:</p> <pre># service httpd status</pre> <p>Verify expected output displays httpd is running (the process IDs are variable so the list of numbers can be ignored):</p> <pre>httpd<process IDs are listed here> is running...</pre> <p>If httpd is still not running after approximately 3 minutes, then services have failed to restart. Exit from the command line of backed-out server.</p> <pre># exit</pre> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 17. <input type="checkbox"/> | Using the VIP address, access the primary NOAMP GUI. | Access the primary NOAMP GUI as specified in Appendix A. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 18. <input type="checkbox"/> | Active NOAMP VIP: Verify server states. Navigate to Main Menu → Administration → Software Management → Upgrade | <div><div><div><div><div><div></div><div>Filter*</div></div><div><div>Tasks</div><div></div></div></div><div><div>DR_NO_SG</div><div>NO_SG</div></div><table><thead><tr><th>Hostname</th><th>Upgrade State</th><th>OAM HA Role</th><th>Server Role</th><th>Function</th><th>Application Version</th><th>Start Time</th><th>Finish Time</th></tr><tr><th></th><th>Server Status</th><th>Appl HA Role</th><th>Network Element</th><th></th><th>Upgrade ISO</th><th>Status Message</th><th></th></tr></thead><tbody><tr><td>OCUDR-A</td><td>Ready</td><td>Active</td><td>Network OAM&P</td><td>OAM&P</td><td>12.4.0.0.0-16.14.0</td><td></td><td></td></tr><tr><td></td><td>Err</td><td>N/A</td><td>Site1_NE_NO</td><td></td><td></td><td></td><td></td></tr><tr><td>OCUDR-B</td><td>Ready</td><td>Standby</td><td>Network OAM&P</td><td>OAM&P</td><td>12.4.0.0.0-16.14.0</td><td></td><td></td></tr><tr><td></td><td>Err</td><td>N/A</td><td>Site1_NE_NO</td><td></td><td></td><td></td><td></td></tr></tbody></table></div></div><div><ul style="list-style-type: none">• If the state is Ready, you are finished with this procedure.• If the state is Not Ready, continue to next step.</div></div> | Hostname | Upgrade State | OAM HA Role | Server Role | Function | Application Version | Start Time | Finish Time | | Server Status | Appl HA Role | Network Element | | Upgrade ISO | Status Message | | OCUDR-A | Ready | Active | Network OAM&P | OAM&P | 12.4.0.0.0-16.14.0 | | | | Err | N/A | Site1_NE_NO | | | | | OCUDR-B | Ready | Standby | Network OAM&P | OAM&P | 12.4.0.0.0-16.14.0 | | | | Err | N/A | Site1_NE_NO | | | | |
| Hostname | Upgrade State | OAM HA Role | Server Role | Function | Application Version | Start Time | Finish Time | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Server Status | Appl HA Role | Network Element | | Upgrade ISO | Status Message | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-A | Ready | Active | Network OAM&P | OAM&P | 12.4.0.0.0-16.14.0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Err | N/A | Site1_NE_NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-B | Ready | Standby | Network OAM&P | OAM&P | 12.4.0.0.0-16.14.0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Err | N/A | Site1_NE_NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| Step | Procedure | Result | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|------------------------------|---|---|-----------------|---------------------|---------------------|----------------|--|---|------------|--|---|---------------|--|--|------------|---|--|--|---------|-------|--------|---------------|-------|------------------|--|--|--|-----|-----|-------------|--|--|--|--|---------|-------|---------|---------------|-------|------------------|--|--|--|-----|-----|-------------|--|--|--|--|
| 19. <input type="checkbox"/> | <p>Active NOAMP VIP:</p> <p>1. Correct Upgrade State on downgraded server</p> <p>2. Navigate to Main Menu Status & Manage→HA[Edit]</p> <p>3. Select the downgraded server.</p> <p>4. Select a Max Allowed HA Role value of Active</p> <p>5. Click Ok.</p> <p>6. Verify the Max Allowed HA Role is set to the specified value for the server.</p> | <p>Due to backout being initiated from the command line instead of through the GUI, you must modify the downgraded server so that its Upgrade State moves to Ready.</p> <div><h3>Main Menu: Status & Manage -> HA [Edit]</h3><div></div><h4>Modifying HA attributes</h4><table><thead><tr><th>Hostname</th><th>Max Allowed HA Role</th><th>Description</th></tr></thead><tbody><tr><td>OCUDR-A</td><td>Active </td><td>The maximum desired HA Role for OCUDR-A</td></tr><tr><td>OCUDR-B</td><td>Active </td><td>The maximum desired HA Role for OCUDR-B</td></tr><tr><td>DR-OCUDR-A</td><td>Active </td><td>The maximum desired HA Role for DR-OCUDR-A</td></tr><tr><td>DR-OCUDR-B</td><td>Active </td><td>The maximum desired HA Role for DR-OCUDR-B</td></tr></tbody></table></div> | Hostname | Max Allowed HA Role | Description | OCUDR-A | Active  | The maximum desired HA Role for OCUDR-A | OCUDR-B | Active  | The maximum desired HA Role for OCUDR-B | DR-OCUDR-A | Active  | The maximum desired HA Role for DR-OCUDR-A | DR-OCUDR-B | Active  | The maximum desired HA Role for DR-OCUDR-B | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Hostname | Max Allowed HA Role | Description | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-A | Active  | The maximum desired HA Role for OCUDR-A | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-B | Active  | The maximum desired HA Role for OCUDR-B | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DR-OCUDR-A | Active  | The maximum desired HA Role for DR-OCUDR-A | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DR-OCUDR-B | Active  | The maximum desired HA Role for DR-OCUDR-B | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 20. <input type="checkbox"/> | <p>Active NOAMP VIP:</p> <p>Navigate to Main Menu Administration→Software Management→Upgrade;</p> <p>Select the tab of the server group containing the server to be downgraded. Verify its Upgrade State is Ready. (It might take a couple minutes for the grid to update.)</p> | <div><h3>Main Menu: Administration -> Software Management -> Upgrade</h3><div><div>Filter* </div><div>Tasks </div></div><div><div>DR_NO_SG</div><div>NO_SG</div></div><table><thead><tr><th>Hostname</th><th>Upgrade State</th><th>OAM HA Role</th><th>Server Role</th><th>Function</th><th>Application Version</th><th>Start Time</th><th>Finish Time</th></tr><tr><th></th><th>Server Status</th><th>Appl HA Role</th><th>Network Element</th><th></th><th>Upgrade ISO</th><th>Status Message</th><th></th></tr></thead><tbody><tr><td>OCUDR-A</td><td>Ready</td><td>Active</td><td>Network OAM&P</td><td>OAM&P</td><td>12.4.0.0-16.14.0</td><td></td><td></td></tr><tr><td></td><td>Err</td><td>N/A</td><td>Site1_NE_NO</td><td></td><td></td><td></td><td></td></tr><tr><td>OCUDR-B</td><td>Ready</td><td>Standby</td><td>Network OAM&P</td><td>OAM&P</td><td>12.4.0.0-16.14.0</td><td></td><td></td></tr><tr><td></td><td>Err</td><td>N/A</td><td>Site1_NE_NO</td><td></td><td></td><td></td><td></td></tr></tbody></table></div> | Hostname | Upgrade State | OAM HA Role | Server Role | Function | Application Version | Start Time | Finish Time | | Server Status | Appl HA Role | Network Element | | Upgrade ISO | Status Message | | OCUDR-A | Ready | Active | Network OAM&P | OAM&P | 12.4.0.0-16.14.0 | | | | Err | N/A | Site1_NE_NO | | | | | OCUDR-B | Ready | Standby | Network OAM&P | OAM&P | 12.4.0.0-16.14.0 | | | | Err | N/A | Site1_NE_NO | | | | |
| Hostname | Upgrade State | OAM HA Role | Server Role | Function | Application Version | Start Time | Finish Time | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Server Status | Appl HA Role | Network Element | | Upgrade ISO | Status Message | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-A | Ready | Active | Network OAM&P | OAM&P | 12.4.0.0-16.14.0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Err | N/A | Site1_NE_NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-B | Ready | Standby | Network OAM&P | OAM&P | 12.4.0.0-16.14.0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Err | N/A | Site1_NE_NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 21. <input type="checkbox"/> | Verify application version | Verify the Application Version value for this server has been downgraded to the original release version. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| Step | Procedure | Result |
|-----------------------------------|-----------|--------|
| THIS PROCEDURE HAS BEEN COMPLETED | | |

Appendix E. Upgrade Acceptance

The upgrade needs either to be accepted or rejected before any subsequent upgrades are performed in the future.

The Alarm 32532 (Server Upgrade Pending Accept/Reject) will be displayed for each server until one of these two actions (accept or reject) is performed.

An upgrade should be accepted only after it was determined to be successful as “accept” is final. This frees up file storage but prevents a backout from the previous upgrade.



NOTE:

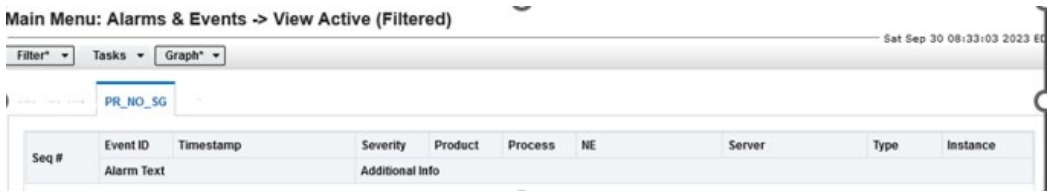
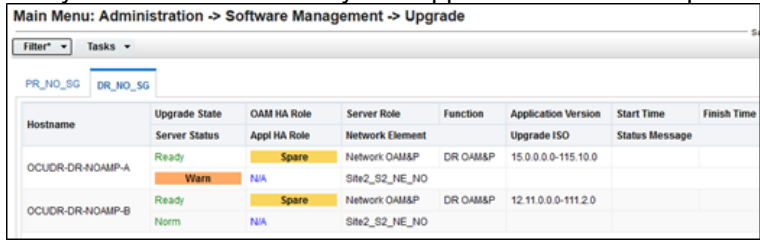
Once the upgrade is accepted for a server, that server will not be allowed to backout to previous release from which the upgrade was done

The following procedure details how to accept a successful upgrade of Oracle Communications User Data Repository system.

Procedure 16: Accept Upgrade

| Step | Procedure | Result |
|--------|---|---|
| 1. | Using the VIP IP, access the Primary NOAMP GUI. | Access the Primary NOAMP GUI as specified in Appendix A . |
| 2. | <p>Active NOAMP VIP:</p> <p>Select...</p> <p>Main Menu → Administration → Software Management → Upgrade</p> <p>...as shown on the right.</p> | |
| 3. | Accept upgrade for selected server(s) by running accept upgrade command on console. | <pre># /var/TKLC/backout/diUpgrade --accept</pre> <p>Note: Once upgrade is accepted, the servers will not be able to revert back to their previous image states.</p> |

Procedure 16: Accept Upgrade

| Step | Procedure | Result |
|--------------------------------|--|---|
| 4. <input type="checkbox"/> | Active NOAMP VIP: Accept upgrade of the rest of the system | Accept Upgrade on all remaining servers in the Oracle Communications User Data Repository system: Repeat all sub-steps of step 3 of this procedure on remaining servers until the upgrade of all servers in the Oracle Communications User Data Repository system has been accepted. Note: As upgrade is accepted on each server the corresponding Alarm ID 32532 (Server Upgrade Pending Accept/Reject) should be removed. |
| 5. <input type="checkbox"/> | Active NOAMP VIP: Verify accept | Check that alarms are removed: Navigate to this GUI page Alarms & Events > View Active  Verify that Alarm ID 32532 (Server Upgrade Pending Accept/Reject) is not displayed under active alarms on Oracle Communications User Data Repository system |
| 6. <input type="checkbox"/> | Active NOAMP VIP: Select... Main Menu → Administration → Software Management → Upgrade ...as shown on the right. | Verify server status is "Ready and Application version is updated".  Note: Versions displayed in images are just an example. |
| 7. <input type="checkbox"/> | Active NOAMP VIP: Configure services | Run the procedure specified in Appendix G: Configuring Services for Dual Path HA. |

Appendix F. Verifying servers are Synchronized

Procedure 17: Verifying servers are Synchronized.

| Step | Procedure | Result | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-----------------------------|--|--|-----------------|-------------------------|--------|-----------------|-------------------------|-----------------|-------------|-------------------|-----------------|-------------|-------------------|----------------|------------|---------------|-------|-----|--------|---|--------|---------------|---------|---------------|-------------|---------|---------------|--------|-----|--------|---|--------|---------------|---------|---------------|-------------|---------|---------------|---------|-----|--------|---|--------|---------------|---------|---------------|----------------|------------|---------------|-------|-----|--------|---|--------|---------------|---------|---------------|
| 1. <input type="checkbox"/> | <p>Active NOAMP VIP: Confirm servers are in sync before upgrading the next server</p> <p>1. Navigate to Main Menu → Status & Manage → Database</p> <p>2. Repl Status is Allowed</p> <p>3. The DB Levels is the same or close in numbers.</p> | <div><div>Main Menu: Status & Manage -> Database</div><div><div><div>Filter*</div><div>Info*</div><div>Tasks</div></div><table><tr><th>Network Element</th><th>Server</th><th>Role</th><th>OAM Max HA Role</th><th>Application Max HA Role</th><th>Status</th><th>DB Level</th><th>OAM Repl Status</th><th>SIG Repl Status</th><th>Repl Status</th><th>Repl Audit Status</th></tr><tr><td>Site2_NE_DR_NO</td><td>DR-OCUDR-B</td><td>Network OAM&P</td><td>Spare</td><td>N/A</td><td>Normal</td><td>0</td><td>Normal</td><td>NotApplicable</td><td>Allowed</td><td>NotApplicable</td></tr><tr><td>Site1_NE_NO</td><td>OCUDR-A</td><td>Network OAM&P</td><td>Active</td><td>N/A</td><td>Normal</td><td>0</td><td>Normal</td><td>NotApplicable</td><td>Allowed</td><td>NotApplicable</td></tr><tr><td>Site1_NE_NO</td><td>OCUDR-B</td><td>Network OAM&P</td><td>Standby</td><td>N/A</td><td>Normal</td><td>0</td><td>Normal</td><td>NotApplicable</td><td>Allowed</td><td>NotApplicable</td></tr><tr><td>Site2_NE_DR_NO</td><td>DR-OCUDR-A</td><td>Network OAM&P</td><td>Spare</td><td>N/A</td><td>Normal</td><td>0</td><td>Normal</td><td>NotApplicable</td><td>Allowed</td><td>NotApplicable</td></tr></table></div></div> | Network Element | Server | Role | OAM Max HA Role | Application Max HA Role | Status | DB Level | OAM Repl Status | SIG Repl Status | Repl Status | Repl Audit Status | Site2_NE_DR_NO | DR-OCUDR-B | Network OAM&P | Spare | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable | Site1_NE_NO | OCUDR-A | Network OAM&P | Active | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable | Site1_NE_NO | OCUDR-B | Network OAM&P | Standby | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable | Site2_NE_DR_NO | DR-OCUDR-A | Network OAM&P | Spare | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable |
| Network Element | Server | Role | OAM Max HA Role | Application Max HA Role | Status | DB Level | OAM Repl Status | SIG Repl Status | Repl Status | Repl Audit Status | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Site2_NE_DR_NO | DR-OCUDR-B | Network OAM&P | Spare | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Site1_NE_NO | OCUDR-A | Network OAM&P | Active | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Site1_NE_NO | OCUDR-B | Network OAM&P | Standby | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Site2_NE_DR_NO | DR-OCUDR-A | Network OAM&P | Spare | N/A | Normal | 0 | Normal | NotApplicable | Allowed | NotApplicable | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

Appendix G. Configuring Services for Dual Path HA

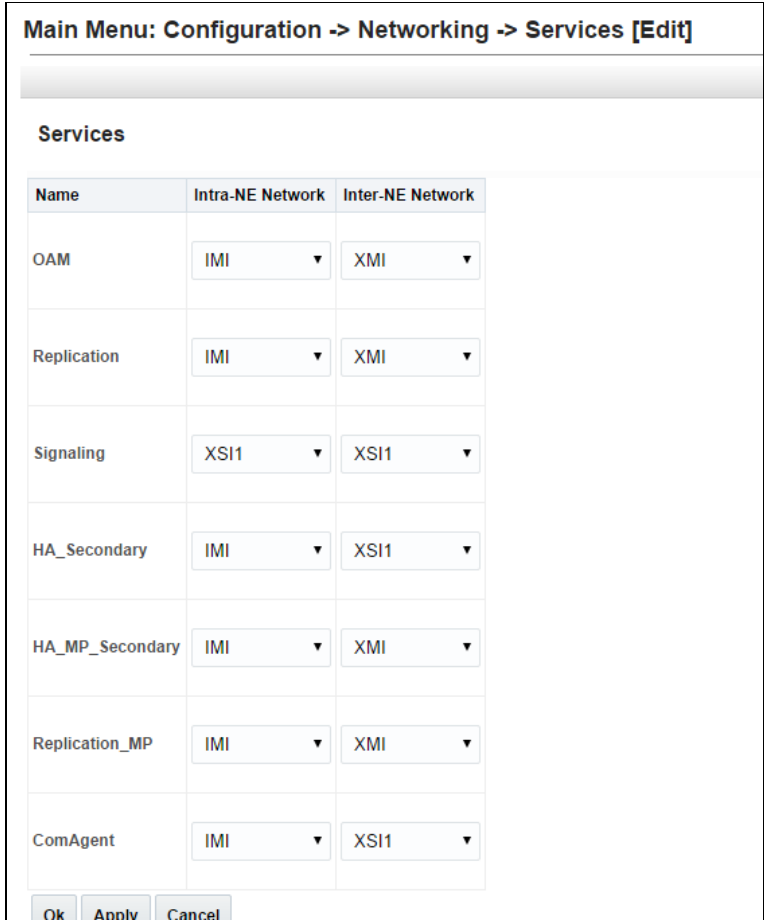
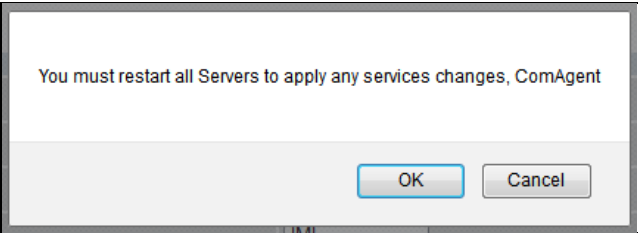
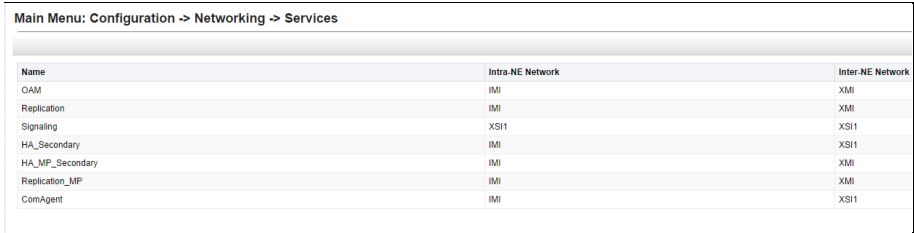
This Appendix provides the procedure for updating Oracle Communications User Data Repository Services for the Dual Path HA feature. This applies to all configurations that make use of a Secondary/DR Site.

This procedure verifies that all required materials are present.

Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.

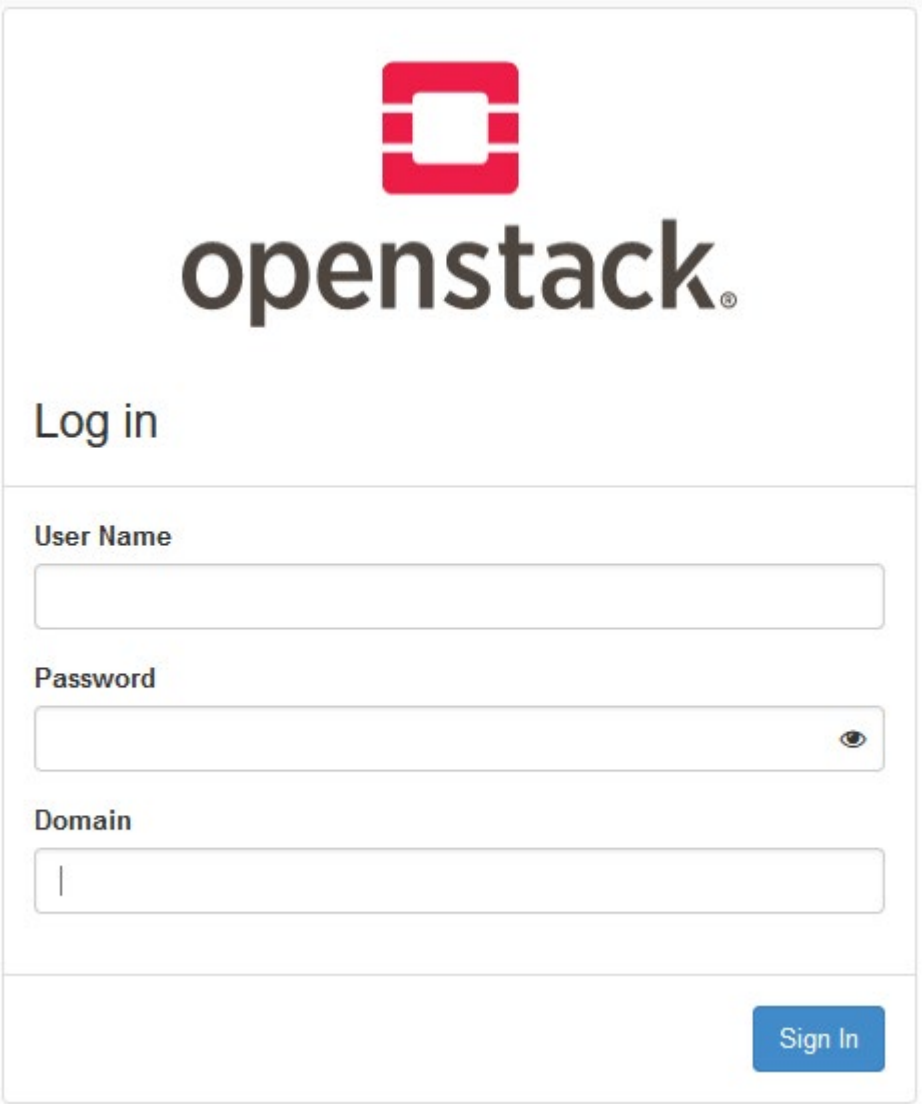
Procedure 18: Configuring Services for Dual Path HA

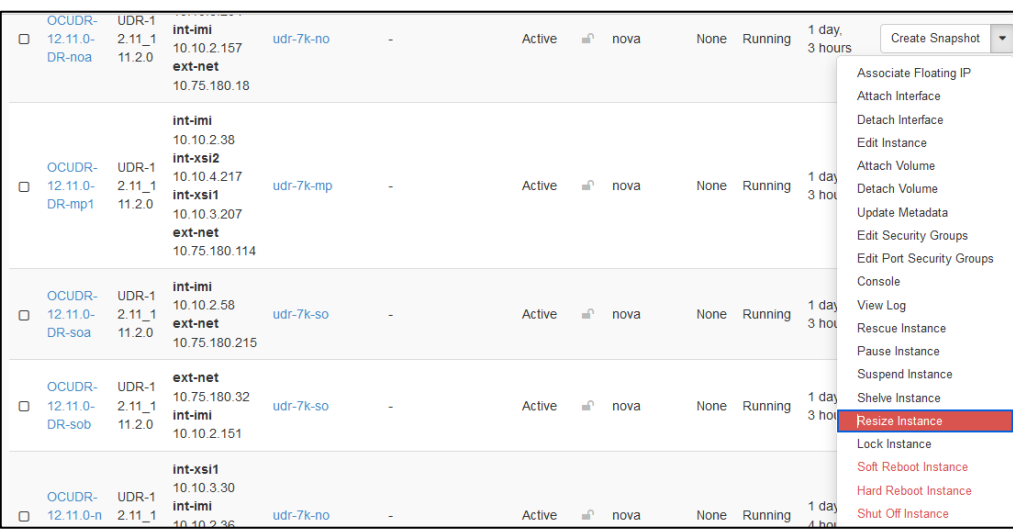
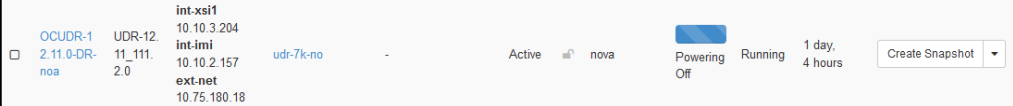
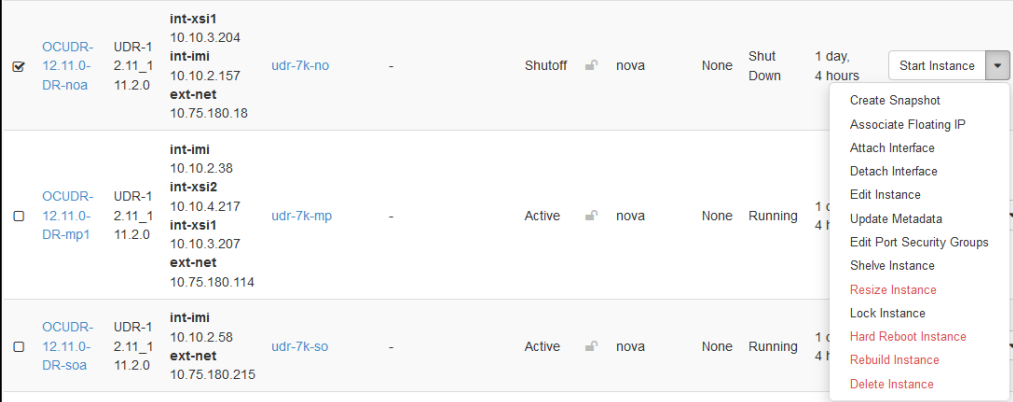
| Step | Procedure | Result | | | | | | | | | | | | | | | | | | | | | | | | |
|-----------------------------|--|--|------|------------------|------------------|-----|-----|-----|-------------|-----|-----|-----------|------|------|--------------|-----|------|-----------------|-----|-----|----------------|-----|-----|----------|-----|------|
| 1. <input type="checkbox"/> | Using the VIP address, access the primary NOAMP GUI. | Access the primary NOAMP GUI as specified in Appendix A. | | | | | | | | | | | | | | | | | | | | | | | | |
| 2. <input type="checkbox"/> | Active NOAMP VIP: Navigate to Main Menu → Configuration → Networking → Services | <div> Main Menu: Configuration → Networking → Services <table> <thead> <tr> <th>Name</th><th>Intra-NE Network</th><th>Inter-NE Network</th></tr> </thead> <tbody> <tr> <td>OAM</td><td>IMI</td><td>XMI</td></tr> <tr> <td>Replication</td><td>IMI</td><td>XMI</td></tr> <tr> <td>Signaling</td><td>XSI1</td><td>XSI1</td></tr> <tr> <td>HA_Secondary</td><td>IMI</td><td>XSI1</td></tr> <tr> <td>HA_MP_Secondary</td><td>IMI</td><td>XMI</td></tr> <tr> <td>Replication_MP</td><td>IMI</td><td>XMI</td></tr> <tr> <td>ComAgent</td><td>IMI</td><td>XSI1</td></tr> </tbody> </table> </div> | Name | Intra-NE Network | Inter-NE Network | OAM | IMI | XMI | Replication | IMI | XMI | Signaling | XSI1 | XSI1 | HA_Secondary | IMI | XSI1 | HA_MP_Secondary | IMI | XMI | Replication_MP | IMI | XMI | ComAgent | IMI | XSI1 |
| Name | Intra-NE Network | Inter-NE Network | | | | | | | | | | | | | | | | | | | | | | | | |
| OAM | IMI | XMI | | | | | | | | | | | | | | | | | | | | | | | | |
| Replication | IMI | XMI | | | | | | | | | | | | | | | | | | | | | | | | |
| Signaling | XSI1 | XSI1 | | | | | | | | | | | | | | | | | | | | | | | | |
| HA_Secondary | IMI | XSI1 | | | | | | | | | | | | | | | | | | | | | | | | |
| HA_MP_Secondary | IMI | XMI | | | | | | | | | | | | | | | | | | | | | | | | |
| Replication_MP | IMI | XMI | | | | | | | | | | | | | | | | | | | | | | | | |
| ComAgent | IMI | XSI1 | | | | | | | | | | | | | | | | | | | | | | | | |

| Step | Procedure | Result |
|-----------------------------|--|---|
| 3. <input type="checkbox"/> | Active NOAMP VIP: Change Service value. 1. Change Inter-NE HA_Secondary to XSI1 . 2. Click Apply . 3. Click OK . |   NOAMP and MP servers need to be restarted. |
| 4. <input type="checkbox"/> | Active NOAMP VIP: The Services configuration screen opens. |  |

| Step | Procedure | Result | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-----------------------------------|--------------------------|---|-----------------|-----------------|------------------|------|----|------------------|------|------------|----------------|---------|-----|------|------|------|------------|----------------|---------|-----|------|------|------|---------|-------------|---------|-----|------|------|------|---------|-------------|---------|-----|------|------|------|
| 5. <input type="checkbox"/> | Reboot all NOAMP servers | <p>Reboot all NOAMP servers either by using:</p> <ul style="list-style-type: none">The active NOAMP GUI Status & Manage → Server screen and click Reboot: <div><p>Main Menu: Status & Manage -> Server</p><div><div>Filter*</div><table><tr><th>Server Hostname</th><th>Network Element</th><th>Appl State</th><th>Alm</th><th>DB</th><th>Reporting Status</th><th>Proc</th></tr><tr><td>DR-OCUDR-A</td><td>Site2_NE_DR_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr><tr><td>DR-OCUDR-B</td><td>Site2_NE_DR_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr><tr><td>OCUDR-A</td><td>Site1_NE_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr><tr><td>OCUDR-B</td><td>Site1_NE_NO</td><td>Enabled</td><td>Err</td><td>Norm</td><td>Norm</td><td>Norm</td></tr></table></div><div><div>Stop</div><div>Restart</div><div>Reboot</div><div>NTP Sync</div><div>Report</div></div></div> <ul style="list-style-type: none">The terminal of each server with the reboot command: <pre>\$ sudo reboot</pre> <p>NOTE: This is performed on all NOAMPs.</p> | Server Hostname | Network Element | Appl State | Alm | DB | Reporting Status | Proc | DR-OCUDR-A | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | DR-OCUDR-B | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | OCUDR-A | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm | OCUDR-B | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm |
| Server Hostname | Network Element | Appl State | Alm | DB | Reporting Status | Proc | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DR-OCUDR-A | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DR-OCUDR-B | Site2_NE_DR_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-A | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OCUDR-B | Site1_NE_NO | Enabled | Err | Norm | Norm | Norm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| THIS PROCEDURE HAS BEEN COMPLETED | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

Appendix H. RESIZING VM GUEST DISK FOR UPGRADE**H.1 RESIZING VM GUEST DISK FOR UPGRADE ON OPENSTACK**

| Step | Procedure | Result |
|--------------------------------|---------------------------|---|
| 1. <input type="checkbox"/> | Login to cloud home page. |  The image shows the OpenStack login page. At the top is the OpenStack logo, which consists of a red square with a white 'O' inside, followed by the word 'openstack' in a dark grey, lowercase, sans-serif font. Below the logo is the text 'Log in' in a dark grey, sans-serif font. Underneath 'Log in' are three input fields: 'User Name', 'Password', and 'Domain'. The 'User Name' field is a simple text box. The 'Password' field is a text box with a small eye icon on the right side, indicating a password field. The 'Domain' field is a text box with a vertical line cursor inside. At the bottom right of the login form is a blue button with the text 'Sign In' in white. |

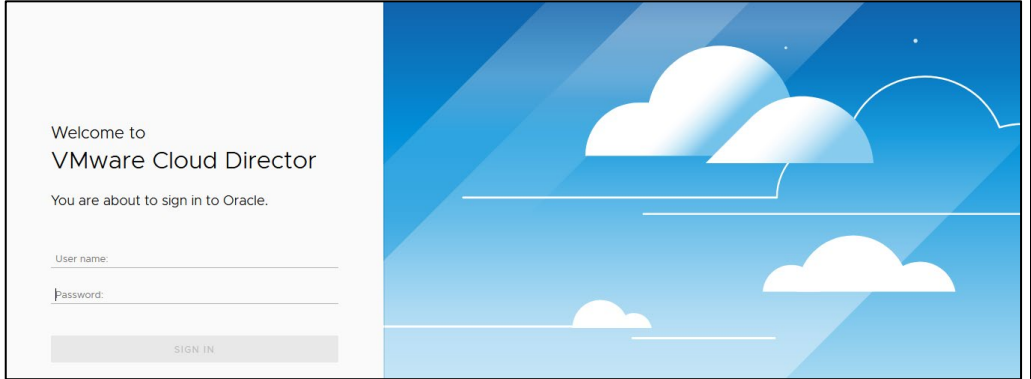
| | | |
|----|--|--|
| 2. | Go to instance page and shut off instance |  <p>Confirm Shut Off Instance</p> <p>You have selected: "OCUDR-12.11.0-DR-noa". Please confirm your selection. The instance(s) will be shut off.</p> <p>Cancel Shut Off Instance</p>  |
| 3. | Select the instance and resize using 'Resize Instance' option. |  |

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--------------------------|--|---|---|----------------------|---------------------|---|---------------|-----------------------|----------------------------------|----------------|------------------------|-----------|----------------|------------------------|--------------------------|----------------------|---------------------|---|---------------|---|----------------|------|-----------------------|-----------|----------------|-----------------------|--------------------------|----------------------|---------------------|---|---------------|---|--------|------|------|---------|----------------|-----------------|
| <p>4.</p> | <p>Please specify the new flavor that has 50 GB disk more than existing flavor used.</p> <p>And press 'Resize'</p> | <div> <div> <p>Old Flavor</p> <p>udr-7k-no</p> </div> <div> <p>New Flavor </p> <p>udr-no-7k-diu</p> </div> </div> <div> <p>Flavor Details</p> <table border="1"> <tr> <td>Name</td> <td>udr-no-7k-diu</td> </tr> <tr> <td>VCPUs</td> <td>8</td> </tr> <tr> <td>Root Disk</td> <td>500 GB</td> </tr> <tr> <td>Ephemeral Disk</td> <td>0 GB</td> </tr> <tr> <td>Total Disk</td> <td>500 GB</td> </tr> <tr> <td>RAM</td> <td>32,768 MB</td> </tr> </table> <p>Project Limits</p> <p>Number of Instances of Used</p> <p>Number of VCPUs of Used</p> <p>Total RAM of MB Used</p> <p>Cancel Resize</p> </div> <div> <table border="1"> <tr> <td><input type="checkbox"/></td> <td>OCUDR-12.11.0-DR-noa</td> <td>UDR-1 2.11_1 11.2.0</td> <td>int-xsi1 10.10.3.204 int-imi 10.10.2.157 ext-net 10.75.180.18</td> <td>udr-7k-no</td> <td>-</td> <td>Resize/Migrate </td> <td>nova</td> <td>Resizing or Migrating</td> <td>Shut Down</td> <td>1 day, 4 hours</td> <td>Associate Floating IP</td> </tr> </table> </div> | Name | udr-no-7k-diu | VCPUs | 8 | Root Disk | 500 GB | Ephemeral Disk | 0 GB | Total Disk | 500 GB | RAM | 32,768 MB | <input type="checkbox"/> | OCUDR-12.11.0-DR-noa | UDR-1 2.11_1 11.2.0 | int-xsi1 10.10.3.204 int-imi 10.10.2.157 ext-net 10.75.180.18 | udr-7k-no | - | Resize/Migrate | nova | Resizing or Migrating | Shut Down | 1 day, 4 hours | Associate Floating IP | | | | | | | | | | | | |
| Name | udr-no-7k-diu | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| VCPUs | 8 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Root Disk | 500 GB | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Ephemeral Disk | 0 GB | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Total Disk | 500 GB | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| RAM | 32,768 MB | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <input type="checkbox"/> | OCUDR-12.11.0-DR-noa | UDR-1 2.11_1 11.2.0 | int-xsi1 10.10.3.204 int-imi 10.10.2.157 ext-net 10.75.180.18 | udr-7k-no | - | Resize/Migrate | nova | Resizing or Migrating | Shut Down | 1 day, 4 hours | Associate Floating IP | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <p>5.</p> | <p>Click on 'Confirm Resize Migrate' button and start instance</p> | <div> <table border="1"> <tr> <td><input type="checkbox"/></td> <td>OCUDR-12.11.0-DR-noa</td> <td>UDR-1 2.11_1 11.2.0</td> <td>int-xsi1 10.10.3.204 int-imi 10.10.2.157 ext-net 10.75.180.18</td> <td>udr-no-7k-diu</td> <td>-</td> <td>Confirm or Revert Resize/Migrate </td> <td>nova</td> <td>None</td> <td>Shut Down</td> <td>1 day, 4 hours</td> <td>Confirm Resize/Migrate</td> </tr> </table> <table border="1"> <tr> <td><input type="checkbox"/></td> <td>OCUDR-12.11.0-DR-noa</td> <td>UDR-1 2.11_1 11.2.0</td> <td>int-xsi1 10.10.3.204 int-imi 10.10.2.157 ext-net 10.75.180.18</td> <td>udr-no-7k-diu</td> <td>-</td> <td>Shutoff </td> <td>nova</td> <td>None</td> <td>Shut Down</td> <td>1 day, 4 hours</td> <td>Start Instance</td> </tr> </table> <table border="1"> <tr> <td><input type="checkbox"/></td> <td>OCUDR-12.11.0-DR-noa</td> <td>UDR-1 2.11_1 11.2.0</td> <td>int-xsi1 10.10.3.204 int-imi 10.10.2.157 ext-net 10.75.180.18</td> <td>udr-no-7k-diu</td> <td>-</td> <td>Active </td> <td>nova</td> <td>None</td> <td>Running</td> <td>1 day, 4 hours</td> <td>Create Snapshot</td> </tr> </table> </div> | <input type="checkbox"/> | OCUDR-12.11.0-DR-noa | UDR-1 2.11_1 11.2.0 | int-xsi1 10.10.3.204 int-imi 10.10.2.157 ext-net 10.75.180.18 | udr-no-7k-diu | - | Confirm or Revert Resize/Migrate | nova | None | Shut Down | 1 day, 4 hours | Confirm Resize/Migrate | <input type="checkbox"/> | OCUDR-12.11.0-DR-noa | UDR-1 2.11_1 11.2.0 | int-xsi1 10.10.3.204 int-imi 10.10.2.157 ext-net 10.75.180.18 | udr-no-7k-diu | - | Shutoff | nova | None | Shut Down | 1 day, 4 hours | Start Instance | <input type="checkbox"/> | OCUDR-12.11.0-DR-noa | UDR-1 2.11_1 11.2.0 | int-xsi1 10.10.3.204 int-imi 10.10.2.157 ext-net 10.75.180.18 | udr-no-7k-diu | - | Active | nova | None | Running | 1 day, 4 hours | Create Snapshot |
| <input type="checkbox"/> | OCUDR-12.11.0-DR-noa | UDR-1 2.11_1 11.2.0 | int-xsi1 10.10.3.204 int-imi 10.10.2.157 ext-net 10.75.180.18 | udr-no-7k-diu | - | Confirm or Revert Resize/Migrate | nova | None | Shut Down | 1 day, 4 hours | Confirm Resize/Migrate | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <input type="checkbox"/> | OCUDR-12.11.0-DR-noa | UDR-1 2.11_1 11.2.0 | int-xsi1 10.10.3.204 int-imi 10.10.2.157 ext-net 10.75.180.18 | udr-no-7k-diu | - | Shutoff | nova | None | Shut Down | 1 day, 4 hours | Start Instance | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <input type="checkbox"/> | OCUDR-12.11.0-DR-noa | UDR-1 2.11_1 11.2.0 | int-xsi1 10.10.3.204 int-imi 10.10.2.157 ext-net 10.75.180.18 | udr-no-7k-diu | - | Active | nova | None | Running | 1 day, 4 hours | Create Snapshot | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| | | |
|----|--|--|
| 6. | Login to console of instance and execute the listed commands | <p># fdisk -c /dev/vda</p> <p>Note: Device name may differ from vda to some other name like sda, vdb, vdc etc..</p> <ul style="list-style-type: none"> ➔ Press letter 'm' (It will display all possible operations) ➔ Press letter 'n' (To add a new partition) ➔ Press letter 'p' (Primary extension) ➔ Press number '3' (Enter 3 or 4 as partition number or provide default choice) ➔ It will ask for sector value, provide default value as input) ➔ It will ask for size, provide '+50G' (To add 50GB, it depends upon VM flavor) <p>Note: If we get error like "Value Out of Range" for above step then provide "+49G" instead of "+50G"</p> <p>Example : vg size will become 150GB , if the previous size is 100GB</p> <ul style="list-style-type: none"> ➔ Press letter 't' (To change a partition's system id) ➔ Provide partition number which we have created in earlier step ➔ It will ask for HEX Code, enter '8e' ➔ Press letter 'w' (write table to disk and exit) <p>Example:</p> <pre>[root@OCUDR-DR-NOAMP-A filemgmt]# fdisk -c /dev/vda WARNING: cylinders as display units are deprecated. Use command 'u' to change units to sectors. Command (m for help): n Command action e extended p primary partition (1-4) p Partition number (1-4): 3 First cylinder (832204-1040253, default 832204): Using default value 832204 Last cylinder, +cylinders or +size{K,M,G} (832204-1040253, default 1040253): +50G Command (m for help): t Partition number (1-4): 3 Hex code (type L to list codes): 8e Changed system type of partition 3 to 8e (Linux LVM) Command (m for help): w The partition table has been altered! Calling ioctl() to re-read partition table. WARNING: Re-reading the partition table failed with error 16: Device or resource busy. The kernel still uses the old table. The new table will be used at the next reboot or after you run partprobe(8) or kpartx(8) Syncing disks. [root@OCUDR-DR-NOAMP-A filemgmt]# reboot</pre> |
| 7. | After step-6, reboot the instance | <p># reboot</p> |

| | | |
|-----------------------------------|---|--|
| 8. | After reboot, create physical volume and extend the volume group using it | <p>Note: Once partition is done then create physical volum using pvcreate command but after reboot.</p> <p># pvcreate <new physical volum name> Example: pvcreate /dev/vda3</p> <p># vgextend <vgname> <physical volume name> Example: vgextend vgroot /dev/vda3</p> <pre>[root@OCUDR-DR-NOAMP-A admusr]# pvs PV VG Fmt Attr PSize PFree /dev/vda2 vgroot lvm2 a--u 399.47g 117.62g [root@OCUDR-DR-NOAMP-A admusr]# [root@OCUDR-DR-NOAMP-A admusr]# pvcreate /dev/vda3 Physical volume "/dev/vda3" successfully created [root@OCUDR-DR-NOAMP-A admusr]# [root@OCUDR-DR-NOAMP-A admusr]# vgextend vgroot /dev/vda3 Volume group "vgroot" successfully extended [root@OCUDR-DR-NOAMP-A admusr]# [root@OCUDR-DR-NOAMP-A admusr]# vgs VG #PV #LV #SN Attr VSize VFree vgroot 2 11 0 wz--n- 449.44g 167.59g [root@OCUDR-DR-NOAMP-A admusr]#</pre> <p>Note: For knowledge.</p> <ul style="list-style-type: none"> • use vgs command to know the vg name • use fdisk -l /dev/vda command to know the partition name which we have created in above step. |
| THIS PROCEDURE HAS BEEN COMPLETED | | |

H.2 RESIZING VM GUEST DISK FOR UPGRADE ON VMWARE

| Step | Procedure | Result |
|--------------------------------|----------------------------|--|
| 1. <input type="checkbox"/> | Login to VMWare home page. |  |

2.

Go to vm page and shut off vm for which disk size needs to be updated

The screenshot displays the VMware Cloud Director interface. The top navigation bar includes 'vmw', 'VMware Cloud Director', 'Data Centers', 'Applications', and 'Networking'. The 'Virtual Machines' tab is selected, showing a list of 71 Virtual Machines. Two VMs are highlighted: 'UDR' and 'occne4-alberto-navarrete-b...'. Both are powered on and running Oracle Linux 6 (64-bit). The 'UDR' VM has 12 CPUs, 564 GB storage, and 64 GB memory. The 'occne4-alberto-navarrete-b...' VM has 1 CPU, 36 GB storage, and 4 GB memory.

Below the VM list, the 'All Virtual Machines' page is shown for the 'UDR' VM. The left sidebar contains a navigation menu with 'Compute', 'Networking', 'Storage', and 'Settings'. The 'General' tab is selected, showing the VM's state as 'Powered on'. The 'General' tab details include:

| Field | Value |
|------------------|-------------------------|
| Name | UDR |
| State | Powered on |
| Computer Name | UDR |
| Description | Testing purpose |
| Operating System | Oracle Linux 6 (64-bit) |
| Boot Delay | 0 |
| Storage Policy | * |

The 'All Virtual Machines' page also shows the 'UDR' VM as 'Powered off' in the 'General' tab. The 'General' tab details include:

| Field | Value |
|------------------|-------------------------|
| Name | UDR |
| State | Powered off |
| Computer Name | UDR |
| Description | Testing purpose |
| Operating System | Oracle Linux 6 (64-bit) |
| Boot Delay | 0 |
| Storage Policy | * |

3.

Select the 'Hard disk' and edit using 'Edit' option.

All Virtual Machines > UDR

UDR

Powered off

POWER ONPOWER OFFLAUNCH WEB CONSOLELAUNCH REMOTE CONSOLEALL ACTIONS

General

Security Tags

Hardware

Removable Media

Hard Disks

Compute

Advanced

NICs

Guest OS

Customization

VM Storage Policy

EDIT

| Index | Name | Shared | Size | Policy | IOPS | Bus Type | Bus Number | Unit Number |
|-------|------|--------|--------|--------------------|------|--------------------|------------|-------------|
| 0 | - | No | 400 GB | VM default poli... | 0 | Paravirtual (SC... | 0 | 0 |

1 items

Edit Hard Disks for UDR

ADD

| Index | Name | Shared | Size | Policy | IOPS | Bus Type | Bus Number | Unit Number |
|-------|------|--------|--------|--------|----------------|--------------------|------------|-------------|
| 0 | - | No | 400 GB | VM def | Not Applicable | Paravirtual (SCSI) | 0 | 0 |

DISCARDSAVE

4.

Please specify the new disk size
And press 'Save' button

Edit Hard Disks for UDR

ADD

| Index | Name | Shared | Size | Policy | IOPS | Bus Type | Bus Number | Unit Number |
|-------|------|--------|--------|--------|----------------|--------------------|------------|-------------|
| 0 | - | No | 500 GB | VM def | Not Applicable | Paravirtual (SCSI) | 0 | 0 |

DISCARDSAVE

5.

Click on 'Power ON'
button to start VM

All Virtual Machines > UDR

UDR
Powered off

POWER ON POWER OFF LAUNCH WEB CONSOLE LAUNCH REMOTE CONSOLE ALL ACTIONS ▾

General

Security Tags

Hardware

Removable Media

Hard Disks

Compute

Advanced

NICs

Guest OS

Customization

VM Storage Policy *

EDIT

| Index | Name | Shared | Size | Policy | IOPS | Bus Type | Bus Number | Unit Number |
|-------|------|--------|--------|--------------------|------|--------------------|------------|-------------|
| 0 | - | No | 500 GB | VM default poli... | 0 | Paravirtual (SC... | 0 | 0 |

1 items

All Virtual Machines > UDR

UDR
Powered on

POWER ON POWER OFF LAUNCH WEB CONSOLE LAUNCH REMOTE CONSOLE ALL ACTIONS ▾

General

Security Tags

Hardware

Removable Media

Hard Disks

Compute

Advanced

NICs

Guest OS

Customization

VM Storage Policy *

EDIT

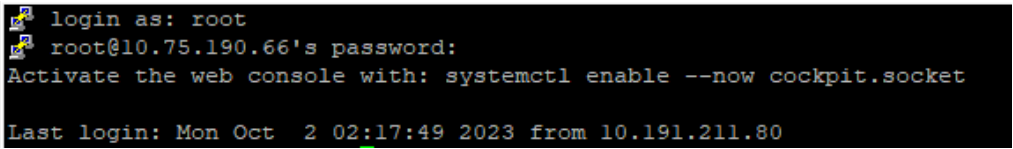
| Index | Name | Shared | Size | Policy | IOPS | Bus Type | Bus Number | Unit Number |
|-------|------|--------|--------|--------------------|------|--------------------|------------|-------------|
| 0 | - | No | 500 GB | VM default poli... | 0 | Paravirtual (SC... | 0 | 0 |

1 items

| | | |
|----|--|--|
| 6. | Login to console of instance and execute the listed commands | <p># fdisk -c /dev/vda</p> <p>Note: Device name may differ from vda to some other name like sda, vdb, vdc etc..</p> <ul style="list-style-type: none"> ➔ Press letter 'm' (It will display all possible operations) ➔ Press letter 'n' (To add a new partition) ➔ Press letter 'p' (Primary extension) ➔ Press number '3' (Enter 3 or 4 as partition number or provide default choice) ➔ It will ask for sector value, provide default value as input) ➔ It will ask for size, provide '+50G' (To add 50GB, it depends upon VM flavor) <p>Note: If we get error like "Value Out of Range" for above step then provide "+49G" instead of "+50G"</p> <p>Example : vg size will become 150GB , if the previous size is 100GB</p> <ul style="list-style-type: none"> ➔ Press letter 't' (To change a partition's system id) ➔ Provide partition number which we have created in earlier step ➔ It will ask for HEX Code, enter '8e' ➔ Press letter 'w' (write table to disk and exit) <p>Example:</p> <pre>[root@OCUDR-DR-NOAMP-A filemgmt]# fdisk -c /dev/vda WARNING: cylinders as display units are deprecated. Use command 'u' to change units to sectors. Command (m for help): n Command action e extended p primary partition (1-4) p Partition number (1-4): 3 First cylinder (832204-1040253, default 832204): Using default value 832204 Last cylinder, +cylinders or +size{K,M,G} (832204-1040253, default 1040253): +50G Command (m for help): t Partition number (1-4): 3 Hex code (type L to list codes): 8e Changed system type of partition 3 to 8e (Linux LVM) Command (m for help): w The partition table has been altered! Calling ioctl() to re-read partition table. WARNING: Re-reading the partition table failed with error 16: Device or resource busy. The kernel still uses the old table. The new table will be used at the next reboot or after you run partprobe(8) or kpartx(8) Syncing disks. [root@OCUDR-DR-NOAMP-A filemgmt]# reboot</pre> |
| 7. | After step-6, reboot the instance | <p># reboot</p> |

| | | |
|-----------------------------------|---|---|
| 8. | After reboot, create physical volume and extend the volume group using it | <p>Note: Once partition is done then create physical volum using pvcreate command but after reboot.</p> <pre># pvcreate <new physical volum name></pre> <p>Example: pvcreate /dev/vda3</p> <pre># vgextend <vgname> <physical volume name></pre> <p>Example: vgextend vgroup /dev/vda3</p> <pre>[root@OCUDR-DR-NOAMP-A admusr]# pvs PV VG Fmt Attr PSize PFree /dev/vda2 vgroup lvm2 a--u 399.47g 117.62g [root@OCUDR-DR-NOAMP-A admusr]# [root@OCUDR-DR-NOAMP-A admusr]# pvcreate /dev/vda3 Physical volume "/dev/vda3" successfully created [root@OCUDR-DR-NOAMP-A admusr]# [root@OCUDR-DR-NOAMP-A admusr]# vgextend vgroup /dev/vda3 Volume group "vgroup" successfully extended [root@OCUDR-DR-NOAMP-A admusr]# [root@OCUDR-DR-NOAMP-A admusr]# vgs VG #PV #LV #SN Attr VSize VFree vgroup 2 11 0 wz--n- 449.44g 167.59g [root@OCUDR-DR-NOAMP-A admusr]#</pre> <p>Note: For knowledge.</p> <ul style="list-style-type: none"> • use vgs command to know the vg name • use fdisk -l /dev/vda command to know the partition name which we have created in above step. |
| THIS PROCEDURE HAS BEEN COMPLETED | | |

H.3 RESIZING VM GUEST DISK FOR UPGRADE ON KVM

| Step | Procedure | Result |
|--------------------------------|---|---|
| 1. <input type="checkbox"/> | Login to KVM host console where all KVM based machines are present. |  <pre>login as: root root@10.75.190.66's password: Activate the web console with: systemctl enable --now cockpit.socket Last login: Mon Oct 2 02:17:49 2023 from 10.191.211.80</pre> |
| 2. | Shutdown the VM for which disk size needs to be updated | <pre># virsh shutdown UDR-12.11.1.0.0_111.6.0 [root@X5-2-OCUDR-OL-6 ~]# virsh list --all Id Name State ----- 139 UDR-12.11.0.0.0_111.3.0 running - UDR-12.11.1.0.0_111.6.0 shut off</pre> |
| 3. | Extend the disk size of VM. | <pre># qemu-img resize /home/image/UDR-12.11.1.0.0_111.6.0.qcow2 +50G</pre> <p>Image resized.</p> <p>Note: The path of guest img may differ in customer setup.</p> |
| 4. | List the VM machines | <pre># virsh list --all [root@X5-2-OCUDR-OL-6 ~]# virsh list --all Id Name State ----- 139 UDR-12.11.0.0.0_111.3.0 running - UDR-12.11.1.0.0_111.6.0 shut off [root@X6-2-OCUDR-OL8 ~]#</pre> |

| | | |
|----|--------------|---|
| 5. | Start the VM | <pre># virsh start UDR-12.11.1.0.0_111.6.0 Domain 'UDR-12.11.0.0.0_111.5.0' started [root@X5-2-OCUDR-OL6 ~]# virsh list --all Id Name State ----- 139 UDR-12.11.0.0.0_111.3.0 running 224 UDR-12.11.1.0.0_111.6.0 running [root@X5-2-OCUDR-OL6 ~]#</pre> |
|----|--------------|---|

| | | |
|----|--|---|
| 6. | Login to console of instance and execute the listed commands | <p># fdisk -c /dev/sda</p> <p>Note: Device name may differ from vda to some other name like sda, vdb, vdc etc..</p> <ul style="list-style-type: none"> ➔ Press letter 'm' (It will display all possible operations) ➔ Press letter 'n' (To add a new partition) ➔ Press letter 'p' (Primary extension) ➔ Press number '3' (Enter 3 or 4 as partition number or provide default choice) ➔ It will ask for sector value, provide default value as input) ➔ It will ask for size, provide '+50G' (To add 50GB, it depends upon VM flavor) <p>Note: If we get error like "Value Out of Range" for above step then provide "+49G" instead of "+50G"</p> <p>Example : vg size will become 150GB , if the previous size is 100GB</p> <ul style="list-style-type: none"> ➔ Press letter 't' (To change a partition's system id) ➔ Provide partition number which we have created in earlier step ➔ It will ask for HEX Code, enter '8e' ➔ Press letter 'w' (write table to disk and exit) <p>Example:</p> <pre>[root@UDR-SO-A ~]# fdisk -c /dev/sda</pre> <p>Welcome to fdisk (util-linux 2.32.1).</p> <p>Changes will remain in memory only, until you decide to write them.</p> <p>Be careful before using the write command.</p> <p>GPT PMBR size mismatch (209715199 != 314572799) will be corrected by write.</p> <p>The backup GPT table is not on the end of the device. This problem will be corrected by write.</p> <p>Command (m for help): n</p> <p>Partition number (3-128, default 3): 3</p> <p>First sector (209715167-314572766, default 209715200):</p> <p>Last sector, +sectors or +size{K,M,G,T,P} (209715200-314572766, default 314572766): +50G</p> <p>Created a new partition 3 of type 'Linux filesystem' and of size 50 GiB.</p> <p>Command (m for help): t</p> |
|----|--|---|

| | | |
|----|-----------------------------------|--|
| | | <p>Partition number (1-3, default 3): 3</p> <p>Partition type (type L to list all types): 8e</p> <p>Type of partition 3 is unchanged: Linux filesystem.</p> <p>Command (m for help): w</p> <p>The partition table has been altered.</p> <p>Syncing disks.</p> <p>[root@localhost ~]# reboot</p> <p>[root@localhost ~]# pvcreate /dev/sda3</p> <p>Physical volume "/dev/sda3" successfully created.</p> <p>[root@UDR-SO-A ~]# pvs</p> <pre> PV VG Fmt Attr PSize PFree /dev/sda2 vgroot lvm2 a-- <99.50g 24.26g /dev/sda3 lvm2 --- 49.00g 49.00g </pre> <p>[root@localhost ~]# vgextend vgroot /dev/sda3</p> <p>Volume group "vgroot" successfully extended</p> <p>[root@UDR-SO-A ~]# vgs</p> <pre> VG #PV #LV #SN Attr VSize VFree vgroot 2 11 0 wz--n- 149.49g <74.26g </pre> <p>[root@IUDR-SO-A ~]#</p> |
| 7. | After step-6, reboot the instance | # reboot |

| | | |
|-----------------------------------|---|---|
| 8. | After reboot, create physical volume and extend the volume group using it | <p>Note: Once partition is done then create physical volum using pvcreate command but after reboot.</p> <pre># pvcreate <new physical volum name></pre> <p>Example: pvcreate /dev/vda3</p> <pre># vgextend <vgname> <physical volume name></pre> <p>Example: vgextend vgroot /dev/vda3</p> <pre>[root@OCUDR-DR-NOAMP-A admusr]# pvs PV VG Fmt Attr PSize PFree /dev/vda2 vgroot lvm2 a--u 399.47g 117.62g [root@OCUDR-DR-NOAMP-A admusr]# [root@OCUDR-DR-NOAMP-A admusr]# pvcreate /dev/vda3 Physical volume "/dev/vda3" successfully created [root@OCUDR-DR-NOAMP-A admusr]# [root@OCUDR-DR-NOAMP-A admusr]# vgextend vgroot /dev/vda3 Volume group "vgroot" successfully extended [root@OCUDR-DR-NOAMP-A admusr]# [root@OCUDR-DR-NOAMP-A admusr]# vgs VG #PV #LV #SN Attr VSize VFree vgroot 2 11 0 wz--n- 449.44g 167.59g [root@OCUDR-DR-NOAMP-A admusr]#</pre> <p>Note: For knowledge.</p> <ul style="list-style-type: none"> • use vgs command to know the vg name • use fdisk -l /dev/vda command to know the partition name which we have created in above step. |
| THIS PROCEDURE HAS BEEN COMPLETED | | |

Appendix I. My Oracle Support

My Oracle Support (<https://support.oracle.com>) is your initial point of contact for all product support and training needs. A representative at Customer Access Support (CAS) can assist you with My Oracle Support registration.

Call the CAS main number at 1-800-223-1711 (toll-free in the US), or call the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html>. When calling, make these selections on the Support telephone menu:

1. Select **2** for New Service Request
2. Select **3** for Hardware, Networking and Solaris Operating System Support
3. Select one of the following options:
 - o For Technical issues such as creating a Service Request (SR), Select **1**
 - o For Non-technical issues such as registration or assistance with My Oracle Support, Select **2**

You are connected to a live agent who can assist you with My Oracle Support registration and opening a support ticket.

My Oracle Support is available 24 hours a day, 7 days a week, 365 days a year.

Appendix J. Locate Product Documentation on the Oracle Help Center SITE

Oracle Communications customer documentation is available on the web at the Oracle Help Center (OHC) site, <http://docs.oracle.com>. You do not have to register to access these documents. Viewing these files requires Adobe Acrobat Reader, which can be downloaded at <http://www.adobe.com>.

1. Log into the Oracle Technology Network site at <http://docs.oracle.com>.
2. Select the **Find a product**.
3. Enter `User Data Repository`

Takes you to CGBU Documentation.

A list of the documentation set for the selected product and release displays.

4. Select **User Data Repository** followed by version
5. To download a file to your location, right-click the **PDF**, select **Save target as** (or similar command based on your browser), and save to a local folder.