

Oracle® Communications

EAGLE SLIC Card Configuration User's Guide



Release 48.0
G48969-01
December 2025

ORACLE®

Copyright © 2020, 2025, Oracle and/or its affiliates.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software, software documentation, data (as defined in the Federal Acquisition Regulation), or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, then the following notice is applicable:

U.S. GOVERNMENT END USERS: Oracle programs (including any operating system, integrated software, any programs embedded, installed, or activated on delivered hardware, and modifications of such programs) and Oracle computer documentation or other Oracle data delivered to or accessed by U.S. Government end users are "commercial computer software," "commercial computer software documentation," or "limited rights data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, reproduction, duplication, release, display, disclosure, modification, preparation of derivative works, and/or adaptation of i) Oracle programs (including any operating system, integrated software, any programs embedded, installed, or activated on delivered hardware, and modifications of such programs), ii) Oracle computer documentation and/or iii) other Oracle data, is subject to the rights and limitations specified in the license contained in the applicable contract. The terms governing the U.S. Government's use of Oracle cloud services are defined by the applicable contract for such services. No other rights are granted to the U.S. Government.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle®, Java, MySQL, and NetSuite are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Inside are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Epyc, and the AMD logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information about content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services unless otherwise set forth in an applicable agreement between you and Oracle. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services, except as set forth in an applicable agreement between you and Oracle.

Contents

1	Introduction	
	Overview	1
	References	1
2	Hardware Configuration	
3	Supported Features	
4	Configuration of Supported Features	
	Adding a LIM-E1 Card	1
	Adding a LIM-T1 Card	6
	Adding a Service Module	10
	Adding an IPSG Card	40
	Configuring DEIR on SLIC	46
	ENUM Configuration	47
	Provisioning SIP Cards	48
	Adding an IPSM Card	48
	Adding an IPSM Card as SFLOG	58
	Configuring a MCP Module	68
	Configuring EROUTE/STC Card	75
	Configuring the Stateful Applications (SFAPP)	84
	Adding IPSM as EEDB	87

My Oracle Support (MOS)

[My Oracle Support \(MOS\)](#) is your initial point of contact for any of the following requirements:

- **Product Support:**
The generic product related information and resolution of product related queries.
- **Critical Situations**
A critical situation is defined as a problem with the installed equipment that severely affects service, traffic, or maintenance capabilities, and requires immediate corrective action. Critical situations affect service and/or system operation resulting in one or several of these situations:
 - A total system failure that results in loss of all transaction processing capability
 - Significant reduction in system capacity or traffic handling capability
 - Loss of the system's ability to perform automatic system reconfiguration
 - Inability to restart a processor or the system
 - Corruption of system databases that requires service affecting corrective actions
 - Loss of access for maintenance or recovery operations
 - Loss of the system ability to provide any required critical or major trouble notificationAny other problem severely affecting service, capacity/traffic, billing, and maintenance capabilities may be defined as critical by prior discussion and agreement with Oracle.
- **Training Need**
Oracle University offers training for service providers and enterprises.

My Oracle Support (<https://support.oracle.com>) is your initial point of contact for all product support and training needs. A representative at Customer Access Support can assist you with My Oracle Support registration.

Call the Customer Access Support main number at 1-800-223-1711 (toll-free in the US), or call the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html>. When calling, make the selections in the sequence shown below on the Support telephone menu:

- For Technical issues such as creating a new Service Request (SR), select **1**.
- For Non-technical issues such as registration or assistance with My Oracle Support, select **2**.
- For Hardware, Networking and Solaris Operating System Support, select **3**.

You are connected to a live agent who can assist you with My Oracle Support registration and opening a support ticket.

My Oracle Support is available 24 hours a day, 7 days a week, 365 days a year.

Acronyms

The following table provides information about the acronyms and the terminology used in the document.

Table Acronyms

Acronym	Definition
DTA	Database Transport Access
EGTT	Enhanced Global Title Translation
EIR	Equipment Identity Register
GTT	Global Title Translation
GWS	Gateway Screening
MASP	Maintenance and Administration Subsystem Processor
MSU	Message Signaling Unit
SCCP	Signaling Connection Control Part
SLIC	Service and Link Interface Card

What's New in This Guide

This section introduces the documentation updates for Release 48.0 in Oracle Communications EAGLE SLIC Card Configuration User's Guide.

Release 48.0 - G48969-01, December 2025

There are no updates in the document for this release.

1

Introduction

This chapter provides a brief description of the SLIC Card features of Oracle Communications EAGLE. The chapter also includes the scope, audience, and organization of the manual, how to find related publications, and how to contact Oracle for assistance.

Overview

The Oracle Communications EAGLE Service and Link Interface Card (SLIC) is a single-slot, multi-use card that runs multiple applications.

See *EAGLE Card Overview* in *EAGLE Release Notice* for current GPL and Application compatibility. When provisioning the SLIC card, the card type will be SLIC when plugged in.

This document describes the features supported by SLIC Card with the corresponding configurations. For more information on SLIC Card, refer to the *Oracle Communications Eagle Hardware Reference Guide*.

References

Refer to the following documents for information on configuration of features that run on SLIC card(s):

- *Database Administration - Features User's Guide*
- *Database Administration - GTT User's Guide*
- *Database Administration - IP7 Secure Gateway User's Guide*
- *Database Administration - SS7 User's Guide*
- *EIR User's Guide*
- *ENUM User's Guide*
- *Hardware Reference*

2

Hardware Configuration

The following table lists the hardware configuration specifications for the SLIC card:

Table 2-1 SLIC Hardware Configuration Specifications

Application	Adapter	Quantity	Cable	Cable Quantity	Remark
DEIR	830-1102-03	4	830-1174-XX CAT6A 830-1404-XX	2	
SCCP with EPAP	830-1102-03	2	830-1174-XX CAT6A 830-1404-XX	2	SCCP with EPAP
	830-1102-03	3	830-1174-XX CAT6A 830-1404-XX	2	SCCP with EPAP and Visualization
SIP	830-1102-03	4	830-1174-XX CAT6A 830-1404-XX	2	
ENUM	830-1102-03	4	830-1174-XX CAT6A 830-1404-XX	2	
SFAPP	830-1102-03	1	830-1174-XX CAT6A 830-1404-XX	2	
SCCP without EPAP (GTT Only Cards)	830-1102-03	0	830-1174-XX CAT6A 830-1404-XX	2	
IPSG	830-1102-03	2	830-1174-XX CAT6A 830-1404-XX	4	
IPS	830-1102-03	1	830-1174-XX	1	
MCP	830-1102-03	1	830-1174-XX	1	
STC	830-1102-03	1	830-1174-XX	1	
E1	No adapters required		7112462 830-1197-XX or non-ROHS 830-0949-XX	1	
T1	No adapters required		7112462 830-1197-XX or non-ROHS 830-0949-XX	1	

3

Supported Features

This section describes the features that run on SLIC card(s):

- **DEIR**
The EIR feature can be used to reduce the number of GSM mobile handset thefts by providing a mechanism that allows network operators to prevent stolen or disallowed handsets from accessing the network.
- **E1/T1**
The E1 interface terminates or distributes E1 facility signals for the purpose of processing the SS7 signaling links carried by the E1 carrier. The T1 interface terminates or distributes T1 facility signals for the purpose of processing the SS7 signaling links carried by the T1 carrier.
- **ENUM**
The ENUM Mobile Number Portability and Tier One Address Resolution (ENUM) feature enhances the ability of EAGLE to access the Number Portability database (RxDB) using ENUM protocol. Using the ENUM interface supported on UDP, EAGLE is able to process a destination number lookup in an IP-based addressing scheme in the Number Portability database and provide a routing solution to the originating carrier.
- **GTT**
The Global Title Translation (GTT) feature is designed for the signaling connection control part (SCCP) of the SS7 protocol. The EAGLE uses this feature to determine to which service database to send the query message when a Message Signaling Unit (MSU) enters the EAGLE and more information is needed to route the MSU.
- **IPSG**
The IP7 Secure Gateway functionality in the EAGLE provides connectivity between SS7 and IP networks, enabling messages to pass between the SS7 network domain and the IP network domain
- **SCCP (ExAP Interface)**
The features using SCCP protocol such as, Database Transport Access (DTA), GSM MAP Screening, and more uses SLIC card. For details related to feature configurations, refer to the feature guides.
- **SIP**
The SIP NP feature provides SIP-based Number Portability using EAGLE's RxDB (RTDB/ RIDB). This feature adds a SIP interface to allow SIP NP requests to be received by an EAGLE card, processed by the EAGLE's RxDB, and a response transmitted back to the requestor.
- **IPSM**
A card that provides an IP connection for the IPUI (Telnet) and FTP-based Table Retrieve features. The IPSM is a GPSM-II card with a one Gigabyte (UD1G) expansion memory board in a single-slot assembly running the IPS application.
- **SFAPP**
Stateful Applications allow the Signaling Transfer Point (STP) to validate the messages coming in for a subscriber roaming out by validating them against the Visitor Location Register (VLR) the subscriber was last seen by the Home Location Register (HLR). Once the HLR provides a validity of the new VLR, the EAGLE then lets the message into the

network. If the message is not validated, it is handled per configuration (silent discard, fallback, or respond with error).[SS1] [SS1]Description to be reviewed

- **EROUTE**
Ethernet Routing transfers link information messaging from the EAGLE LIM cards to the Integrated Sentinel using TCP/IP and EAGLE Monitor Protocol (EMP). Implemented in Signaling Transport Cards (STC).[SS1] [SS2] [SS1]Description to be reviewed [SS2]Also, please share the configuration details for this feature.
- **MCP**
The MCPM is an E5-MCPM-B card running MCPHC GPL. Measurement Collection and Polling Module (MCPM), is used for the Measurements Platform feature, to the database using the ent-card command. The MCPM provides an interface between the EAGLE and the customer's network.[SS1] [SS2] [SS1]Description to be reviewed [SS2]Also, please share the configuration details for this feature.

4

Configuration of Supported Features

This chapter describes the procedures for configuring the features supported on SLIC card(s).

Adding a LIM-E1 Card

The **LIM-E1** card is provisioned as either an **E1** card or a channel card in the database using the `ent-card` command.

The `ent-card` command uses these parameters.

`:loc` – The location of the card being added to the database.

Note

The **HC-MIM** can be inserted only in a odd-numbered card location. The **HC-MIM** will not power up if it is inserted in an even-numbered card location. All the **E1** backplane cabling should be removed from the B connector for the slot that the **HC-MIM** will occupy.

The **HC-MIM** occupies two card locations, so the even numbered card location adjacent to the odd numbered slot where the **HC-MIM** has been inserted must be empty, as shown in the following table. The **HC-MIM** is connected to the network through the odd numbered card slot connector.

Table 4-1 HC-MIM Card Locations

Location of the HC-MIM	Empty Card Location	Location of the HC-MIM	Empty Card Location
Slot 01	Slot 02	Slot 11	Slot 12
Slot 03	Slot 04	Slot 13	Slot 14
Slot 05	Slot 06	Slot 15	Slot 16
Slot 07	Slot 08	Slot 17	Slot 18

The **E1**, **E1/T1 MIM** and **E5-E1T1** cards occupy one card location. These cards can be placed in any card location except for even numbered card locations whose adjacent odd numbered card location is occupied by a card that occupies two card locations.

`:type` – The type of card being added to the database. For this procedure, the value of this parameter is `limel` (**E1** card) or `limch` (channel card).

Note

The **HC-MIM** and **E5-E1T1** card cannot be provisioned as a channel card.

:appl – The application software that is assigned to the card. For this procedure, the value of this parameter is either `ccs7itu` or `ss7ansi`.

The shelf to which the card is to be added must already be in the database. This can be verified with the `rtrv-shlf` command. If the shelf is not in the database, see the Adding a Shelf procedure in *Database Administration - System Management User's Guide*.

The examples in this procedure are used to add the **LIM-E1** cards in card locations 1201, 1202, 1203, 1204, 1211, and 1212 to the database.

1. Display the cards in the **EAGLE** using the `rtrv-card` command.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
CARD   TYPE      APPL      LSET NAME    LINK SLC LSET NAME    LINK SLC
1102   TSM          GLS
1113   GSPM          OAM
1114   TDM-A
1115   GSPM          OAM
1116   TDM-B
1117   MDAL
```

The cards should be distributed throughout the **EAGLE** for proper power distribution. Refer to *Installation Guide* for the shelf power distribution.

2. Verify that the correct hardware has been installed on the **EAGLE** to support the **E1** card as shown in *Installation Guide*.
3. Physically verify that the **E1** card has been installed into the card location that will be specified in step 6.

If the **E1** card is an **HC-MIM**, make sure the **HC-MIM** is installed according to the card location requirements. If a card is installed and provisioned in the even numbered card location adjacent to the desired odd numbered card, either choose another card location to install and provision the **HC-MIM**, or remove the card in the even-numbered card location by performing the appropriate procedure shown in the following table.

Note

Channel cards must be installed in the same shelf as the **E1** card that is servicing the timeslots on those channel cards.

Table 4-2 Card Removal Procedures

Card Application	Procedure
SS7ANSI, ATMANSI, CCS7ITU, ATMITU	"Removing an SS7 " in Chapter 4, "System Configuration Procedures" in <i>Database Administration - System Management User's Guide</i> "Removing a LIM-E1 Card" "Removing a LIM-T1 Card"
VSCCP	Removing a Service Module in Chapter 2 in <i>Database Administration - GTT User's Guide</i>

Table 4-2 (Cont.) Card Removal Procedures

Card Application	Procedure
GLS	Removing a GLS Card in Chapter 2, Gateway Screening (GWS) Overview, in <i>Database Administration - GWS User's Guide</i>
IPLIM, IPLIMI, SS7IPGW, IPGWI	"Removing an IPLIMx Card" or Removing an IPGWx Card" in <i>Database Administration - IP7 User's Guide</i>
IPSG	"Removing an IPSG Card" in <i>Database Administration - IP7 User's Guide</i>
EROUTE	"Removing an STC Card" in <i>Database Administration - Features User's Guide</i>
MCP	"Removing an MCPM " in Chapter 4, "System Configuration Procedures" in <i>Database Administration - System Management User's Guide</i>
IPS	"Removing an IPSM " in Chapter 4, "System Configuration Procedures" in <i>Database Administration - System Management User's Guide</i>

Note

If the **E1** card being added in this procedure is not an **HC-MIM** or **E5-E1T1** card, continue the procedure with step 7.

- If the card is an EPM-B based card (E5-E1T1-B), enter the `rtrv-stpopts` command to verify whether or not the MFC option is on. If the card is not an EPM-B based card, continue the procedure with step 5.

This is an example of the possible output.

```
rlghncxa03w 11-10-17 16:02:05 GMT EAGLE5 44.0.0
STP OPTIONS
-----
MFC                                off
```

The `rtrv-stpopts` command output contains other fields that are not used by this procedure. To see all fields displayed by the `rtrv-stpopts` command, see the `rtrv-stpopts` command description in *Commands User's Guide*.

If the **MFC** option is off, perform the Configuring the MFC Option procedure in *Database Administration - System Management User's Guide* to turn on the MFC option.

If the MFC option is on or the MFC Option procedure in *Database Administration - System Management User's Guide* was performed in this step, continue the procedure with step 5.

- The Fan feature must be turned on. Enter the `rtrv-feat` command to verify that the Fan feature is on.

If the Fan feature is on, shown in the `rtrv-feat` output in this step, the `FAN` field should be set to `on`.

The `rtrv-feat` command output contains other fields that are not used by this procedure. To see all fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in *Commands User's Guide*.

If the Fan feature is on, continue the procedure with step 7.

If the Fan feature is off, continue the procedure with step 6.

6. Turn the Fan feature on by entering this command.

```
chg-feat:fan=on
```

Note

Once the Fan feature is turned on with the `chg-feat` command, it cannot be turned off.

When the `chg-feat` has successfully completed, this message appears.

```
rlghncxa03w 11-10-28 11:43:04 GMT EAGLE5 44.0.0  
CHG-FEAT: MASP A - COMPLTD
```

7. Add the card using the `ent-card` command. If the **LIM-E1** card is an **HC-MIM**, the **HC-MIM** can be only in a odd-numbered card location, and cannot be provisioned as a channel card. The **E5-E1T1** card cannot be provisioned as a channel card. The **E1/T1MIM** and **E5-E1T1** cards occupy only one card location. These cards can be placed in any card location except for even numbered card locations whose adjacent odd numbered card location is occupied by a card that occupies two card locations.

For this example, enter these commands.

```
ent-card:loc=1201:type=limel:appl=ccs7itu  
ent-card:loc=1202:type=limch:appl=ccs7itu  
ent-card:loc=1203:type=limel:appl=ccs7itu  
ent-card:loc=1204:type=limch:appl=ccs7itu  
ent-card:loc=1211:type=limel:appl=ccs7itu  
ent-card:loc=1212:type=limch:appl=ccs7itu
```

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0  
ENT-CARD: MASP A - COMPLTD
```

8. Verify the changes using the `rtrv-card` command with the card location specified in HC-MIM Card Locations.

For this example, enter these commands.

```
rtrv-card:loc=1201
```

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CARD   TYPE      APPL      LSET NAME    LINK SLC LSET NAME    LINK SLC
1201   LIME1      CCS7ITU
```

```
rtrv-card:loc=1202
```

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CARD   TYPE      APPL      LSET NAME    LINK SLC LSET NAME    LINK SLC
1202   LIMCH      CCS7ITU
```

```
rtrv-card:loc=1203
```

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CARD   TYPE      APPL      LSET NAME    LINK SLC LSET NAME    LINK SLC
1203   LIME1      CCS7ITU
```

```
rtrv-card:loc=1204
```

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CARD   TYPE      APPL      LSET NAME    LINK SLC LSET NAME    LINK SLC
1204   LIMCH      CCS7ITU
```

```
rtrv-card:loc=1211
```

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CARD   TYPE      APPL      LSET NAME    LINK SLC LSET NAME    LINK SLC
1211   LIME1      CCS7ITU
```

```
rtrv-card:loc=1212
```

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CARD   TYPE      APPL      LSET NAME    LINK SLC LSET NAME    LINK SLC
1212   LIMCH      CCS7ITU
```

9. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

These messages should appear, the active **Maintenance and Administration Subsystem Processor (MASP)** appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Adding a LIM-T1 Card

The **LIM-T1** card is provisioned as either a **T1** card or a channel card in the database using the `ent-card` command.

The `ent-card` command uses these parameters.

`:loc` – The location of the card being added to the database.

Note

The **HC-MIM** can be inserted in an odd-numbered card location only. The **HC-MIM** will not power up if it is inserted in an even-numbered card location. All **T1** backplane cabling should be removed from the B connector for the slot that the **HC-MIM** will occupy.

The **HC-MIM** occupies two card locations, so the even numbered card location adjacent to the odd numbered slot where the **HC-MIM** has been inserted must be empty, as shown in the following table. The **HC-MIM** is connected to the network through the odd numbered card slot connector.

Table 4-3 HC-MIM Card Locations

Location of the HC-MIM	Empty Card Location	Location of the HC-MIM	Empty Card Location
Slot 01	Slot 02	Slot 11	Slot 12
Slot 03	Slot 04	Slot 13	Slot 14
Slot 05	Slot 06	Slot 15	Slot 16
Slot 07	Slot 08	Slot 17	Slot 18

The **E1/T1 MIM** and **E5-E1T1** card occupies one card location. These cards can be placed in any card location except for even numbered card locations whose adjacent odd numbered card location is occupied by a card that occupies two card locations.

`:type` – The type of card being added to the database. For this procedure, the value of this parameter is `limt1` (**T1** card) or `limch` (channel card).

Note

The **E5-E1T1** card cannot be provisioned as a channel card.

`:appl` – The application software that is assigned to the card. For this procedure, the value of this parameter is either `ccs7itu` or `ss7ansi`.

`:force` – Allow the **LIM** to be added to the database even if there are not enough service modules in the **EAGLE** to support the number of **LIMs** in the **EAGLE**. This parameter is obsolete and is no longer used.

The shelf to which the card is to be added must already be in the database. This can be verified with the `rtrv-shlf` command. If the shelf is not in the database, see the Adding a Shelf procedure in *Database Administration - System Management User's Guide*.

The examples in this procedure are used to add the **LIM-T1** cards in card locations 1215 and 1216 to the database.

1. Display the cards in the **EAGLE** using the `rtrv-card` command.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
CARD   TYPE      APPL      LSET NAME   LINK SLC LSET NAME   LINK SLC
1102   TSM          GLS
1113   GSPM          OAM
1114   TDM-A
1115   GSPM          OAM
1116   TDM-B
1117   MDAL
1201   LIMDS0       SS7ANSI    lsne12      A      0
1202   LIMDS0       SS7ANSI    lsne12      A      1
1203   LIMDS0       SS7ANSI    lsne13      A      0
1204   LIMDS0       SS7ANSI    lsne13      A      1
1207   LIMT1        SS7ANSI    lsnt265     A      0
1208   LIMCH        SS7ANSI    lsnt265     A      1    lsnt265     A2     2
1211   LIMT1        CCS7ITU    lsne145     A      0
1212   LIMCH        CCS7ITU    lsne145     A      1    lsne145     A2     2
```

The cards should be distributed throughout the **EAGLE** for proper power distribution. Refer to *Installation Guide* for the shelf power distribution.

2. Verify that the correct hardware has been installed on the **EAGLE** to support the **LIM-T1** card as shown in *Installation User's Guide*.
3. Physically verify that the T1 card has been installed into the card location.

If the T1 card is an HC-MIM, make sure the HC-MIM is installed according to the card location requirements. If a card is installed and provisioned in the even-numbered card location adjacent to the desired odd numbered card, choose another card location to install and provision the HC-MIM, or remove the card in the even-numbered card location by performing the appropriate procedure shown in the following table.

Note

Channel cards must be installed in the same shelf as the T1 card that is servicing the timeslots on those channel cards.

Table 4-4 Card Removal Procedures

Card Application	Procedure
SS7ANSI, ATMANSI, CCS7ITU, ATMITU	"Removing an SS7 LIM " in Chapter 4, "System Configuration Procedures" in <i>Database Administration - System Management User's Guide</i> "Removing a LIM-E1 Card" "Removing a LIM-T1 Card"
VSCCP	Removing a Service Module in Chapter 2 in <i>Database Administration - GTT User's Guide</i>

Table 4-4 (Cont.) Card Removal Procedures

Card Application	Procedure
GLS	Removing a GLS Card in Chapter 2, Gateway Screening (GWS) Overview, in <i>Database Administration - GWS User's Guide</i>
IPLIM, IPLIMI, SS7IPGW, IPGWI	"Removing an IPLIMx Card" or Removing an IPGWx Card in <i>Database Administration - IP7 User's Guide</i>
IPSG	"Removing an IPSG Card" in <i>Database Administration - IP7 User's Guide</i>
EROUTE	"Removing an STC Card" in <i>Database Administration - Features User's Guide</i>
MCP	"Removing an MCPM " in Chapter 4, "System Configuration Procedures" in <i>Database Administration - System Management User's Guide</i>
IPS	"Removing an IPSM " in Chapter 4, "System Configuration Procedures" in <i>Database Administration - System Management User's Guide</i>

4. If the card is an EPM-B based card (E5-E1T1-B), enter the `rtrv-stpopts` command to verify whether or not the MFC option is on. If the card is not an EPM-B based card, continue the procedure with step 5.

This is an example of the possible output.

```
rlghncxa03w 11-10-17 16:02:05 GMT EAGLE5 44.0.0
STP OPTIONS
-----
MFC                                off
```

The `rtrv-stpopts` command output contains other fields that are not used by this procedure. To see all fields displayed by the `rtrv-stpopts` command, see the `rtrv-stpopts` command description in *Commands User's Guide*.

If the **MFC** option is off, perform the Configuring the MFC Option procedure in *Database Administration - System Management User's Guide* to turn on the MFC option.

If the MFC option is on or the MFC Option procedure in *Database Administration - System Management User's Guide* was performed in this step, continue the procedure with step 5.

5. The Fan feature must be turned on. Enter the `rtrv-feat` command to verify that the Fan feature is on.

If the Fan feature is on, shown in the `rtrv-feat` output in this step, the **FAN** field should be set to on.

The `rtrv-feat` command output contains other fields that are not used by this procedure. To see all fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in *Commands User's Guide*.

If the Fan feature is on, continue the procedure with step 7.

If the Fan feature is off, continue the procedure with step 6.

6. Turn the Fan feature on by entering this command.

```
chg-feat:fan=on
```

Note

Once the Fan feature is turned on with the `chg-feat` command, it cannot be turned off.

When the `chg-feat` has successfully completed, this message appears.

```
rlghncxa03w 11-10-28 11:43:04 GMT EAGLE5 44.0.0
CHG-FEAT: MASP A - COMPLTD
```

7. Add the card using the `ent-card` command. If the **LIM-T1** card is an **HC-MIM**, the **HC-MIM** can be only in a odd-numbered card location, and cannot be provisioned as a channel card.

For this example, enter these commands.

```
ent-card:loc=1215:type=limt1:appl=ss7ansi
ent-card:loc=1216:type=limch:appl=ss7ansi
```

8. Verify the changes using the `rtrv-card` command with the card location.

For this example, enter these commands.

```
rtrv-card:loc=1215
```

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CARD   TYPE      APPL      LSET NAME    LINK SLC LSET NAME    LINK SLC
1215   LIMT1      SS7ANSI
```

```
rtrv-card:loc=1216
```

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CARD   TYPE      APPL      LSET NAME    LINK SLC LSET NAME    LINK SLC
1216   LIMCH      SS7ANSI
```

9. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

These messages should appear, the active **Maintenance and Administration Subsystem Processor (MASP)** appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Adding a Service Module

This procedure is used to add a service module to support the Global Title Translation or Enhanced Global Title Translation feature to the database using the `ent-card` command.

A service module can be one of these cards.

- E5-SM8G-B
- SLIC

The card that is used as a service module depends on the GTT related features that are being used and the features that will be enabled after this procedure is performed. The features or feature [Table 4-5](#) combinations shown in show the type of card that must be installed in the EAGLE to meet the minimum EAGLE performance requirements. The features that are currently being used by the EAGLE are shown in the `rtrv-feat` or `rtrv-ctrl-feat` command outputs.

Table 4-5 Service Module and Feature Combinations

Card	Features
E5-SM8G SLIC	<p>Any of these features:</p> <ul style="list-style-type: none"> Throughput Capacity - SMs can be used if this feature is enabled, but to achieve the maximum transactions per second for the EAGLE, shown in Table 4-9, all service modules must be E5-SM8G cards. Support for 16 GTT Lengths in VGTT Flexible Linkset Optional Based Routing ELAP configuration feature and a LNP Telephone Number Quantity of 240 million numbers to 384 million numbers GTT Action - DUPLICATE Pre-LNP Query Service GTT Processing Fall-Back to GTT after LNP Message Relay Service ANSI-41 Analyzed Information Query (ANSI41 AIQ) GTT Action - DISCARD GTT Action - FORWARD Info Analyzed Relay Base Service Portability Enhanced GSM MAP Screening G-FLEX V-FLEX G-Port INP Prepaid SMS Intercept Phase 1 (PPSMS) ELAP Configuration feature and an LNP Telephone Number Quantity that is less than 240 million numbers. Refer to <i>Administration and LNP Feature Activation Guide</i> for ELAP for the minimum requirements for service modules used with the LNP feature. XGTT Table Expansion for 1,000,000 GTT entries Equipment Identity Register(EIR) Flexible GTT Load Sharing IDP Screening for Prepaid Prepaid IDP Query Relay Origin-Based SCCP Routing Hex Digit Support for GTT A-Port) IS41 GSM Migration Weighted GTT Load Sharing Transaction-Based GTT Load Sharing ANSI-41 INP Query MO SMS B-Party Routing MO-based GSM SMS NP MO-based IS41 SMS NP MO SMS IS41-to-GSM Migration MO SMS ASD MO SMS GRN Portability Check for MO SMS TIF Number Portability TIF SCS Forwarding TIF Simple Number Substitution TIF ASD TIF GRN ATI Number Portability Query (ATINP)

Table 4-5 (Cont.) Service Module and Feature Combinations

Card	Features
	<ul style="list-style-type: none"> GSM MAP Screening or GTT and EGTT (if the Enhanced Global Title Translation feature is on) in combination with at least 2 of these features: <ul style="list-style-type: none"> Variable-Length Global Title Translation (VGTT) Advanced GT Modification (with or without the ANSI/ITU SCCP Conversion feature) IGTTLS XGTT Table Expansion enabled for 400,000GTT entries XMAP Table Expansion enabled for either 3000 or 2000MAP table entries

The E5-SM8G-B can be inserted only in the odd numbered card slots of the control or the extension shelf. Slots 09 and 10 of each shelf contains the HIPR2 card, thus the E5-SM8G-B cannot be inserted in slot 09 and 10. The E5-SM8G-B can be inserted in the control shelf, but only in slots 01, 03, 05, 07 and 11. The E5-SM8G-B occupies two card slots, so the even numbered card slot adjacent to the odd numbered slot where the E5-SM8G-B has been inserted must be empty, as shown in [Table 4-6](#). The E5-SM8G-B is connected to the network through the odd numbered card slot connector. The E5-SM8G-B requires two HIPR2 cards in the shelf where it is installed.

The SLIC can be inserted only in the odd numbered card slots if it is provisioned with the `type=dsm` parameter of the `ent-card` command. The SLIC can be inserted in odd or even numbered card slots if it is provisioned with the `type=slic` parameter of the `ent-card` command.

Table 4-6 Card Locations

Location of the E5-SM8G-B	Empty Card Location
Slot 11	Slot 12
Slot 13	Slot 14
Slot 15	Slot 16
Slot 17	Slot 18

The `ent-card` command uses these parameters:

`:loc` – The location of the card being added to the database.

`:type` – The type of card being added to the database. The value of this parameter is `dsm` or `slic`.

`:appl` – The application software that is assigned to the card. The value of this parameter is `vscpp`.

`:data` – The data type of the card when running the EPAP Data Split feature and the Dual ExAP Configuration feature. The value of this parameter is `dn` or `imsi` for the EPAP Data Split feature and `ELAP`, `EPAP` or `GTT` for the Dual ExAP Configuration feature.

The shelf to which the card is to be added must already be in the database. This can be verified with the `rtrv-shlf` command. If the shelf is not in the database, perform the "Adding a Shelf" procedure in *Database Administration – System Management User's Guide*.

The card cannot be added to the database if the specified card location already has a card assigned to it.

Note

If you want to add an E5-SM8G-B or SLIC card as the service module, verify the temperature threshold settings for the appropriate card by performing the "Changing the High-Capacity Card Temperature Alarm Thresholds" procedure in *Database Administration - SS7 User's Guide*. The E5-SM8G-B card also requires a fan tray.

1. Display the cards in the EAGLE using the `rttrv-card` command to verify that the card location for the new service module is not provisioned. This is an example of the possible output.

Note

Cards should be distributed throughout the EAGLE for proper power distribution. Refer to *Installation Guide* for the shelf power distribution.

This is an example of the possible output:

```
tklcl1110501 15-06-24 16:59:18 EST EAGLE5 46.2.0-65.53.1
CARD   TYPE      APPL      LSET NAME  LINK SLC  LSET NAME  LINK SLC  DATA
1101   DCM        IPLIM      stpb058a   A    0    stpb058a   B    6
        stpb058a   A1    1    stpb058a   B1    7
        stpd078a   A2    0    stpd078a   B2    6
        stpd078a   A3    1    stpd078a   B3    7
1102   TSM        GLS
1103   DCM        IPLIM      stpb058a   A    8    stpd078a   B    8
        stpb058a   A1    9    stpd078a   B1    9
        stpb058a   A2   10    stpd078a   B2   10
        stpb058a   A3   11    stpd078a   B3   11
1104   TSM        GLS
1105   DCM        SS7IPGW    sclb059a   A    0
1106   DCM        SS7IPGW    sclb059a   A    1
1107   DSM        VSCCP
1111   MCPM       MCP
1112   MCPM       MCP
1113   E5-MCAP    OAM
1114   TDM-A
1115   E5-MCAP    OAM
1116   TDM-B
1117   MDAL
1201   LIMATM     ATMANSI    ls1201a00  A    0    ls1201a04  B    0
1204   LIMT1      SS7ANSI     ls1204a00  A    0    ls1204a01  A1   0
        ls1204a02  A2    0    ls1204a00  A4    1
        ls1204a01  A5    1    ls1204a02  A6    1
1205   LIME1      CCS7ITU     ls1205i00  A    0    ls1205i04  B    0
        ls1205i01  A1    0    ls1205i05  B1    0
        ls1205i02  A2    0    ls1205i06  B2    0
        ls1205i03  A3    0    ls1205i07  B3    0
        ls1205i08  A4    0    ls1205i12  B4    0
        ls1205i09  A5    0    ls1205i13  B5    0
```

			ls1205i10	A6	0	ls1205i14	B6	0
			ls1205i11	A7	0	ls1205i15	B7	0
			ls1205i04	A8	1	ls1205i00	B8	1
			ls1205i05	A9	1	ls1205i01	B9	1
			ls1205i06	A10	1	ls1205i02	B10	1
			ls1205i07	A11	1	ls1205i03	B11	1
			ls1205i12	A12	1	ls1205i08	B12	1
			ls1205i13	A13	1	ls1205i09	B13	1
			ls1205i10	B14	1	ls1205i11	B15	1
1206	LIME1	CCS7ITU	ls1206n00	A	0	ls1206n04	B	0
			ls1206n01	A1	0	ls1206n05	B1	0
			ls1206n02	A2	0	ls1206n06	B2	0
			ls1206n03	A3	0	ls1206n07	B3	0
			ls1206n08	A4	0	ls1206n12	B4	0
			ls1206n09	A5	0	ls1206n13	B5	0
			ls1206n10	A6	0	ls1206n14	B6	0
			ls1206n11	A7	0	ls1206n15	B7	0
			ls1206n12	A8	1	ls1206n00	B8	1
			ls1206n13	A9	1	ls1206n01	B9	1
			ls1206n14	A10	1	ls1206n02	B10	1
			ls1206n15	A11	1	ls1206n03	B11	1
			ls1206n04	A12	1	ls1206n08	B12	1
			ls1206n05	A13	1	ls1206n09	B13	1
			ls1206n10	B14	1	ls1206n11	B15	1
1207	LIME1	CCS7ITU	ls1207i00	A	0	ls1207i04	B	0
			ls1207i00	A1	1	ls1207i04	B1	1
			ls1207i02	A2	0	ls1207i06	B2	0
			ls1207i02	A3	1	ls1207i06	B3	1
			ls1207i08	A4	0	ls1207i12	B4	0
			ls1207i08	A5	1	ls1207i12	B5	1
			ls1207i10	A6	0	ls1207i14	B6	0
			ls1207i10	A7	1	ls1207i14	B7	1
			ls1207i00	A8	2	ls1207i04	B8	2
			ls1207i00	A9	3	ls1207i04	B9	3
			ls1207i02	A10	2	ls1207i06	B10	2
			ls1207i02	A11	3	ls1207i06	B11	3
			ls1207i08	A12	2	ls1207i12	B12	2
			ls1207i08	A13	3	ls1207i12	B13	3
			ls1207i10	A14	2	ls1207i14	B14	2
			ls1207i10	A15	3	ls1207i14	B15	3
1208	LIMT1	SS7ANSI	ls1208a00	A	0	ls1208a04	B	0
			ls1208a01	A1	0	ls1208a05	B1	0
			ls1208a02	A2	0	ls1208a06	B2	0
			ls1208a03	A3	0	ls1208a07	B3	0
			ls1208a08	A4	0	ls1208a09	A5	0
			ls1208a10	A6	0	ls1208a11	A7	0
			ls1208a04	A8	1	ls1208a00	B8	1
			ls1208a05	A9	1	ls1208a01	B9	1
			ls1208a06	A10	1	ls1208a02	B10	1
			ls1208a07	A11	1	ls1208a03	B11	1
			ls1208a08	B12	1	ls1208a09	B13	1
			ls1208a10	B14	1	ls1208a11	B15	1
1212	LIME1	CCS7ITU	lsstpb100i	A	0	lsstpb101i	B	0
			lsstpb100i	A1	1	lsstpb101i	B1	1
			lsstpb100i	A2	2	lsstpb101i	B2	2
			lsstpb100i	A3	3	lsstpb101i	B3	3

			lsstpb100i	A4	4	lsstpb101i	B4	4
			lsstpb100i	A5	5	lsstpb101i	B5	5
			lsstpb100i	A6	6	lsstpb101i	B6	6
			lsstpb100i	A7	7	lsstpb101i	B7	7
			lsstpb102i	A8	0	lsstpb103i	B8	0
			lsstpb102i	A9	1	lsstpb103i	B9	1
			lsstpb102i	A10	2	lsstpb103i	B10	2
			lsstpb102i	A11	3	lsstpb103i	B11	3
			lsstpb102i	A12	4	lsstpb103i	B12	4
			lsstpb102i	A13	5	lsstpb103i	B13	5
			lsstpb102i	A14	6	lsstpb103i	B14	6
			lsstpb102i	A15	7	lsstpb103i	B15	7
			lsstpb104i	A16	0	lsstpb106i	B16	0
			lsstpb104i	A17	1	lsstpb106i	B17	1
			lsstpb104i	A18	2	lsstpb106i	B18	2
			lsstpb104i	A19	3	lsstpb106i	B19	3
			lsstpb104i	A20	4	lsstpb106i	B20	4
			lsstpb104i	A21	5	lsstpb106i	B21	5
			lsstpb104i	A22	6	lsstpb106i	B22	6
			lsstpb104i	A23	7	lsstpb106i	B23	7
			lsstpb105i	A24	0	lsstpb107i	B24	0
			lsstpb105i	A25	1	lsstpb107i	B25	1
			lsstpb105i	A26	2	lsstpb107i	B26	2
			lsstpb105i	A27	3	lsstpb107i	B27	3
			lsstpb105i	A28	4	lsstpb107i	B28	4
			lsstpb105i	A29	5	lsstpb107i	B29	5
			lsstpb105i	A30	6	lsstpb107i	B30	6
			lsstpb105i	A31	7	lsstpb107i	B31	7
1214	LIMT1	SS7ANSI	lsstpb108a	A	1	lsstpb108a	B	2
1215	LIME1	CCS7ITU	ls1215c00	A	0	ls1215c04	B	0
			ls1215c01	A1	0	ls1215c05	B1	0
			ls1215c02	A2	0	ls1215c06	B2	0
			ls1215c03	A3	0	ls1215c07	B3	0
			ls1215c08	A4	0	ls1215c09	A5	0
			ls1215c10	A6	0	ls1215c11	A7	0
			ls1215c04	A8	1	ls1215c00	B8	1
			ls1215c05	A9	1	ls1215c01	B9	1
			ls1215c06	A10	1	ls1215c02	B10	1
			ls1215c07	A11	1	ls1215c03	B11	1
			ls1215c08	B12	1	ls1215c09	B13	1
			ls1215c10	B14	1	ls1215c11	B15	1
1216	LIME1	CCS7ITU	ls1216i00	A	0	ls1216i04	B	0
			ls1216i00	A1	1	ls1216i04	B1	1
			ls1216i00	A2	2	ls1216i04	B2	2
			ls1216i00	A3	3	ls1216i04	B3	3
			ls1216i00	A4	4	ls1216i04	B4	4
			ls1216i00	A5	5	ls1216i04	B5	5
			ls1216i00	A6	6	ls1216i04	B6	6
			ls1216i00	A7	7	ls1216i04	B7	7
			ls1216i00	A8	8	ls1216i04	B8	8
			ls1216i00	A9	9	ls1216i04	B9	9
			ls1216i00	A10	10	ls1216i04	B10	10
			ls1216i00	A11	11	ls1216i04	B11	11
			ls1216i00	A12	12	ls1216i04	B12	12
			ls1216i00	A13	13	ls1216i04	B13	13
			ls1216i00	A14	14	ls1216i04	B14	14

			ls1216i00	A15	15	ls1216i04	B15	15
1217	IPSM	IPS						
1218	LIME1	CCS7ITU	ls1218c00	A	0	ls1218c01	A1	0
			ls1218c02	A2	0	ls1218c03	A3	0
			ls1218c00	A4	1	ls1218c01	A5	1
			ls1218c02	A6	1	ls1218c03	A7	1
1301	LIMT1	SS7ANSI	ls1301a01	A	0	ls1301a01	B	1
			ls1301a02	A1	0	ls1301a02	B1	1
			ls1301a03	A2	0	ls1301a03	B2	1
			ls1301a04	A3	0	ls1301a04	B3	1
			ls1301a05	A4	0	ls1301a05	B4	1
			ls1301a06	A5	0	ls1301a06	B5	1
			ls1301a07	A6	0	ls1301a07	B6	1
			ls1302a01	A7	0	ls1302a01	B7	1
			ls1302a02	A8	0	ls1302a02	B8	1
			ls1302a03	A9	0	ls1302a03	B9	1
			ls1302a04	A10	0	ls1302a04	B10	1
			ls1302a05	A11	0	ls1302a05	B11	1
			ls1302a06	A12	0	ls1302a06	B12	1
			ls1303a01	A13	0	ls1303a01	B13	1
			ls1303a02	A14	0	ls1303a02	B14	1
			ls1301a27	A15	0	ls1301a27	B15	1
1302	LIMT1	SS7ANSI	ls1301a00	A	0	ls1303a00	B	0
			ls1301a00	A1	1	ls1303a00	B1	1
			ls1301a00	A2	2	ls1303a00	B2	2
			ls1301a00	A3	3	ls1303a00	B3	3
			ls1301a00	A4	4	ls1303a00	B4	4
			ls1301a00	A5	5	ls1303a00	B5	5
			ls1301a00	A6	6	ls1303a00	B6	6
			ls1301a00	A7	7	ls1303a00	B7	7
			ls1301a00	A8	8	ls1303a00	B8	8
			ls1301a00	A9	9	ls1303a00	B9	9
			ls1301a00	A10	10	ls1303a00	B10	10
			ls1301a00	A11	11	ls1303a00	B11	11
			ls1301a00	A12	12	ls1303a00	B12	12
			ls1301a00	A13	13	ls1303a00	B13	13
			ls1301a00	A14	14	ls1303a00	B14	14
			ls1301a00	A15	15	ls1303a00	B15	15
1313	LIME1ATM	ATMITU	ls1313i00	A	0	ls1313i04	B	0
			ls1313i01	A1	0			
1314	LIMT1	SS7ANSI	ls1314a02	A	0	ls2214a02	B	0
			ls1314a02	A1	1	ls2214a02	B1	1
			ls1314a03	A2	0	ls2214a03	B2	0
			ls1314a03	A3	1	ls2214a03	B3	1
			ls1314a04	A4	0	ls2214a04	B4	0
			ls1314a04	A5	1	ls2214a04	B5	1
			ls1314a05	A6	0	ls2214a05	B6	0
			ls1314a05	A7	1	ls2214a05	B7	1
			ls1314a06	A8	0	ls2214a06	B8	0
			ls1314a06	A9	1	ls2214a06	B9	1
			ls1314a07	A10	0	ls5213a07	B10	0
			ls1314a07	A11	1	ls5213a07	B11	1
			ls2114a00	A12	0	ls5313a00	B12	0
			ls2114a00	A13	1	ls5313a00	B13	1
			ls2114a01	A14	0	ls5313a01	B14	0
			ls2114a01	A15	1	ls5313a01	B15	1

1315	DCM	SS7IPGW	ls1315a00	A	0				
1316	DCM	SS7IPGW	ls1315a00	A	1				
1317	DSM	VSCCP							ELAP
2112	LIMT1	SS7ANSI	ls2112a00	A	0	ls2112a04	B	0	
			ls2112a00	A1	1	ls2112a04	B1	1	
			ls2112a00	A2	2	ls2112a04	B2	2	
			ls2112a00	A3	3	ls2112a04	B3	3	
			ls2112a00	A4	4	ls2112a04	B4	4	
			ls2112a00	A5	5	ls2112a04	B5	5	
			ls2112a00	A6	6	ls2112a04	B6	6	
			ls2112a00	A7	7	ls2112a04	B7	7	
			ls2112a00	A8	8	ls2112a04	B8	8	
			ls2112a00	A9	9	ls2112a04	B9	9	
			ls2112a00	A10	10	ls2112a04	B10	10	
			ls2112a00	A11	11	ls2112a04	B11	11	
			ls2112a00	A12	12	ls2112a04	B12	12	
			ls2112a00	A13	13	ls2112a04	B13	13	
			ls2112a00	A14	14	ls2112a04	B14	14	
			ls2112a00	A15	15	ls2112a04	B15	15	
2113	LIME1ATM	ATMITU	ls1313i00	A	1	ls1313i04	B	1	
			ls1313i01	A1	1				
2114	LIMT1	SS7ANSI							
2115	DCM	SS7IPGW	ls1315a00	A	2				
2116	DCM	SS7IPGW	ls1315a00	A	3				
2117	DCM	SS7IPGW	ls1315a00	A	4				
2118	DCM	SS7IPGW	ls1315a00	A	5				
2201	LIMATM	ATMANSI	ls2201a00	A	0	ls2201a04	B	0	
			ls2201a01	A1	0				
2202	LIMATM	ATMANSI	ls2202a00	A	0	ls2202a04	B	0	
			ls2202a01	A1	0				
2208	LIME1ATM	ATMITU	ls2208i00	A	0	ls2208n04	B	0	
2211	DSM	VSCCP							GTT
2213	LIME1ATM	ATMITU	ls2213i00	A	0	ls2213i04	B	0	
			ls2213i01	A1	0				
2216	LIMT1	SS7ANSI	ls2216a00	A	0	ls2216a04	B	0	
			ls2216a00	A1	1	ls2216a04	B1	1	
			ls2216a00	A2	2	ls2216a04	B2	2	
			ls2216a00	A3	3	ls2216a04	B3	3	
			ls2216a00	A4	4	ls2216a04	B4	4	
			ls2216a00	A5	5	ls2216a04	B5	5	
			ls2216a00	A6	6	ls2216a04	B6	6	
			ls2216a00	A7	7	ls2216a04	B7	7	
			ls2216a00	A8	8	ls2216a04	B8	8	
			ls2216a00	A9	9	ls2216a04	B9	9	
			ls2216a00	A10	10	ls2216a04	B10	10	
			ls2216a00	A11	11	ls2216a04	B11	11	
			ls2216a00	A12	12	ls2216a04	B12	12	
			ls2216a00	A13	13	ls2216a04	B13	13	
			ls2216a00	A14	14	ls2216a04	B14	14	
			ls2216a00	A15	15	ls2216a04	B15	15	
2217	DSM	VSCCP							ELAP
2301	LIMATM	ATMANSI	ls2201a00	A	1	ls2201a04	B	1	
			ls2201a01	A1	1				
2302	LIMATM	ATMANSI	ls2202a00	A	1	ls2202a04	B	1	
			ls2202a01	A1	1				
2305	DSM	VSCCP							IMSI

2308	LIMATM	ATMANSI	ls1201a00	A	1	ls1201a04	B	1	IMSI
2311	DSM	VSCCP							
2313	LIME1ATM	ATMITU	ls2213i00	A	1	ls2213i04	B	1	
			ls2213i01	A1	1				
2317	DSM	VSCCP							ELAP
3101	DCM	SS7IPGW	sc1d079a	A	0				
3102	IPSM	IPS							
3103	DSM	VSCCP							ELAP
3108	LIME1ATM	ATMITU	ls3108i00	A	0	ls2208i00	B	1	
			ls3108n01	A1	0				
3111	DSM	VSCCP							DN
3113	LIME1ATM	ATMITU	ls3108i00	A	1	ls3113n04	B	0	
			ls3113n01	A1	0				
3114	STC	EROUTE							
3116	STC	EROUTE							
3117	DCM	SS7IPGW	ls1315a00	A	6				
3118	DCM	SS7IPGW	ls1315a00	A	7				
3201	DSM	VSCCP							ELAP
3203	DSM	VSCCP							ELAP
3205	DSM	VSCCP							ELAP
3207	DSM	VSCCP							ELAP
3211	ENET	IPSG	ls3211a00	A	0				
3212	ENET	IPSG	ls3211a00	A	1				
3213	ENET	IPSG	ls3211a00	A	2				
3214	ENET	IPSG	ls3211a00	A	3				
3215	ENET	IPSG	ls3211a00	A	4				
3216	ENET	IPSG	ls3211a00	A	5				
3217	DSM	VSCCP							ELAP
3301	DCM	SS7IPGW	ls3301a00	A	0				
3302	DCM	SS7IPGW	ls3301a00	A	1				
3303	DCM	SS7IPGW	ls3301a00	A	2				
3304	DCM	SS7IPGW	ls3301a00	A	3				
3305	DCM	SS7IPGW	ls3301a00	A	4				
3306	DCM	SS7IPGW	ls3301a00	A	5				
3307	DCM	SS7IPGW	ls3301a00	A	6				
3308	DCM	SS7IPGW	ls3301a00	A	7				
3311	DCM	SS7IPGW	ls3311a00	A	0				
3312	DCM	SS7IPGW	ls3311a00	A	1				
3313	DCM	SS7IPGW	ls3311a00	A	2				
3314	DCM	SS7IPGW	ls3311a00	A	3				
3315	DCM	SS7IPGW	ls3311a00	A	4				
3316	DCM	SS7IPGW	ls3311a00	A	5				
3317	DCM	SS7IPGW	ls3311a00	A	6				
3318	DCM	SS7IPGW	ls3311a00	A	7				
4107	DSM	VSCCP							IMSI
4111	DSM	VSCCP							GTT
4113	LIMT1	SS7ANSI	ls4113a00	A	0	ls4113a04	B	0	
			ls4113a00	A1	1	ls4113a04	B1	1	
			ls4113a00	A2	2	ls4113a04	B2	2	
			ls4113a00	A3	3	ls4113a04	B3	3	
			ls4113a00	A4	4	ls4113a04	B4	4	
			ls4113a00	A5	5	ls4113a04	B5	5	
			ls4113a00	A6	6	ls4113a04	B6	6	
			ls4113a00	A7	7	ls4113a04	B7	7	
			ls4113a00	A8	8	ls4113a04	B8	8	
			ls4113a00	A9	9	ls4113a04	B9	9	

			ls4113a00	A10	10	ls4113a04	B10	10	
			ls4113a00	A11	11	ls4113a04	B11	11	
			ls4113a00	A12	12	ls4113a04	B12	12	
			ls4113a00	A13	13	ls4113a04	B13	13	
			ls4113a00	A14	14	ls4113a04	B14	14	
			ls4113a00	A15	15	ls4113a04	B15	15	
4115	DCM	SS7IPGW	ls4115a00	A	0				
4116	DCM	SS7IPGW	ls4115a00	A	1				
4117	DCM	SS7IPGW	ls4115a00	A	2				
4118	DCM	SS7IPGW	ls4115a00	A	3				
4207	DSM	VSCCP							DN
4212	LIME1	CCS7ITU	ls4212n00	A	0	ls4212n04	B	0	
			ls4212n00	A1	1	ls4212n04	B1	1	
			ls4212n02	A2	0	ls4212n06	B2	0	
			ls4212n02	A3	1	ls4212n06	B3	1	
			ls4212n08	A4	0	ls4212n12	B4	0	
			ls4212n08	A5	1	ls4212n12	B5	1	
			ls4212n10	A6	0	ls4212n14	B6	0	
			ls4212n10	A7	1	ls4212n14	B7	1	
			ls4212n00	A8	2	ls4212n04	B8	2	
			ls4212n00	A9	3	ls4212n04	B9	3	
			ls4212n02	A10	2	ls4212n06	B10	2	
			ls4212n02	A11	3	ls4212n06	B11	3	
			ls4212n08	A12	2	ls4212n12	B12	2	
			ls4212n08	A13	3	ls4212n12	B13	3	
			ls4212n10	A14	2	ls4212n14	B14	2	
			ls4212n10	A15	3	ls4212n14	B15	3	
4213	LIMT1	SS7ANSI	ls4213a00	A	0	ls4213a04	B	0	
			ls4213a00	A1	1	ls4213a04	B1	1	
			ls4213a02	A2	0	ls4213a06	B2	0	
			ls4213a02	A3	1	ls4213a06	B3	1	
			ls4213a08	A4	0	ls4213a12	B4	0	
			ls4213a08	A5	1	ls4213a12	B5	1	
			ls4213a10	A6	0	ls4213a14	B6	0	
			ls4213a10	A7	1	ls4213a14	B7	1	
			ls4213a00	A8	2	ls4213a04	B8	2	
			ls4213a00	A9	3	ls4213a04	B9	3	
			ls4213a02	A10	2	ls4213a06	B10	2	
			ls4213a02	A11	3	ls4213a06	B11	3	
			ls4213a08	A12	2	ls4213a12	B12	2	
			ls4213a08	A13	3	ls4213a12	B13	3	
			ls4213a10	A14	2	ls4213a14	B14	2	
			ls4213a10	A15	3	ls4213a14	B15	3	
4217	DCM	SS7IPGW	ls4115a00	A	4				
4218	DCM	SS7IPGW	ls4115a00	A	5				
4311	DSM	VSCCP							DN
4313	LIMT1	SS7ANSI	ls4313a00	A	0	ls4313a04	B	0	
			ls4313a00	A1	1	ls4313a04	B1	1	
			ls4313a02	A2	0	ls4313a06	B2	0	
			ls4313a02	A3	1	ls4313a06	B3	1	
			ls4313a08	A4	0	ls4313a12	B4	0	
			ls4313a08	A5	1	ls4313a12	B5	1	
			ls4313a10	A6	0	ls4313a14	B6	0	
			ls4313a10	A7	1	ls4313a14	B7	1	
			ls4313a00	A8	2	ls4313a04	B8	2	
			ls4313a00	A9	3	ls4313a04	B9	3	

			ls4313a02	A10	2	ls4313a06	B10	2
			ls4313a02	A11	3	ls4313a06	B11	3
			ls4313a08	A12	2	ls4313a12	B12	2
			ls4313a08	A13	3	ls4313a12	B13	3
			ls4313a10	A14	2	ls4313a14	B14	2
			ls4313a10	A15	3	ls4313a14	B15	3
4317	DCM	SS7IPGW	ls4115a00	A	6			
4318	DCM	SS7IPGW	ls4115a00	A	7			
5101	LIME1	CCS7ITU	ls5101i00	A	0	ls5101i04	B	0
			ls5101i00	A1	1	ls5101i04	B1	1
			ls5101i00	A2	2	ls5101i04	B2	2
			ls5101i00	A3	3	ls5101i04	B3	3
			ls5101i00	A4	4	ls5101i04	B4	4
			ls5101i00	A5	5	ls5101i04	B5	5
			ls5101i00	A6	6	ls5101i04	B6	6
			ls5101i00	A7	7	ls5101i04	B7	7
			ls5101i00	A8	8	ls5101i04	B8	8
			ls5101i00	A9	9	ls5101i04	B9	9
			ls5101i00	A10	10	ls5101i04	B10	10
			ls5101i00	A11	11	ls5101i04	B11	11
			ls5101i00	A12	12	ls5101i04	B12	12
			ls5101i00	A13	13	ls5101i04	B13	13
			ls5101i00	A14	14	ls5101i04	B14	14
			ls5101i00	A15	15	ls5101i04	B15	15
5102	LIME1	CCS7ITU	ls5102i00	A	0	ls5102i04	B	0
			ls5102i00	A1	1	ls5102i04	B1	1
			ls5102i02	A2	0	ls5102i06	B2	0
			ls5102i02	A3	1	ls5102i06	B3	1
			ls5102i08	A4	0	ls5102i12	B4	0
			ls5102i08	A5	1	ls5102i12	B5	1
			ls5102i10	A6	0	ls5102i14	B6	0
			ls5102i10	A7	1	ls5102i14	B7	1
			ls5102i00	A8	2	ls5102i04	B8	2
			ls5102i00	A9	3	ls5102i04	B9	3
			ls5102i02	A10	2	ls5102i06	B10	2
			ls5102i02	A11	3	ls5102i06	B11	3
			ls5102i08	A12	2	ls5102i12	B12	2
			ls5102i08	A13	3	ls5102i12	B13	3
			ls5102i10	A14	2	ls5102i14	B14	2
			ls5102i10	A15	3	ls5102i14	B15	3
5103	LIME1	CCS7ITU	ls5103i00	A	0	ls5103i04	B	0
			ls5103i00	A1	1	ls5103i04	B1	1
			ls5103i02	A2	0	ls5103i06	B2	0
			ls5103i02	A3	1	ls5103i06	B3	1
			ls5103i08	A4	0	ls5103i12	B4	0
			ls5103i08	A5	1	ls5103i12	B5	1
			ls5103i10	A6	0	ls5103i14	B6	0
			ls5103i10	A7	1	ls5103i14	B7	1
			ls5103i00	A8	2	ls5103i04	B8	2
			ls5103i00	A9	3	ls5103i04	B9	3
			ls5103i02	A10	2	ls5103i06	B10	2
			ls5103i02	A11	3	ls5103i06	B11	3
			ls5103i08	A12	2	ls5103i12	B12	2
			ls5103i08	A13	3	ls5103i12	B13	3
			ls5103i10	A14	2	ls5103i14	B14	2
			ls5103i10	A15	3	ls5103i14	B15	3

5104	LIMATM	ATMANSI	stpd078a	A	3			
5105	LIMATM	ATMANSI	stpb058a	A	4			
5106	LIMATM	ATMANSI	stpd078a	A	4			
5107	LIMATM	ATMANSI	stpb058a	A	5			
5108	LIMATM	ATMANSI	stpd078a	A	5			
5112	LIME1	CCS7ITU	ls5112n00	A	0	ls5112n04	B	0
			ls5112n00	A1	1	ls5112n04	B1	1
			ls5112n02	A2	0	ls5112n06	B2	0
			ls5112n02	A3	1	ls5112n06	B3	1
			ls5112n08	A4	0	ls5112n12	B4	0
			ls5112n08	A5	1	ls5112n12	B5	1
			ls5112n10	A6	0	ls5112n14	B6	0
			ls5112n10	A7	1	ls5112n14	B7	1
			ls5112n00	A8	2	ls5112n04	B8	2
			ls5112n00	A9	3	ls5112n04	B9	3
			ls5112n02	A10	2	ls5112n06	B10	2
			ls5112n02	A11	3	ls5112n06	B11	3
			ls5112n08	A12	2	ls5112n12	B12	2
			ls5112n08	A13	3	ls5112n12	B13	3
			ls5112n10	A14	2	ls5112n14	B14	2
			ls5112n10	A15	3	ls5112n14	B15	3
5113	LIMT1	SS7ANSI	ls5113a00	A	0	ls5113a04	B	0
			ls5113a00	A1	1	ls5113a04	B1	1
			ls5113a02	A2	0	ls5113a06	B2	0
			ls5113a02	A3	1	ls5113a06	B3	1
			ls5113a08	A4	0	ls5113a12	B4	0
			ls5113a08	A5	1	ls5113a12	B5	1
			ls5113a10	A6	0	ls5113a14	B6	0
			ls5113a10	A7	1	ls5113a14	B7	1
			ls5113a00	A8	2	ls5113a04	B8	2
			ls5113a00	A9	3	ls5113a04	B9	3
			ls5113a02	A10	2	ls5113a06	B10	2
			ls5113a02	A11	3	ls5113a06	B11	3
			ls5113a08	A12	2	ls5113a12	B12	2
			ls5113a08	A13	3	ls5113a12	B13	3
			ls5113a10	A14	2	ls5113a14	B14	2
			ls5113a10	A15	3	ls5113a14	B15	3
5117	DCM	SS7IPGW	ls5117a00	A	0			
5118	DCM	SS7IPGW	ls5117a00	A	1			
5208	LIME1	CCS7ITU	ls5208i00	A	0	ls5208i04	B	0
			ls5208i00	A1	1	ls5208i04	B1	1
			ls5208i00	A2	2	ls5208i04	B2	2
			ls5208i00	A3	3	ls5208i04	B3	3
			ls5208i00	A4	4	ls5208i04	B4	4
			ls5208i00	A5	5	ls5208i04	B5	5
			ls5208i00	A6	6	ls5208i04	B6	6
			ls5208i00	A7	7	ls5208i04	B7	7
			ls5208i00	A8	8	ls5208i04	B8	8
			ls5208i00	A9	9	ls5208i04	B9	9
			ls5208i00	A10	10	ls5208i04	B10	10
			ls5208i00	A11	11	ls5208i04	B11	11
			ls5208i00	A12	12	ls5208i04	B12	12
			ls5208i00	A13	13	ls5208i04	B13	13
			ls5208i00	A14	14	ls5208i04	B14	14
			ls5208i00	A15	15	ls5208i04	B15	15
5211	DSM	VSCCP						IMSI

5215	DCM	SS7IPGW	ls5117a00	A	2				
5216	DCM	SS7IPGW	ls5117a00	A	3				
5217	DCM	SS7IPGW	ls5117a00	A	4				
5218	DCM	SS7IPGW	ls5117a00	A	5				
5301	DCM	SS7IPGW	sc1d079a	A	1				
5302	IPSM	IPS							
5303	DCM	SS7IPGW	ls5117a00	A	6				
5304	DCM	SS7IPGW	ls5117a00	A	7				
5306	LIME1	CCS7ITU	ls5306i00	A	0	ls5306i04	B	0	
			ls5306i00	A1	1	ls5306i04	B1	1	
			ls5306i00	A2	2	ls5306i04	B2	2	
			ls5306i00	A3	3	ls5306i04	B3	3	
			ls5306i00	A4	4	ls5306i04	B4	4	
			ls5306i00	A5	5	ls5306i04	B5	5	
			ls5306i00	A6	6	ls5306i04	B6	6	
			ls5306i00	A7	7	ls5306i04	B7	7	
			ls5306i00	A8	8	ls5306i04	B8	8	
			ls5306i00	A9	9	ls5306i04	B9	9	
			ls5306i00	A10	10	ls5306i04	B10	10	
			ls5306i00	A11	11	ls5306i04	B11	11	
			ls5306i00	A12	12	ls5306i04	B12	12	
			ls5306i00	A13	13	ls5306i04	B13	13	
			ls5306i00	A14	14	ls5306i04	B14	14	
			ls5306i00	A15	15	ls5306i04	B15	15	
5307	DSM	VSCCP							GTT
5312	LIME1	CCS7ITU	ls5312i00	A	0	ls5312i04	B	0	
			ls5312i00	A1	1	ls5312i04	B1	1	
			ls5312i02	A2	0	ls5312i06	B2	0	
			ls5312i02	A3	1	ls5312i06	B3	1	
			ls5312i08	A4	0	ls5312i12	B4	0	
			ls5312i08	A5	1	ls5312i12	B5	1	
			ls5312i10	A6	0	ls5312i14	B6	0	
			ls5312i10	A7	1	ls5312i14	B7	1	
			ls5312i00	A8	2	ls5312i04	B8	2	
			ls5312i00	A9	3	ls5312i04	B9	3	
			ls5312i02	A10	2	ls5312i06	B10	2	
			ls5312i02	A11	3	ls5312i06	B11	3	
			ls5312i08	A12	2	ls5312i12	B12	2	
			ls5312i08	A13	3	ls5312i12	B13	3	
			ls5312i10	A14	2	ls5312i14	B14	2	
			ls5312i10	A15	3	ls5312i14	B15	3	
5315	LIMT1	SS7ANSI	ls5315a00	A	0	ls5315a04	B	0	
			ls5315a00	A1	1	ls5315a04	B1	1	
			ls5315a02	A2	0	ls5315a06	B2	0	
			ls5315a02	A3	1	ls5315a06	B3	1	
			ls5315a08	A4	0	ls5315a12	B4	0	
			ls5315a08	A5	1	ls5315a12	B5	1	
			ls5315a10	A6	0	ls5315a14	B6	0	
			ls5315a10	A7	1	ls5315a14	B7	1	
			ls5315a00	A8	2	ls5315a04	B8	2	
			ls5315a00	A9	3	ls5315a04	B9	3	
			ls5315a02	A10	2	ls5315a06	B10	2	
			ls5315a02	A11	3	ls5315a06	B11	3	
			ls5315a08	A12	2	ls5315a12	B12	2	
			ls5315a08	A13	3	ls5315a12	B13	3	
			ls5315a10	A14	2	ls5315a14	B14	2	

			ls5315a10	A15	3	ls5315a14	B15	3	
5316	LIMT1	SS7ANSI	ls5316a00	A	0	ls5316a04	B	0	
			ls5316a00	A1	1	ls5316a04	B1	1	
			ls5316a00	A2	2	ls5316a04	B2	2	
			ls5316a00	A3	3	ls5316a04	B3	3	
			ls5316a00	A4	4	ls5316a04	B4	4	
			ls5316a00	A5	5	ls5316a04	B5	5	
			ls5316a00	A6	6	ls5316a04	B6	6	
			ls5316a00	A7	7	ls5316a04	B7	7	
			ls5316a00	A8	8	ls5316a04	B8	8	
			ls5316a00	A9	9	ls5316a04	B9	9	
			ls5316a00	A10	10	ls5316a04	B10	10	
			ls5316a00	A11	11	ls5316a04	B11	11	
			ls5316a00	A12	12	ls5316a04	B12	12	
			ls5316a00	A13	13	ls5316a04	B13	13	
			ls5316a00	A14	14	ls5316a04	B14	14	
			ls5316a00	A15	15	ls5316a04	B15	15	
5317	DSM	VSCCP							ELAP
6101	DSM	VSCCP							ELAP
6103	ENET	IPSG	ls3211a00	A	6				
6104	ENET	IPSG	ls3211a00	A	7				
6105	DSM	VSCCP							ELAP
6107	DSM	VSCCP							ELAP
6111	DSM	VSCCP							ELAP
6113	DSM	VSCCP							ELAP
6115	DSM	VSCCP							ELAP
6117	DSM	VSCCP							ELAP

If service modules are shown in the `rtrv-card` output, shown by the entry `VSCCP` in the `APPL` column, continue the procedure with [step 4](#).

If service modules are not shown in the `rtrv-card` output, continue the procedure with [step 2](#).

2. Verify that the GTT feature is on by entering the `rtrv-feat` command. If the GTT feature is on, the `GTT` field should be set to `on`. For this example, the GTT feature is off.

Note

The `rtrv-feat` command output contains other fields that are not used by this procedure. To see all the fields displayed by the `rtrv-feat` command, refer to the `rtrv-feat` command description in *Commands User's Guide*.

If the GTT feature is on, continue the procedure with [step 4](#).

If the GTT feature is off, continue the procedure with [step 3](#).

3. Turn the global title translation feature on by entering this command.

```
chg-feat:gtt=on
```

Note

Once the Global Title Translation (GTT) feature is turned on with the `chg-feat` command, it cannot be turned off.
The GTT feature must be purchased before turning it on. If you are not sure whether you have purchased the GTT feature, contact your Sales Representative or Account Representative.

When the `chg-feat` has successfully completed, this message should appear.

```
rlghncxa03w 09-07-25 09:57:41 GMT EAGLE5 41.1.0
CHG-FEAT: MASP A - COMPLTD
```

Continue the procedure by performing one of these steps.

- If a card is being added, continue the procedure with [step 7](#).
 - If an E5-SM8G-B card is being added, continue the procedure with [step 6](#).
4. Display the status of the features in the database by entering the `rtrv-ctrl-feat` command. The following is an example of the possible output.

```
tklc1110501 15-06-24 16:53:12 EST EAGLE5 46.2.0-65.53.1
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
Large System # Links	893005910	on	2000
XGTT Table Expansion	893006110	on	1000000
Routesets	893006403	on	8000
LNP Short Message Serv.	893006601	on	----
Intermed GTT Load Sharing	893006901	on	----
Command Class Management	893005801	on	----
Telnet	893005701	on	----
EAGLE5 Product	893007101	on	----
XMAP Table Expansion	893007710	on	3000
LNP ported NPANXXs	893009403	on	350000
LNP ported LRNs	893010506	on	200000
LNP ELAP Configuration	893010901	on	----
LNP ported TNs	893011036	on	384000000
SCCP Conversion	893012001	on	----
HC-MIM SLK Capacity	893012707	on	64
EAGLE OA&M IP Security	893400001	off	----
Flexible GTT Load Sharing	893015401	on	----
Origin-Based MTP Routing	893014201	on	----
Origin Based SCCP Routing	893014301	on	----
GPORT	893017201	on	----
INP	893017901	on	----
Throughput Cap	893019101	on	5000
Multiple Linkset to APC	893019701	on	----
6-Way LS on Routesets	893019801	on	----
Proxy Point Code	893018710	on	100
AMGTT	893021801	on	----
VGTT with 16 GTT lengths	893024801	on	----
ITU TCAP LRN QUERY(LRNQT)	893026301	on	----
ISLSBR	893026501	on	----

GTT Action - DISCARD	893027501	on	----
GTT Action - DUPLICATE	893027601	on	----
GTT Action - FORWARD	893037501	on	----
Flex Lset Optnl Based Rtg	893027701	on	----
TCAP Opcode Based Routing	893027801	on	----
TOBR Opcode Quantity	893027907	on	1000000
ST-HSL-A SLK Capacity	893027301	on	4
3 Links per E5-ATM card	893039104	on	20
Integrated GLS	893038901	on	----
EPAP Data Split	893039801	on	----
Dual ExAP Config	893040501	on	----

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period
Left				
Zero entries found.				

The following features have expired temporary keys:

Feature Name	Partnum
Zero entries found.	

The following table shows the ELAP-Based and EPAP-Based features that can be enabled. These features can affect how many service modules can be provisioned in the EAGLE.

Table 4-7 ELAP-Based and EPAP-Based Features

ELAP-Based Features		
LNP		
EPAP-Based Features		
EIR	G-Port	INP
ANSI-41 INP Query	A-Port	IS41 GSM Migration
G-Flex	TINP	V-Flex
ATINP	TIF Number Portability	TIF SCS Forwarding
TIF Simple Number Substitution	TIF ASD	TIF GRN
Prepaid IDP Query Relay	IDP Screening for Prepaid	MO-based GSM SMS NP
MO-based IS41 SMS NP	MO SMS IS41-to-GSM Migration	MO SMS ASD
MO SMS GRN	Portability Check for MO SMS	Prepaid SMS Intercept Phase 1
Service Portability	Info Analyzed Relay Base	TIF Selective Screening

Continue the procedure by performing one of these steps.

- If any of the features shown in [Table 4-7](#) is enabled, or if any the shown in [Table 4-7](#) will be enabled, continue the procedure with [step 5](#).
- If none of the features shown in [Table 4-7](#) is enabled and none of these features will be enabled, continue the procedure with [step 5](#).

5. Verify the number of service modules in the EAGLE by entering the `rept-stat-sccp` command. The number of service modules is shown in the SCCP Cards Configured field of the `rept-stat-sccp` output. This is an example of the possible output.

```
tklc1110501 15-06-24 17:00:40 EST EAGLE5 46.2.0-65.53.1
SCCP SUBSYSTEM REPORT IS-NR Active -----
  SCCP ALARM STATUS = No Alarms
MNP SERVICE REPORT IS-ANR Active -----
  MNP ALARM STATUS = ** 0547 Service degraded
LNP SUBSYSTEM REPORT IS-NR Active -----
  LNP: SSN STATUS = Allowed MATE SSN STATUS = -----
  LNP ALARM STATUS = ** 0283 LNP Ported LRNs approaching Feat. Cap.
INPQ SUBSYSTEM REPORT IS-ANR Active -----
  INPQ: SSN STATUS = Allowed MATE SSN STATUS = -----
  INP ALARM STATUS = ** 0428 INP Subsystem degraded, cards abnormal
```

```
SCCP Cards Configured=28 Cards IS-NR=27
System Daily Peak SCCP Load 4134 TPS 15-06-24 07:13:24
System Overall Peak SCCP Load 4134 TPS 15-06-24 07:13:24
System Total SCCP Capacity 135000 TPS (135000 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold 108000 TPS ( 80% System N SCCP
Capacity)
```

CARD	VERSION	PST	SST	AST	MSU USAGE	CPU USAGE	DATA TYPE
1317	135-052-000	IS-NR	Active	-----	2%	5%	ELAP
2211	135-052-000	IS-NR	Active	-----	1%	9%	GTT
2217	135-052-000	IS-NR	Active	-----	20%	10%	ELAP
2305	135-052-000	IS-NR	Active	-----	1%	3%	IMSI
2311	135-052-000	IS-NR	Active	-----	0%	1%	IMSI
2317	135-052-000	IS-NR	Active	-----	2%	2%	ELAP
3103	135-052-000	IS-NR	Active	-----	2%	5%	ELAP
3111	135-052-000	IS-NR	Active	-----	0%	5%	DN
3201 P	135-052-000	IS-NR	Active	-----	2%	5%	ELAP
3203	135-052-000	IS-NR	Active	-----	2%	2%	ELAP
3205	135-052-000	IS-NR	Active	-----	2%	2%	ELAP
3207	135-052-000	IS-NR	Active	-----	2%	5%	ELAP
3217	135-052-000	IS-NR	Active	-----	2%	5%	ELAP
4107	135-052-000	IS-NR	Active	-----	0%	4%	IMSI
4111	135-052-000	IS-NR	Active	-----	0%	9%	GTT
4207 P	135-052-000	IS-NR	Active	-----	1%	5%	DN
4311	-----	OOS-MT	Isolated	-----	0%	0%	DN
5211	135-052-000	IS-NR	Active	-----	1%	5%	IMSI
5307	135-052-000	IS-NR	Active	-----	1%	9%	GTT
5317	135-052-000	IS-NR	Active	-----	20%	4%	ELAP
6101	135-052-000	IS-NR	Active	-----	2%	2%	ELAP
6105	135-052-000	IS-NR	Active	-----	2%	2%	ELAP
6107	135-052-000	IS-NR	Active	-----	2%	2%	ELAP
6111	135-052-000	IS-NR	Active	-----	2%	2%	ELAP
6113	135-052-000	IS-NR	Active	-----	2%	3%	ELAP
6115	135-052-000	IS-NR	Active	-----	2%	5%	ELAP
6117	135-052-000	IS-NR	Active	-----	2%	5%	ELAP
1107	135-052-000	IS-NR	Active	-----	2%	2%	ELAP

SCCP Service Average MSU Capacity = 2% Average CPU Capacity = 4%

AVERAGE CPU USAGE PER SERVICE:

GTT = 1% MNP = 0%
 LNPMR = 1% LNPQS = 1% WNPQS = 1% TLNP = 1% PLNPQS = 1%
 LRNQT = 0% INPMR = 0%

TOTAL SERVICE STATISTICS:

SERVICE	SUCCESS	ERRORS	FAIL RATIO	REROUTE\ WARNINGS	FORWARD TO GTT	TOTAL
GTT:	111	0	0%	-	-	111
MNP:	0	0	0%	0	0	0
LNPMR:	1602	0	0%	-	-	1602
LNPQS:	109065	32	0%	-	-	109097
WNPQS:	1266	0	0%	-	-	1266
TLNP:	725	0	0%	-	-	725
PLNPQS:	8817	0	0%	-	-	8817
LRNQT:	0	0	0%	-	-	0
INPMR:	0	0	0%	0	0	0
INPQ:	0	0	0%	0	-	0

Note

The `rept-stat-sccp` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rept-stat-sccp` command, refer to the `rept-stat-sccp` command description in *Commands User's Guide*.

The following table shows the maximum number of service modules that can be provisioned based on the type of SCCP traffic the EAGLE is handling and whether or not the Throughput Capacity or the EAGLE SCCP Capacity Increase features are enabled and turned on.

Table 4-8 SCCP Transactions Per Second

Type of Traffic	Maximum Transactions per Second for the EAGLE	Transactions per Second for each Service Module	Maximum Number of Service Modules
Throughput Capacity Feature for either 5000 or 6800 SCCP Transactions per Second is not Enabled or Turned On			
GTT Traffic or ANSI41 AIQ only - No EPAP-Based Traffic or ELAP-Based (LNP) Traffic	52,700	1700	32
ELAP-Based (LNP) Traffic	40,800	1700	25
EPAP-Based Traffic	40,800	1700 - for a SLIC card	25
	20,400	850 - for a DSM	25
Throughput Capacity Feature for 5000 SCCP Transactions per Second is Enabled and Turned On (See Notes 1 and 2)			

Table 4-8 (Cont.) SCCP Transactions Per Second

Type of Traffic	Maximum Transactions per Second for the EAGLE	Transactions per Second for each Service Module	Maximum Number of Service Modules
GTT Traffic or ANSI41 AIQ only - No EPAP-Based Traffic or ELAP-Based (LNP) Traffic	150,000	5000	32
ANSI G-Flex EPAP-Based Traffic Only	150000	5000	32
EPAP-Based Traffic (except ANSI G-Flex Traffic)	96,875	3125	32
ELAP-Based (LNP) Traffic	85,000	5000	18 (See Note 3)
Throughput Capacity Feature for 6800 SCCP Transactions per Second is Enabled and Turned On (See Notes 1 and 2)			
GTT Traffic or ANSI41 AIQ only - No EPAP-Based Traffic or ELAP-Based (LNP) Traffic	210,800	6800	32
EPAP-Based Traffic (including ANSI G-Flex Traffic)	210,800	6800	32
ELAP-Based (LNP) Traffic	115,600	6800	18 (See Note 3)
Throughput Capacity Feature for 10000 SCCP Transactions per Second is Enabled and Turned On (See Note 4)			
GTT Traffic or ANSI41 AIQ	310,000	10000	32

Notes:

- a. To achieve the maximum transactions per second shown in this portion of the table, all the service modules must be SLIC cards.
- b. The value shown in the Transactions per Second for each Service Module column in this portion of the table applies only to SLIC cards.
- c. The number of service modules can be a maximum of 18 only if the ELAP version is 9.0. If the ELAP version is less than 9.0, only nine service modules can be used for ELAP-based traffic.
- d. Throughput Capacity feature for 10000 TPS requires E5-SM8G-B cards, and 13.6k TPS requires SLIC cards.

The following table shows the maximum SCCP throughput capacity based on the combinations of features and GPL/card.

Table 4-9 SCCP Throughput Capacity

SCCP Throughput Capacity Feature Activated	E5-SM8G-B TPS	SLIC TPS
13.6K TPS (P/N: 893019104)	13600	13600 TPS if all below conditions are true: <ul style="list-style-type: none"> a. EGMS feature is not activated b. EPAP240M option in STPOPTS is OFF or SM card is provisioned as data=DN/IMSI/ELAP/GTT c. No UAM 548 or 549 present in the system 10000 TPS if all below conditions are true: <ul style="list-style-type: none"> a. EGMS feature is not activated b. EPAP240M option in STPOPTS is ON and SM card is provisioned as data=DN/IMSI/ELAP/GTT c. No UAM 548 or 549 present in the system
10K TPS (P/N: 893019103)	10000	10000
6.8K TPS (P/N: 893019102)	6800	6800
5K TPS (P/N: 893019101)	5000	5000

The EAGLE's total SSCP throughput capacity can be calculated as the number of SSCP cards in the system (N) times the SSCP throughput capacity per card (keeping in mind the SSCP configuration of the system: N or N+1). The number of SSCP cards in the system depends on whether the system is a pure GTT or EPAP or ELAP system and the specific EAGLE/EPAP/ELAP release.

Table 4-10 Number of Service Module Cards in the System

MPS Release	SM4G Cards (up to 5K/6.8K/10KTPS)
ELAP 10.0	18 Up to 384 mil TNs
Up to EAGLE 41.1+ EPAP 16	25
From EAGLE 42.0 + EPAP 16 on AS T1000	25 (in N+1 config)
From EAGLE 42.0 +EPAP 16 on AS T1200	32 (in N+1 config)

If the `rept-stat-sccp` output shows that the EAGLE has the maximum number of service modules, as shown in [Table 4-10](#), the remaining procedure cannot be performed.

If the `rept-stat-sccp` output shows that the EAGLE does not have the maximum number of service modules, as shown in [Table 4-10](#), continue the procedure by performing one of these steps.

- If a card is being added, continue the procedure with [step 7](#).

- If an E5-SM8G-B card is being added, continue the procedure with [step 6](#).
6. Verify that HIPR2 cards are installed at card locations 9 and 10 in the shelf where the E5-SM8G-B card will be installed. Enter this command.

```
rept-stat-gpl:gpl=hipr2
```

This is an example of the possible output.

```
rlghncxa03w 09-07-01 11:40:26 GMT EAGLE5 41.1.0
GPL          CARD      RUNNING      APPROVED      TRIAL
HIPR2        1109      126-002-000    126-002-000    126-003-000
HIPR2        1110      126-002-000    126-002-000    126-003-000
HIPR2        1209      126-002-000    126-002-000    126-003-000
HIPR2        1210      126-002-000    126-002-000    126-003-000
HIPR2        1309      126-002-000    126-002-000    126-003-000
HIPR2        1310      126-002-000    126-002-000    126-003-000
HIPR2        2109      126-002-000    126-002-000    126-003-000
HIPR2        2110      126-002-000    126-002-000    126-003-000
Command Completed
```

If HIPR2 cards are installed at card locations 9 and 10 in the shelf where the E5-SM8G-B card will be installed, continue the procedure with [step 7](#).

If HIPR2 cards are not installed in the shelf where the E5-SM8G-B card will be installed, refer to *Installation Guide* to install the HIPR2 cards. Once the HIPR2 cards have been installed, continue the procedure with [step 7](#).

7. Verify the service module has been physically installed into the proper location according to the feature requirements. [Table 4-5](#) shows the type of service module that is required based on the GTT-related features that are currently being used (also shown in the `rtrv-feat` output in [step 2](#) as being on, and in the `rtrv-ctrl-feat` output in [step 4](#) as being enabled) and any features that will be enabled after this procedure is performed.

Caution

If the versions of the flash GPLs on the service module do not match the flash GPL versions in the database when the service module is inserted into the card slot, UAM 0002 is generated to indicate that these GPL versions do not match. If UAM 0002 has been generated, perform the alarm clearing procedure for UAM 0002 in *Unsolicited Alarm and Information Messages Reference* before proceeding with this procedure.

8. Verify the EAGLE has a fan unit and the fan unit is on. If the fan unit is not on, use the `enable-ctrl-feat:fan=on` command to turn on the fan.
9. Verify the MFC STP option is turned on. If the MFC STP option is not turned on, use the `enable-ctrl-feat:MFC=on` to turn it on.
10. Add the service module to the database using the `ent-card` command. For this example, enter this command.

```
ent-card:loc=1301:type=dsm:appl=vsccp
```

Note

If any EPAP-based feature is enabled and turned on, and the service module quantity will exceed 25, the `ent-card` command must be entered twice within 30 seconds on the same terminal for the service module to be added to the database.

When this command has completed, one of these messages should appear.

- If any of these conditions will be present after the new service module is added to the database:
 - the total number of service modules will not be increased beyond 25
 - the total number of service modules will be greater than 25 and no EPAP-based features are enabled and turned on (see [Table 4-7](#))
 - the total number of service modules will be from 27 to 32 and any EPAP-based features are enabled and turned on (see [Table 4-7](#))

this message should appear.

```
rlghncxa03w 10-07-25 09:57:51 GMT  EAGLE5 42.0.0
ENT-CARD: MASP A - COMPLTD
```

- If the addition of the new service module will increase the total number of service modules to 26 and any EPAP-based features are enabled and turned on (see [Table 4-7](#)), this message should appear.

```
rlghncxa03w 10-07-25 09:57:51 GMT  EAGLE5 42.0.0
```

```
CAUTION: Please ensure EPAP Application Server is running on
hardware supporting 32 SCCP cards e.g.:
T1200.
Re-enter command within 30 seconds to confirm change.
```

```
rlghncxa03w 10-07-25 09:57:51 GMT  EAGLE5 42.0.0
ENT-CARD: MASP A - Command Aborted
```

After this message appears, re-enter the `ent-card` command within 30 seconds. This message should appear.

```
rlghncxa03w 10-07-25 09:57:51 GMT  EAGLE5 42.0.0
ENT-CARD: MASP A - COMPLTD
```

If the `ent-card` command is not re-entered within 30 seconds, this message should appear and the new service module will not be added to the database.

```
ENT-CARD command (Type=DSM) confirmation timer expired
```

11. Verify the changes using the `rtrv-card` command with the card location specified. For this example, enter this command.

```
rtrv-card:loc=1301
```

This is an example of the possible output.

```
rlghncxa03w 09-07-25 09:58:31 GMT EAGLE5 41.1.0
CARD   TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1301   DSM        VSCCP
```

12. Display the current IP link parameters associated with the Service Module card in the database by entering the `rtrv-ip-lnk` command:

```
RLGHNCXA03W 05-14-24 21:14:37 GMT EAGLE 46.0.0
LOC PORT IPADDR SUBMASK DUPLEX SPEED MACTYPE AUTO MCAST
1107 A ----- ----- HALF 10 DIX NO NO
1107 B ----- ----- HALF 10 DIX NO NO
```

13. Enter the IP address and other parameter values associated with the Service Module card in the database using the `chg-ip-lnk` command:

For example, enter:

```
chg-ip-
lnk:loc=1107:port=a:ipaddr=192.168.122.1:mactype=dix:auto=yes:
mcast=yes:submask=255.255.255.0

chg-ip-
lnk:loc=1107:port=b:ipaddr=192.168.123.1:mactype=dix:auto=yes:
mcast=yes:submask=255.255.255.0
```

Where:

:loc

Card location or slot number of the SM card in the EAGLE

:port

Ethernet interface Port ID-the physical interface of the SM card

:ipaddr

IP address for the specified port. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the network number of the system and the unique host number.

:submask

Subnet mask of the IP interface in the form of an IP address with a restricted range of values

:mactype

Media Access Control Type of the interface. When a Service Module card is entered into the database, these values are automatically configured.

:mcast

Multicast Control to enable or disable multicast support for the interface. This parameter value must be yes to establish the connection from the SM card to the MPS system.

:auto

Tells hardware whether to automatically determine duplex and speed.

Note

Corresponding ports on ExAP LAN switches should be configured accordingly to achieve the required operational speed and duplex of 1Gbps and Full Duplex. Refer to *ExAP Administration Guide* for more information. Once the SM (SMxG/SLIC) card is in service, the pass command `pass:cmd="netstat -i":loc=<:SM card loc>` can be used to verify the operational speed and duplex of ExAP ports on SM cards.

14. Verify the IP address and other parameter values associated with the Service Module card in the database by entering the `rtrv-ip-lnk` command:

```
RLGHNCXA03W 05-14-24 21:14:37 GMT EAGLE 46.0.0
LOC PORT IPADDR SUBMASK DUPLEX SPEED MACTYPE AUTO MCAST
1107 A 192.168.122.1 255.255.255.0 HALF 100 DIX NO YES
1107 B 192.168.123.1 255.255.255.0 HALF 10 DIX NO YES
```

15. Display the current IP host information in the database by entering the `rtrv-ip-host` command:

```
RLGHNCXA03W 05-14-24 21:17:37 GMT EAGLE 46.0.0
IPADDR HOST
192.1.1.32 KC_HLR2
192.1.1.50 DN_MSC1
192.1.1.52 DN_MSC2
```

16. Add the host name and IP address for each VSCCP link, using the `ent-ip-host` command.

Command examples:

```
ent-ip-host:host=vsccp_1107_a:ipaddr=192.168.122.1
ent-ip-host:host=vsccp_1107_b:ipaddr=192.168.123.1
```

Where:

:host

Host name. Each VSCCP link must be specified separately.

:ipaddr

IP network address for each EPAP. The first three octets of the IP address must be the same as MPS A and B ports, respectively. The fourth octet identifies the SM card and must have a unique octet identifier for the card IP address

17. Verify the new IP host information in the database by entering the `rtrv-ip-host` command:

```
RLGHNCXA03W 05-14-24 21:19:37 GMT EAGLE 46.0.0
IPADDR HOST
192.1.1.32 KC_HLR2
192.1.1.50 DN_MSC1
192.1.1.52 DN_MSC2
192.168.122.1 VSCCP_1107_A
192.168.123.1 VSCCP_1107_B
```

18. Enter local domain and IP router address for the SM card using the `chg-ip-card` command:

Note

Most customer private networks do not require setting up a default router for the SM card. If your network configuration requires a default router to connect the Service Module card communication to the EPAP, then only one default router is assignable to each Service Module card. Assign the default router address to each Service Module card as shown in this step.

For example:

```
chg-ip-  
card:defrouter=192.168.122.250:domain=nc.tekelec.com:loc=<card  
location>
```

Where:

:defrouter

Default router IP address. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the network number of the system and the unique host number.

:domain

Domain name of domain server

:loc

Card location or slot number of the SM card in the EAGLE

19. Verify the new TCP/IP parameters associated with the SM card in the database by entering the `rtrv-ip-card` commands:

```
RLGHNCXA03W 05-14-24 21:21:37 GMT EAGLE 45.0.0  
LOC 1107  
SRCHORDR LOCAL  
DNSA -----  
DNSB -----  
DEFROUTER 192.168.122.250  
DOMAIN NC.TEKELEC.COM
```

20. Allow the SM card that was added to operate in the system, using the `alw-card` command:

```
alw-card:loc=<card location>
```

21. Verify the In-Service-Normal (IS-NR) status of the SM card, using the `rept-stat-card` command.
22. Test the presence of the EPAP hosts on the network using the `pass` command with the `ping` parameter. This command is invoked with a destination that is either a hostname or IP address.

Command examples:

```
pass:loc=1107:cmd="ping 192.168.122.100"
```

```
pass:loc=1107:cmd="ping 192.168.122.200"
```

```
pass:loc=1107:cmd="ping 192.168.123.100"
```

```
pass:loc=1107:cmd="ping 192.168.123.200"
```

Where:

:loc

Card location or slot number in the EAGLE

:cmd

Command string passed to Service Module card for processing.

After successful completion of each command, the system response is similar to the following output:

```
rlghncxa03w 05-14-24 08:30:44 GMT EAGLE 46.0.0
pass: loc=1107: cmd="ping 192.168.122.100"
Command entered at terminal #1.
;
rlghncxa03w 05-14-24 08:30:44 GMT EAGLE 46.0.0
PASS: Command sent to card
;
rlghncxa03w 05-14-24 08:30:44 GMT EAGLE 46.0.0
PING command in progress
;
rlghncxa03w 05-14-24 08:30:46 GMT EAGLE 46.0.0
PING 192.168.122.100: 56 data bytes
64 bytes from tekral.nc.tekelec.com (192.168.122.100):icmp_seq=0.time=5. ms
64 bytes from tekral.nc.tekelec.com (192.168.122.100):icmp_seq=1.time=0. ms
64 bytes from tekral.nc.tekelec.com (192.168.122.100):icmp_seq=2.time=0. ms
----192.168.100.3 PING Statistics----
3 packets transmitted, 3 packets received, 0% packet loss
round-trip (ms) min/avg/max = 0/1/5
PING command complete
```

If the `pass` commands with the `ping` parameter are not successful, verify the correct connection of the hardware cabling and repeat this step. If the command fails again, contact the [My Oracle Support \(MOS\)](#).

23. Put the card in service using the `rst-card` command with the card location specified in [step 10](#). For this example, enter this command.

```
rst-card:loc=1301
```

Note

The primary state of the service module will remain `IS-ANR` and the secondary state of the service module will remain `MPS_UNAVAIL` after the `rst-card` command is performed when these conditions are present.

- An EPAP-based feature is enabled and turned on.
- Adding the new service module increased the service module quantity beyond 25.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 09-07-28 08:21:07 GMT EAGLE5 41.1.0
Card has been allowed.
```

Continue the procedure by performing one of these steps.

- If the EGTT feature is on, shown by the entry `EGTT = on` in the `rtrv-feat` command output in [step 2](#), or if the EGTT feature is off and will not be turned on in this procedure, continue the procedure with [step 25](#).
- If the EGTT feature is off and will be turned on in this procedure, continue the procedure with [step 24](#).

24. Turn the enhanced global title translation feature on by entering this command.

Note

Once the Enhanced Global Title Translation (EGTT) feature is turned on with the `chg-feat` command, it cannot be turned off. The EGTT feature must be purchased before turning it on. If you are not sure whether you have purchased the EGTT feature, contact your Sales Representative or Account Representative.

When the `chg-feat` has successfully completed, this message should appear.

```
rlghncxa03w 09-07-25 09:57:41 GMT EAGLE5 41.1.0
CHG-FEAT: MASP A - COMPLTD
```

25. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 4-1 Add a Service Module - Sheet 1 of 4

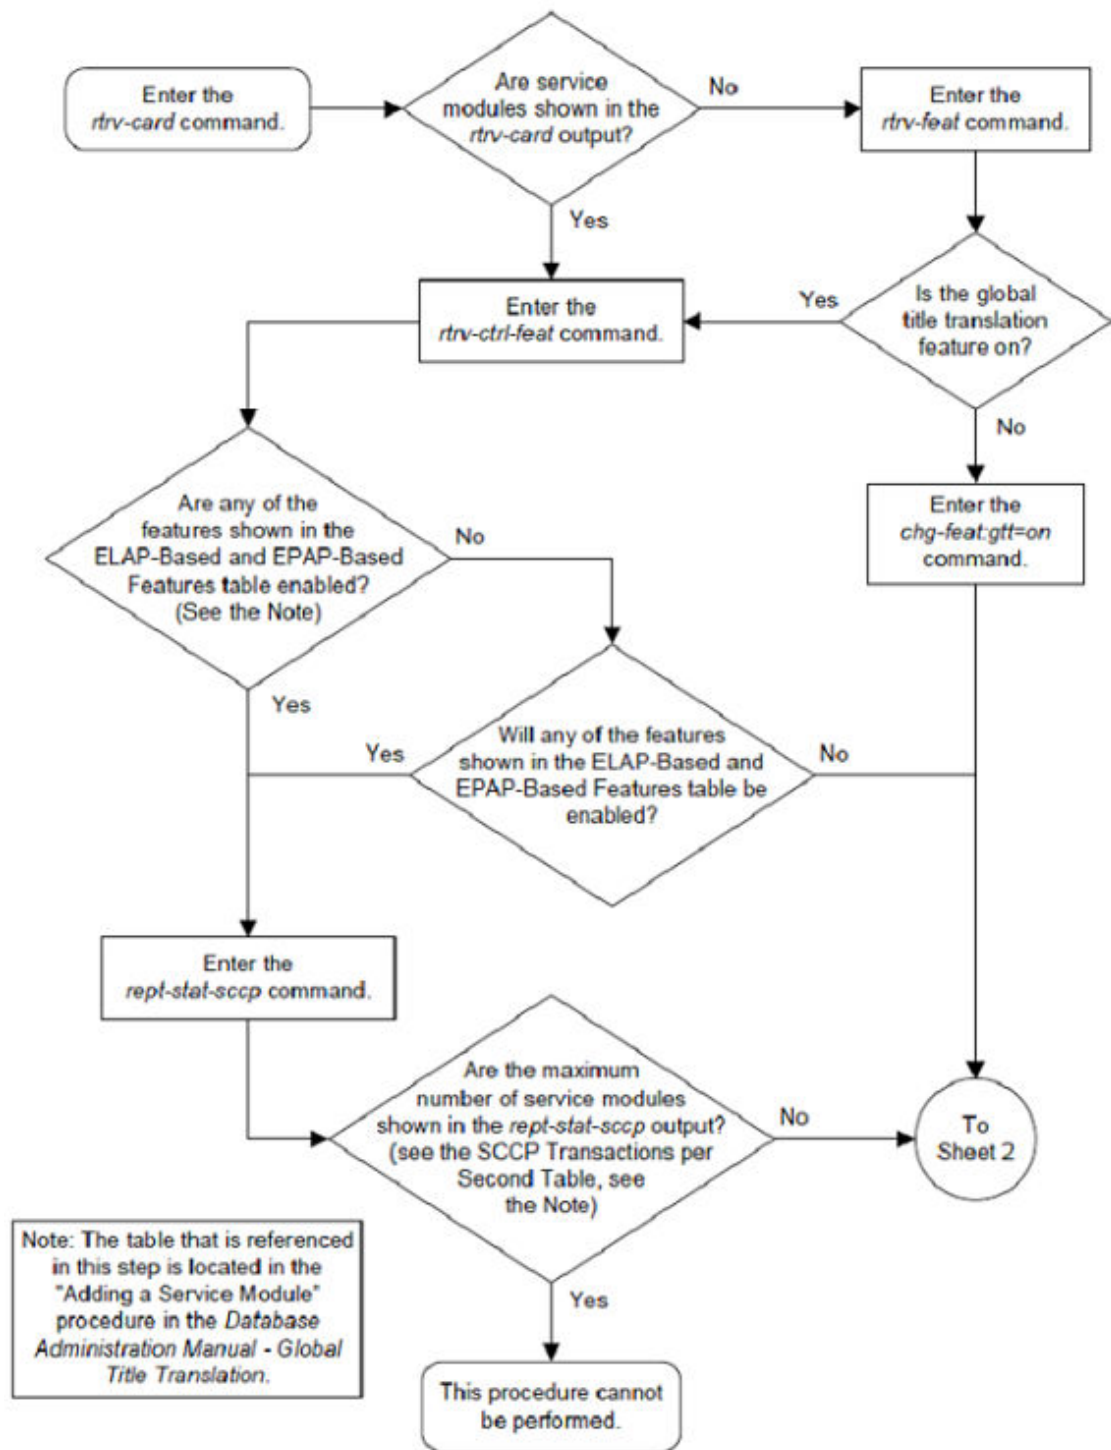


Figure 4-2 Add a Service Module - Sheet 2 of 4

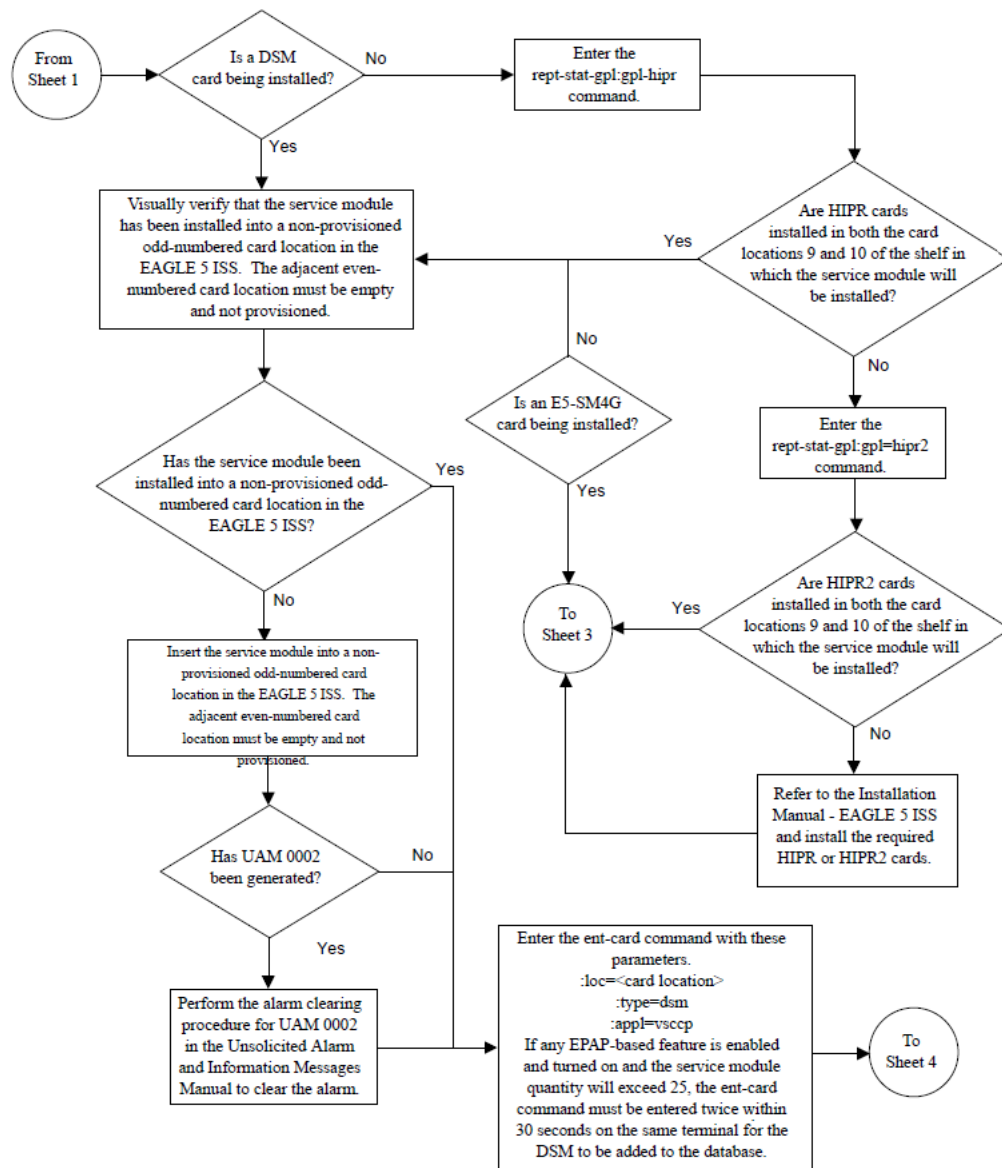


Figure 4-3 Add a Service Module - Sheet 3 of 4


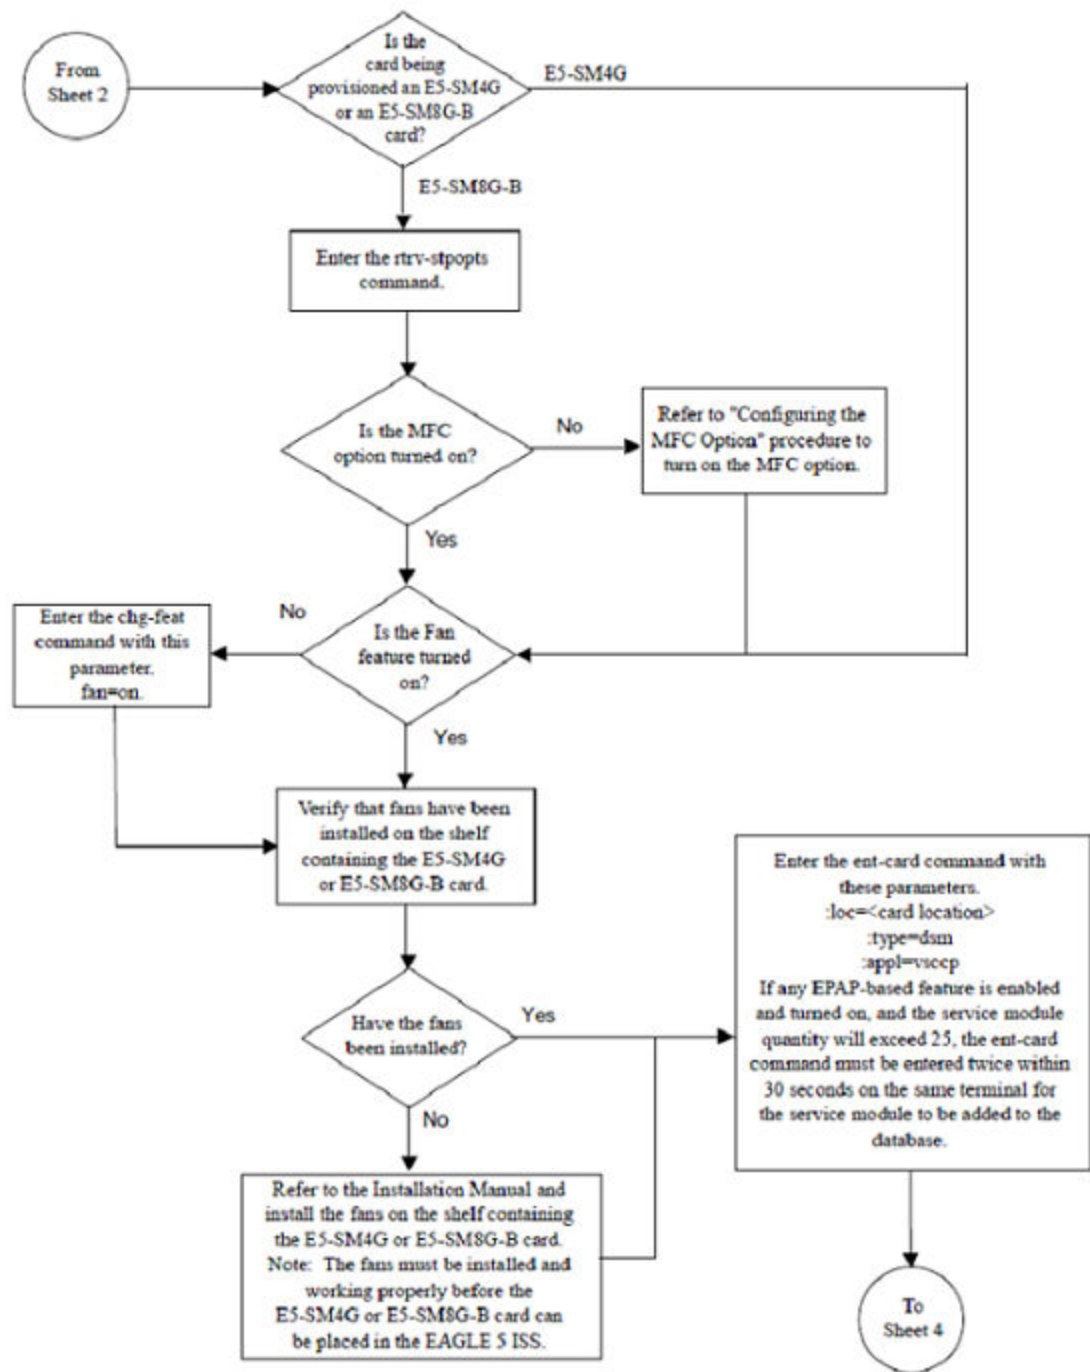


Figure 4-4 Add a Service Module - Sheet 4 of 4

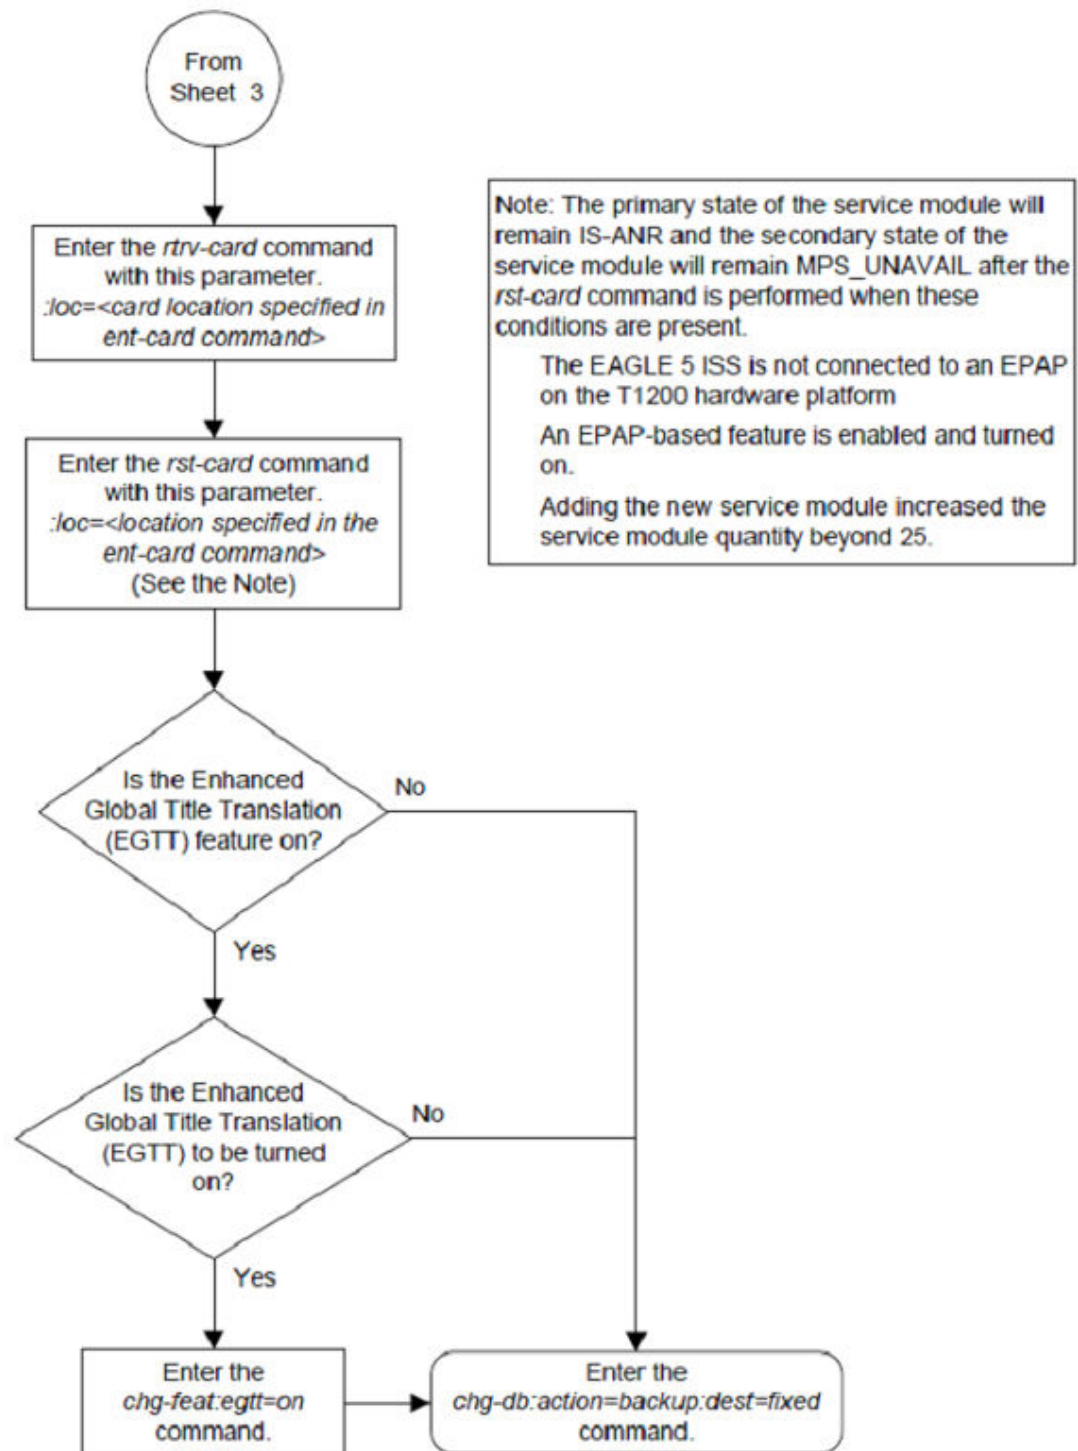

Adding an IPSG Card

This procedure is used to add an **IPSG** card to the database using the *ent-card* command. An IPSG card is an E5-ENET-B or SLIC card that is running the IPSG application.

The `ent-card` command uses these parameters.

`:loc` – The location of the card being added to the database.

`:type` – The type of card being added to the database. For this procedure, the value of this parameter is `enet` for an E5-ENET card and `enetb` for E5-ENET-B. When provisioning the SLIC, the card type is `slc`.

`:appl` – The application software that is assigned to the card. For this procedure, the value of this parameter is `ipsg`.

`:force` – If the global title translation feature is on, the `force=yes` parameter allows the **IPSG** card to be added to the database even if the current **SCCP** transactions-per-second threshold is unable to support the additional **SCCP** transaction-per-second capacity created by adding the **IP** card. This parameter is obsolete and is no longer used.

Card Slot Selection

The **E5-ENET** card can be inserted into any card slot, except for card slots that must remain empty to accommodate dual-slot cards, slots 09 and 10 in each shelf, and slots 1113 through 1118.

To provision a E5-ENET card, the shelf containing the E5-ENET card must have HIPR2 cards installed in slots 9 and 10 in that shelf. If HIPR2 cards are not installed in the shelf that the E5-ENET card will occupy, the E5-ENET card will be auto-inhibited when the E5-ENET card is inserted into the shelf. Enter the `rept-stat-gpl:gpl=hipr2` command to verify whether or not **HIPR2** cards are installed in the same shelf as the E5-ENET card being provisioned in this procedure.

1. Display the total provisioned system TPS by entering the `rtrv-tps` command.

This is an example of the possible output.

```
rlghncxa03w 10-07-30 16:20:46 GMT EAGLE 42.0.0
```

```
Total provisioned IPGW   TPS =   30000
Total provisioned IP SG  TPS =  400000
Total provisioned IPLIM  TPS =   20000
Total provisioned ATM    TPS =    3668
```

```
Total provisioned System TPS (453668 of 500000) 91%
```

```
Command Completed.
```

For for MaxTPS values, see *"Maximum Xard Capacity for Different Card Types"* in Database Administration - IP7 User's Guide. If adding the new IP SG card will not exceed the maximum total provisioned system TPS, continue the procedure with [step 2](#).

If adding the new IP SG card will exceed the maximum total provisioned system TPS, and the maximum total provisioned system TPS is 500,000, perform the "Activating the HIPR2 High Rate Mode" feature in *Database Administration - System Management User's Guide* to enable and turn on the HIPR2 High Rate Mode feature. When the HIPR2 High Rate Mode feature is enabled and turned on, the maximum total provisioned system TPS is increased to 1,000,000 (1M). After the HIPR2 High Rate Mode feature has been enabled and turned on, continue the procedure with [step 2](#).

If adding the new IPSG card will exceed the maximum total provisioned system TPS, and the maximum total provisioned system TPS is 1M, This procedure cannot be performed. The maximum total provisioned system TPS the EAGLE can have is 1M,

2. Display the cards in the database using the `rtrv-card` command.

This is an example of the possible output. Cards should be distributed throughout the EAGLE for proper power distribution. Refer to *Installation Guide* for the shelf power distribution.

```
rlghncxa03w 13-06-05 08:12:53 GMT 45.0.0
CARD   TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1101   DSM        VSCCP
1102   TSM        GLS
1113   E5MCAP     EOAM
1114   E5TDM-A
1115   E5MCAP     EOAM
1116   E5TDM-B
1117   E5MDAL
1201   LIMDS0     SS7ANSI    sp2            A    0    sp1            B    0
1203   LIMDS0     SS7ANSI    sp3            A    0
1204   LIMDS0     SS7ANSI    sp3            A    1
1206   LIMDS0     SS7ANSI    nsp3           A    1    nsp4           B    1
1301   LIMDS0     SS7ANSI    sp6            A    1    sp7            B    0
1302   LIMDS0     SS7ANSI    sp7            A    1    sp5            B    1
1303   DCM        IPLIM      ipnode1        A    0    ipnode3        B    1
1305   DCM        IPLIM      ipnode4        A    0
2101   ENET       IPSG
2103   ENET       IPSG
2105   ENET       IPSG
2107   ENET       IPSG
2201   DCM        IPLIM
2203   DCM        IPLIM
2207   DCM        IPLIM
2211   DCM        SS7IPGW
2213   DCM        SS7IPGW
2215   DCM        IPGWI
2217   DCM        IPGWI
2301   DCM        SS7IPGW
2303   DCM        SS7IPGW
2305   DCM        IPGWI
2307   DCM        IPGWI
2311   DCM        IPLIMI
2313   DCM        ILIMI
```

Continue the procedure by performing one of these actions.

- If the required unprovisioned card slots (see the Card Slot Selection section) are shown in the `rtrv-card` output, continue the procedure with [step 5](#).
- If the required unprovisioned card slots are not shown in the `rtrv-card` output, [step 3](#) must be performed.

3. Display the shelves in the database by entering the `rtrv-shlf` command. This is an example of the possible output.

```
rlghncxa03w 08-03-05 08:12:53 GMT 38.0.0
SHELF DISPLAY
FRAME SHELF      TYPE
  1      1      CONTROL
  1      2      EXTENSION
  1      3      EXTENSION
  2      1      EXTENSION
  2      2      EXTENSION
  2      3      EXTENSION
```

If all the shelves are provisioned in the database, then the remainder of this procedure cannot be performed. There are no available card slots for the new **IPSG** card.

If all the shelves have not been provisioned in the database, continue the procedure with [step 4](#).

4. Add the required shelf using the `ent-shlf` command with the location of the shelf and the `type=ext` parameter. The shelf location values are 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, and 6100. For this example, enter this command.

```
ent-shlf:loc=3100:type=ext
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 07-05-01 09:12:36 GMT EAGLE5 37.0.0
ENT-SHLF: MASP A - COMPLTD
```

5. Verify that the card to be entered has been physically installed into the proper location (see the in Card Slot Selection section). If the card has not been installed, insert the card into the desired card location following the rules described in Card Slot Selection section.

Caution

If the versions of the flash GPLs on the IP SG card do not match the flash GPL versions in the database when the IP SG card is inserted into the card slot, **UAM 0002** is generated indicating that these **GPL** versions do not match. If UAM 0002 has been generated, perform the alarm clearing procedure for UAM 0002 in *Unsolicited Alarm and Information Messages Reference* before proceeding with this procedure.

6. Verify that **HIPR2** cards are installed in card locations 9 and 10 in the shelf containing the E5-ENET card being added in this procedure. Enter this command.

```
rept-stat-gpl:gpl=hipr2
```

This is an example of the possible output.

```
rlghncxa03w 09-07-05 08:12:53 GMT 41.1.0
GPL      CARD      RUNNING      APPROVED      TRIAL
HIPR2    1109      132-002-000  132-002-000  132-003-000
HIPR2    1110      132-002-000  132-002-000  132-003-000
```

HIPR2	1209	132-002-000	132-002-000	132-003-000
HIPR2	1210	132-002-000	132-002-000	132-003-000
HIPR2	1309	132-002-000	132-002-000	132-003-000
HIPR2	1310	132-002-000	132-002-000	132-003-000
HIPR2	2109	132-002-000	132-002-000	132-003-000
HIPR2	2110	132-002-000	132-002-000	132-003-000
HIPR2	2209	132-002-000	132-002-000	132-003-000
HIPR2	2210	132-002-000	132-002-000	132-003-000
HIPR2	2309	132-002-000	132-002-000	132-003-000
HIPR2	2310	132-002-000	132-002-000	132-003-000

Command Completed

If **HIPR2** cards are installed in the shelf containing the **E5-ENET** card, continue the procedure with step 11.

If HIPR or HIPR2 cards are not installed on the shelf containing the E5-ENET card, go to *Installation Guide* and install the HIPR or HIPR2 cards. Once the HIPR or HIPR2 cards have been installed, continue the procedure with step 11.

7. Enter the `rtrv-stpopts` command to verify whether or not the MFC option is on.

This is an example of the possible output.

```
rlghncxa03w 11-10-17 16:02:05 GMT EAGLE5 44.0.0
STP OPTIONS
-----
MFC                                off
```

The `rtrv-stpopts` command output contains other fields that are not used by this procedure. To see all fields displayed by the `rtrv-stpopts` command, see the `rtrv-stpopts` command description in *Commands User's Guide*.

If the **MFC** option is off, perform the Configuring the MFC Option procedure in *Database Administration - System Management User's Guide* to turn on the MFC option.

If the MFC option is on or the Configuring the MFC Option procedure in *Database Administration - System Management User's Guide* was performed in this step, continue the procedure with step 8.

Note

The Fan feature must be purchased before you turn this feature on with the `chg-feat` command. If you are not sure if you have purchased the Fan feature, contact your Sales Representative or Account Representative.

8. Enter the `rtrv-feat` command to verify that the Fan feature is on.

If the Fan feature is on, shown in the `rtrv-feat` output, the **FAN** field should be set to on.

The `rtrv-feat` command output contains other fields that are not used by this procedure. To see all fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in *Commands User's Guide*.

If the Fan feature is on, continue the procedure with step 10.

If the Fan feature is off, continue the procedure with step 8.

9. Turn the Fan feature on by entering this command.

```
chg-feat:fan=on
```

Note

Once the Fan feature is turned on with the `chg-feat` command, it cannot be turned off.

When the `chg-feat` has successfully completed, this message appears.

```
rlghncxa03w 11-10-28 11:43:04 GMT EAGLE5 44.0.0
CHG-FEAT: MASP A - COMPLTD
```

10. The shelf containing the E5-ENET-B card that is being added in this procedure must have fans installed. Verify whether or not fans are installed on the shelf.

If the fans are installed, continue the procedure with step 11.

If the fans are not installed on the shelf containing the E5-ENET-B card, go to *Installation Guide* and install the fans. After the fans have been installed and tested, continue the procedure with step 11.

11. Add the card using the `ent-card` command. For this example, enter these commands.

```
ent-card:loc=1311:type=enetb:appl=ipsg
ent-card:loc=1313:type=slic:appl=ipsg
```

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
ENT-CARD: MASP A - COMPLTD
```

12. Verify the changes using the `rtrv-card` command with the card location specified in step 11. For this example, enter these commands.

```
rtrv-card:loc=1311
```

This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CARD   TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1311   ENETB       IPSEG
```

```
rtrv-card:loc=1313
```

This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
```

CARD	TYPE	APPL	LSET NAME	LINK SLC	LSET NAME	LINK SLC
1313	SLIC	IPSG				

- Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active **Maintenance and Administration Subsystem Processor (MASP)** appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Configuring DEIR on SLIC

This procedure configures the EIR S13/S13' Interface Support (DEIR) feature on the SLIC card to provide network redundancy. Perform step 5 to step 8 to configure the DEIR connection.

① Note

From release 47.1, existing customers will have Port A and/or D configured, which was earlier used for RTDB connectivity. Now, these ports will not be used as no RTDB data is downloaded on DEIR card. No manual changes are required to delete this entry as it will now be treated as dummy entry.

- Enable the DEIR feature with the `enable-ctrl-feat` command.

```
enable-ctrl-feat:partnum=893042401
```

- Turn on the DEIR feature with the `chg-ctrl-feat` command.

```
chg-ctrl-feat:partnum=893042401:status=on
```

- Provision the SLIC S13 card (DEIR64).

```
ent-card:loc=1101:type=dsm:appl=deir64
```

- Configure ports B and C of the SLIC S13 card.

```
chg-ip-
lnk:port=a:submask=255.255.255.0:mcast=yes:ipaddr=192.168.120.11:loc=1101:duplex=full:speed=100
```

```
chg-ip-
lnk:port=b:submask=255.255.255.0:mcast=no:ipaddr=10.248.13.11:loc=1101:duplex=full:speed=100
```

```
chg-ip-
lnk:port=c:submask=255.255.255.0:mcast=no:ipaddr=10.248.14.12:loc=1101:duplex=full:speed=100
```

```
chg-ip-
lnk:port=d:submask=255.255.255.0:mcast=yes:ipaddr=192.168.121.20:loc=1101:duplex=full:speed=100
```

- Enter the HOST information.

```

ent-ip-
host:host=hss:ipaddr=10.248.13.11:type=local:realm=abcdefg.com

ent-ip-
host:host=hss2:ipaddr=10.248.14.12:type=local:realm=abcdefg.com

ent-ip-
host:host=lmno:ipaddr=10.248.13.9:type=remote:realm=lmnopq.com

ent-ip-
host:host=lmno3:ipaddr=10.248.13.3:type=remote:realm=lmnopq.com

ent-ip-
host:host=lmno4:ipaddr=10.248.14.5:type=remote:realm=lmnopq.com

ent-ip-
host:host=lmno5:ipaddr=10.248.14.7:type=remote:realm=lmnopq.com

```

6. Enter the SCTP Association.

```

ent-
assoc:aname=assoc1:lhost=hss:alhost=hss2:lport=5555:rhost=lmno:rpor
t=5556

ent-
assoc:aname=assoc2:lhost=hss:alhost=hss2:lport=5557:rhost=lmno3:rpo
rt=5558

```

7. Enter the Diameter Connection.

```

ent-dconn: dcname=dcon1:aname=assoc1
ent-dconn: dcname=dcon2:aname=assoc2

```

8. Open the Diameter Connection.

```

chg-assoc: aname=assoc1:open=yes:rhost=lmno4:rhosttype=alternate
chg-assoc: aname=assoc2:open=yes:rhost=lmno5:rhosttype=alternate

```

ENUM Configuration

Perform the following steps for configuring the ENUM feature:

1. Enter the serial number.

```

ent-serial-num:serial=nt00001659
ent-serial-num:serial=nt00001659:lock=yes

```

2. Provision an ENUM card.

```

ent-card:loc=1105:type=dsm:appl=enum64:data=epap

```

3. Configure Ports A, B, C and D of an ENUM card.

```

chg-ip-
lnk:port=a:submask=255.255.255.0:mcast=yes:ipaddr=192.168.120.11:lo
c=1101:duplex=full:speed=100

chg-ip-
lnk:port=b:submask=255.255.255.0:mcast=yes:ipaddr=10.248.13.11:loc=
1101:duplex=full:speed=100

```

4. Set up the ENUM connections.

```

ent-ip-host:host=tekelec.com:ipaddr=192.168.120.133:type=local
ent-ip-host:host=abc.com:ipaddr=250.001.001.001:type=remote
chg-ip-card:loc=1105:domain=tekelec.com:defrouter=10.248.13.9
ent-ip-
conn:lport=1025:lhost=tekelec.com:lport=1026:prot=udp:cname=c1
chg-ip-conn:open=yes:cname=c1
alw-card:loc=1105

```

5. Enter profile entries in the ENUM Profile table (ENUMPROF).

```

ent-enum-
prof:prn=prof1:rtype=naptr:sparm=pstnsip:rrdomain=gw1.example.com
ent-enum-prof:prn=prof2:rtype=ns:rpdomain=gw2.example.com

```

6. Enter an Entity ID entry in the ENUM Profile Selection table (ENUMPRID).

```
ent-enum-profsel:entityid=1234:prn1=prof2,prn3=prof1
```

7. Enter a DN Block entry in the ENUM DN Block Profile table (ENUMDNBK).

```
ent-enum-profsel:sdn=9194841000:edn=914841999:prn1=prof2,prn3=prof1
```

8. Enter the IP address of a trusted ENUM client in the ENUM ACL table(ENUMACL).

```
ent-enum-acl:ipaddr=10.250.8.120
```

9. Allow the card to come into service.

```
alw-card:loc=1105
```

Example 4-1 Additional Configuration Commands

The ENUM Options commands (`chg-enumopts`, `rtrv-enumopts`) are used to change and display ENUM-specific data in the ENUM Options table (ENUMOPTS).

The `rept-stat-enum` command is used to display the overall status of the ENUM feature on the EAGLE.

Provisioning SIP Cards

Perform the following steps to provision the SIP-EPAP and SIP-ELAP cards:

1. Enter `ent-card:loc=<SM card location>;type=dsm:appl=siphc:data=epap` command to provision the SIP card for EPAP.
2. Enter `ent-card:loc=<SM card location>;type=dsm:appl=siphc:data=elap` command to provision the SIP card for ELAP.

Adding an IPSM Card

This procedure is used to add an IPSM (IP Services Module), used for the IP User Interface feature, to the database using the `ent-card` command. The IPSM provides eight IP based connections to the EAGLE's user interface through a telnet client. As of Release 46.5, the IPSM card and its functionality is replaced by the E5-ENET-B (p/n 870-2971-01) or SLIC (p/n 7094646) card. Any references to IPSM and the 870-2877-01 part number should be replaced by the 46.5 and greater card and part number.

The `ent-card` command uses the following parameters:

:loc – The location of the card being added to the database.

:type – The type of card being added to the database. For this procedure, the value of this parameter is `ipsm`.

:appl – The application software that is assigned to the card. For this procedure, the value of this parameter is `ips`.

The IP User Interface (Telnet) feature is not required to be enabled and activated to add an IPSM, but the IP User Interface (Telnet) feature must be enabled and activated so that the user can use a telnet client to establish a connection to the EAGLE. This can be verified with the `rtrv-ctrl-feat` command. To enable and activate the IP User Interface (Telnet) feature, see to the "Activating Controlled Features procedure" in EAGLE Database Administration System Management User's Guide.

The shelf, to which the card is to be added, must already be in the database. This can be verified with the `rtrv-shlf` command. If the shelf is not in the database, see "Adding a Shelf procedure" in EAGLE Database Administration System Management User's Guide.

If an IPSM is being provisioned in this procedure, HIPR2 cards must be installed in the card locations 9 and 10 in the shelf that the IPSM will occupy. If HIPR2 cards are not installed in the shelf that the IPSM will occupy, the IPSM will not function when the IPSM is inserted into the shelf. Enter the `rept-stat-gpl:gpl=hipr2` command to verify whether or not HIPR2 cards are installed in the same shelf as the IPSM being provisioned in this procedure.

If the Eagle OA&M IP Security Enhancement feature is enabled and activated, shown in the `rtrv-ctrl-feat` output, when an IPSM is installed in the EAGLE, UIM 1493, SSH Host Keys Regenerated, is displayed. UIM 1493 contains the public host key fingerprint, which is used to establish a secure connection with an SSH client. If a secure connection is to be made with the FTRA, the public host key fingerprint displayed in UIM 1493 must be added to the `hosts.xml` file in the FTRA. Record the public host key fingerprint information displayed in UIM 1493 if a secure connection to the FTRA is made. For more information about editing the `hosts.xml` file on the FTRA, see FTP Table Base Retrieval (FTRA) User's Guide. An IP link must be assigned to the IPSM. The IP links can be verified using the `rtrv-ip-lnk` command. IP links are configured using the `chg-ip-lnk` command.

After an IPSM is configured in the database and placed into service, eight telnet terminals are configured in the database with default values for the security and output group parameters. If you wish to change the security and output group parameter values, go to "Changing Terminal Characteristics procedure" in EAGLE Database Administration System Management User's Guide.

If a Class B IP address is specified for the `ipaddr` parameter of the `chg-ip-lnk` command, the subnet address that results from the `ipaddr` and `submask` parameter values cannot be the same as the subnet address that results from the `pvn` and `pvnmask`, `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command. The `pvn` and `pvnmask`, `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values can be verified by entering the `rtrv-netopts` command. Choose `ipaddr` and `submask` parameter values for the IP link to the IPSM whose resulting subnet address is not to be the same as the subnet address resulting from the `pvn` and `pvnmask`, `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command.

The IP address of the IPSM cannot be shown as the `ipaddr` value in the `rtrv-ip-lnk`, `rtrv-ftp-serv`, or `rtrv-seas-config` outputs, or the `bpipaddr` value in the `rtrv-ip-card` output.

The examples in this procedure are used to add an IPSM in card location 2107.

1. Display the cards in the database using the `rtrv-card` command.

This is an example of the possible output.

```
rlghncxa03w 07-13-13 09:12:36 GMT EAGLE5 45.0.0
CARD   TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1101   DSM        VSCCP
1102   TSM        GLS
1114   E5TDM-A
1116   E5TDM-B
1201   LIMDS0     SS7ANSI   sp2            A    0    sp1            B    0
1202   LIMDS0     SS7ANSI   sp2            A    1    nsp3           B    0
1203   LIMDS0     SS7ANSI   sp3            A    0
1204   LIMDS0     SS7ANSI   sp3            A    1
1205   LIMDS0     SS7ANSI   itu1           A    0
1206   LIMDS0     SS7ANSI   nsp3           A    1    nsp4           B    0
1212   DSM        VSCCP
1214   TSM        GLS
1301   LIMATM     ATMANSI   lsnatm1       A    0
1303   STC        EROUTE
1308   LIMDS0     SS7ANSI   sp6            A    0    sp7            B    0
1311   LIMDS0     SS7ANSI   sp2            A    2    sp1            B    1
           sp7            A1   1    sp3            B1   2
1315   LIMDS0     SS7ANSI   sp7            A    2    sp5            B    0
1318   LIMATM     ATMANSI   lsnatm1       A    1
2101   STC        EROUTE
2103   STC        EROUTE
2105   STC        EROUTE
```

The cards should be distributed throughout the EAGLE for proper power distribution. Refer to Installation Guide for the shelf power distribution.

Note

- The EAGLE can contain a maximum of 3 IPSMs. If the `rtv-card` output shows that there are three IPSMs in the EAGLE, this procedure cannot be performed.
- If the card being added in this procedure is not an IPSM card, continue the procedure with step 3.

2. Verify that HIPR2 cards are installed in card locations 9 and 10 in the shelf that will contain the IPSM card being added in this procedure. Enter the command `rept-stat-gpl:gpl=hipr2`.

This is an example of the possible output.

```
rlghncxa03w 09-07-01 11:40:26 GMT EAGLE5 41.1.0
GPL      CARD      RUNNING      APPROVED      TRIAL
HIPR2    1109      126-002-000  126-002-000  126-003-000
HIPR2    1110      126-002-000  126-002-000  126-003-000
HIPR2    1209      126-002-000  126-002-000  126-003-000
HIPR2    1210      126-002-000  126-002-000  126-003-000
HIPR2    1309      126-002-000  126-002-000  126-003-000
HIPR2    1310      126-002-000  126-002-000  126-003-000
HIPR2    2109      126-002-000  126-002-000  126-003-000
```

HIPR2	2110	126-002-000	126-002-000	126-003-000
Command Completed				

If HIPR2 cards are installed in the shelf that will contain the IPSM card, continue the procedure with step 3. If HIPR2 cards are not installed on the shelf that will contain the IPSM card, refer to Installation Guide to install the HIPR2 cards. Once the HIPR2 cards have been installed, continue the procedure with step 3.

3. Install the IPSM into the proper card location.

If the OA&M IP Security Enhancements feature is enabled and activated, UIM 1493, SSH Host Keys Regenerated, is displayed when the IPSM is installed into the card location. UIM 1493 contains the public host key fingerprint which is used to establish a secure connection with an SSH client. If the secure connection is to be made with the FTRA, the public host key fingerprint displayed in UIM 1493 must be added to the `hosts.xml` file in the FTRA. Record the public host key fingerprint information displayed in UIM 1493 if a secure connection to the FTRA will be made. For more information about editing the `hosts.xml` file on FTRA, see *FTP Table Base Retrieval (FTRA) User's Guide*.

4. Verify that the EAGLE has a fan unit and the fan unit is on. If the fan unit is not on, use the `chg-feat:fan=on` command to turn on the fan.

5. Add the IPSM using the `ent-card` command.

For this example, enter this command.

```
ent-card:loc=2107:type=e5ipsm:appl=ips
```

When this command has successfully completed, these messages should appear.

```
rlghncxa03w 06-10-01 09:12:36 GMT EAGLE5 36.0.0
Telnet auto-provisioning activated, 8 terminals are being added:
Telnet terminal 17 Added at location 2107.
Telnet terminal 18 Added at location 2107.
Telnet terminal 19 Added at location 2107.
Telnet terminal 20 Added at location 2107.
Telnet terminal 21 Added at location 2107.
Telnet terminal 22 Added at location 2107.
Telnet terminal 23 Added at location 2107.
Telnet terminal 24 Added at location 2107.
```

```
ENT-CARD: MASP A - COMPLTD
```

6. Verify the changes using the `rtrv-card` command with the card location specified in step 5.

For this example, enter this command.

```
rtrv-card:loc=2107
```

This is an example of the possible output.

```
rlghncxa03w 06-10-01 09:12:36 GMT EAGLE5 36.0.0 CARD TYPE APPL LSET
NAME LINK SLC LSET NAME LINK SLC 2107 IPSM IPS
```

7. Verify that the terminals shown as added in step 5 have been added by entering the `rtrv-trm` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-01 16:02:08 GMT EAGLE5 39.0.0
```

TRM	TYPE	COMM	FC	TMOUT	MXINV	DURAL
1	VT320	9600-7-E-1	SW	30	5	99:59:59
2	KSR	9600-7-E-1	HW	30	5	INDEF
3	PRINTER	4800-7-E-1	HW	30	0	00:00:00
4	VT320	2400-7-E-1	BOTH	30	5	00:30:00
5	VT320	9600-7-O-1	NONE	30	5	00:00:30
6	VT320	9600-7-E-2	SW	30	9	INDEF
7	PRINTER	9600-7-N-2	HW	30	5	00:30:00
8	KSR	19200-7-E-2	BOTH	30	5	00:30:00
9	VT320	9600-7-E-1	SW	30	7	00:30:00
10	VT320	9600-7-E-1	HW	30	5	00:30:00
11	VT320	4800-7-E-1	HW	30	5	00:30:00
12	PRINTER	9600-7-E-1	HW	30	4	00:30:00
13	VT320	9600-7-O-1	NONE	30	5	00:30:00
14	VT320	9600-7-E-2	SW	30	8	00:30:00
15	VT320	9600-7-N-2	HW	30	5	00:30:00
16	VT320	9600-7-E-2	BOTH	30	3	00:30:00

TRM	TYPE	LOC	TMOUT	MXINV	DURAL	SECURE
17	TELNET	2107	60	5	00:30:00	
18	TELNET	2107	60	5	00:30:00	
19	TELNET	2107	60	5	00:30:00	
20	TELNET	2107	60	5	00:30:00	
21	TELNET	2107	60	5	00:30:00	
22	TELNET	2107	60	5	00:30:00	
24	TELNET	2107	60	5	00:30:00	

TRM	LOGINTMR (sec)	LOGOUTTMR (sec)	PNGTIMEINT (msec)	PNGFAILCNT
17	none	none	none	1
18	none	none	none	1
19	none	none	none	1
20	none	none	none	1
21	none	none	none	1
22	none	none	none	1
23	none	none	none	1
24	none	none	none	1

TRM	TRAF	LINK	SA	SYS	PU	DB	UIMRD
1	NO	YES	NO	YES	NO	YES	YES
2	NO	NO	NO	NO	NO	NO	NO
3	YES	YES	YES	NO	YES	YES	YES
4	YES	NO	NO	NO	NO	NO	NO
5	NO	YES	NO	NO	NO	NO	YES
6	NO	NO	YES	NO	NO	NO	NO
7	YES	YES	YES	YES	YES	YES	YES
8	NO	NO	NO	NO	YES	NO	YES
9	NO	YES	NO	NO	NO	YES	NO
10	NO	NO	NO	NO	NO	NO	YES
11	YES	YES	YES	YES	YES	YES	YES
12	YES	YES	YES	YES	YES	YES	YES
13	NO	YES	NO	NO	NO	NO	YES
14	NO	NO	YES	NO	NO	NO	NO

15	YES	YES	YES	NO	YES	YES	YES
16	NO	NO	NO	NO	YES	NO	YES
17	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO
22	NO	NO	NO	NO	NO	NO	NO
23	NO	NO	NO	NO	NO	NO	NO
24	NO	NO	NO	NO	NO	NO	NO

	APP	APP										
TRM	SERV	SS	CARD	CLK	DBG	GTT	GWS	MEAS	MON	MPS	SEAS	
1	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	
2	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	
3	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	
4	YES	YES	YES	YES	YES	NO	YES	YES	YES	YES	NO	
5	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	
6	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	
7	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	
8	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	
9	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	
10	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	
11	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
12	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
13	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
14	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
15	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
16	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
17	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
18	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
19	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
20	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
21	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
22	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
23	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
24	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	

To change the output parameter values or the `logintmr`, `logouttmr`, `pngfailcnt`, or the `pngtimeint` parameter values for the telnet terminals added in this procedure, perform the [#unique_28](#) procedure.

After this step has been performed, continue the procedure by performing one of these steps.

- If a Class A or C **IP address** will be specified for the `ipaddr` parameter in step 10, continue the procedure with step 9.
 - If a Class B **IP address** will be specified for the `ipaddr` parameter in step 10, continue the procedure with step 8.
8. The subnet address that results from the `ipaddr` and `submask` parameter values of the `chg-ip-lnk` command cannot be the same as the subnet address that results from the `pvn` and `pvnmask`, `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command. Display the `pvn`, `pvnmask`, `fcna`, `fcnamask`, `fcnb`, and `fcnbmask` parameter values of the `chg-netopts` command by entering the `rtrv-netopts` command. If error message E3967 Cmd Rej: E5IS must be on is displayed after the

`rtrv-netopts` command is run, the `pvn`, `pvnmask`, `fcna`, `fcnamask`, `fcnb`, and `fcnbmaskpvn` and `pvnmask` parameters are not configured.

This is an example of the possible output if the E5IS feature is on.

```
rlghncxa03w 09-02-28 21:17:37 GMT EAGLE5 40.1.0NETWORK
OPTIONS-----PVN          =
      128.20.30.40PVNMASK    = 255.255.192.0FCNA          =
      170.120.50.0FCNAMASK   = 255.255.240.0FCNB          =
      170.121.50.0FCNBMASK   = 255.255.254.0
```

Choose `ipaddr` and `submask` parameter values for the IP link to the IPSM whose resulting subnet address is not to be the same as the subnet address resulting from the `pvn` and `pvnmask`, `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command. Continue the procedure with step 9.

9. Display the IP link data assigned to the IPSM using the `rtrv-ip-lnk` command with the IPSM's location and the `port=a` parameter.

For this example, enter this command.

```
rtrv-ip-lnk:loc=2107:port=a
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-01 21:20:37 GMT EAGLE5 36.0.0LOC   PORT IPADDR
SUBMASK
      DUPLEX  SPEED  MACTYPE  AUTO
      MCAST2107  A
      -----  -----  HALF
      10      DIX      NO      NO
```

10. Assign an IP link to the IPSM using the `chg-ip-lnk` command with these parameters: `loc`, `port=a`, `ipaddr`, `submask`, `speed=100`, `duplex=full`.

For this example, enter this command.

```
chg-ip-
lnk:loc=2107:port=a:ipaddr=150.1.1.1:submask=255.255.255.0:speed=100:duplex
=full
```

Note

If either the `ipaddr` or `submask` parameters are specified, then both parameters must be specified, unless the `ipaddr=0.0.0.0` parameter is specified, then the `submask` parameter is not required. The `ipaddr=0.0.0.0` parameter disables the IP link.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-01 21:20:37 GMT EAGLE5 36.0.0CHG-IP-LNK:   MASP A -
COMPLTD
```

11. Verify the changes made in 10 using the `rtrv-ip-lnk` command and specifying the card location and port values used in 10.

For this example, enter this command.

```
rtrv-ip-lnk:loc=2107:port=a
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-01 21:20:37 GMT EAGLE5 36.0.0LOC   PORT IPADDR
SUBMASK
          DUPLEX SPEED MACTYPE AUTO MCAST2107  A
          150.1.1.1      255.255.255.0  FULL   100   DIX
          NO    NO
```

12. Display the current IP host information in the database by entering the `rtrv-ip-host` command with the IP address of the IP link shown in 11.

For this example, enter this command.

```
rtrv-ip-host:ipaddr=150.1.1.1
```

No IP address and IP host entry is displayed, as shown in the following example.

```
rlghncxa03w 07-13-13 09:12:36 GMT EAGLE5 45.0.0
```

```
No matching entries found
```

```
IP Host table is (2 of 4096) <1% full
```

13. Assign an IP host to the IPSM using the `ent-ip-host` command.

For this example, enter this command.

```
ent-ip-host:host=ip.nc.tekelec.com:ipaddr=150.1.1.1
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-01 21:18:37 GMT EAGLE5 36.0.0
ENT-IP-HOST: MASP A - COMPLTD
```

14. Display the IP card attributes of the IPSM using the `rtrv-ip-card` command specifying the IPSM's location.

For this example, enter this command.

```
rtrv-ip-card:loc=2107
```

The following is an example of the possible output.

```
rlghncxa03w 08-06-01 21:20:37 GMT EAGLE5 39.0.0
LOC 2107
  SRCHORDR  SRVR
  DNSA      -----
  DNSB      -----
  DEFROUTER -----
  DOMAIN    -----
  SCTPCSUM  crc32c
```

```
BPIPADDR  -----
BPSUBMASK -----
```

15. Change the **IP** card attributes of the IPSM using the `chg-ip-card` command with these values: IPSM card location, local search order, domain, and the default router for the IPSM.

For this example, enter this command.

```
chg-ip-
card:loc=2107:srchordr=local:domain=ip.nc.tekelec.com:defrouter=150
.1.1.250
```

The following is an example of the possible output.

Note

The network portion of the default router's **IP** address (`defrouter`) must be the same as the network portion of the **IP** address specified in the `chg-ip-lnk` (step 7) and `ent-ip-host` (step 11) commands. The value of the last octet of the default router's **IP** address must be from 1 to 254.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-01 21:20:37 GMT EAGLE5 36.0.0
CHG-IP-CARD:  MASP A - COMPLTD
```

16. Verify the changes made in step 15 using the `rtrv-ip-card` command specifying the IPSM's location.

For this example, enter this command.

```
rtrv-ip-card:loc=2107
```

The following is an example of the possible output.

```
rlghncxa03w 08-06-01 21:20:37 GMT EAGLE5 39.0.0
LOC 2107
  SRCHORDR  LOCAL
  DNSA      -----
  DNSB      -----
  DEFROUTER 150.1.1.250
  DOMAIN    ip.nc.tekelec.com
  SCTPCSUM  crc32c
  BPIPADDR  -----
  BPSUBMASK -----
```

17. Verify that the **IP** User Interface (Telnet) feature is enabled and turned on, and if secure connections to the **EAGLE** are to be used, verify that the **OA&M IP** Security Enhancements feature is enabled and activated by entering the `rtrv-ctrl-feat` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-01 21:15:37 GMT EAGLE5 36.0.0
The following features have been permanently enabled:
Feature Name          Partnum    Status   Quantity
Telnet                893005701  off     ----
```

Note

The `rtrv-ctrl-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-ctrl-feat` command, see the `rtrv-ctrl-feat` command description in *Commands User's Guide*.

If the **IP User Interface (Telnet)** feature is enabled and turned on (`status = on`), continue the procedure with step 18.

If the **IP User Interface (Telnet)** feature is not enabled or turned on, perform the [#unique_29](#) procedure to enable and turn on the **IP User Interface (Telnet)** feature.

If **UIM 1493** was displayed when the IPSM was installed in step 3, the **OA&M IP Security Enhancements** feature is enabled and turned on. If the **OA&M IP Security Enhancements** feature is enabled and turned on (shown by the entry `EAGLE OA&M IP Security` in the `rtrv-ctrl-feat` output with the `status = on`), continue the procedure with step 18.

If the **OA&M IP Security Enhancements** feature is not enabled or turned on, and secure connections are to the **EAGLE** are to be used, perform the [#unique_30](#) procedure to enable and turn on the **OA&M IP Security Enhancements** feature.

18. Place the IPSM into service using the `rst-card` specifying the location of the IPSM.

For this example, enter this command.

```
rst-card:loc=2107
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-01 21:20:37 GMT EAGLE5 36.0.0
Card has been allowed.
```

If the **OA&M IP Security Enhancements** feature is enabled and activated, **UIM 1494, SSH Host Keys Loaded**, is displayed. **UIM 1494** contains the public host key fingerprint which is used to establish a secure connection with an **SSH** client. If the secure connection is to be made with the **FTRA**, the public host key fingerprint displayed in **UIM 1494** must be added to the `hosts.xml` file in the **FTRA**. If the public host key fingerprint was not recorded in step 3, record the public host key fingerprint information displayed in **UIM 1494** if a secure connection to the **FTRA** will be made. For more information about editing the `hosts.xml` file on the **FTRA**, see **FTP Table Base Retrieval (FTRA) User's Guide**.

19. Put the terminals that were created when the IPSM was added in step 5 into service with the `rst-trm` command. For this example, enter these commands.

```
rst-trm:trm=17
```

```
rst-trm:trm=18
```

```
rst-trm:trm=19
rst-trm:trm=20
rst-trm:trm=21
rst-trm:trm=22
rst-trm:trm=23
rst-trm:trm=24
```

This message should appear when each of these commands have successfully completed.

```
rlghncxa03w 07-05-01 15:08:45 GMT EAGLE5 37.0.0
Allow message sent to terminal
```

```
rlghncxa03w 07-05-01 15:08:45 GMT EAGLE5 37.0.0
Command Completed.
```

20. Back up the new changes using the `chg-db:action=backup:dest=fixedcommand`.

These messages should appear, the active **Maintenance and Administration Subsystem Processor (MASP)** appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Adding an IPSM Card as SFLOG

This procedure is used to add an IPSM (IP Services Module), used for the IP User Interface feature, to the database using the `ent-card` command. The IPSM provides eight IP based connections to the EAGLE's user interface through a telnet client. As of Release 46.5, the IPSM card and its functionality is replaced by the E5-ENET-B (p/n 870-2971-01) or SLIC (p/n 7094646) card. Any references to IPSM and the 870-2877-01 part number should be replaced by the 46.5 and greater card and part number.

The `ent-card` command uses the following parameters:

`:loc` – The location of the card being added to the database.

`:type` – The type of card being added to the database. For this procedure, the value of this parameter is `ipsm`.

`:appl` – The application software that is assigned to the card. For this procedure, the value of this parameter is `ips`.

`:sflog`

The IP User Interface (Telnet) feature is not required to be enabled and activated to add an IPSM, but the IP User Interface (Telnet) feature must be enabled and activated so that the user can use a telnet client to establish a connection to the EAGLE. This can be verified with the `rtrv-ctrl-feat` command. To enable and activate the IP User Interface (Telnet) feature, see to the "Activating Controlled Features procedure" in EAGLE Database Administration System Management User's Guide.

The shelf, to which the card is to be added, must already be in the database. This can be verified with the `rtrv-shlf` command. If the shelf is not in the database, see "Adding a Shelf procedure" in EAGLE Database Administration System Management User's Guide.

If an IPSM is being provisioned in this procedure, HIPR2 cards must be installed in the card locations 9 and 10 in the shelf that the IPSM will occupy. If HIPR2 cards are not installed in the shelf that the IPSM will occupy, the IPSM will not function when the IPSM is inserted into the shelf. Enter the `rept-stat-gpl:gpl=hipr2` command to verify whether or not HIPR2 cards are installed in the same shelf as the IPSM being provisioned in this procedure.

If the Eagle OA&M IP Security Enhancement feature is enabled and activated, shown in the `rtrv-ctrl-feat` output, when an IPSM is installed in the EAGLE, UIM 1493, SSH Host Keys Regenerated, is displayed. UIM 1493 contains the public host key fingerprint, which is used to establish a secure connection with an SSH client. If a secure connection is to be made with the FTRA, the public host key fingerprint displayed in UIM 1493 must be added to the `hosts.xml` file in the FTRA. Record the public host key fingerprint information displayed in UIM 1493 if a secure connection to the FTRA is made. For more information about editing the `hosts.xml` file on the FTRA, see FTP Table Base Retrieval (FTRA) User's Guide. An IP link must be assigned to the IPSM. The IP links can be verified using the `rtrv-ip-lnk` command. IP links are configured using the `chg-ip-lnk` command.

After an IPSM is configured in the database and placed into service, eight telnet terminals are configured in the database with default values for the security and output group parameters. If you wish to change the security and output group parameter values, go to "Changing Terminal Characteristics procedure" in EAGLE Database Administration System Management User's Guide.

If a Class B IP address is specified for the `ipaddr` parameter of the `chg-ip-lnk` command, the subnet address that results from the `ipaddr` and `submask` parameter values cannot be the same as the subnet address that results from the `pvn` and `pvnmask`, `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command. The `pvn` and `pvnmask`, `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values can be verified by entering the `rtrv-netopts` command. Choose `ipaddr` and `submask` parameter values for the IP link to the IPSM whose resulting subnet address is not to be the same as the subnet address resulting from the `pvn` and `pvnmask`, `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command.

The IP address of the IPSM cannot be shown as the `ipaddr` value in the `rtrv-ip-lnk`, `rtrv-ftp-serv`, or `rtrv-seas-config` outputs, or the `bpipaddr` value in the `rtrv-ip-card` output.

The examples in this procedure are used to add an IPSM in card location 2107.

1. Display the cards in the database using the `rtrv-card` command.

This is an example of the possible output.

```
rlghncxa03w 07-13-13 09:12:36 GMT EAGLE5 45.0.0
CARD   TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1101   DSM        VSCCP
1102   TSM        GLS
1114   E5TDM-A
1116   E5TDM-B
1201   LIMDS0     SS7ANSI   sp2             A      0      sp1             B      0
1202   LIMDS0     SS7ANSI   sp2             A      1      nsp3            B      0
1203   LIMDS0     SS7ANSI   sp3             A      0
1204   LIMDS0     SS7ANSI   sp3             A      1
```

1205	LIMDS0	SS7ANSI	itu1	A	0			
1206	LIMDS0	SS7ANSI	nsp3	A	1	nsp4	B	0
1212	DSM	VSCCP						
1214	TSM	GLS						
1301	LIMATM	ATMANSI	lsnatm1	A	0			
1303	STC	EROUTE						
1308	LIMDS0	SS7ANSI	sp6	A	0	sp7	B	0
1311	LIMDS0	SS7ANSI	sp2	A	2	sp1	B	1
			sp7	A1	1	sp3	B1	2
1315	LIMDS0	SS7ANSI	sp7	A	2	sp5	B	0
1318	LIMATM	ATMANSI	lsnatm1	A	1			
2101	STC	EROUTE						
2103	STC	EROUTE						
2105	STC	EROUTE						

The cards should be distributed throughout the EAGLE for proper power distribution. Refer to Installation Guide for the shelf power distribution.

Note

- The EAGLE can contain a maximum of 3 IPSMs. If the `rtv-card` output shows that there are three IPSMs in the EAGLE, this procedure cannot be performed.
- If the card being added in this procedure is not an IPSM card, continue the procedure with step 3.

2. Verify that HIPR2 cards are installed in card locations 9 and 10 in the shelf that will contain the IPSM card being added in this procedure. Enter the command `rept-stat-gpl:gpl=hipr2`.

This is an example of the possible output.

```
rlghncxa03w 09-07-01 11:40:26 GMT EAGLE5 41.1.0
GPL          CARD      RUNNING      APPROVED      TRIAL
HIPR2        1109      126-002-000    126-002-000    126-003-000
HIPR2        1110      126-002-000    126-002-000    126-003-000
HIPR2        1209      126-002-000    126-002-000    126-003-000
HIPR2        1210      126-002-000    126-002-000    126-003-000
HIPR2        1309      126-002-000    126-002-000    126-003-000
HIPR2        1310      126-002-000    126-002-000    126-003-000
HIPR2        2109      126-002-000    126-002-000    126-003-000
HIPR2        2110      126-002-000    126-002-000    126-003-000
Command Completed
```

If HIPR2 cards are installed in the shelf that will contain the IPSM card, continue the procedure with step 3. If HIPR2 cards are not installed on the shelf that will contain the IPSM card, refer to Installation Guide to install the HIPR2 cards. Once the HIPR2 cards have been installed, continue the procedure with step 3.

3. Install the IPSM into the proper card location.

If the OA&M IP Security Enhancements feature is enabled and activated, UIM 1493, SSH Host Keys Regenerated, is displayed when the IPSM is installed into the card location. UIM 1493 contains the public host key fingerprint which is used to establish a secure

connection with an SSH client. If the secure connection is to be made with the FTRA, the public host key fingerprint displayed in UIM 1493 must be added to the `hosts.xml` file in the FTRA. Record the public host key fingerprint information displayed in UIM 1493 if a secure connection to the FTRA will be made. For more information about editing the `hosts.xml` file on FTRA, see *FTP Table Base Retrieval (FTRA) User's Guide*.

4. Verify that the EAGLE has a fan unit and the fan unit is on. If the fan unit is not on, use the `chg-feat:fan=on` command to turn on the fan.
5. Add the IPSM using the `ent-card` command.

For this example, enter this command.

```
ent-card:loc=2107:type=e5ipsm:appl=ips:sflog=yes
```

When this command has successfully completed, these messages should appear.

```
rlghncxa03w 06-10-01 09:12:36 GMT EAGLE5 36.0.0
Telnet auto-provisioning activated, 8 terminals are being added:
Telnet terminal 17 Added at location 2107.
Telnet terminal 18 Added at location 2107.
Telnet terminal 19 Added at location 2107.
Telnet terminal 20 Added at location 2107.
Telnet terminal 21 Added at location 2107.
Telnet terminal 22 Added at location 2107.
Telnet terminal 23 Added at location 2107.
Telnet terminal 24 Added at location 2107.
```

```
ENT-CARD: MASP A - COMPLTD
```

6. Verify the changes using the `rtrv-card` command with the card location specified in step 5.

For this example, enter this command.

```
rtrv-card:loc=2107
```

This is an example of the possible output.

```
rlghncxa03w 06-10-01 09:12:36 GMT EAGLE5 36.0.0 CARD TYPE APPL LSET
NAME LINK SLC LSET NAME LINK SLC 2107 IPSM IPS
```

7. Verify that the terminals shown as added in step 5 have been added by entering the `rtrv-trm` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-01 16:02:08 GMT EAGLE5 39.0.0
TRM  TYPE      COMM          FC    TMOUT MXINV DURAL
1    VT320      9600-7-E-1  SW    30    5     99:59:59
2    KSR        9600-7-E-1  HW    30    5     INDEF
3    PRINTER    4800-7-E-1  HW    30    0     00:00:00
4    VT320      2400-7-E-1  BOTH  30    5     00:30:00
5    VT320      9600-7-O-1  NONE  30    5     00:00:30
6    VT320      9600-7-E-2  SW    30    9     INDEF
7    PRINTER    9600-7-N-2  HW    30    5     00:30:00
8    KSR        19200-7-E-2 BOTH  30    5     00:30:00
9    VT320      9600-7-E-1  SW    30    7     00:30:00
10   VT320      9600-7-E-1  HW    30    5     00:30:00
11   VT320      4800-7-E-1  HW    30    5     00:30:00
```

12	PRINTER	9600-7-E-1	HW	30	4	00:30:00
13	VT320	9600-7-O-1	NONE	30	5	00:30:00
14	VT320	9600-7-E-2	SW	30	8	00:30:00
15	VT320	9600-7-N-2	HW	30	5	00:30:00
16	VT320	9600-7-E-2	BOTH	30	3	00:30:00

TRM	TYPE	LOC	TMOUT	MXINV	DURAL	SECURE
17	TELNET	2107	60	5	00:30:00	
18	TELNET	2107	60	5	00:30:00	
19	TELNET	2107	60	5	00:30:00	
20	TELNET	2107	60	5	00:30:00	
21	TELNET	2107	60	5	00:30:00	
22	TELNET	2107	60	5	00:30:00	
24	TELNET	2107	60	5	00:30:00	

TRM	LOGINTMR (sec)	LOGOUTTMR (sec)	PNGTIMEINT (msec)	PNGFAILCNT
17	none	none	none	1
18	none	none	none	1
19	none	none	none	1
20	none	none	none	1
21	none	none	none	1
22	none	none	none	1
23	none	none	none	1
24	none	none	none	1

TRM	TRAF	LINK	SA	SYS	PU	DB	UIMRD
1	NO	YES	NO	YES	NO	YES	YES
2	NO	NO	NO	NO	NO	NO	NO
3	YES	YES	YES	NO	YES	YES	YES
4	YES	NO	NO	NO	NO	NO	NO
5	NO	YES	NO	NO	NO	NO	YES
6	NO	NO	YES	NO	NO	NO	NO
7	YES	YES	YES	YES	YES	YES	YES
8	NO	NO	NO	NO	YES	NO	YES
9	NO	YES	NO	NO	NO	YES	NO
10	NO	NO	NO	NO	NO	NO	YES
11	YES	YES	YES	YES	YES	YES	YES
12	YES	YES	YES	YES	YES	YES	YES
13	NO	YES	NO	NO	NO	NO	YES
14	NO	NO	YES	NO	NO	NO	NO
15	YES	YES	YES	NO	YES	YES	YES
16	NO	NO	NO	NO	YES	NO	YES
17	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO
22	NO	NO	NO	NO	NO	NO	NO
23	NO	NO	NO	NO	NO	NO	NO
24	NO	NO	NO	NO	NO	NO	NO

TRM	SERV	SS	CARD	CLK	DBG	GTT	GWS	MEAS	MON	MPS	SEAS
1	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO
2	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO

3	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO
4	YES	YES	YES	YES	YES	NO	YES	YES	YES	YES	NO
5	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO
6	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO
7	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO
8	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
10	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
11	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
17	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
22	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
23	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
24	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO

To change the output parameter values or the `logintmr`, `logouttmr`, `pngfailcnt`, or the `pngtimeint` parameter values for the telnet terminals added in this procedure, perform the [#unique_28](#) procedure.

After this step has been performed, continue the procedure by performing one of these steps.

- If a Class A or C **IP address** will be specified for the `ipaddr` parameter in step 10, continue the procedure with step 9.
 - If a Class B **IP address** will be specified for the `ipaddr` parameter in step 10, continue the procedure with step 8.
8. The subnet address that results from the `ipaddr` and `submask` parameter values of the `chg-ip-lnk` command cannot be the same as the subnet address that results from the `pvn` and `pvnmask`, `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command. Display the `pvn`, `pvnmask`, `fcna`, `fcnamask`, `fcnb`, and `fcnbmask` parameter values of the `chg-netopts` command by entering the `rtrv-netopts` command. If error message E3967 Cmd Rej: E5IS must be on is displayed after the `rtrv-netopts` command is run, the `pvn`, `pvnmask`, `fcna`, `fcnamask`, `fcnb`, and `fcnbmask` parameters are not configured.

This is an example of the possible output if the E5IS feature is on.

```
rlghncxa03w 09-02-28 21:17:37 GMT EAGLE5 40.1.0NETWORK
OPTIONS-----PVN          =
      128.20.30.40PVNMASK    = 255.255.192.0FCNA          =
      170.120.50.0FCNAMASK   = 255.255.240.0FCNB          =
      170.121.50.0FCNBMASK   = 255.255.254.0
```

Choose `ipaddr` and `submask` parameter values for the IP link to the IPSM whose resulting subnet address is not to be the same as the subnet address resulting from the `pvn` and `pvnmask`, `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command. Continue the procedure with step 9.

9. Display the IP link data assigned to the IPSM using the `rtv-ip-lnk` command with the IPSM's location and the `port=a` parameter.

For this example, enter this command.

```
rtv-ip-lnk:loc=2107:port=a
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-01 21:20:37 GMT EAGLE5 36.0.0LOC   PORT IPADDR
SUBMASK
          DUPLEX  SPEED  MACTYPE AUTO
          MCAST2107  A
          -----
          10      DIX      NO      NO
                                HALF
```

10. Assign an IP link to the IPSM using the `chg-ip-lnk` command with these parameters: `loc`, `port=a`, `ipaddr`, `submask`, `speed=100`, `duplex=full`.

For this example, enter this command.

```
chg-ip-
lnk:loc=2107:port=a:ipaddr=150.1.1.1:submask=255.255.255.0:speed=100:duplex
=full
```

Note

If either the `ipaddr` or `submask` parameters are specified, then both parameters must be specified, unless the `ipaddr=0.0.0.0` parameter is specified, then the `submask` parameter is not required. The `ipaddr=0.0.0.0` parameter disables the IP link.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-01 21:20:37 GMT EAGLE5 36.0.0CHG-IP-LNK:   MASP A -
COMPLTD
```

11. Verify the changes made in 10 using the `rtv-ip-lnk` command and specifying the card location and port values used in 10.

For this example, enter this command.

```
rtv-ip-lnk:loc=2107:port=a
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-01 21:20:37 GMT EAGLE5 36.0.0LOC   PORT IPADDR
SUBMASK
          DUPLEX  SPEED  MACTYPE AUTO MCAST2107  A
          150.1.1.1      255.255.255.0  FULL   100   DIX
          NO      NO
```

12. Display the current IP host information in the database by entering the `rtrv-ip-host` command with the IP address of the IP link shown in 11.

For this example, enter this command.

```
rtrv-ip-host:ipaddr=150.1.1.1
```

No IP address and IP host entry is displayed, as shown in the following example.

```
rlghncxa03w 07-13-13 09:12:36 GMT EAGLE5 45.0.0
```

```
No matching entries found
```

```
IP Host table is (2 of 4096) <1% full
```

13. Assign an IP host to the IPSM using the `ent-ip-host` command.

For this example, enter this command.

```
ent-ip-host:host=ip.nc.tekelec.com:ipaddr=150.1.1.1
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-01 21:18:37 GMT EAGLE5 36.0.0
```

```
ENT-IP-HOST: MASP A - COMPLTD
```

14. Display the IP card attributes of the IPSM using the `rtrv-ip-card` command specifying the IPSM's location.

For this example, enter this command.

```
rtrv-ip-card:loc=2107
```

The following is an example of the possible output.

```
rlghncxa03w 08-06-01 21:20:37 GMT EAGLE5 39.0.0
```

```
LOC 2107
```

```
SRCHORDR  SRVR
DNSA      -----
DNSB      -----
DEFROUTER -----
DOMAIN    -----
SCTPCSUM  crc32c
BPIPADDR  -----
BPSUBMASK -----
```

15. Change the IP card attributes of the IPSM using the `chg-ip-card` command with these values: IPSM card location, local search order, domain, and the default router for the IPSM.

For this example, enter this command.

```
chg-ip-
card:loc=2107:srchordr=local:domain=ip.nc.tekelec.com:defrouter=150
.1.1.250
```

The following is an example of the possible output.

Note

The network portion of the default router's **IP** address (`defrouter`) must be the same as the network portion of the **IP** address specified in the `chg-ip-lnk` (step 10) and `ent-ip-host` (step 11) commands. The value of the last octet of the default router's **IP** address must be from 1 to 254.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-01 21:20:37 GMT EAGLE5 36.0.0
CHG-IP-CARD:   MASP A - COMPLTD
```

16. Verify the changes made in step 15 using the `rtrv-ip-card` command specifying the IPSM's location.

For this example, enter this command.

```
rtrv-ip-card:loc=2107
```

The following is an example of the possible output.

```
rlghncxa03w 08-06-01 21:20:37 GMT EAGLE5 39.0.0
LOC 2107
SRCHORDR  LOCAL
DNSA      -----
DNSB      -----
DEFROUTER 150.1.1.250
DOMAIN    ip.nc.tekelec.com
SCTPCSUM  crc32c
BPIPADDR  -----
BPSUBMASK -----
```

17. Verify that the **IP** User Interface (Telnet) feature is enabled and turned on, and if secure connections to the **EAGLE** are to be used, verify that the **OA&M IP Security Enhancements** feature is enabled and activated by entering the `rtrv-ctrl-feat` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-01 21:15:37 GMT EAGLE5 36.0.0
The following features have been permanently enabled:
Feature Name      Partnum    Status    Quantity
Telnet            893005701  off      ----
```

Note

The `rtrv-ctrl-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-ctrl-feat` command, see the `rtrv-ctrl-feat` command description in *Commands User's Guide*.

If the **IP** User Interface (Telnet) feature is enabled and turned on (`status = on`), continue the procedure with [#unique_32/unique_32_Connect_42_V673063](#).

If the **IP** User Interface (Telnet) feature is not enabled or turned on, perform the [#unique_29](#) procedure to enable and turn on the **IP** User Interface (Telnet) feature.

If **UIM** 1493 was displayed when the IPSM was installed in [#unique_32/unique_32_Connect_42_V672882](#), the OA&M **IP** Security Enhancements feature is enabled and turned on. If the OA&M **IP** Security Enhancements feature is enabled and turned on (shown by the entry `EAGLE OA&M IP Security` in the `rtrv-ctrl-feat` output with the `status = on`), continue the procedure with step 18.

If the **OA&M IP** Security Enhancements feature is not enabled or turned on, and secure connections are to the **EAGLE** are to be used, perform the [#unique_30](#) procedure to enable and turn on the OA&M **IP** Security Enhancements feature.

18. Place the IPSM into service using the `rst-card` specifying the location of the IPSM.

For this example, enter this command.

```
rst-card:loc=2107
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-01 21:20:37 GMT EAGLE5 36.0.0
Card has been allowed.
```

If the **OA&M IP** Security Enhancements feature is enabled and activated, **UIM** 1494, **SSH** Host Keys Loaded, is displayed. **UIM** 1494 contains the public host key fingerprint which is used to establish a secure connection with an **SSH** client. If the secure connection is to be made with the **FTRA**, the public host key fingerprint displayed in **UIM** 1494 must be added to the `hosts.xml` file in the **FTRA**. If the public host key fingerprint was not recorded in step 3, record the public host key fingerprint information displayed in **UIM** 1494 if a secure connection to the **FTRA** will be made. For more information about editing the `hosts.xml` file on the **FTRA**, see **FTP Table Base Retrieval (FTRA) User's Guide**.

19. Put the terminals that were created when the IPSM was added in step 5 into service with the `rst-trm` command. For this example, enter these commands.

```
rst-trm:trm=17
rst-trm:trm=18
rst-trm:trm=19
rst-trm:trm=20
rst-trm:trm=21
rst-trm:trm=22
rst-trm:trm=23
rst-trm:trm=24
```

This message should appear when each of these commands have successfully completed.

```
rlghncxa03w 07-05-01 15:08:45 GMT EAGLE5 37.0.0
Allow message sent to terminal

rlghncxa03w 07-05-01 15:08:45 GMT EAGLE5 37.0.0
Command Completed.
```

20. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

These messages should appear, the active **Maintenance and Administration Subsystem Processor (MASP)** appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Configuring a MCP Module

This procedure is used to add an Measurement Collection and Polling Module (MCPM), used for the Measurements Platform feature, to the database using the `ent-card` command. The **MCPM** provides an interface between the **EAGLE** and the customer's network. The Measurements Platform provides a dedicated processor for collecting and transferring measurements data to a customer supplied **FTP** server.

The `ent-card` command uses these parameters.

`:loc` – The location of the card being added to the database.

`:type` – The type of card being added to the database. For this procedure, the value of this parameter is `mcpm`.

`:appl` – The application software that is assigned to the card. For this procedure, the value of this parameter is `mcp`.

The Measurements Platform feature requires a minimum of two **MCPM** cards (part number 870-2372-03 or later) with at least 2 **GB** of memory per card or two SLIC cards with at least 4 GB of memory per card. The MCPM and SLIC cards can also be used in mixed mode.

The Measurements Platform feature must be on in order to add a **MCPM** to the database. This can be verified with the `rtrv-feat` command. To enable the Measurements Platform feature, the `measplat=on` parameter must be specified with the `chg-feat` command.

Note

The Measurements Platform feature must be purchased before turning on the feature. If you are not sure whether you have purchased the Measurements Platform feature, contact your Oracle Sales Representative or Account Representative.

The shelf to which the card is to be added, must already be in the database. This can be verified with the `rtrv-shlf` command. If the shelf is not in the database, see the [#unique_34](#) procedure.

After all the required **MCPMs** have been configured in the database, go to the [#unique_35](#) procedure and configure the **IP** links for these **MCPMs** and enable the **Measurement Platform** feature, if necessary.

The examples in this procedure are used to add an **MCPM** in card location 2107.

1. Verify that the **MCPM** (part number 870-2372-03 or later) being added to the database has been physically installed into the proper location.
2. Connect the Ethernet cables from the customer's network to Port A of the **MCPM**.

3. Display the cards in the database using the `rtrv-card` command.

This is an example of the possible output.

```
rlghncxa03w 09-05-01 09:12:36 GMT EAGL SLIC 41.0.0
CARD   TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1101   DSM        VSCCP
1102   TSM        GLS
1113   GSPM       OAM
1114   TDM-A
1115   GSPM       OAM
1116   TDM-B
1117   MDAL
1201   LIMDS0     SS7ANSI   sp2            A    0    sp1            B    0
1202   LIMDS0     SS7ANSI   sp2            A    1    nsp3           B    0
1203   LIMDS0     SS7ANSI   sp3            A    0
1204   LIMDS0     SS7ANSI   sp3            A    1
1205   LIMDS0     SS7ANSI   itu1           A    0
1206   LIMDS0     SS7ANSI   nsp3           A    1    nsp4           B    0
1212   DSM        VSCCP
1214   TSM        GLS
1301   LIMATM     ATMANSI   lsnatm1       A    0
1303   STC        EROUTE
1308   LIMDS0     SS7ANSI   sp6            A    0    sp7            B    0
1311   LIMDS0     SS7ANSI   sp2            A    2    sp1            B    1
           sp7            A1   1    sp3            B1   2
1315   LIMDS0     SS7ANSI   sp7            A    2    sp5            B    0
1318   LIMATM     ATMANSI   lsnatm1       A    1
2101   STC        EROUTE
2103   STC        EROUTE
2105   STC        EROUTE
```

The cards should be distributed throughout the **EAGLE** for proper power distribution. Refer to *Installation Guide* for the shelf power distribution.

Note

If the `rtrv-card` output from step 3 shows an **MCPM** card, shown by the entries MCPM in the TYPE column and MCP in the APPL column, skip steps 4 and 5, and go to step 6.

4. Verify that the Measurements Platform feature is enabled by entering the `rtrv-feat` command.

If the Measurements Platform feature is on, the MEASPLAT field should be set to `on`. For this example, the Measurements Platform feature is off.

Note

The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in *Commands User's Guide*.

Note

If the Measurements Platform feature is on, skip step 5, and go to step 6.

5. Turn the Measurements Platform feature on by entering this command.

```
chg-feat:measplat=on
```

Note

Once the Measurements Platform feature is turned on with the `chg-feat` command, it cannot be turned off.
The Measurements Platform feature must be purchased before turning on the feature. If you are not sure whether you have purchased the Measurements Platform feature, contact your Oracle Sales Representative or Account Representative.

When the `chg-feat` has successfully completed, this message should appear.

```
rlghncxa03w 06-10-01 21:18:37 GMT EAGL SLIC 36.0.0
CHG-FEAT: MASP A - COMPLTD
```

6. Verify that the EAGLE has a fan unit and the fan unit is on. If the fan unit is not on, use the `chg-feat:fan=on` command to turn on the fan.
7. Add the **MCPM** using the `ent-card` command.

For this example, enter this command.

```
ent-card:loc=2107:type=mcpm:appl=mcp
```

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 06-10-01 09:12:36 GMT EAGL SLIC 36.0.0
ENT-CARD: MASP A - COMPLTD
```

8. Verify the changes using the `rtrv-card` command with the card location specified in step 6.

For this example, enter this command.

```
rtrv-card:loc=2107
```

This is an example of the possible output.

```
rlghncxa03w 06-10-01 09:12:36 GMT EAGL SLIC 36.0.0
CARD   TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
2107   MCPM        MCP
```

9. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

These messages should appear, the active **Maintenance and Administration Subsystem Processor (MASP)** appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.  
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.  
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.  
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

10. Go to the [#unique_35](#) procedure and configure the **IP** links for these **MCPMs** and enable the **Measurement Platform** feature, if necessary.


 **Note**

Before performing this procedure, make sure you have purchased the Measurements Platform feature. If you are not sure whether you have purchased the Measurements Platform feature, contact your Oracle Sales Representative or Account Representative.

Figure 4-5 Adding a Measurement Collection and Polling Module (MCPM)

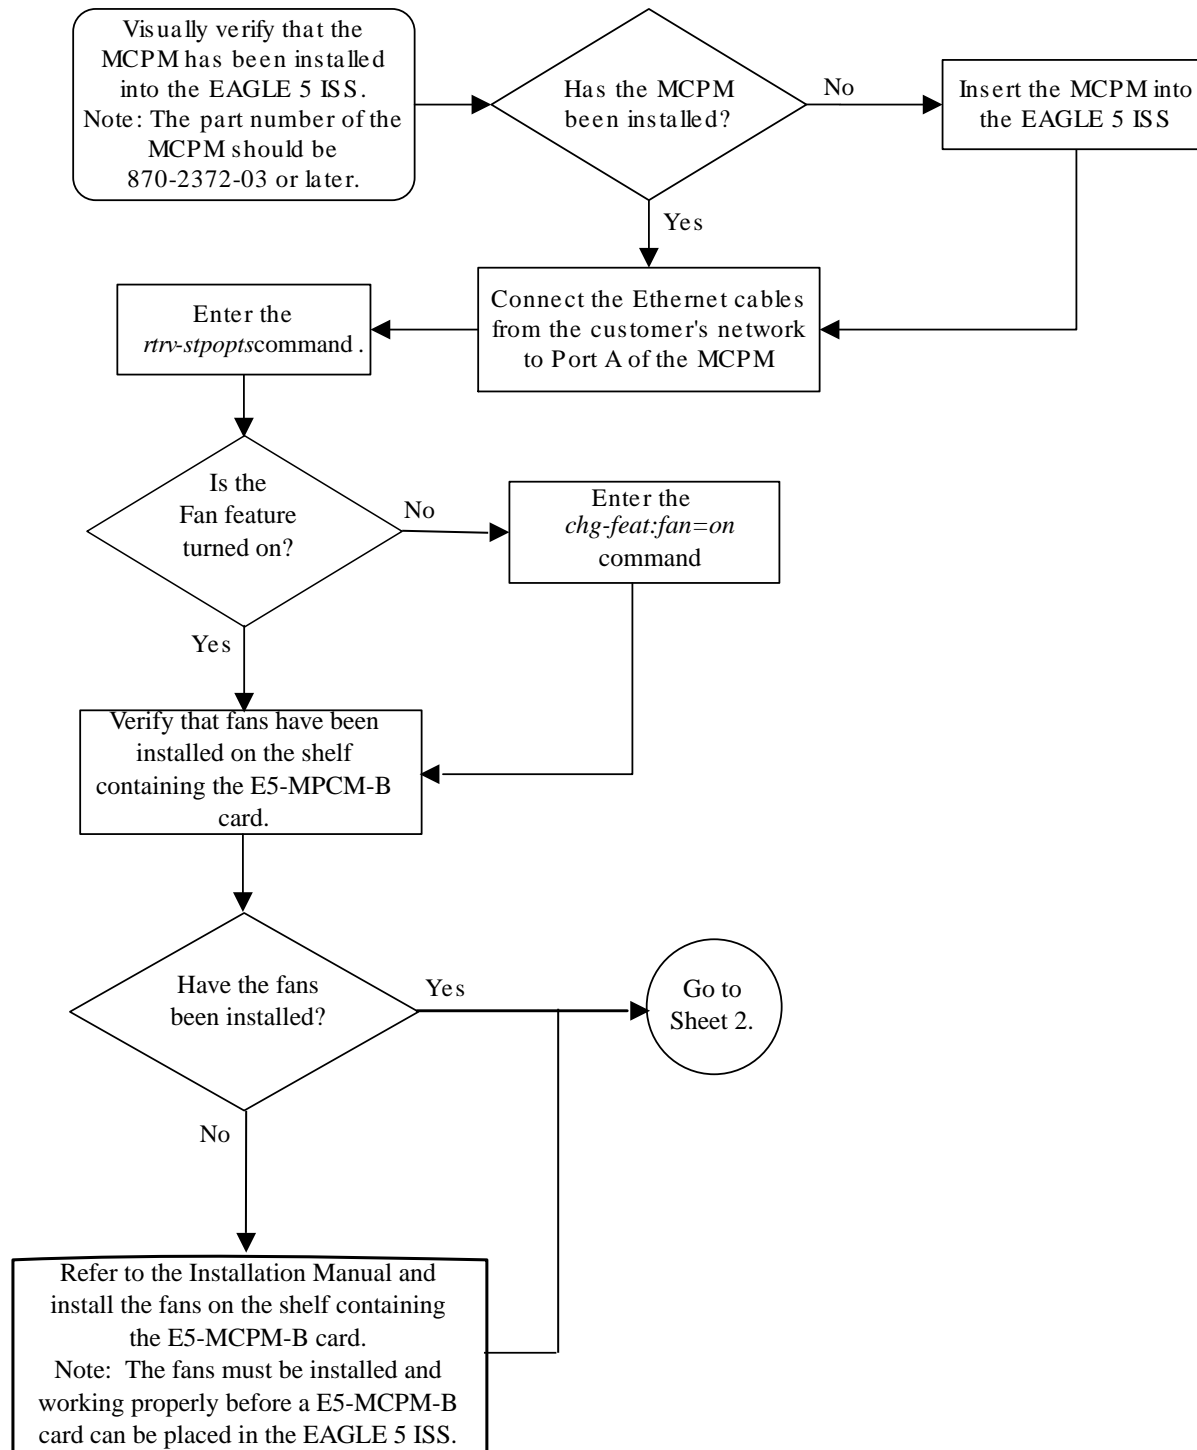

Sheet 1 of 2

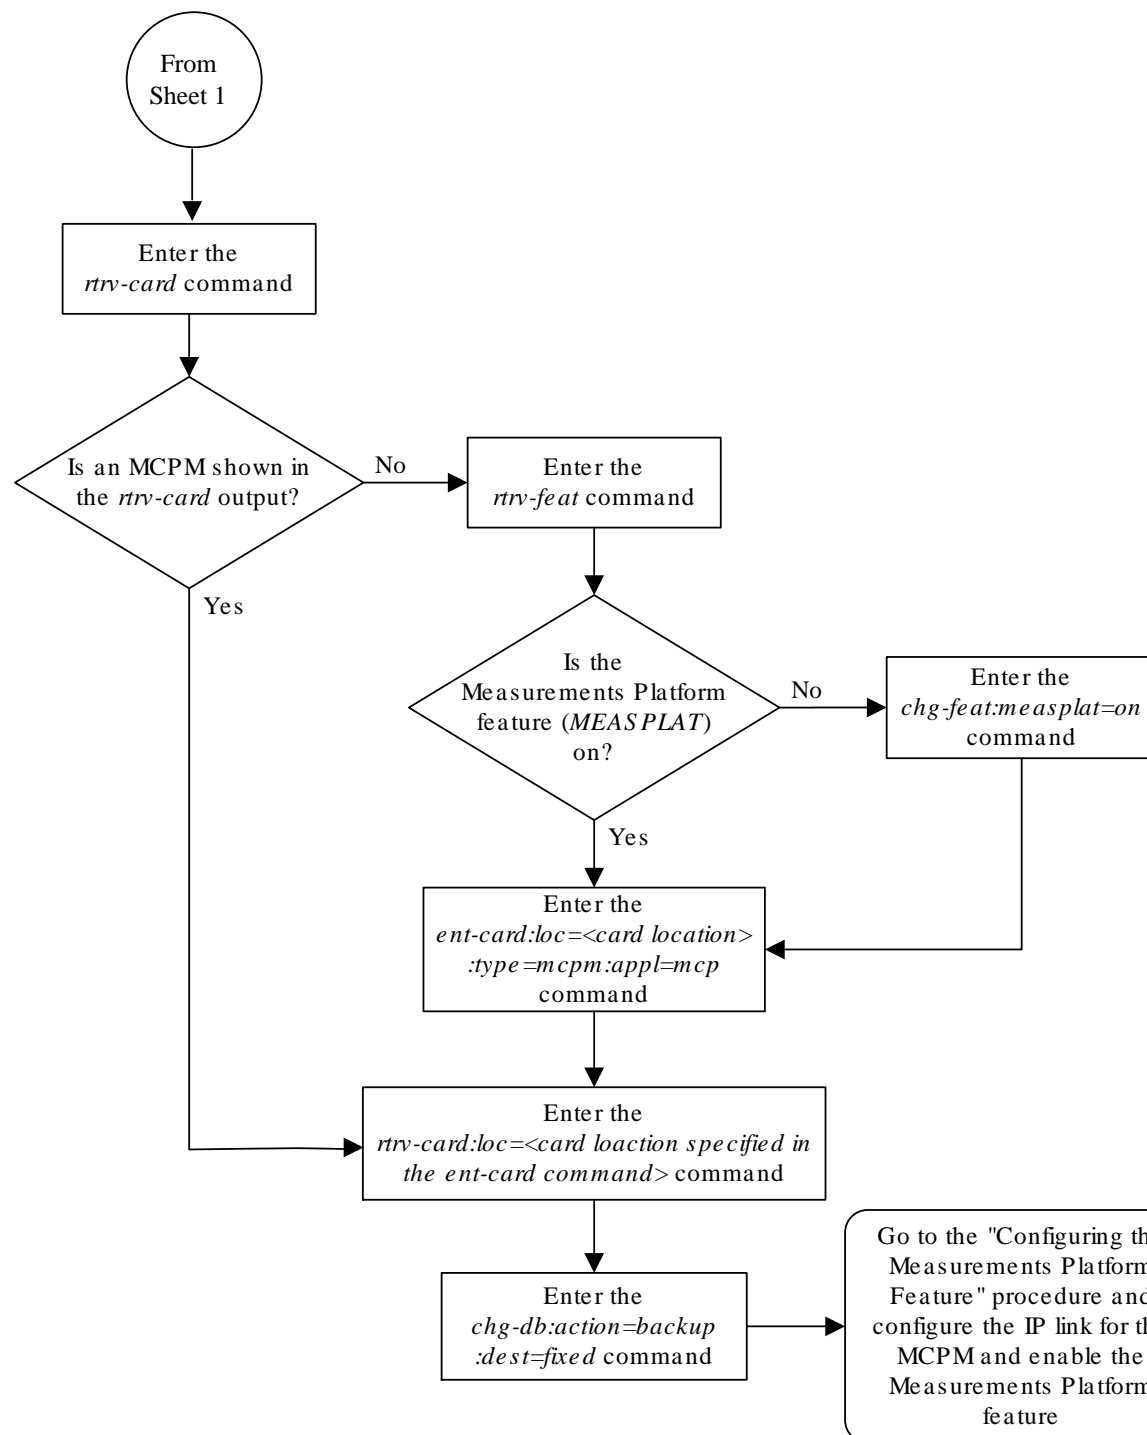

Configuring EROUTE/STC Card

This procedure is used to add an **STC** (Signaling Transport **Card**) to the database using the `ent-card` command. The **STC** provides an interface between the **EAGLE** and the **ESP** (**EAGLE** Integrated Monitoring Support feature). The **STC** allows the **ESP** subsystem to monitor the **EAGLE**'s signaling links without additional intrusive cabling.

The `ent-card` command uses these parameters.

`:loc` – The location of the card being added to the database.

`:type` – The type of card being added to the database. For this procedure, the value of this parameter is `stc`.

`:appl` – The application software that is assigned to the card. For this procedure, the value of this parameter is `eroute`.

`:force` – Allow the **LIM** to be added to the database even if there are not enough service modules to support the number of **LIMs** in the **EAGLE**. This parameter is obsolete and is no longer used.

The **STC** can be either a single-slot **STC**, a dual-slot **STC**, or an **SLIC -STC** card as shown in [#unique_37/unique_37_Connect_42_V2193109](#).

Table 4-11 STC Part Numbers

Card Type	Card Name (as shown on the card Label)	Part Number
SLIC -STC	SLIC -ENET	870-2212-02
	SLIC -ENET-B	870-2971-XX

The dual-slot **STC** can be inserted only in card slots 01, 03, 05, 07, 11, 13, 15, and 17 of the extension shelf. The dual-slot **STC** can be inserted in the control shelf, but only in slots 01, 03, 05, 07, and 11. The dual-slot **STC** occupies two card slots, so the even numbered card slot must be empty and not provisioned in the database, as shown in the following table. The dual-slot **STC** is connected to the network through the odd numbered card slot connector.

Table 4-12 Dual-Slot STC Locations

Location of the STC	Empty Card Location	Location of the STC	Empty Card Location
Slot 01	Slot 02	Slot 11	Slot 12
Slot 03	Slot 04	Slot 13	Slot 14
Slot 05	Slot 06	Slot 15	Slot 16
Slot 07	Slot 08	Slot 17	Slot 18

The single-slot **STC** can be inserted into any card slot, except an even numbered card slot adjacent to a dual-slot card, shown in the above table, slots 9 and 10 in each shelf, and slots 1113 through 1118.

The shelf to which the card is to be added, must already be in the database. This can be verified with the `rtrv-shlf` command. If the shelf is not in the database, see the “Adding a **Shelf**” procedure in *Database Administration - System Management User's Guide*.

In order to enable the **EISCOPY** option, with the `chg-eisopts` command, and to comply with the $n+1$ **STC** configuration requirement, a minimum of two **STCs** must be provisioned in the database. A minimum of two **STCs** must be provisioned.

The number of **SS7** signaling links that can be monitored by an **STC** varies depending the following criteria:

- Whether the **STC** is a dual-slot **STC** or single-slot **STC**
- The type of signaling link (defined by the application running on the card the signaling link is assigned to)
- The amount of traffic and the size of the **MSUs** being handled by the **EAGLE**

Note

Perform the “Changing the High-Capacity Card Temperature Alarm Thresholds” procedure in *Database Administration -SS7 User's Guide* to verify the temperature threshold settings for the **SLIC -STC** card.

STC Provisioning

The following rules apply to provisioning STCs.

- A minimum of two STCs must be provisioned in the EAGLE.
- The maximum number of STCs that can be provisioned in the EAGLE is 32.
- Only single-slot STCs can be installed and provisioned in the EAGLE if IP signaling links are being monitored. Dual-slot STCs cannot be installed or provisioned.
- HIPR2 cards must be installed in the shelf that contains SLIC -STCs.
- For shelves containing HIPR2 cards in card slots 9 and 10, these rules apply to provisioning STCs.
 - STCs should be provisioned in the same shelf that contains the cards being monitored.
 - More than three STCs can be provisioned in the shelf depending on the number of empty cards slots the shelf has.
- To monitor signaling links on these cards, HIPR2 cards must be installed in slots 9 and 10 of the shelf that contains these cards.
 - SLIC -ENET cards that contain IP signaling links.
 - SLIC -E1T1 cards that contain E1 or T1 signaling links.
- If the SLIC -STC card is an SLIC -ENET-B card, the FAN feature must be turned on and fans must be installed on the shelf that contains the SLIC -ENET-B card. Enter the `rtrv-feat` command to verify whether or not the FAN feature is turned on. Perform the procedures in *Installation Guide* to install fans on the shelf that contains the SLIC -ENET-B card if fans must be installed. The MFC (message flow control) option must be on. Enter the `rtrv-stpopts` command to verify whether or not the MFC option is on. Perform the [#unique_38](#) procedure to turn the MFC option on, if required.

Note

Contact your Sales Representative or Account Representative to determine the number of **STCs** that must be provisioned in your **EAGLE**, and to determine where in the **EAGLE** these STC cards must be provisioned before performing this procedure.

The examples in this procedure are used to add an **STC** card in these card locations: 1303, 2101, and 2102.

1. Display the cards in the database using the `rtrv-card` command.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGL SLIC 46.0.0
CARD   TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1102   TSM         GLS
1113   SLIC -MCAP   OAMHC
1114   SLIC -TDM-A
1115   SLIC -MCAP   OAMHC
1116   SLIC -TDM-B
1117   SLIC -MDAL
1201   LIMDS0     SS7ANSI   sp2            A    0    sp1            B    0
1203   LIMDS0     SS7ANSI   sp3            A    0
1204   LIMDS0     SS7ANSI   sp3            A    1
1206   LIMDS0     SS7ANSI   nsp3           A    1    nsp4           B    1
1301   SLIC -SM4G   SCCPHC
1308   LIMDS0     SS7ANSI   sp6            A    1    sp7            B    0
1314   LIMDS0     SS7ANSI   sp7            A    1    sp5            B    1
```

The cards should be distributed throughout the **EAGLE** for proper power distribution. Refer to *Installation Guide* for the shelf power distribution.

2. Verify that the EAGLE Integrated Monitoring Support feature is on, by entering the `rtrv-feat` command. If the EAGLE 5 Integrated Monitoring Support feature is on, the `SLIC IS` field should be set to `on`.

Note

The `rtrv-feat` command output contains other fields that are not used by this procedure. To see all fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in *Commands User's Guide*.

Note

If the EAGLE Integrated Monitoring Support feature is not on, go to the [#unique_39](#) procedure and enable the **EAGLE** Integrated Monitoring Support feature.

If **HIPR2** cards are not required for provisioning **STC** cards, refer to [STC Provisioning](#) to determine if HIPR2 cards are required, continue the procedure with [#unique_37/unique_37_Connect_42_V2193266](#).

If **HIPR2** cards are required for provisioning **STC** cards, continue the procedure with the next step.

3. Verify that the **HIPR** cards are installed in card locations 9 and 10 in the shelf before adding the **STC** cards in this procedure. Enter this command.

```
rept-stat-gpl:gpl=hipr
```

```
rlghncxa03w 07-02-01 11:40:26 GMT EAGL SLIC 37.0.0
GPL          CARD          RUNNING          APPROVED          TRIAL
HIPR         1109          126-002-000          126-002-000          126-003-000
HIPR         1110          126-002-000          126-002-000          126-003-000
HIPR         1209          126-002-000          126-002-000          126-003-000
HIPR         1210          126-002-000          126-002-000          126-003-000
HIPR         1309          126-002-000          126-002-000          126-003-000
HIPR         1310          126-002-000          126-002-000          126-003-000
HIPR         2109          126-002-000          126-002-000          126-003-000
HIPR         2110          126-002-000          126-002-000          126-003-000
Command Completed
```

If **HIPR2** cards are installed in the shelf containing the **STC** cards, continue the procedure with [#unique_37/unique_37_Connect_42_V2193266](#), continue the procedure by performing one of these steps.

- If the card that is being added is an SLIC -ENET card, continue the procedure with [#unique_37/unique_37_Connect_42_V2193266](#).
- If the card that is being added is an SLIC -ENET-B card, continue the procedure with [#unique_37/unique_37_Connect_42_STEP_7A9BB6D621B742D5A95B6526A54ADF0C](#).

If **HIPR** cards are not installed in the shelf containing the **STC** cards, continue the procedure with [#unique_37/unique_37_Connect_42_V3129266](#).

4. Verify that the **HIPR2** cards are installed in card locations 9 and 10 in the shelf before adding the **STC** cards in this procedure. Enter this command.

```
rept-stat-gpl:gpl=hipr2
```

This is an example of the possible output.

```
rlghncxa03w 09-07-01 11:40:26 GMT EAGL SLIC 41.1.0
GPL          CARD          RUNNING          APPROVED          TRIAL
HIPR2        1109          126-002-000          126-002-000          126-003-000
HIPR2        1110          126-002-000          126-002-000          126-003-000
HIPR2        1209          126-002-000          126-002-000          126-003-000
HIPR2        1210          126-002-000          126-002-000          126-003-000
HIPR2        1309          126-002-000          126-002-000          126-003-000
HIPR2        1310          126-002-000          126-002-000          126-003-000
HIPR2        2109          126-002-000          126-002-000          126-003-000
HIPR2        2110          126-002-000          126-002-000          126-003-000
Command Completed
```

If **HIPR2** cards are installed at card locations 9 and 10 in the shelf containing the **STC** cards, continue the procedure with [#unique_37/unique_37_Connect_42_V2193266](#).

If HIPR2 cards are not installed in the shelf containing the STC cards, refer to *Installation Guide* to install the HIPR2 cards. Once the HIPR2 cards have been installed, continue the procedure with [#unique_37/unique_37_Connect_42_V2193266](#).

After the procedures in *Installation Guide* have been performed, or if HIPR2 cards are installed at the card locations 9 and 10 on the shelf where the SLIC -STC card is to be installed, continue the procedure by performing one of these steps.

- If the card that is being added is an SLIC -ENET card, continue the procedure with [#unique_37/unique_37_Connect_42_V2193266](#).
 - If the card that is being added is an SLIC -ENET-B card, continue the procedure with [#unique_37/unique_37_Connect_42_STEP_7A9BB6D621B742D5A95B6526A54ADF0C](#).
5. Verify whether or not the MFC option is on by entering the `rtrv-stpopts` command.
- This is an example of the possible output.

```
rlghncxa03w 11-10-17 16:02:05 GMT EAGL SLIC 44.0.0
STP OPTIONS
-----
MFC                                off
```

The `rtrv-stpopts` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-stpopts` command, see the `rtrv-stpopts` command description in *Commands User's Guide*.

If the **MFC** option is off, perform the [#unique_38](#) procedure to turn on the MFC option.

If the MFC option is on, or the [#unique_38](#) procedure was performed in this step, continue the procedure with [#unique_37/unique_37_Connect_42_STEP_BC23C27763164A92B7E467BCBEC62046](#).

6. Fans must be installed on the shelves that contain the SLIC -ENET-B cards. The Fan feature must be turned on. If the Fan feature is on, shown in the `rtrv-feat` output in [#unique_37/unique_37_Connect_42_V2193237](#), the `FAN` field should be set to `on`.

If the Fan feature is on, continue the procedure with [#unique_37/unique_37_Connect_42_STEP_A7969AD575694FF297E48C53F36582A9](#).

If the Fan feature is off, continue the procedure with [#unique_37/unique_37_Connect_42_STEP_8751C925C4AF468BBB1824E33B0BB26E](#).

7. Turn the Fan feature on by entering this command.

```
chg-feat:fan=on
```

Note

Once the Fan feature is turned on with the `chg-feat` command, it cannot be turned off.

The Fan feature must be purchased before you turn this feature on with the `chg-feat` command. If you are not sure if you have purchased the Fan feature, contact your Sales Representative or Account Representative.

When the `chg-feat` has successfully completed, this message appears.

```
rlghncxa03w 11-10-28 11:43:04 GMT EAGL SLIC 44.0.0
CHG-FEAT: MASP A - COMPLTD
```

8. The shelf containing the SLIC -ENET-B card that is being added in this procedure must have fans installed. Verify whether or not fans are installed on the shelf.

If the fans are installed, continue the procedure with [#unique 37/unique 37 Connect 42 V2193266](#).

If the fans are not installed on the shelf containing the SLIC -ENET-B card, go to Installation Guide and install the fans. After the fans have been installed and tested, continue the procedure with [#unique 37 #unique 37/unique 37 Connect 42 V2193266](#).

9. Add the STC card using the `ent-card` command. Refer to [STC Provisioning](#) for the rules for provisioning STC cards. A dual-slot STC card can be inserted only in an odd numbered slot and the adjacent even card slot must be empty, as shown in [#unique 37/unique 37 Connect 42 V2193124](#). A single-slot STC card can be inserted into any card slot except an even numbered card slot adjacent to a dual-slot card, slots 09 and 10 in each shelf, and slots 1113 through 1118. For this example, enter these commands.

```
ent-card:loc=1303:type=stc:appl=eroute
ent-card:loc=2101:type=stc:appl=eroute
ent-card:loc=2102:type=stc:appl=eroute
```

10. Verify the changes using the `rtrv-card` command with the card location specified in [#unique 37/unique 37 Connect 42 V2193125](#). For this example, enter these commands.

```
rtrv-card:loc=1303
```

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGL SLIC 36.0.0
CARD   TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1303   STC        EROUTE
```

```
rtrv-card:loc=2101
```

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGL SLIC 36.0.0
CARD   TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
2101   STC        EROUTE
```

```
rtrv-card:loc=2102
```

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGL SLIC 36.0.0
CARD   TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
2102   STC        EROUTE
```

11. Verify that the card to be entered has been physically installed into the card location specified in [#unique 37/unique 37 Connect 42 V2193124](#).

 **Caution**

If the version of the flash GPLs on the STC does not match the flash GPL versions in the database when the STC is inserted into the card slot, **UAM 0002** is generated indicating that these GPL versions do not match. If UAM 0002 has been generated, perform the alarm clearing procedure for UAM 0002 in *Unsolicited Alarm and Information Messages Reference* manual before proceeding with this procedure.

12. Put the STC card added in [#unique_37](#) into service using the `alw-card` command specifying the card location specified in [#unique_37/unique_37 Connect 42 V2193125](#). For this example, enter these commands.

```
alw-card:loc=1303
```

```
alw-card:loc=2101
```

```
alw-card:loc=2102
```


When the `alw-card` command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGL SLIC 36.0.0  
Card has been allowed.
```


13. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active **Maintenance and Administration Subsystem Processor (MASP)** appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.  
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.  
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.  
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```


Figure 4-6 Adding a Signaling Transport Card (STC)

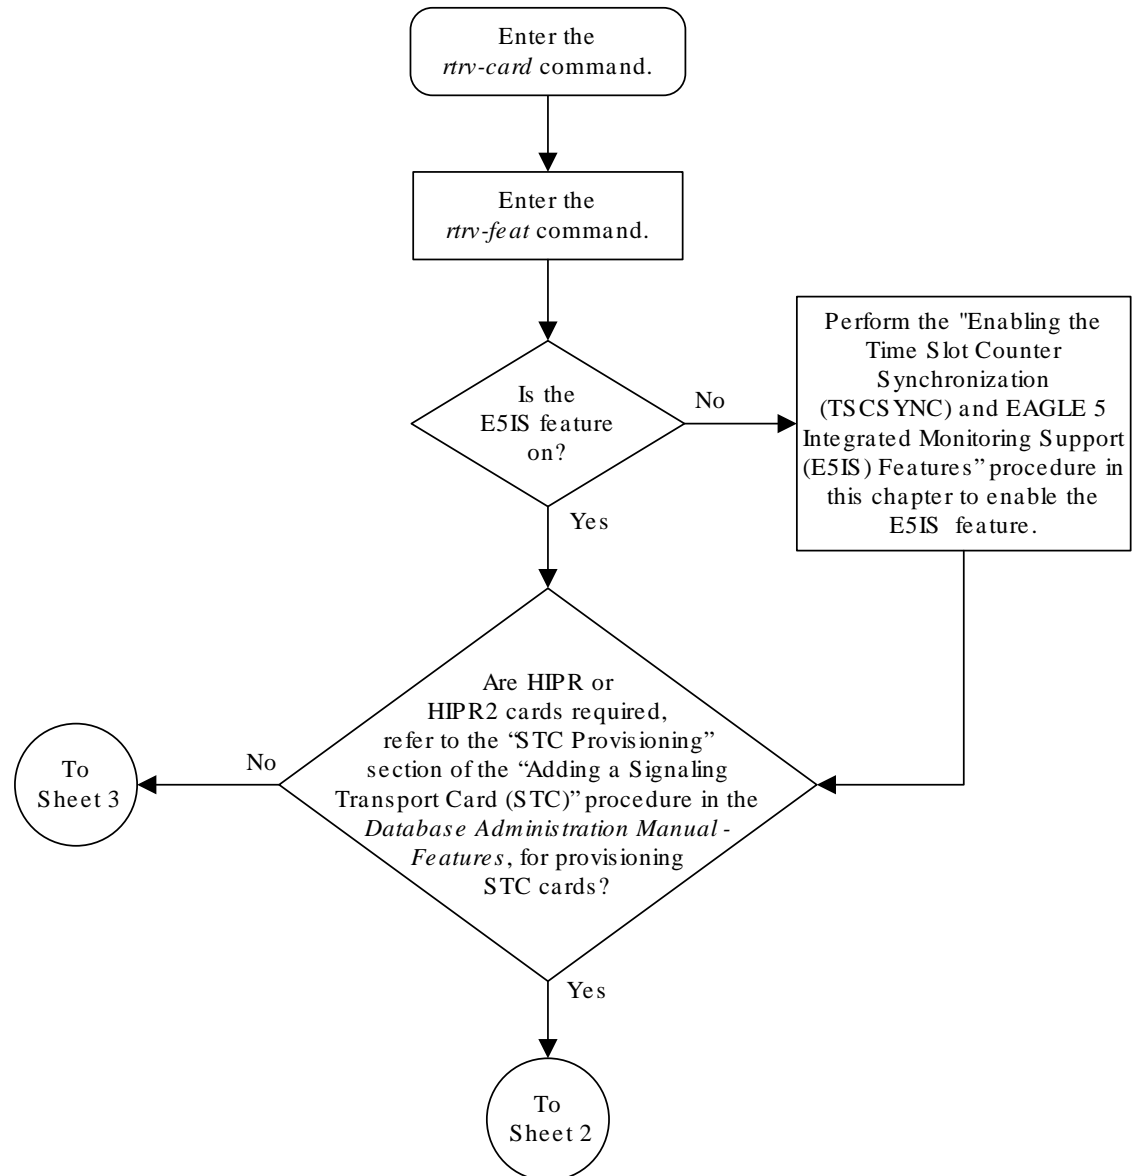

Sheet 1 of 3

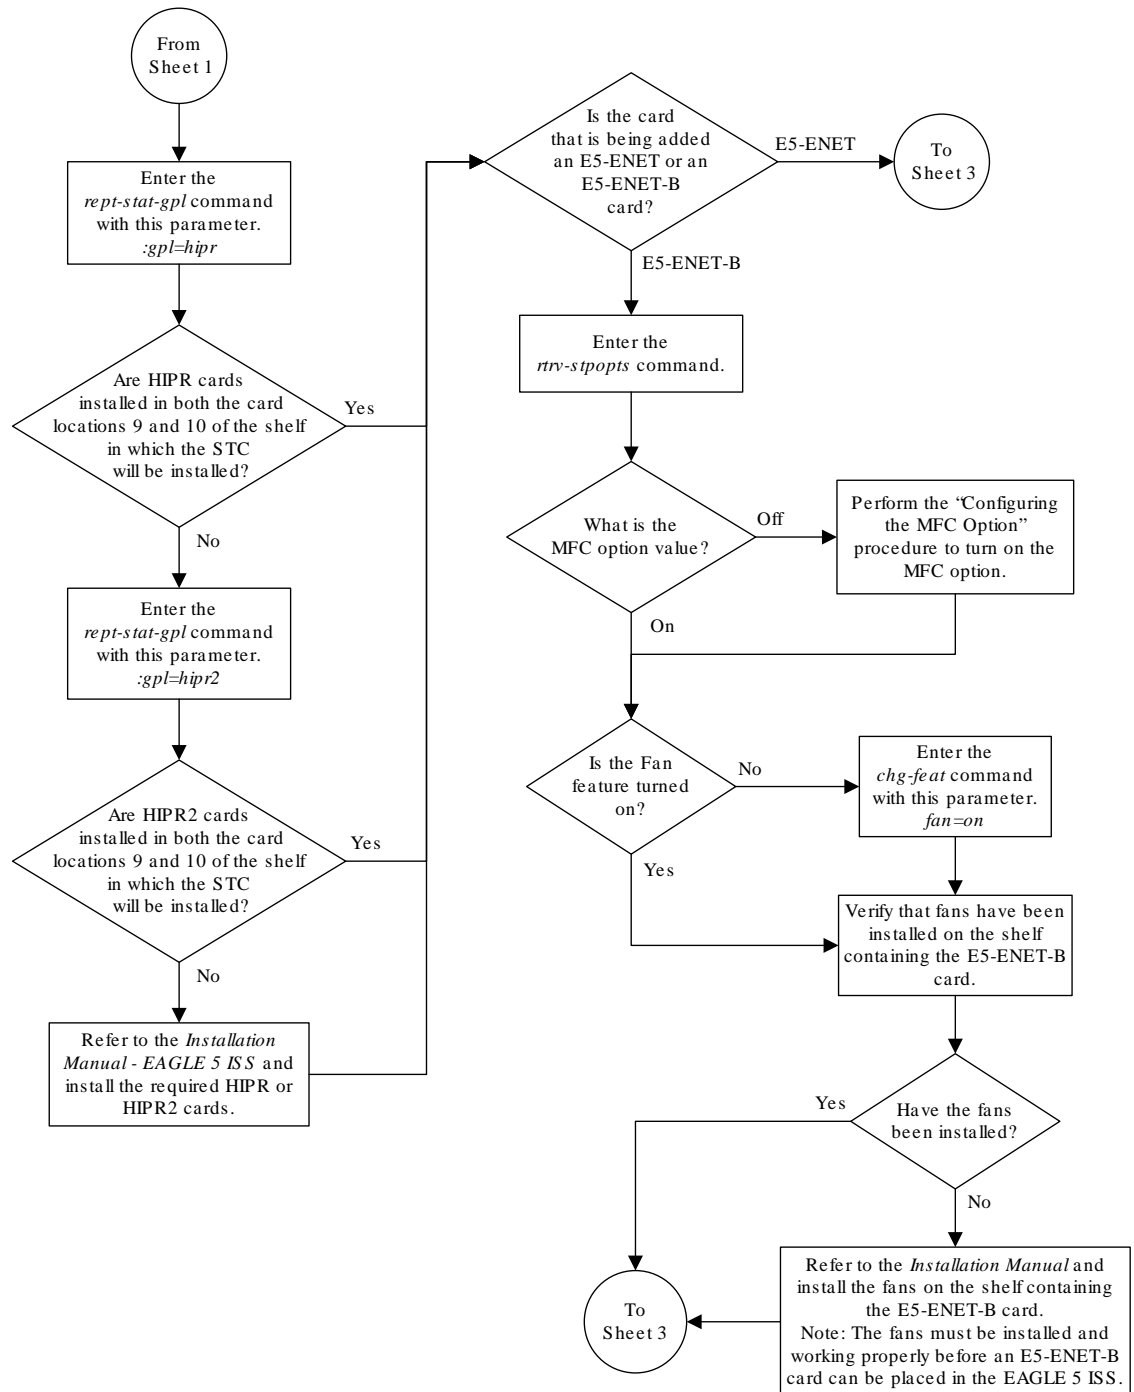

Sheet 2 of 3

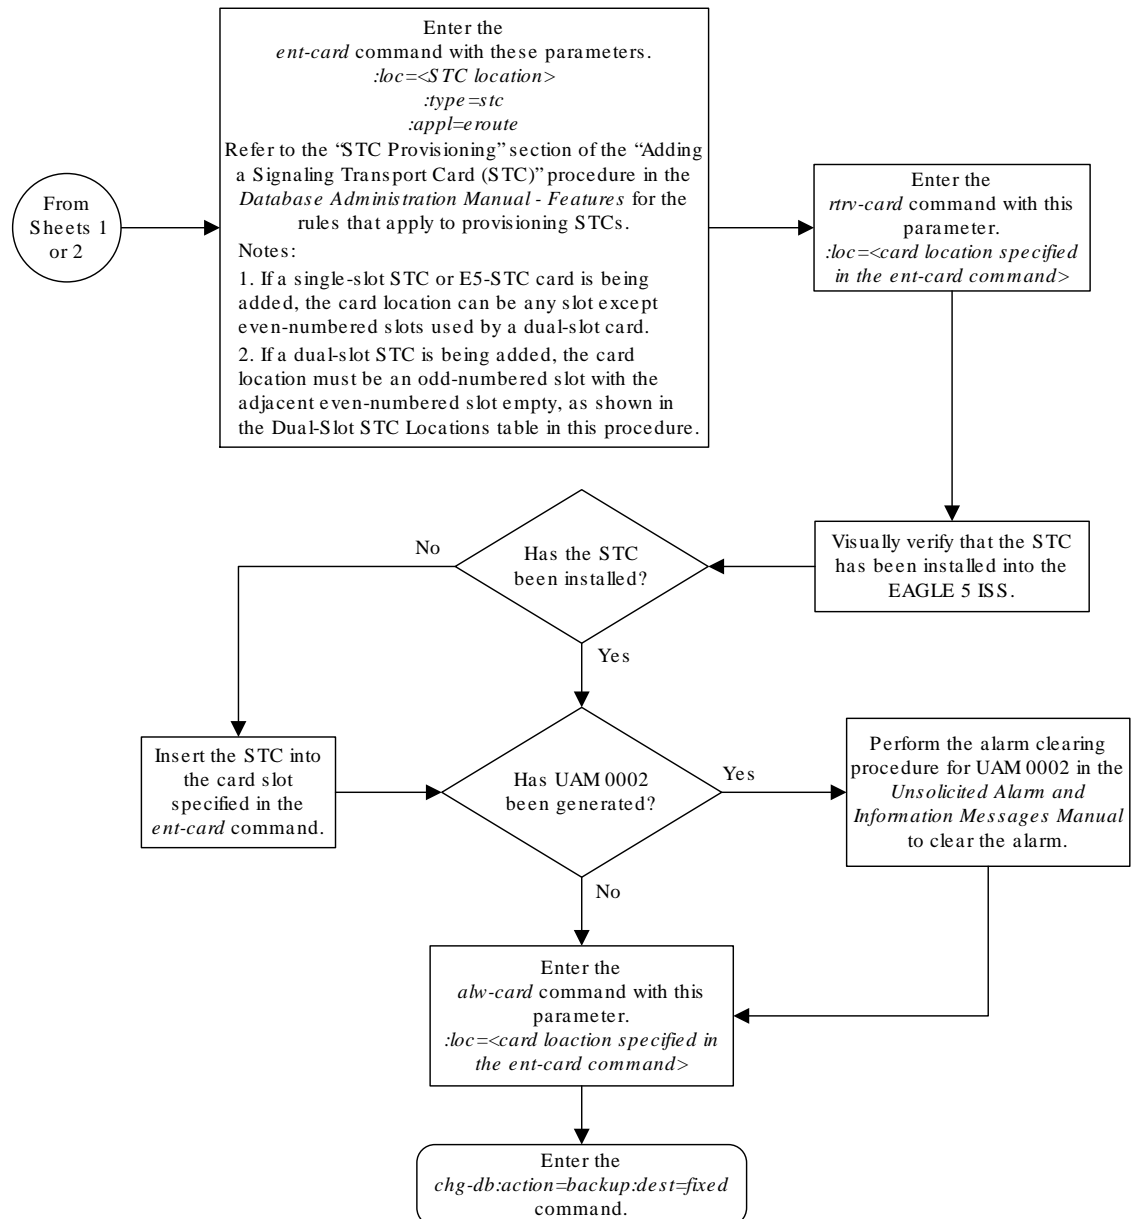

Sheet 3 of 3

Configuring the Stateful Applications (SFAPP)

Run the following commands to configure the SFAPP feature:

1. Configure the SFAPP card.
2. Configure the SFAPP local subsystem.

```
ent-ss-appl:appl=SFAPP:ssn=12:stat=online
```

3. Configure SFAPP GTT actions.

```
ent-gttact:actid=disc:act=disc
```

```
ent-  
gttact:actid=uc3:act=sfapp:on=uimreqd:failactid=disc:defactid=fallback:scfa  
ddr=1111111111
```

```
ent-  
gttact:actid=sfaptparm:act=sfapp:hlraddr=tcapparm:scfaddr=1911111111:defact  
id=disc:failactid=disc:tt=29
```

```
chg-gttact:actid=uc3:ATIRESCGMODID=sfappati:PSIRESCGMODID=sfapppsi
```

(step 5 needs to be performed before this command)

4. Configure GTMOD for CgPA portion for ATI and PSI messages (to be assigned to ATIRESCGMODID and PSIRESCGMODID of the SFAPP GTT ACTION).

```
ent-  
gtmod:GTMODID=sfapppsi:NTT=23:NGTI=4:NNP=1:NNAI=4:PRECD=pfx:CGPASSN=10:NPDS  
=2222222223
```

```
ent-  
gtmod:GTMODID=sfappati:NTT=23:NGTI=4:NNP=1:NNAI=4:PRECD=pfx:CGPASSN=10:NPDS  
=2222222221
```

5. Configure GTT for translating the incoming UL message to the SFAPP GTT action.

GTT action set table:

```
ent-gttaset:actsn=sfappuc3:actidl=uc3
```

GTT SET table:

```
ent-gttset:gttsn=sfapp:netdom=itu:settype=cdgta
```

GTT SEL table:

```
ent-gttset:gttsn=sfapp:tt=20:np=e164:nai=intl
```

and

```
ent-gttset:gttsn=sfapp:tt=23:np=e164:nai=intl
```

6. Configure GTT for translating the ATI/PSI message to the SFAPP GTT Action or SFAPP subsystem (based on the HANDLRESP parameter configured under SFAPP GTT action).

HLR:

```
ent-
gta:gttsn=sfapp:gta=2222222210:egta=2222222260:xlat=dpc:ri=gt:pci=3-003-3:A
CTSN=sfappuc3:mrnset=none
```

VLR:

```
ent-
gta:gttsn=sfapp:gta=95604:egta=95604:xlat=dpc:ri=gt:pci=2-002-2:mrnset=none
```

7. Configure Mate-stp table with TPC and mate STP PCs.

```
ent-mate-stp:pci=4-185-3
```

(Eagle 11 TPC)

```
ent-mate-stp:pci=xxxx
```

(for mate)

8. Configure SFLOG card for connecting EEDB.

```
ent-card:loc=1103:type=ipsm:appl=ips:sflog
```

```
chg-ip-
lnk:loc=1103:port=a:ipaddr=10.75.52.61:SUBMASK=255.255.255.0:MACTYPE=DIX:au
to=yes:mcast=no
```

```
chg-ip-card:loc=1103:SRCHORDR=SRVR:DEFROUTER=10.75.52.1
```

9. Configure IP connection (ENT-IP-CONN) for connecting EEDB.

```
ent-ip-host:host=eedb:ipaddr=10.75.50.106:type=remote
```

```
ent-ip-host:host=sflog:ipaddr=10.75.52.61:type=local
```

```
ent-ip-
conn:cname=conn1:prot=tcp:lhost=sflog:lport=2100:rport=17529:rhost=eedb
```

```
chg-ip-conn:cname=conn1:open=yes
```

10. Configure VLR profile entries (ENT-VLR-PROF) that are configured with filter graylist.

```
ent-vlr-prof:vlr=95604:filter=graylist:ageofloc=no:IMEIRTRV=yes
```

```
ent-vlr-prof:vlr=ab123:filter=graylist:ageofloc=no:IMEIRTRV=yes
```

11. Configure VLR roaming table (ENT-VLR-ROAMING).

```
ent-vlr-roaming:oldvlr=ab123:newvlr=95604:time=10
```

(This entry goes in the static table)

12. Turn on the global UC3 option.

```
SFAPPOPTS:VLRIMEICHALLENGE=YES
```

```
chg-sfappopts:VLRIMEICHALLENGE=yes
```

13. Use AGEOFLOC and IMEIRTRV parameter under VLR profile entry (RTRV-VLR-PROF), selectively turn off or on UC2 and UC3 for the VLR.

```
chg-vlr-prof:vlr=95604:ageofloc=no:IMEIRTRV=yes
```

14. Use DEFACTID and FAILACTID and under the SFAPP GTT action, selectively configure the default and failure actions for the SFAPP GTT action.

```
chg-gttact:actid=uc3:on=HANDLRESP
```

Adding IPSM as EEDB

Run the following commands to add IPSM as EEDB.

1. Configure SFLOG card for connecting EEDB.

```
ent-card:loc=1103:type=ipsm:appl=ips:sflog
```

```
chg-ip-
```

```
lnk:loc=1103:port=a:ipaddr=10.75.52.61:SUBMASK=255.255.255.0:MACTYPE=DIX:au  
to=yes:mcast=no
```

```
chg-ip-card:loc=1103:SRCHORDR=SRVR:DEFROUTER=10.75.52.1
```

2. Configure IP connection (ENT-IP-CONN) for connecting EEDB.

```
ent-ip-host:host=eedb:ipaddr=10.75.50.106:type=remote
```

```
ent-ip-host:host=sflog:ipaddr=10.75.52.61:type=local
```

```
ent-ip-
```

```
conn:cname=conn1:prot=tcp:lhost=sflog:lport=2100:rport=17529:rhost=eedb
```

```
chg-ip-conn:cname=conn1:open=yes
```